

LAC-M6500S_ENG



OWNER'S MANUAL

MODEL : LAC-M6500S



Before connecting, operating or adjusting this product,
please read this instruction booklet carefully and completely.

The working life of this product is 7 years since the date of purchase.



PRODUCTION

Table of Contents	2
Safety Precautions	3
Before Use.	4-6
Front Panel.	7
Remote Control.	8

PREPARATION

Installation	9
Connections	10-13

OPERATION

Basic Operation	14-16
Turning the unit on.	14
Turning the unit off.	14
Selecting a source	14
Adjusting the volume	14
Setting the clock	14
Checking the clock.	14
SOUND Adjustment.	15
Adjusting the Back Lighting Color.	16
Adjusting the changing time of Back Lighting Color.	16
BEEP SOUND FUNCTION	16
Setting the USER mode.	16
Radio Operation	17
Listening the radio stations	17
Auto Search Memory	17

Storing and recalling broadcast frequencies	17
Operation with Audio CD, MP3/WMA Disc and CD changer .	18-19
Playing an Audio CD and MP3/WMA Disc	18
Playing a CD changer (OPTIONAL)	18

REFERENCE


Troubleshooting	20
Specifications	



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



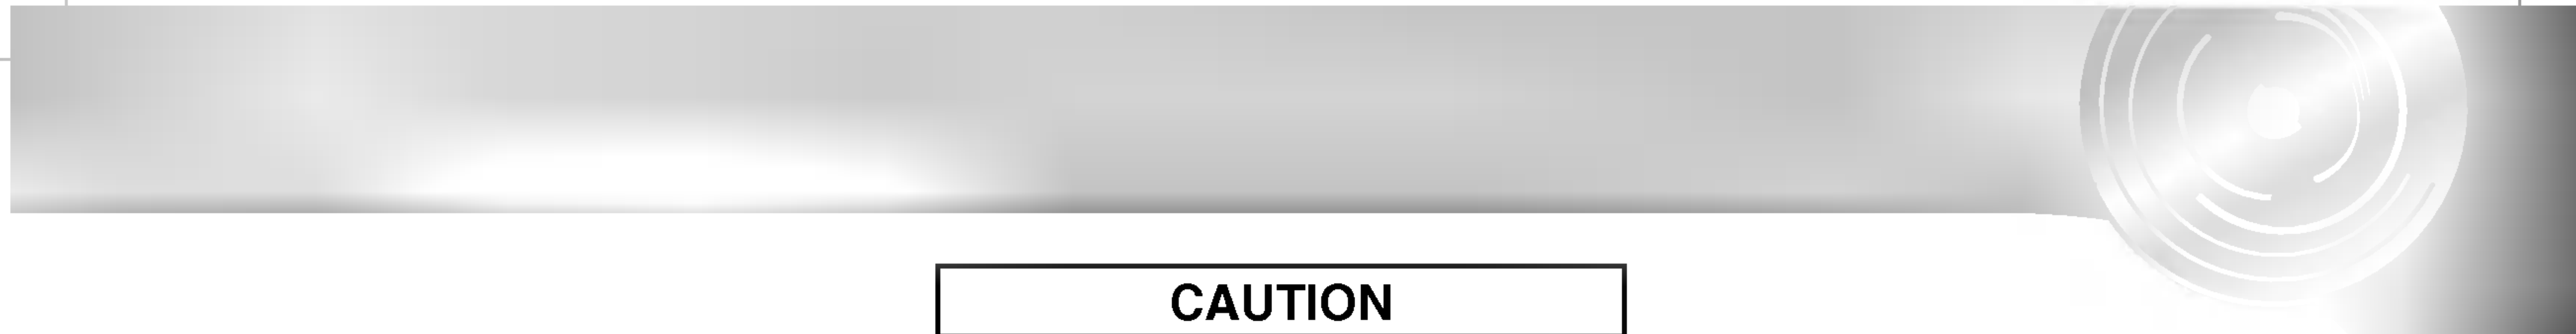

CAUTION


INTRODUCTION



Warning: To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



Warning: To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.

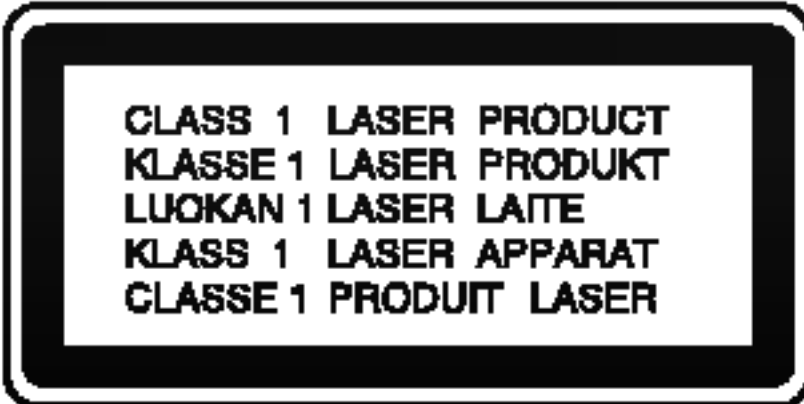

Caution: Protect this product from moisture.



Caution: If the battery is disconnected or discharged, the preset memory will be erased and must be reprogrammed.

CAUTION:

This unit employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference should the unit require maintenance, contact an authorized service location (see service procedure).

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

