



# WIRELESS DVD RECEIVER SYSTEM

## OWNER'S MANUAL

MODEL: LH-W751TA1

LH-W751, LHS-W75TA1F, LHS-W75TA1C  
LHS-W75TA1R, LHS-W75TA1L,  
LHS-W75TA1W, ACC75T



Before connecting up, operating or repairing this product, please read this instruction booklet carefully and completely.

## Safety Precautions



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK  
OF ELECTRIC SHOCK  
DO NOT REMOVE COVER (OR BACK)  
NO USER-SERVICEABLE PARTS INSIDE  
REFER SERVICING TO QUALIFIED SERVICE  
PERSONNEL.



 
This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation mark within an equilateral triangle is intended to alert the user about the presence of important operating and maintenance (servicing) instructions in the instructions accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK  
HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR  
MOISTURE.

**WARNING:** Do not install this equipment in a confined space  
such as a book case or similar unit.

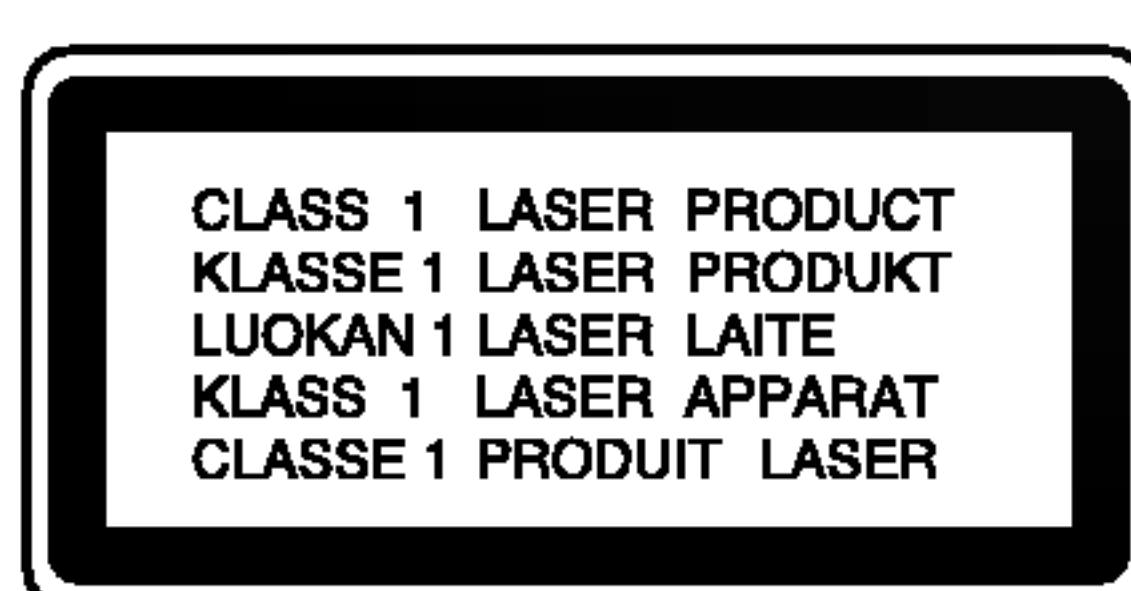

### CAUTION:

This DVD/CD receiver employs a laser system.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service location (see service procedure).

Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**CAUTION:** This product may not be used outdoor, restricted to indoor use only.

## About the symbols for instructions



Indicates hazards likely to cause harm to the unit itself or other material damage.



Indicates special operating features of this unit.



Indicates tips and hints for making the task easier.

*Manufact*

## Table of Contents

### Introduction

|                                         |            |
|-----------------------------------------|------------|
| <b>Safety Precautions</b> .....         | <b>2</b>   |
| <b>Table of Contents</b> .....          | <b>3</b>   |
| <b>Before Use</b> .....                 | <b>4-5</b> |
| Playable Discs .....                    | 4          |
| Precautions .....                       | 5          |
| Notes on Discs .....                    | 5          |
| About Symbols .....                     | 5          |
| <b>Front Panel and Rear Panel</b> ..... | <b>6</b>   |
| <b>Remote Control Overview</b> .....    | <b>7</b>   |

### Preparation

|                                                                   |              |
|-------------------------------------------------------------------|--------------|
| <b>Connections</b> .....                                          | <b>8-13</b>  |
| TV Connections .....                                              | 8            |
| Optional Equipment Connections .....                              | 9            |
| Aerial Connections .....                                          | 10           |
| Speaker System Connection .....                                   | 11-12        |
| • Speaker Connections .....                                       | 11           |
| • Assembling and Connecting to the Speakers .....                 | 12           |
| Setting a channel or ID of transmitter and wireless speaker ..... | 12           |
| • Transmitter .....                                               | 12           |
| • Setting a channel of Transmitter .....                          | 12           |
| • Setting an ID of Transmitter .....                              | 12           |
| Speaker Positioning .....                                         | 13           |
| <b>Before Operation</b> .....                                     | <b>14-19</b> |
| Mini Glossary for Audio Stream & Surround Mode .....              | 14           |
| Sound Mode .....                                                  | 14           |
| On-Screen Display .....                                           | 15           |
| Initial Settings .....                                            | 16-19        |
| • General Operation .....                                         | 16           |
| • Language .....                                                  | 16           |
| • Display .....                                                   | 16-17        |
| • Audio .....                                                     | 17           |
| • Lock (Parental Control) .....                                   | 18           |
| • Others .....                                                    | 19           |

### Operation

|                                                   |              |
|---------------------------------------------------|--------------|
| <b>DVD or Video CD Operation</b> .....            | <b>19-22</b> |
| Playing a DVD and Video CD .....                  | 19           |
| General Features .....                            | 20-22        |
| • Moving to another TITLE/GROUP .....             | 20           |
| • Moving to another CHAPTER/TRACK .....           | 20           |
| • Slow Motion .....                               | 20           |
| • Still Picture and Frame-by-Frame Playback ..... | 20           |
| • Search .....                                    | 20           |
| • Repeat .....                                    | 20           |
| • Repeat A-B .....                                | 21           |
| • Time Search .....                               | 21           |
| • Marker Search .....                             | 21           |
| • Zoom .....                                      | 21           |
| Special DVD Features .....                        | 22           |
| • Title Menu .....                                | 22           |
| • Disc Menu .....                                 | 22           |
| • Changing the Audio Language .....               | 22           |
| • Changing the Audio Channel .....                | 22           |
| • Subtitles .....                                 | 22           |
| DVD Audio Discs .....                             | 22           |

|                                        |           |
|----------------------------------------|-----------|
| <b>Audio CD and MP3/WMA Disc</b> ..... | <b>23</b> |
| Playing an Audio                       |           |



# Before Use (Continued)

## Precautions

### Handling the unit

#### When shipping the unit

The original shipping carton and packing materials may come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

#### When setting up the unit

The picture and sound of a nearby TV, VCR, or radio may be disturbed during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

#### To keep the exterior surfaces clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

### Cleaning the unit

#### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

 
#### To obtain a clear picture

The DVD/CD Receiver is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer.

## Notes on Discs

### Disc Handling

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface. Do not stick paper or tape on the disc.

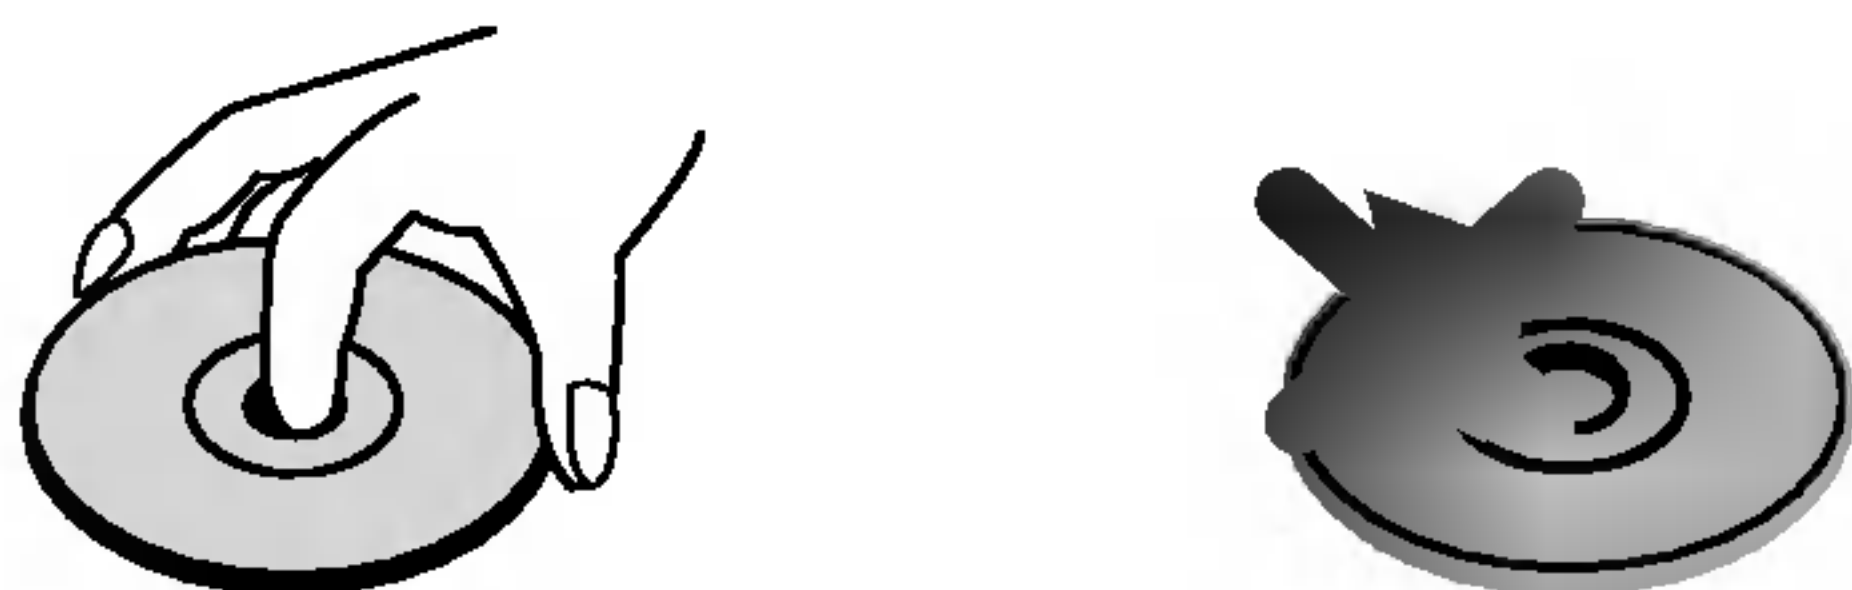


### Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

### Cleaning discs


 
Fingerprints and dust on the disc can distort the picture or reduce sound quality. Before playing, clean the disc with a clean cloth. Wipe the disc from the centre outwards.

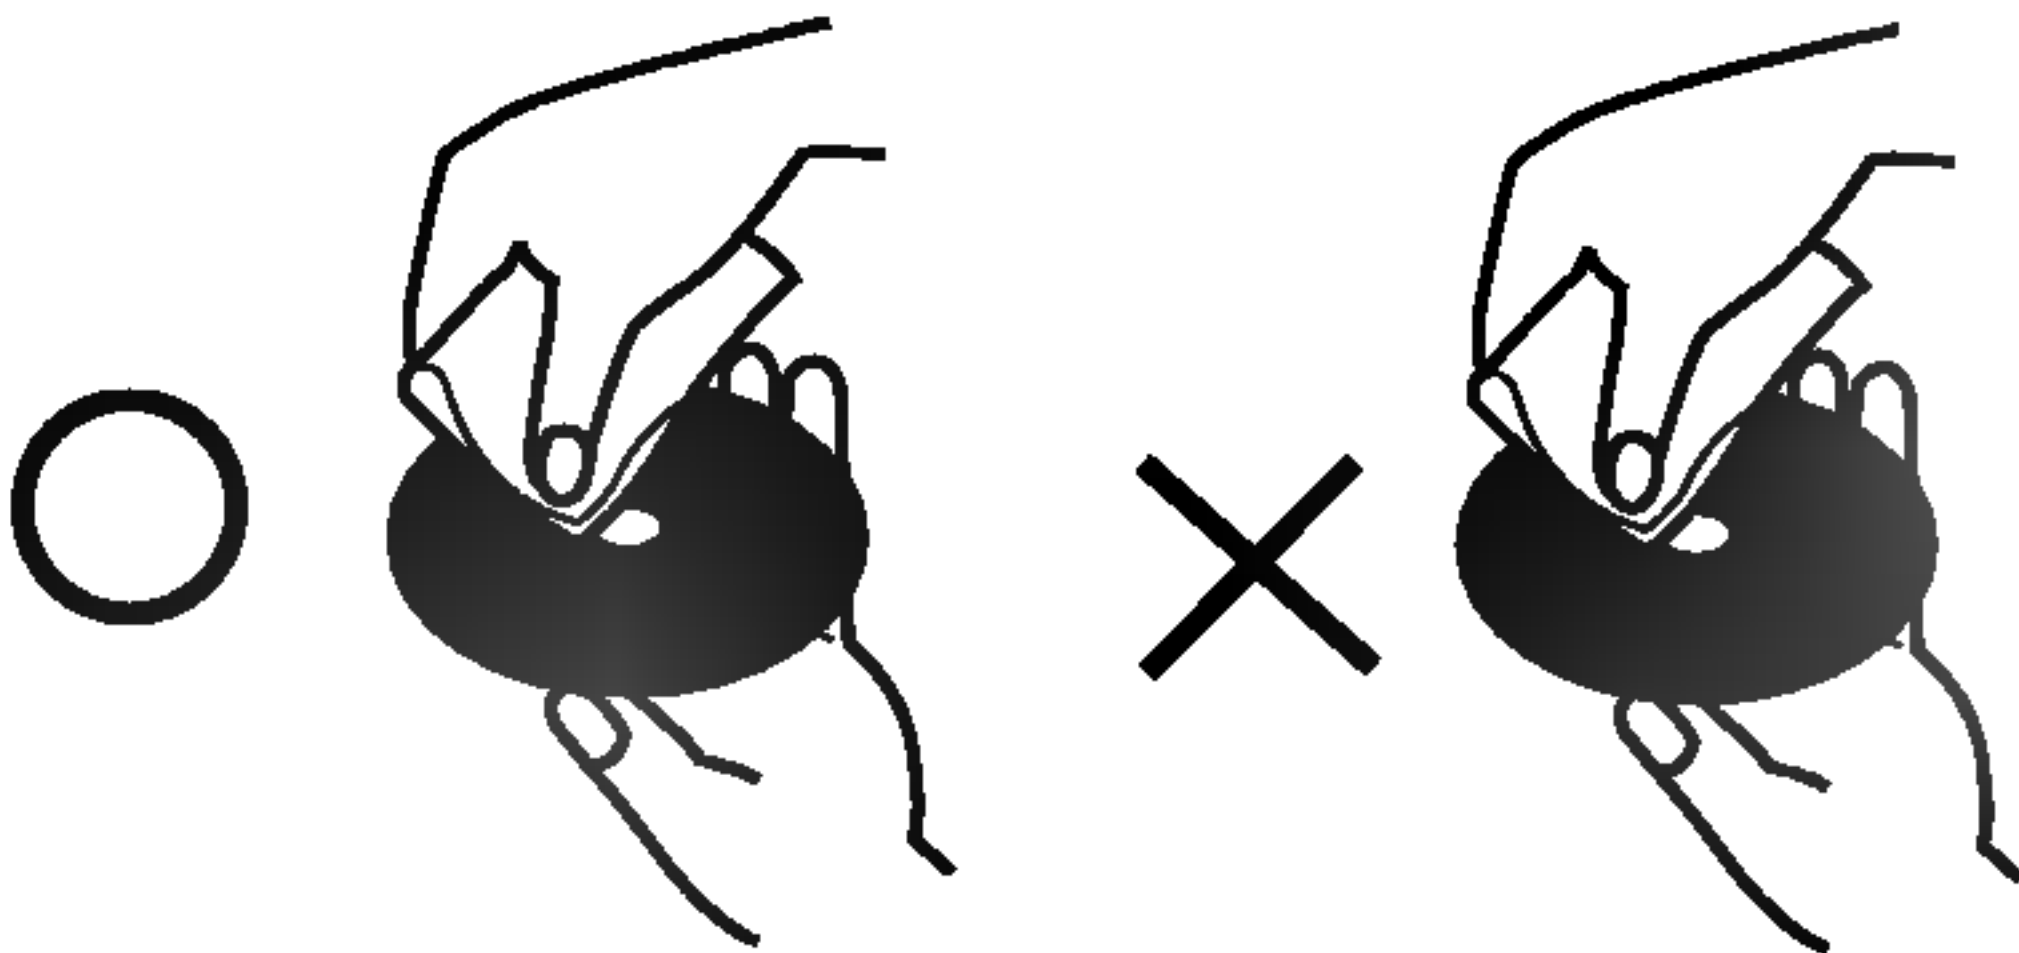

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl records.

## About Symbols
  
## Front Panel and Rear Panel

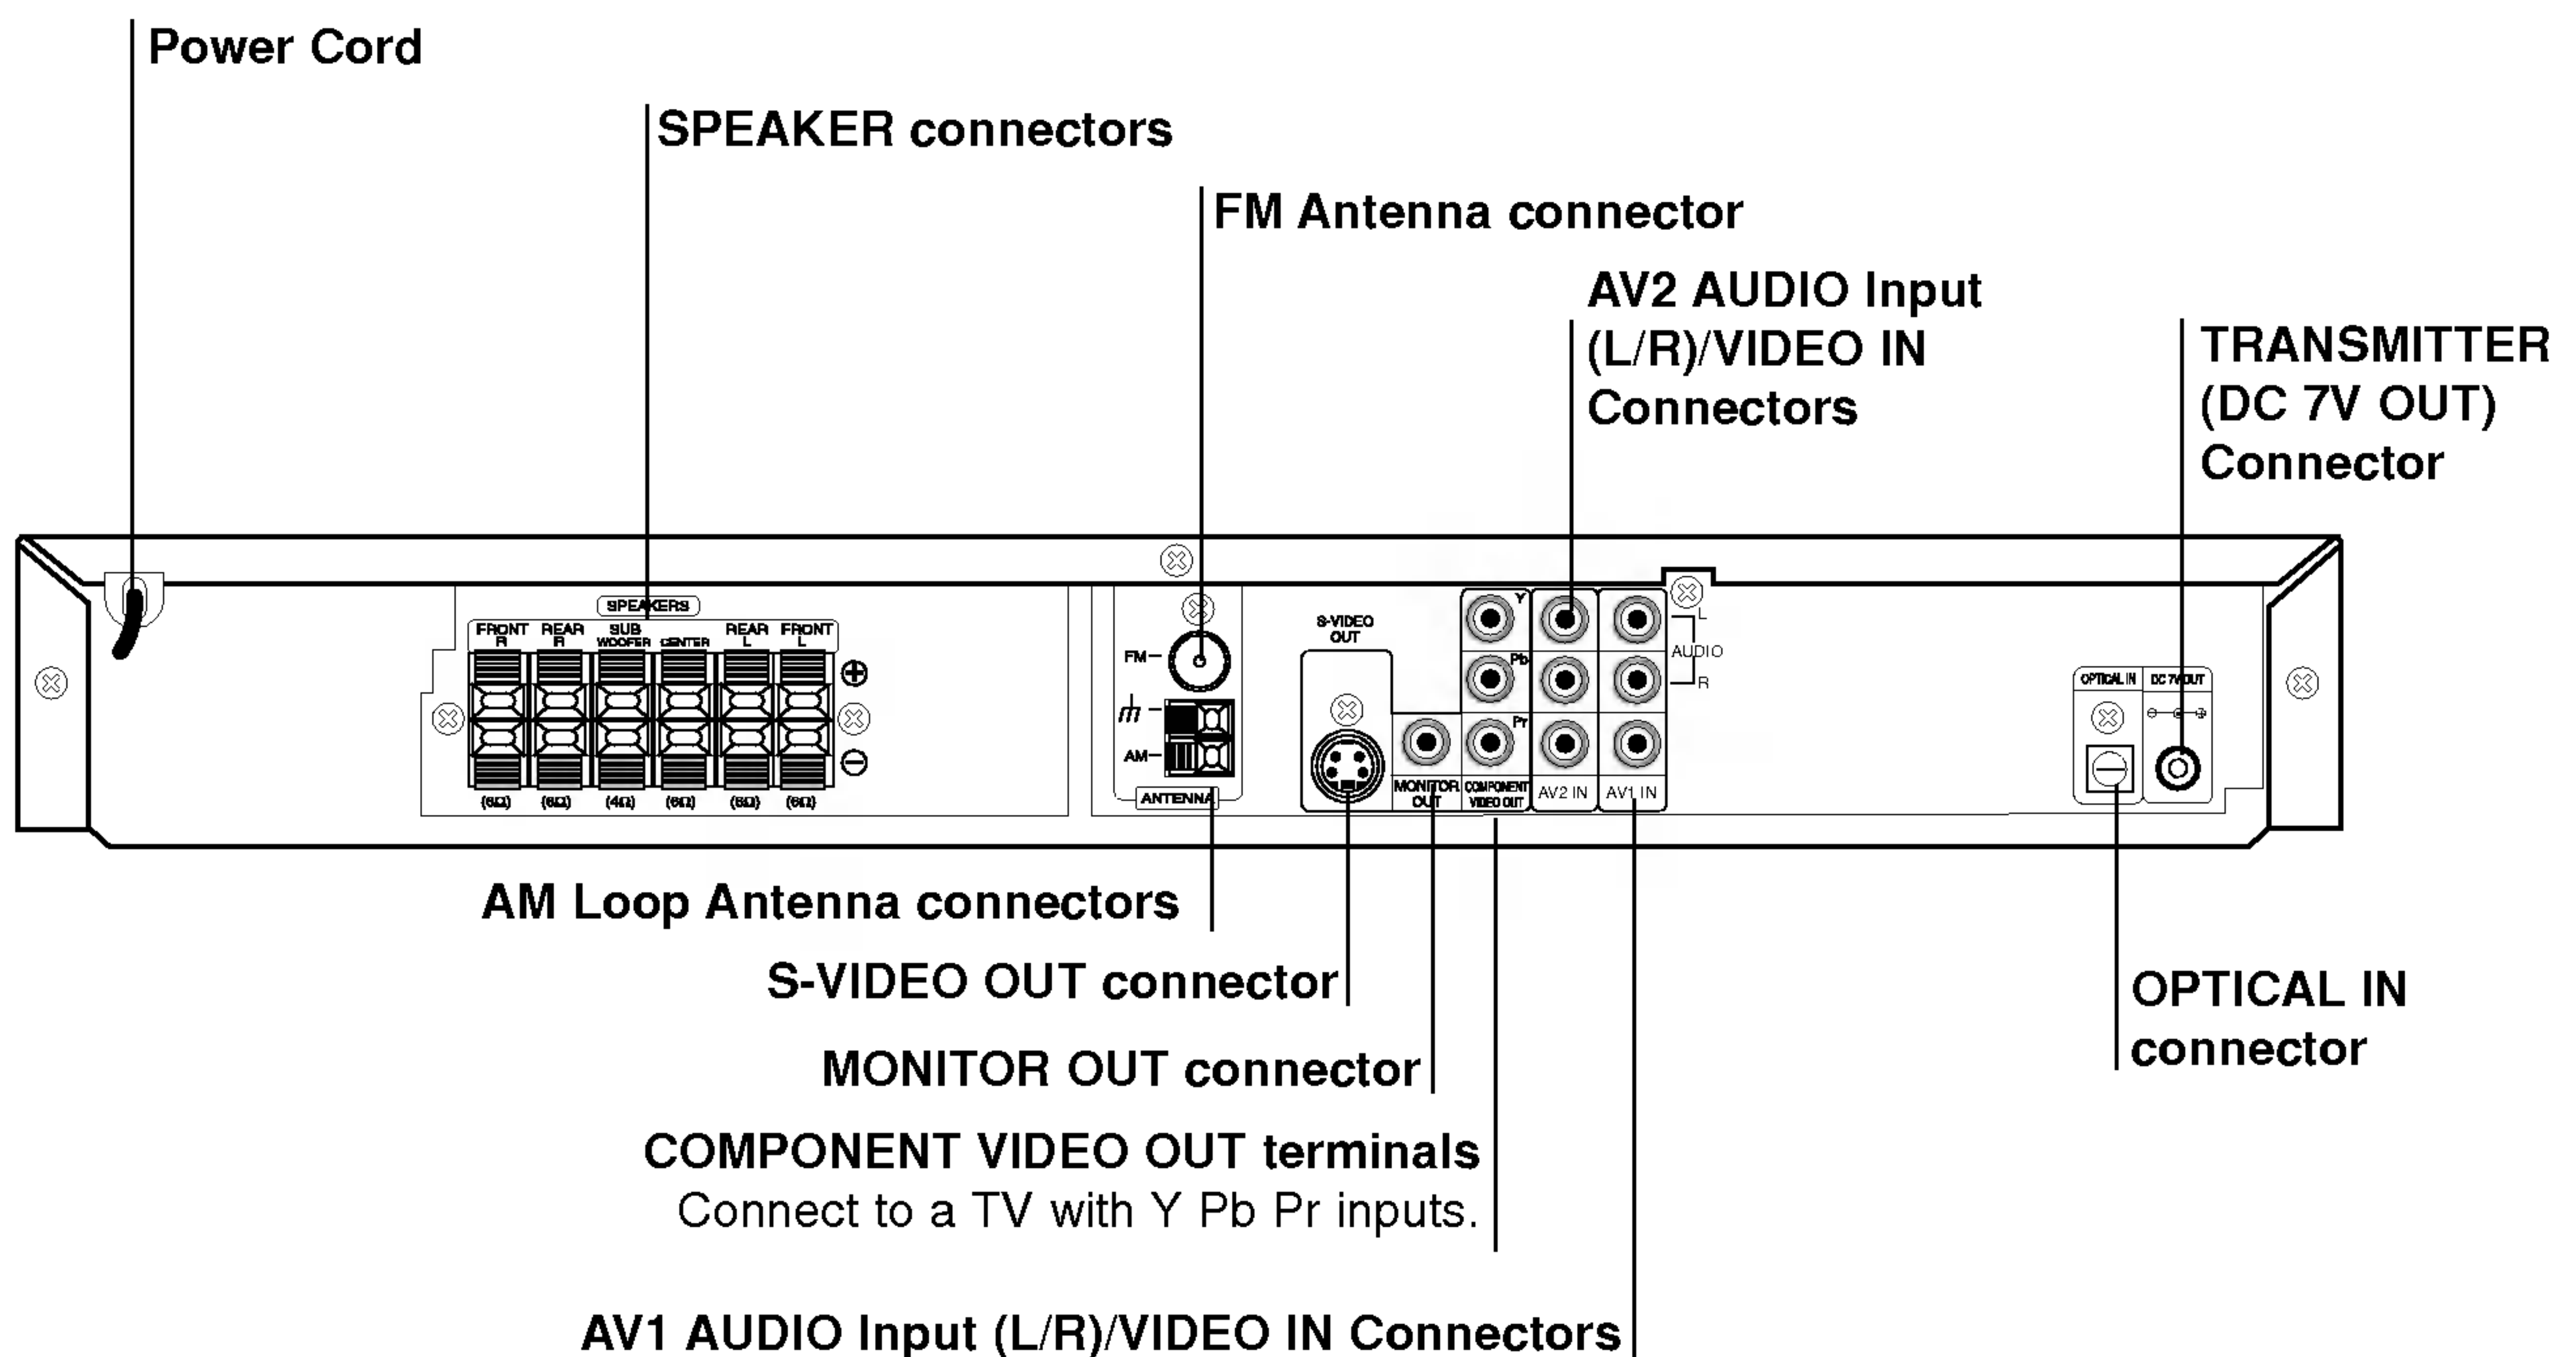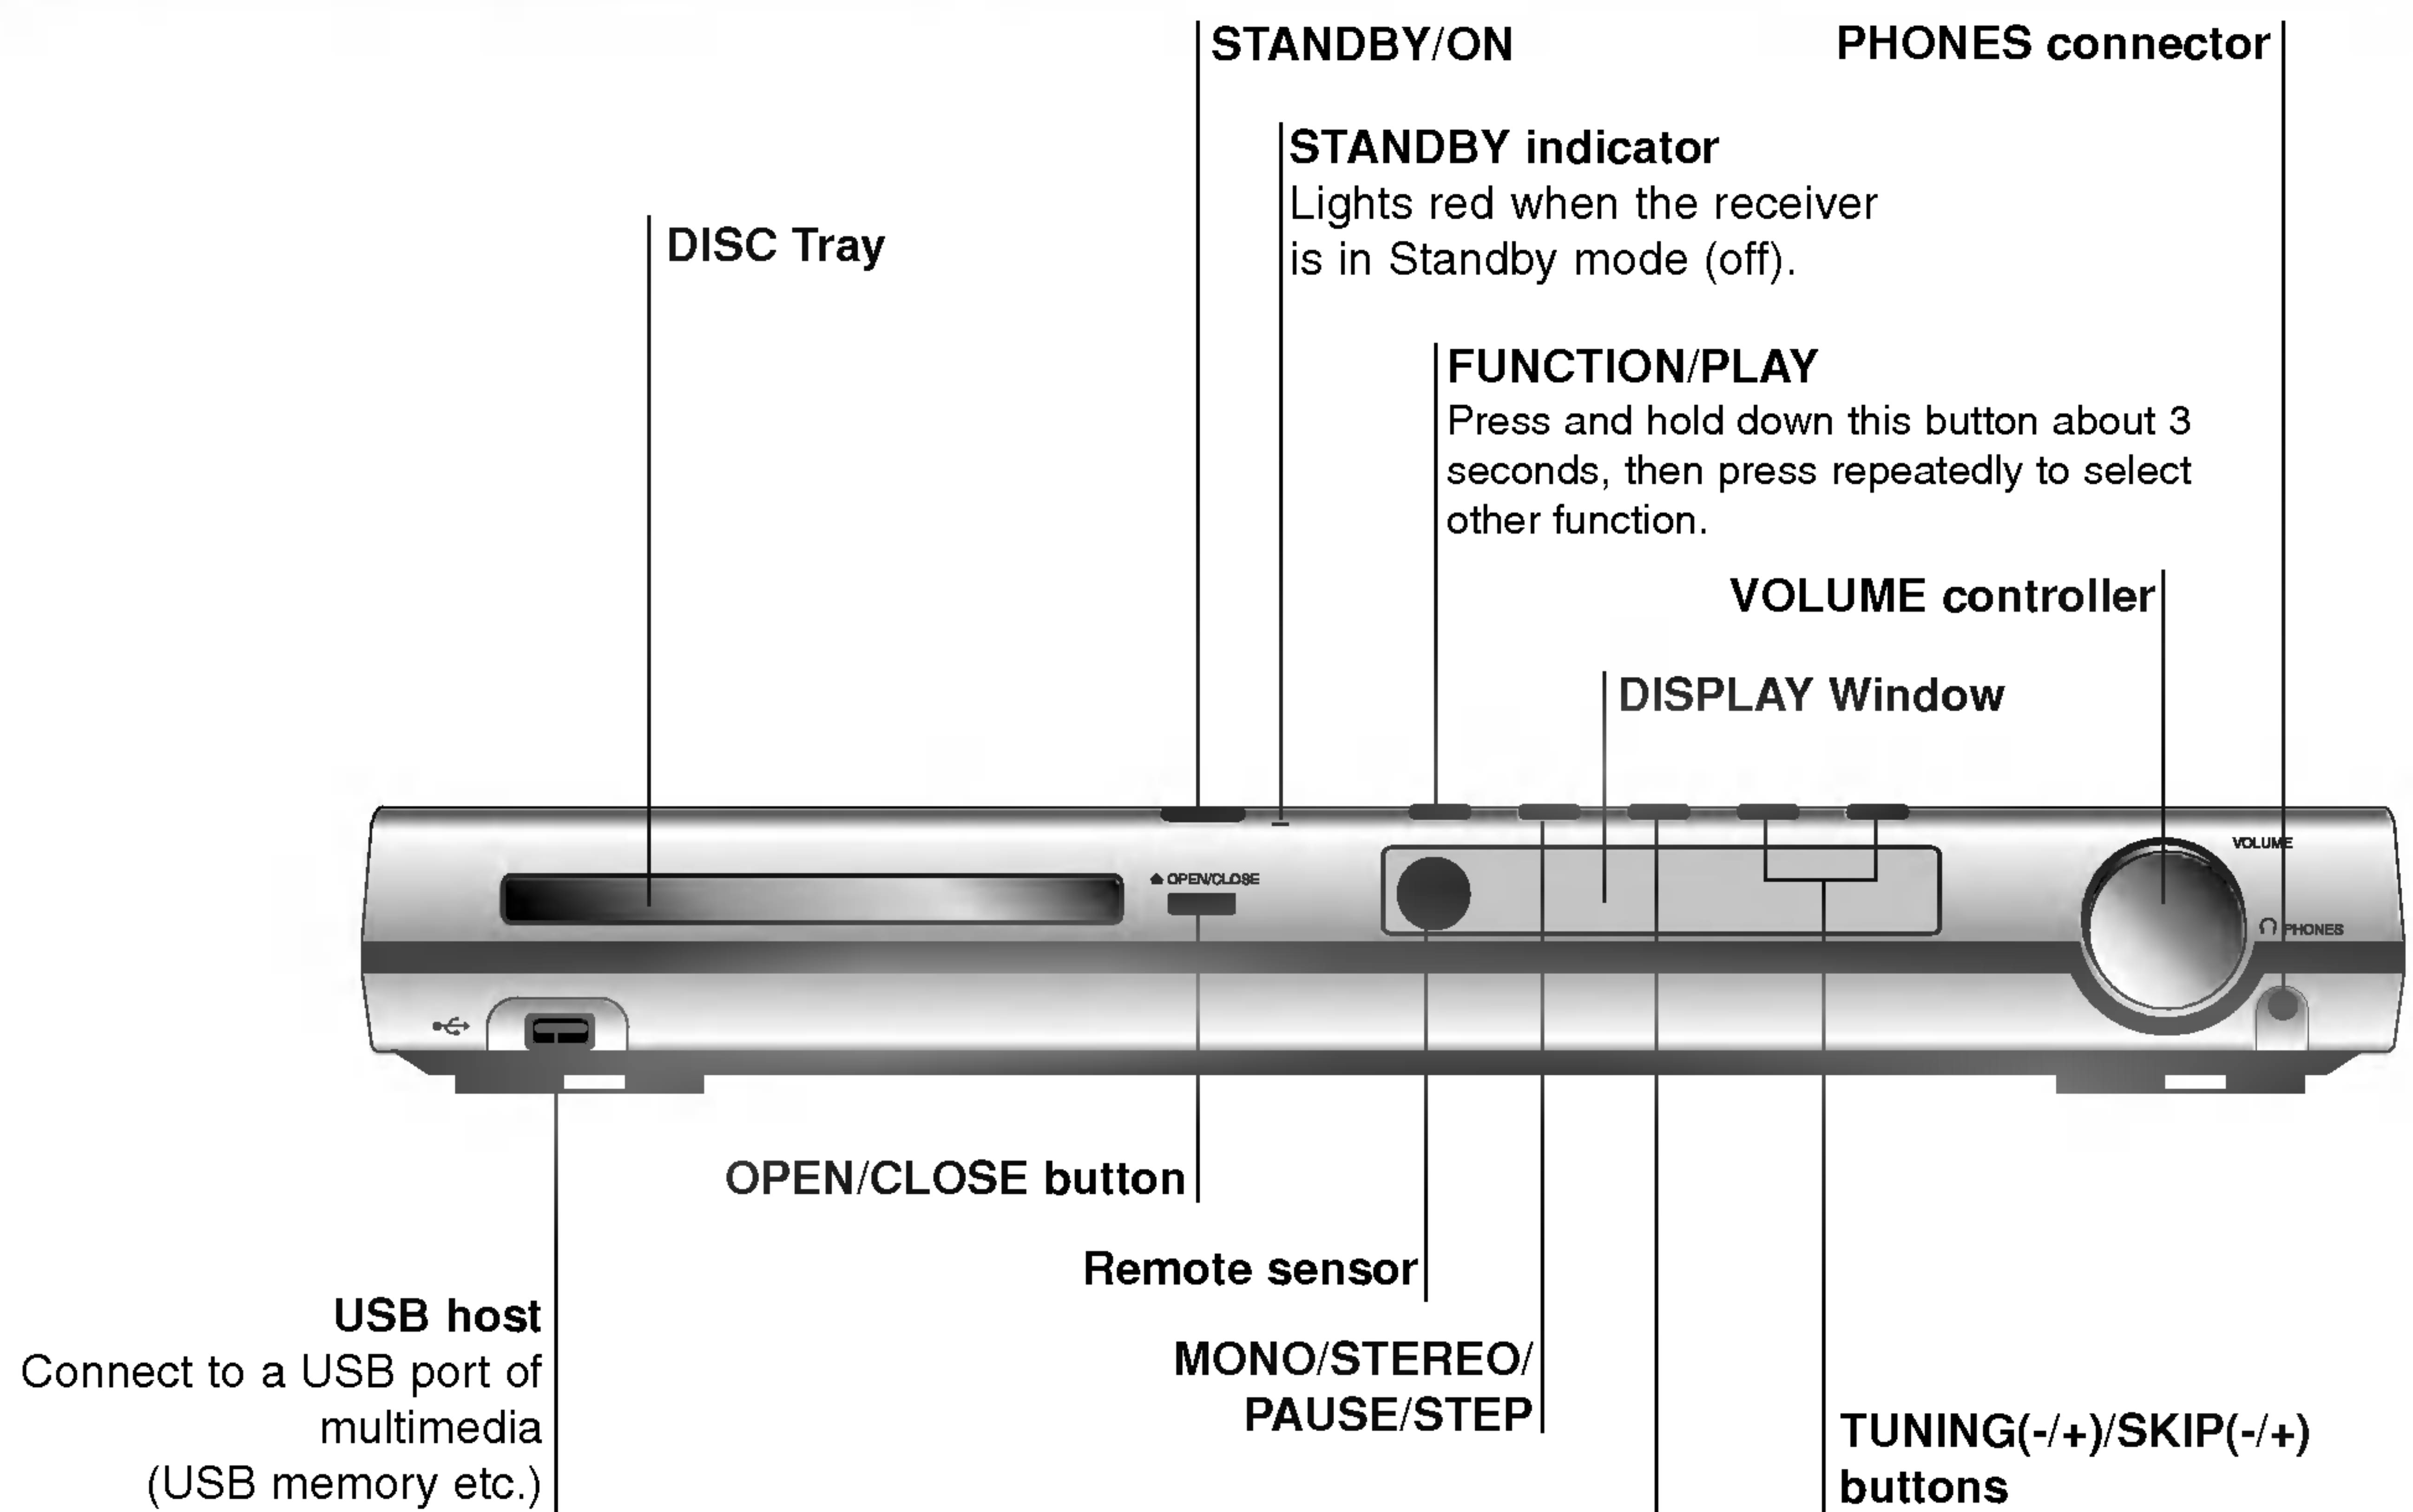

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.






## Connections (Continued)
 
### Optional Equipment Connections

- 1 Connect a VCR to the AV IN connectors.
- 2 Connect a additional VCR to the AV2 connectors.
- 3 Connect an optical output of DVD Player (or Digital Device etc) to the OPTICAL IN connector.
- 4 Connect the USB port of a USB Memory (or MP3 player, etc.) to the USB HOST on the front of the unit.

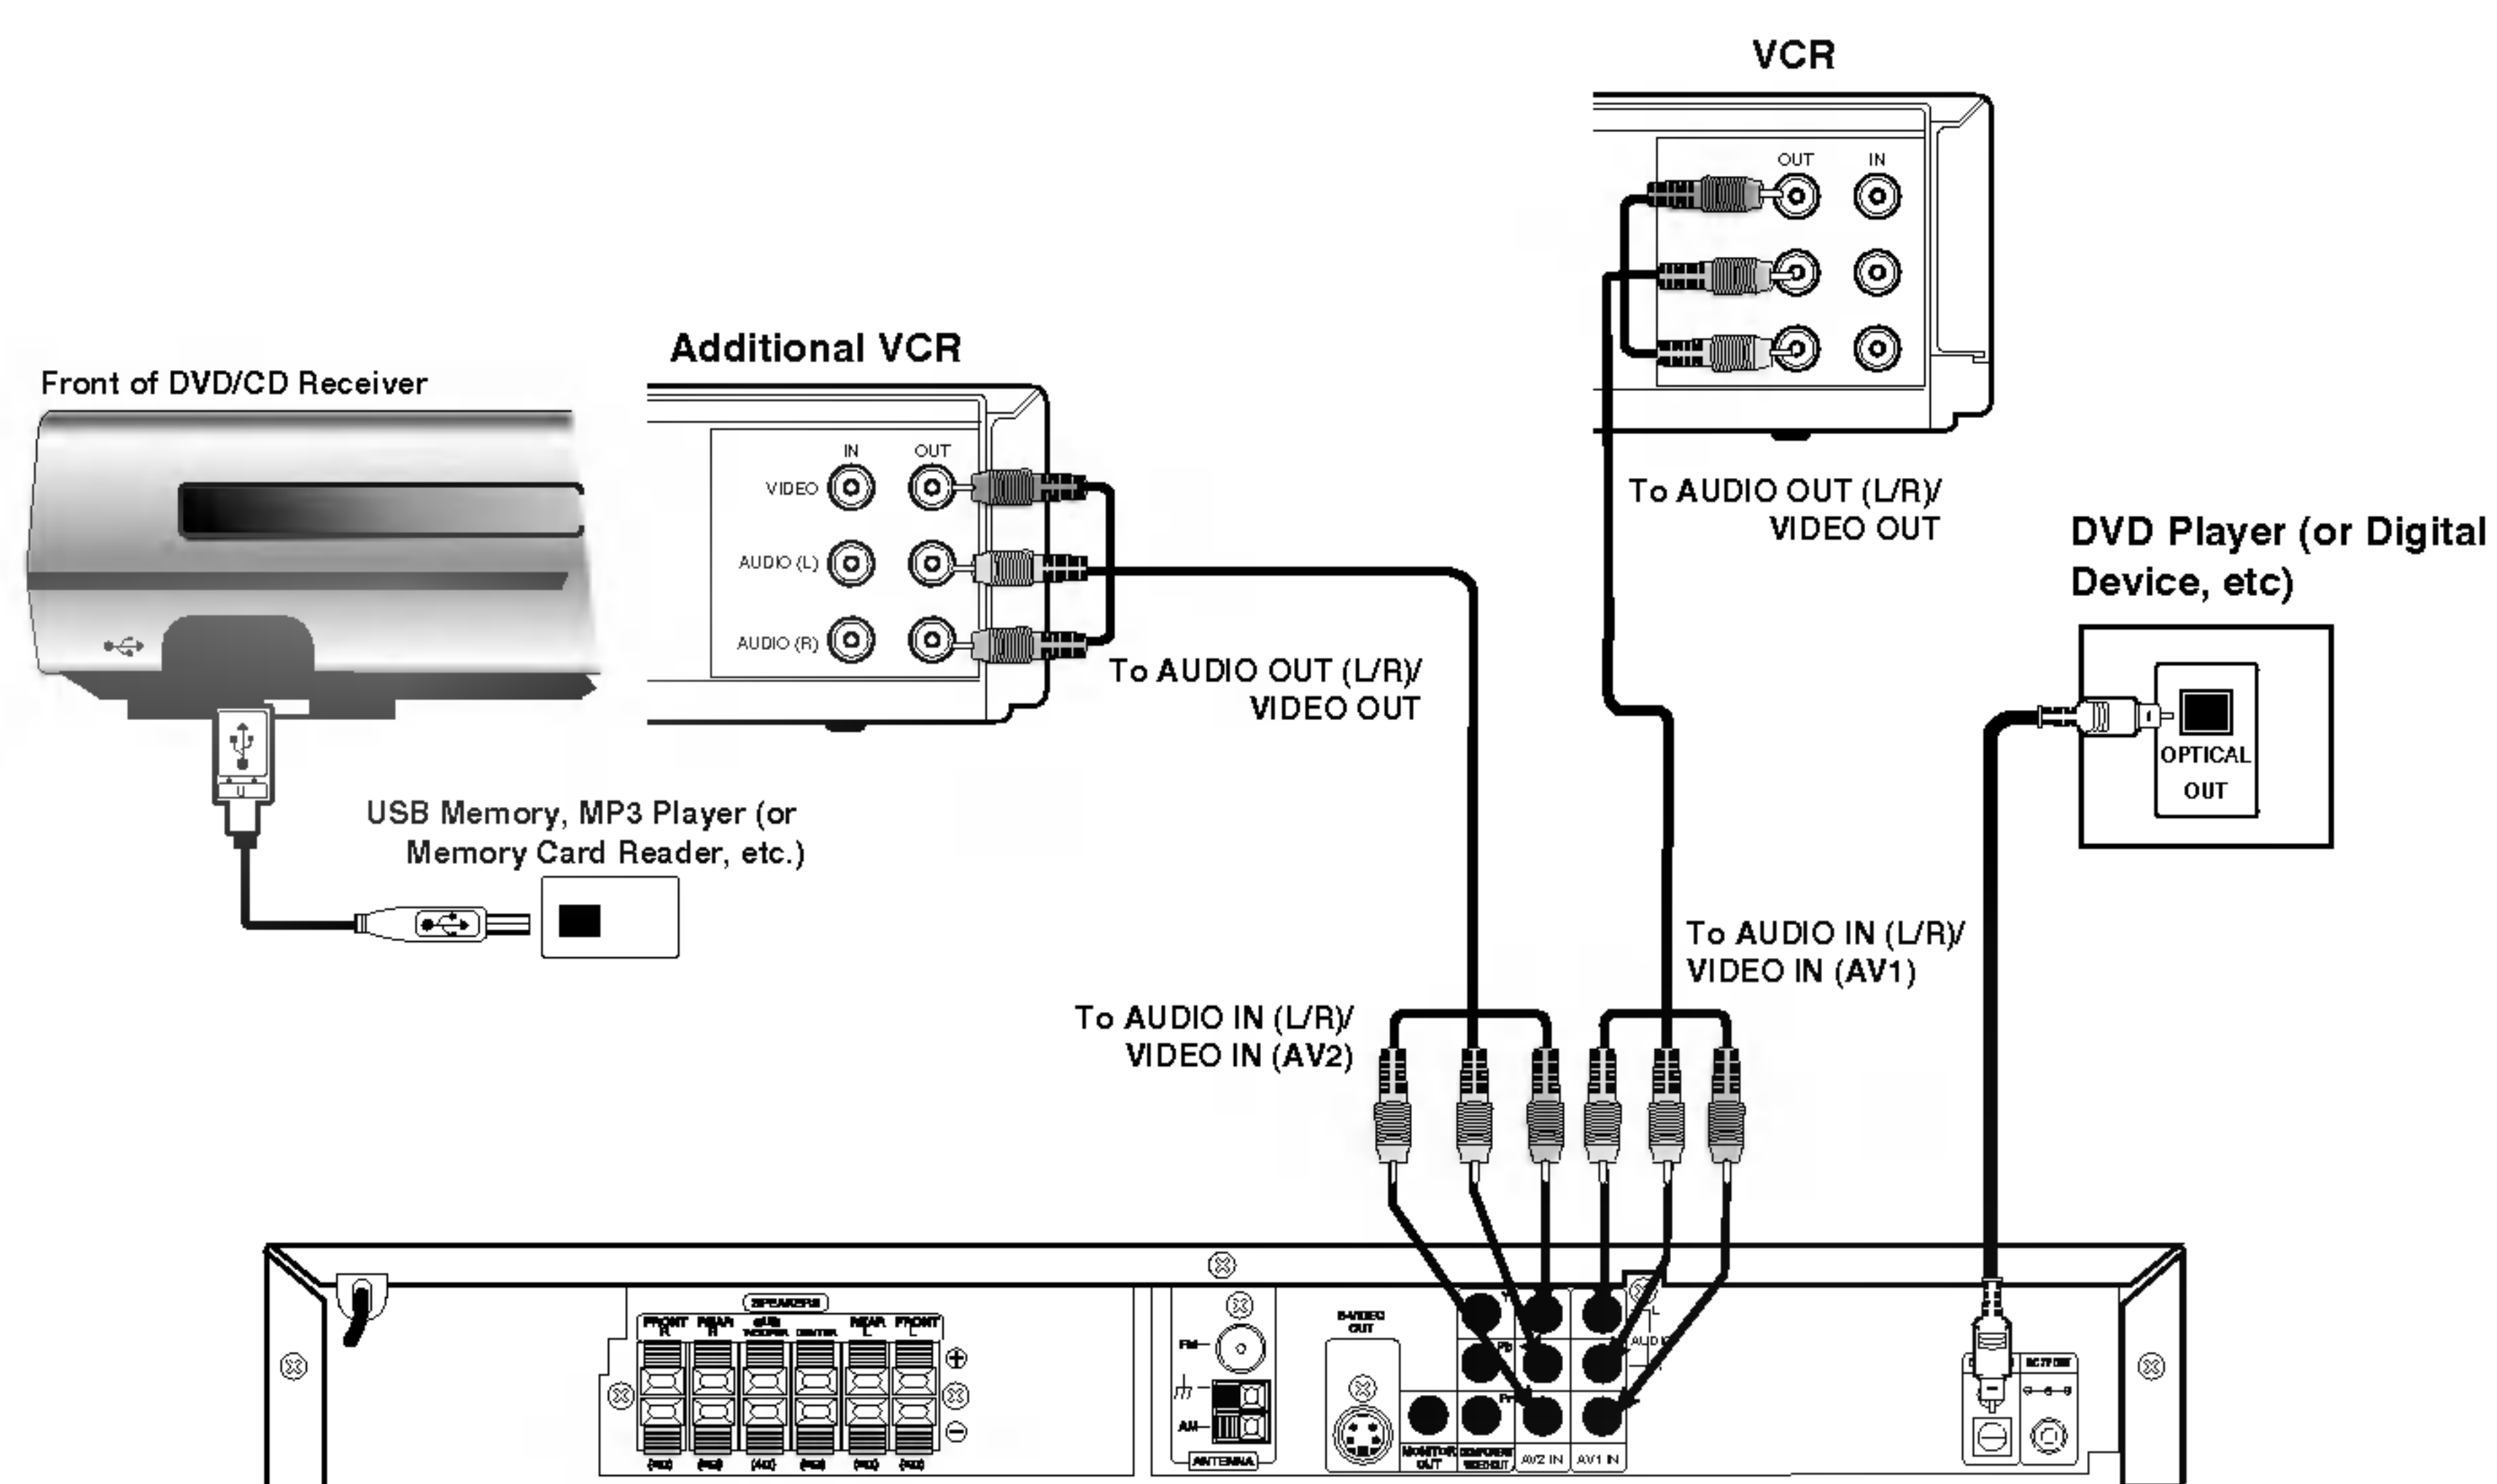

#### Notes

 
- If the audio format of the digital output does not match the capabilities of your DVD/CD Receiver, the receiver will produce a strong, distorted sound or no sound at all.
- The DivX files in your memory card will not be able to be play.

## Connections (Continued)

### Aerial Connections

Connect the supplied FM/AM aerial for listening to the radio.

- Connect the AM Loop aerial to the AM aerial connector.
- Connect the FM Wire aerial to the FM aerial connector.

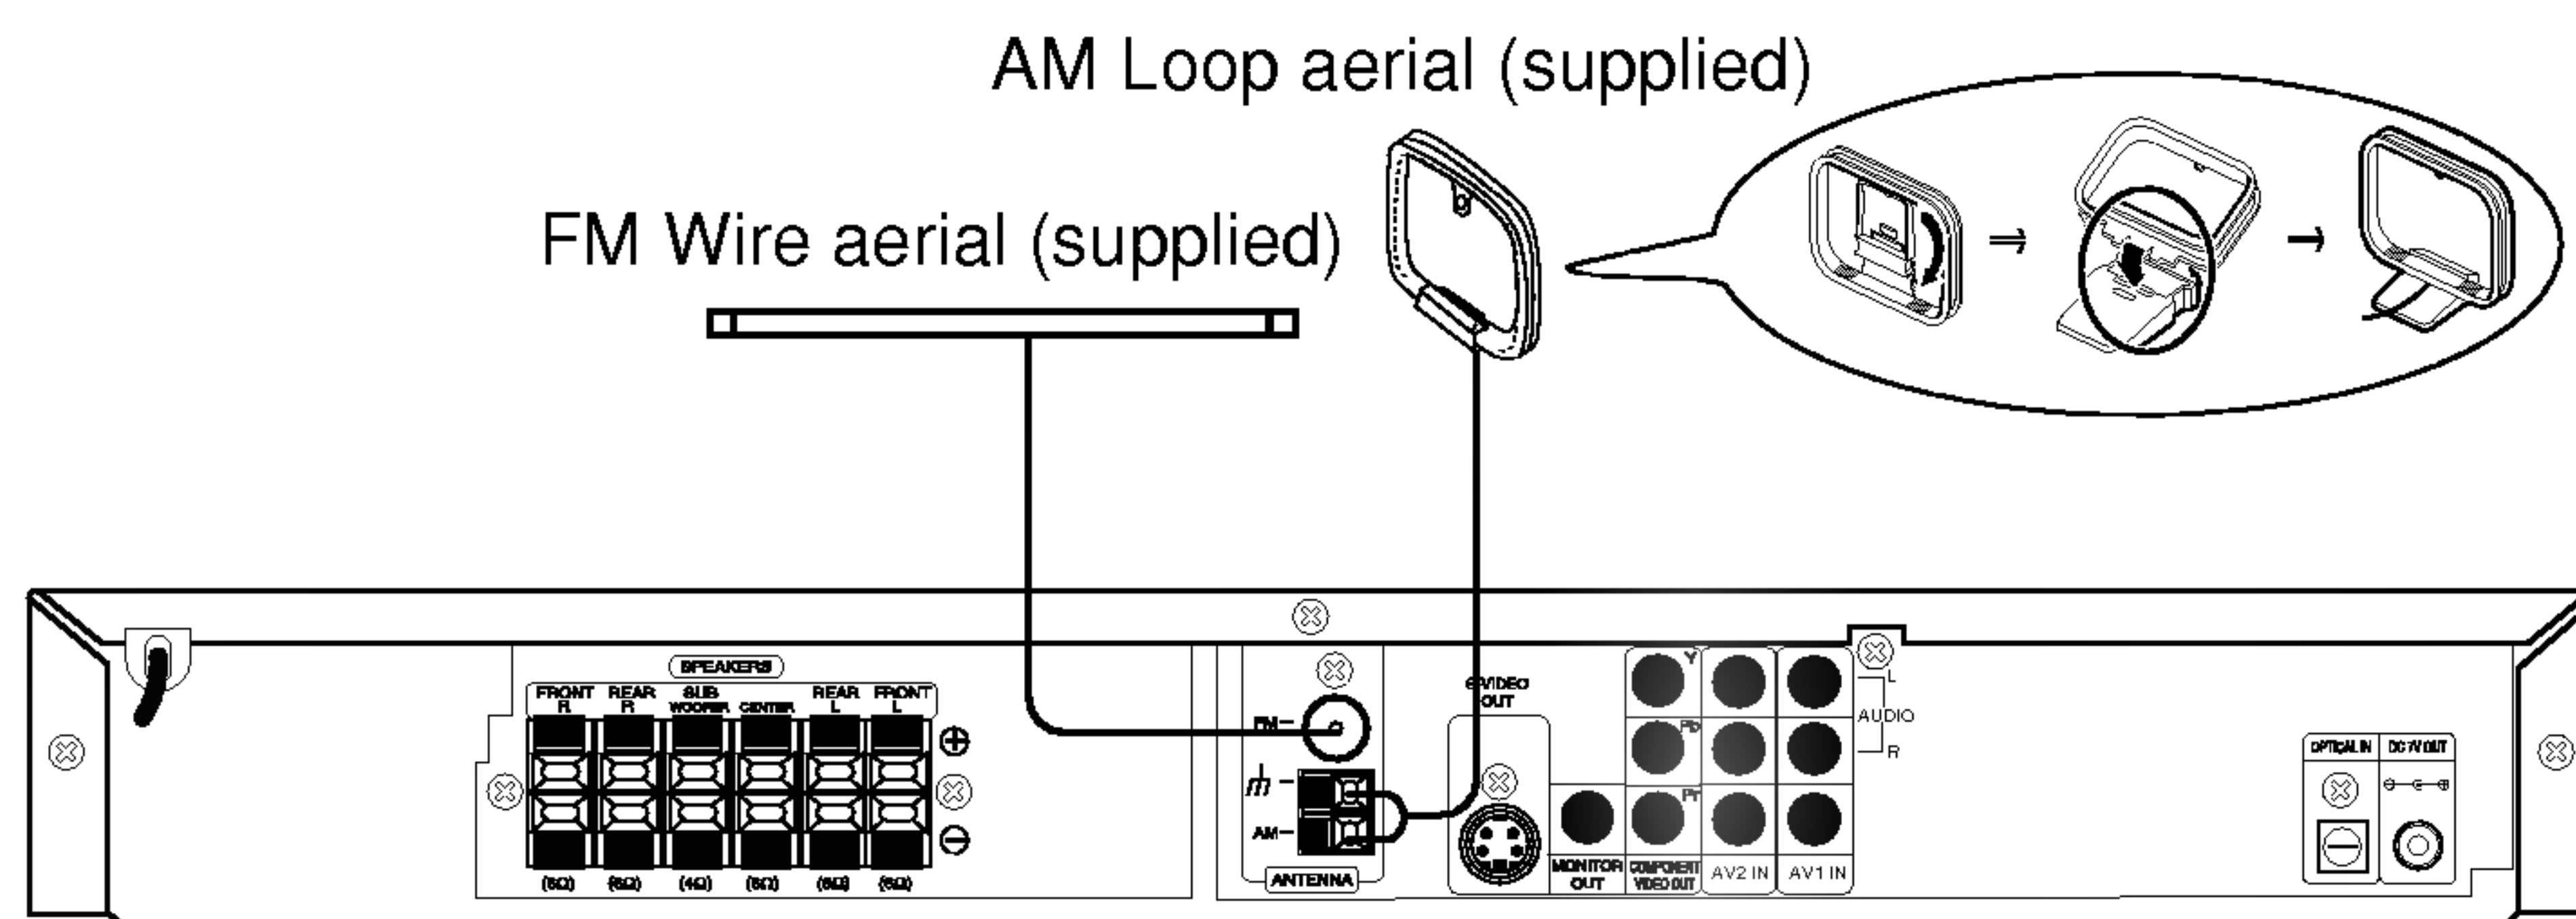

### Notes

- To prevent noise pickup, keep the AM Loop aerial away from the DVD/CD Receiver and other components.
- Be sure to fully extend the FM wire aerial.
- After connecting the FM Wire aerial, keep it as horizontal as possible.



















































**P/N: 3834RH0111M**