




# OWNER'S MANUAL

**V-KC581H\*\***

## New type cyclone vacuum cleaner

Please read all of the information on page 3 carefully.

This information contains important instructions for the safe use and the maintenance of the appliance.

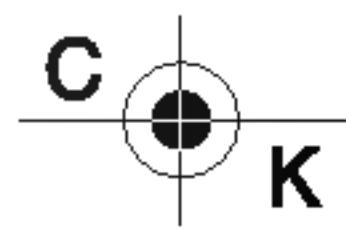


# Table of contents

<b>Information for Your Safety.....</b>	<b>3</b>
<b>How to Use.....</b>	<b>4</b>
Assembling Cleaner.....	4
Using the Accessory nozzles and the Carpet and floor nozzle.....	6
Emptying the Dust Tank.....	8
Vacuum Cleaner Operation .....	9
① How to Plug in and Use.....	9
② Adjusting the Suction power.....	9
③ Park-System.....	9
④ Storage.....	9
Cleaning the Dust Tank.....	10
Cleaning the Exhaust Filter.....	11
<b>What to do if your Vacuum Cleaner does not work .....</b>	<b>12</b>
<b>What to do when suction performance decreases .....</b>	<b>12</b>

# Information for Your Safety

Please read all the following information, which contains important instructions for the safety, the use and the maintenance of the appliance. This appliance complies with the following EC Directives: -73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive.


- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cold extension set on electrical portable outlet device must be positioned so that it is not subject to aplashing or ingress of moisture.
- Do not use the vacuum as a toy, injury could result.
- Do not continue to vacuum if any defect appears, missing or damaged. In these cases, contact an approved LG Electronics Service Agent.
- Repairs, when necessary, must be performed at an approved LG Electronics Service Agent.
- Only use parts produced or recommended by LG doing otherwise could invalidate your guarantee.
- Do not use without the dust tank or air filter.
- Do not use the vacuum cleaner If the power cord is damaged or faulty.
- If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.
- Do not unplug by pulling on cord.
- Do not pull on the supply cord, run over it, pull it around sharp edges or near/over hot surfaces.
- Always turn the vacuum cleaner off before:
  - Emptying the dust tank.
  - Cleaning or changing the filter.
  - Romoving from the mains outlet.
- Do not leave vacuum cleaner with the plug connected to a mains outlet-unplug when not in use.
- Do not use the vacuum with any of the openings blocked with any object that may restrict the airflow.
- Do not put any part of the body, colthes or any object (e.g. stick) into the opening or moving parts of the cleaner.
- Do not use outdoors.
- Do not vacuum hot ash, embers etc. or sharp objects.
- Do not vacuum flammable or explosive substances(liquids or gases).
- Do not vacuum water or other liquids.
- Do not handle the cleaner or plug with wet hands.
- Do not immerse the whole cleaner in water.
- Do not use vacuum cleaner without repaired if it was under water.
- When you vacuum with an attachment appliance that has a rotating brush roller:
  - Do not reach into the running brush roller.
- The appliance is not intended for use by young children or infirm persons without supervision.
  - Young children should be supervised to ensure that they do not play with the appliance.

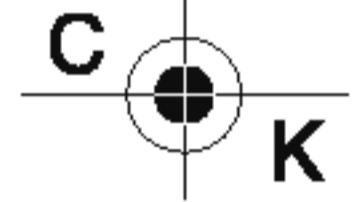

**Thermal protector:** This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, turn off the switch and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minutes period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, contact a qualified electrician.

## How to Use Assembling Cleaner


Fit the nozzle onto the end of the pipe.

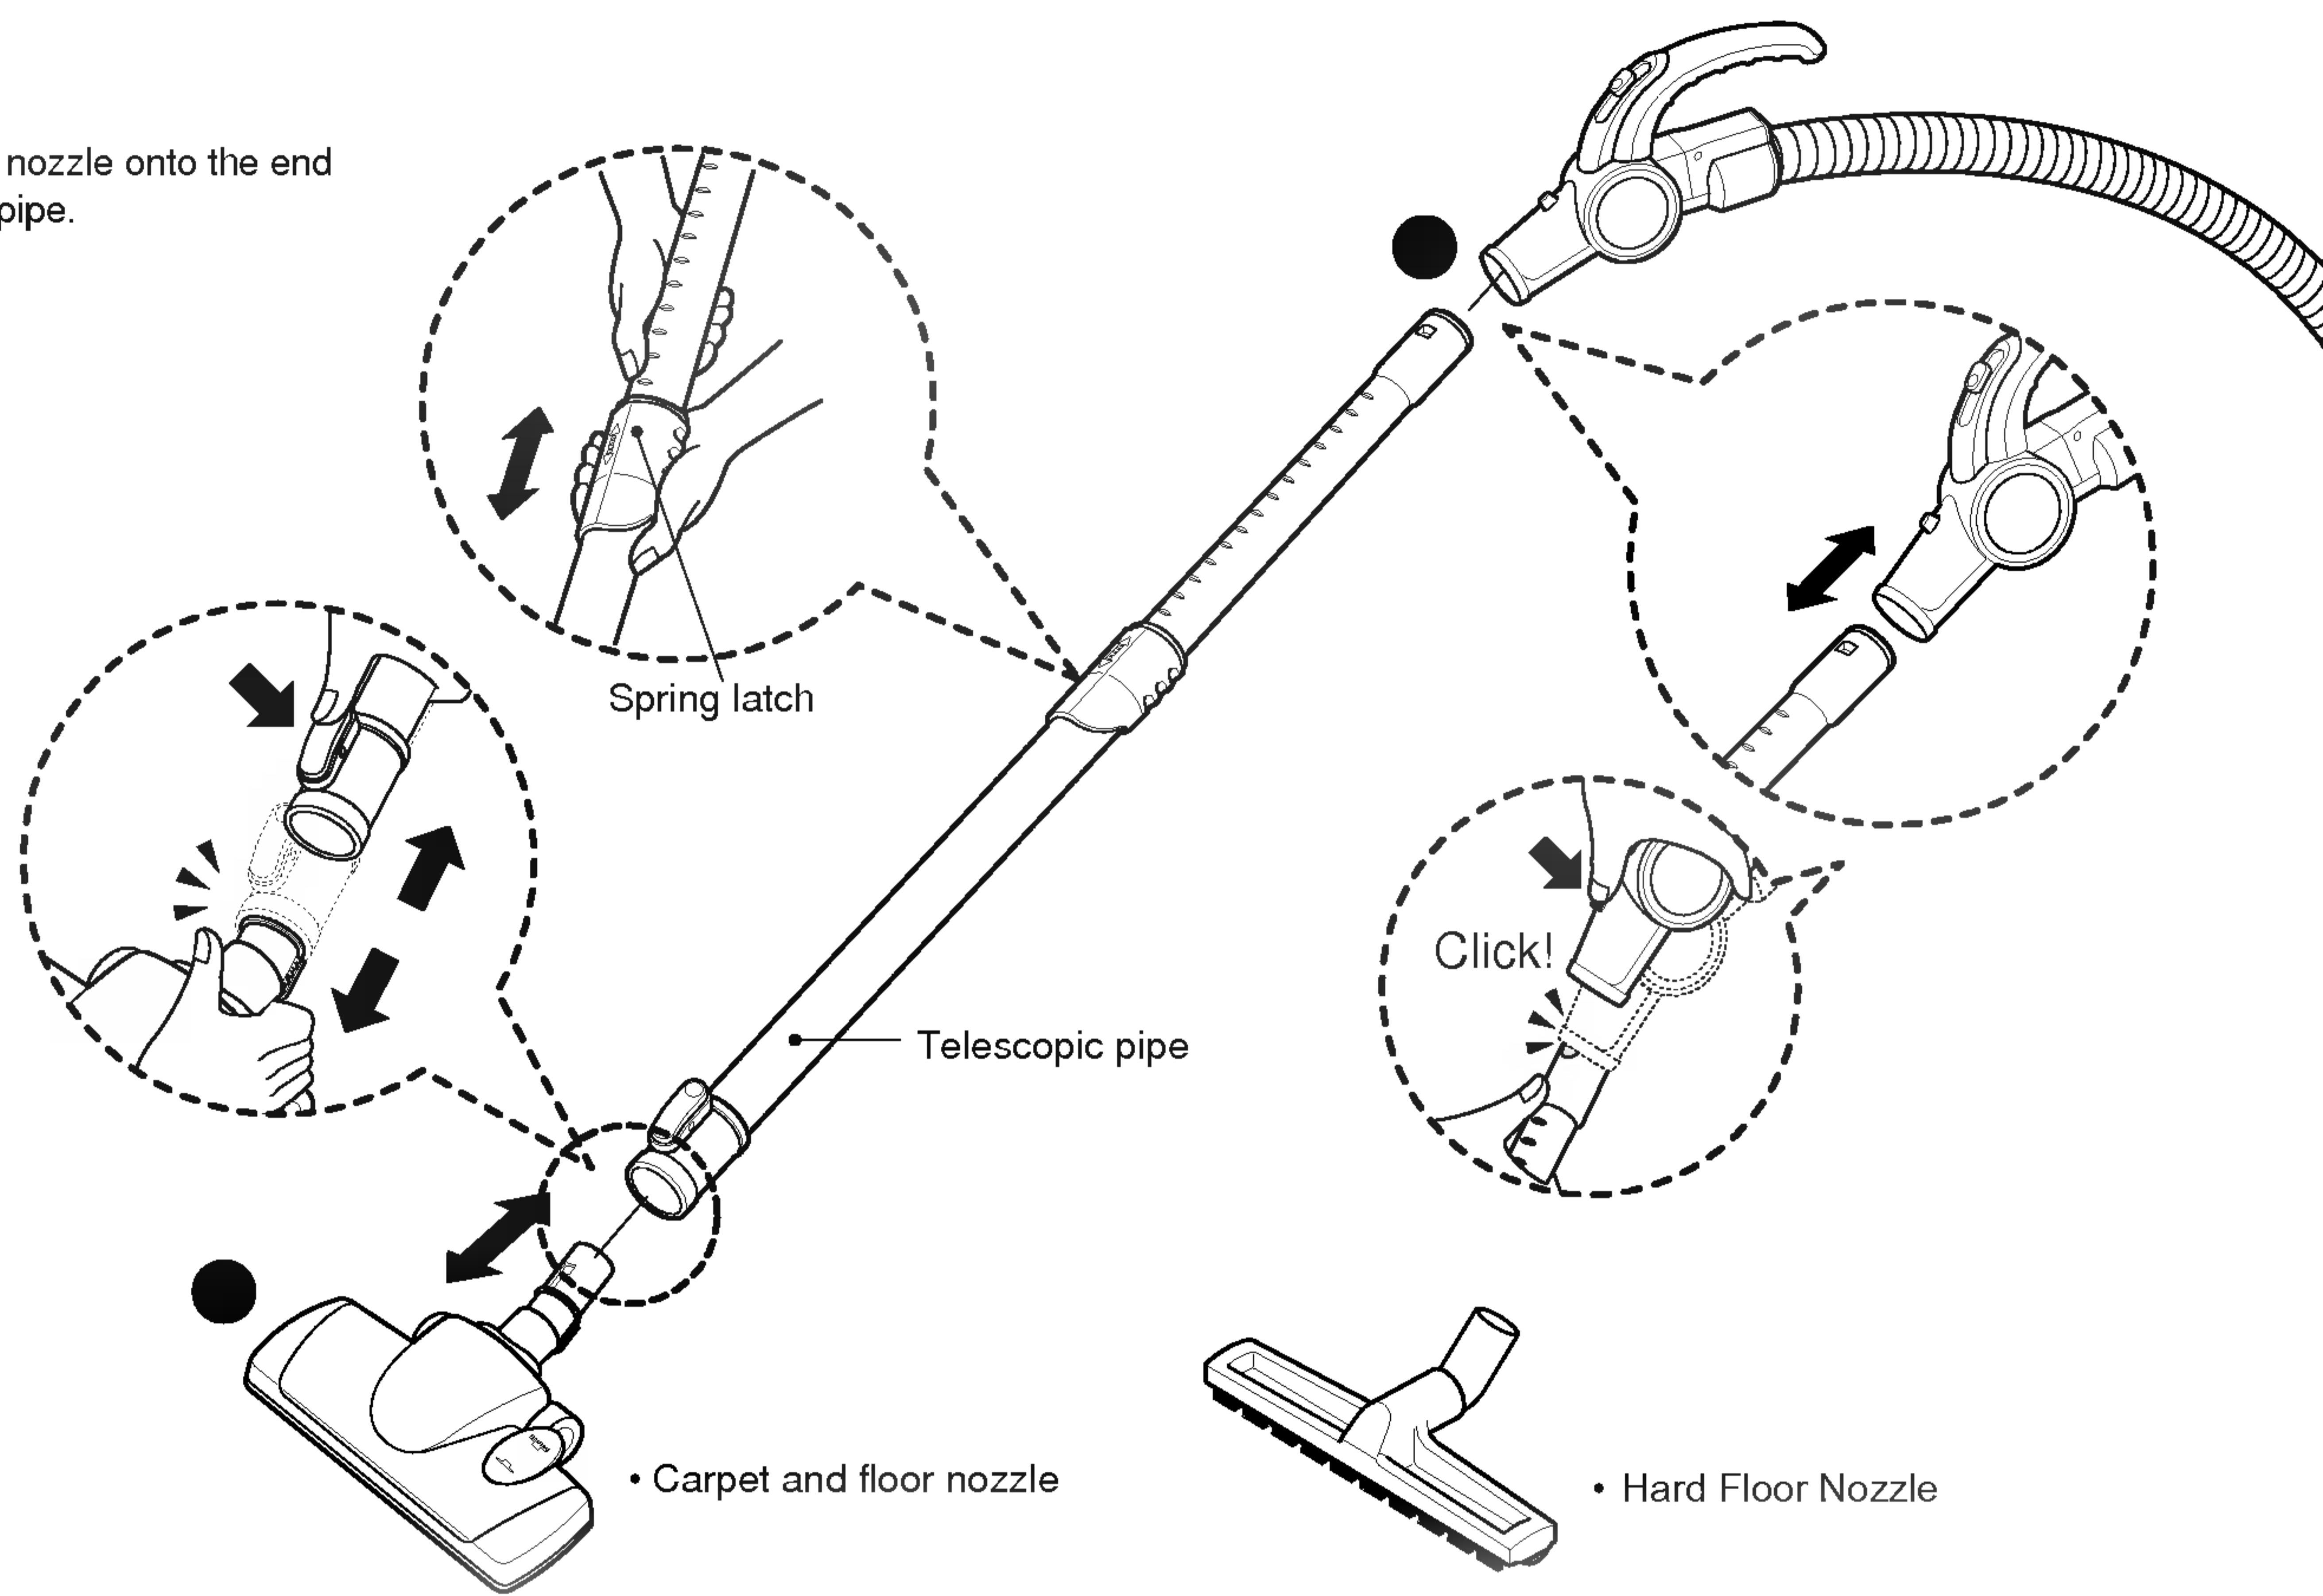

Push the nozzle onto the telescopic pipe.


- Press the spring latch to release.
- Pull out the pipe to the desired length.
- Release spring latch to lock the pipe in position.
- Push telescopic pipe into hose handle firmly.

## How to Use Assembling Cleaner

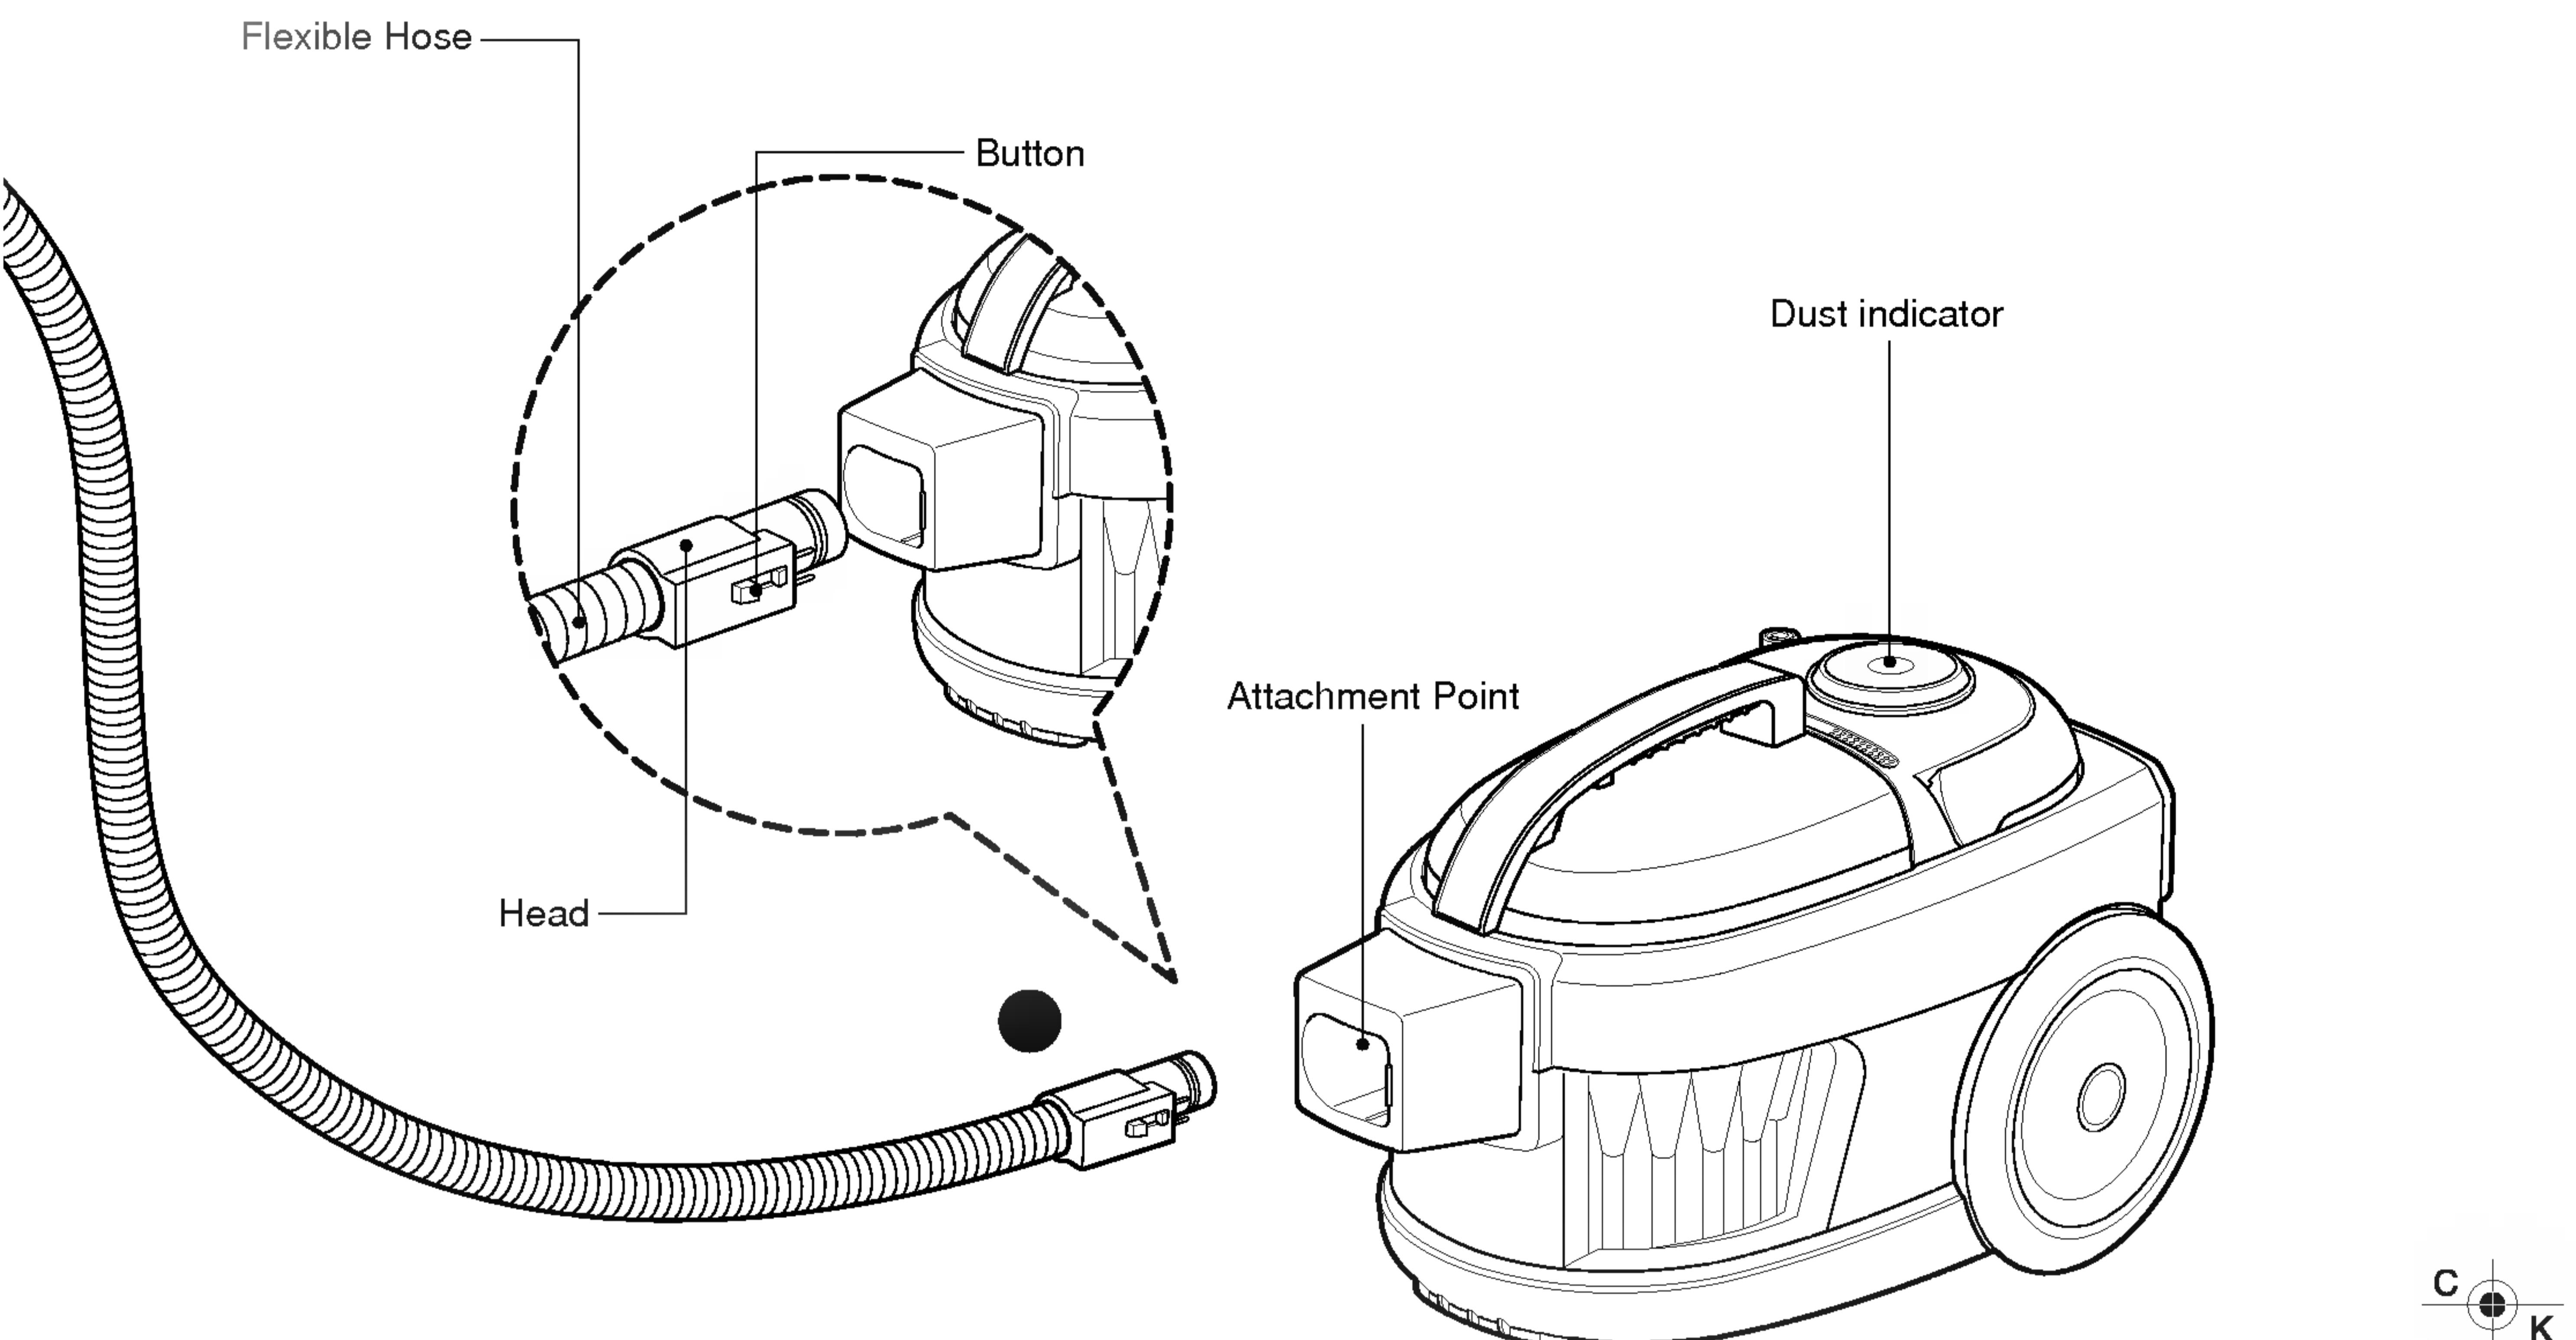

Push the end of the head on the flexible hose into the attachment point on the vacuum cleaner. To remove the flexible hose from the vacuum cleaner, press on the button situated on the head, then pull the head out of the vacuum cleaner.


## How to use Using the Accessory nozzles and the Carpet and floor nozzle


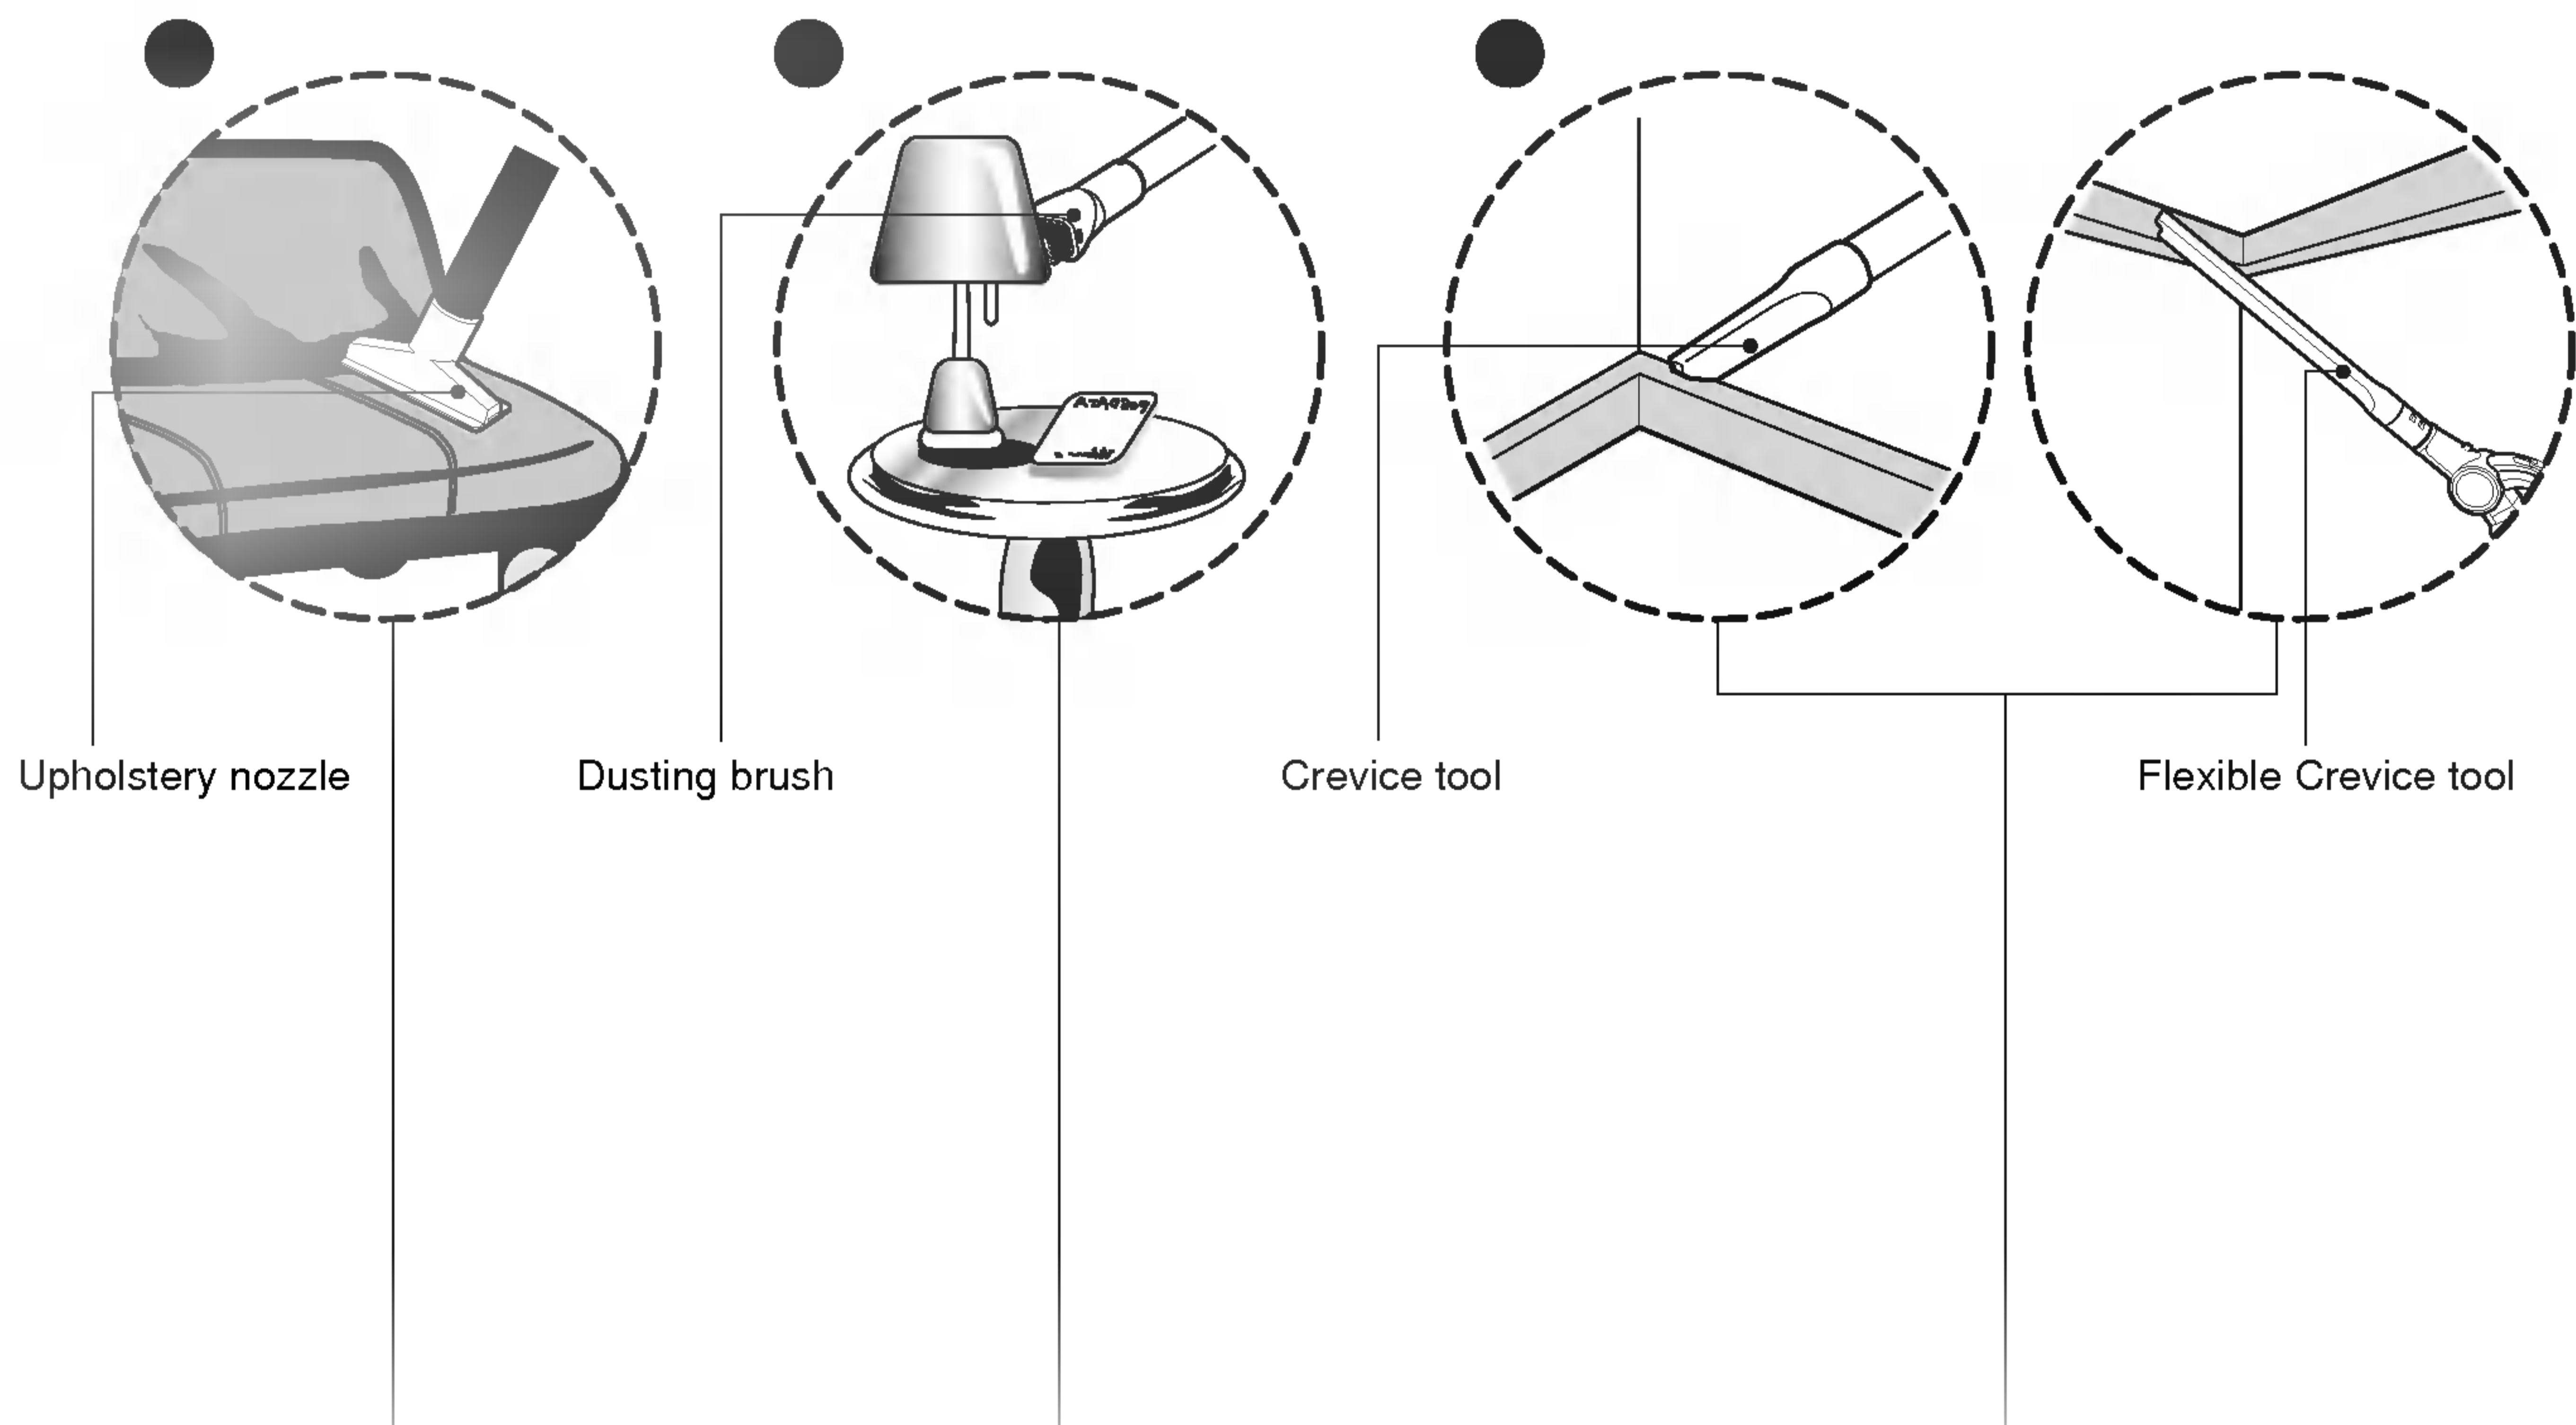


Upholstery Nozzle is for vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.

Dusting Brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.

Crevice Tool(Flexible Crevice Tool) is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.

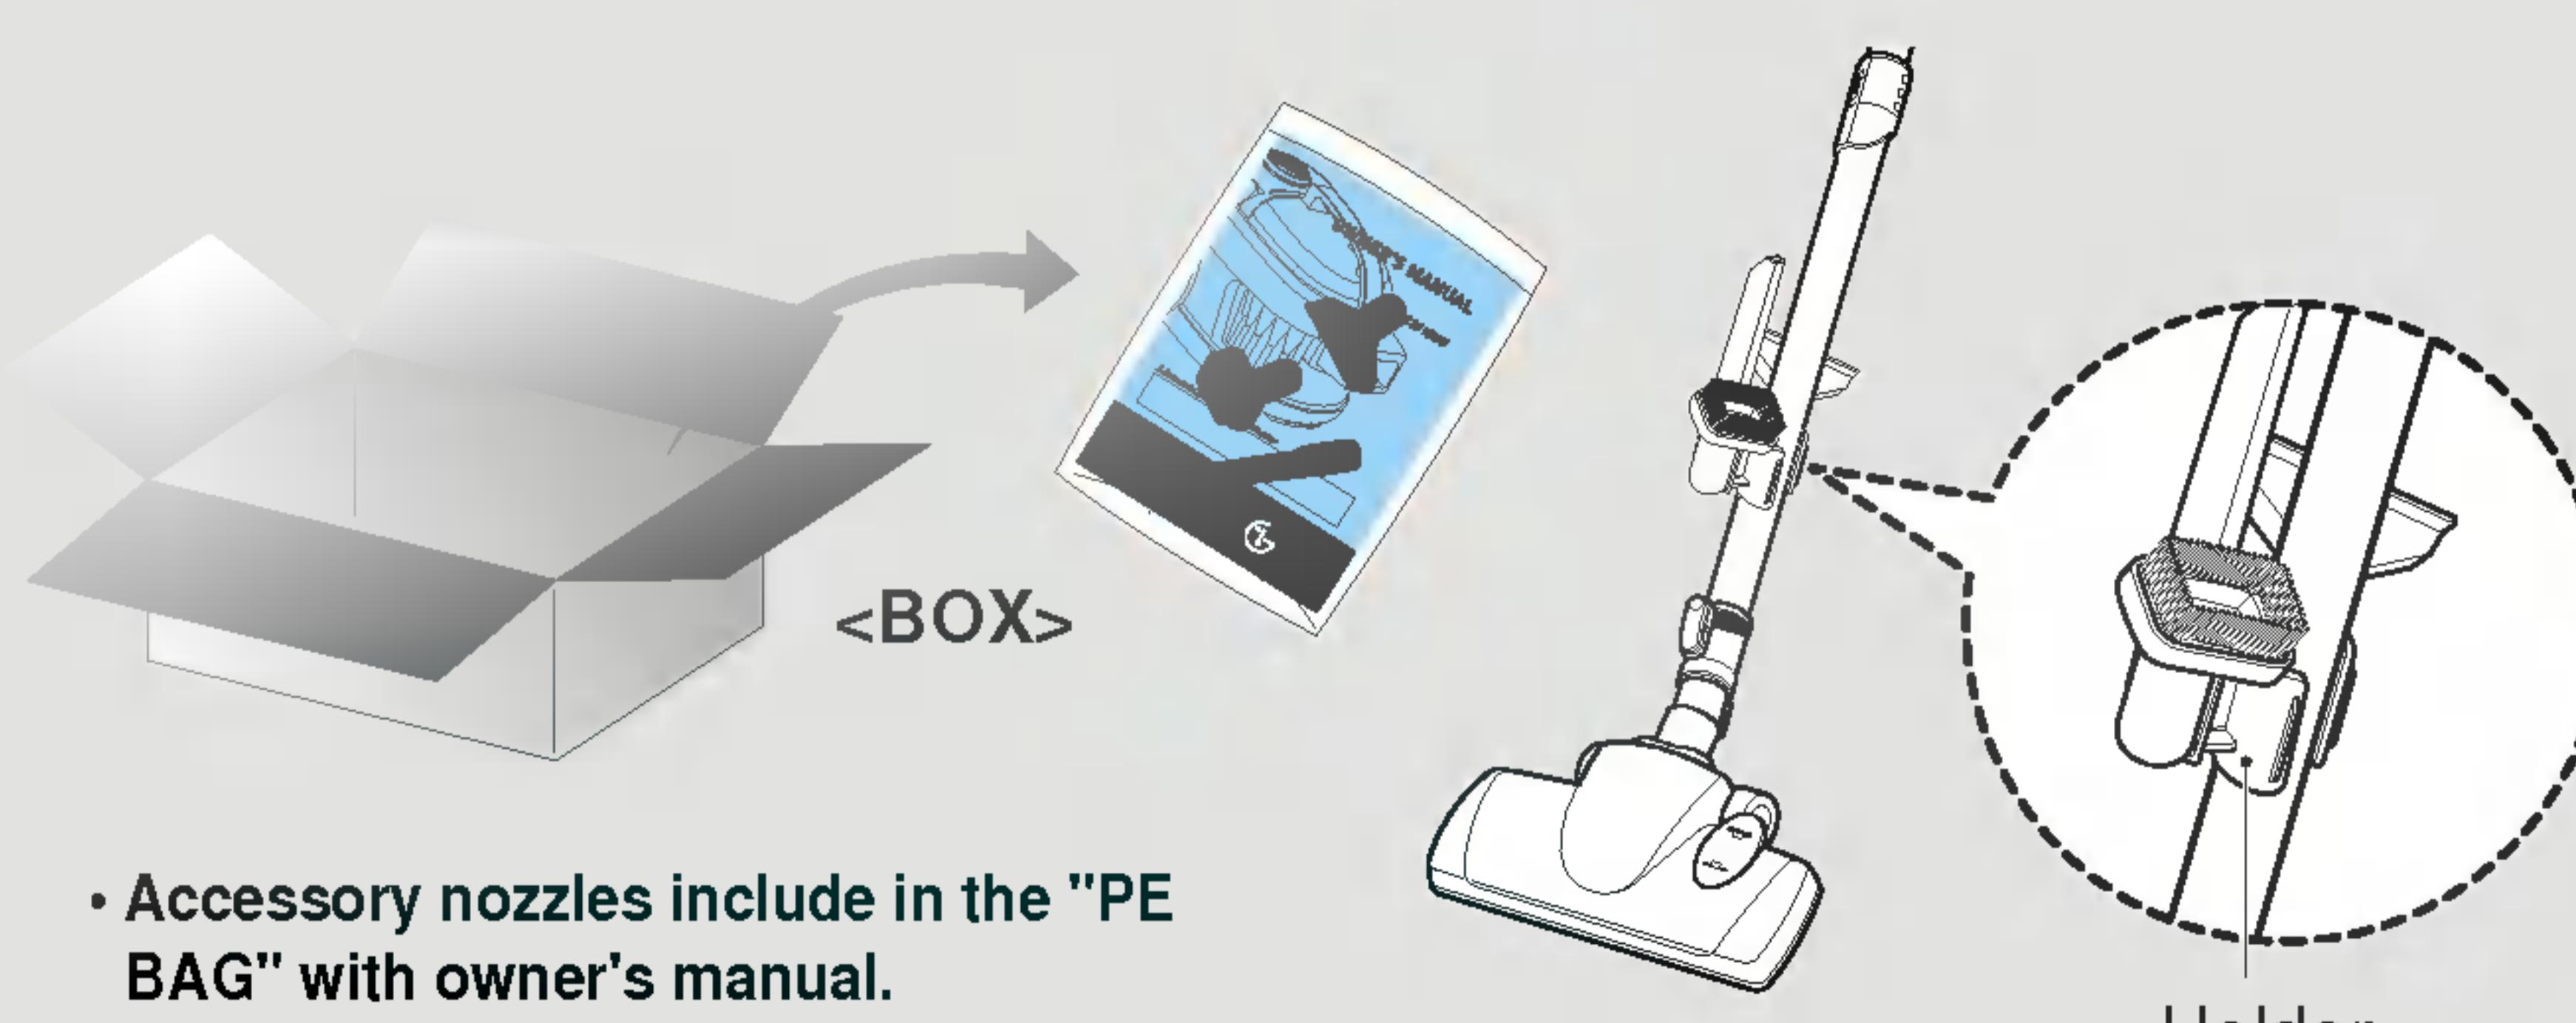

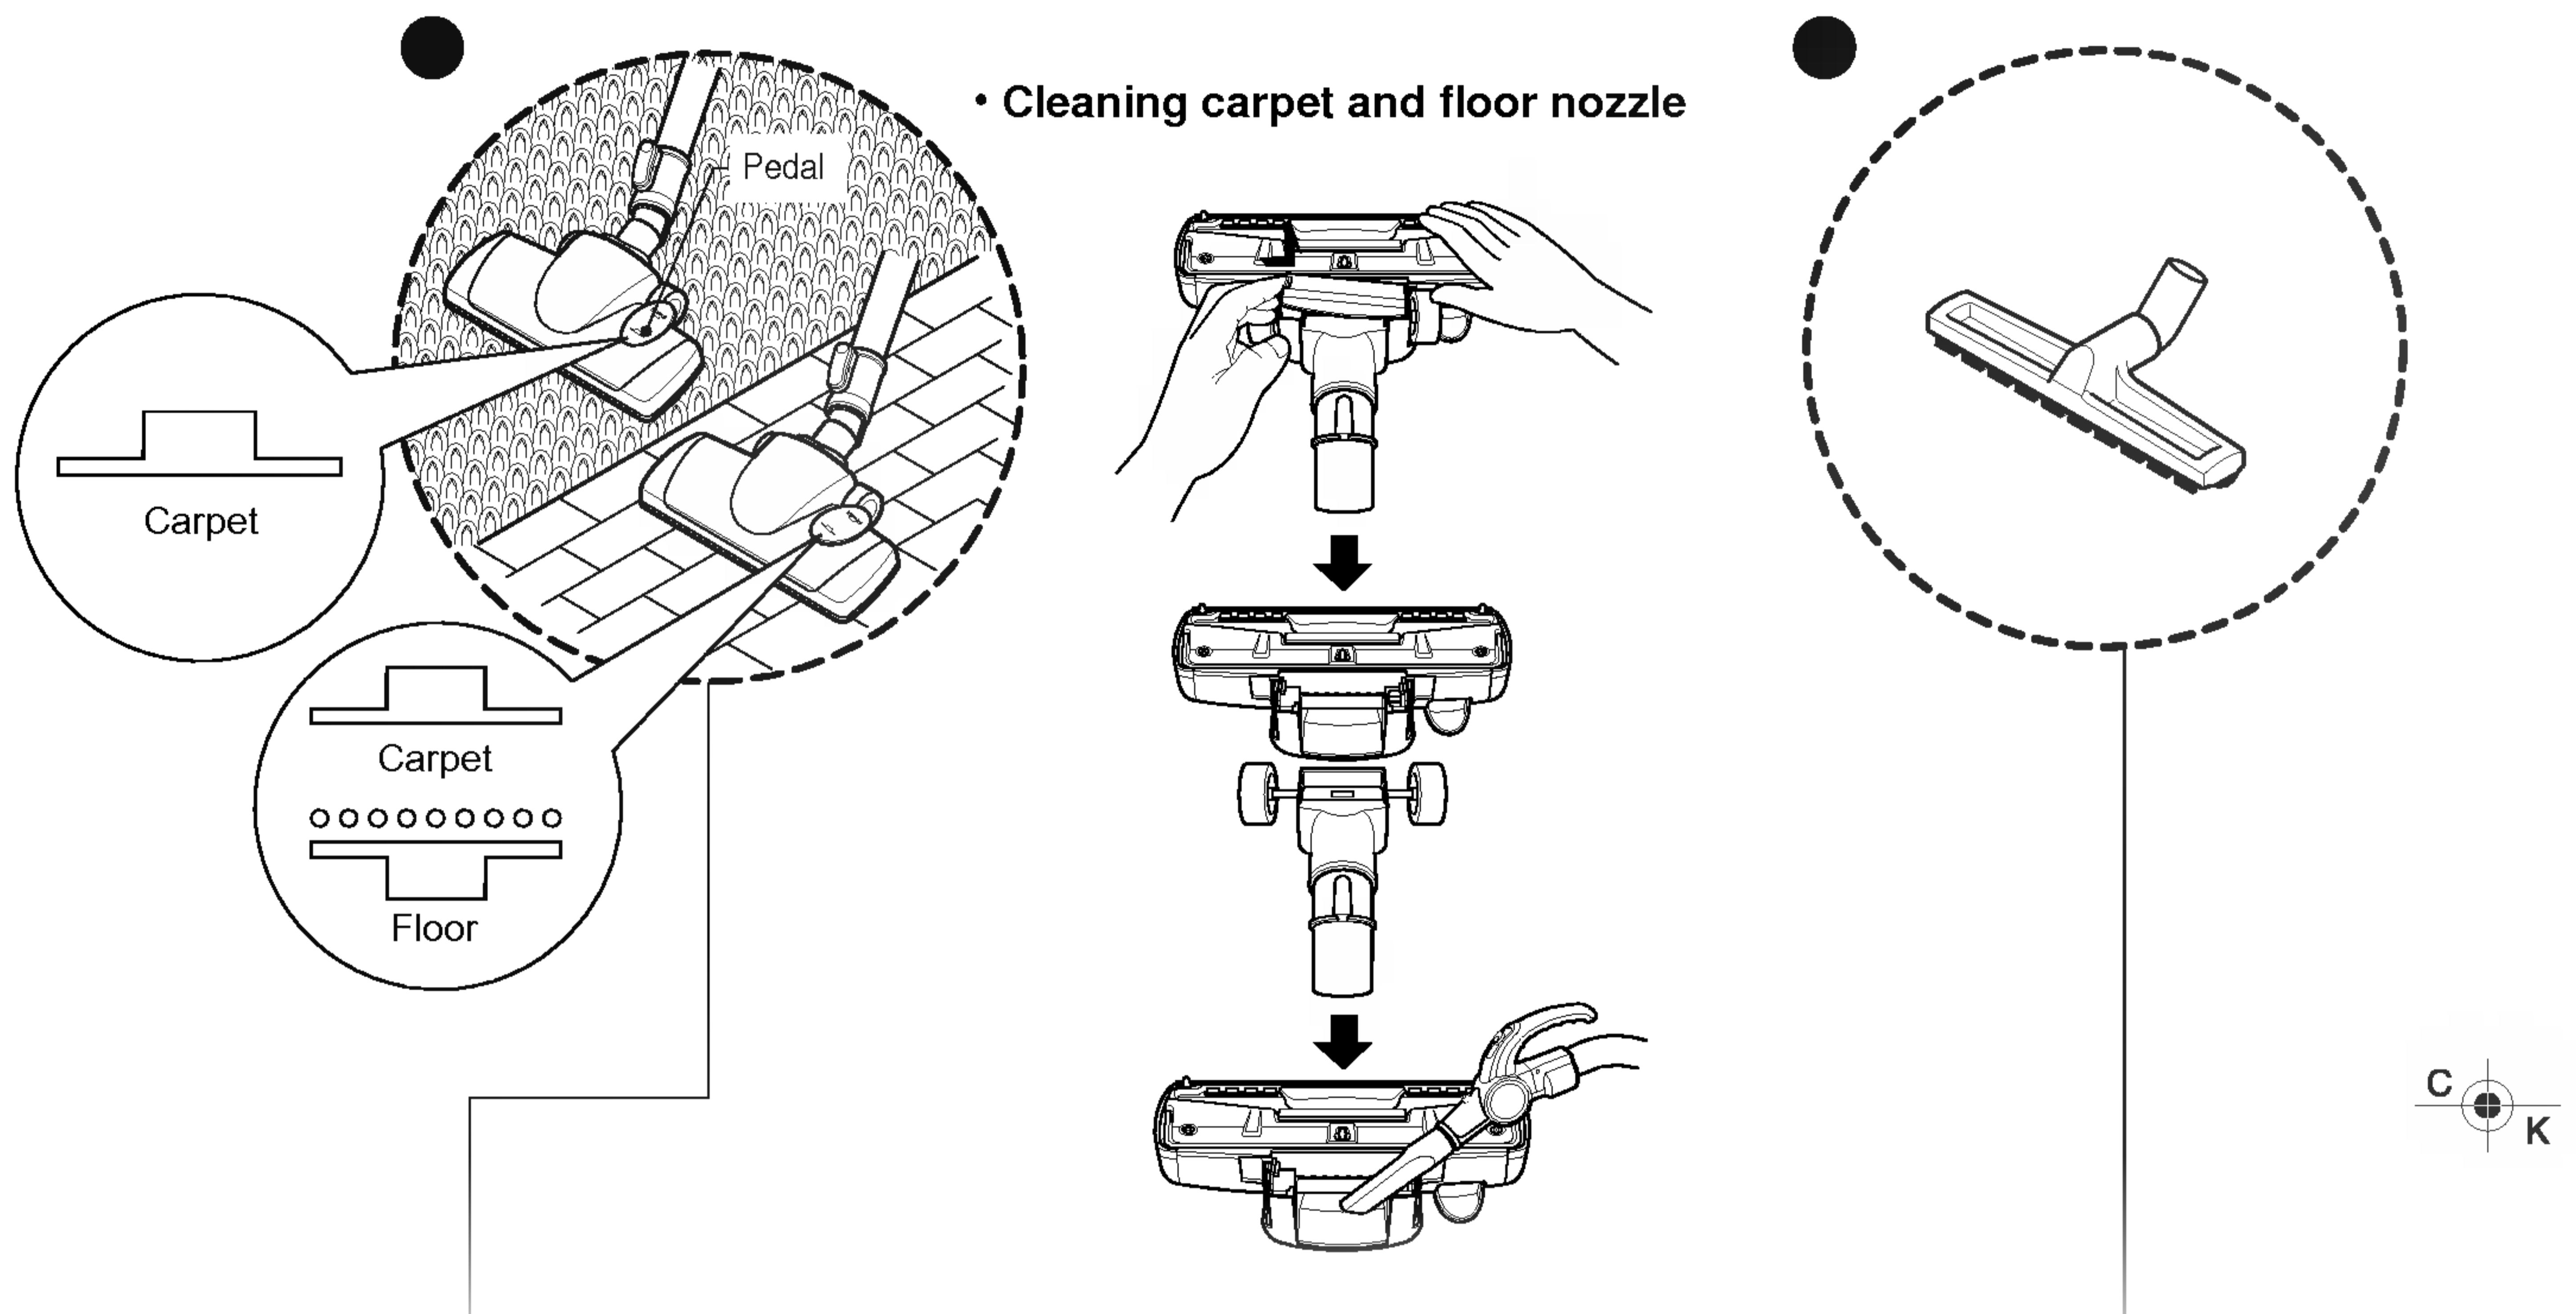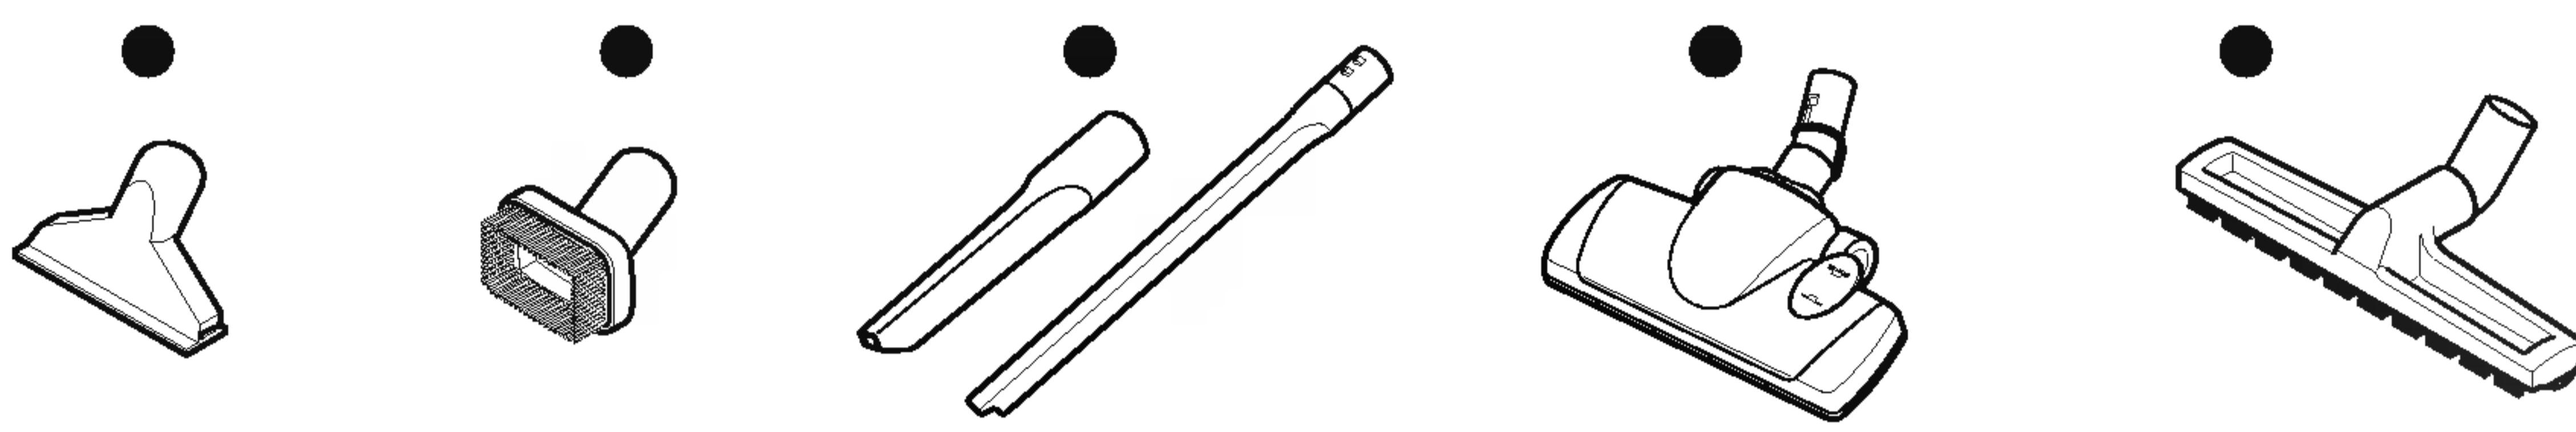


- **The 2 position cleaning head** equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- **Carpet or rug position** Press the pedal to lower brush.
- **Hard floor position (tiles, parquets floor)** Both types are available.

- Open the cover by pulling the hook.
- Divide the nozzle into two parts
- Clean the hole of the nozzle.

Efficient cleaning of hard floor (wood, linoleum, etc)

## How to use Emptying the Dust Tank

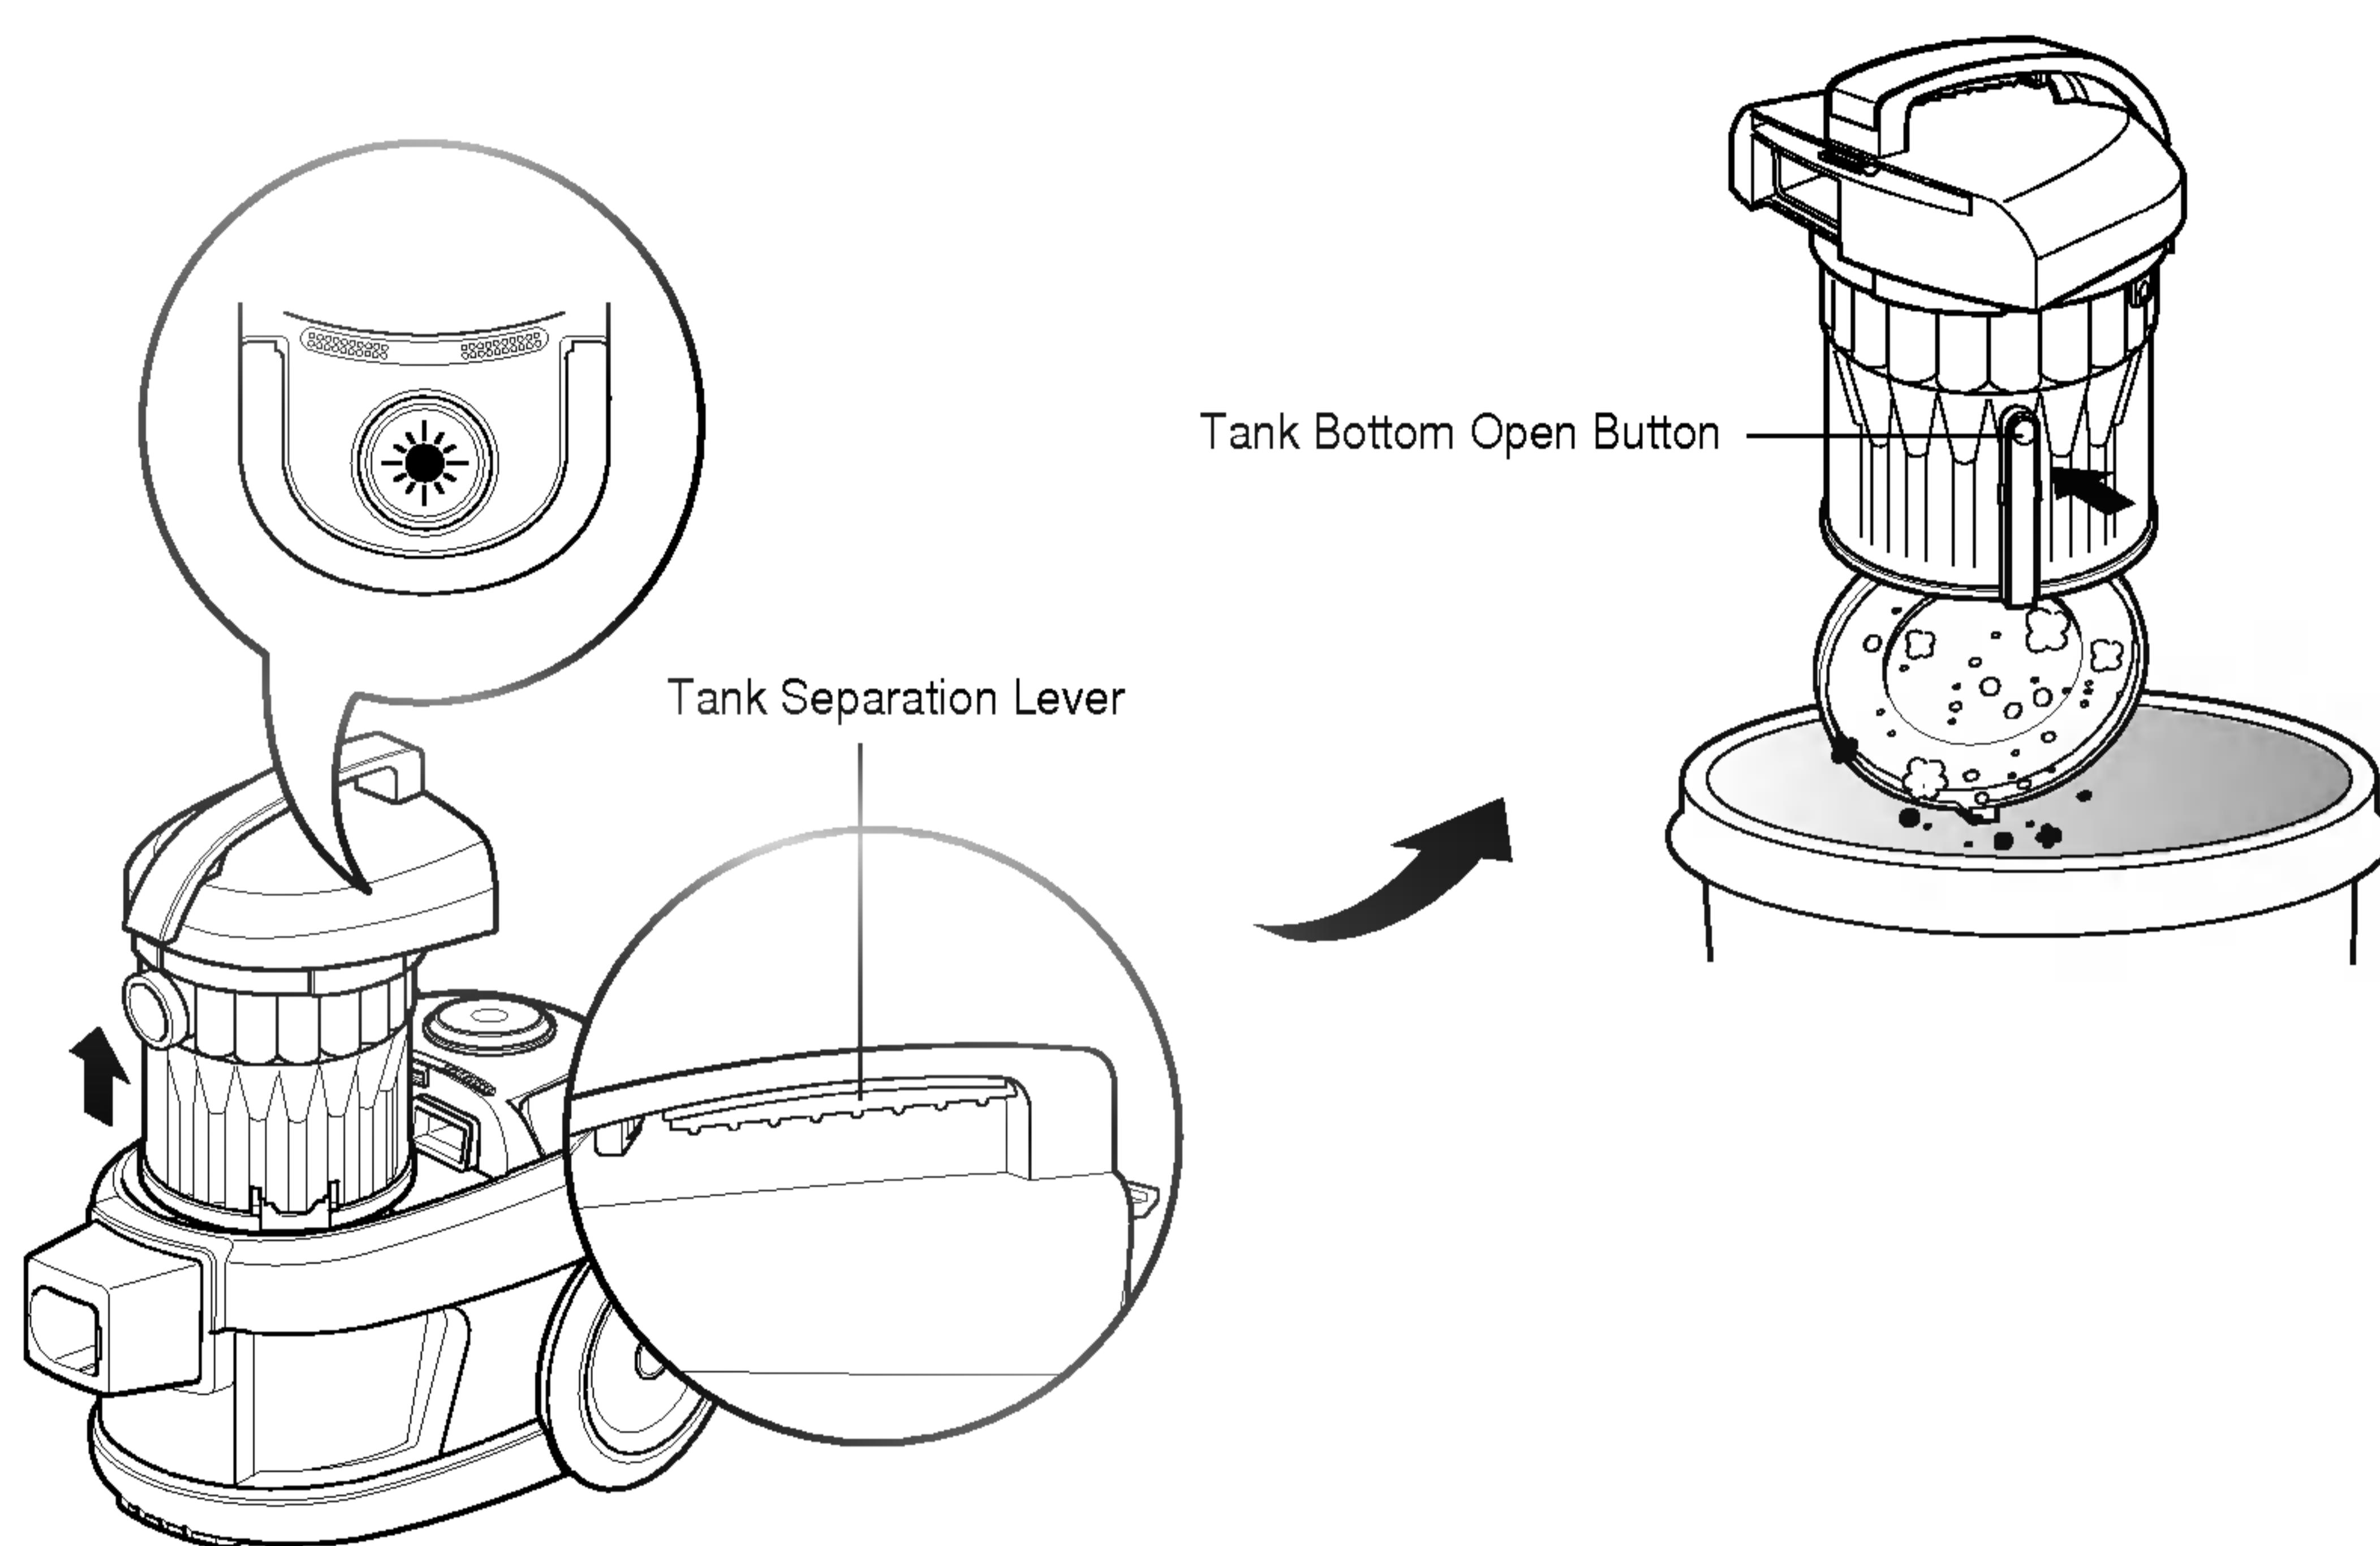

The dust tank needs emptying when dust reaches the "MAX" position on the dust tank or indicator is lighted on.

- Turn off the vacuum cleaner and unplug it.
- Grasp the handle of the tank and then push the tank separation lever.
- Pull out the tank.
- Empty the tank and then push the tank into the cleaner.
- Push the dust tank into the tank mount as far as it will go.




### CAUTION

- Suction power may be weakened when insignificant dusts are sucked. In this case, clean the air filter and the air guide. ➡ Page10
- After emptying the dust tank the indicator is on(Red light) or twinkles, Clean the air filter, the air guide, the dust tank and the cap ➡ Page10
- **When the indicator continues to twinkle for 90 seconds, the suction will become low to protect the motor (from overheating).**

#### Moving the cleaner

- Don't grasp the tank handle when you are moving the Cleaner. The cleaner's body may be fell down with separating tank and body. You should grasp the carrier handle when you are moving the cleaner.

## How to use Vacuum Cleaner Operation

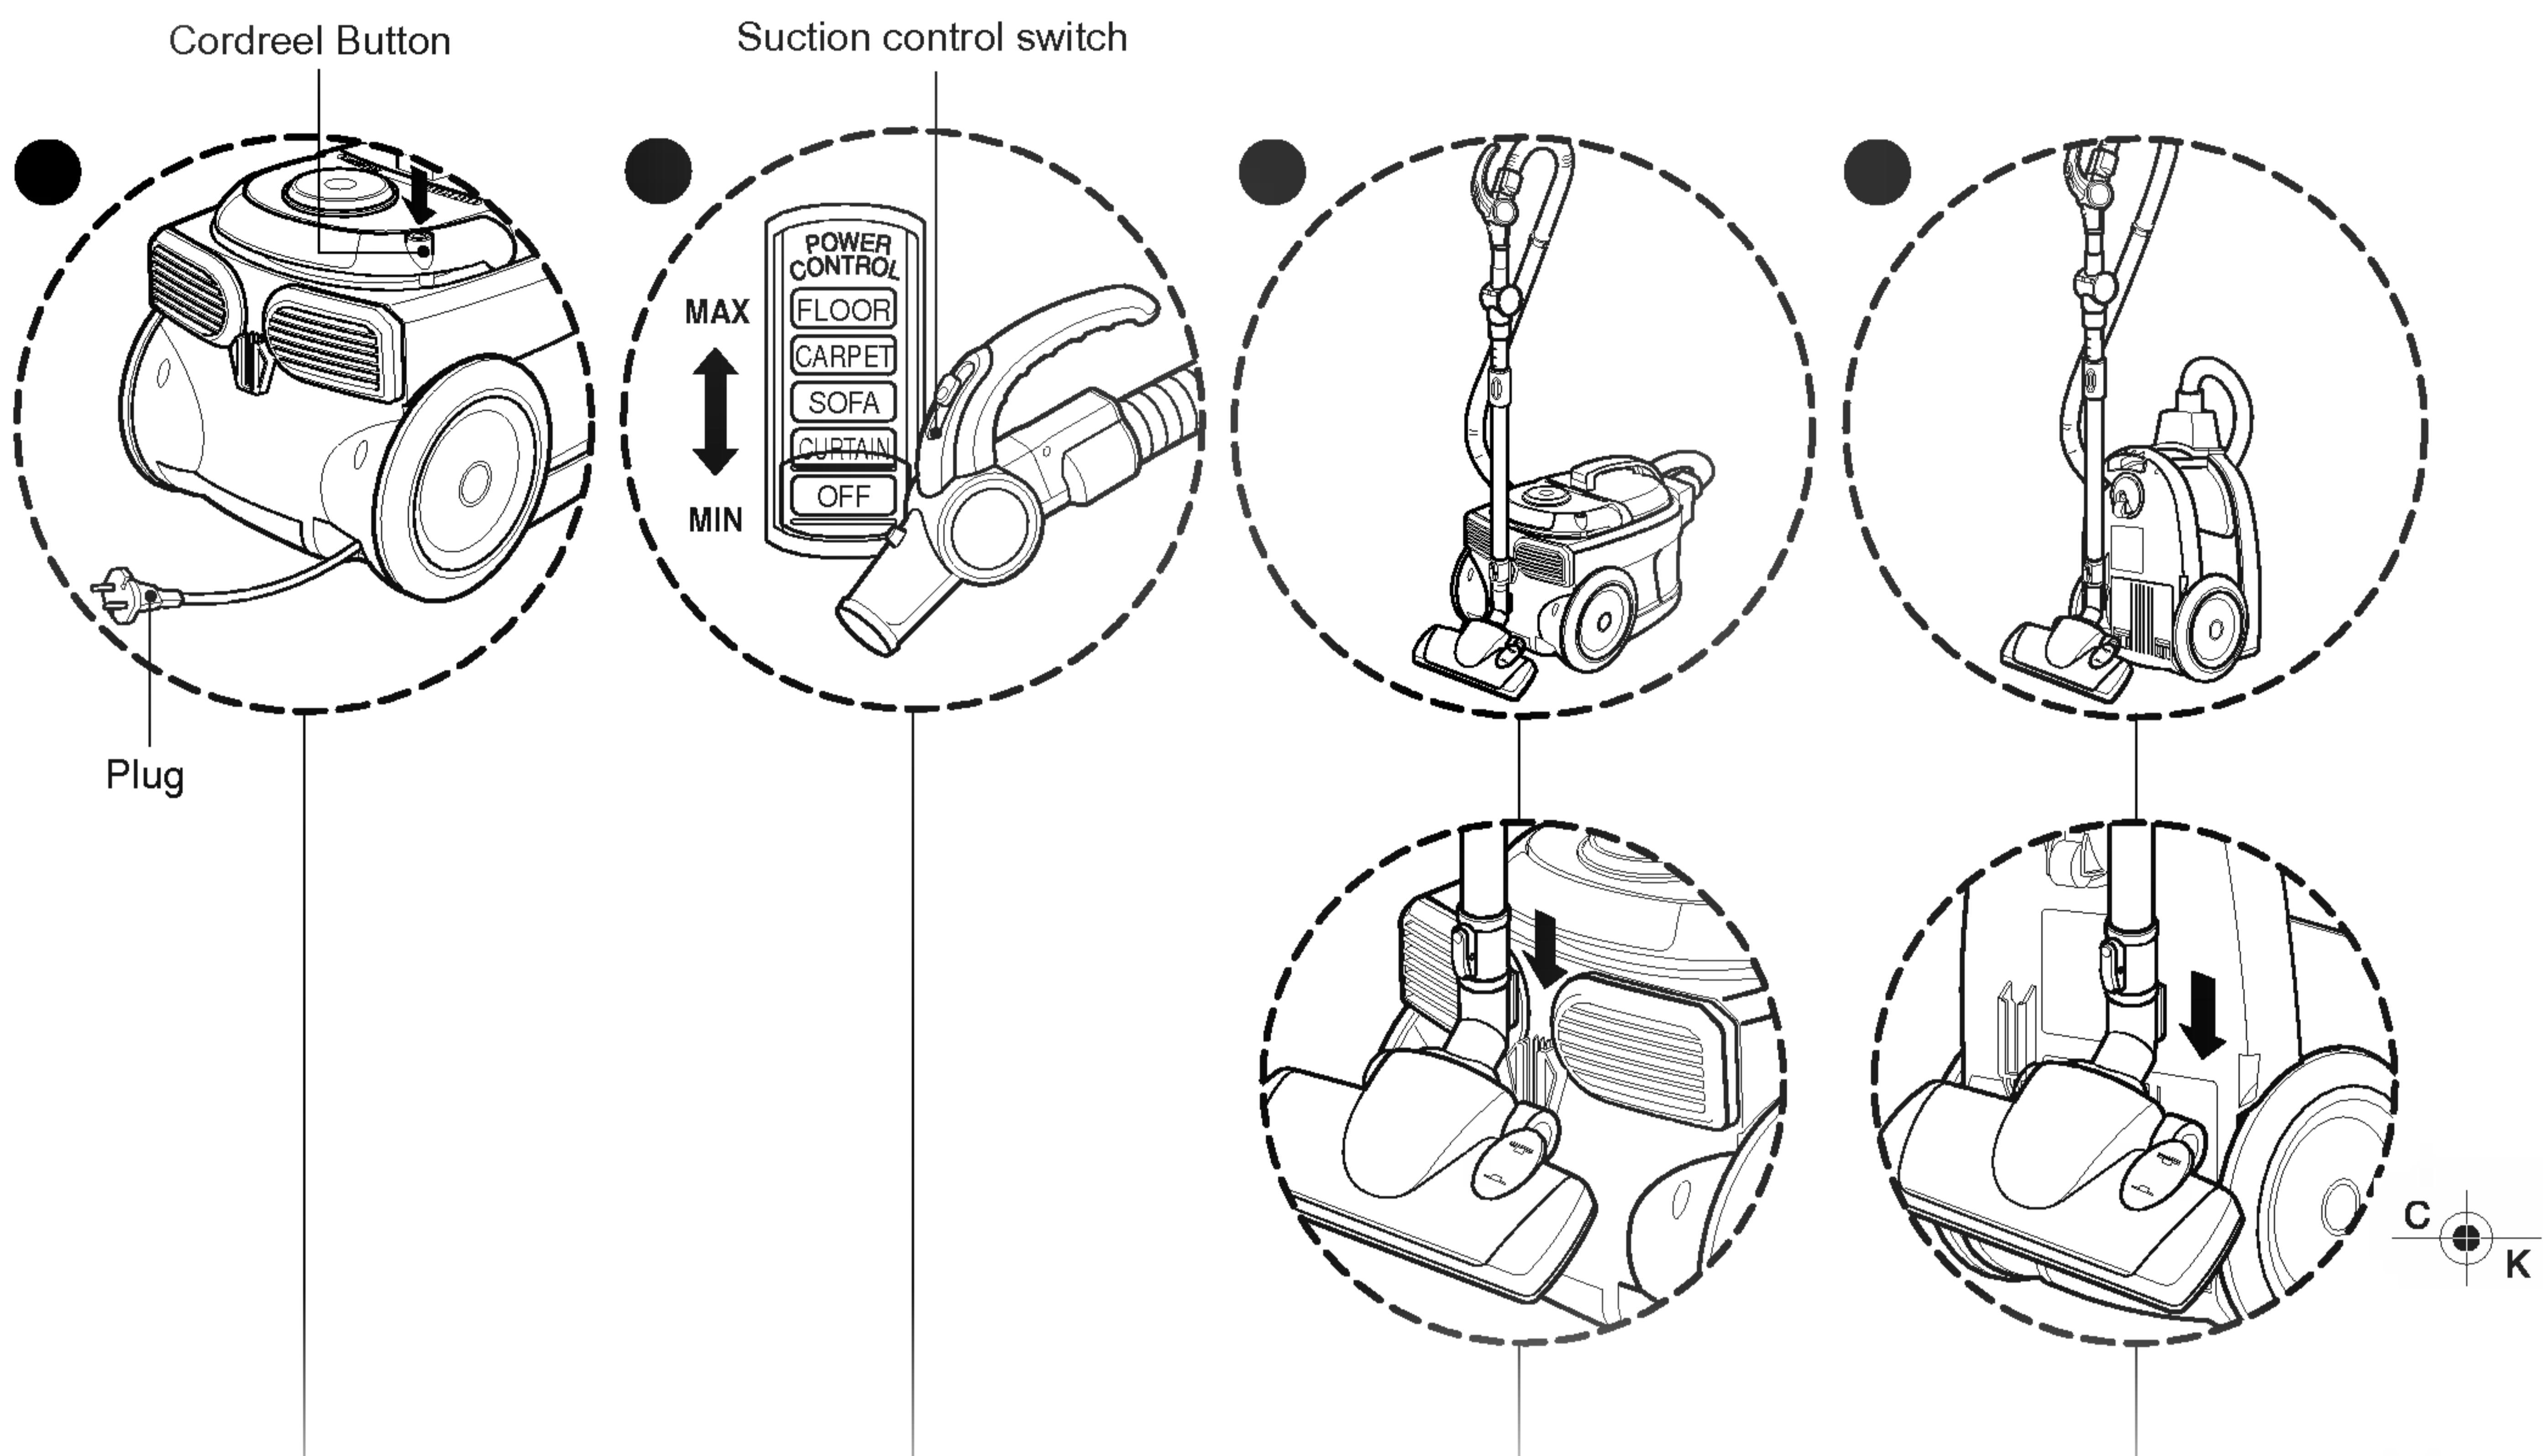


- Pull out the power cord to the desired length and plug into the socket.
- Adjust cleaning status and operation of the cleaner at the control part of the grip handle.

- Adjust suction level at the control part of the grip handle.

- To store after vacuuming and pause while vacuuming.
- For deposit after vacuuming, for example to move a small piece of furniture or a rug, use the Park system to support the flexible hose and cleaning head. - Slide the hook on the large cleaning head into the slot on the rear of the vacuum cleaner.
- Corner free nozzle is accessory nozzle, so it can't be parked.

- When you have switched off and unplugged.
- The appliance, press on the button to automatically rewind the cord.
- You can store your appliance in a vertical position by sliding the hook on the large cleaning head into the clip on the underside of the appliance.

## How to USE Cleaning the Dust Tank

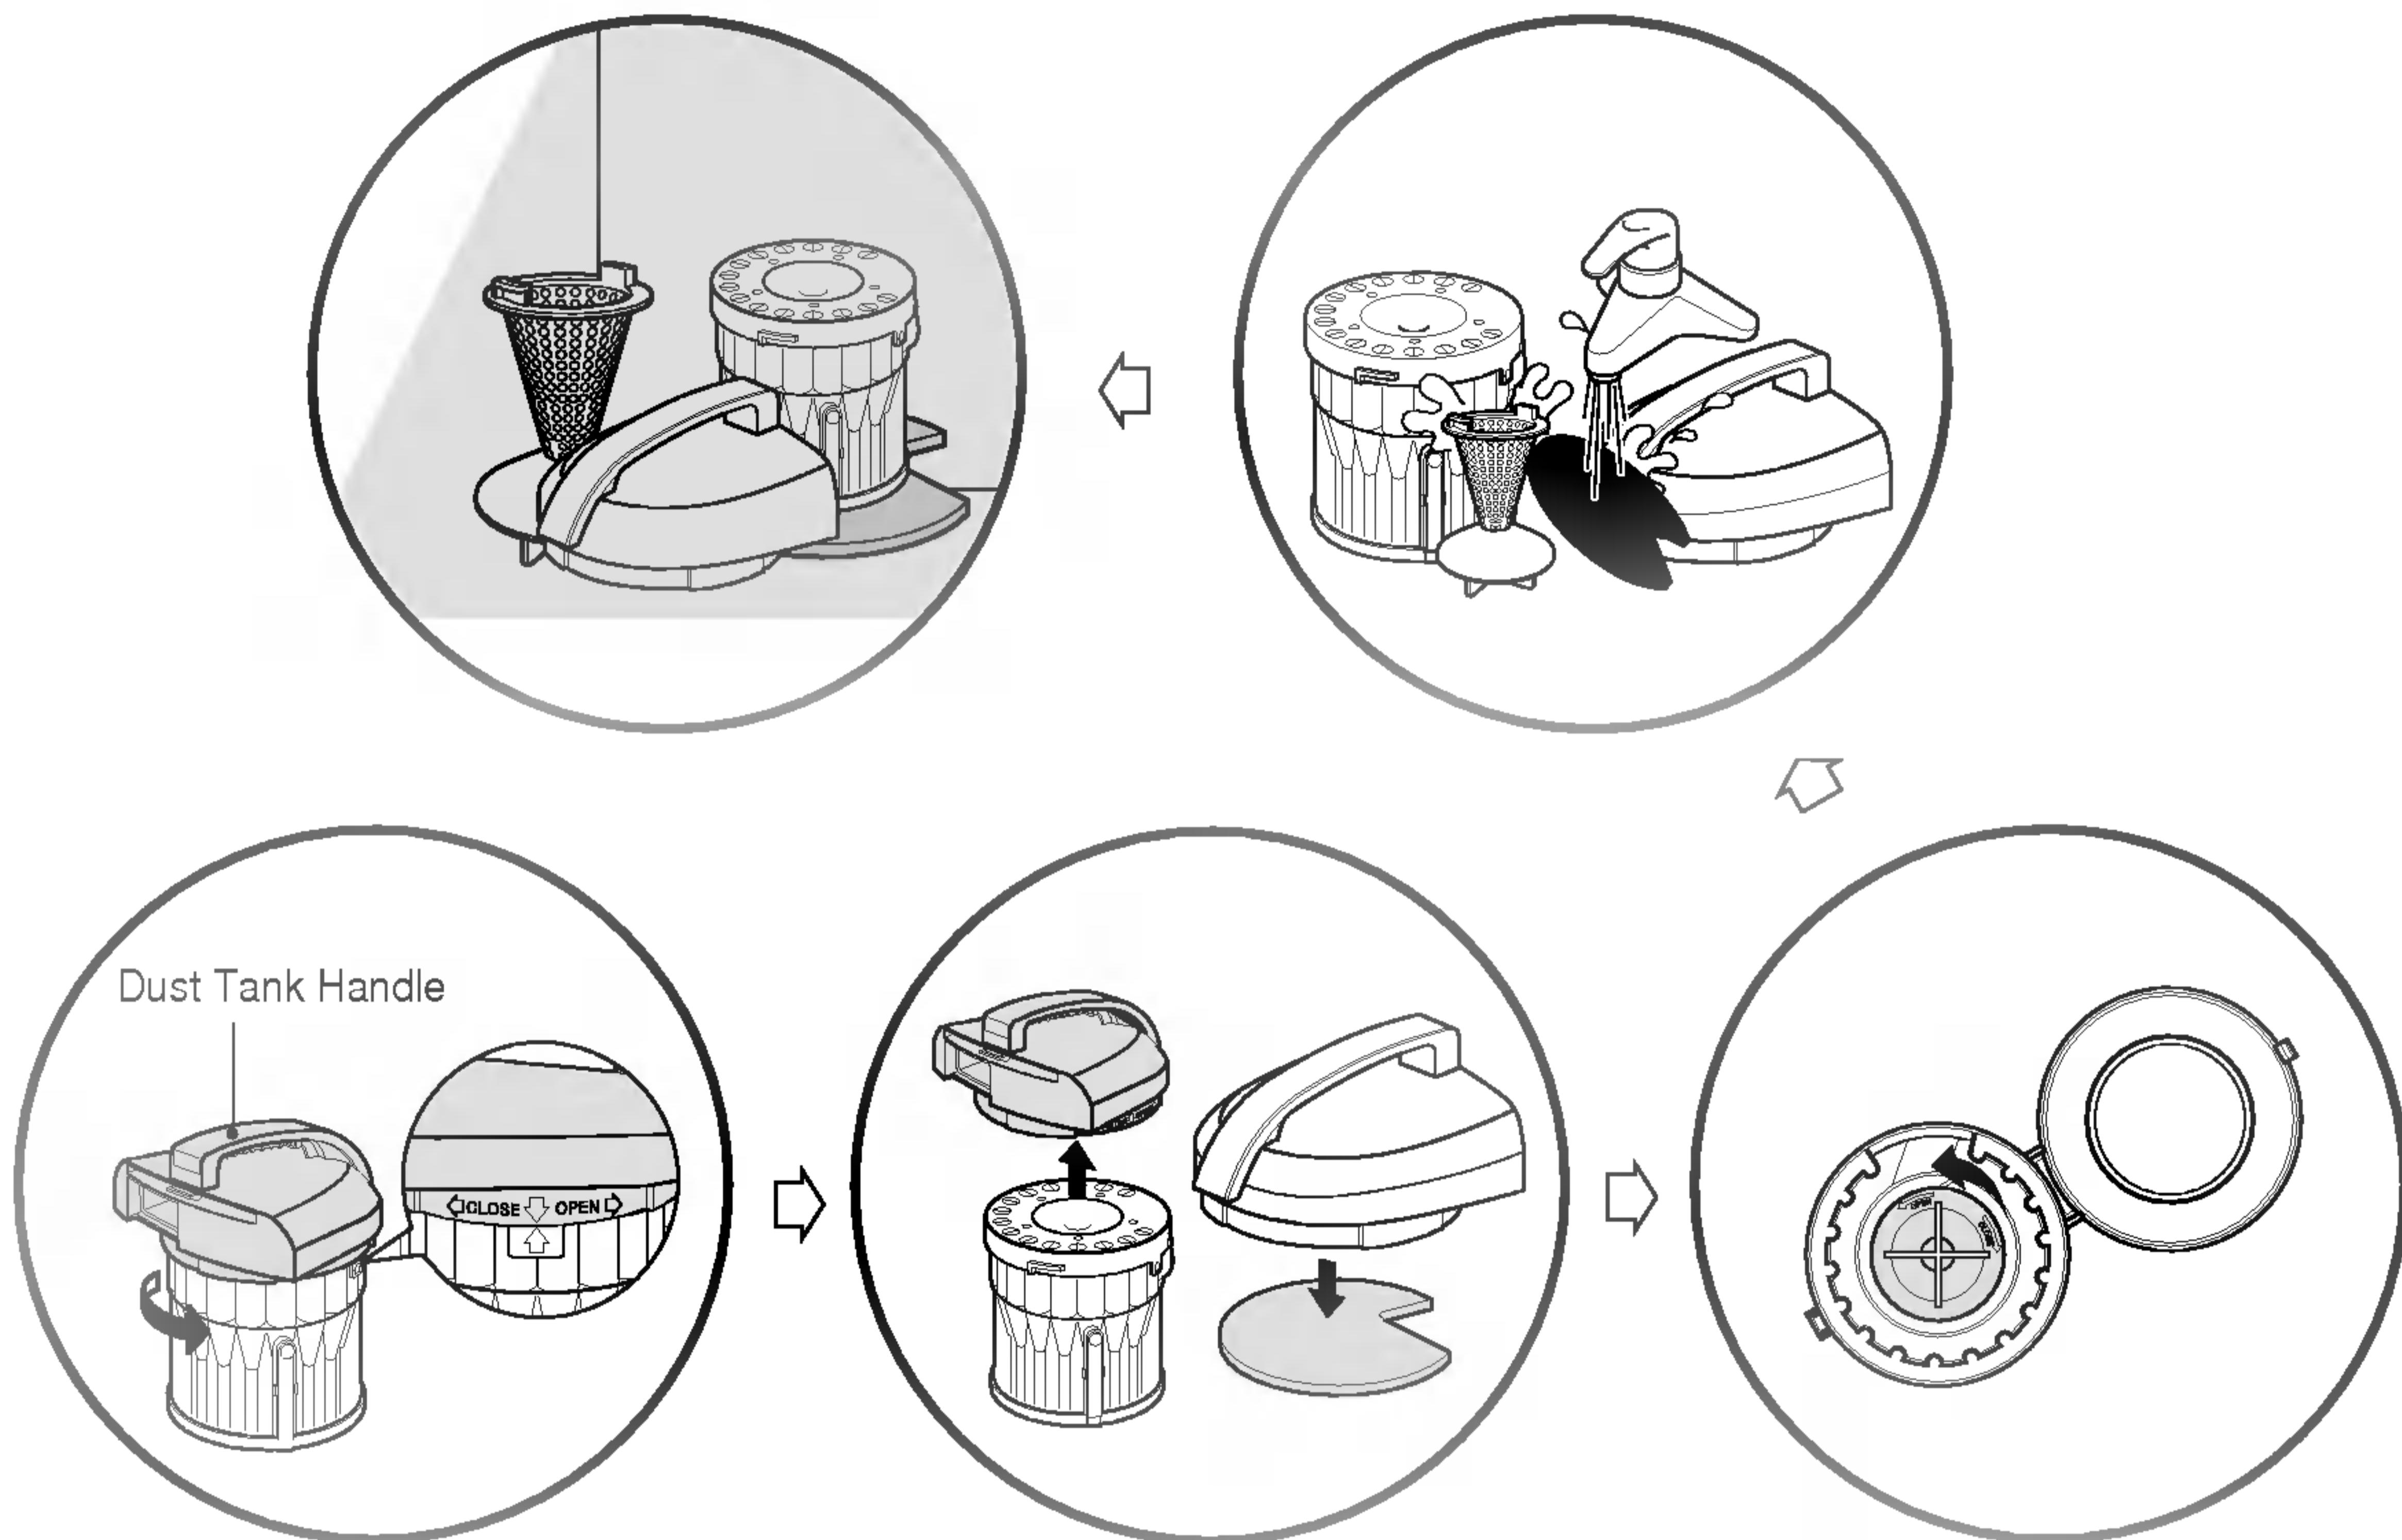


- Separate the dust tank Cap by turning to count clockwise.
- Separate air filter from the dust tank Cap.
- Separate air guide from the dust tank as figure.
- Wash the dust tank, the air filter, the air guide and the dust tank cap.
- Dry them fully in shade so that moisture is entirely removed.

**CAUTION**

After emptying the dust tank the indicator is lighted on(Red light) or twinkles, clean the dust tank.

## How to USE Cleaning the Exhaust Filter

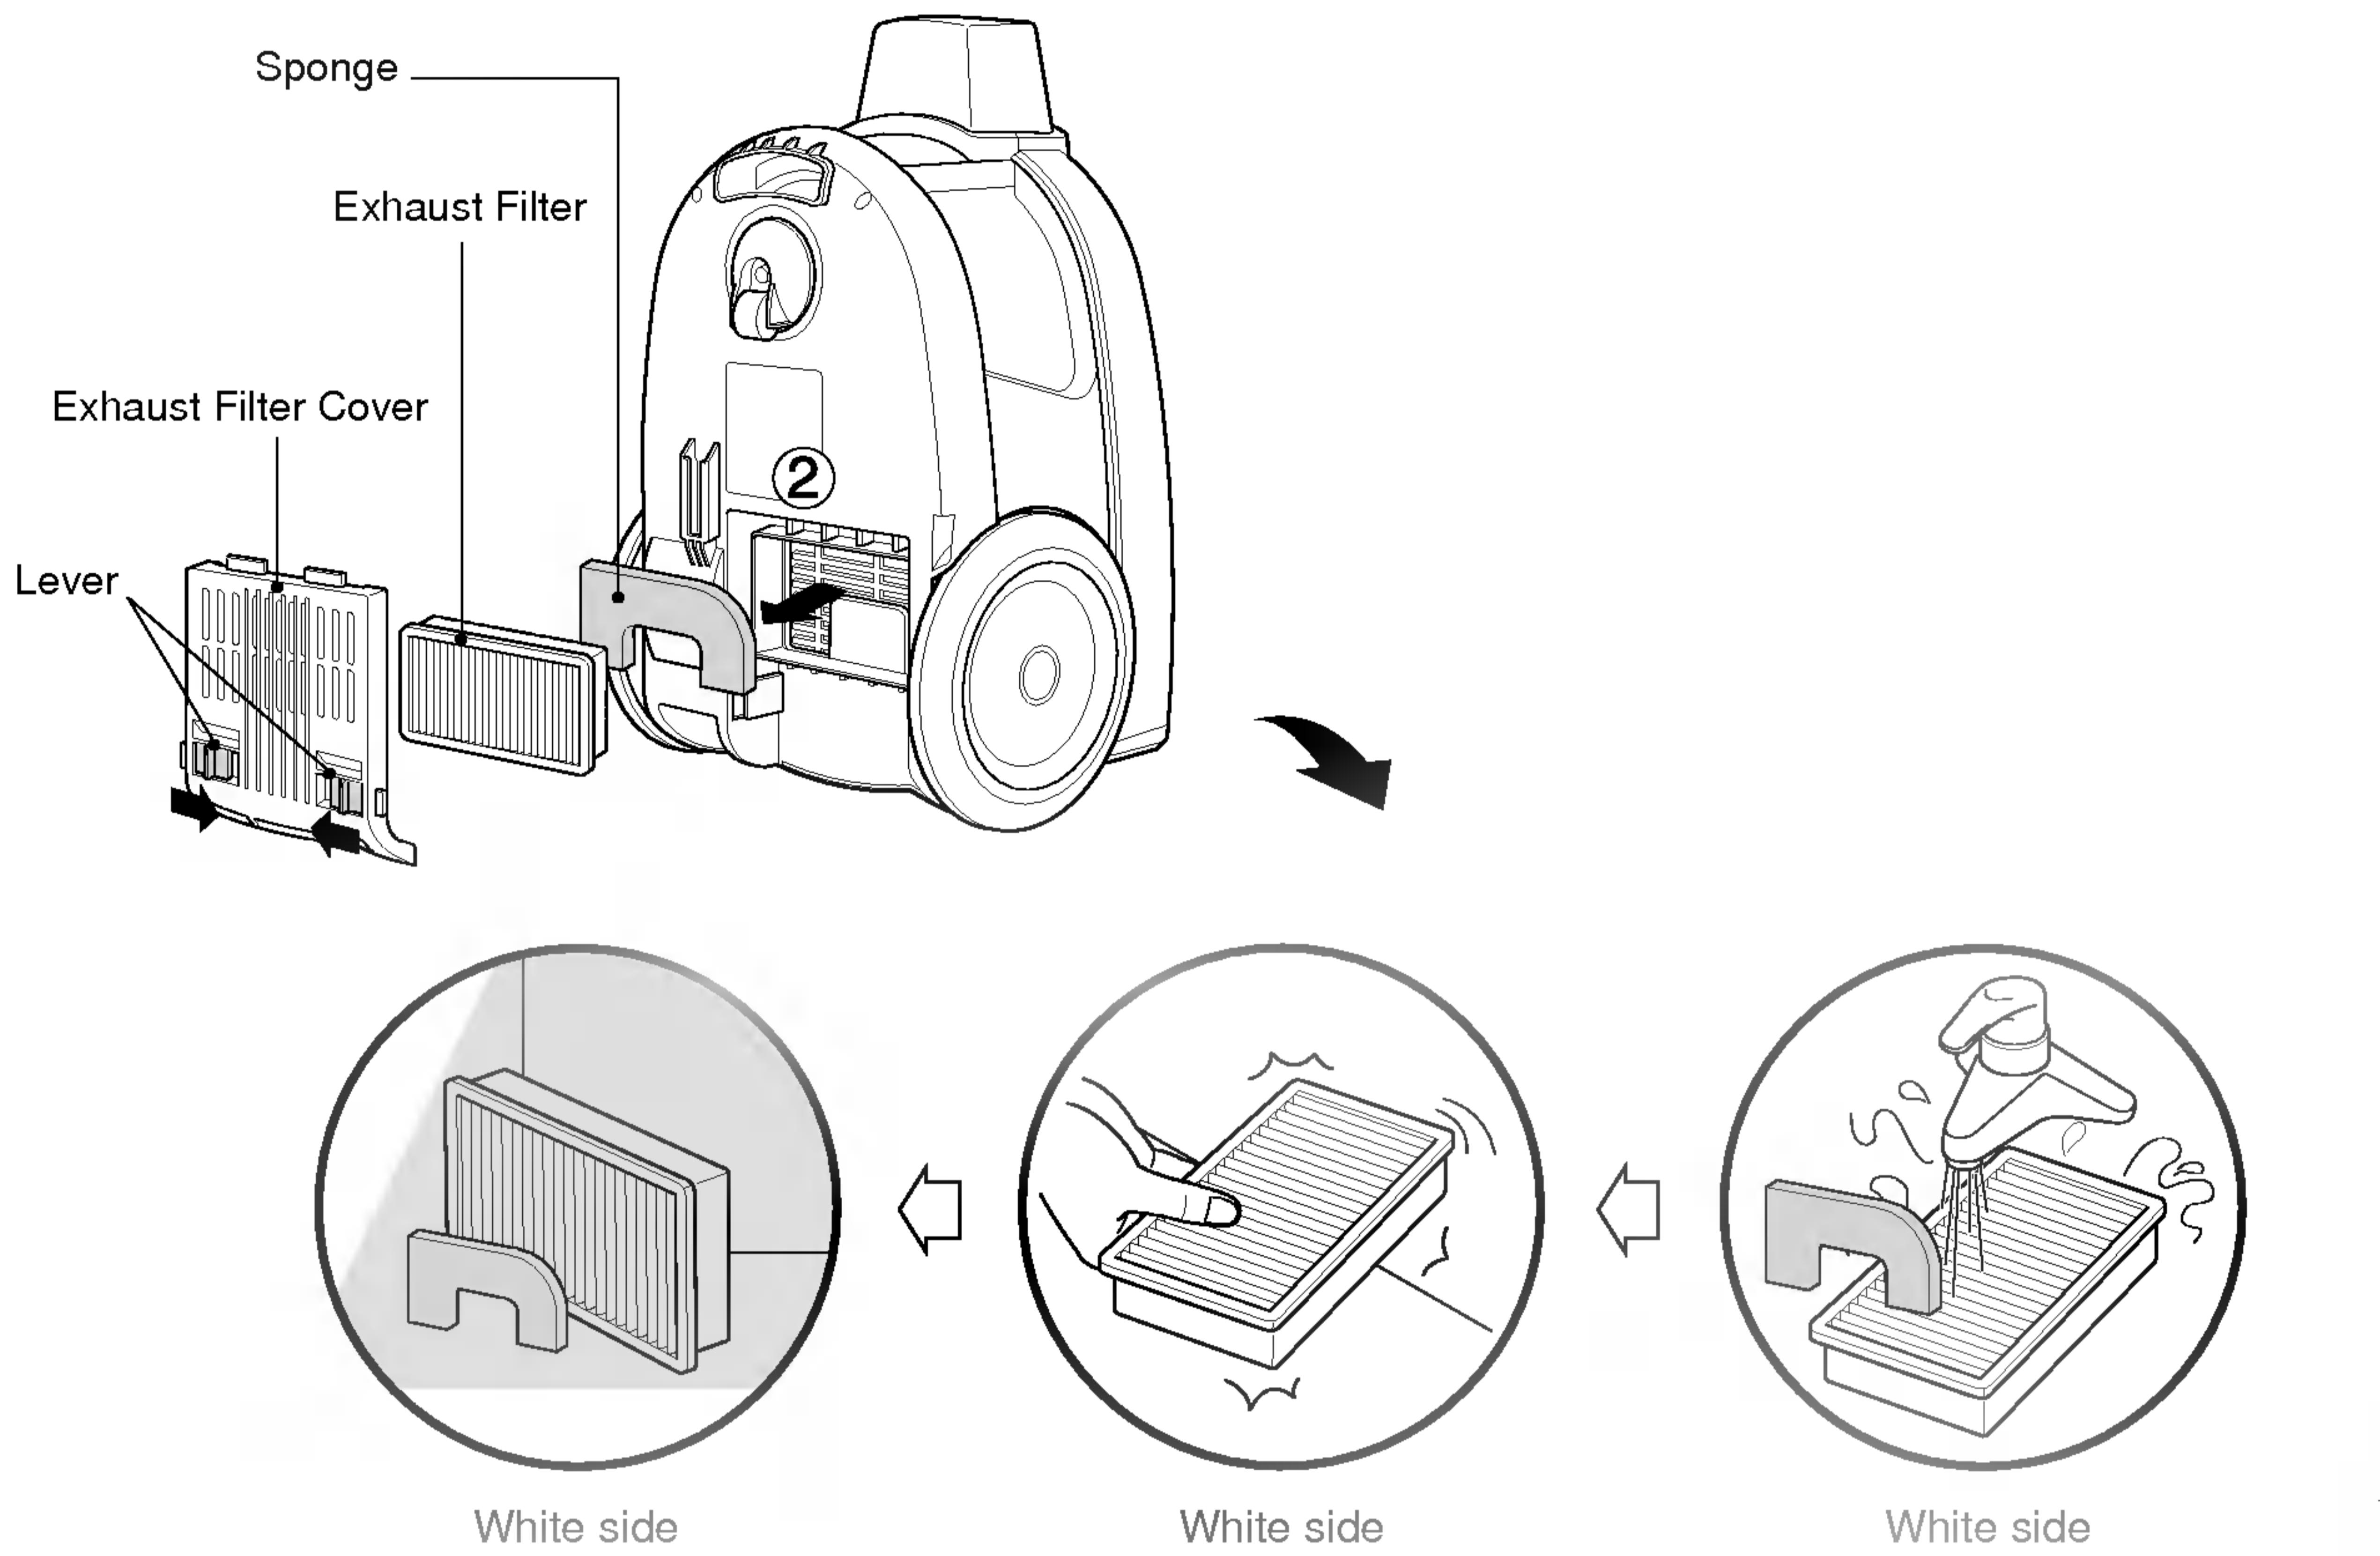


C K

- The exhaust filter is a washable reusable HEPA filter.
- To clean the exhaust filter, move the lever to unlock direction and then remove the exhaust filter cover from the base body.
- Separate the filter and the sponge.
- Wash the filter and sponge in flow water cleanly.
- When you wash the filter, make sure don't wash the green side.
- Remove moisture.
- Dry them fully in shade so that moisture is entirely removed.
- The exhaust filter should be cleaned at least once a year.

### **⚠ WARNING!**

The cycle of the cleaning

- Air filter, Dust tank cap
  - Every 6 months
  - When the indicator light comes on
- Exhaust filter
  - The exhaust filter should be cleaned at least once a year
- Dust Tank
  - When dusts are full by the position indicated as "MAX" in the dust tank.

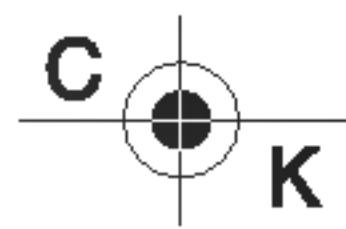

## What to do if your vacuum cleaner does not work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

## What to do when suction performance decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic pipe, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust tank is not full. Empty if necessary.
- Check that the exhaust filter is not blocked. Clean the exhaust filter, if necessary.


**Thermal protector:** This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, turn off the switch and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minutes period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, contact a qualified electrician.



### WARNING!

Should it become necessary to replace the moulded plug then the detective plug should be replaced by a qualified electrician.

## Note

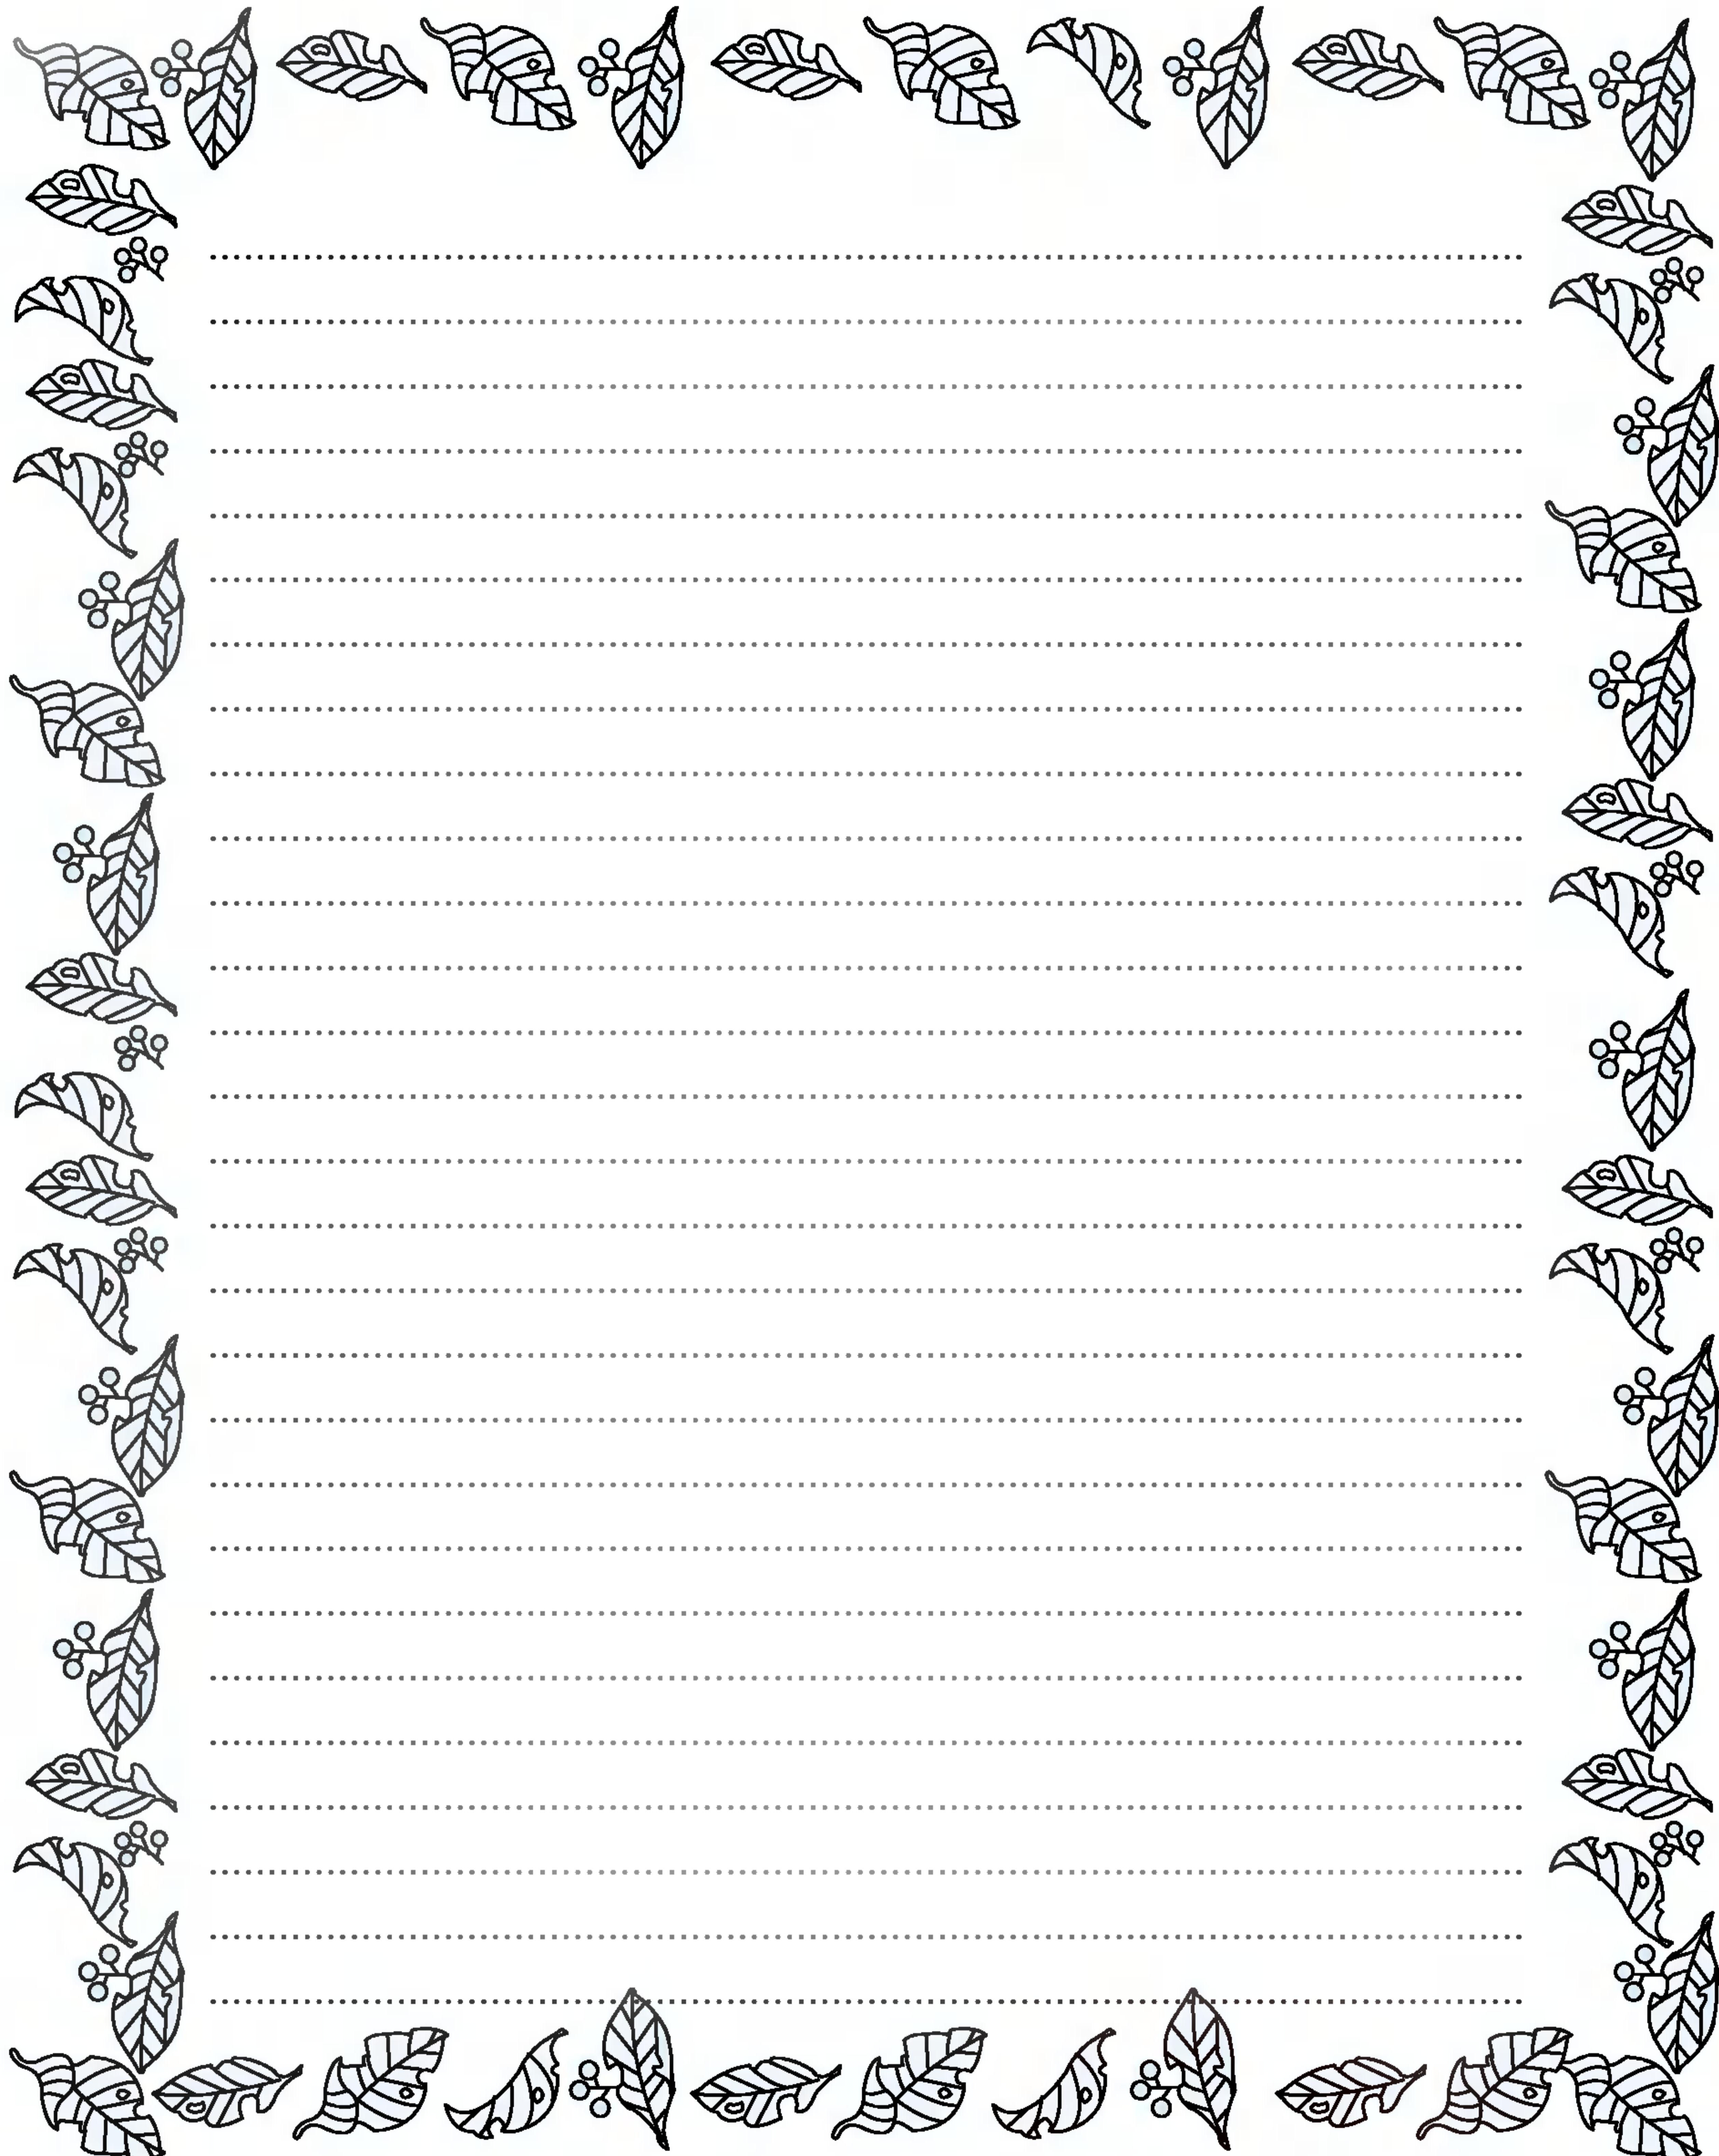

**Note**

C  
K

⑯

P/No 3828Fi3874G

C  
K



**LG Electronics Inc.**

P/No.: 3828Fi3874G

P/No 3828Fi3874G