

# Table of Contents



.....

Safety Precautions

.....

Accessories

.....

Before connecting to the PC

.....

To arrange cables in order

.....

Name and Function of the Parts

.....

Connecting to External Devices

.....

When Connecting to your PC


.....

When Watching VCR/DVD

.....

When Watching TV

.....

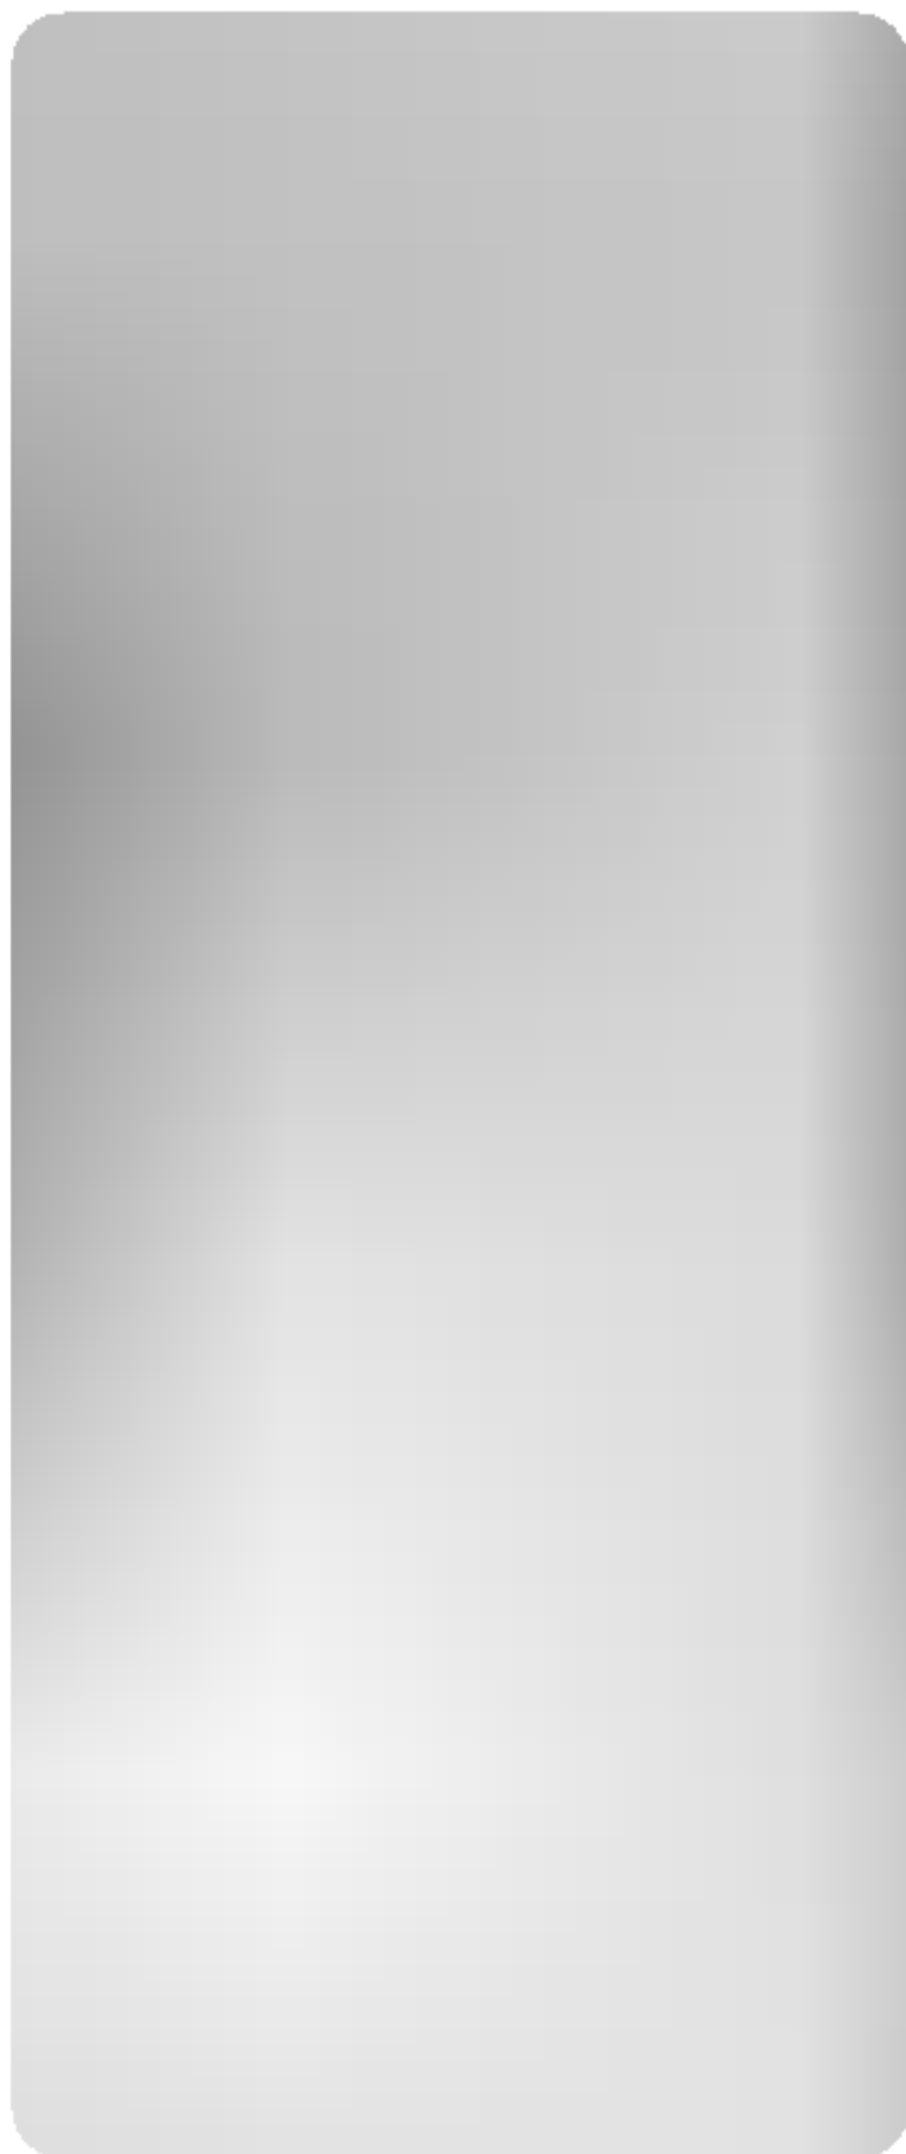

.....

Selecting and Adjusting the Screen

.....

Name of the Buttons in the screen Adjustment Unit

.....

OSD (On Screen Display) Menu

.....

OSD (On Screen Display) Screen Tracking Order

.....

Set/Select the channel when using the TV

.....

Adjusting the picture function

.....

Adjusting the sound function

.....

Adjusting the time function

.....

Selecting the setup function

.....

Adjusting the screen function (PC only)

.....





.....


Troubleshooting

.....


Specifications


.....

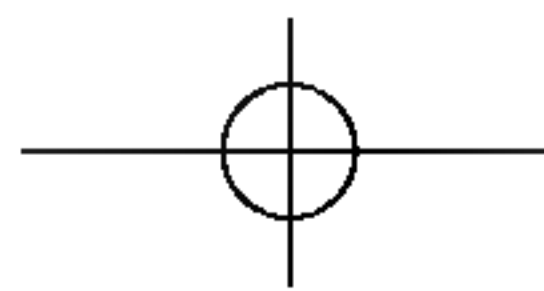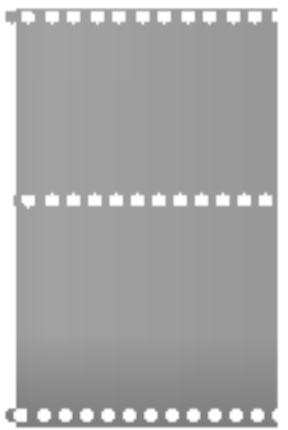

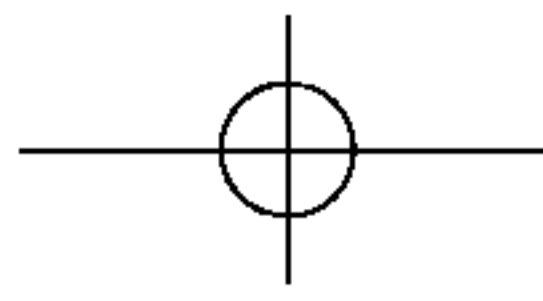

## Please read these safety precautions carefully before using the product.

 **Warning** If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death.

 **Caution** If you ignore the caution message, you may be slightly injured or the product may be damaged


### Precautions in installing the Product


#### **Warning**

- **Keep away from heat sources like electrical heaters.**
  - Electrical shock, fire, malfunction or deformation may occur.
- **Keep the packing anti-moisture material or vinyl packing out of the reach of children.**
  - Anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.
- **Do not put heavy objects on the product or sit upon it.**
  - If the product collapses or is dropped, you may be injured. Children must pay particular attention.
- **Do not leave the power or signal cable unattended on the pathway.**
  - The passerby can falter, which can cause electrical shock, fire, product breakdown or injury.
- **Install the product in a neat and dry place.**
  - Dust or moisture can cause electrical shock, fire or product damage.
- **If you can smell smoke or other odors or hear a strange sound unplug the power cord and contact the service center.**
  - If you continue to use without taking proper measures, electrical shock or fire can occur.
- **If you dropped the product or the case is broken, turn off the product and unplug the power cord.**
  - If you continue to use without taking proper measures, electrical shock or fire can occur. Contact the service center.
- **Do not drop metallic objects such as coins, hair pins, chopsticks or wire into the product, or inflammable objects such as paper and matches. Children must pay particular attention.**
  - Electrical shock, fire or injury can occur. If a foreign object is dropped into the product, unplug the power cord and contact the service center.

#### **Caution**

- **Make sure the product ventilation hole is not blocked. Install the product in a suitably wide place (more than 10cm from the wall)**
  - If you install the product too close to the wall, it may be deformed or fire can break out due to internal heat.
- **Do not block the ventilation hole of the product by a tablecloth or curtain.**
  - The product can be deformed or fire can break out due to overheating inside the product.
- **Install the product on a flat and stable place that has no risk of dropping the product.**
  - If the product is dropped, you may be injured or the product may be broken.
- **Install the product where no EMI occurs.**
- **Keep the product away from direct sunlight.**
  - The product can be damaged.

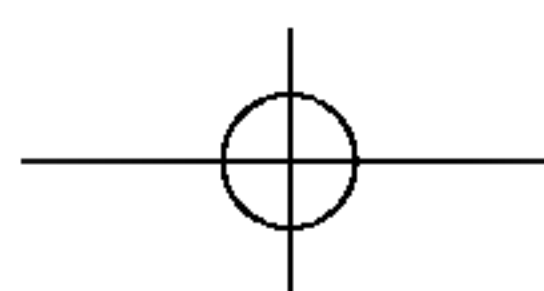

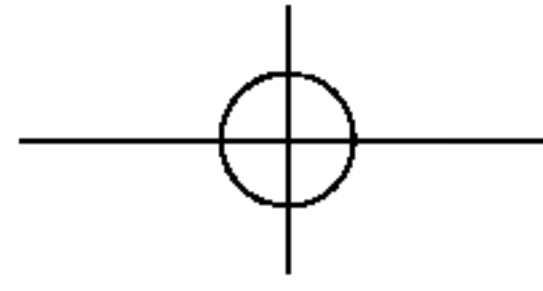

## ● Electrical Power Related Precautions

### ⚠ Warning

- **Make sure to connect the power cable to the grounded current.**
  - You may be electrocuted or injured.
- **Use the rated voltage only.**
  - The product can be damaged, or you may be electrocuted.
- **During a thunder or lightning storm, unplug the power cable or signal cable.**
  - You may be electrocuted or a fire can break out.
- **Do not connect several extension cords, electrical appliances or electrical heaters to a single outlet. Use a power bar with a grounding terminal designed for exclusive use with the computer.**
  - A fire can break out due to overheating.
- **Do not touch the power plug with wet hands. Additionally, if the cord pin is wet or covered with dust, dry the power plug completely or wipe dust off.**
  - You may be electrocuted due to excess moisture.
- **If you don't intend to use the product for a long time, unplug the power cable from the product.**
  - Covering dust can cause a fire, or insulation deterioration can cause electric leakage, electric shock or fire.
- **Fix the power cable completely.**
  - If the power cable is not fixed completely, a fire can break out.
- **Hold the plug when pulling out the power cable. Do not bend the power cord with excessive force or put heavy objects on the power cord.**
  - The power line can be damaged, which may cause electric shock or fire.
- **Do not insert a conductor (like a metal chopstick) into one end of the power cable while the other end is connected to the input terminal on the wall. Additionally, do not touch the power cable right after plugging into the wall input terminal.**
  - You may be electrocuted.
- **The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.**


### ⚠ Caution


- **Do not unplug the power cord while the product is in use.**
  - Electrical shock can damage the product.

## ● Precautions in Moving the Product

### ⚠ Warning

- **Make sure to turn off the product.**
  - You may be electrocuted or the product can be damaged.
- **Make sure to remove all cables before moving the product.**
  - You may be electrocuted or the product can be damaged.

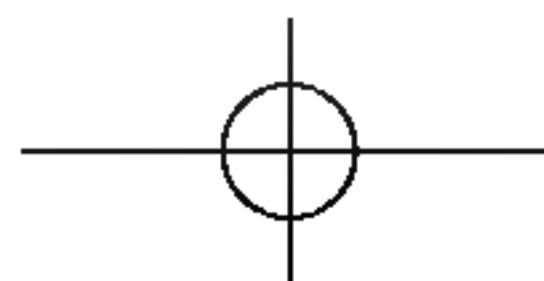

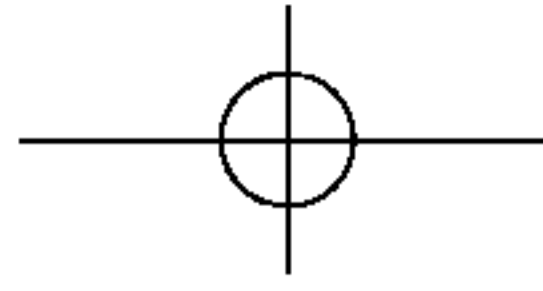

## Caution

- **Do not shock the product when moving it.**
  - You may be electrocuted or the product can be damaged
- **Do not dispose the product-packing box. Use it when you move.**
- **Make the panel face forward and hold it with both hands to move.**
  - If you drop the product, the damaged product can cause electric shock or fire. Contact with the service center for repair.

## Precautions in Using the Product

### Warning


- **Do not disassemble, repair or modify the product at your own discretion.**
  - Fire or electric shock accident can occur.
  - Contact the service center for check, calibration or repair.
- **Do not spray water on the product or scrub with an inflammable substance (thinner or benzene). Fire or electric shock accident can occur**
- **Keep the product away from water.**
  - Fire or electric shock accident can occur.

### Caution

- **Do not put or store inflammable substances near the product.**
  - There is a danger of explosion or fire due to careless handling of the inflammable substances.
- **When cleaning the brown tube surface, unplug the power cord and scrub with soft cloth to prevent scratching. Do not clean with a wet cloth.**
  - The water can sink into the product, which can cause electric shock or serious malfunction.
- **Take a rest from time to time to protect your vision.**
- **Keep the product clean at all times.**
- **Take a comfortable and natural position when working with a product to relax the muscles.**
- **Take a regular break when working with a product for a long time.**
- **Do not press strongly upon the panel with a hand or sharp object such as nail, pencil or pen, or make a scratch on it.**
- **Keep the proper distance from the product.**
  - Your vision may be impaired if you look at the product too closely.
- **Set the appropriate resolution and clock by referring to the User's Guide.**
  - Your vision can be impaired.
- **Use authorized detergent only when cleaning the product. (Do not use benzene, thinner or alcohol.)**
  - Product can be deformed.

## On Disposal


- **The fluorescent lamp used in this product contains a small amount of mercury.**
- **Do not dispose of this product with general household waste.**  
Disposal of this product must be carried out in accordance to the regulations of your local authority.

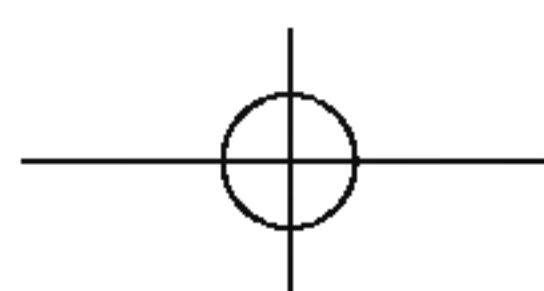


# Accessories

Please check the accessories in the product package.

\* The product and the accessories can be different from the figures shown here.

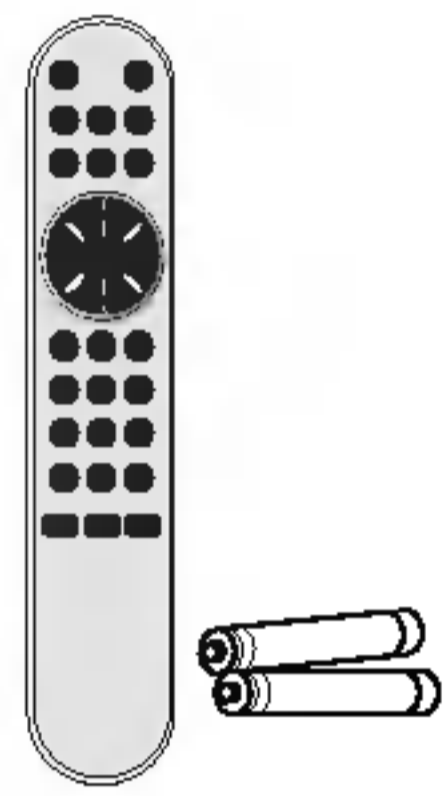


Remote Control/Batteries

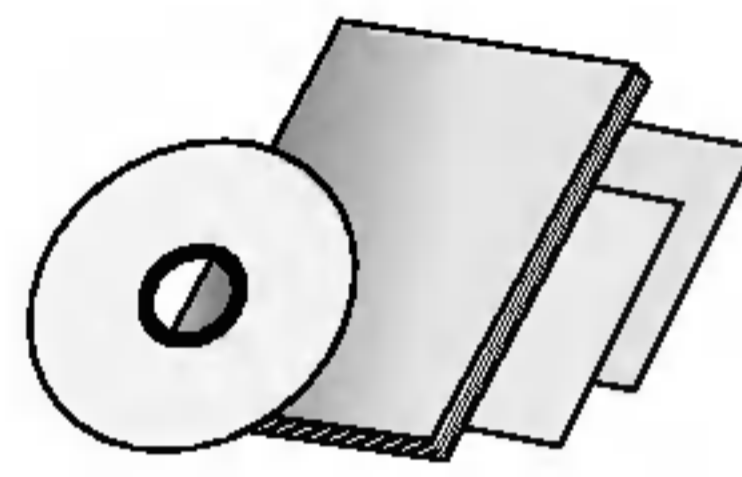


User's Guide/  
Driver CD/Cards




D-Sub Signal Cable

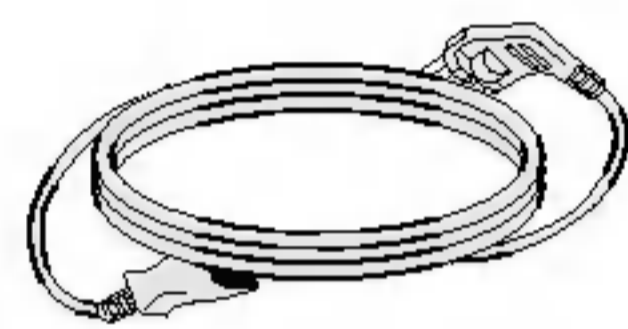

Power Cord

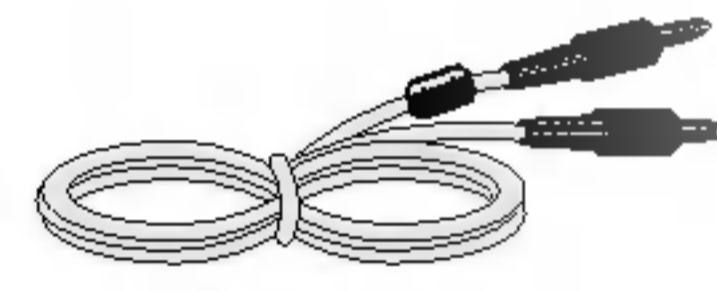


Audio Cable (PC)

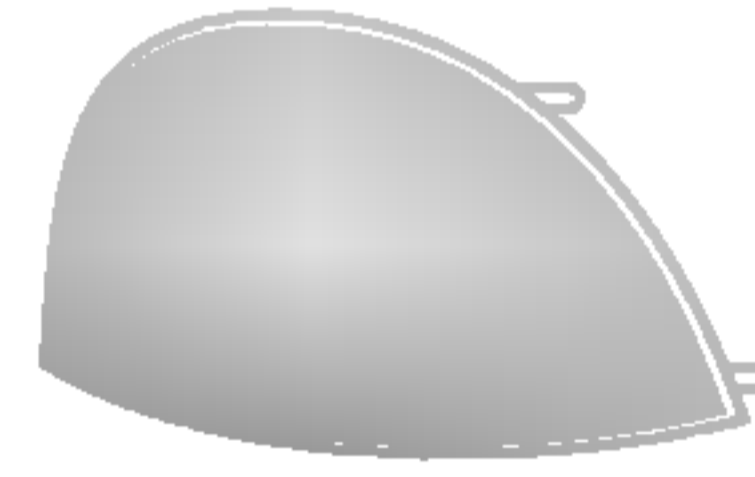


Back Cap

## Inserting batteries into remote control.

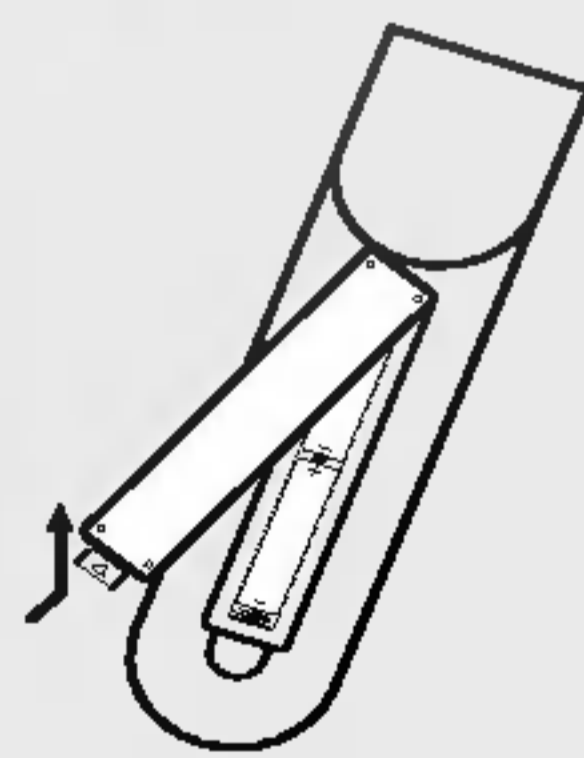


1. Take out the battery cap.
2. Insert the batteries with correct polarity (+/-).
3. Close the battery cap.
  - You can use a remote control 7 meter distance and 30 degree (left/right) within the receiving unit scope.
  - Dispose of used batteries in the recycle bin to prevent environmental pollution.

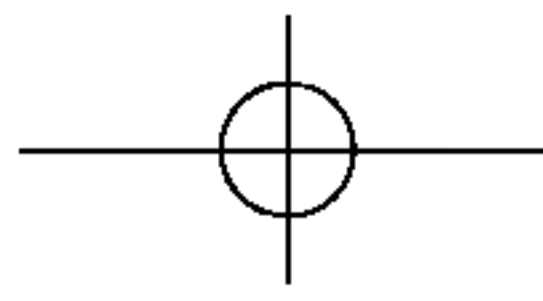


- Before setting up the product, ensure that the power to the product, the computer system, and other attached devices is turned off.

## Unfolding the stand base


- 1 Place the product with its front facing downward on soft cloth.


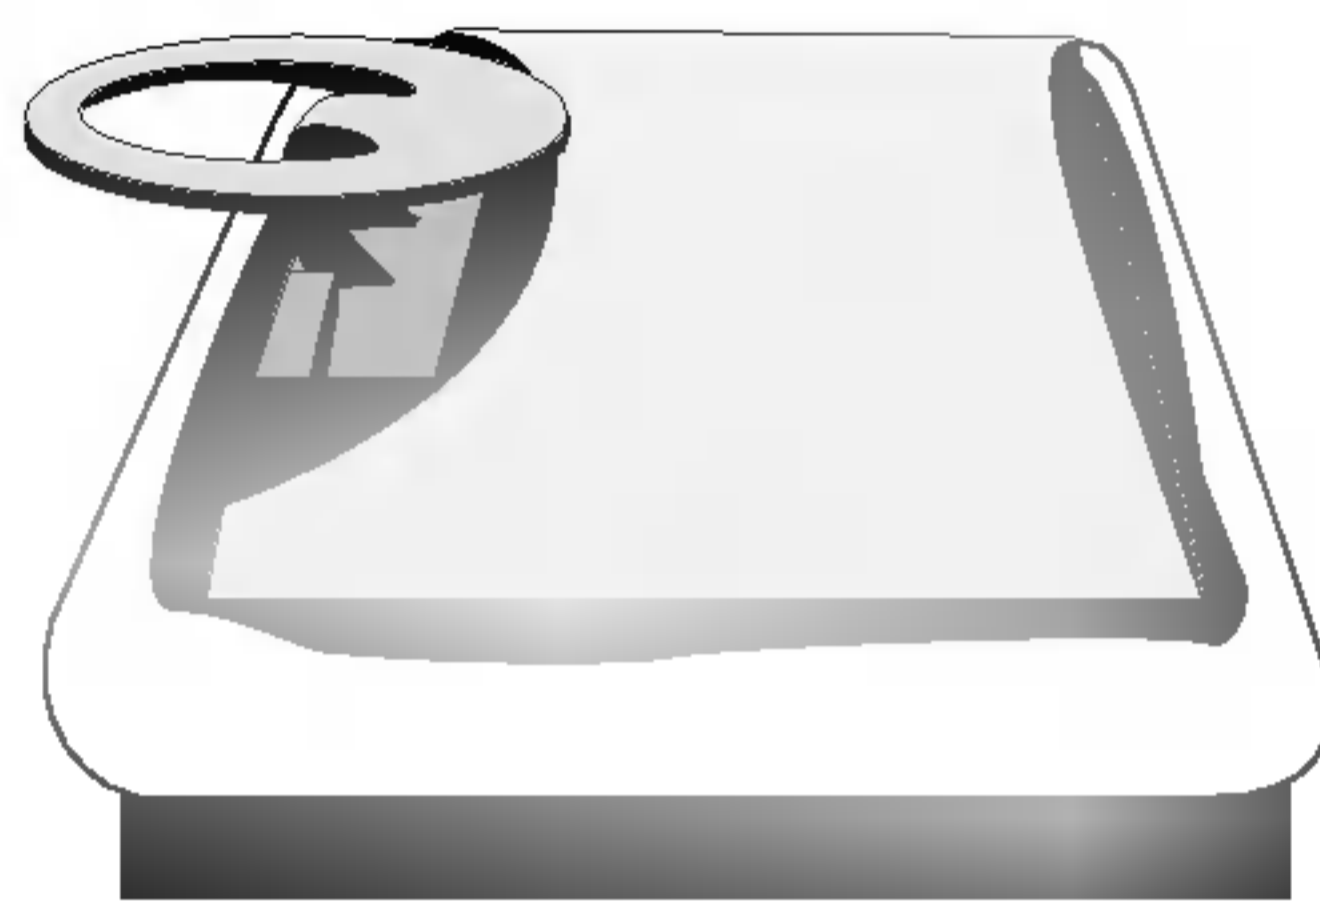


- 2 Hold down the release button inside the stand and strongly pull out the stand with your two hands.

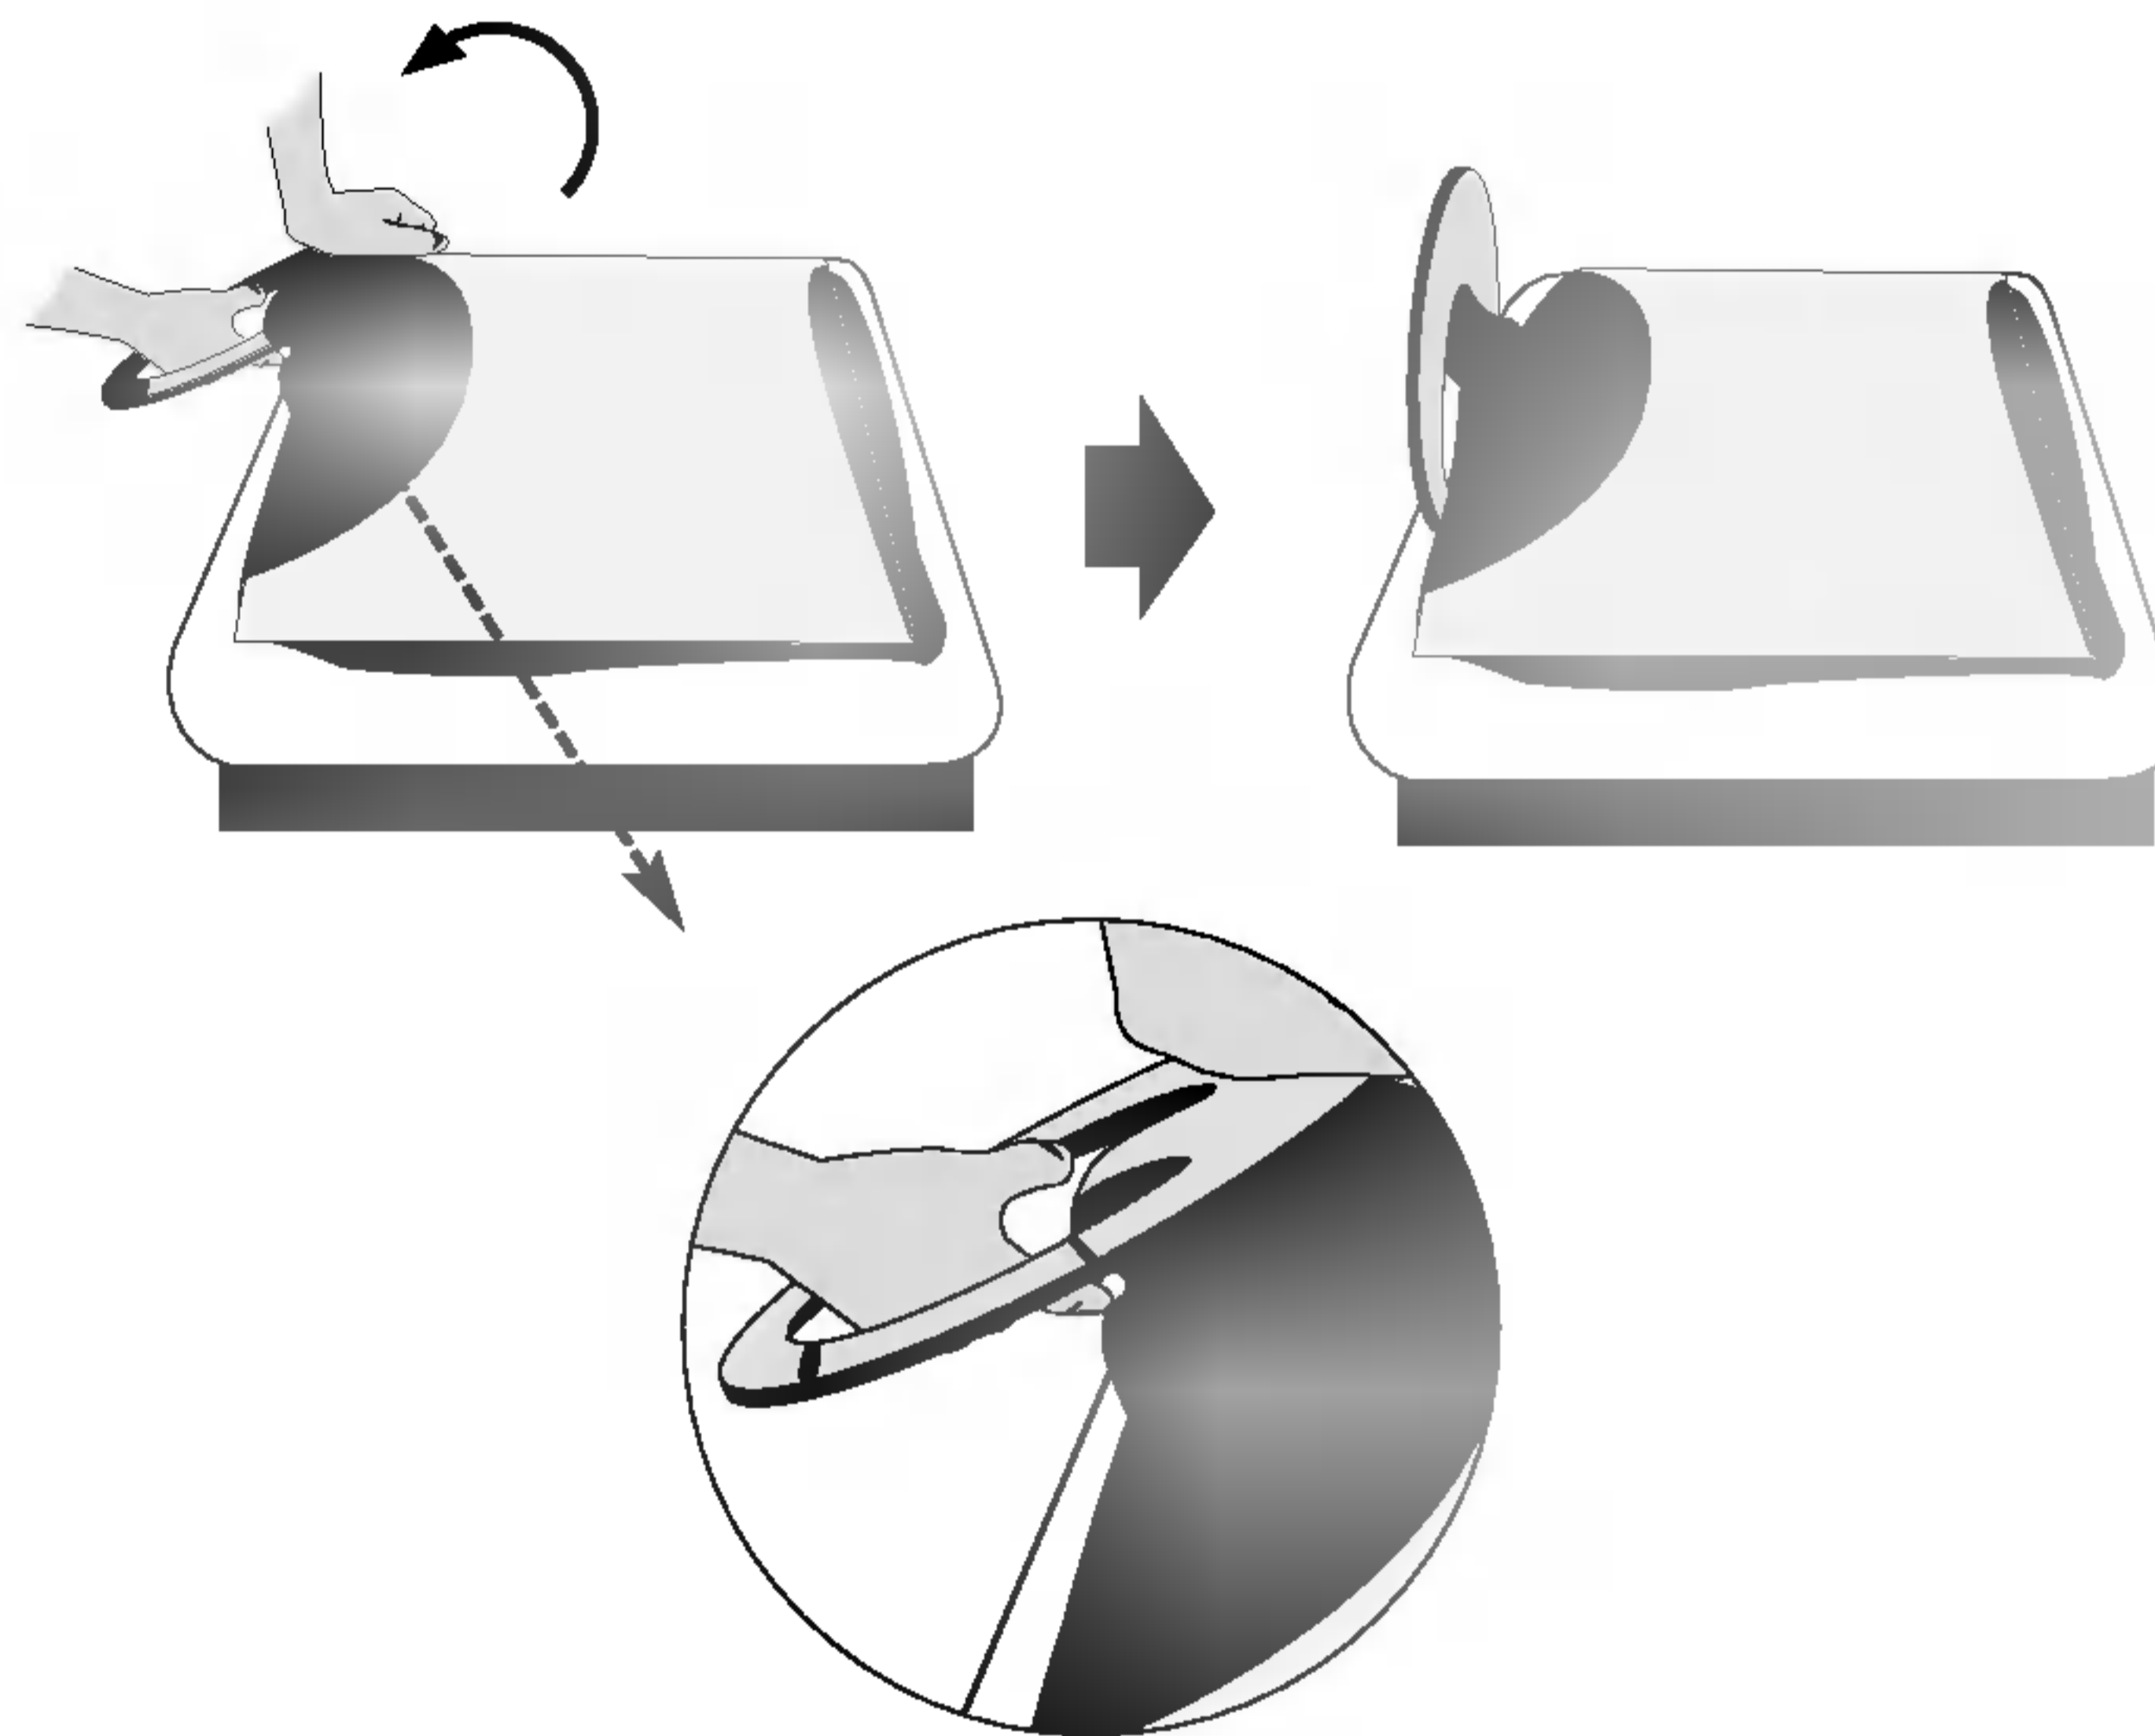


The stand won't move if you don't press release button.


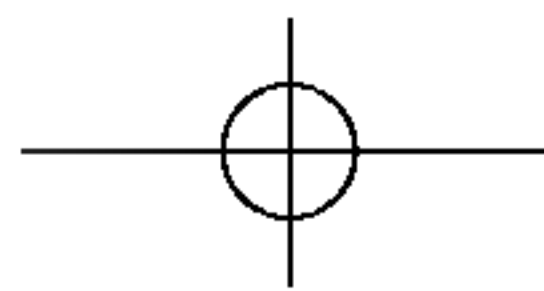


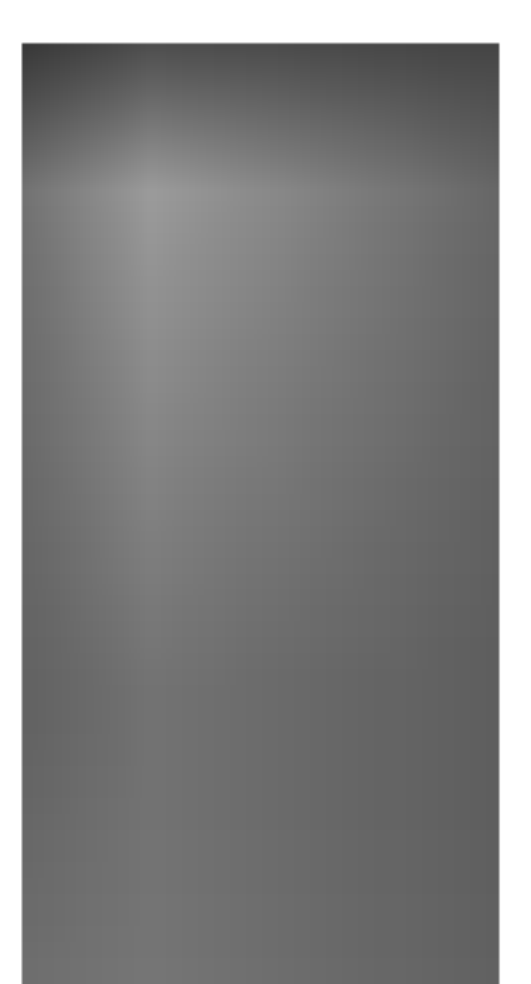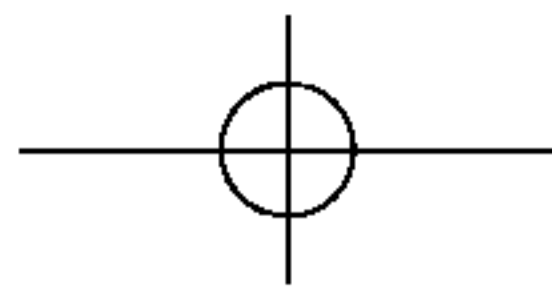


- 1** Connect the signal cable, power cord and the audio cable to use in order to arrange in the cable holder as shown in the following figure. (To connect the cables, refer to next pages.)


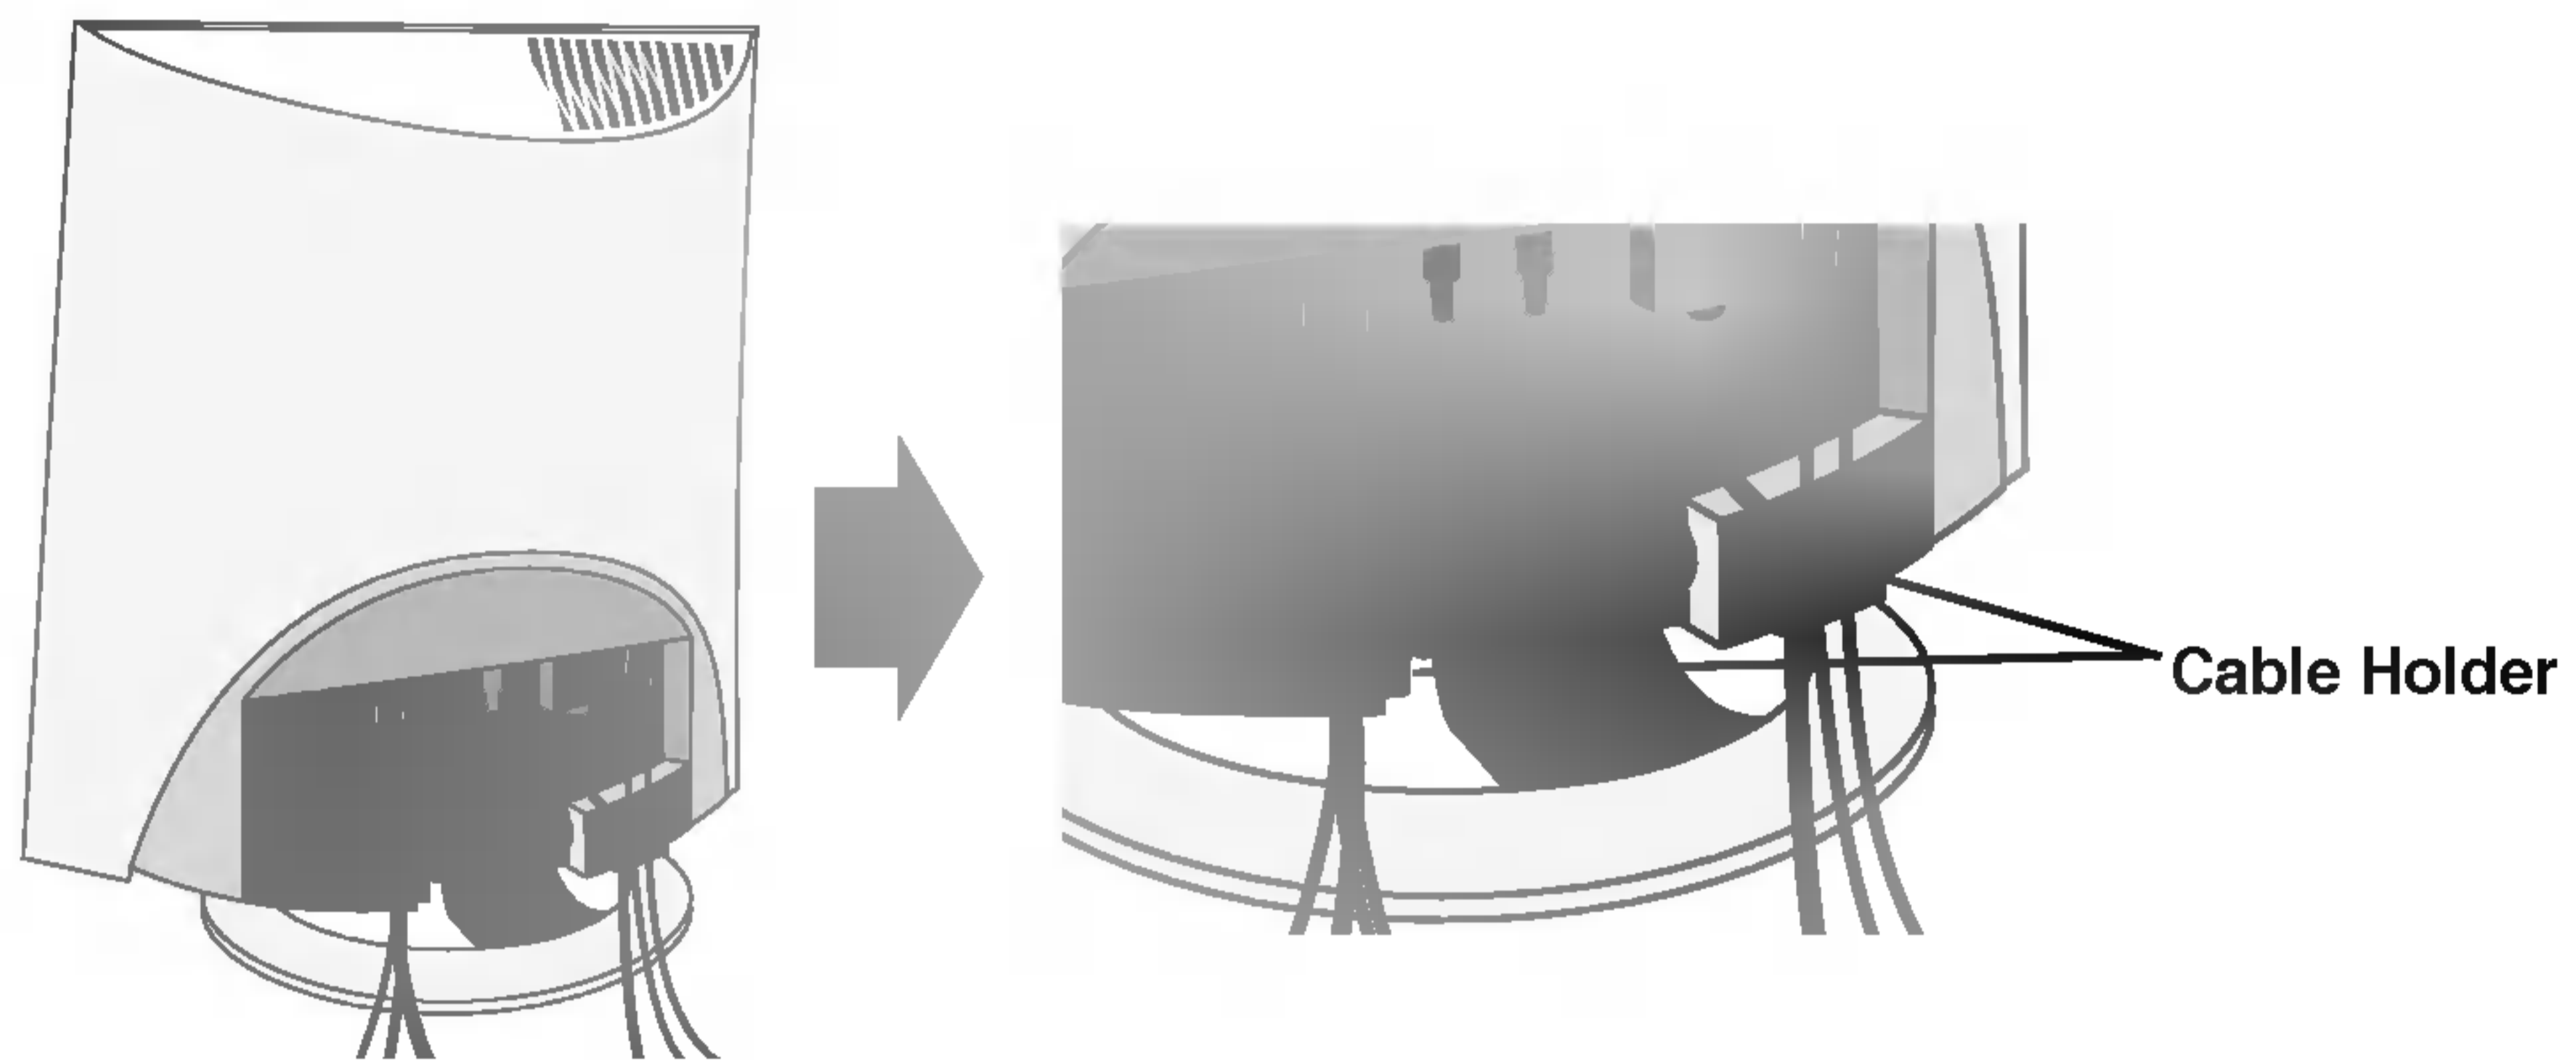




- 2** Push the back cap according to the steps shown in the following figure.

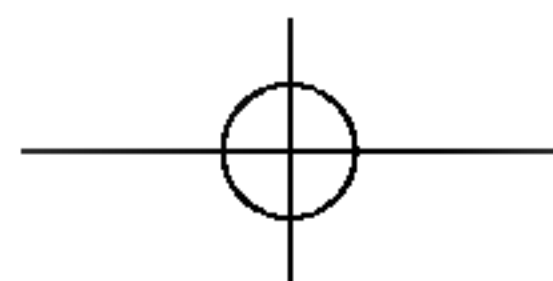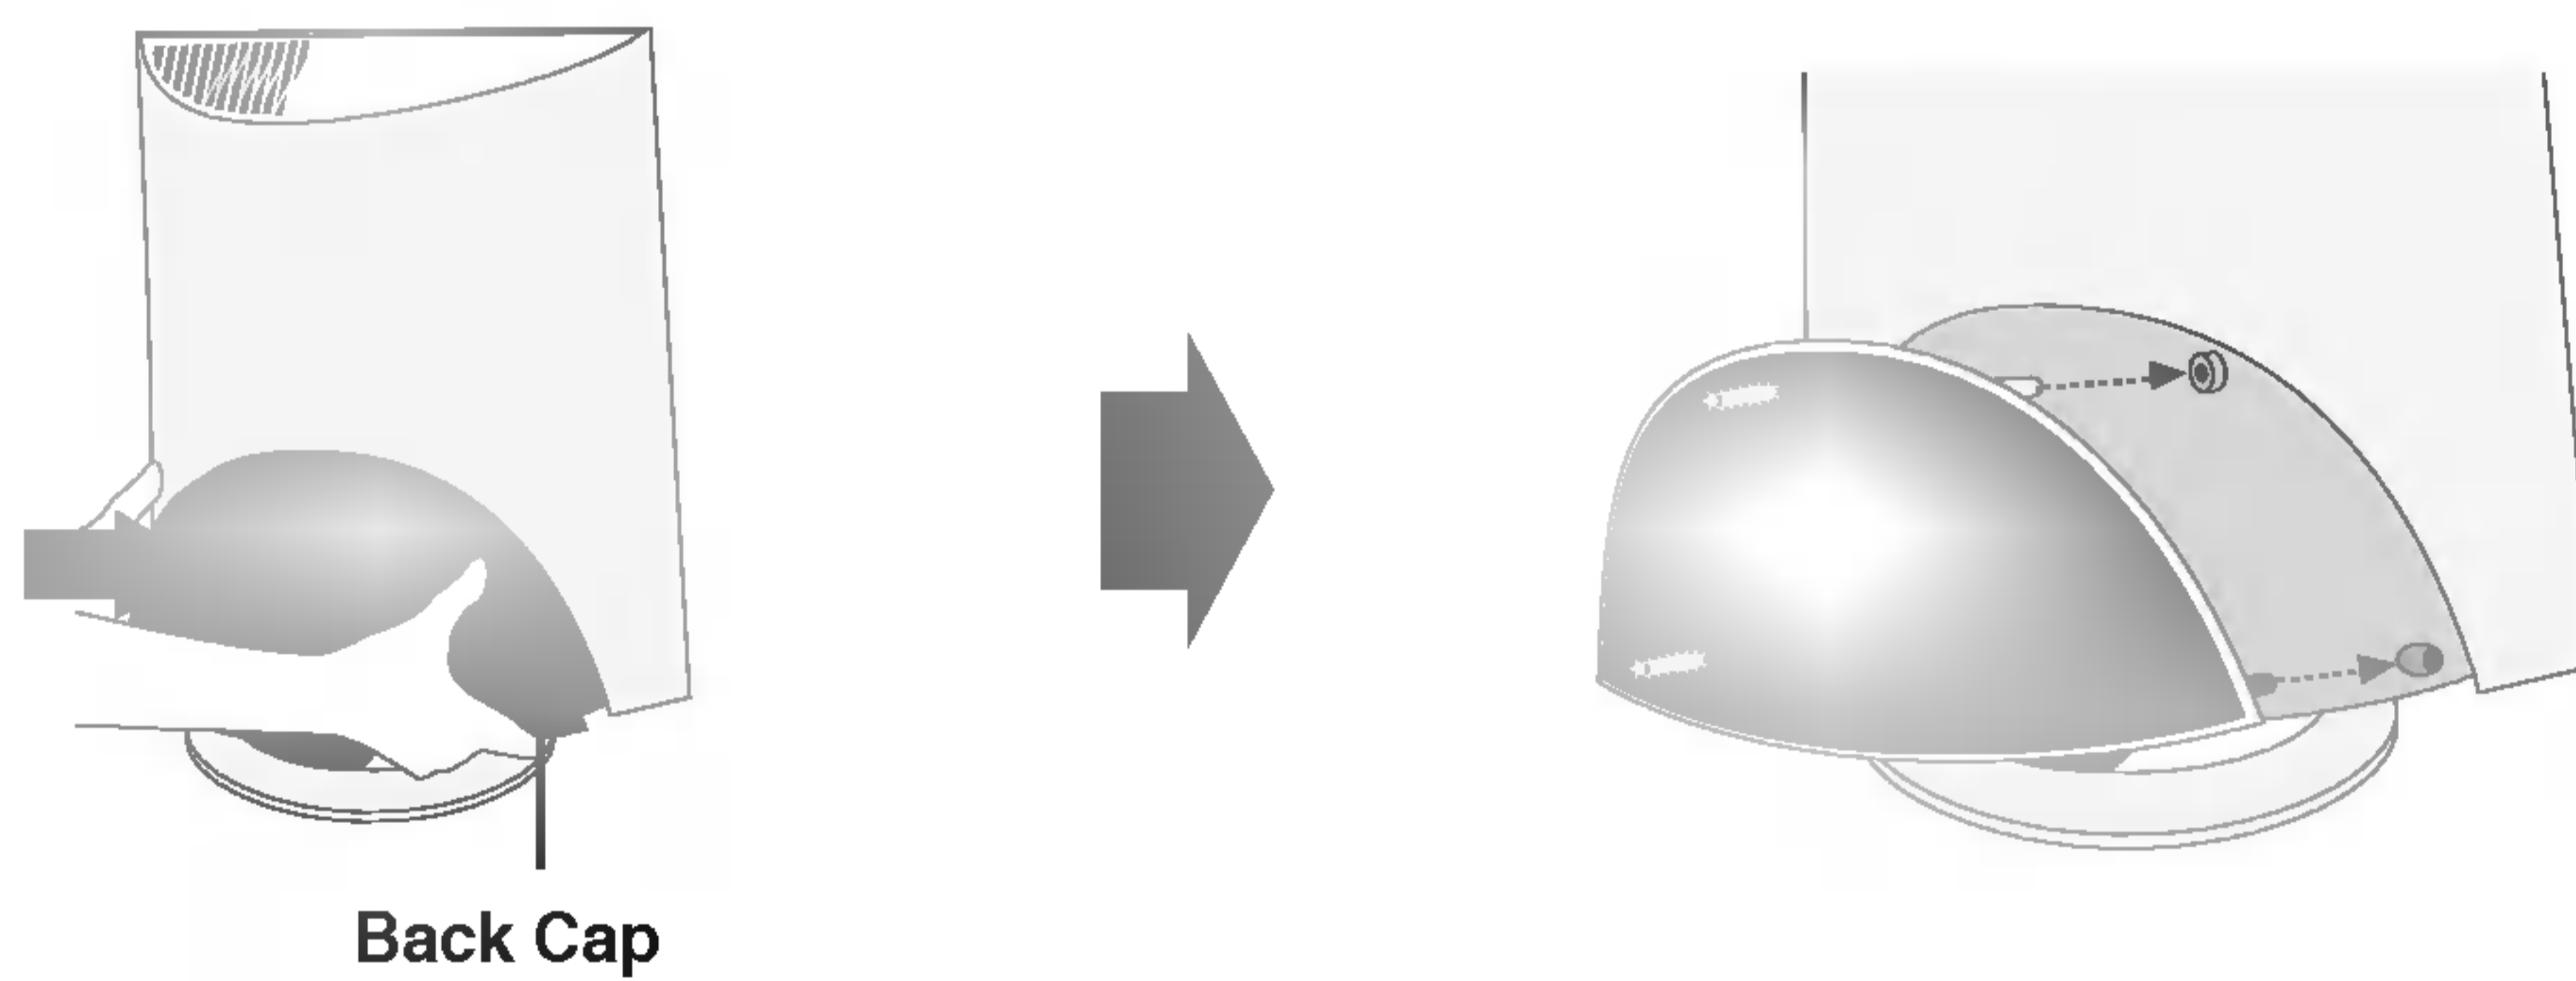

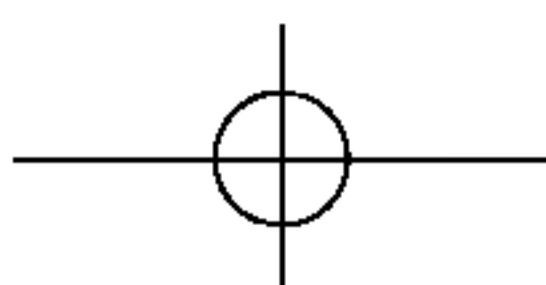

## ● Name of the Remote Control Buttons

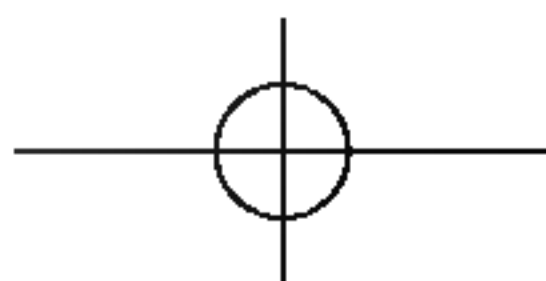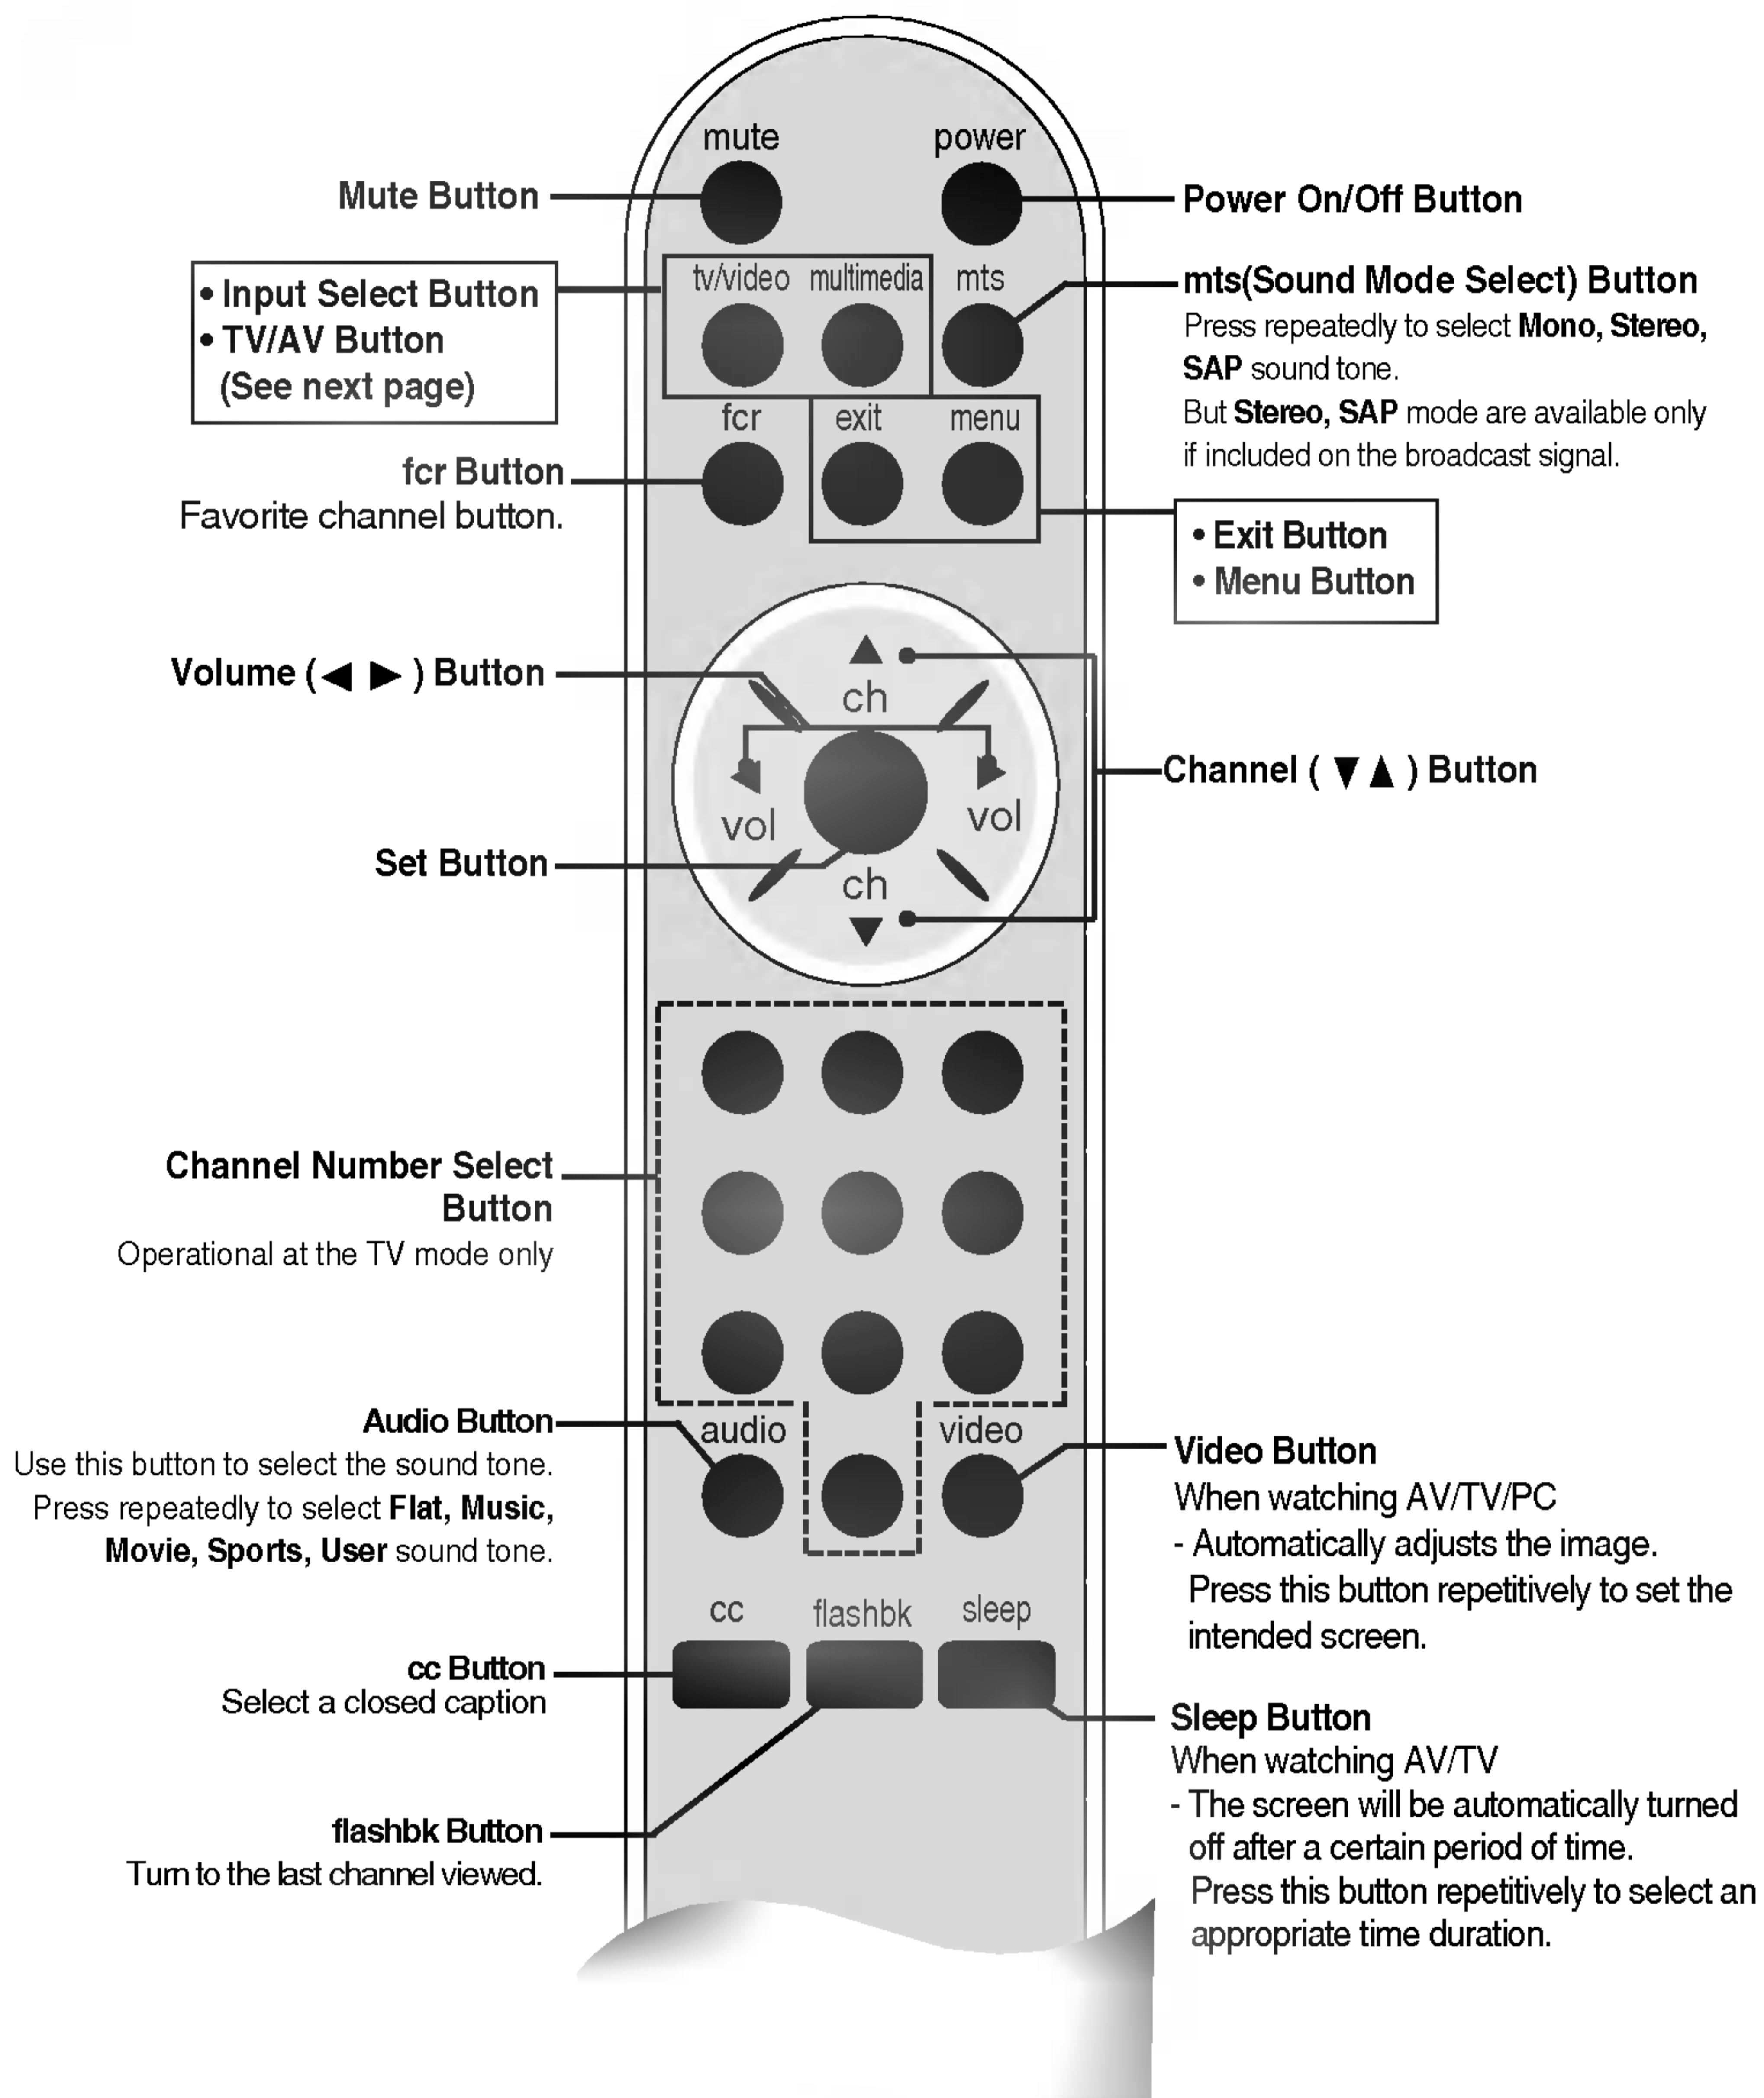

 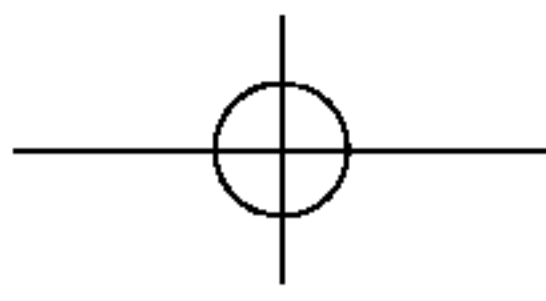








• TV/AV Button


The signal type will be changed with the following order. Set the signal type you want.

TV → Video → S-Video → PC


• Input Select Button

If you press the button once, the following Input Signal Window will appear. Select the signal type you want using the ▼▲ button.

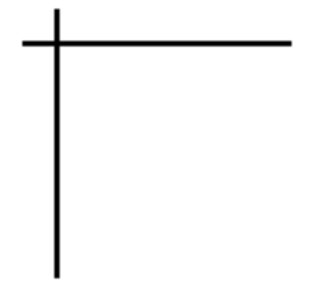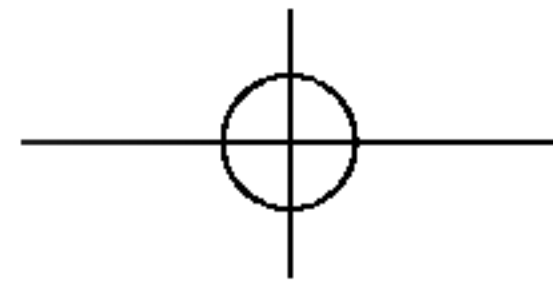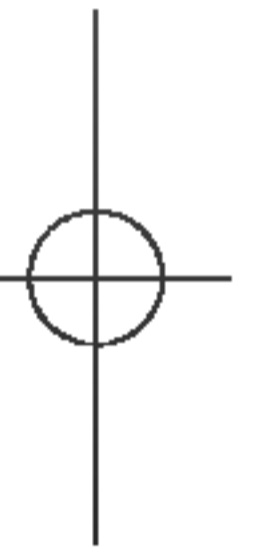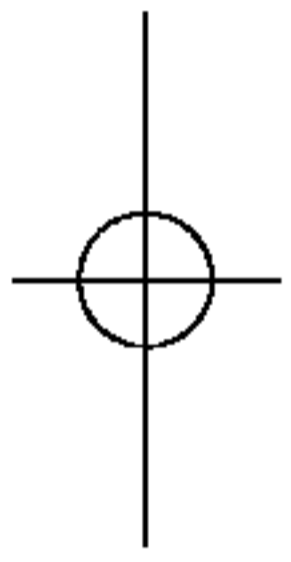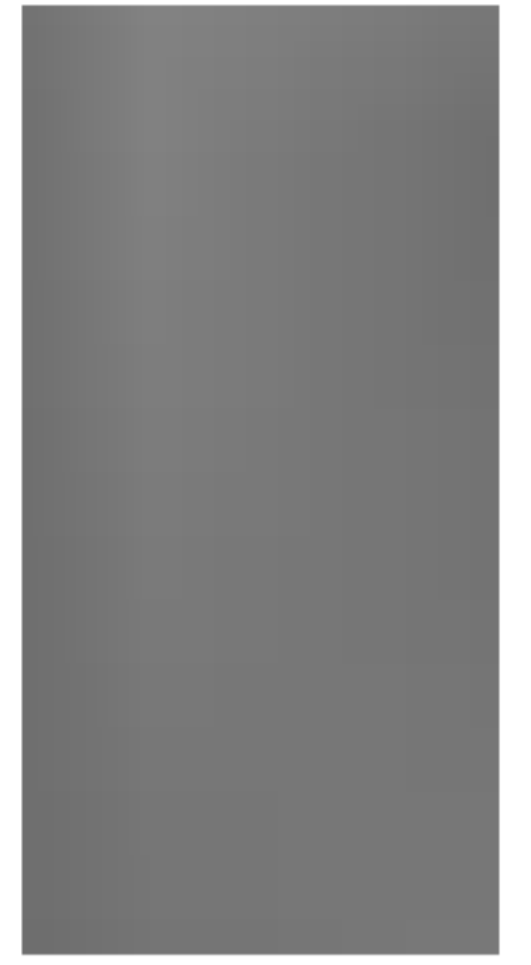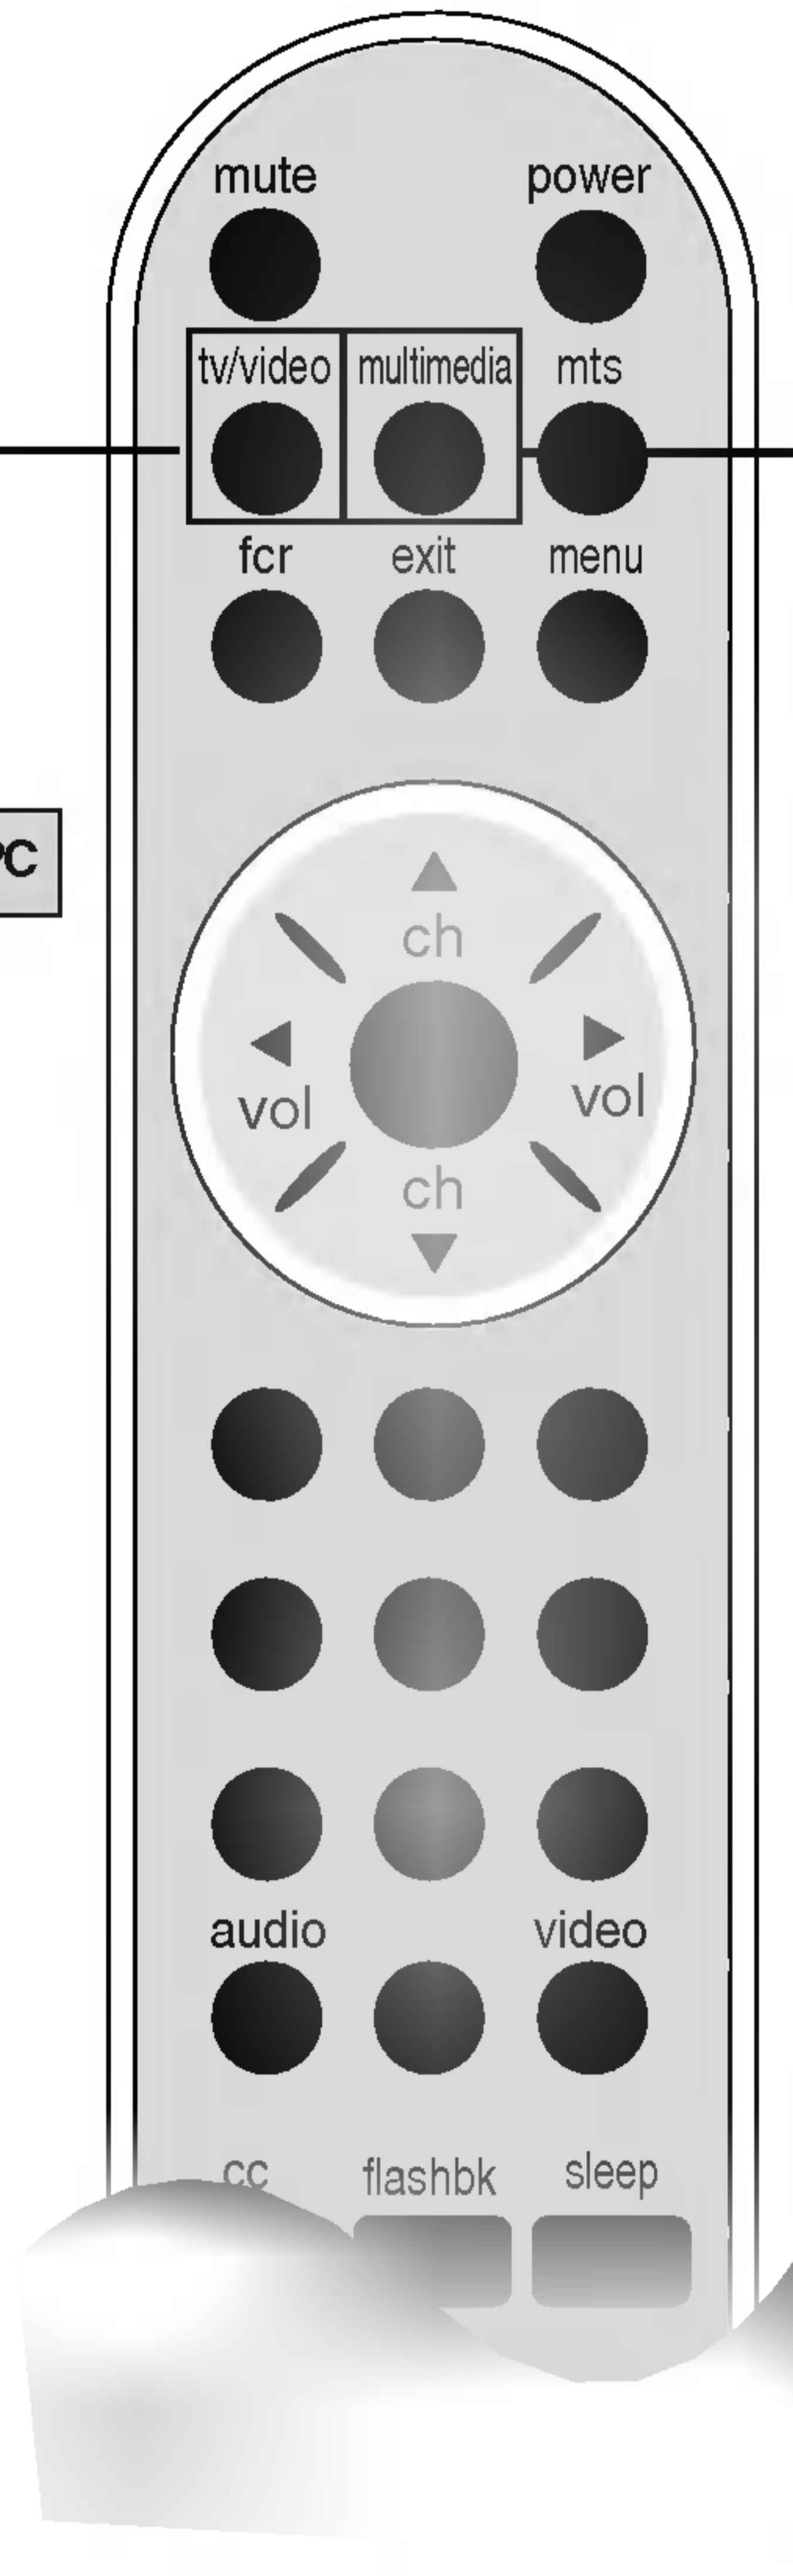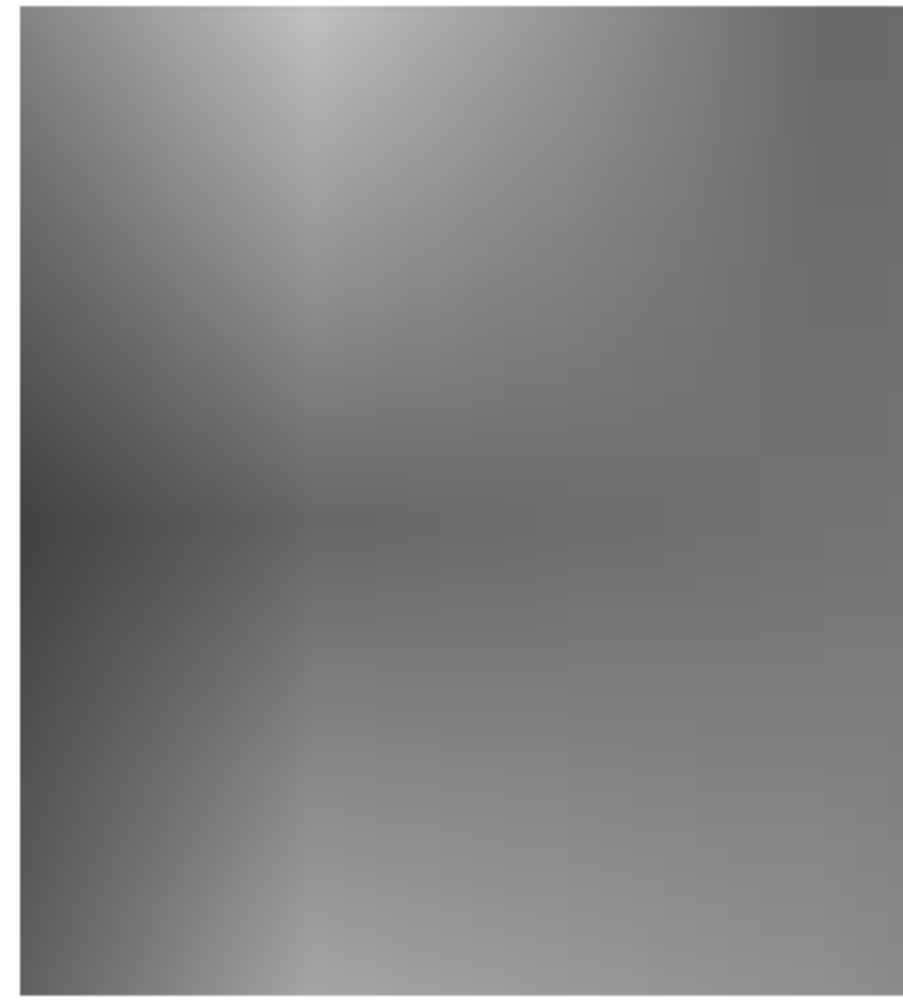

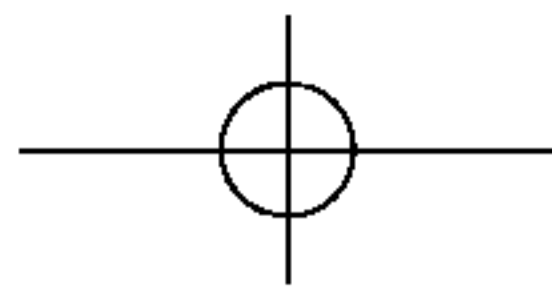

## Rear View

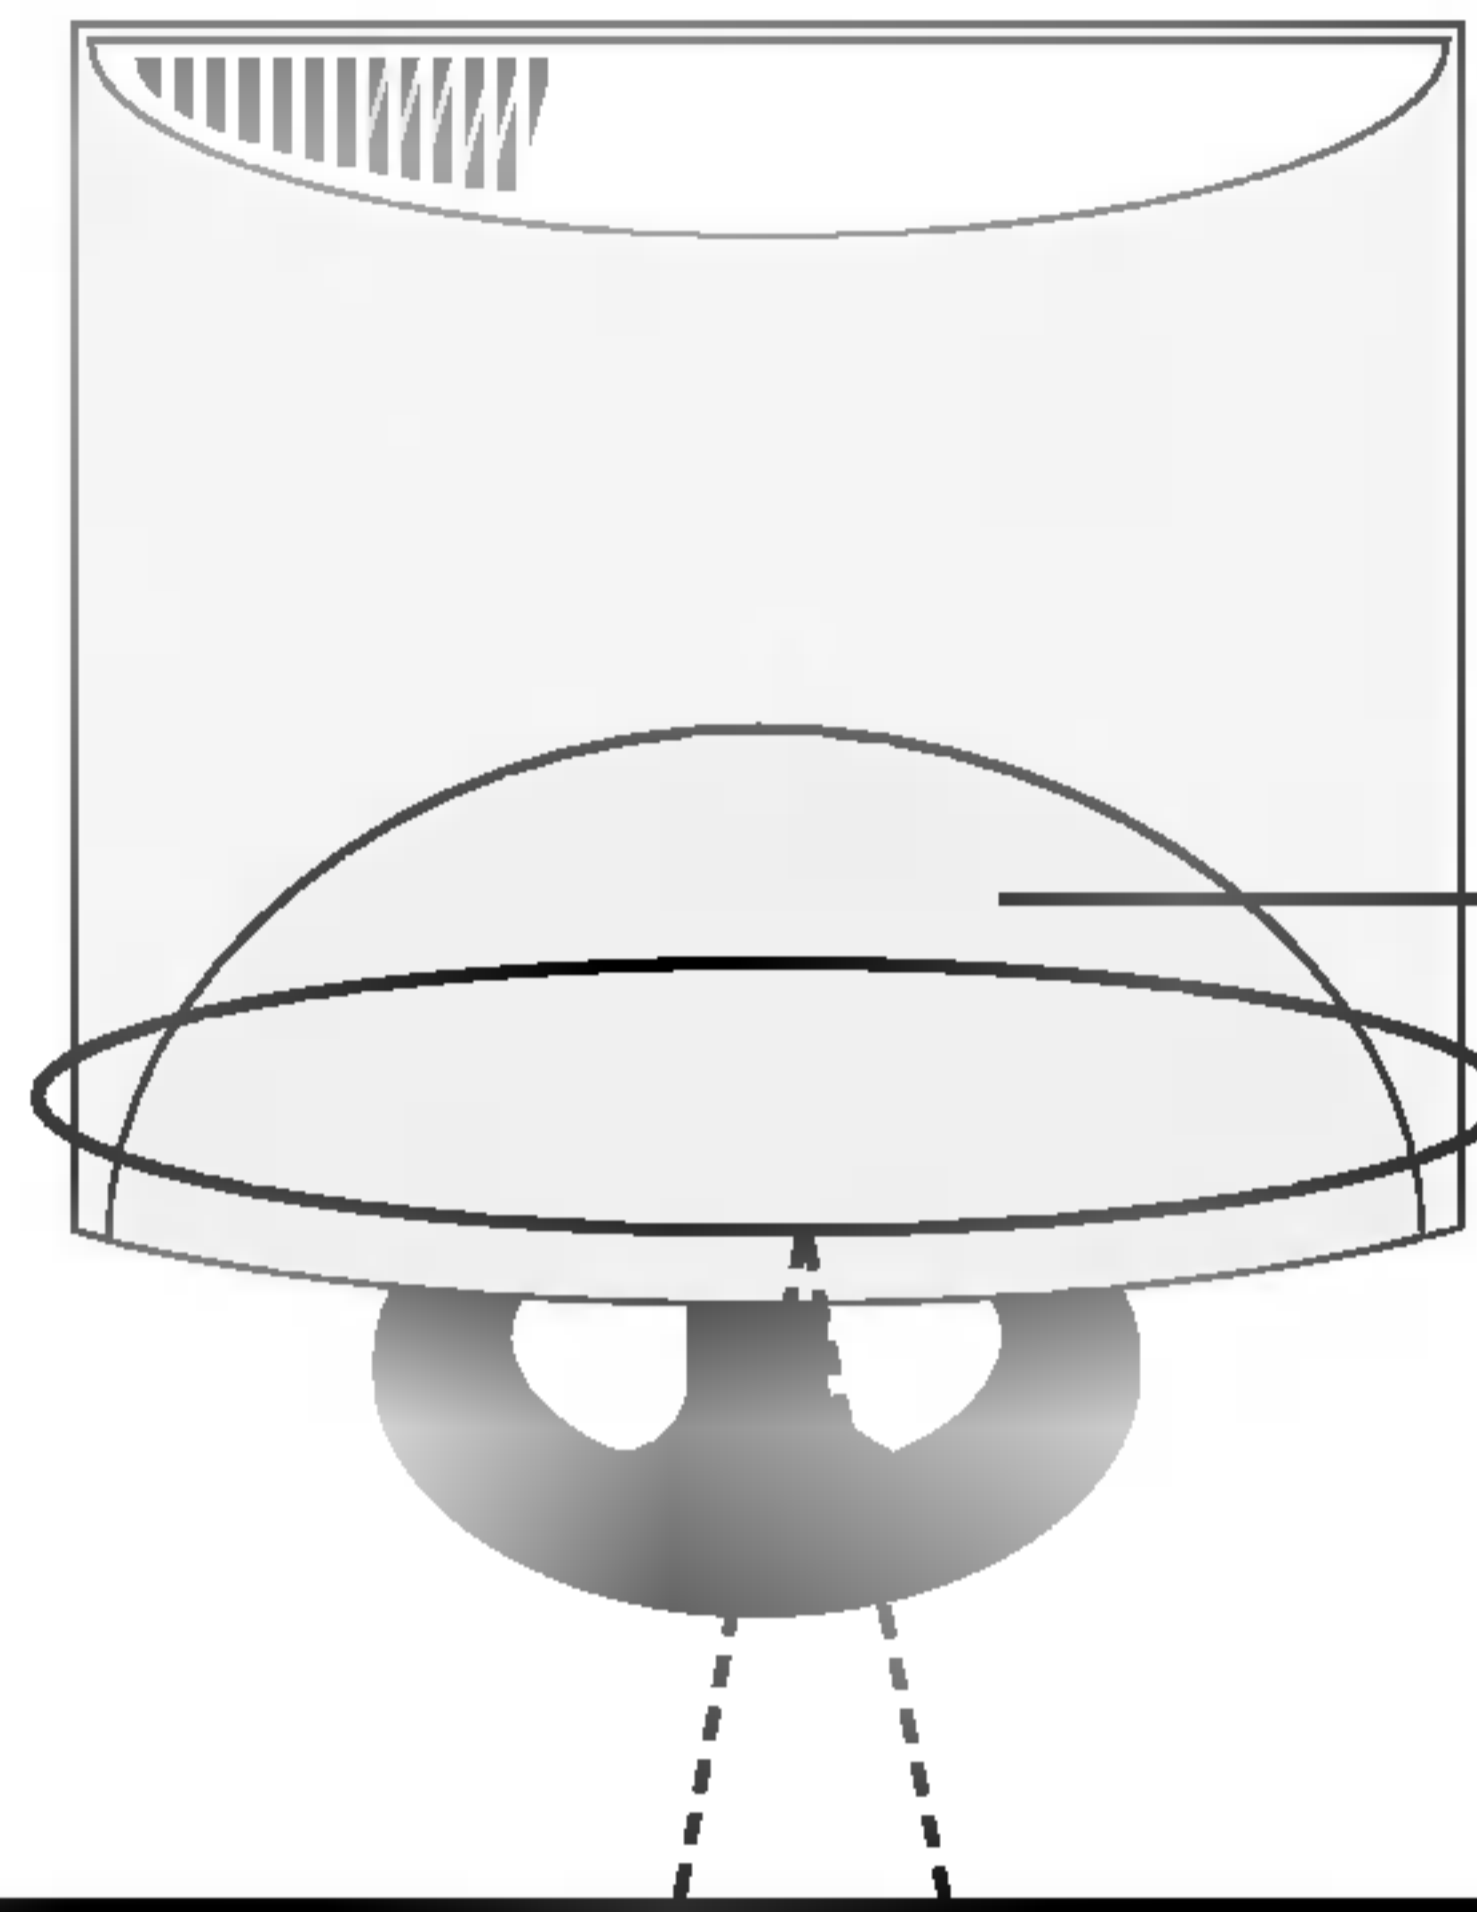


**Back Cap**  
- Open the back cap before you install the product.


[15 inch]




[17 inch / 19 inch]

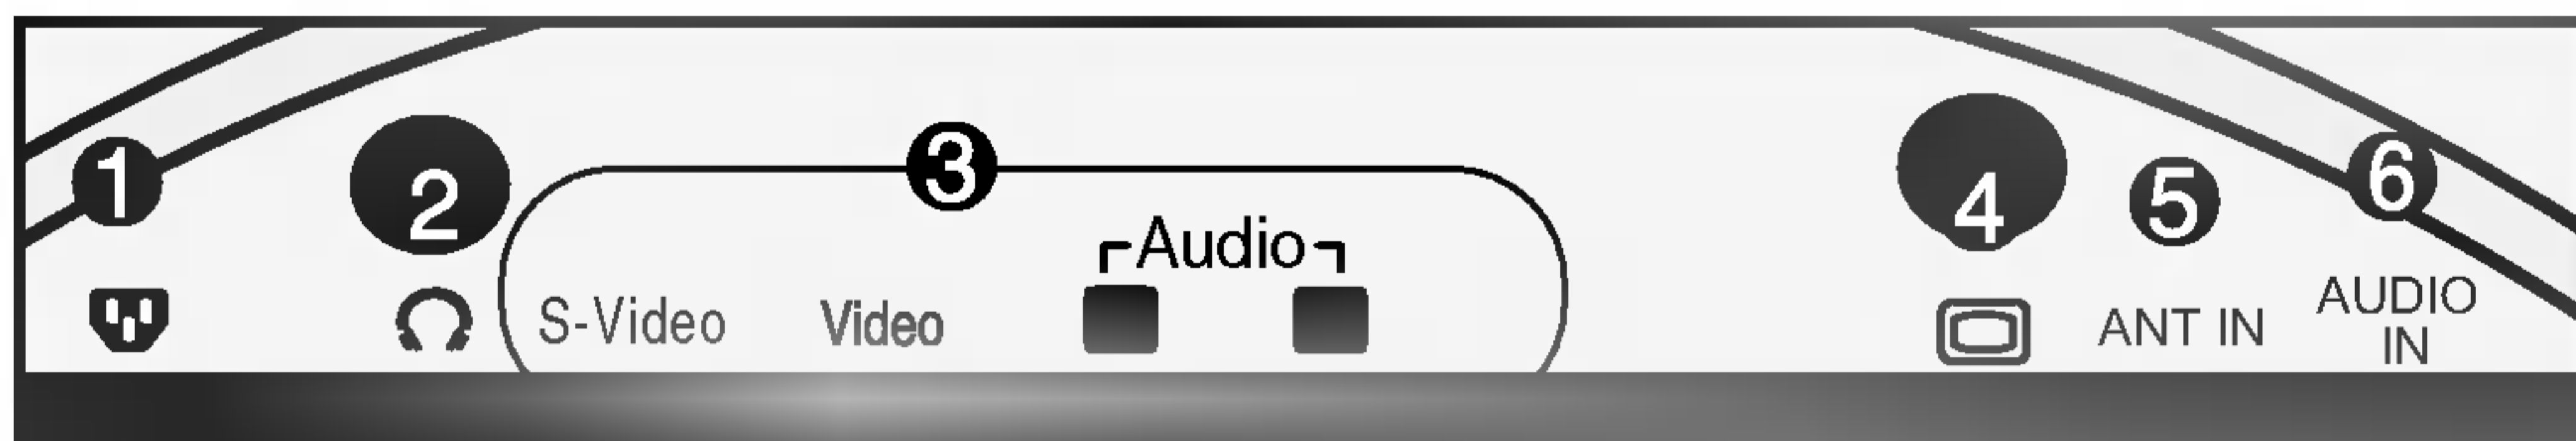


- ① Power Connector : Connect the power cord.**
- ② Headphone/Earphone Connection Terminal**
- ③ AV Input Terminal**
- ④ D-Sub Analog Signal Connector**
- ⑤ TV Tuner Jack : Connect the antenna.**
- ⑥ PC Sound Jack : Connect to the jack in the PC sound card.**

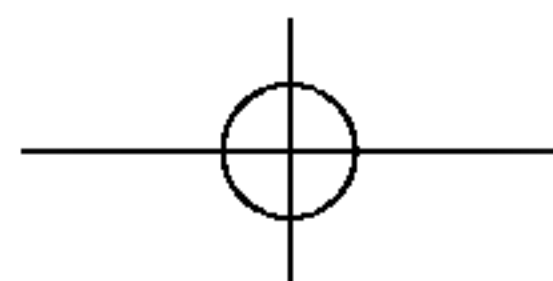

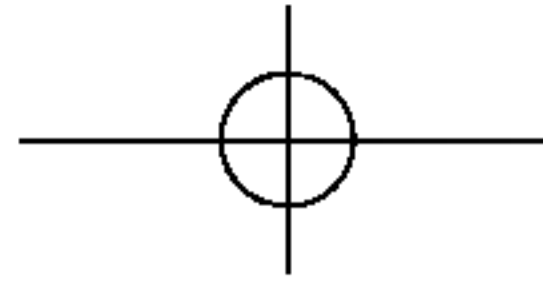


## ● AV Input Terminal

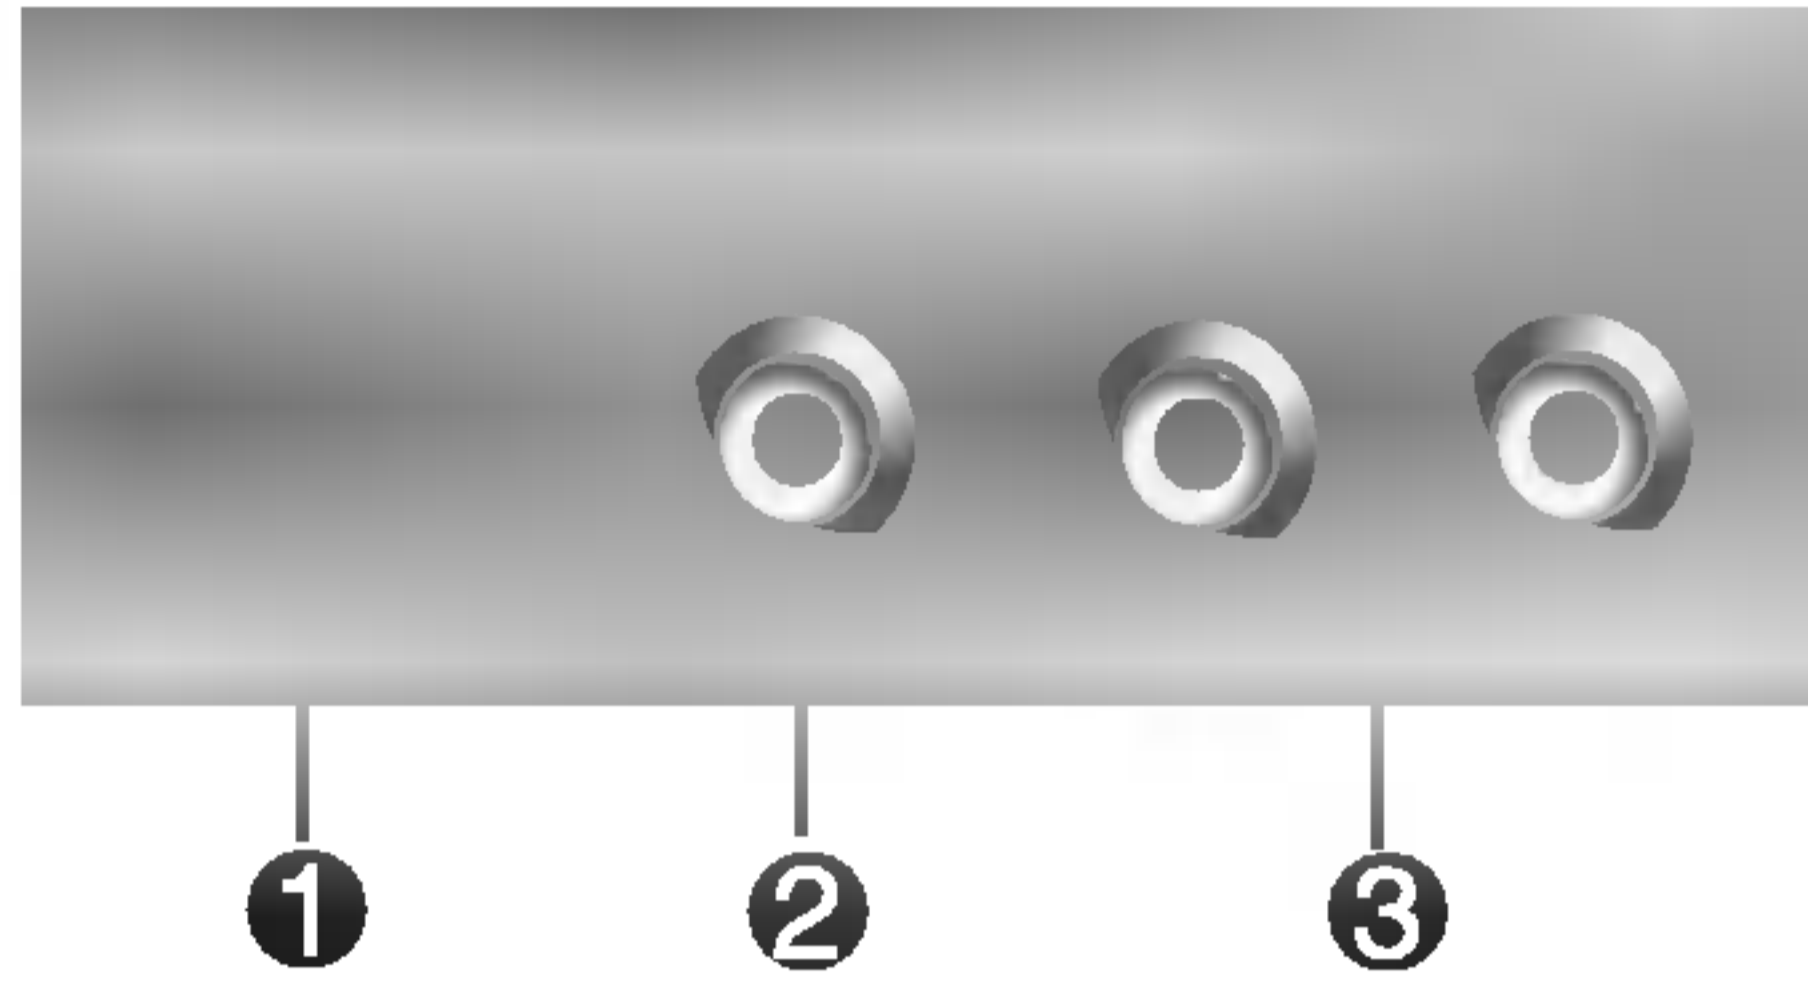

- ❶ **S-Video Input Terminal**
- ❷ **AV(CVBS) Input Terminal(Video)**
- ❸ **AV(CVBS) Input Terminal(Audio)**

## ● Connecting the sound card output terminal




- Make sure to check the sound card connection terminal in the PC before connecting to the product.  
If the PC sound card supports both Speaker Out and Line Out, change it to Line Out by setting the jumper or the PC application. (For more details, refer to the sound card user's guide.)
    - **Speaker Out** : The terminal connected to the speaker that is not equipped with an amplifier.
    - **\*Line Out** : The terminal connected to the speaker equipped with an amplifier.
- If Audio Out in the PC sound card has only Speaker Out, reduce the PC volume. This product is integrated with an amplifier.

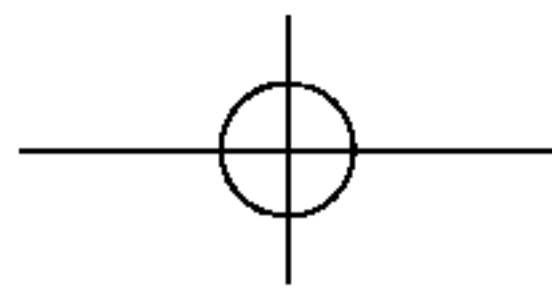


**1** First of all, see if the computer, product and the peripherals are turned off.  
Then, connect the signal input cable.


- (A)** When connecting with the D-Sub signal input cable. (IBM compatible PC)
- (B)** When connecting with the D-Sub signal input cable. (Macintosh)

Rear side of the product.

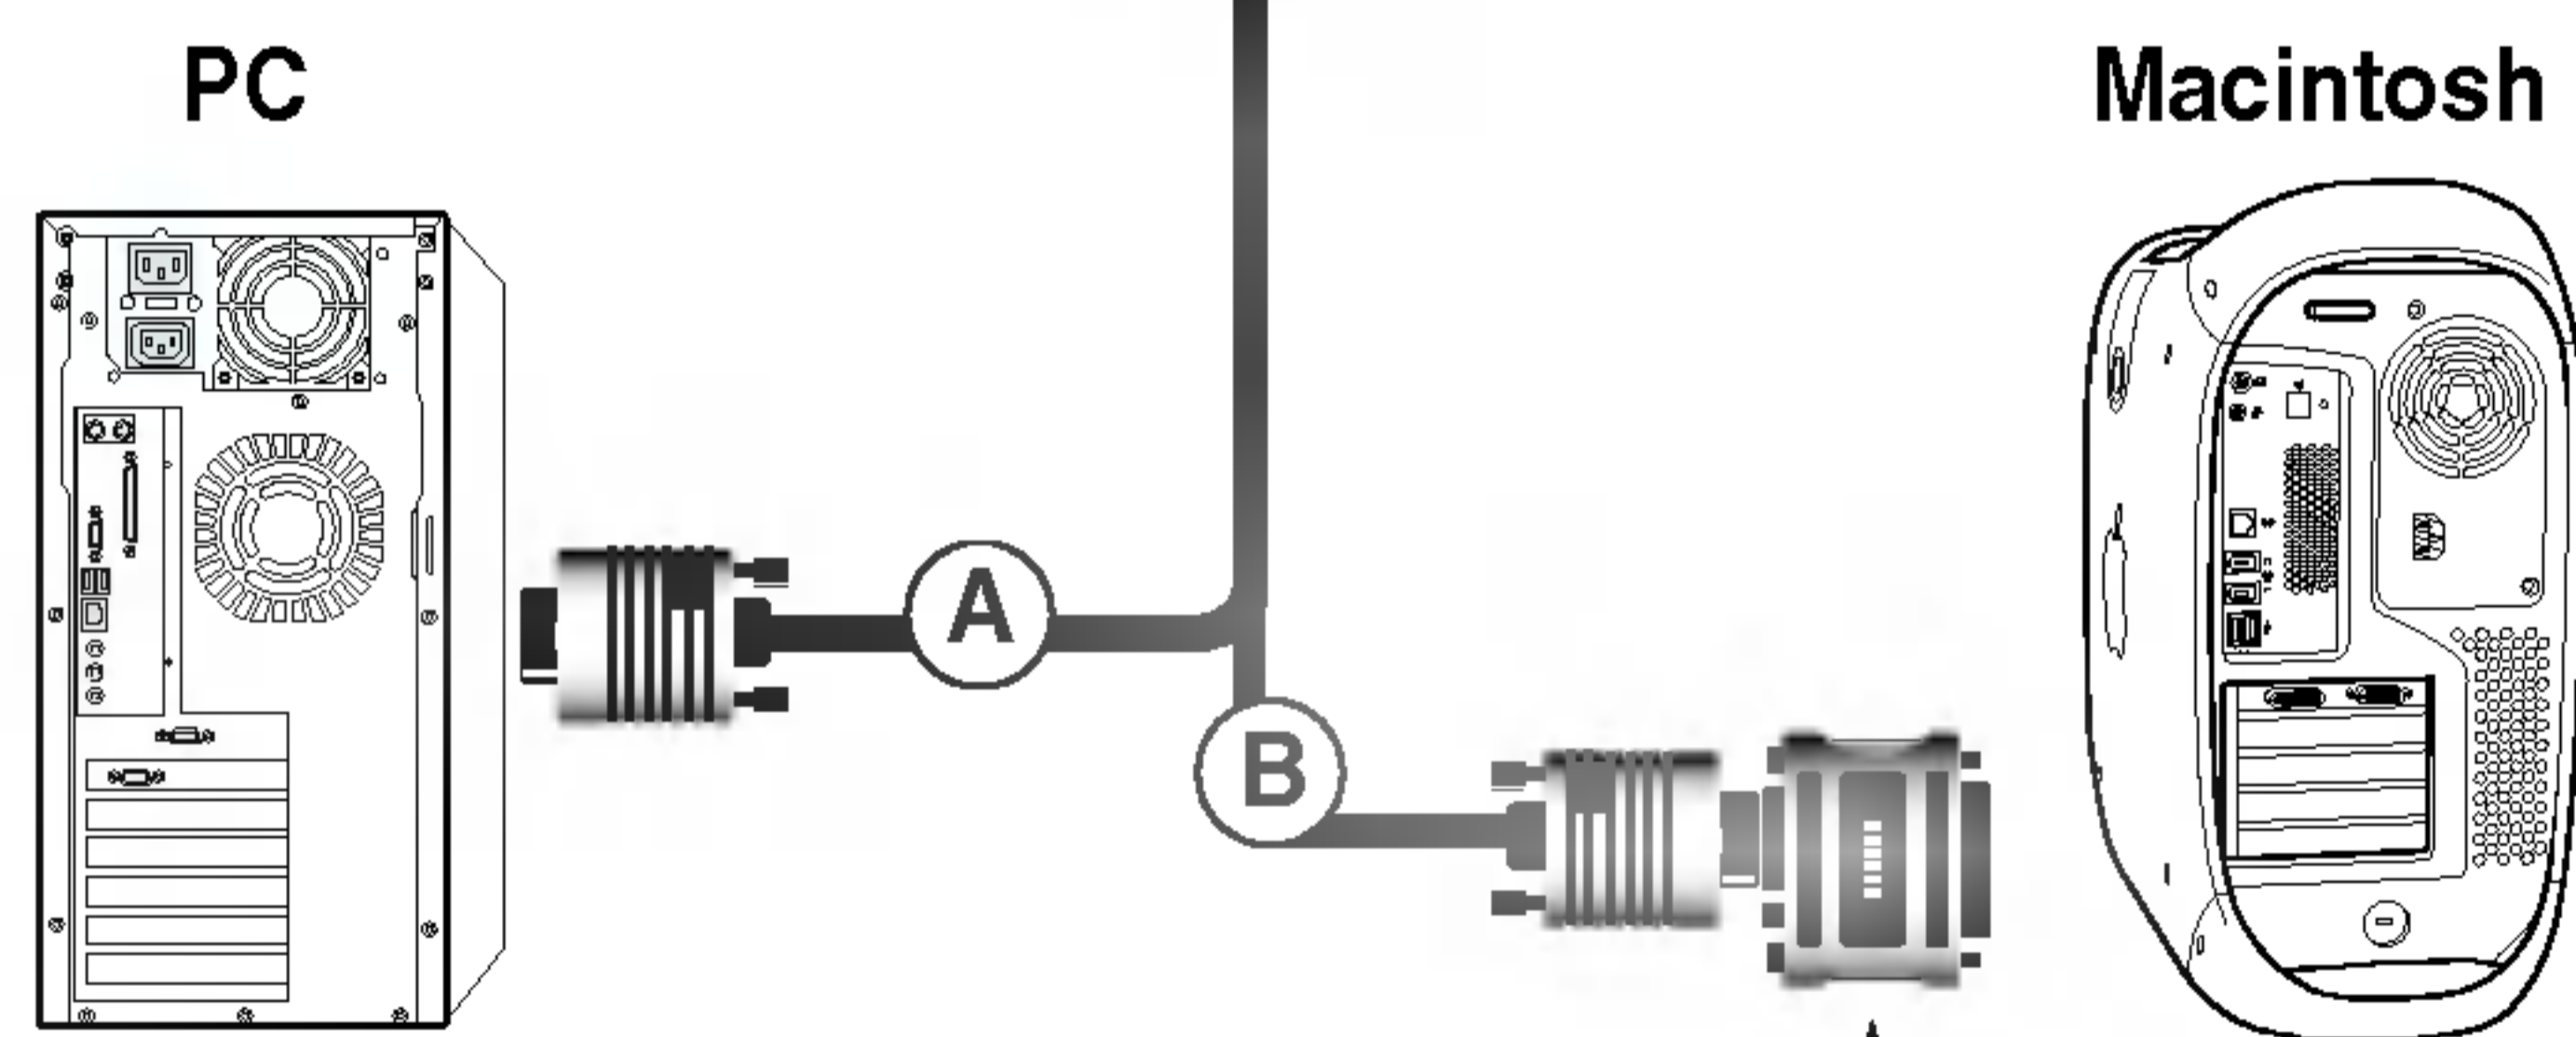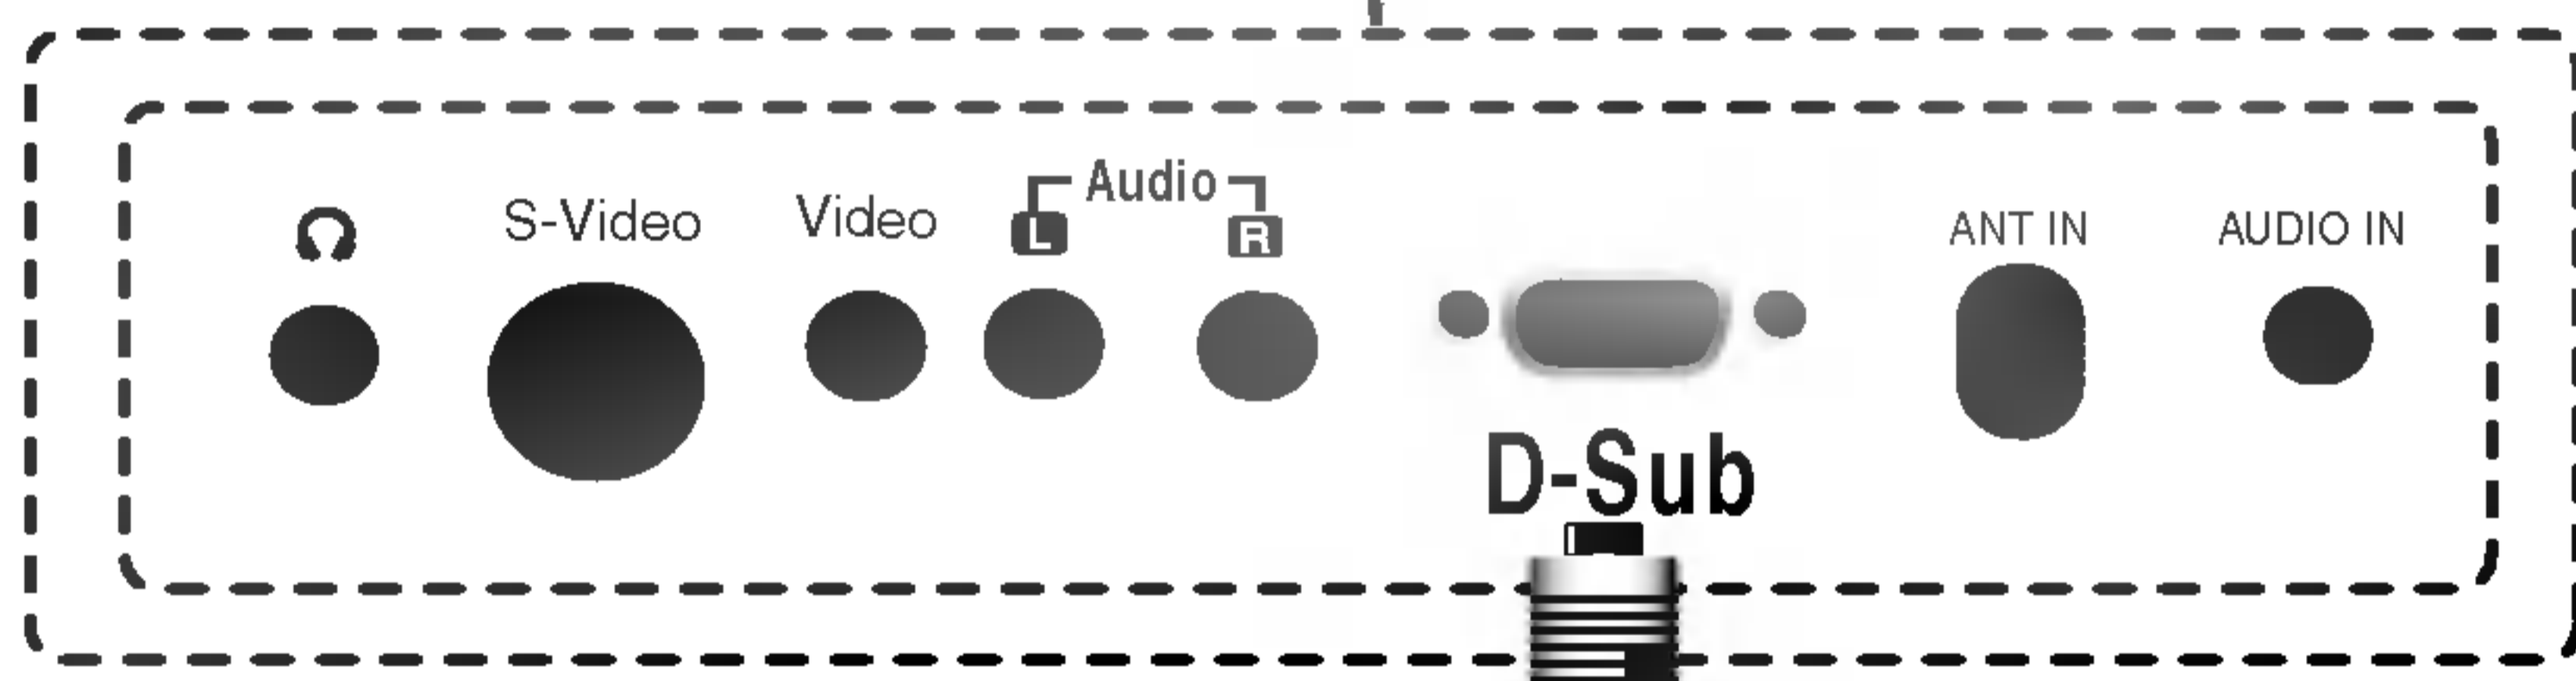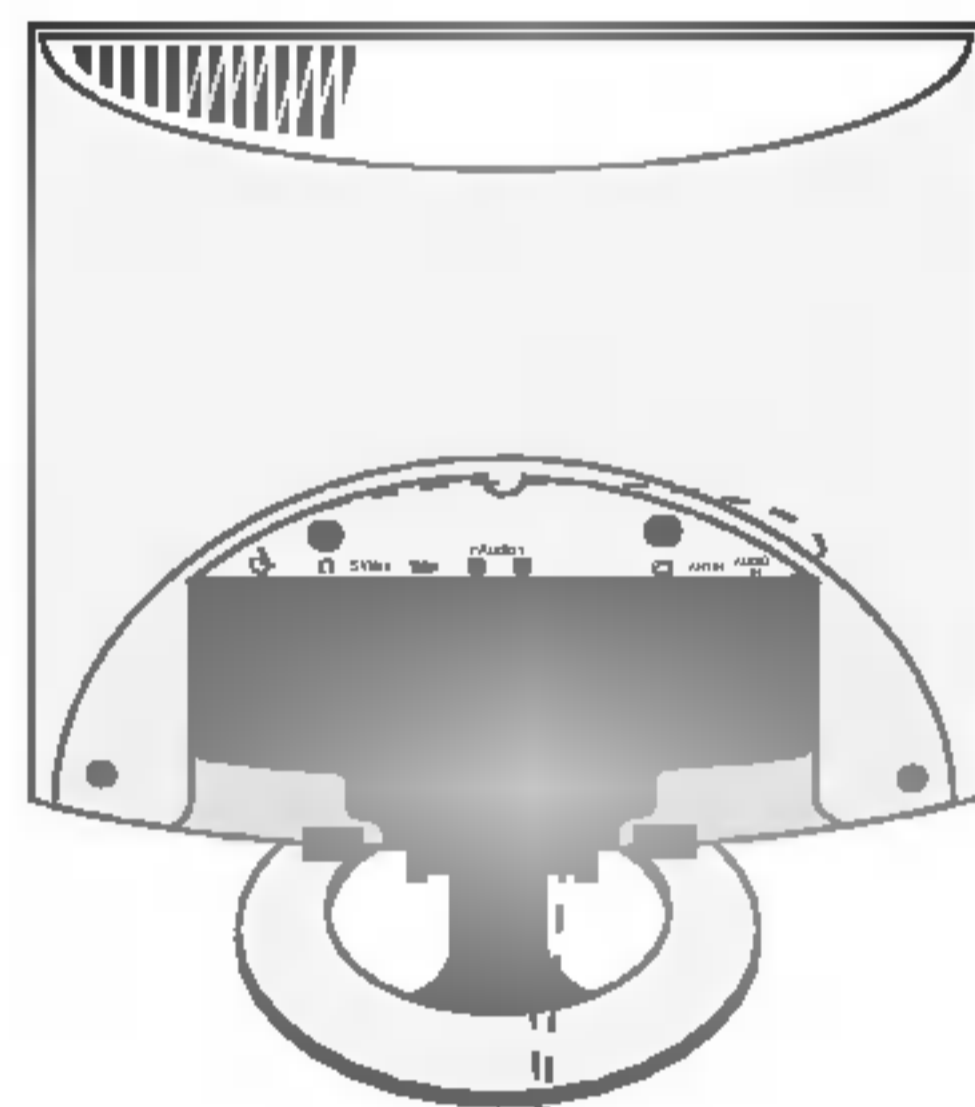


**Macintosh Adapter (Optional)**  
Use the standard Macintosh adapter since an incompatible adapter is available in the market. (Different signaling system)

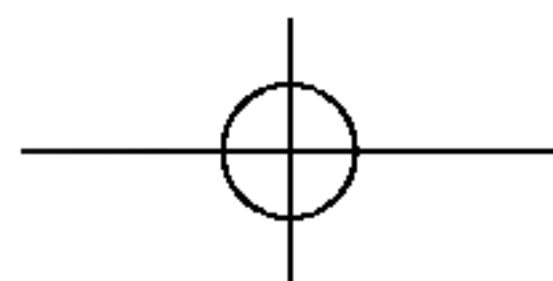


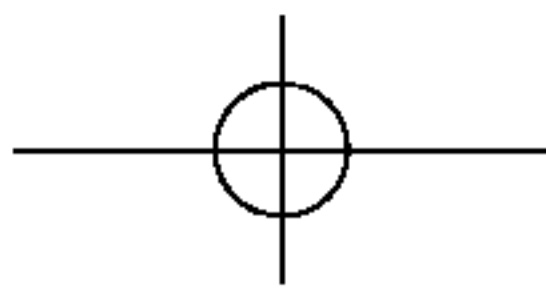

**2** Connect the power cord.

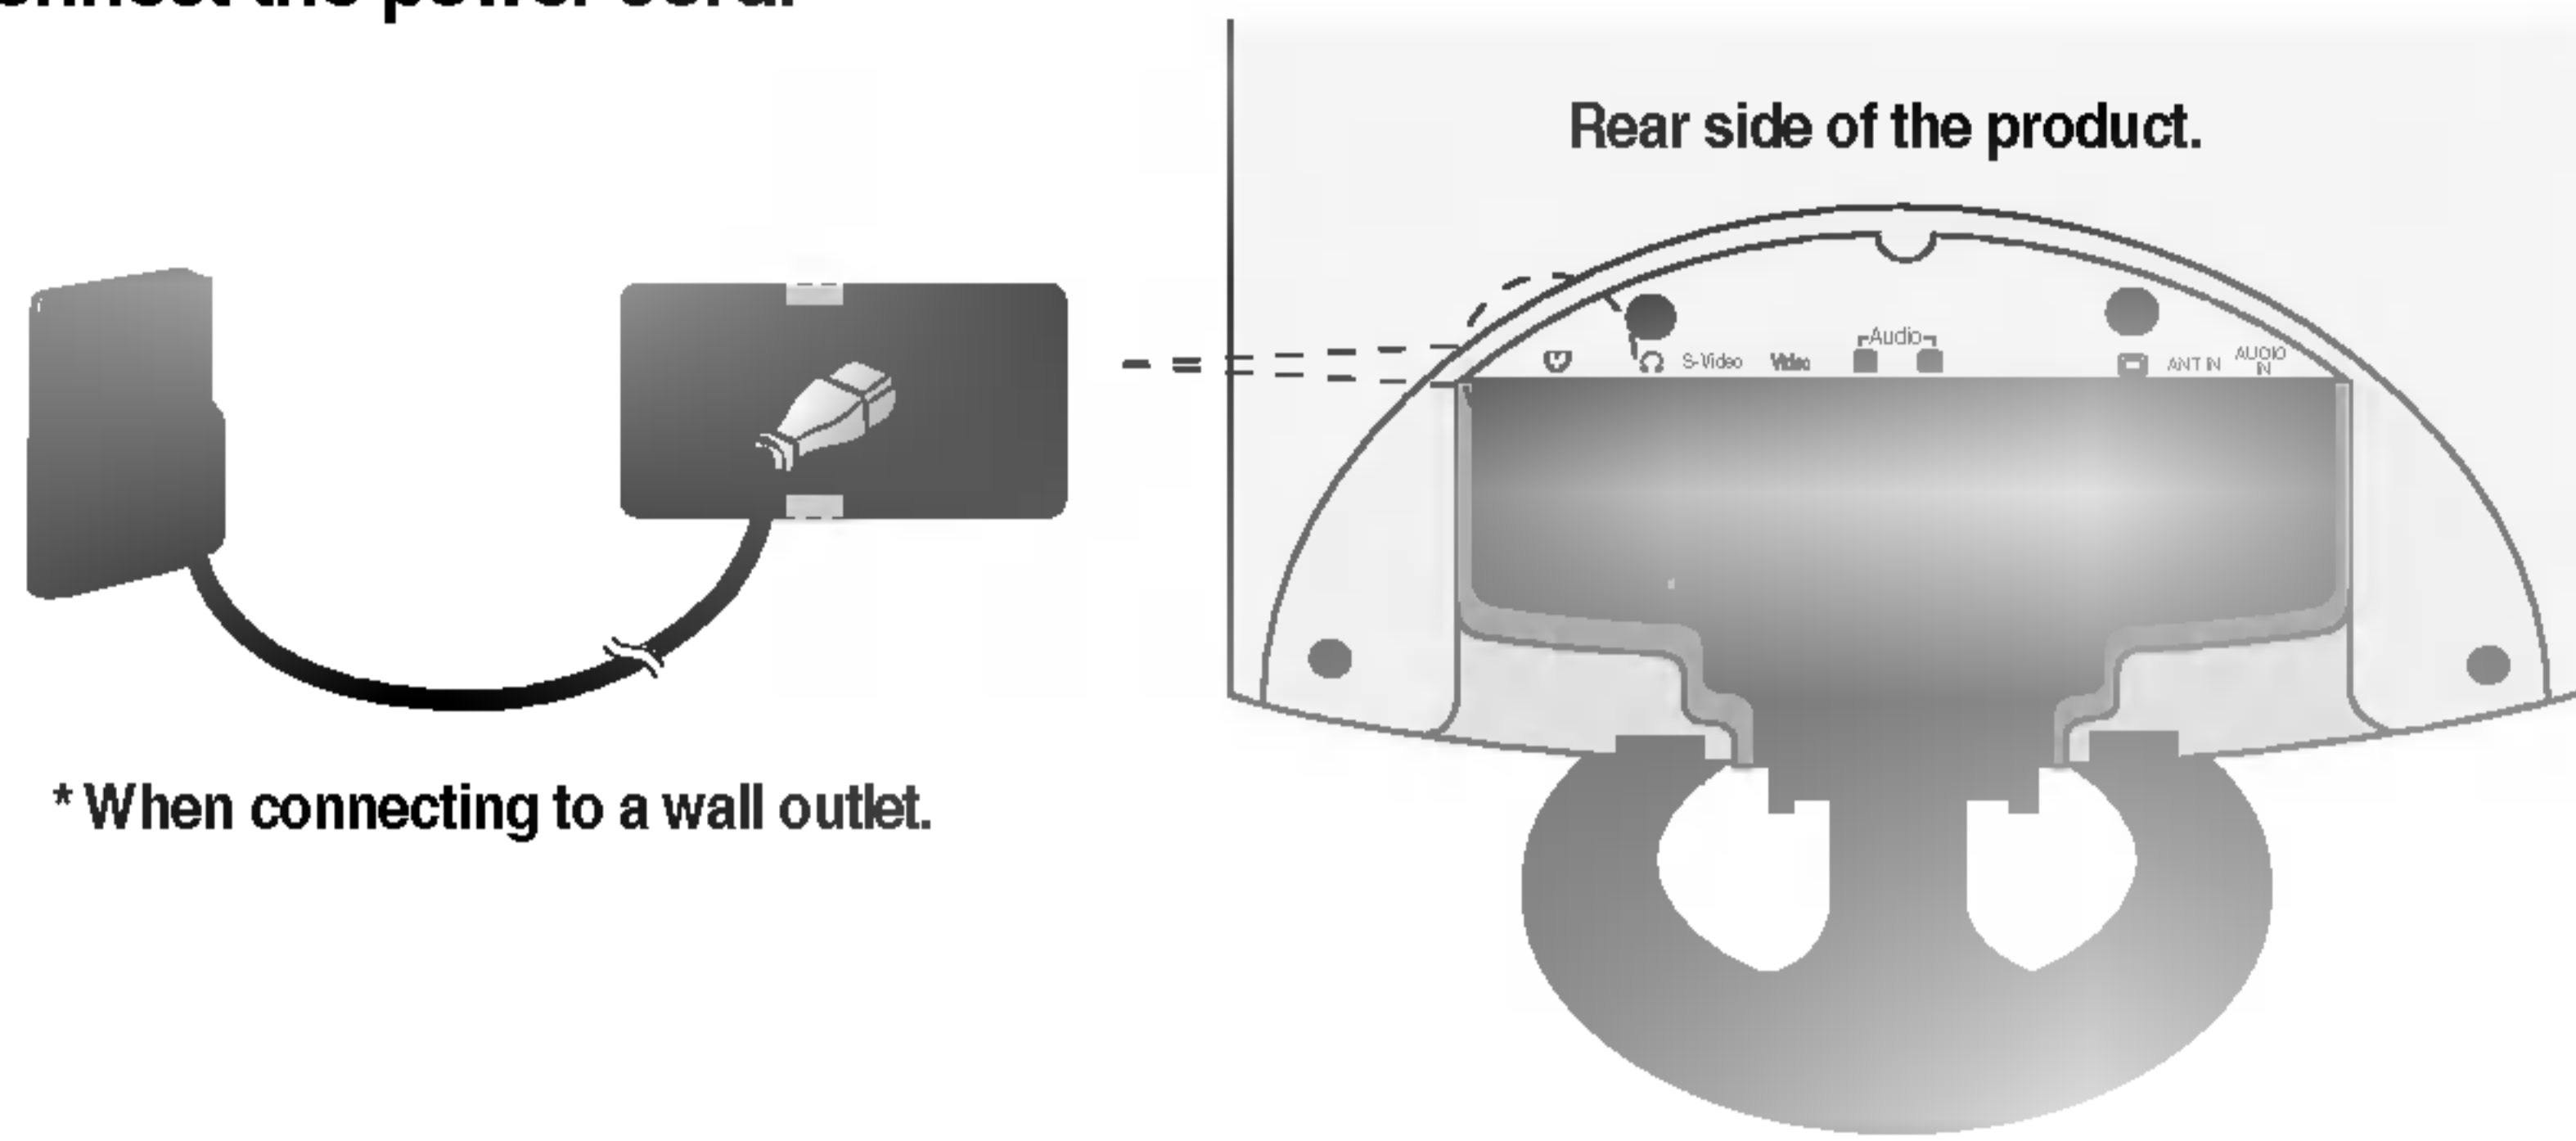

**3** (A) Touch the Power On/Off sensor.

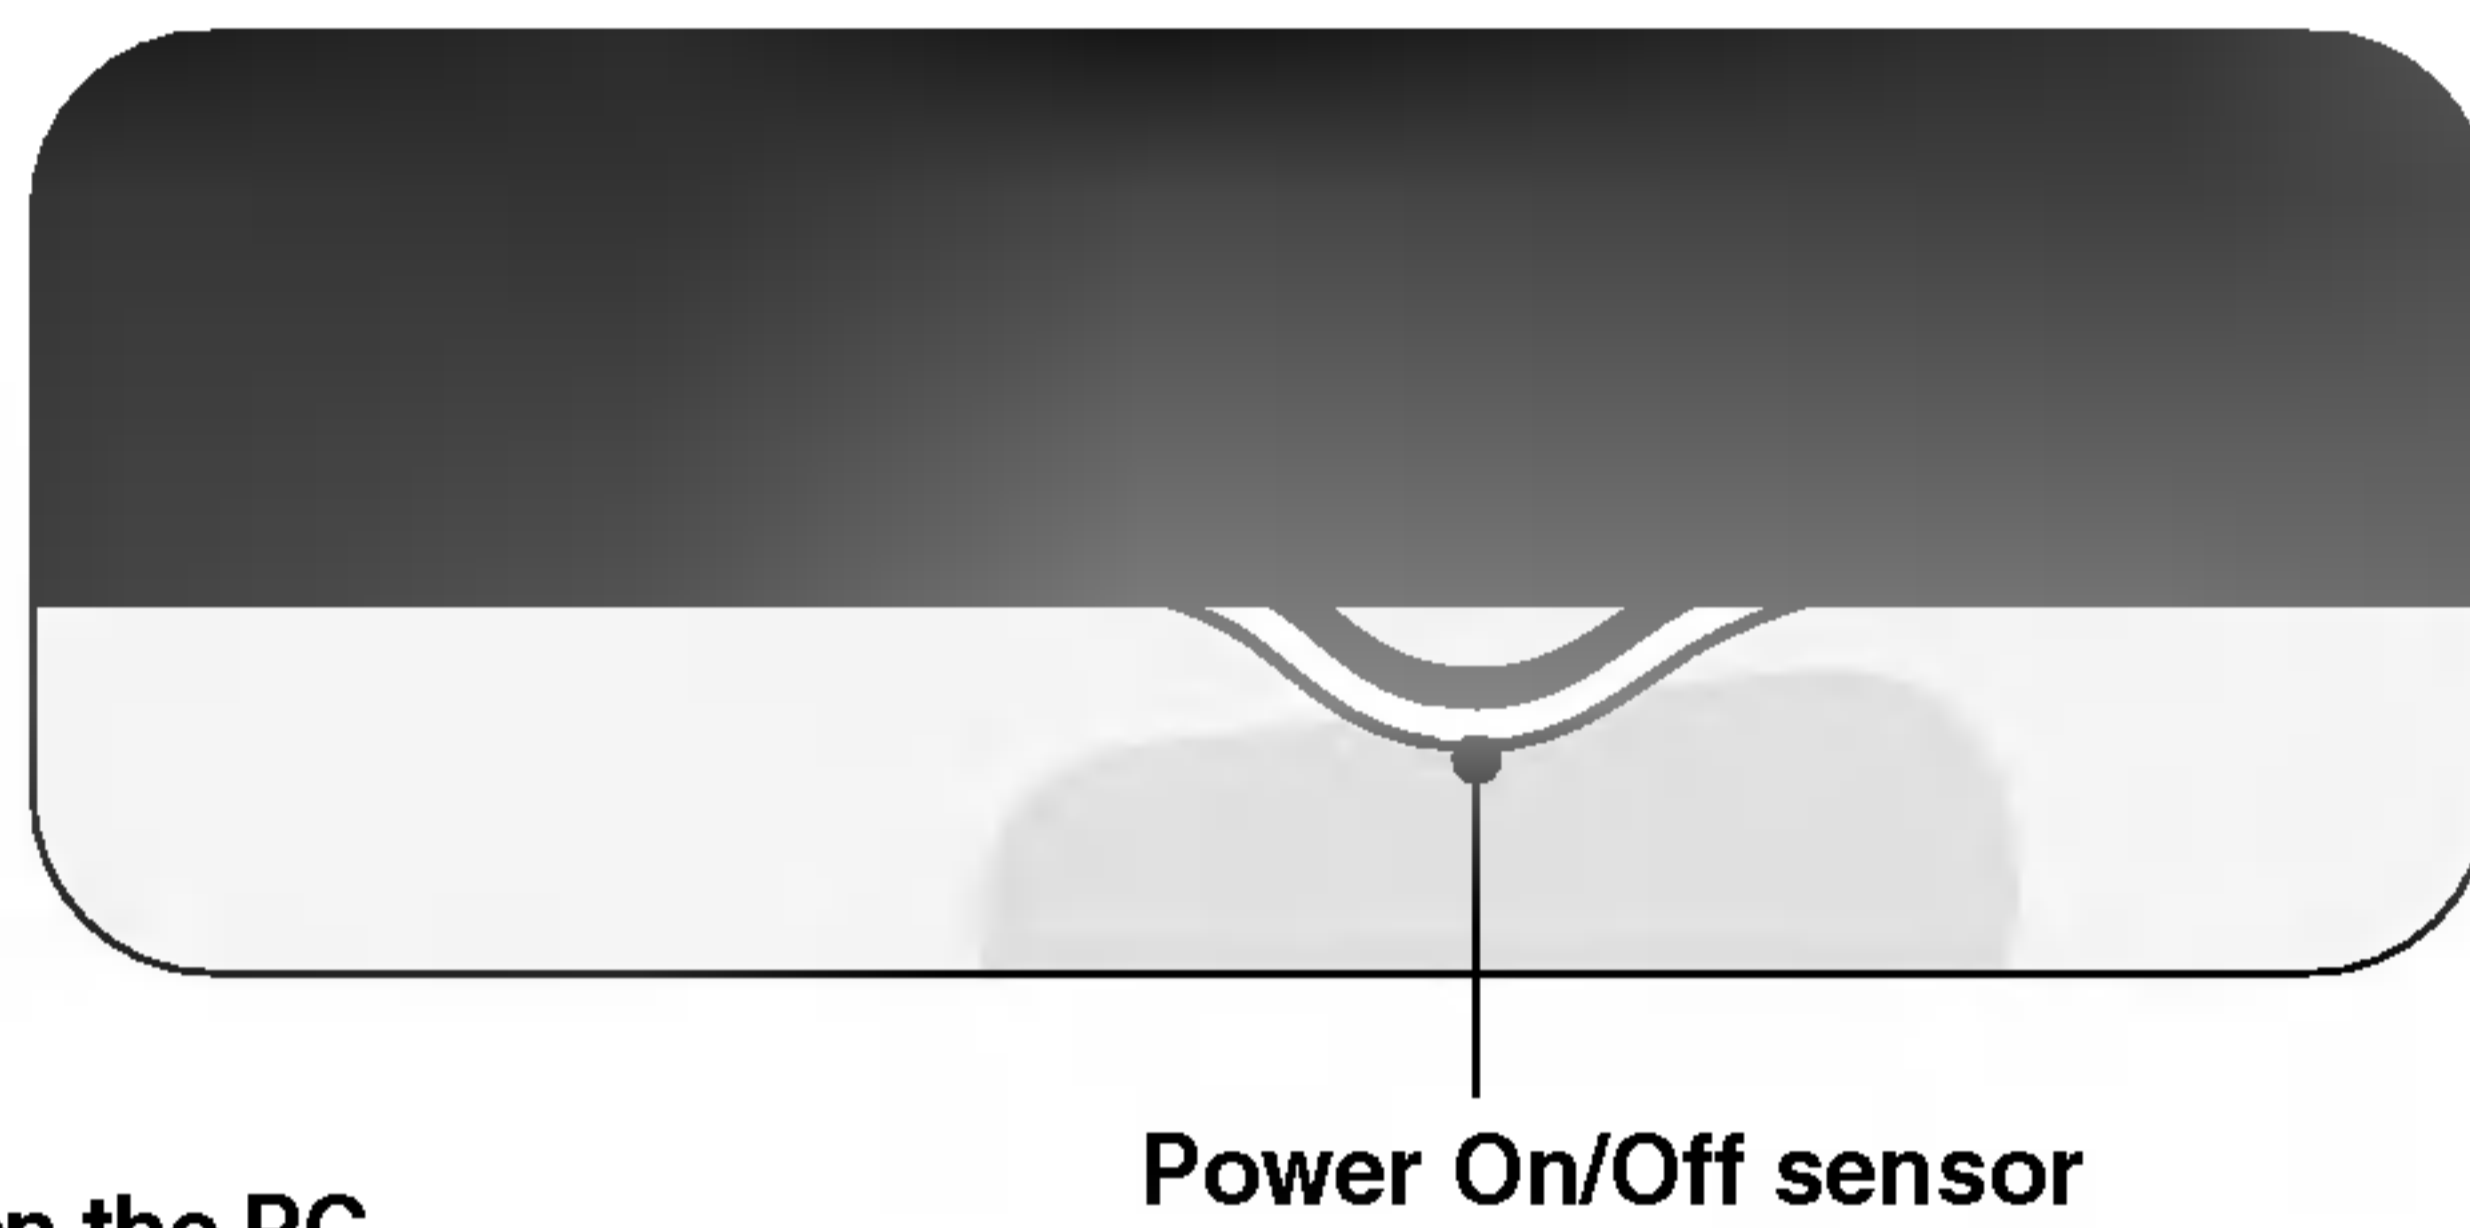

(B) Turn on the PC.




**4** Select an input signal.  
Press the multimedia button on the remote control to select the input signal.

multimedia → ▼▲ → enter

Or, press the SOURCE button at the front side of the product.


SOURCE → ▼▲ → AUTO/SELECT


- Select PC

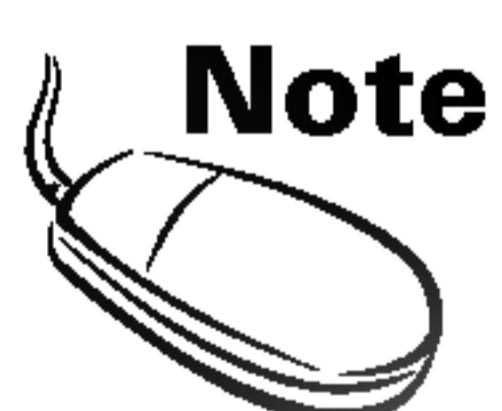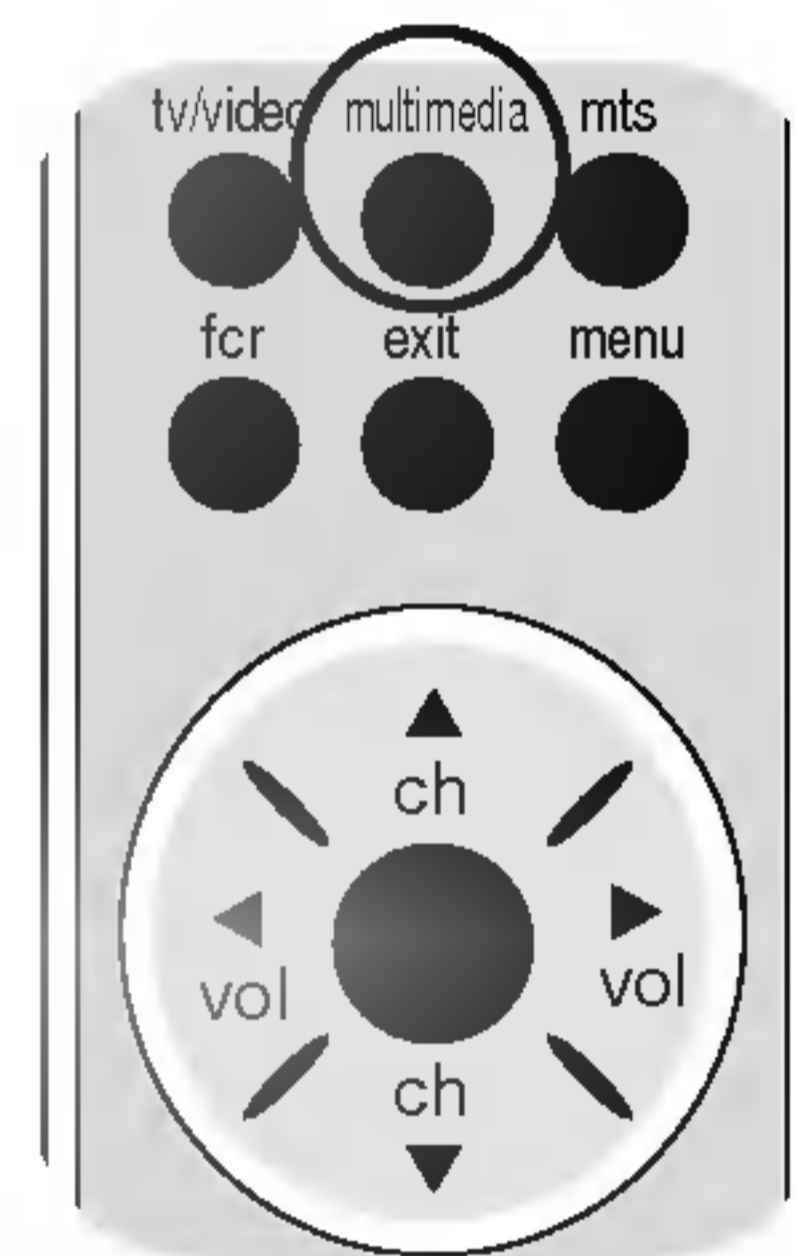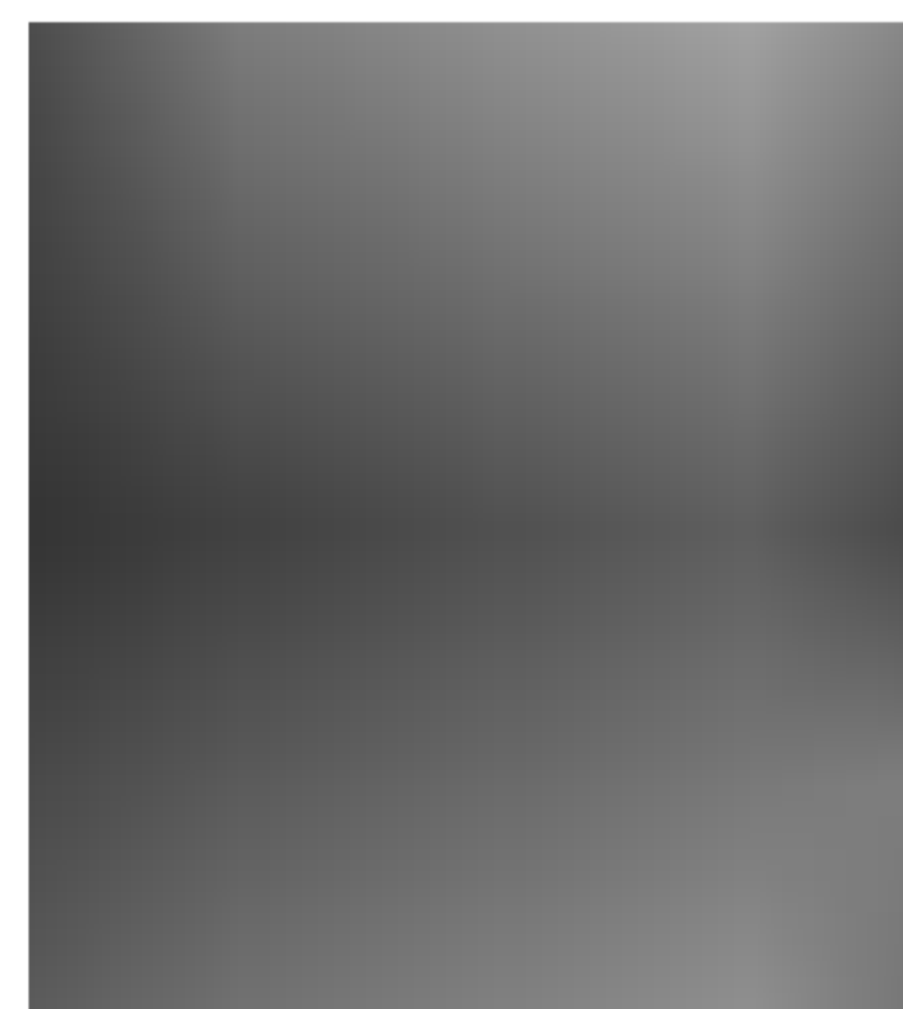

**Note**

- Directly connect to a grounded power outlet on the wall or a power bar with a ground wire.

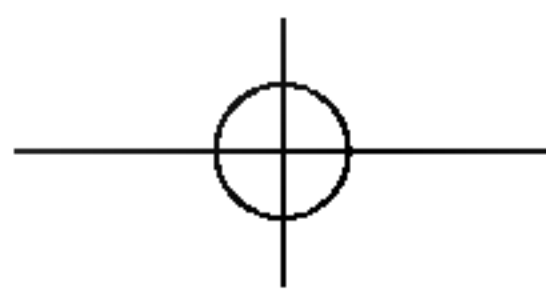


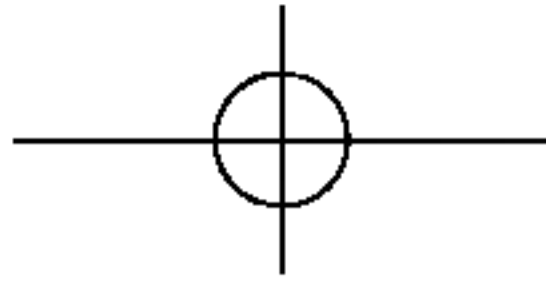


■ ■ ■ When watching VCR/DVD

**1** Connect the video/audio cable as shown in the below figure and then connect the power cord (See page A12).

**A** When connecting with an RCA cable.  
 • Connect the input terminal with a proper color match. (Video – Yellow, Sound (left) – White, Sound (right) – Red)

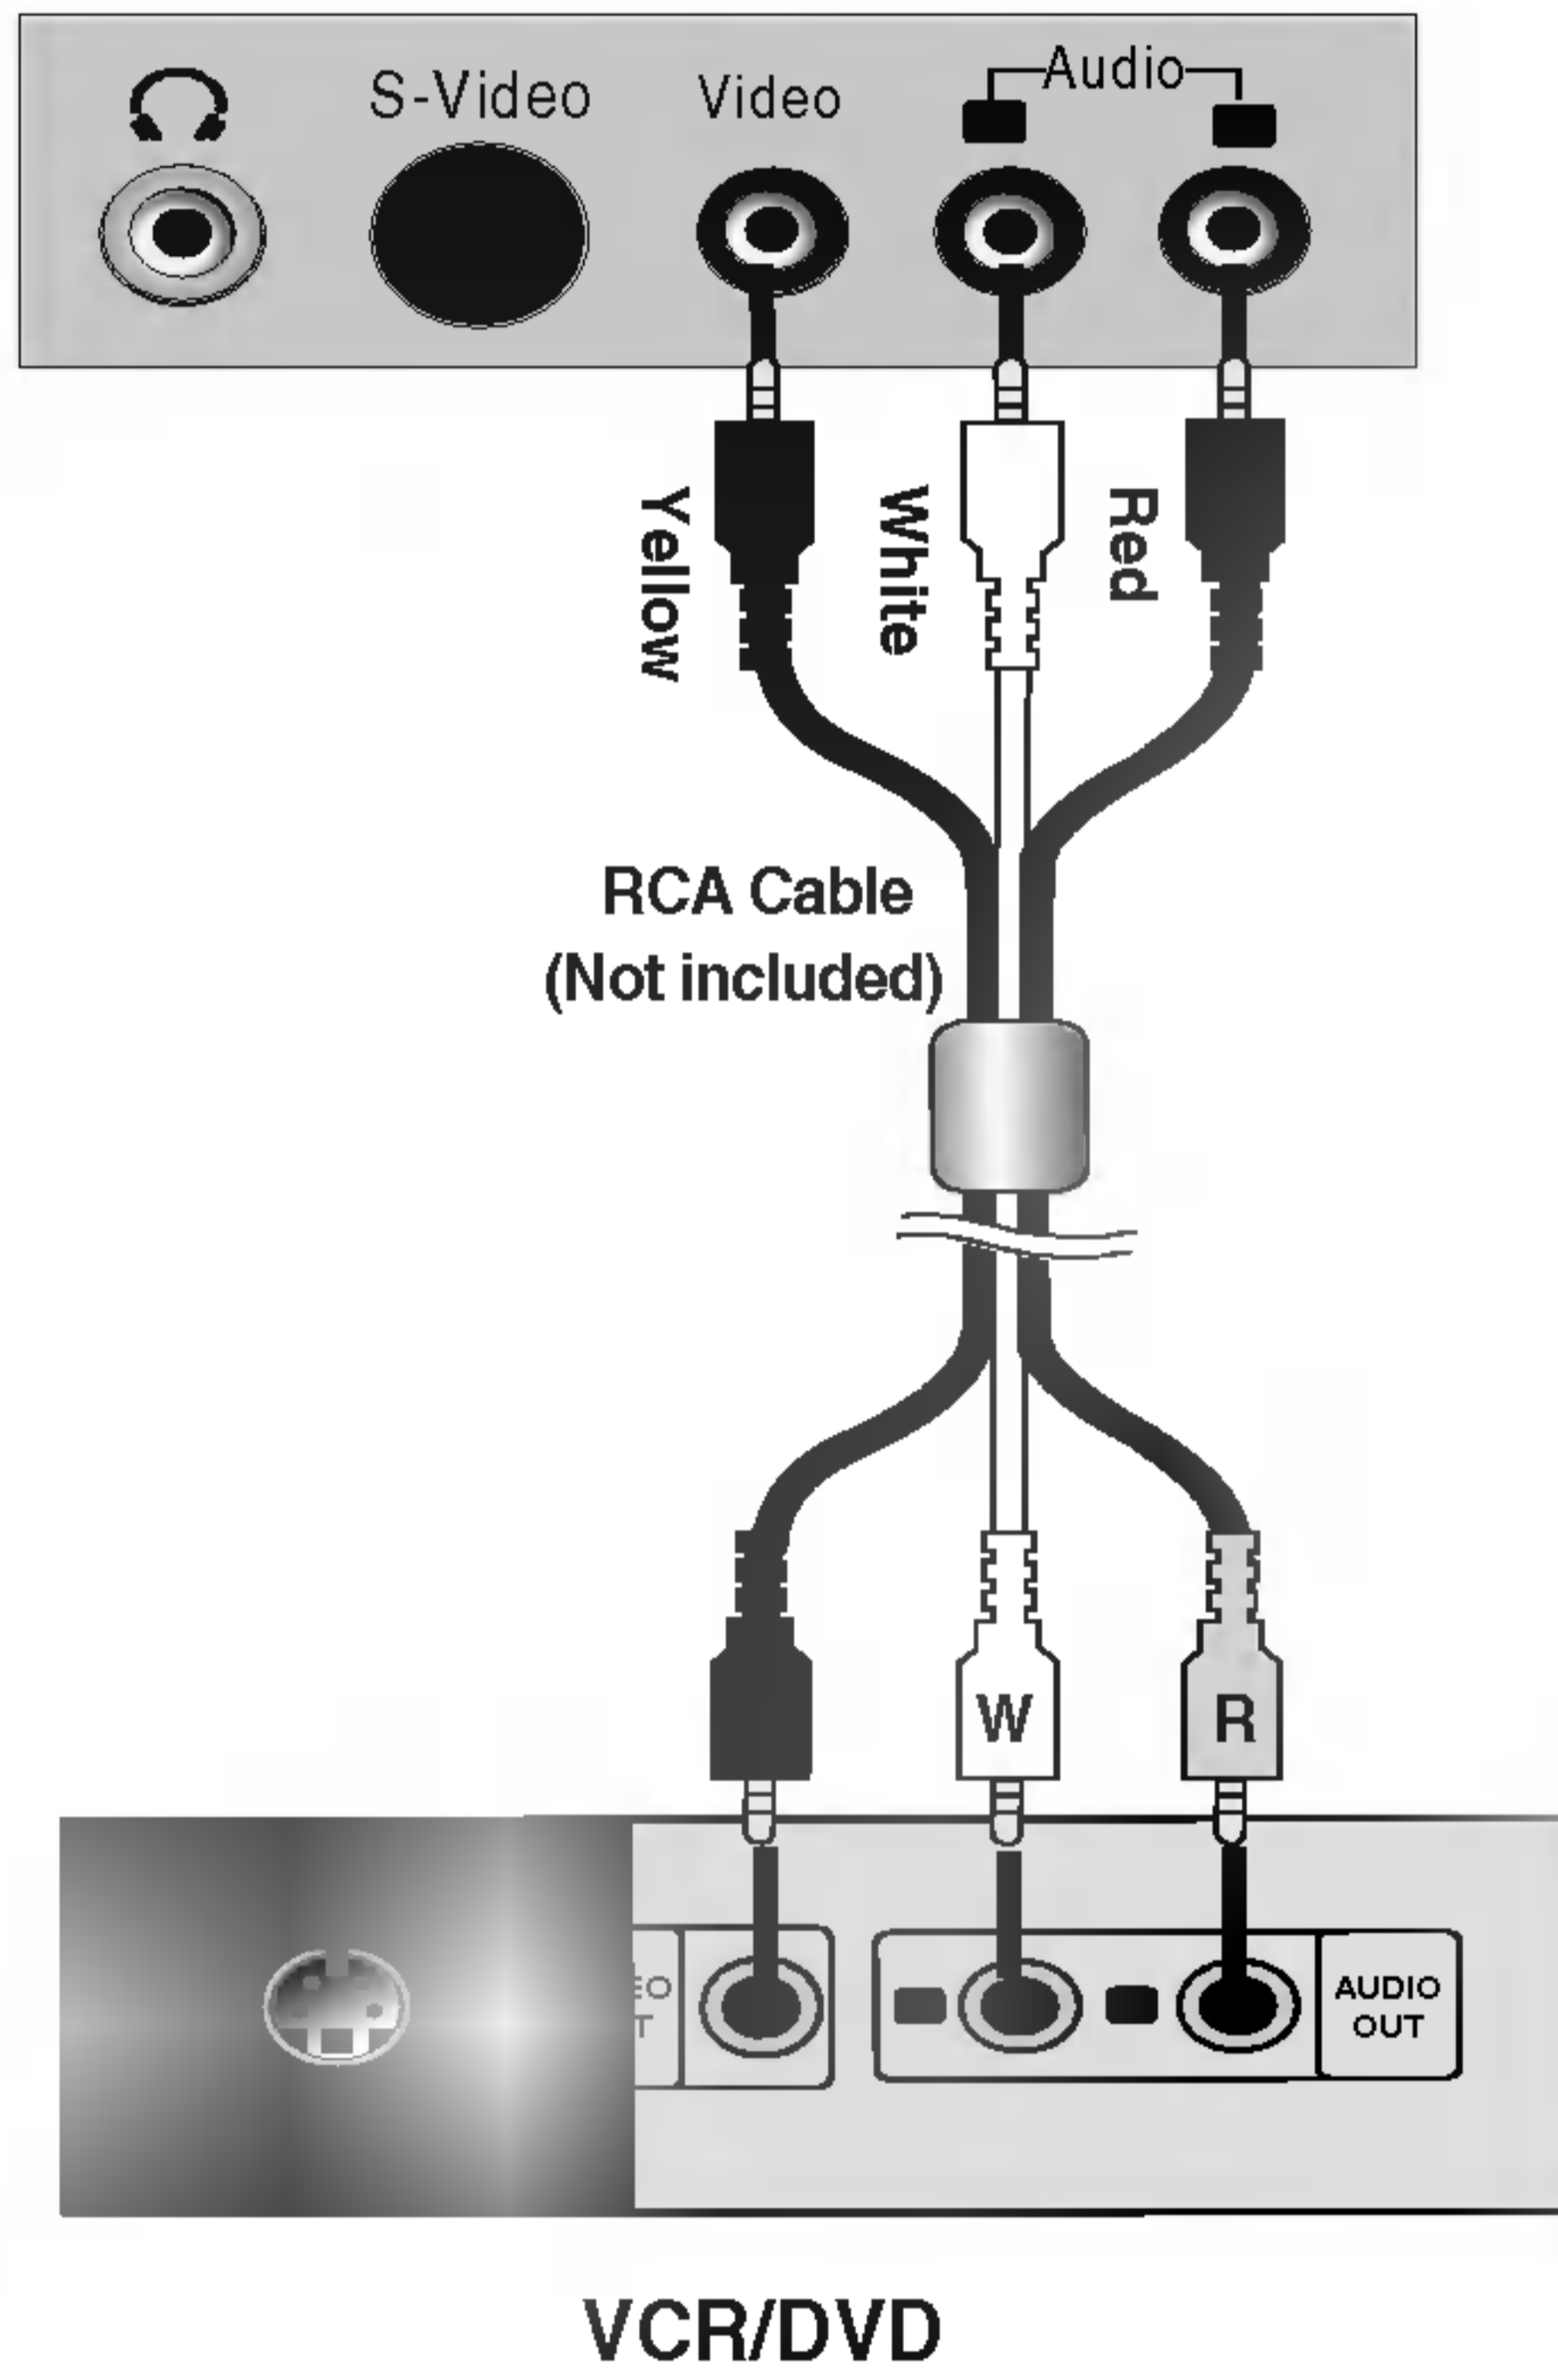

**B** When connecting with an S-Video cable.  
 • Connect to the S-Video input terminal to watch high image quality movies.

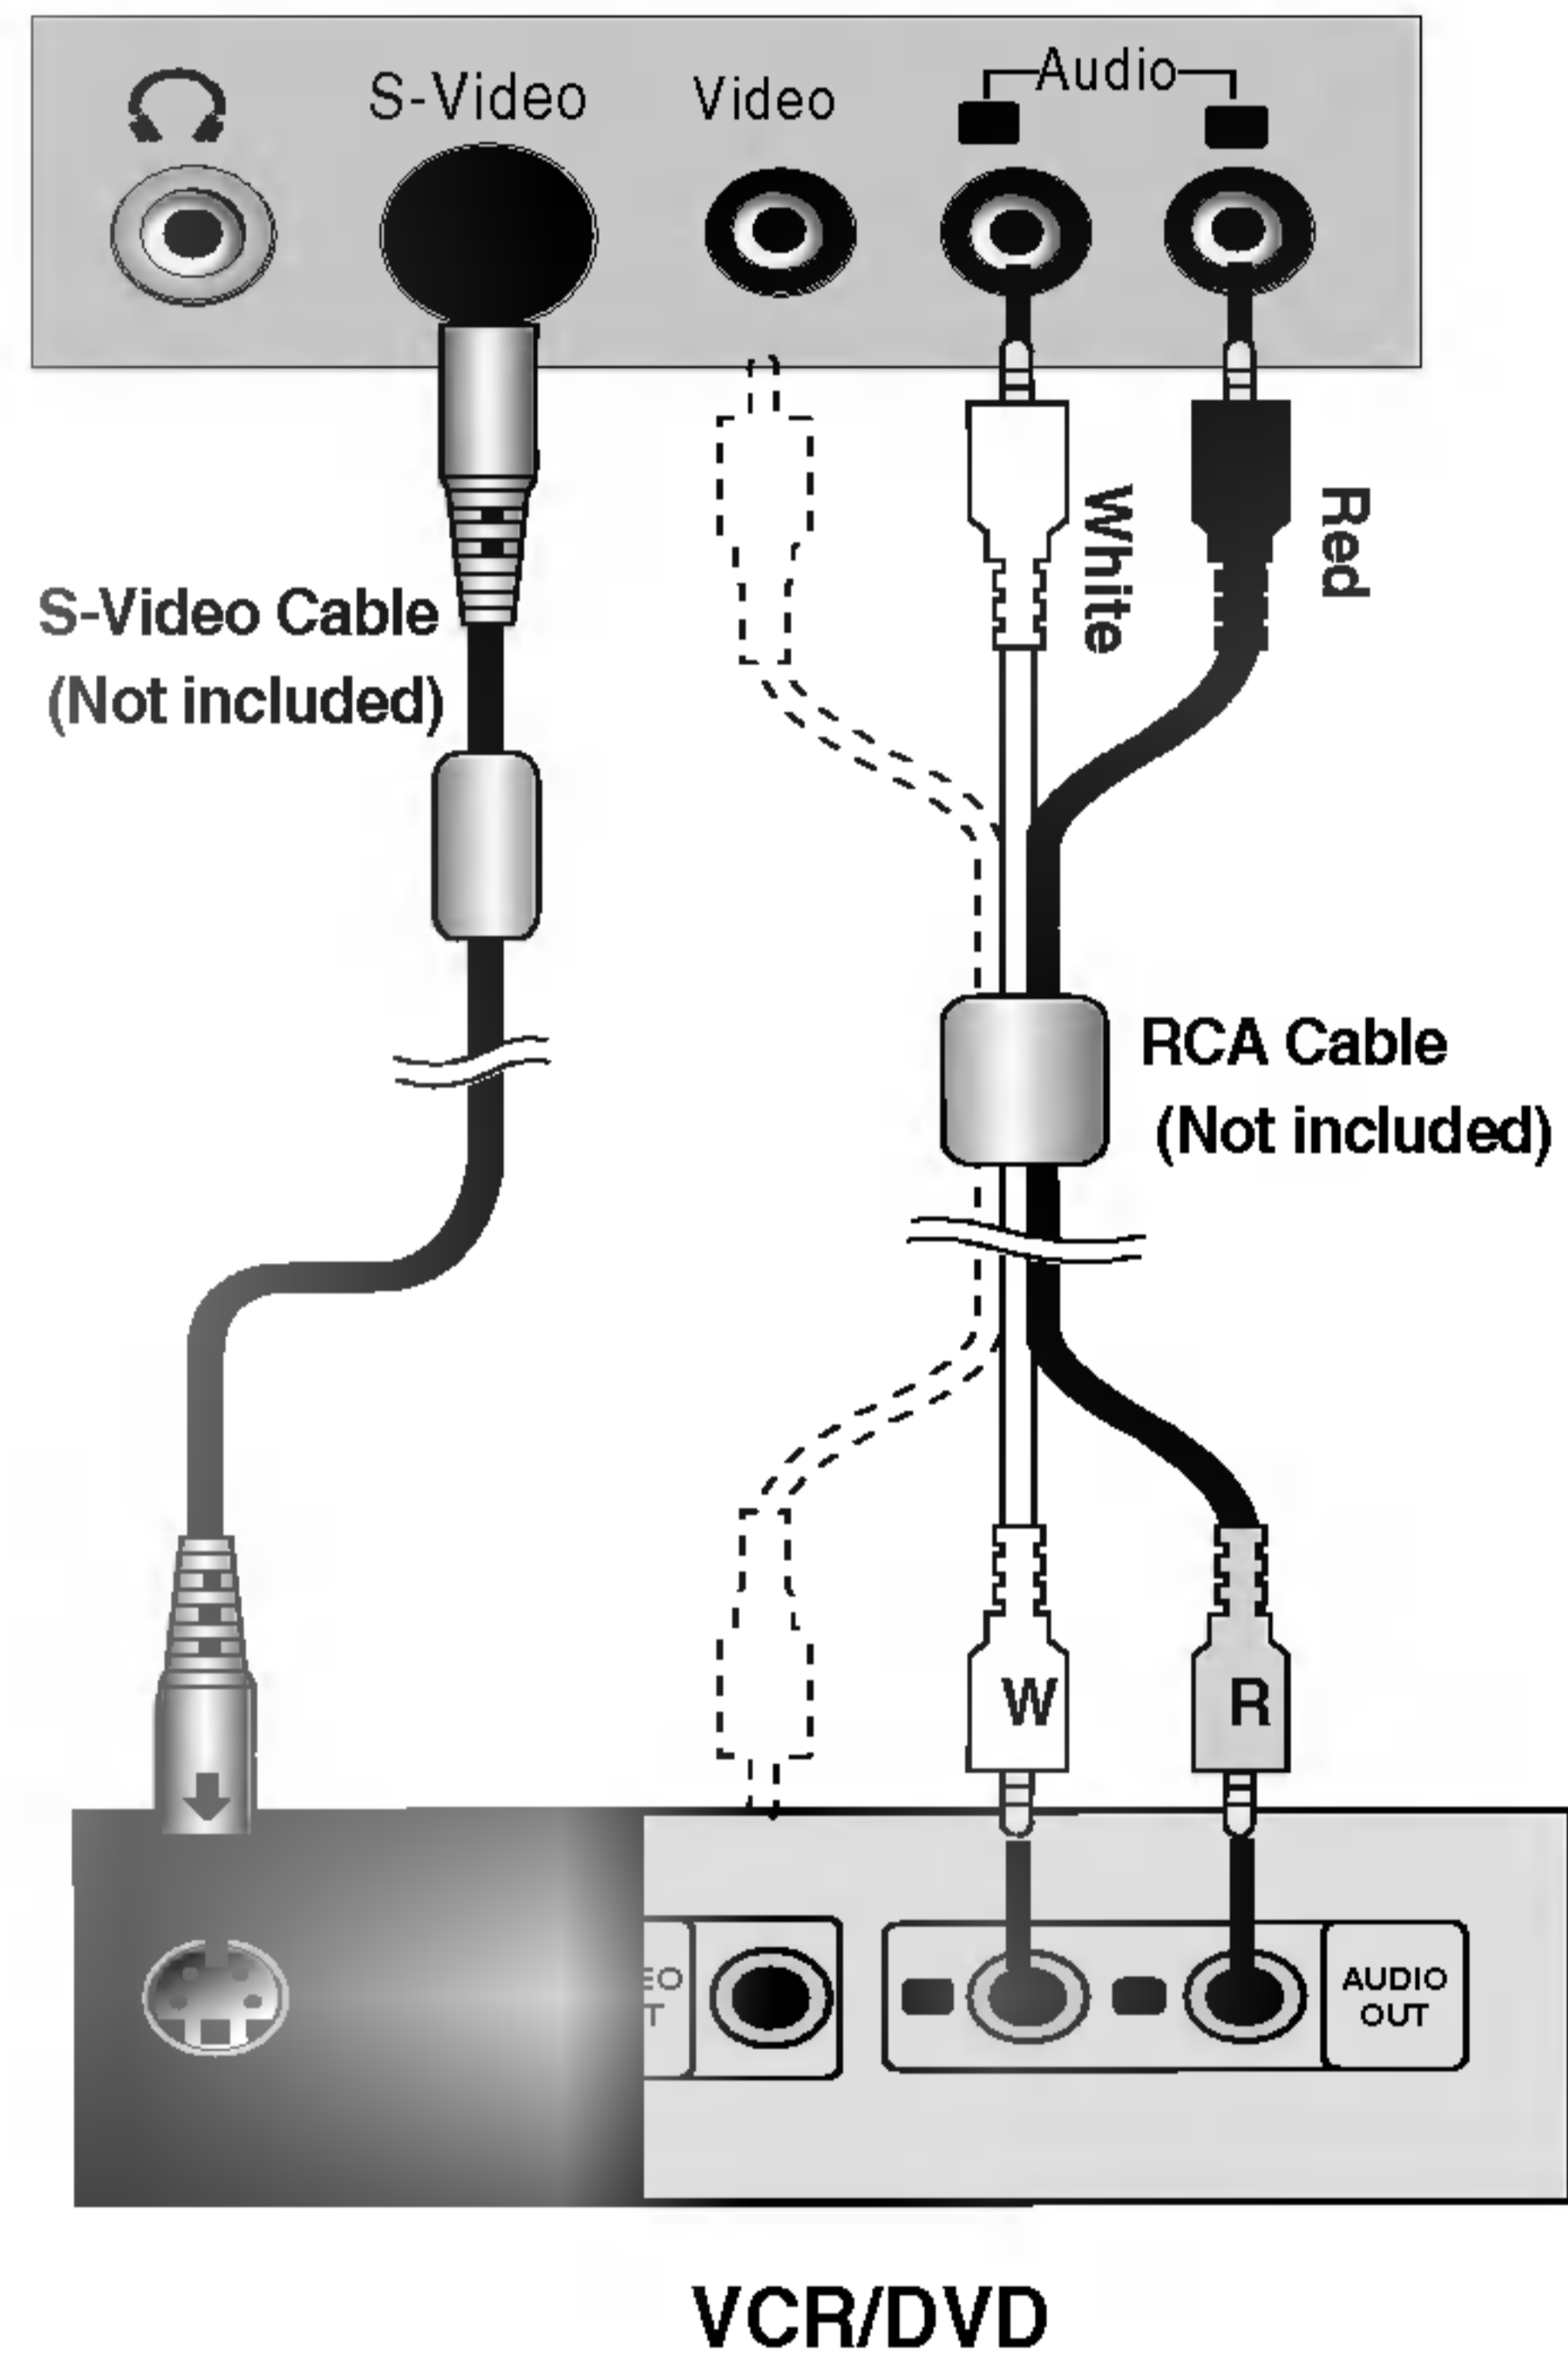




**2** Select an input signal.  
 Press the multimedia button on the remote control to select the input signal.


multimedia → ▼▲ → enter

Or, press the SOURCE button at the front side of the product.


SOURCE → ▼▲ → AUTO/SELECT

- A** When connecting with a RCA cable.  
 • Select Video
- B** When connecting with a S-Video cable.  
 • Select S-Video

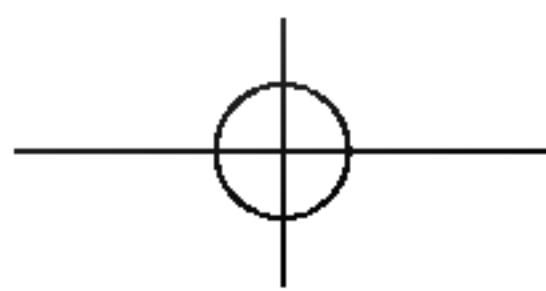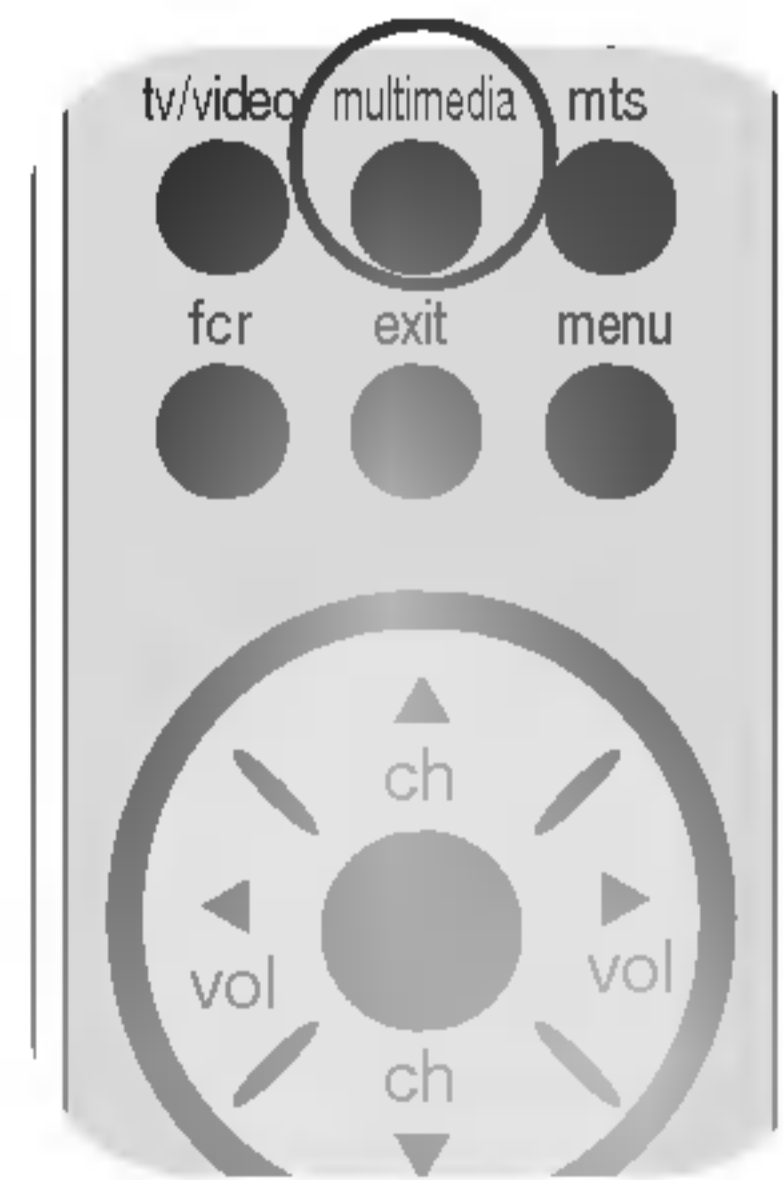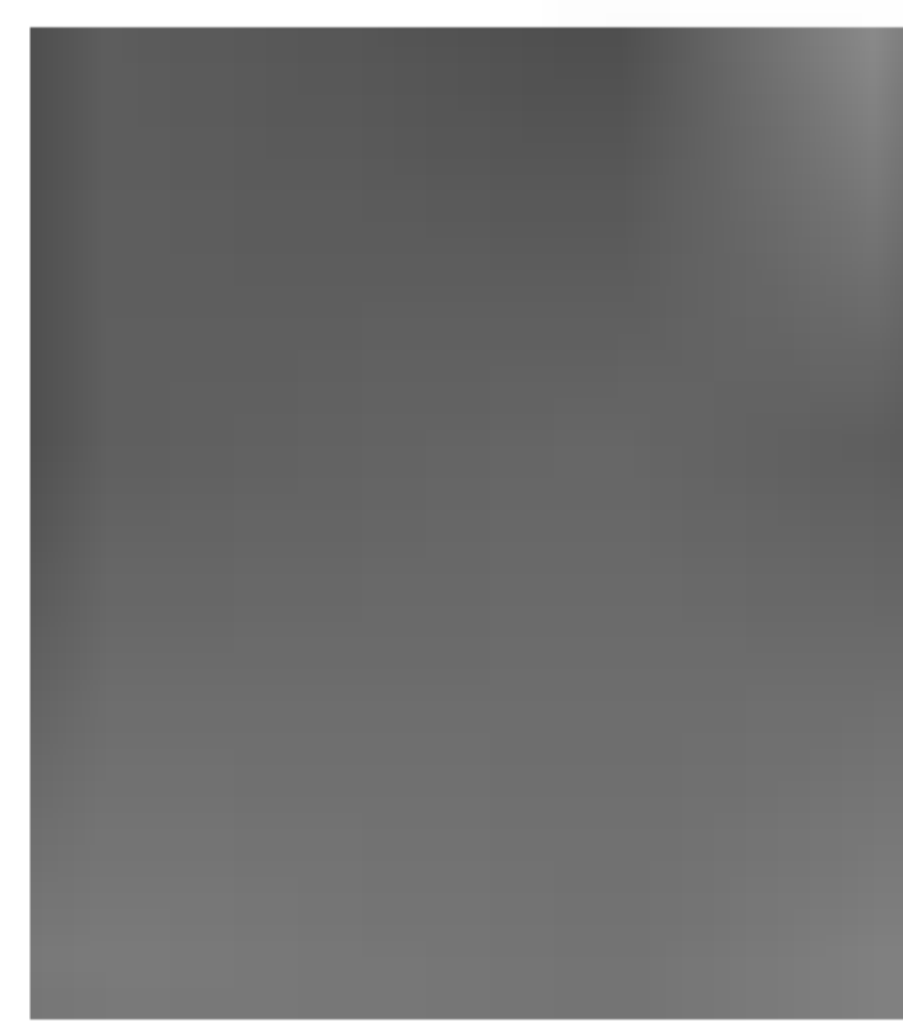

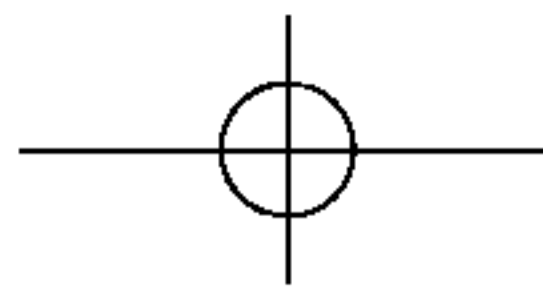

- 1 See if the antenna cable is connected at the rear side of the product and then, connect the power cord.

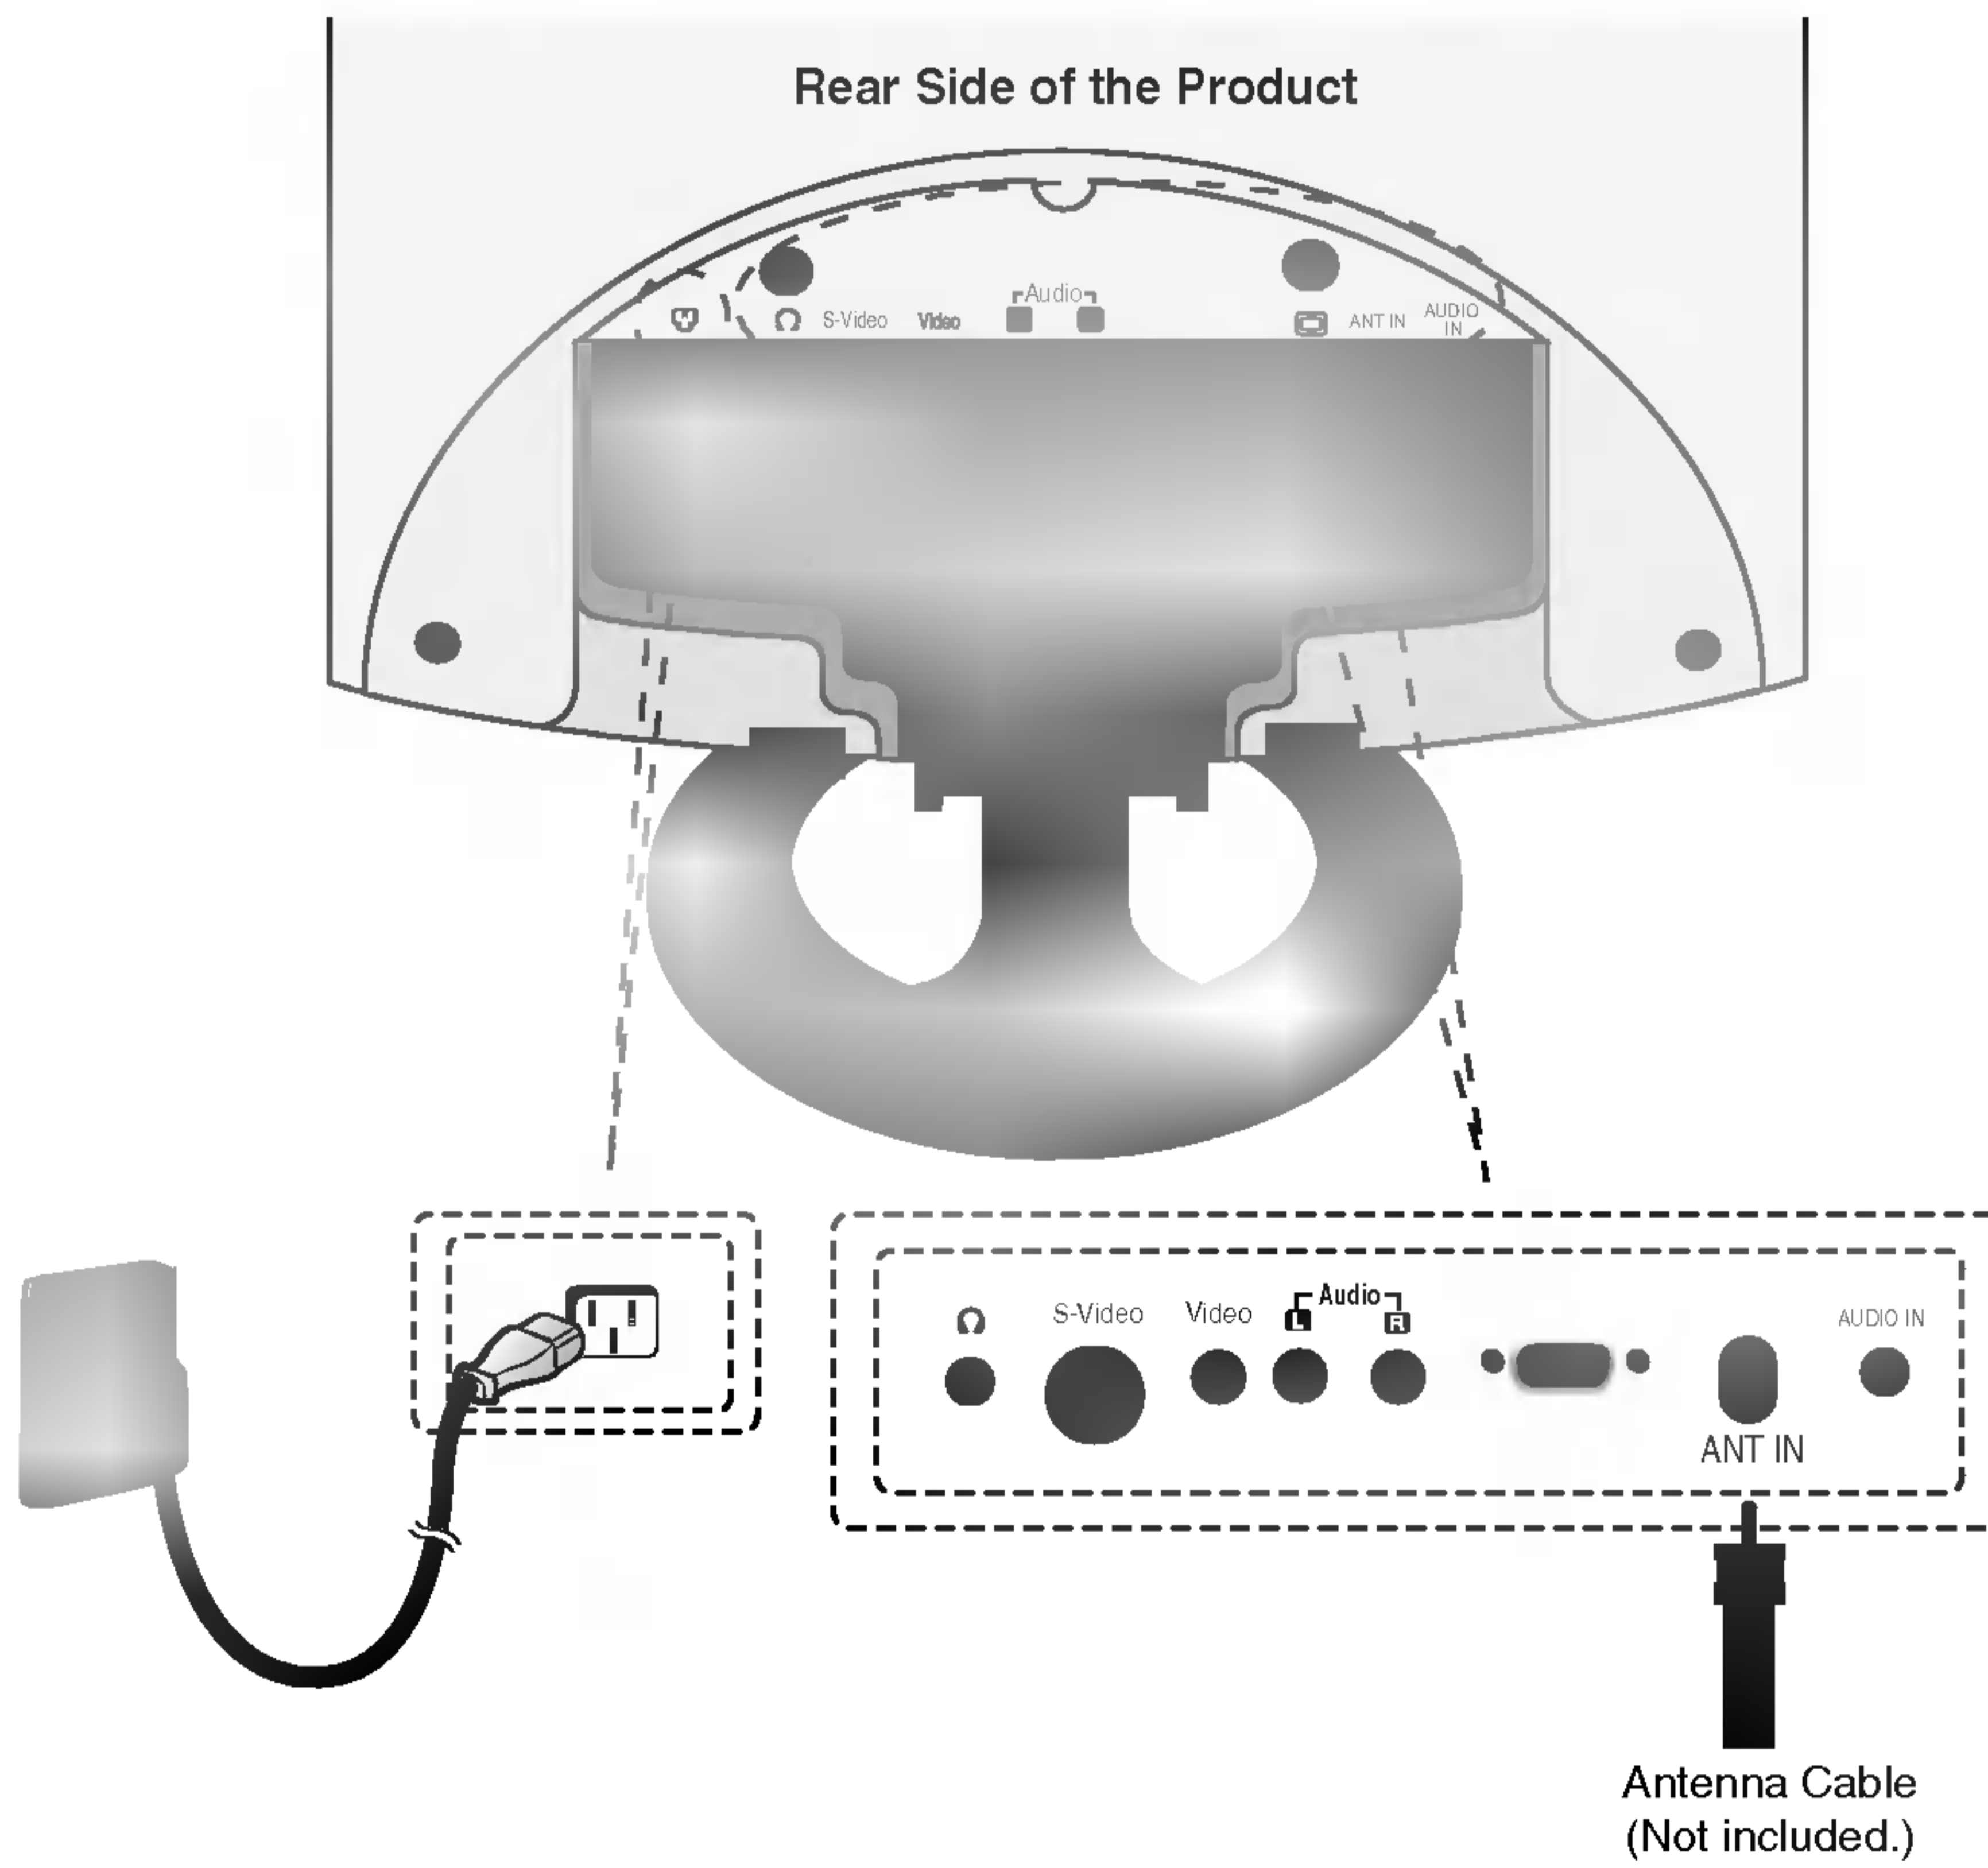



- 2 Select an input signal.  
Press the multimedia button on the remote control to select the input signal.


multimedia → ▼▲ → enter

Or, press the SOURCE button at the front side of the product.

SOURCE → ▼▲ → AUTO/SELECT


- Select TV

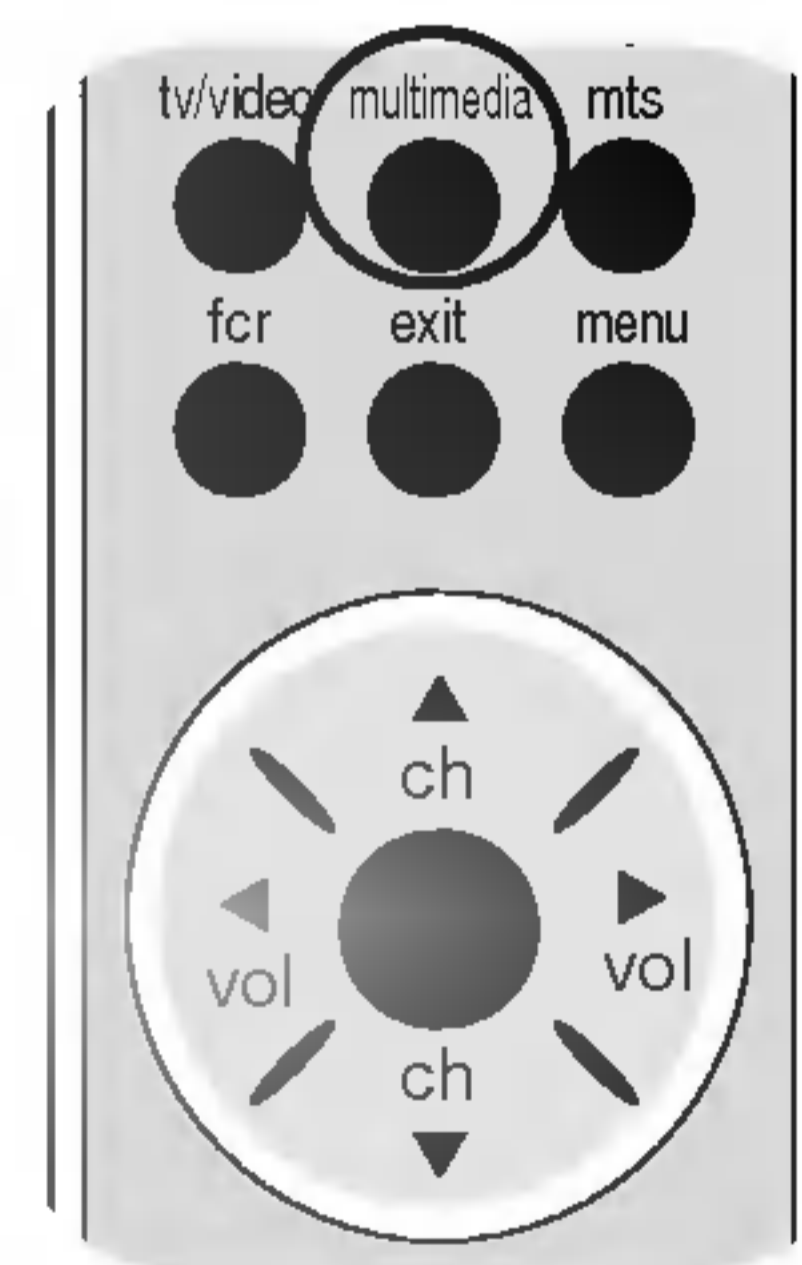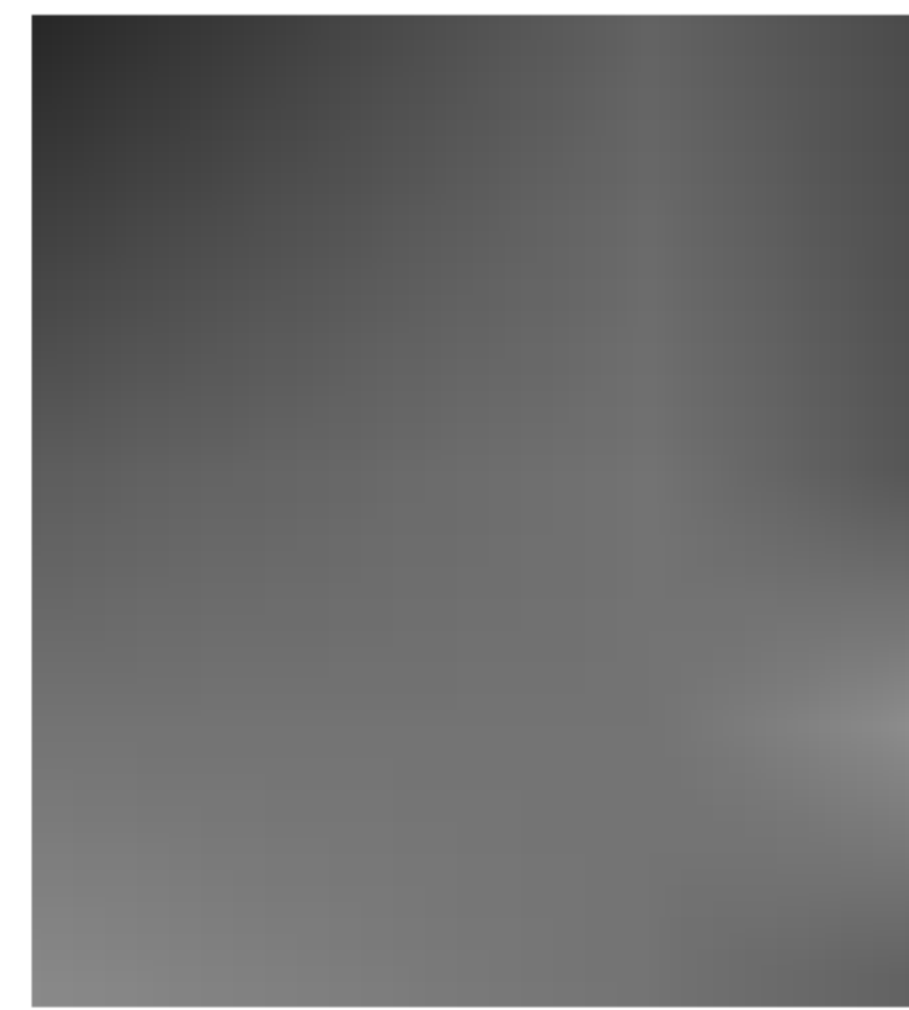

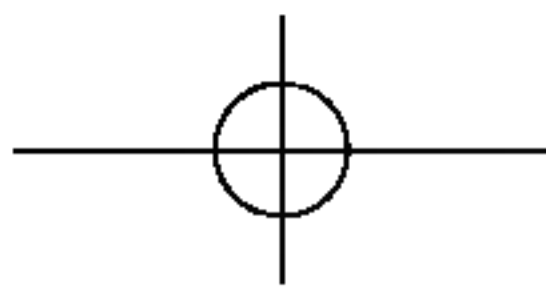



# Selecting and Adjusting the Screen

## ● Name of the Buttons in the Screen Adjustment Unit

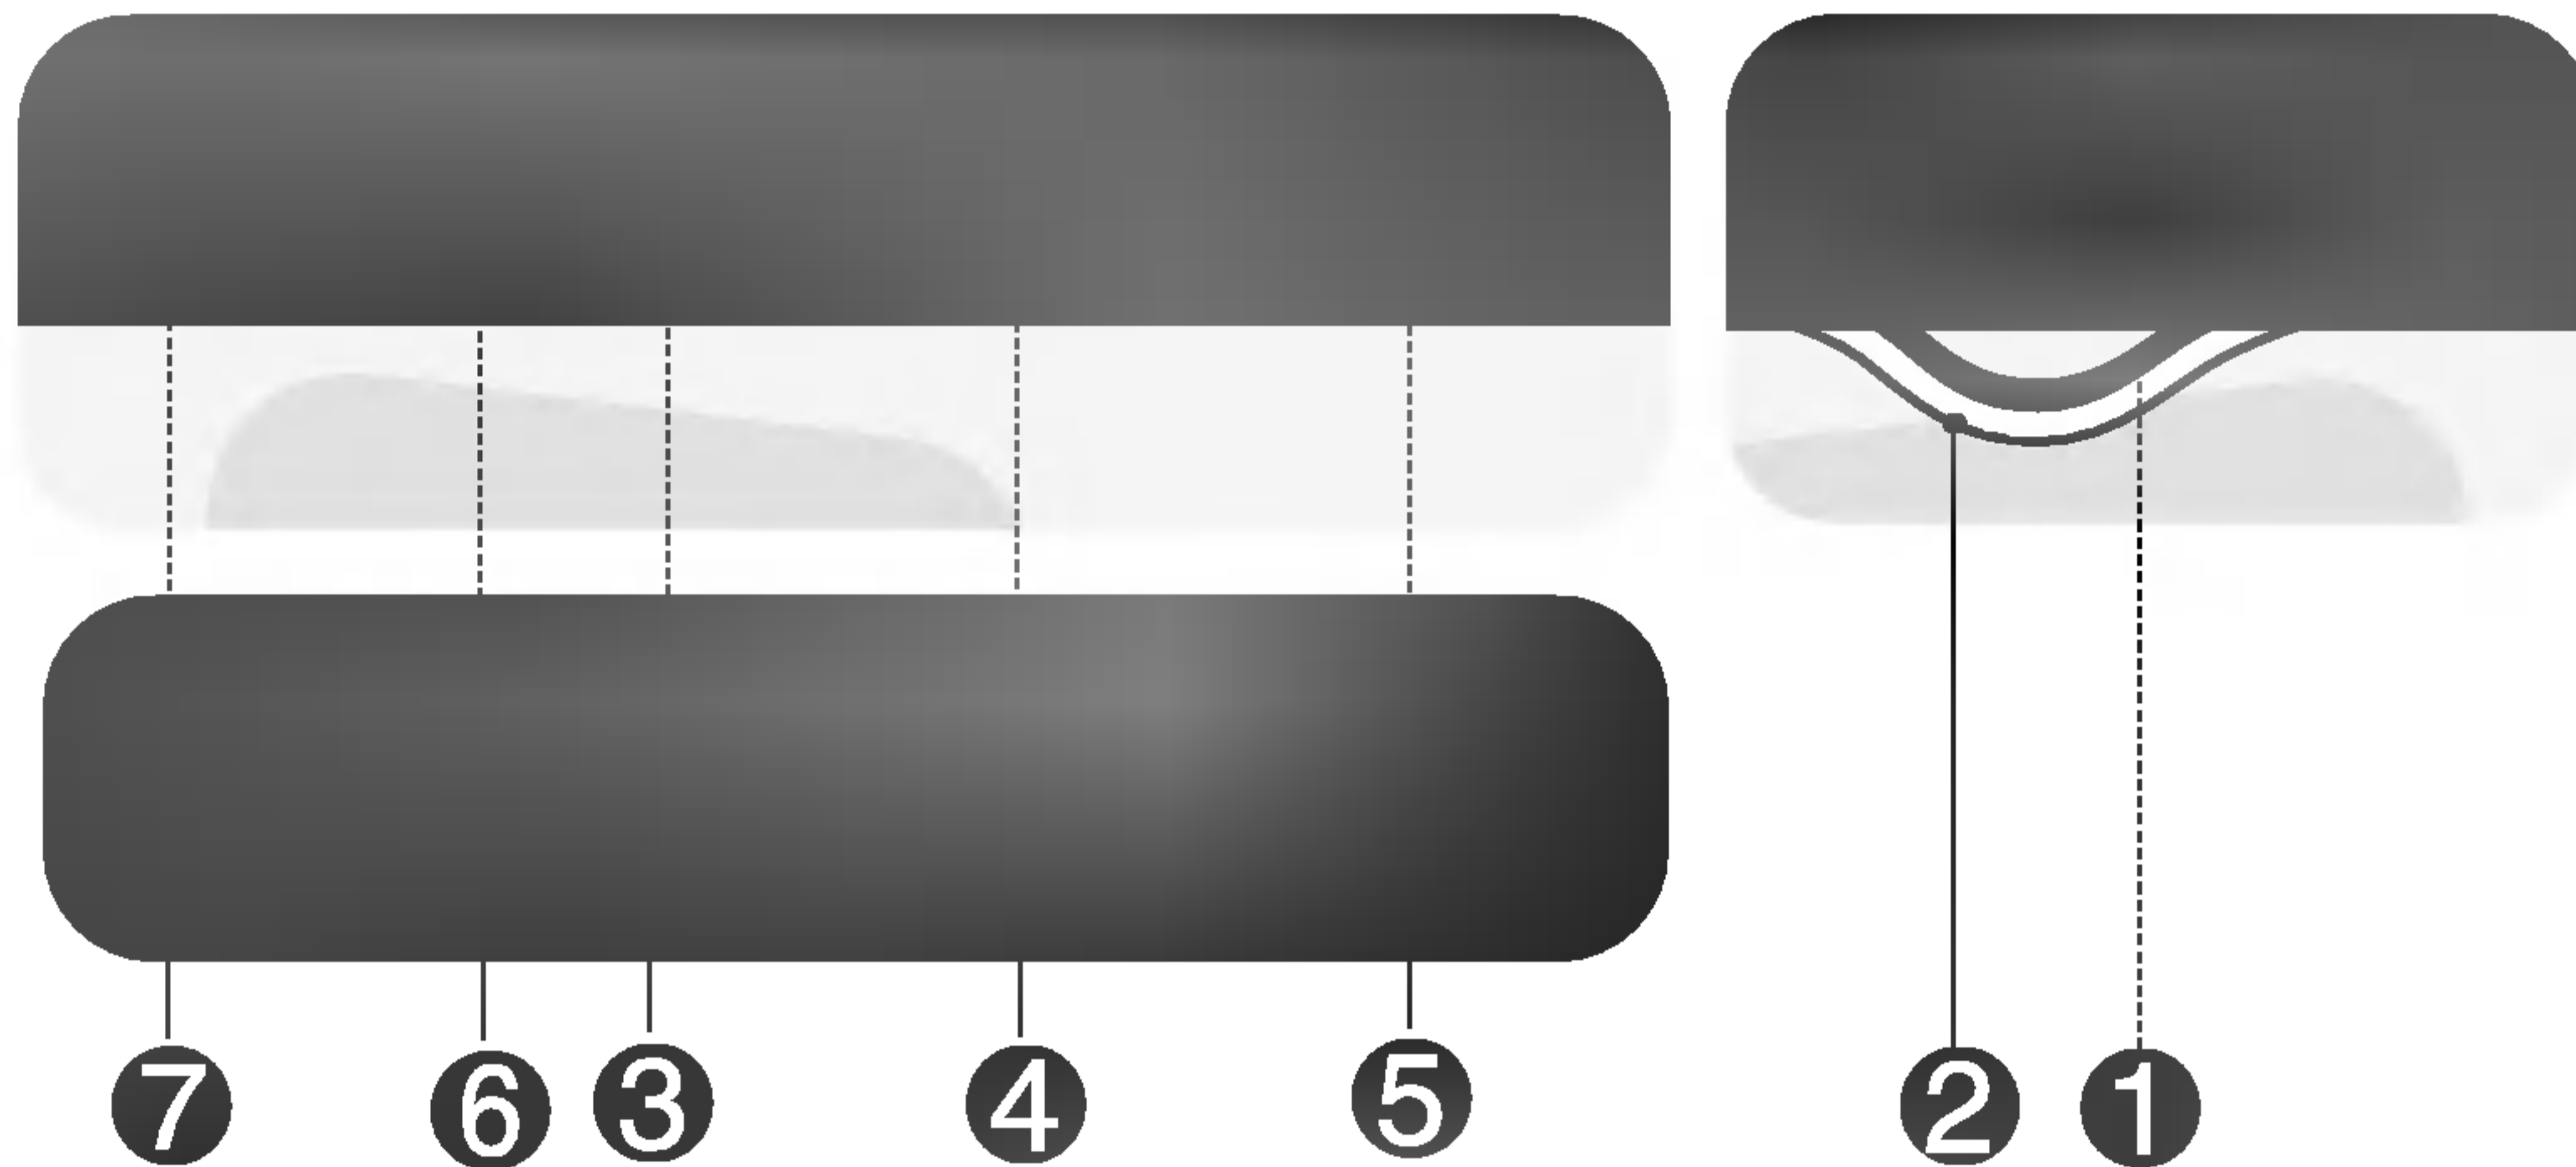

- 1** **Power Indicator** • This Indicator lights up blue when the display operates normally (On Mode). If the display is in Sleep (Energy Saving) Mode, this indicator color changes to amber.
- 2** **Power On/Off sensor** • Touch the Power On/Off sensor.
- 3** **MENU Button** • Use this button to show/hide the OSD (On Screen Display) menu screen.
- 4** **OSD Select/Adjust Button** • Use this button to select an icon or adjust the setting in the OSD screen.
- ▼▲ • Use this button to control the channel for the TV signal.
- ◀▶ • Adjust the volume.

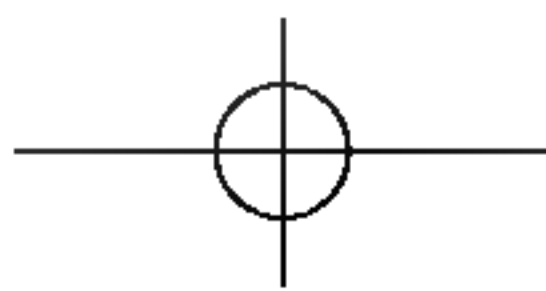

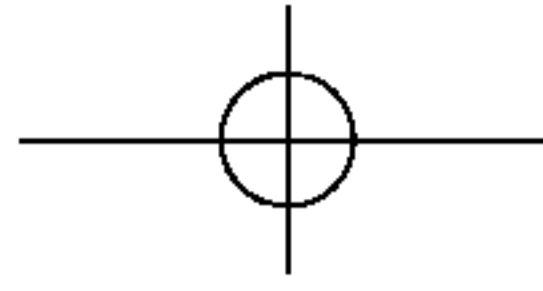

## ● Name of the Buttons in the Screen Adjustment Unit

5

### AUTO/SELECT Button

- Select the icon to adjust on the OSD screen.

[For PC Analog signal]

- If you press the [AUTO/SELECT] button, automatic screen adjustment will be started.




6

### SOURCE Button


**SOURCE** → ▼▲ → **AUTO/SELECT**

- Select the input signal


TV	Television
Video	Composite video
S-Video	S-Video
PC	D-Sub analog signal

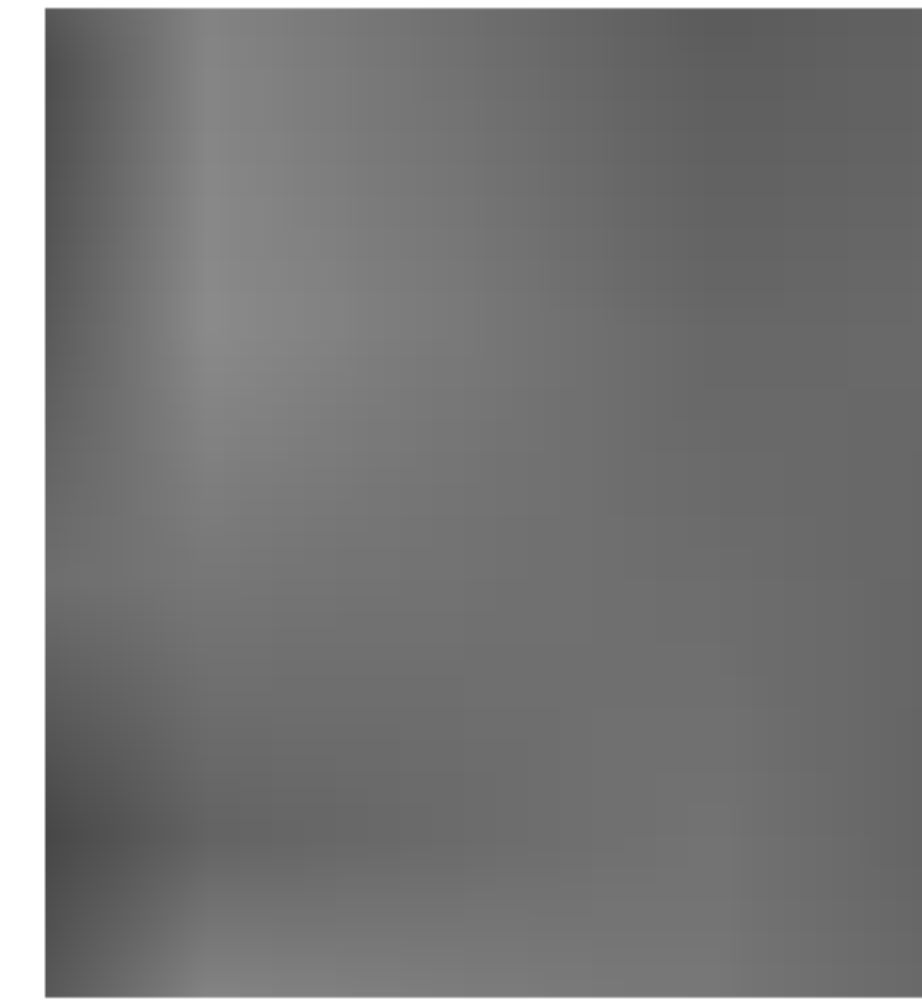


7

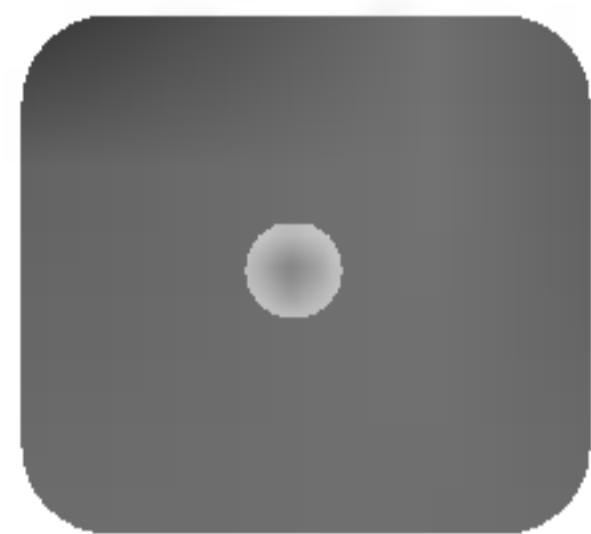

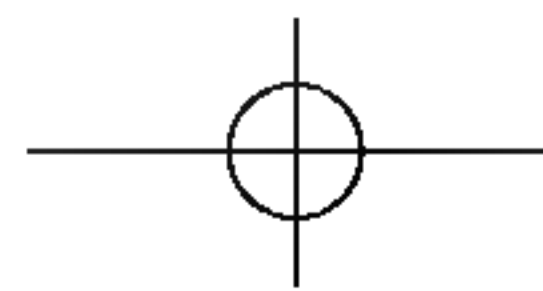


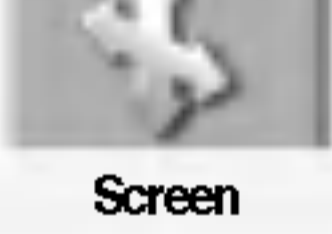


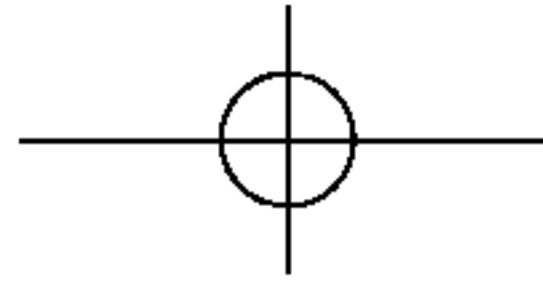- The unit that receives the signal from the remote control.





## OSD (On Screen Display) Menu


Icon	Function Description
 Channel	Set/Select the channel when using the TV
 Picture	Adjusting the picture function.
 Sound	Adjusting the sound function.
 Timer	Adjusting the time function.
 Special	Selecting the setup function.
 Screen	Adjusting the screen function (PC only)




### Note


#### OSD(On Screen Display)

The OSD function enables you to adjust the screen status conveniently since it provides graphical presentation.

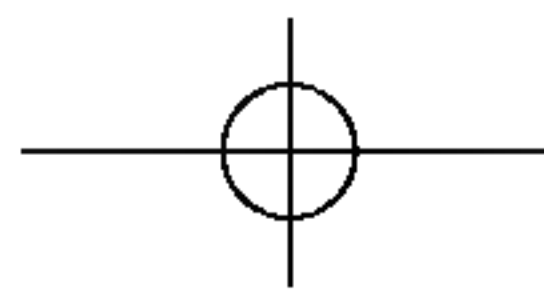

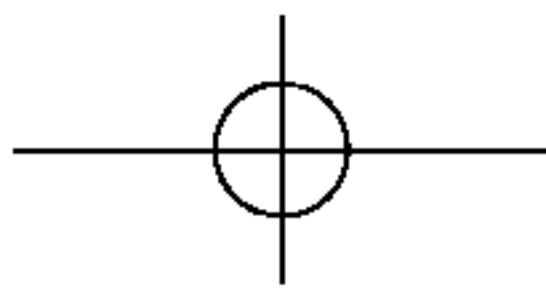

## ● OSD (On Screen Display) Screen Tracking Order

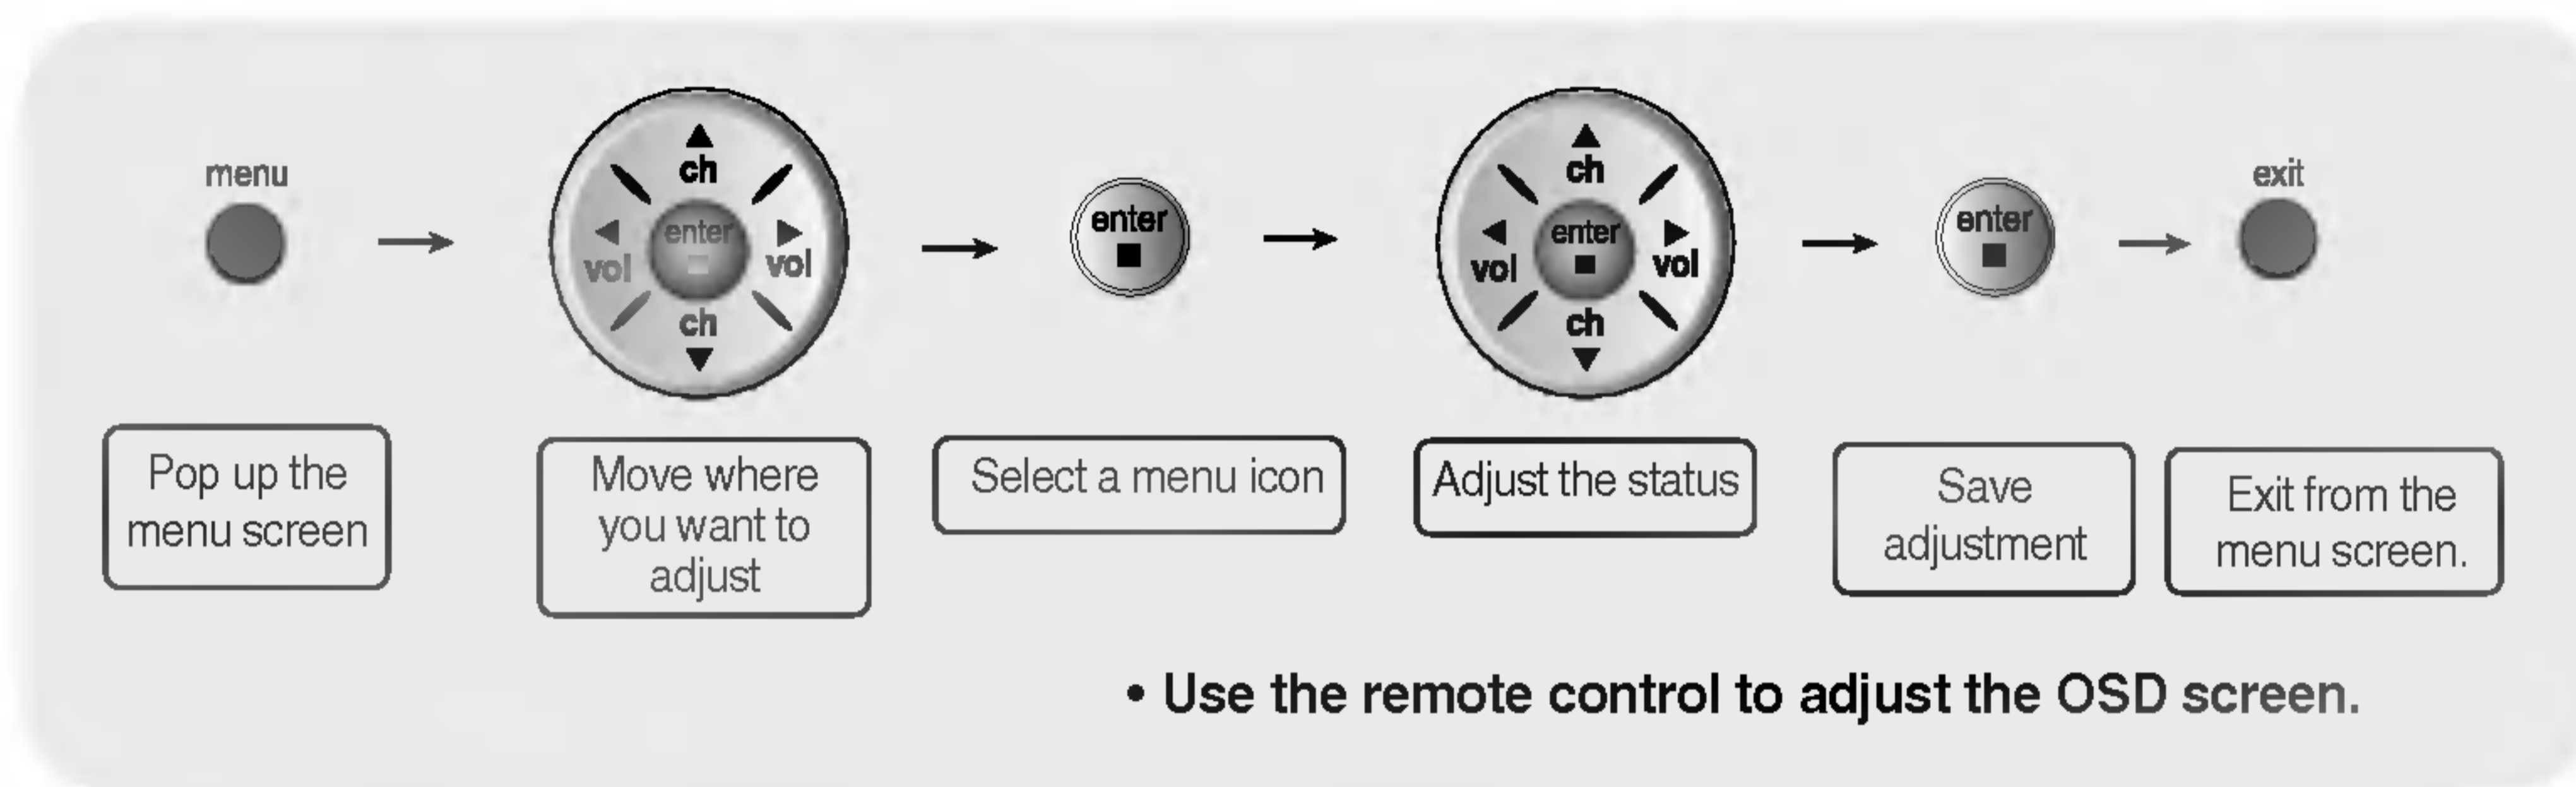

Press the **Menu** Button, then the main menu of the OSD appears.

To access a control, use the **▼ ▲** Buttons.

When the icon you want becomes highlighted, press the **enter** Button.

Use the **▼ ▲ ◀ ▶** Buttons to adjust the item to the desired level.

Accept the changes by pressing the **enter** Button.


Exit the OSD by pressing the **exit** Button.


## ● How to adjust the screen automatically.

You need to adjust the screen display when connecting the monitor to a new computer or changing the mode. Refer to the following section to set an optimal monitor screen.


Press the **AUTO/SELECT** button in the PC analog signal. Then, an optimal screen status will be selected that fits into the current mode.

If adjustment is not satisfactory, you need to adjust screen position, clock and phase in the OSD menu.

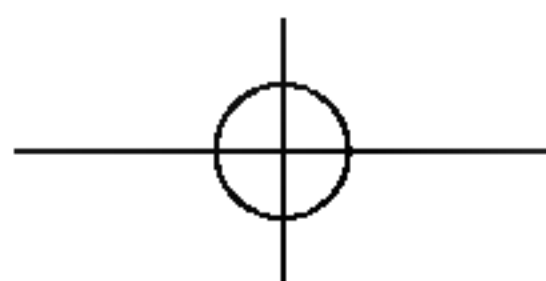

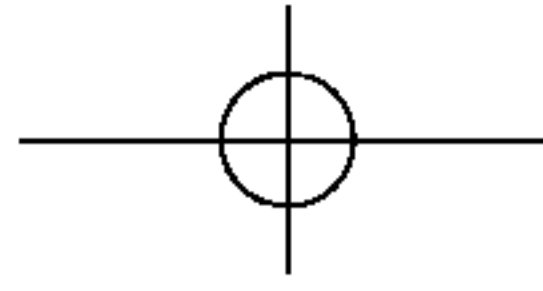

## Set/Select the channel when using the TV

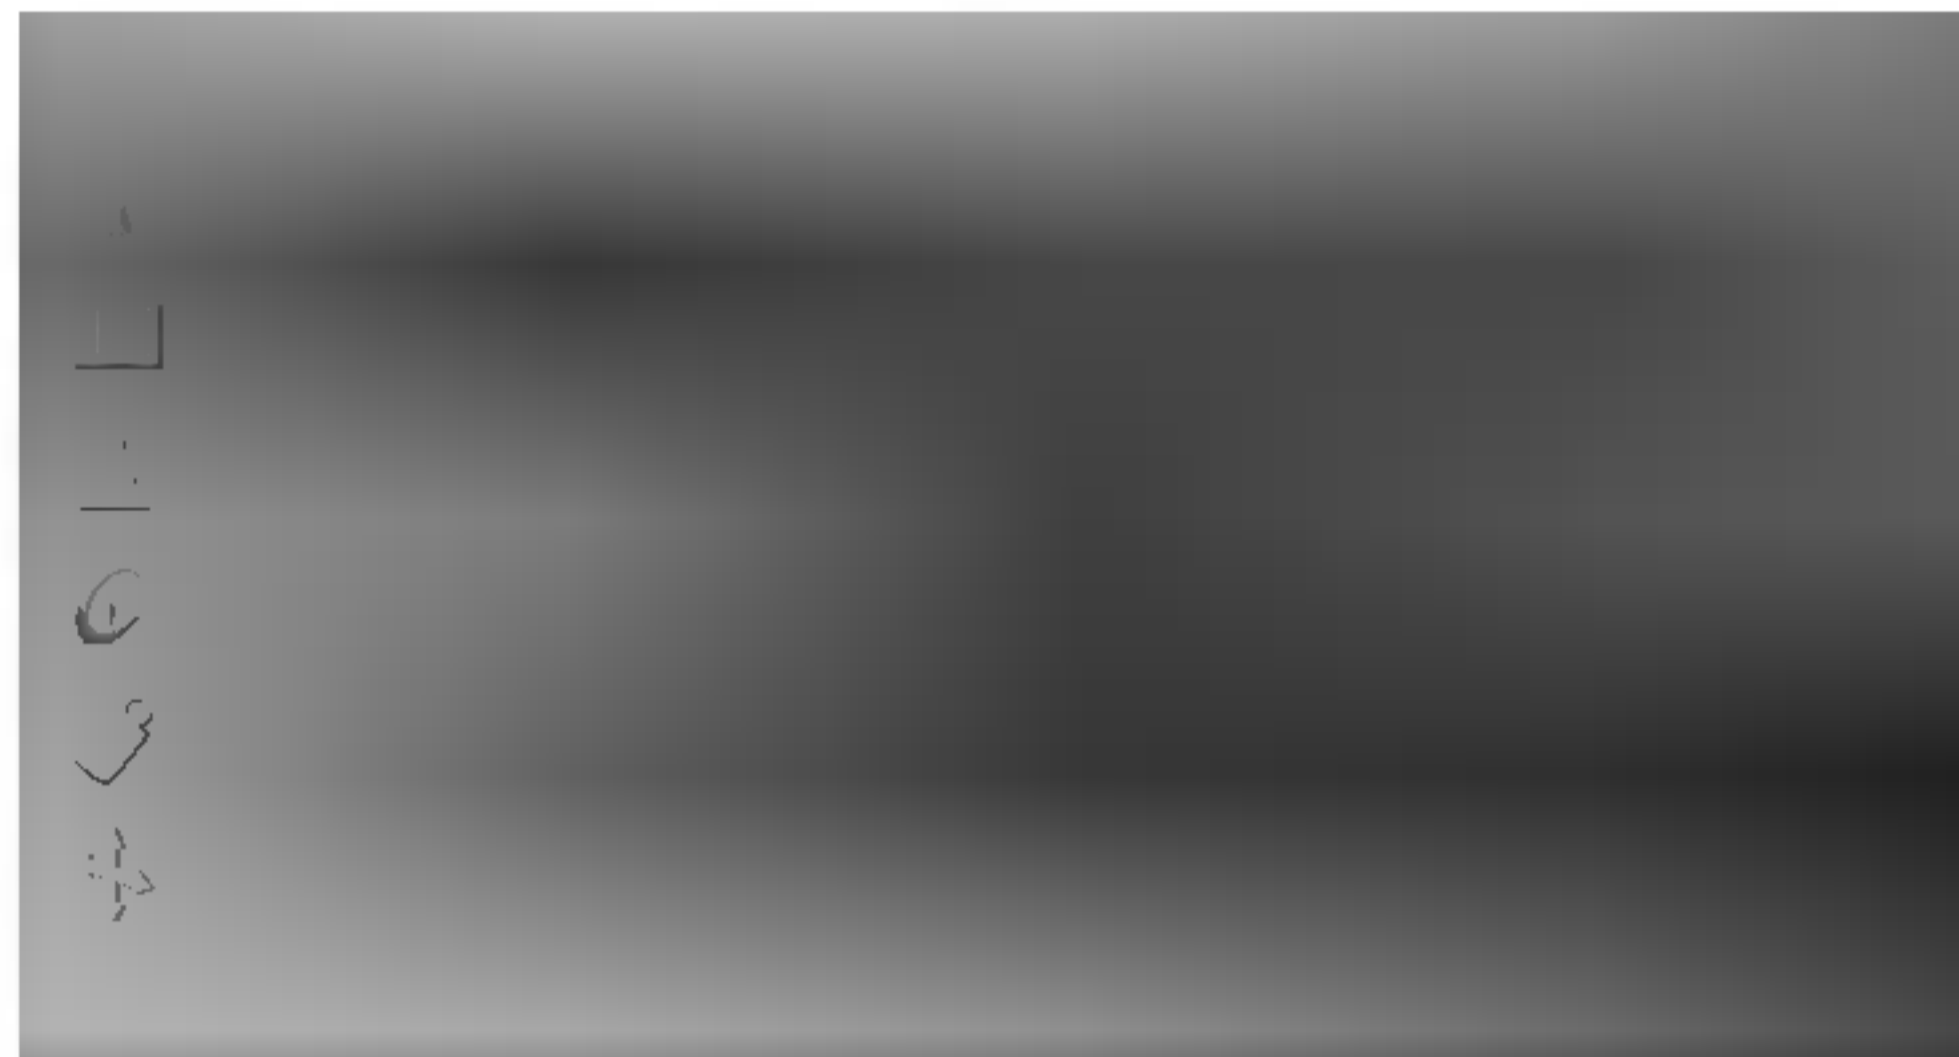

### EZ Scan

Press **▶** button to start automatic programming. All available TV channels are searched and stored automatically.

To stop auto CH progress, press the **menu** or **enter** button.

- Wait for auto CH progress to complete the channel search cycle before choosing a channel. The TV scans for over-the-air channels and then channels are provided by a cable service.

### Manual prog.

User can do manual channel selection and store or erase individual channels.


Press **▶** button and then use **◀ ▶** button to select a channel you want to add to memory or erase. Press the **▼** button and then use **◀ ▶** button to select **Memory(add)** or **Erase(delete)**.



### Favorite Ch.

This function lets you select your favourite channels directly.

Press the **▼▲◀▶** buttons to select a channel number.


\* **for Button (remote control)** : Rotate Favourite channel.

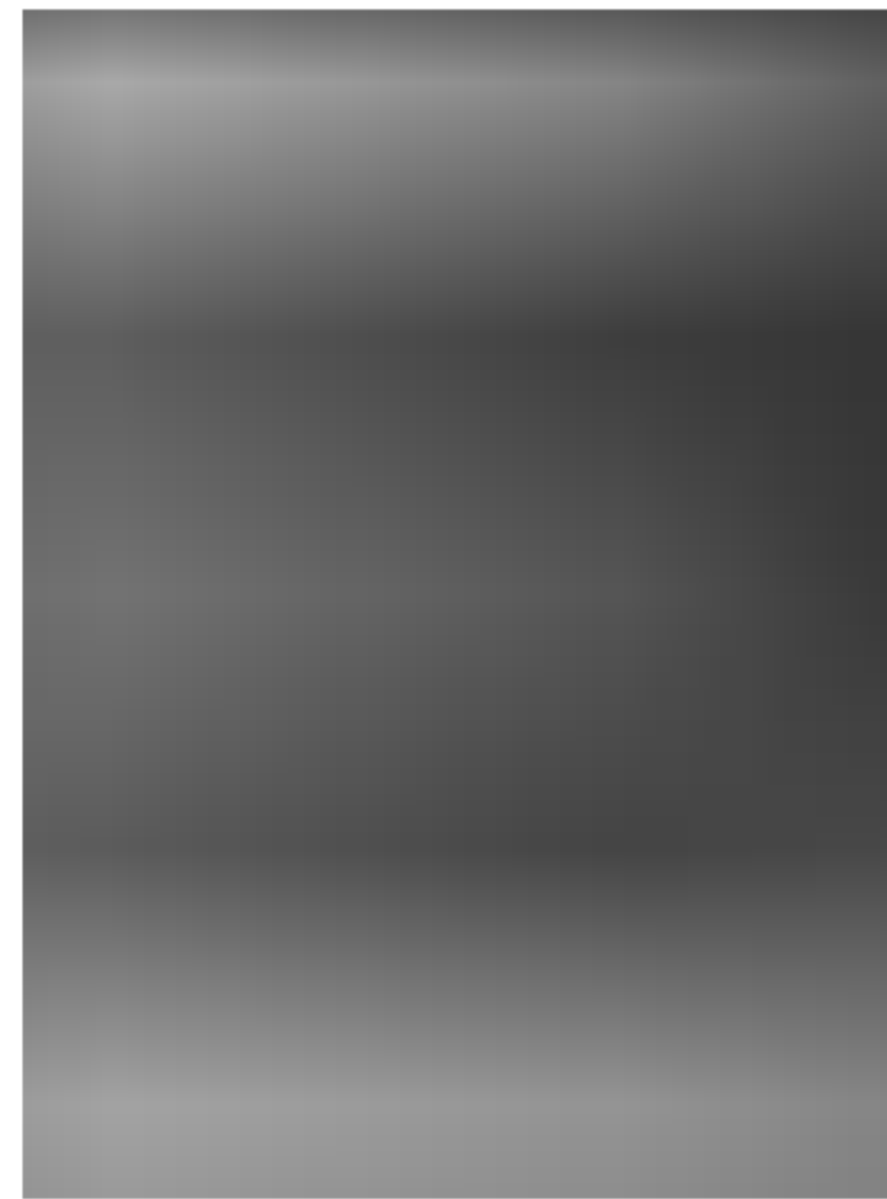

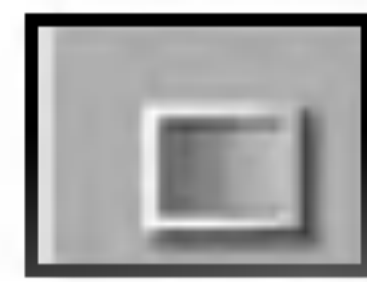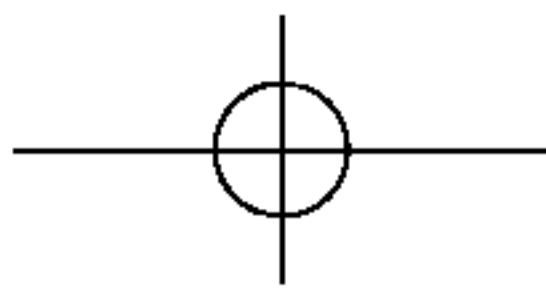

## Adjusting the picture function (PC)

### EZ Video

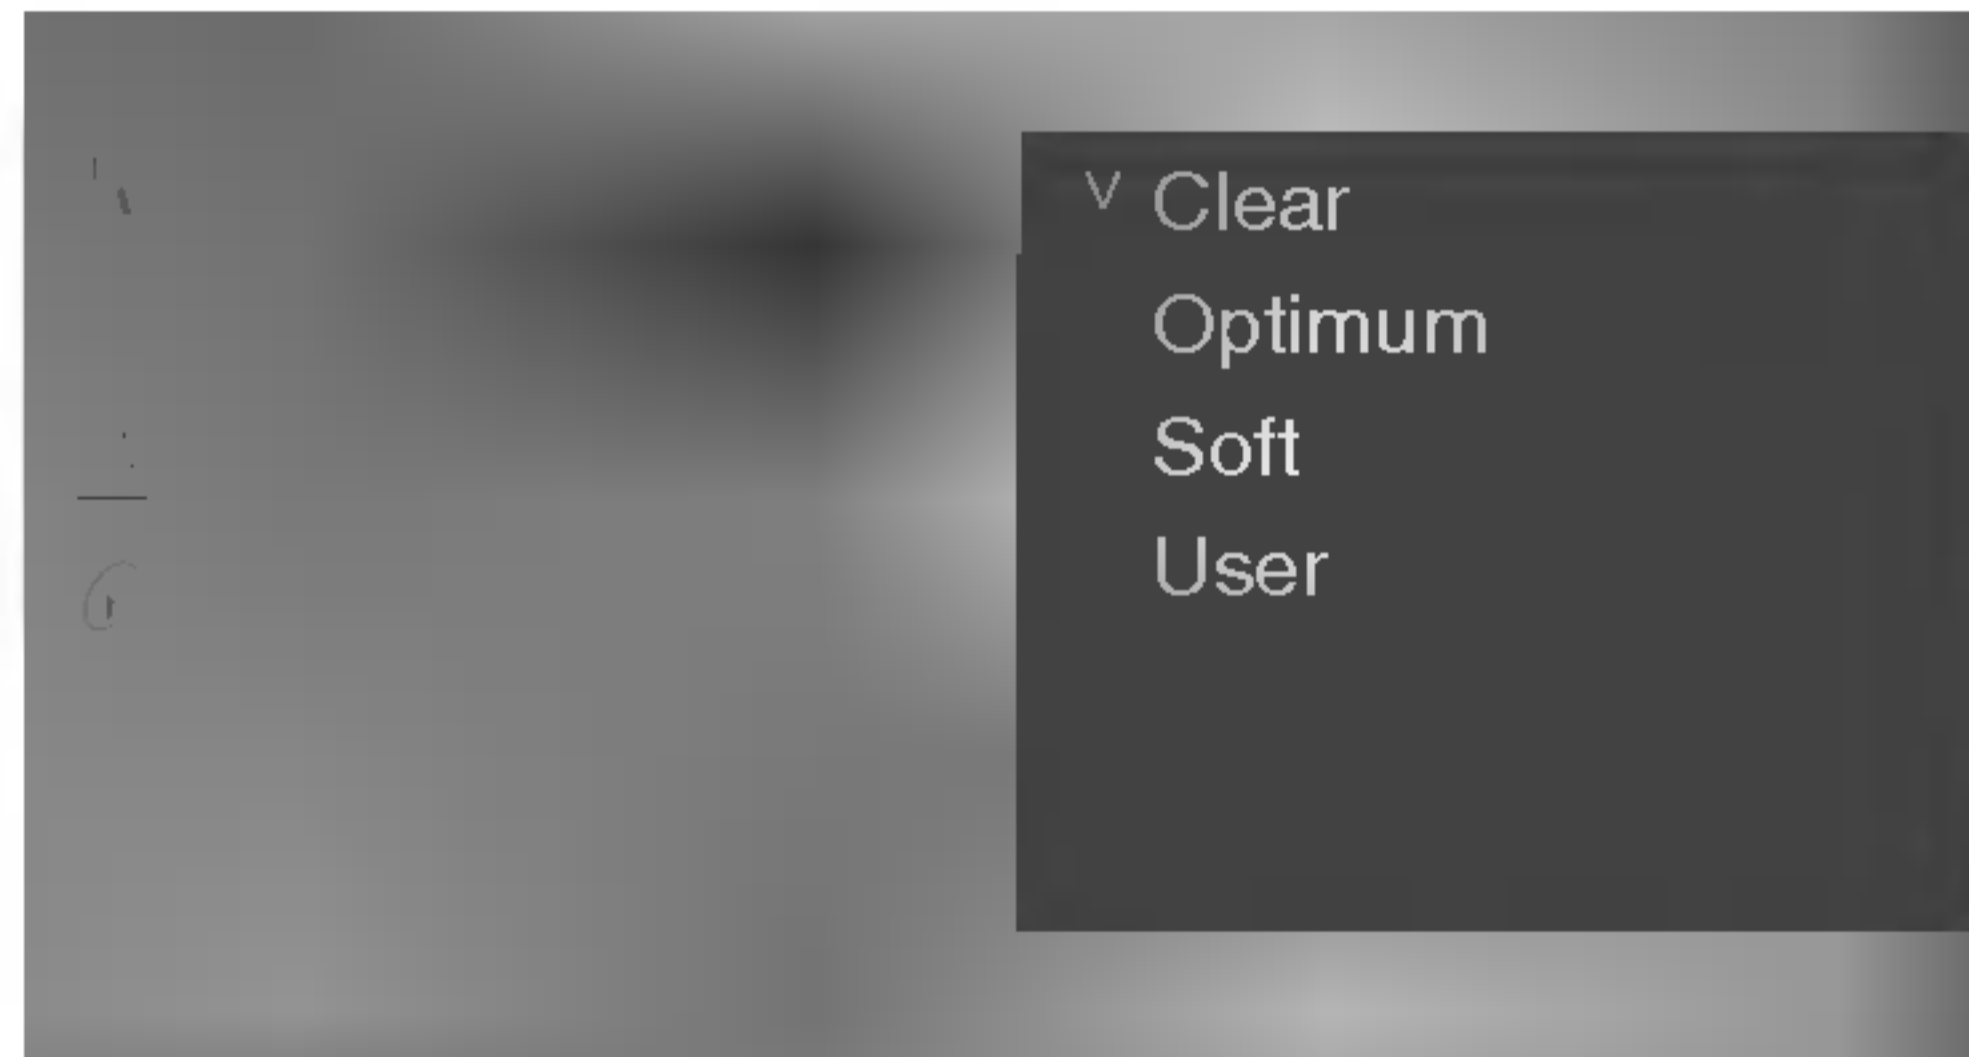

The **EZ Video** function automatically adjusts the screen image quality.

- **Clear**  
Select this option to display with a sharp image.
- **Optimum**  
The most general and natural screen display status.
- **Soft**  
Select this option to display with a mild image.
- **User**  
Select this option to use the user-defined settings.


### ACC



Selecting a factory setting color set.

- **Cool**  
Slightly purplish white.
- **Normal**  
Slightly bluish white.
- **Warm**  
Slightly reddish white.
- **User**  
Select this option to use the user-defined settings.  
**Red / Green / Blue**  
Set your own color levels.

### FLATRON f·ENGINE

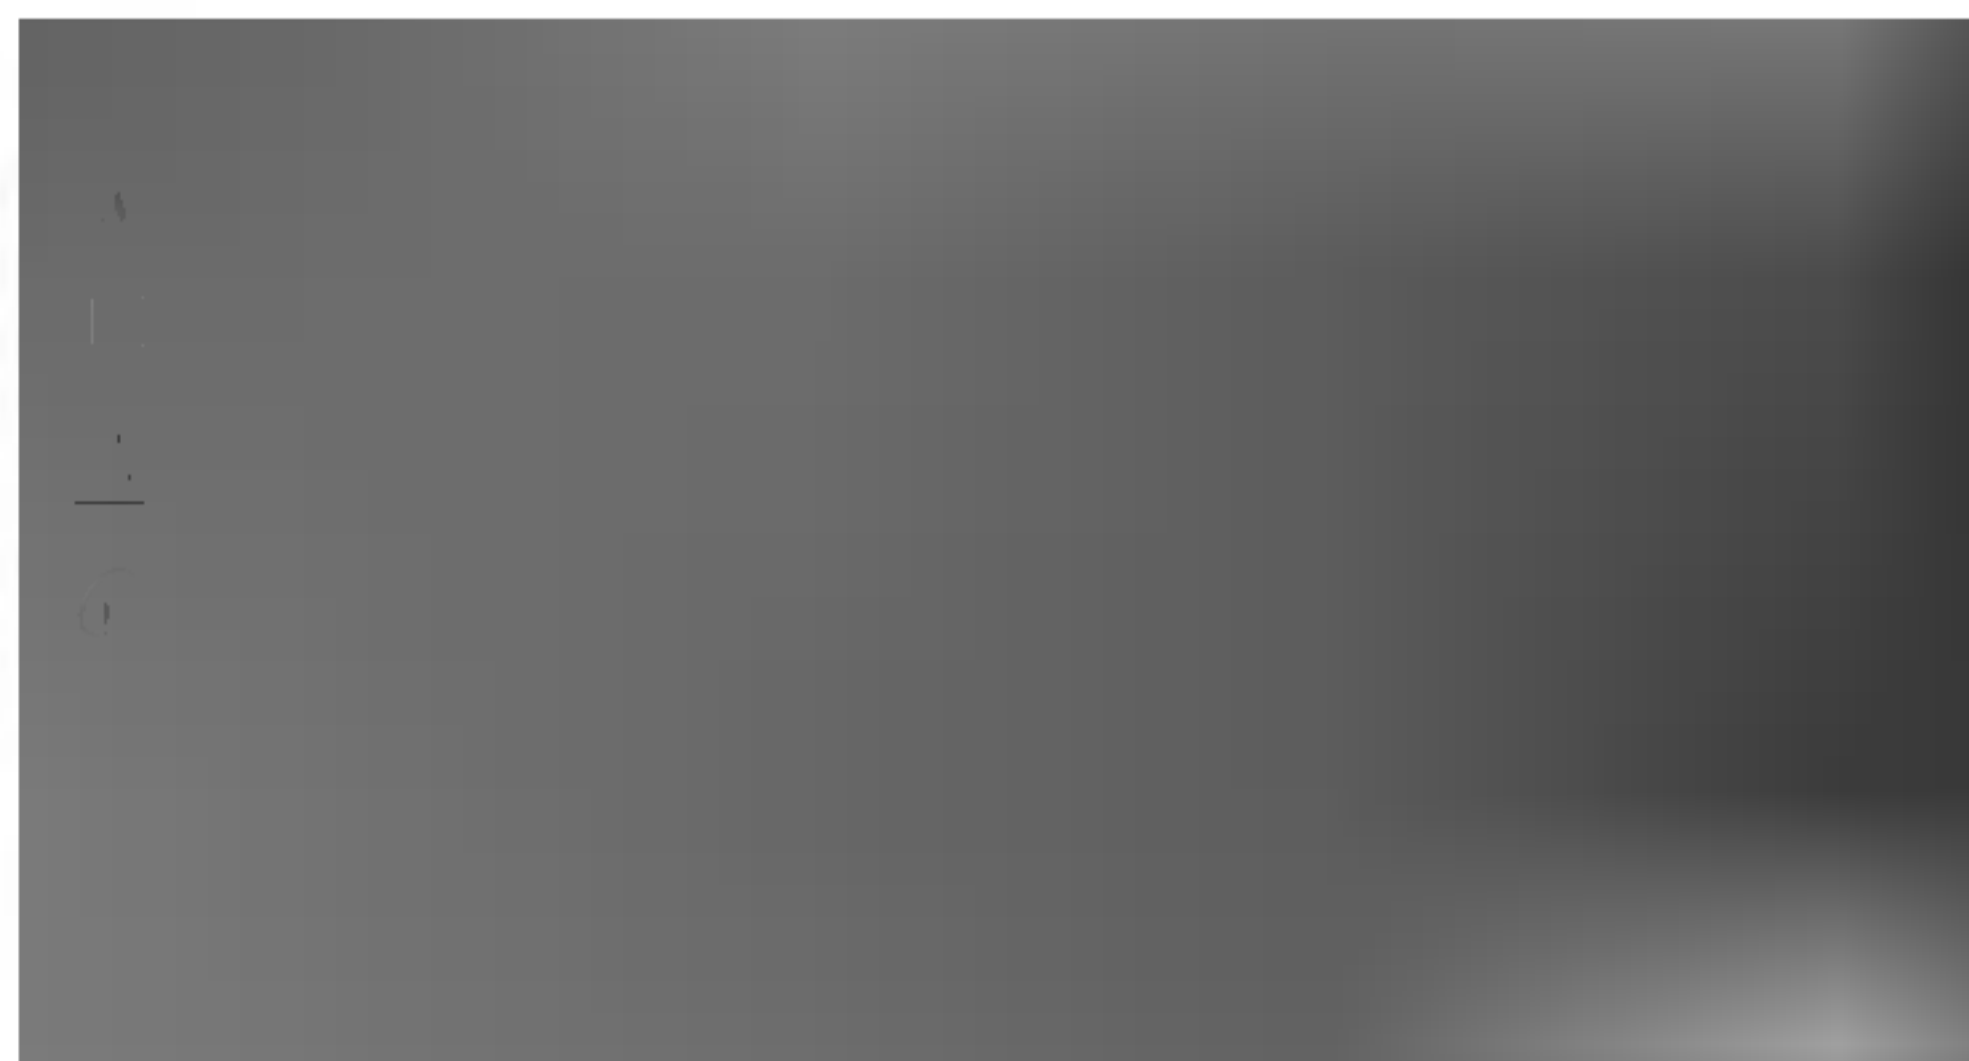



This feature lets you easily select the best desired image condition optimized to the environment



**Contrast** : To adjust the contrast of the screen.


**Brightness** : To adjust the brightness of the screen.



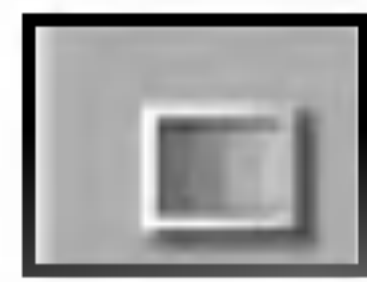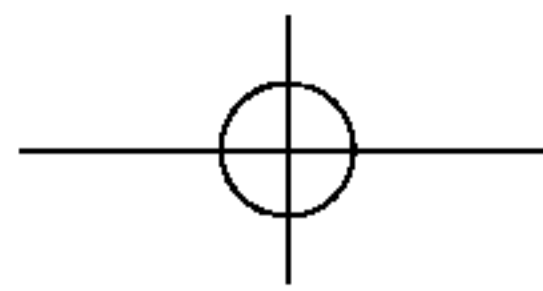

## Adjusting the picture function (TV/Video)


### EZ Video

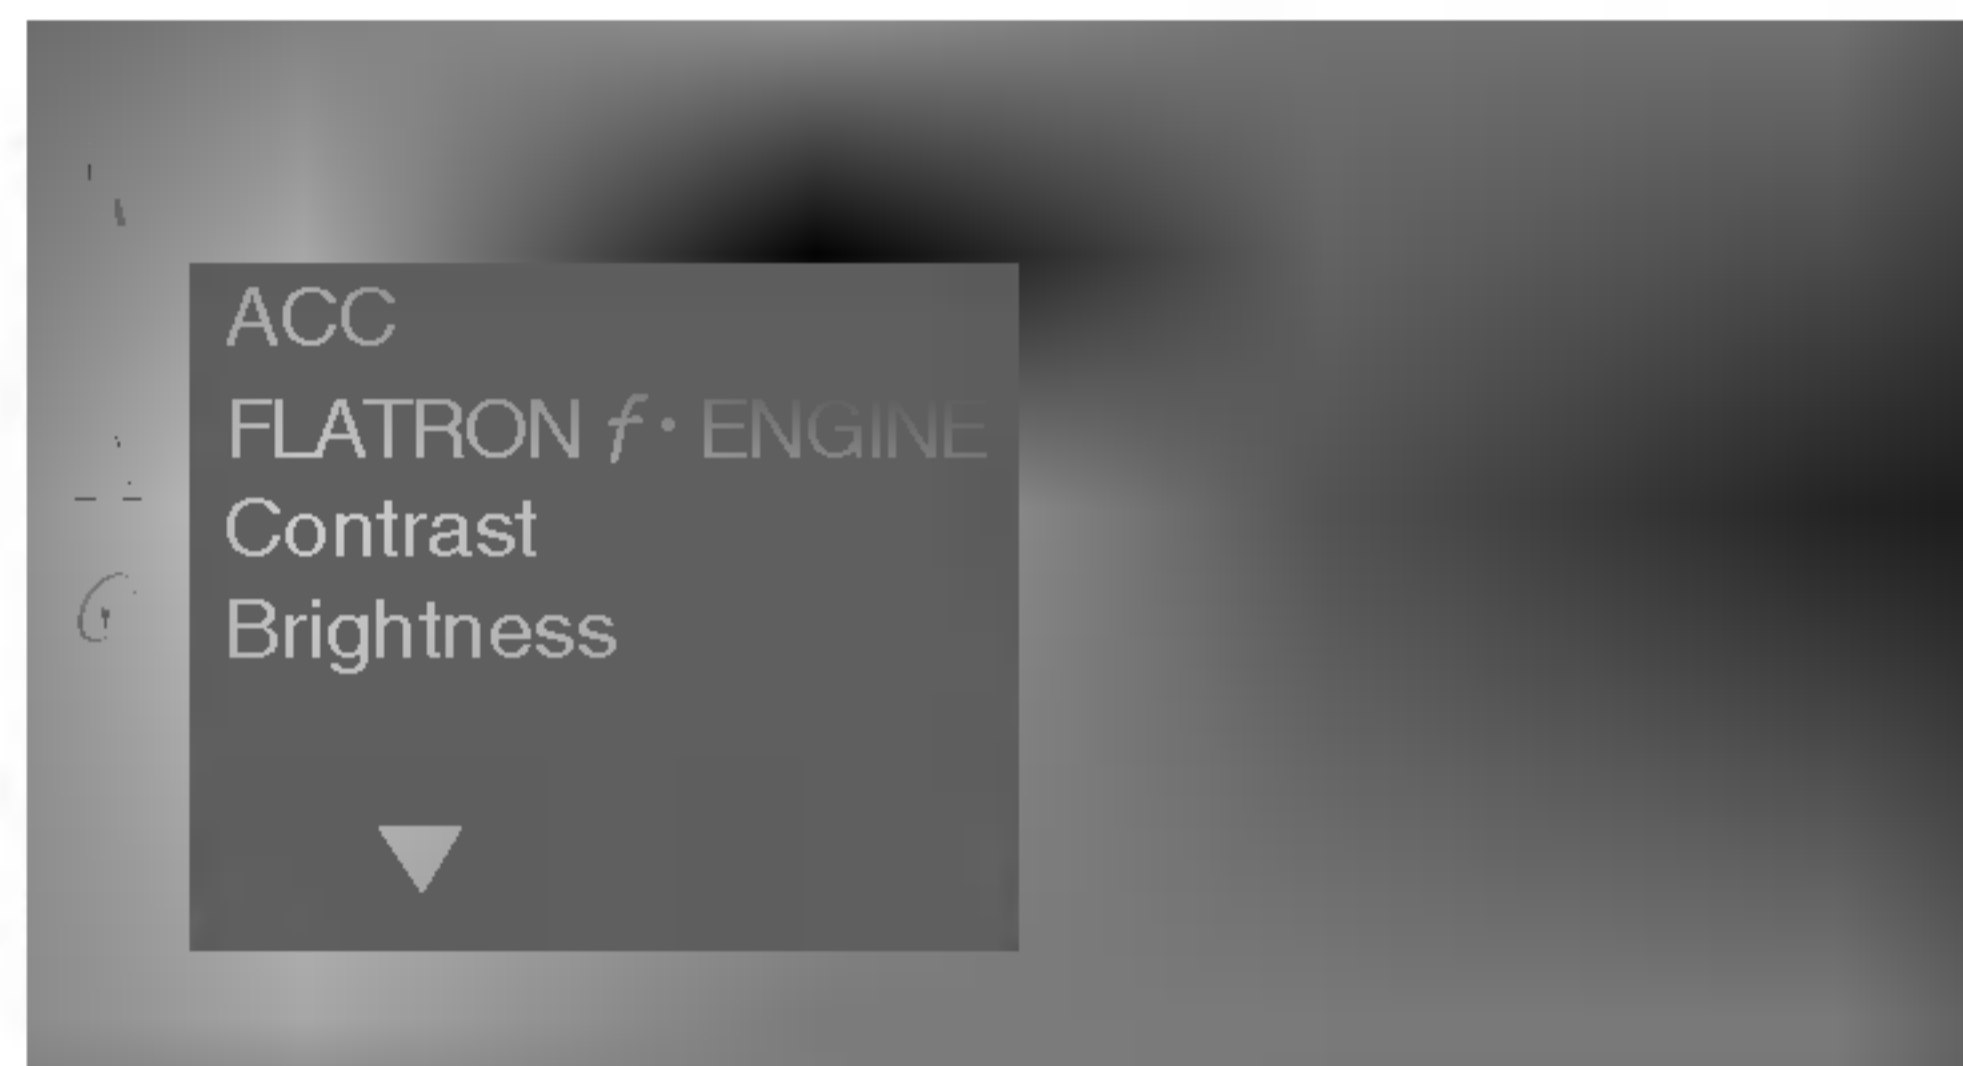

The **EZ Video** function automatically adjusts the screen image quality.

- **Clear**  
Select this option to display with a sharp image.
- **Optimum**  
The most general and natural screen display status.
- **Soft**  
Select this option to display with a mild image.
- **User**  
Select this option to use the user-defined settings.

### ACC

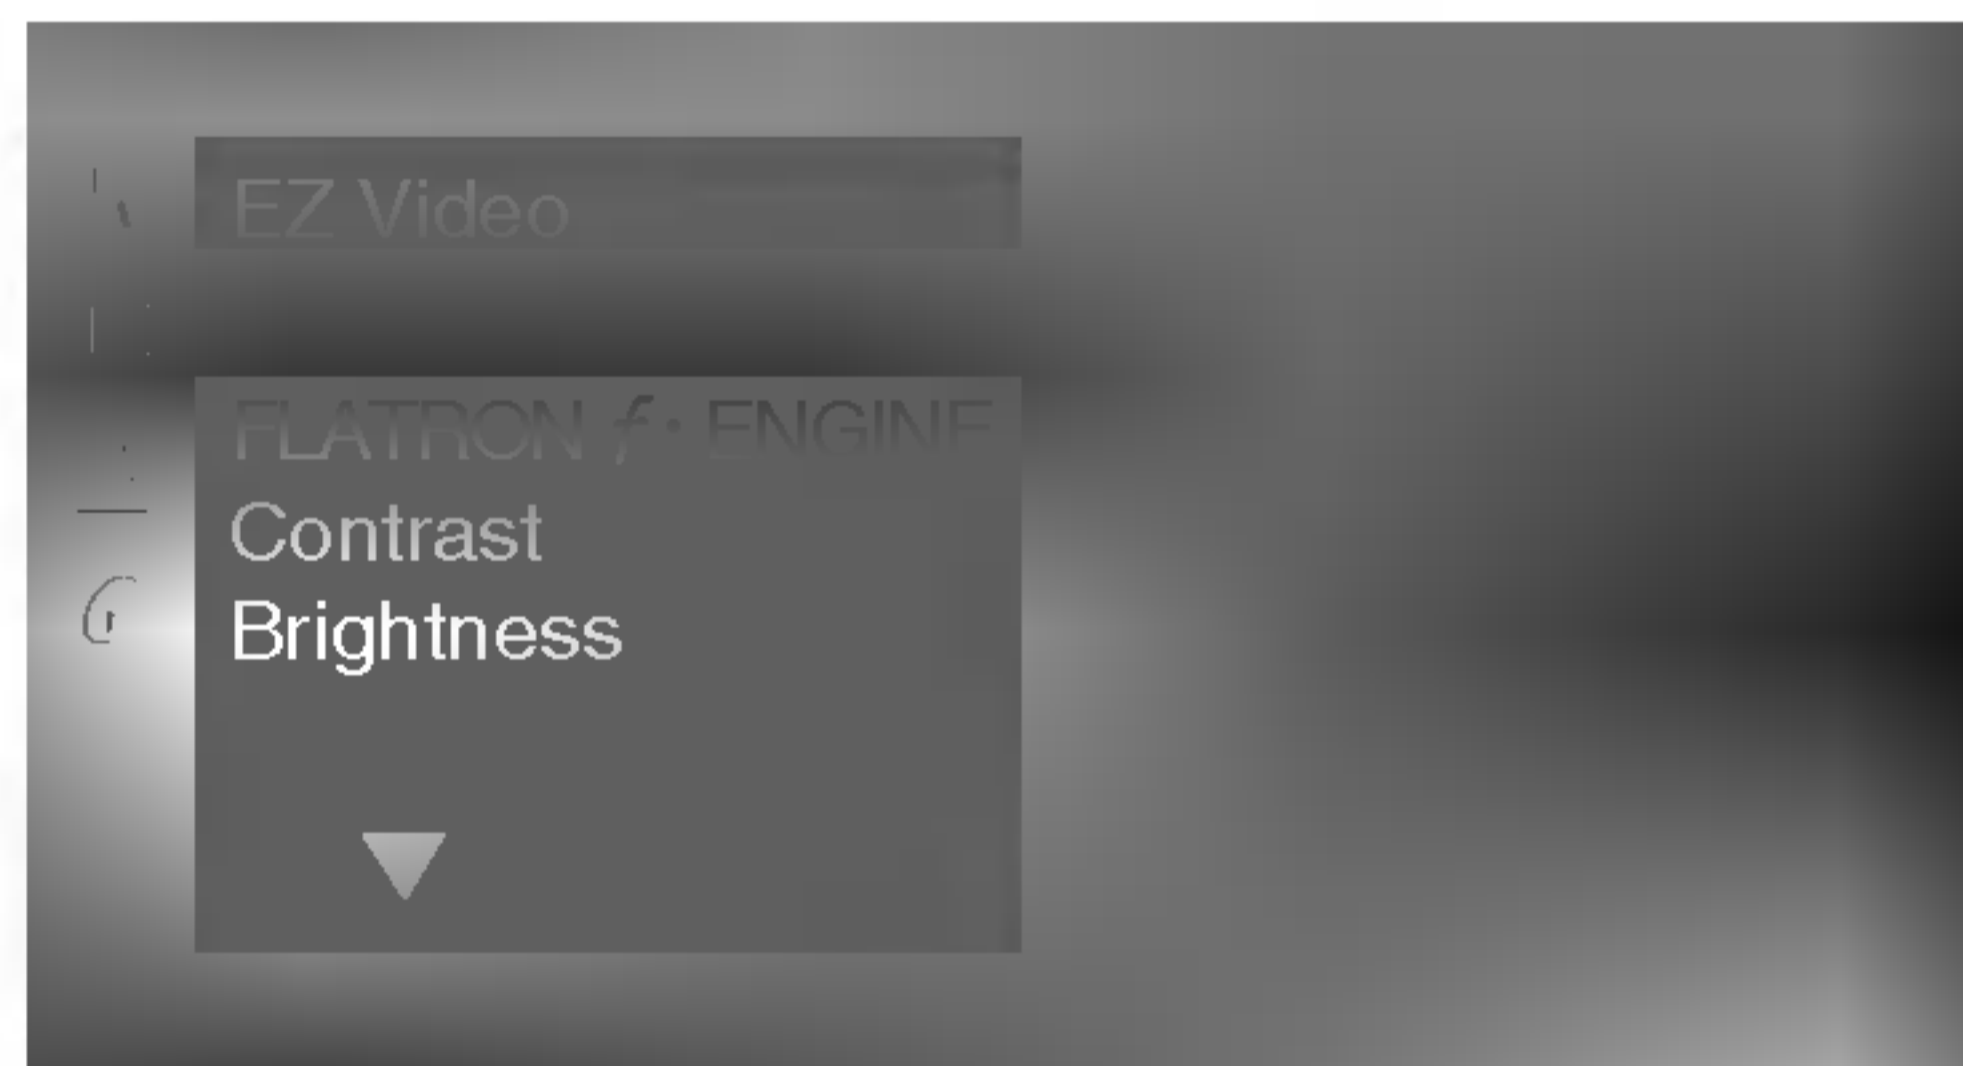


Selecting a factory setting color set.

- **Cool**  
Slightly purplish white.
- **Normal**  
Slightly bluish white.
- **Warm**  
Slightly reddish white.
- **User**  
Select this option to use the user-defined settings.  
**Red / Green / Blue**  
Set your own color levels.


### FLATRON f·ENGINE





It is not adjustable to the TV, Video, S-Video Input source.

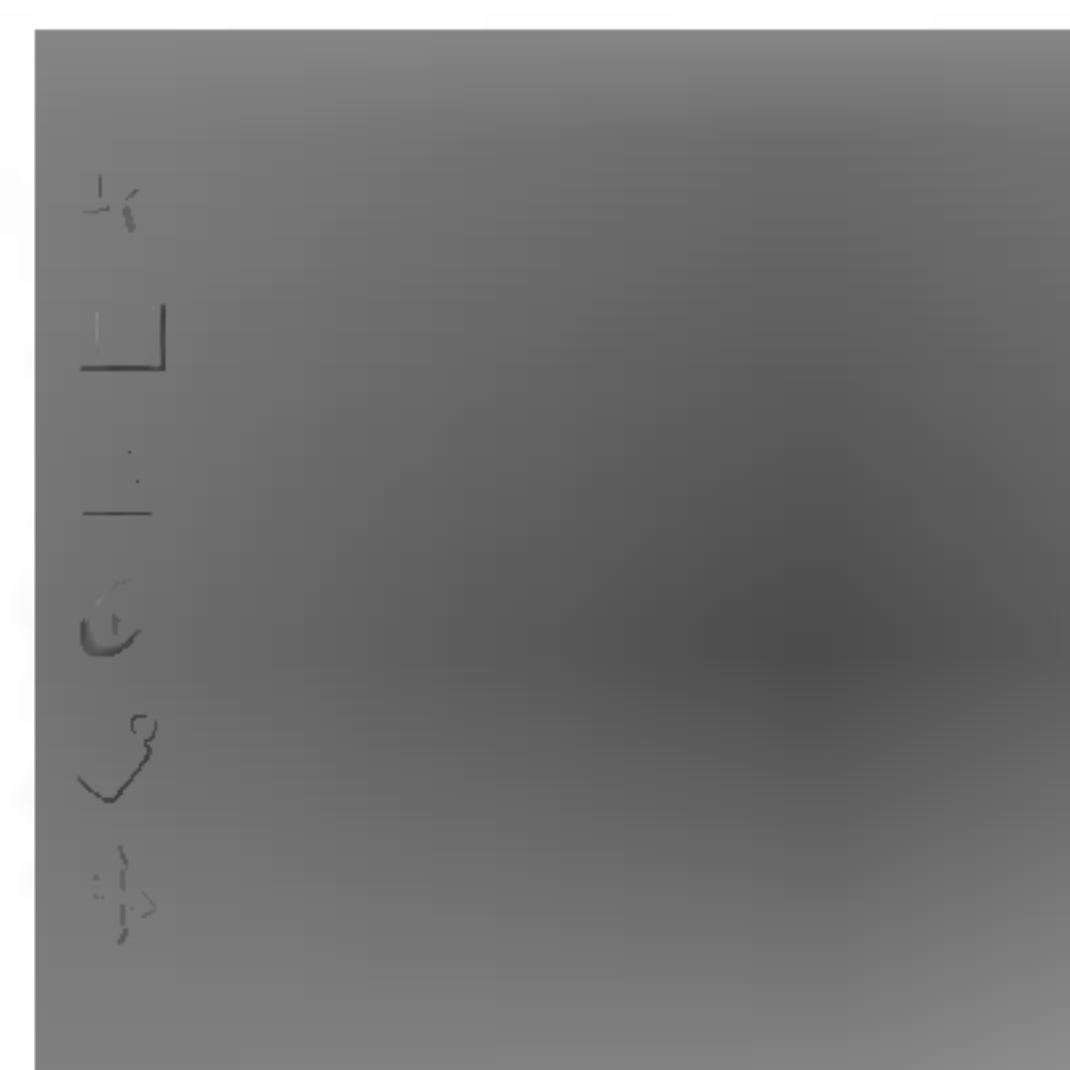


- Contrast** : To adjust the contrast of the screen.
- Brightness** : To adjust the brightness of the screen.
- Color** : To adjust the color to desired level.
- Sharpness** : To adjust the clearness of the screen.
- Tint** : To adjust the tint to desired level. This function is available only in NTSC broadcasting mode.

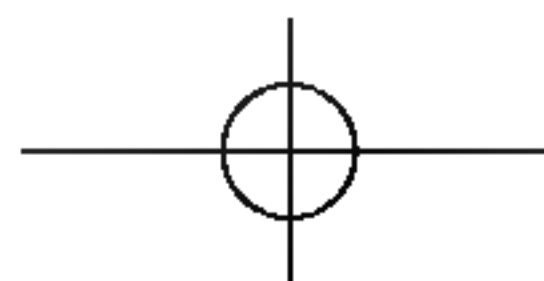

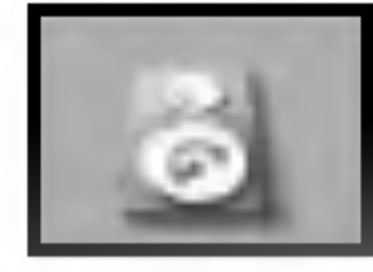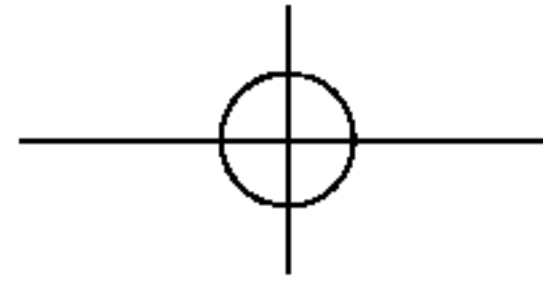

## Adjusting the sound function

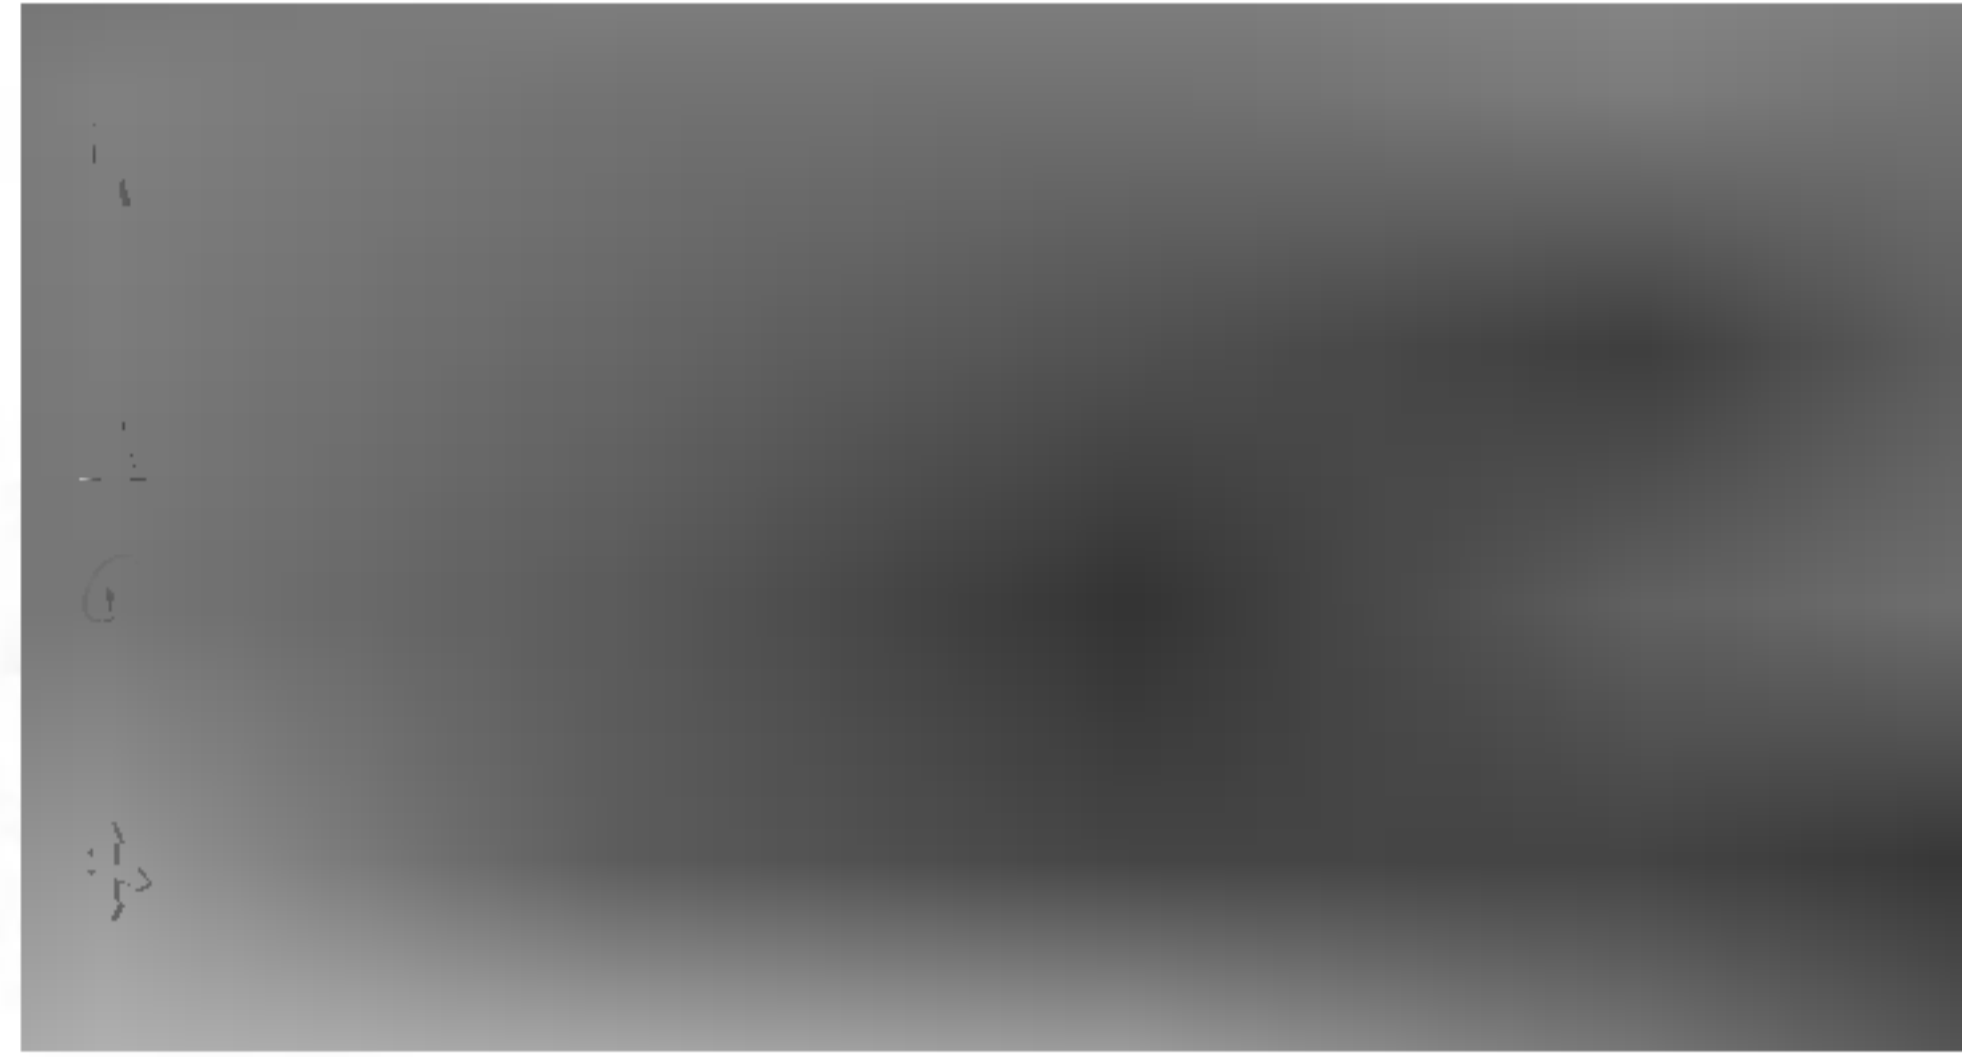

### EZ Audio

The best sound tone quality will be selected automatically depending on the video type that you're currently watching.




- **Flat** : The most commanding and natural audio.
- **Music** : Select this option to enjoy the original sound when listening to the music.
- **Movie** : Select this option to enjoy sublime sound.
- **Sports** : Select this option to watch sports broadcasting.
- **User** : Select this option to use the user-defined audio settings.


### AVL

To adjust uneven sound volumes across all channels or signals automatically to the most appropriate level. To use this feature, select **On**.

### Balance


Use this function to balance sound from the left and right speakers.

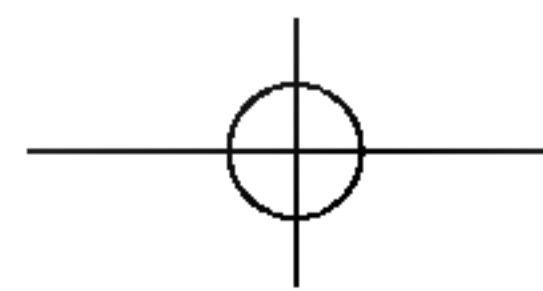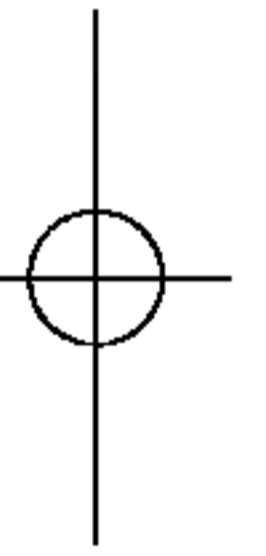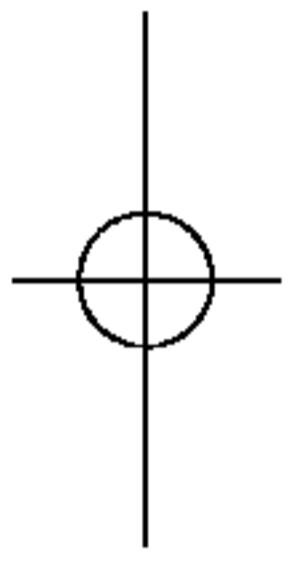

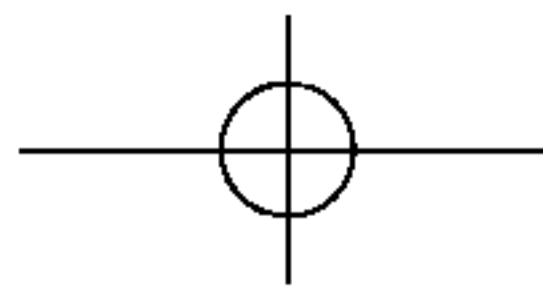

## Adjusting the timer function

### Clock

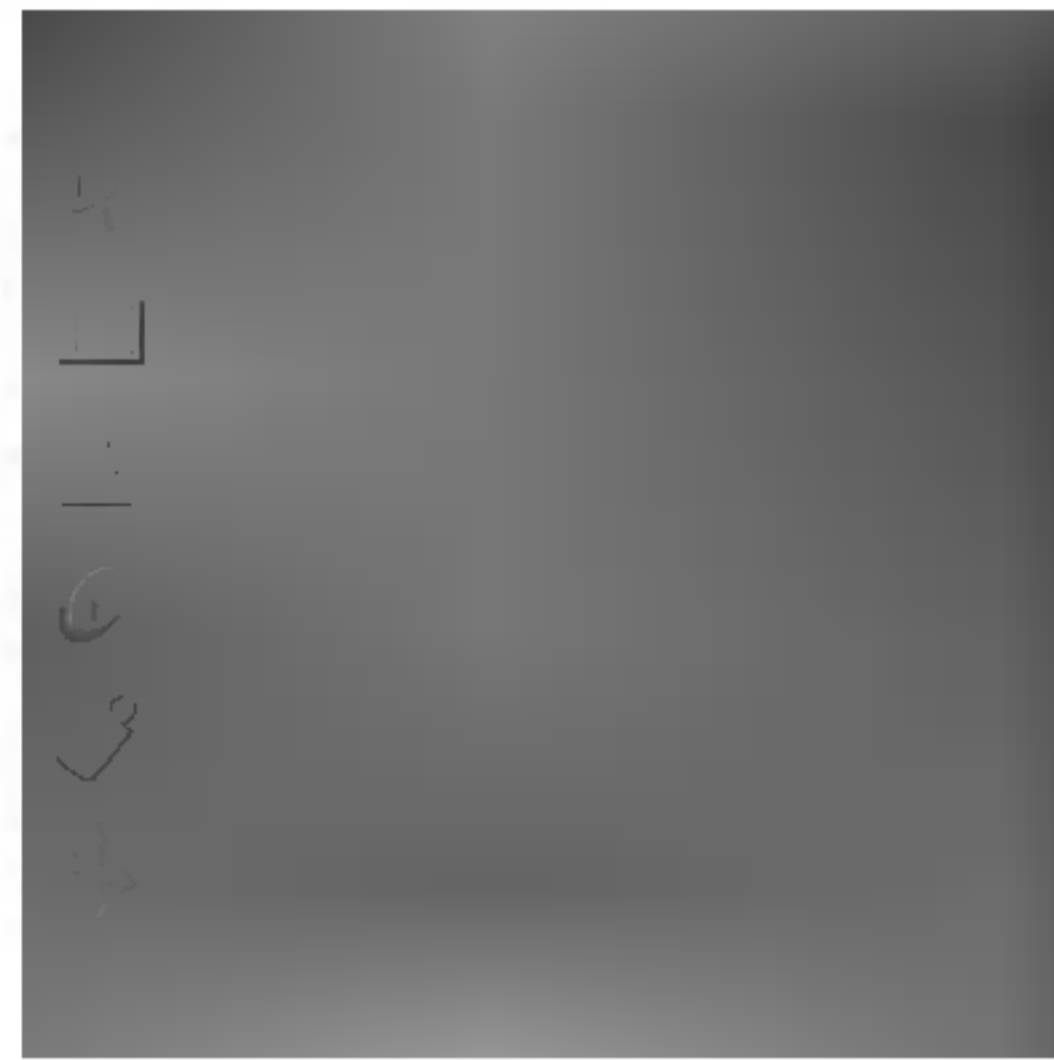

### Auto Clock Setup

This function is used to set up of current time.

You must set the time correctly before using **On/Off timer** function.

- 1) Press the **menu** button and then use **▼▲** button to select the **Timer** menu.
- 2) Press the **▶** button and then use **▼▲** button to select the **Clock** menu.
- 3) Press **▶** button and then use **▼▲** button to select **Auto**.
- 4) Press **▶** button and then use **▼▲** button to select the time zone for your viewing area. Your choices are : AUTO, E.S.T(Eastern Standard Time), C.S.T(Central Standard Time), M.S.T(Mountain Standard Time), P.S.T (Pacific Standard Time), Alaska and Hawaii.
- 5) Press **▶** button and then use **▼▲** button to set PBS channel.
- 6) Press **▶** button and then use **▼▲** button to set D.S.T (Daylight Savings Time) **Auto, Off** or **On**, depending in whether or not your viewing area observes Daylight Savings Time.
- 7) Press **enter** button to save.

### Manual Clock Setup

You must set the time correctly before using **On/Off timer** function.

- 1) Press the **menu** button and then use **▼▲** button to select the **Timer** menu.
- 2) Press the **▶** button and then use **▼▲** button to select the **Clock** menu.
- 3) Press **▶** button and then use **▼▲** button to select **Manual**.
- 4) Press **▶** button and then use **▼▲** button to set the hour(01~12).
- 5) Press **▶** button and then use **▼▲** button to set the minutes(00~59).
- 6) The default value is -- : -- AM(PM).

### Off / On timer

The **Off timer** automatically switches the set to off mode at the pre-set time.

- 1) Press the **menu** button and then use **▼▲** button to select the **Timer** menu.
- 2) Press the **▶** button and then use **▼▲** button to select **Off timer** or **On timer**.
- 3) Press the **▶** button and then use **▼▲** button to set the hour(01~12).
- 4) Press the **▶** button and then use **▼▲** button to set the minutes(00~59).
- 5) Press the **▶** button and then use **▼▲** button to select **Run** or **Hold**.
- 6) Only **On timer** function; Press the **▶** button and then **▼▲** button to adjust volume level and channel number.
- 7) Press the **enter/menu** button to save.

### Auto off (TV/Video input only)


If **Auto off** is active and there is no input signal, the TV switches to off mode automatically after 10 minutes.


- 1) Press the **menu** button and then use **▼▲** button to select the **Auto off** menu.
- 2) Press the **▶** button and then use **▼▲** button to select **On** or **Off**.
- 3) Press the **enter/menu** button to save .




### Note

- In the event of power interruption (disconnection or power failure), the **Clock** must be reset.
- Two hours after the set is switched on by the **On timer** function it will automatically switch back to off mode unless a button has been pressed.
- Once the **On** or **Off timer** is set, these functions operate daily at the preset time.
- **Off timer** function overrides **On timer** function if they are set to the same time.
- The set must be in off mode for the **On timer** to work.

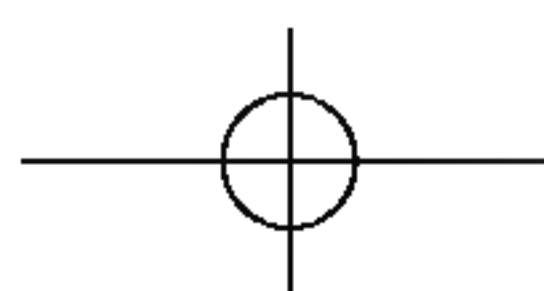

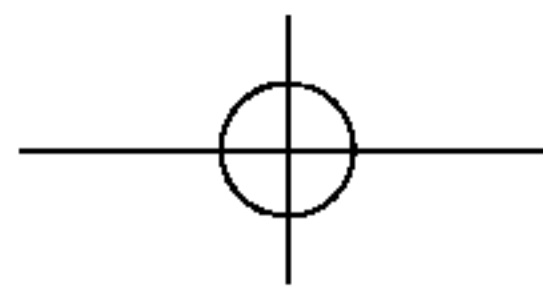

## Selecting the setup function

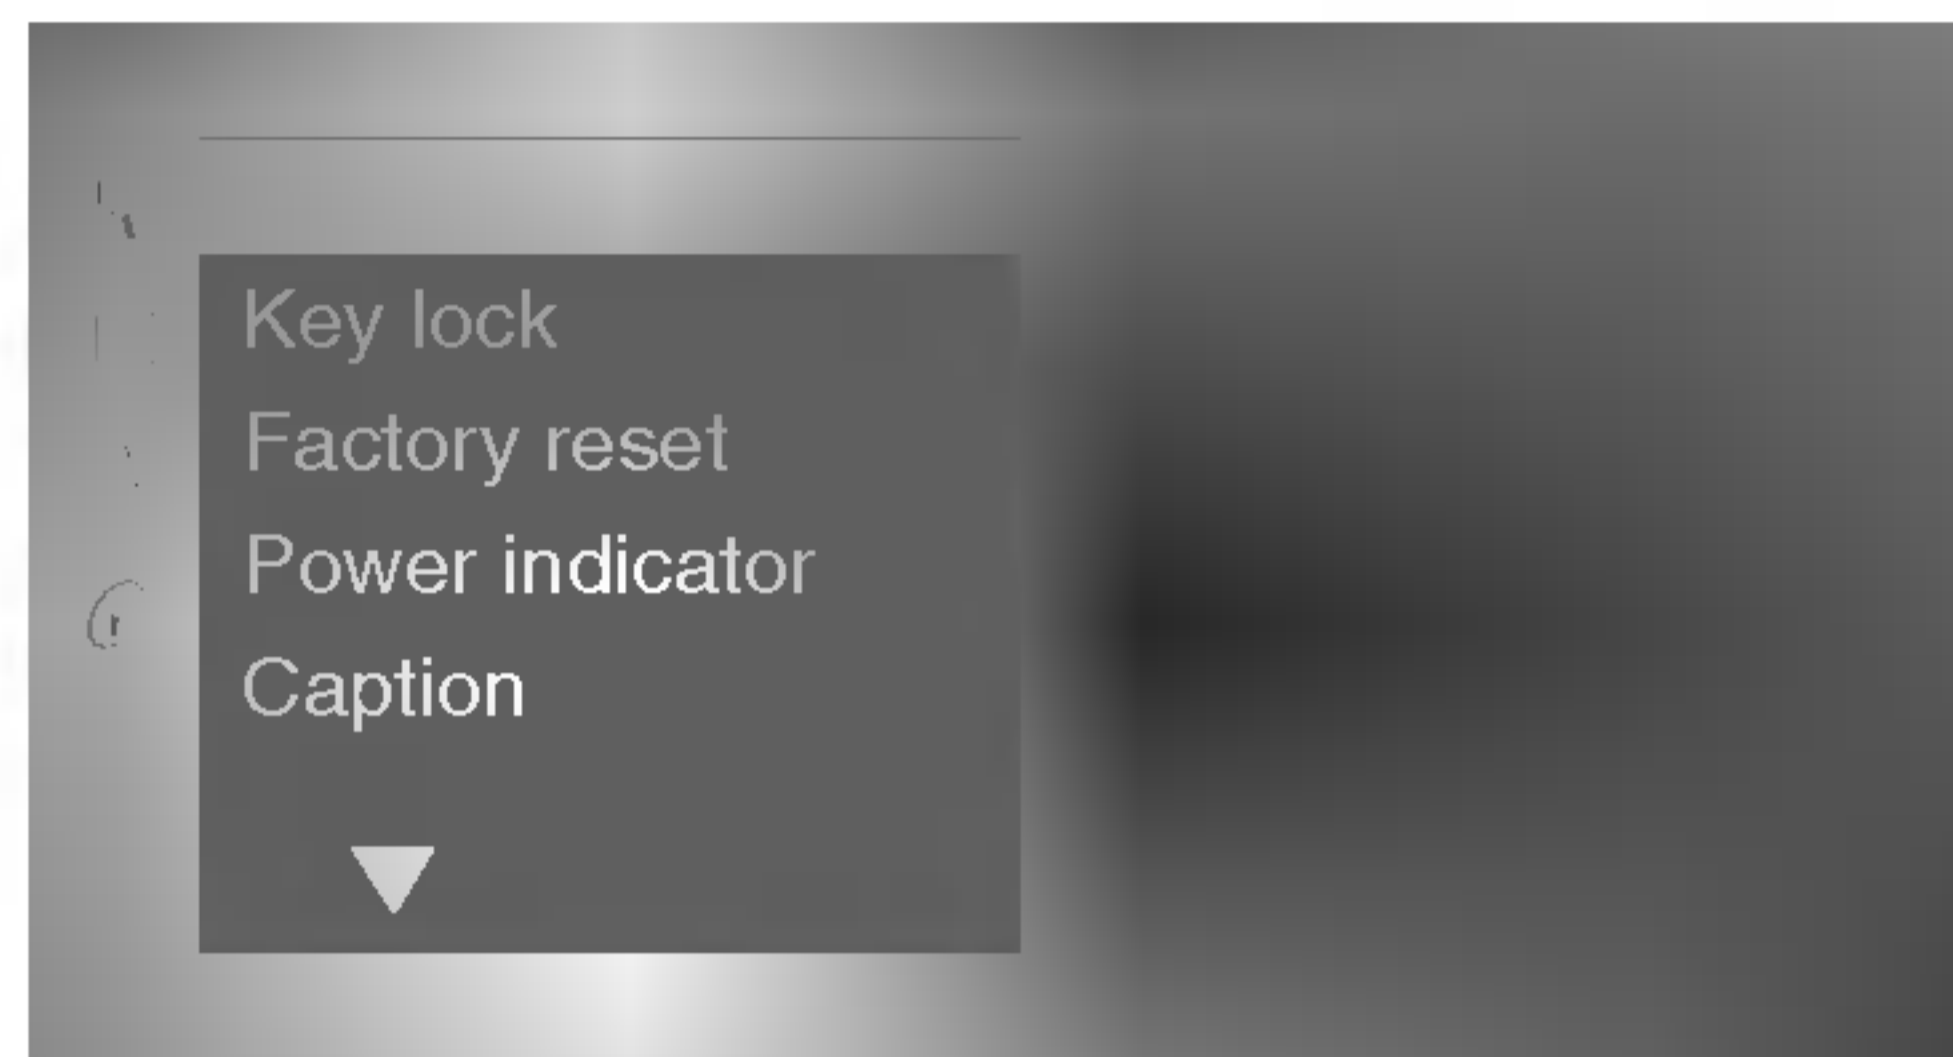

### Language

To choose the language in which the control names are displayed.

### Key lock

Use the ▼▲ buttons to select **On** or **Off**. It can be set up so that it can only be used with the remote control. This feature can prevent unauthorized viewing.

In order to lock the OSD screen adjustment, set the **Key lock** tab to the 'On' position. In order to unlock it, do the following :

- 1) Push the **menu** button on the remote control and set **Key lock** to the 'Off' position.

### Factory reset

Use this function to reset the product to the factory default. However, language selection will not be initialized.

### Power indicator

Use this function to set the power indicator on the front side of the product to **On** or **Off**. If you set **On** at any time, the power indicator will automatically be turned on.



## Selecting the setup function (To adjust the CAPTION & VCHIP function)

### Caption (TV input only)

Use the ▼▲ buttons to select captions.


#### [Remote Control]

- Press the **CC** button repeatedly to display the caption option as shown below. Press the **enter** button to select the caption option.



#### \* EZ Mute

: If sound is on, the caption will be off. On the contrary, if sound is off, the caption will be on.

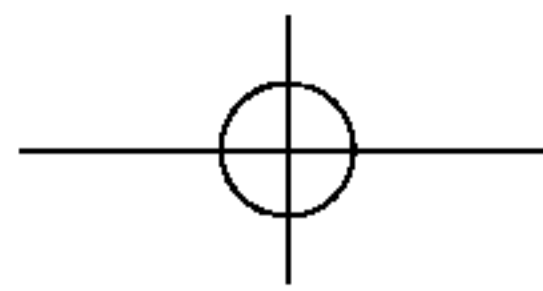

## Selecting the setup function (To adjust the CAPTION & VCHIP function)



### Caption / Text

Use the ▼ ▲ buttons to select caption mode.


Text services give a wide variety of information on all kind of subjects(ex. captioned program lists, weather forecasts, stock exchange topics, news for hearing-impaired....) on up to half of the TV screen. But not all stations offer text services, even though they might offer captioning.

In the event you are receiving a poor signal, an empty black box may appear and disappear, even when the text mode is selected. This is a normal when receiving a poor signal.


This TV is programmed to remember the **Caption/Text** mode it was last set to, when you turn the power off.


### Parental ctl.

This function is used to block program viewing based on the ratings sent by the broadcast station. The default setting is to allow all programs to be viewed. Viewing can be blocked by the type of program and by the categories chosen to be blocked. It is also possible to block all program viewing for a time period.

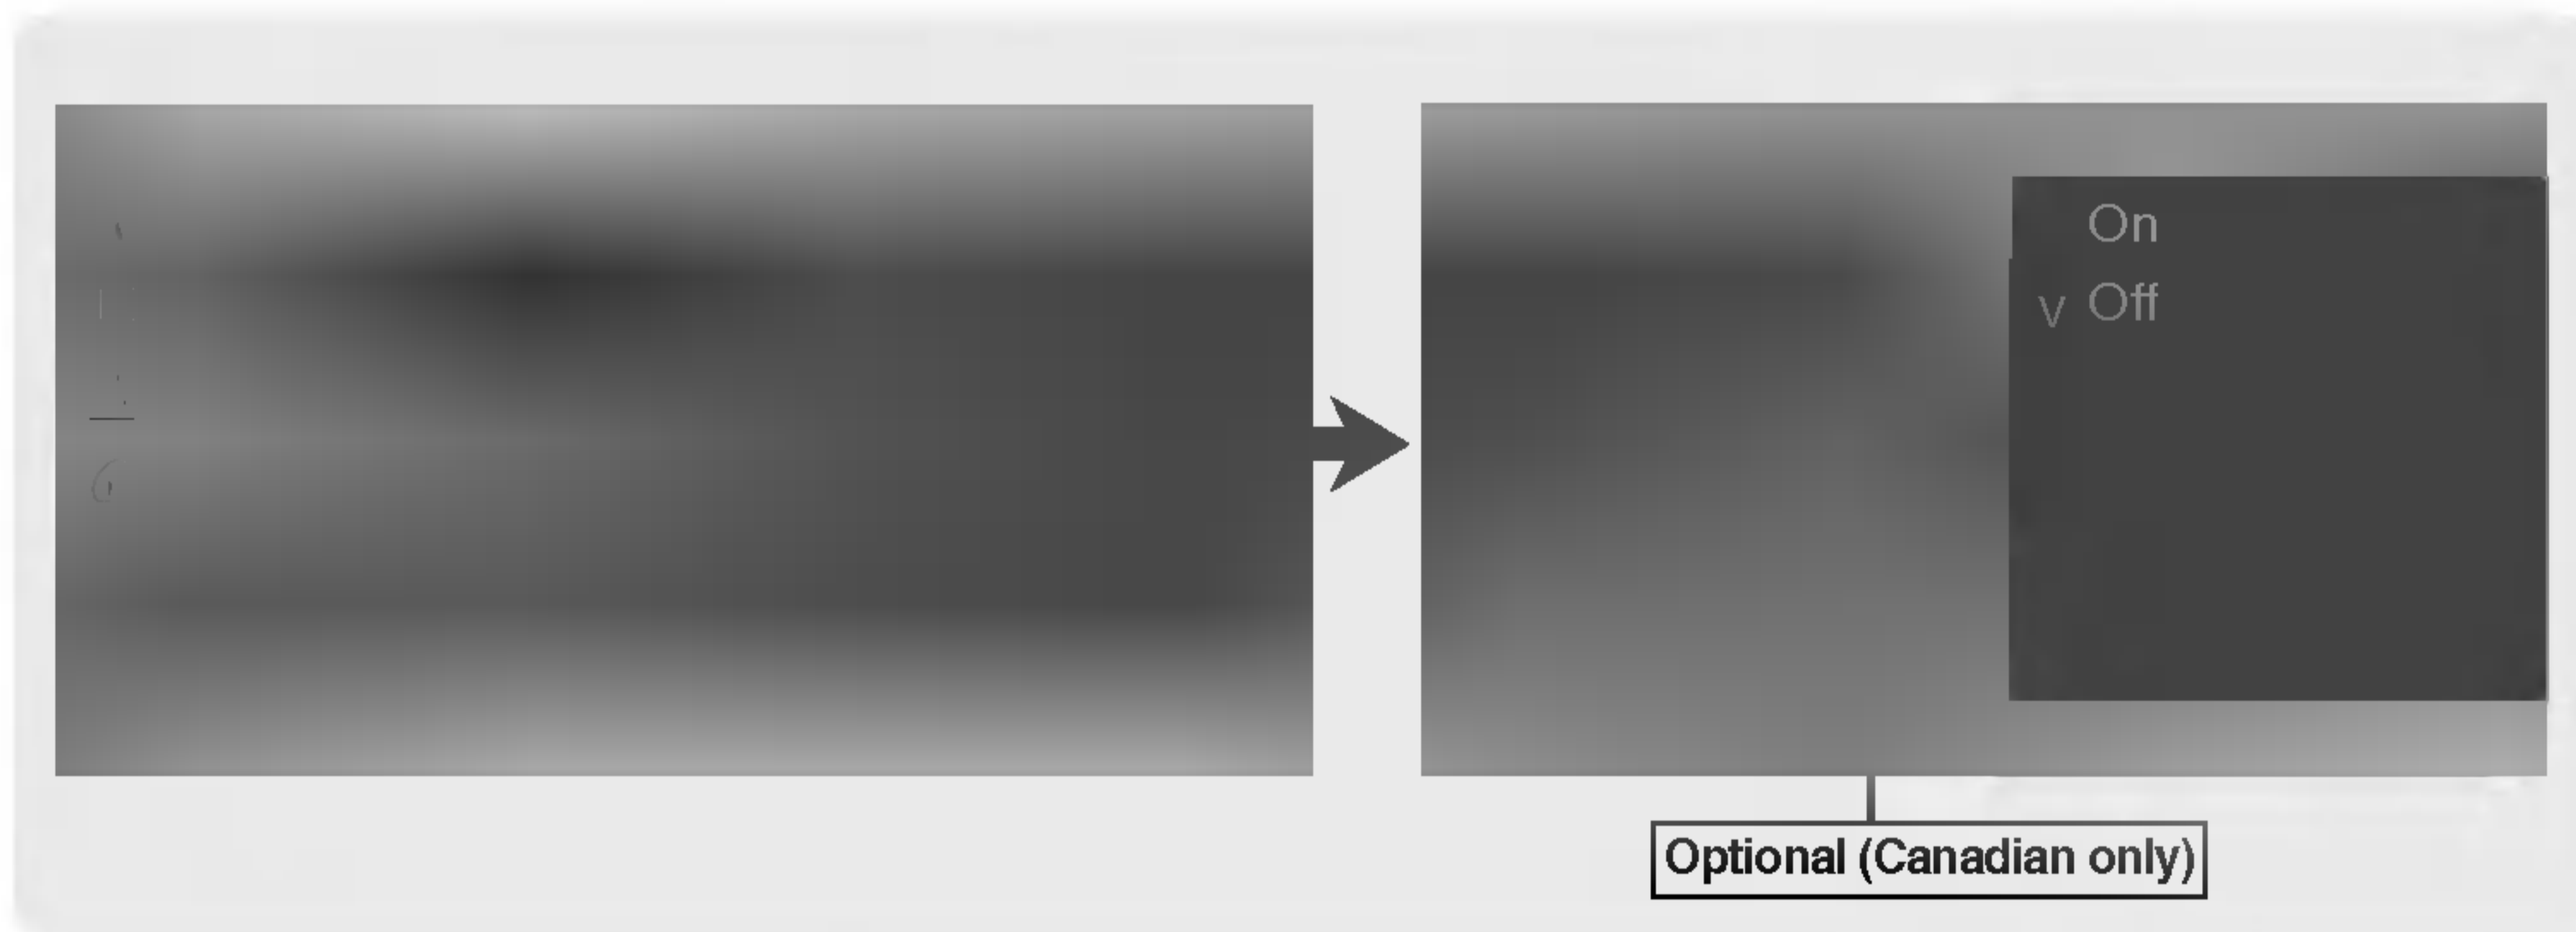

Select the **Parental ctl.** menu and click ► button. The **'Enter code'** window will appear. Once the correct four-digit password is entered, sub-menu that allows a user to control various blocks will be enabled. The initial password is set for **'0000'** and it can be changed through **'Set password'** menu.

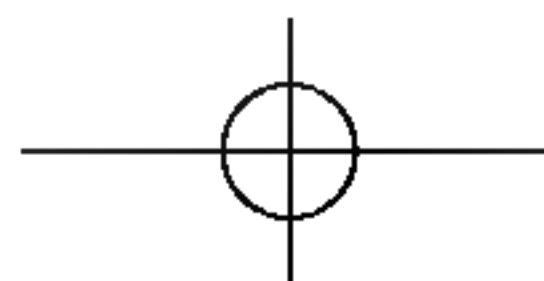


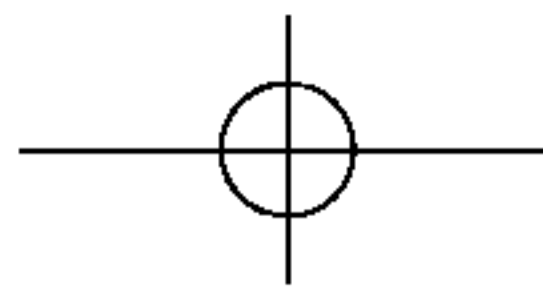

## Selecting the setup function (To adjust the CAPTION & VCHIP function)


### ■ V-CHIP rating and categories

- Rating guidelines are provided by broadcast station. Most television programs and television movies can be blocked by TV rating and/or individual categories. Movies that have been shown at the theaters or direct-to-video movies use the Movies Rating System(MPAA) only.

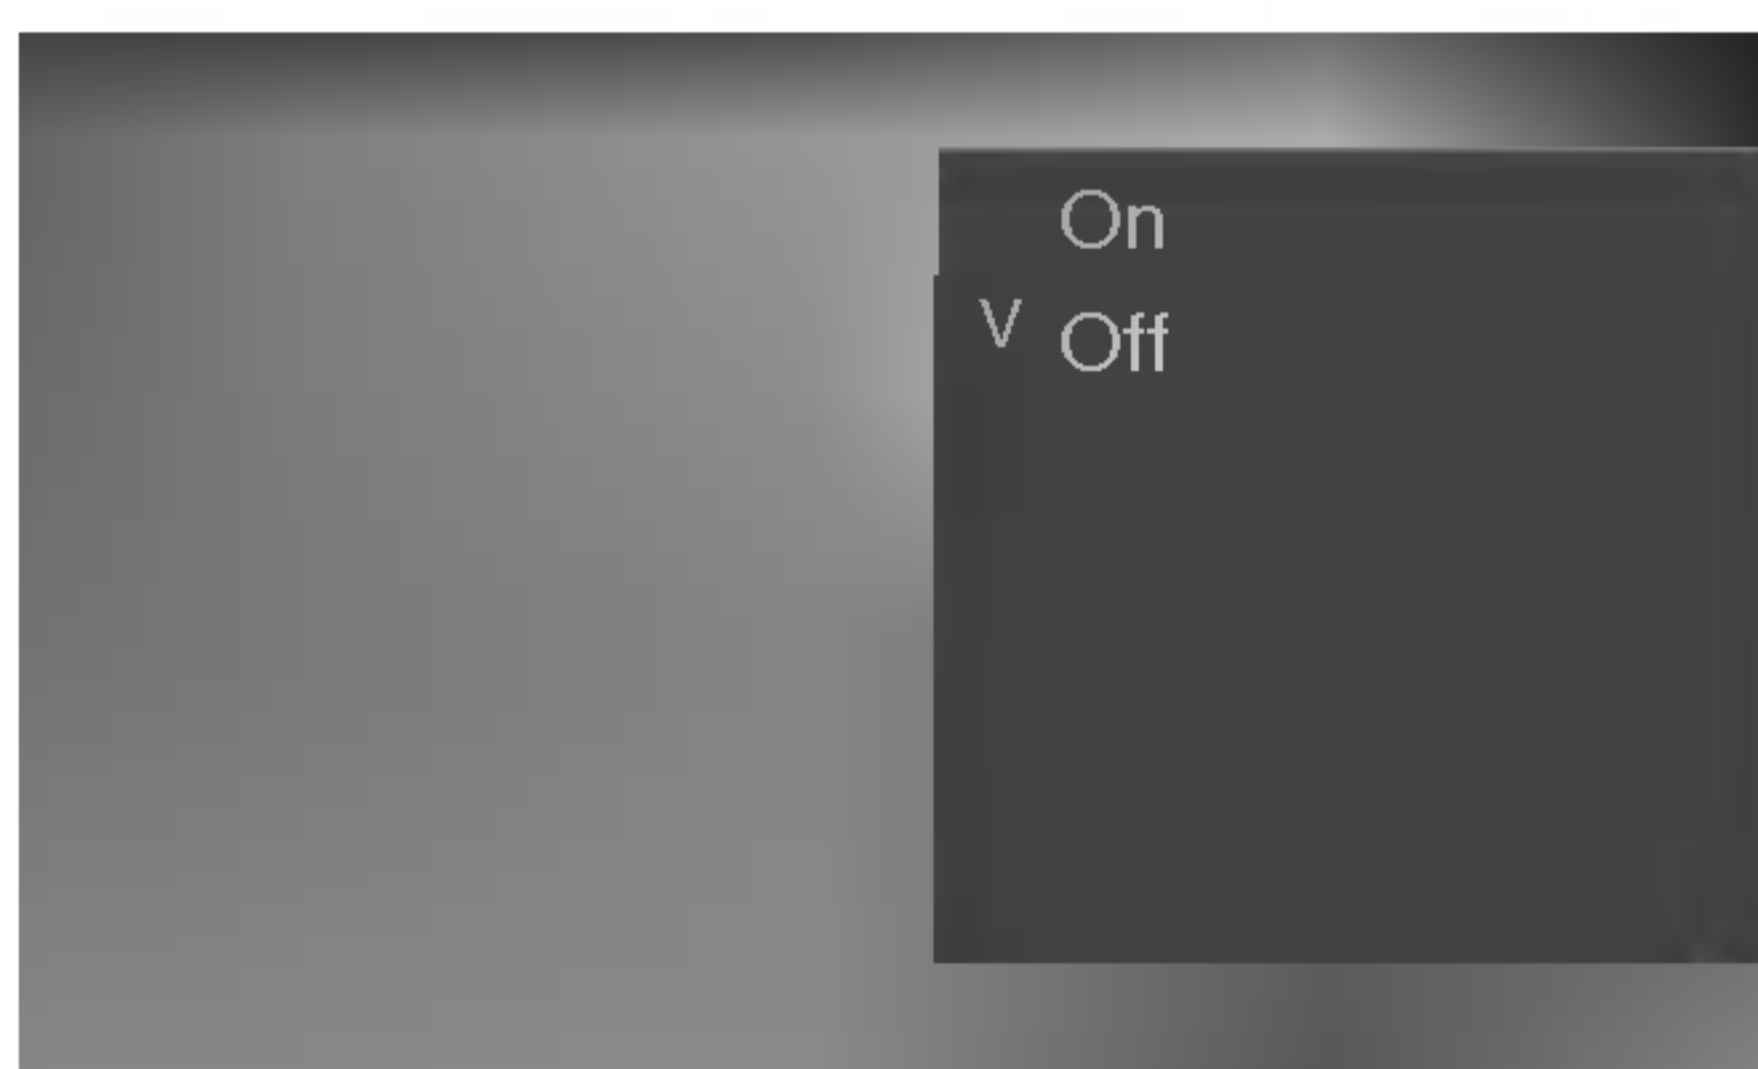

#### Lock On/Off

To select the VCHIP function On/Off.

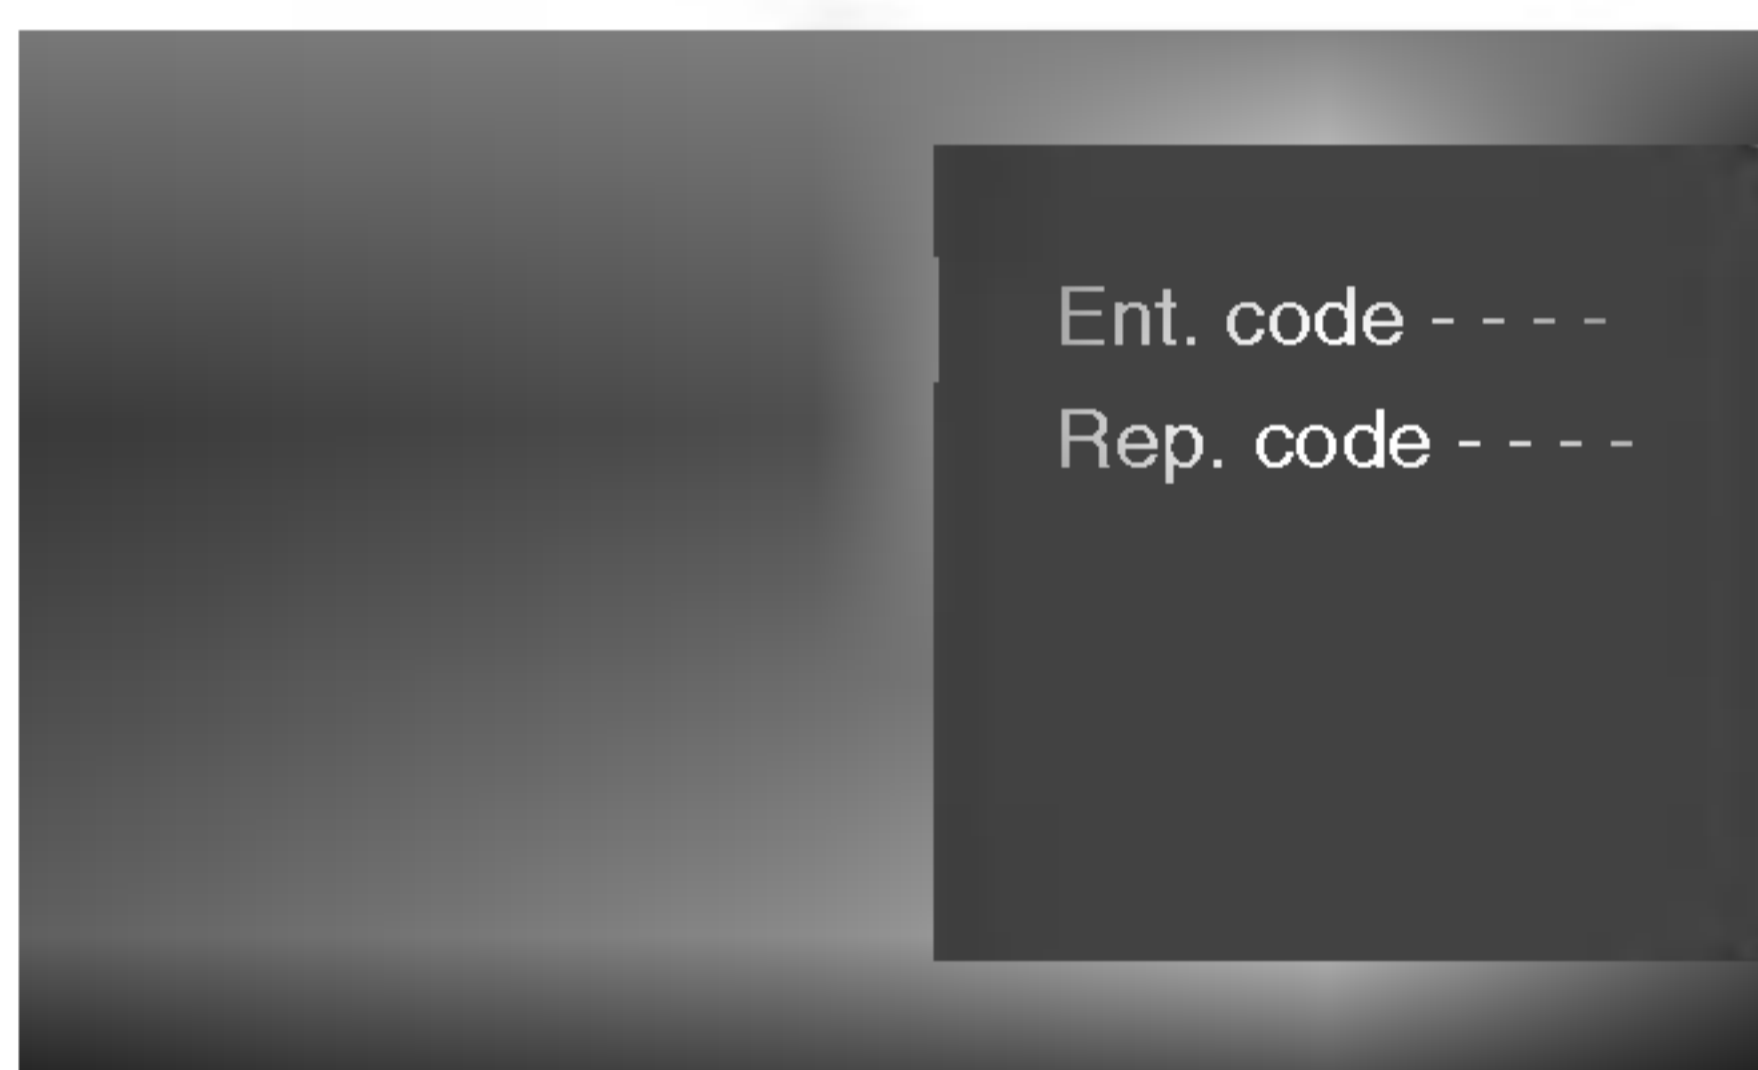




#### Set password


This menu is to be used to change password. Once the correct current password is entered using the number panel in a remote control, the window for new password will appear. Enter your choice of new four-digit password.

## Setting a password

You control access to the parental controls with a password. The default password is '0000'. You can change the password to any four-digit number.


1. Open the OSD. -> Press the ▼▲ buttons to select the **Special** menu, then press the ► button to open the menu. -> Press the ▼▲ buttons to select the **Parental** sub-menu, then press the ► button to open the sub-menu.
2. Use the number pad to enter your password when prompted.  
If you have not set a password, enter **0000**.  
If you are unable to correct the problem yourself, contact the service center.
3. Press the ▼▲ buttons to select the **Set password** sub-menu, then press the ► button to change the setting. Use the number button pad to enter a new four-digit password when prompted.
4. Re-enter the new four-digit password when prompted.

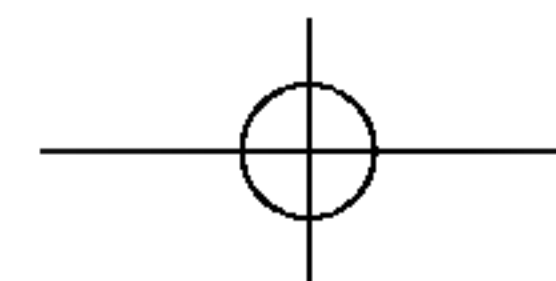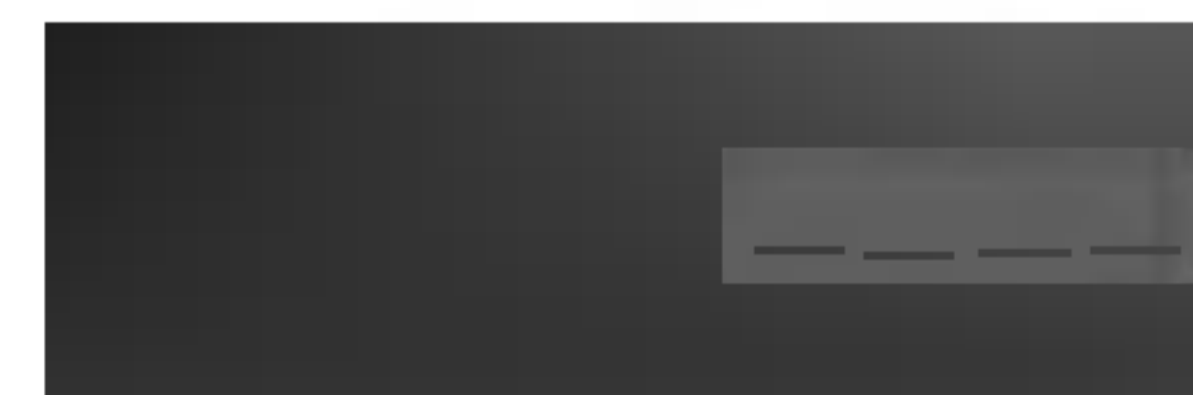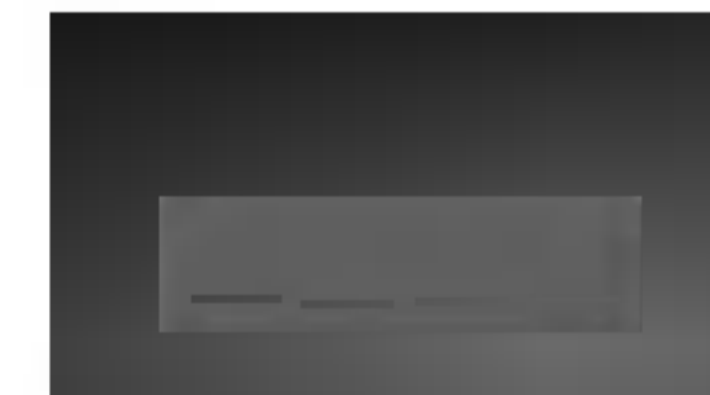

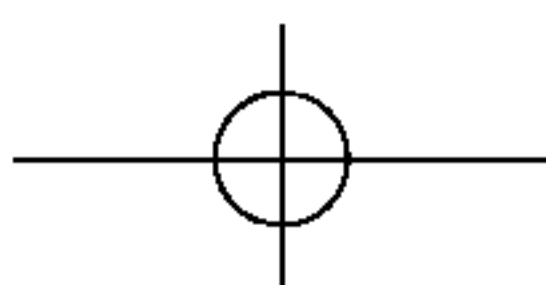

## Selecting the setup function (To adjust the CAPTION & VCHIP function)

■ For movies previously shown in theaters.

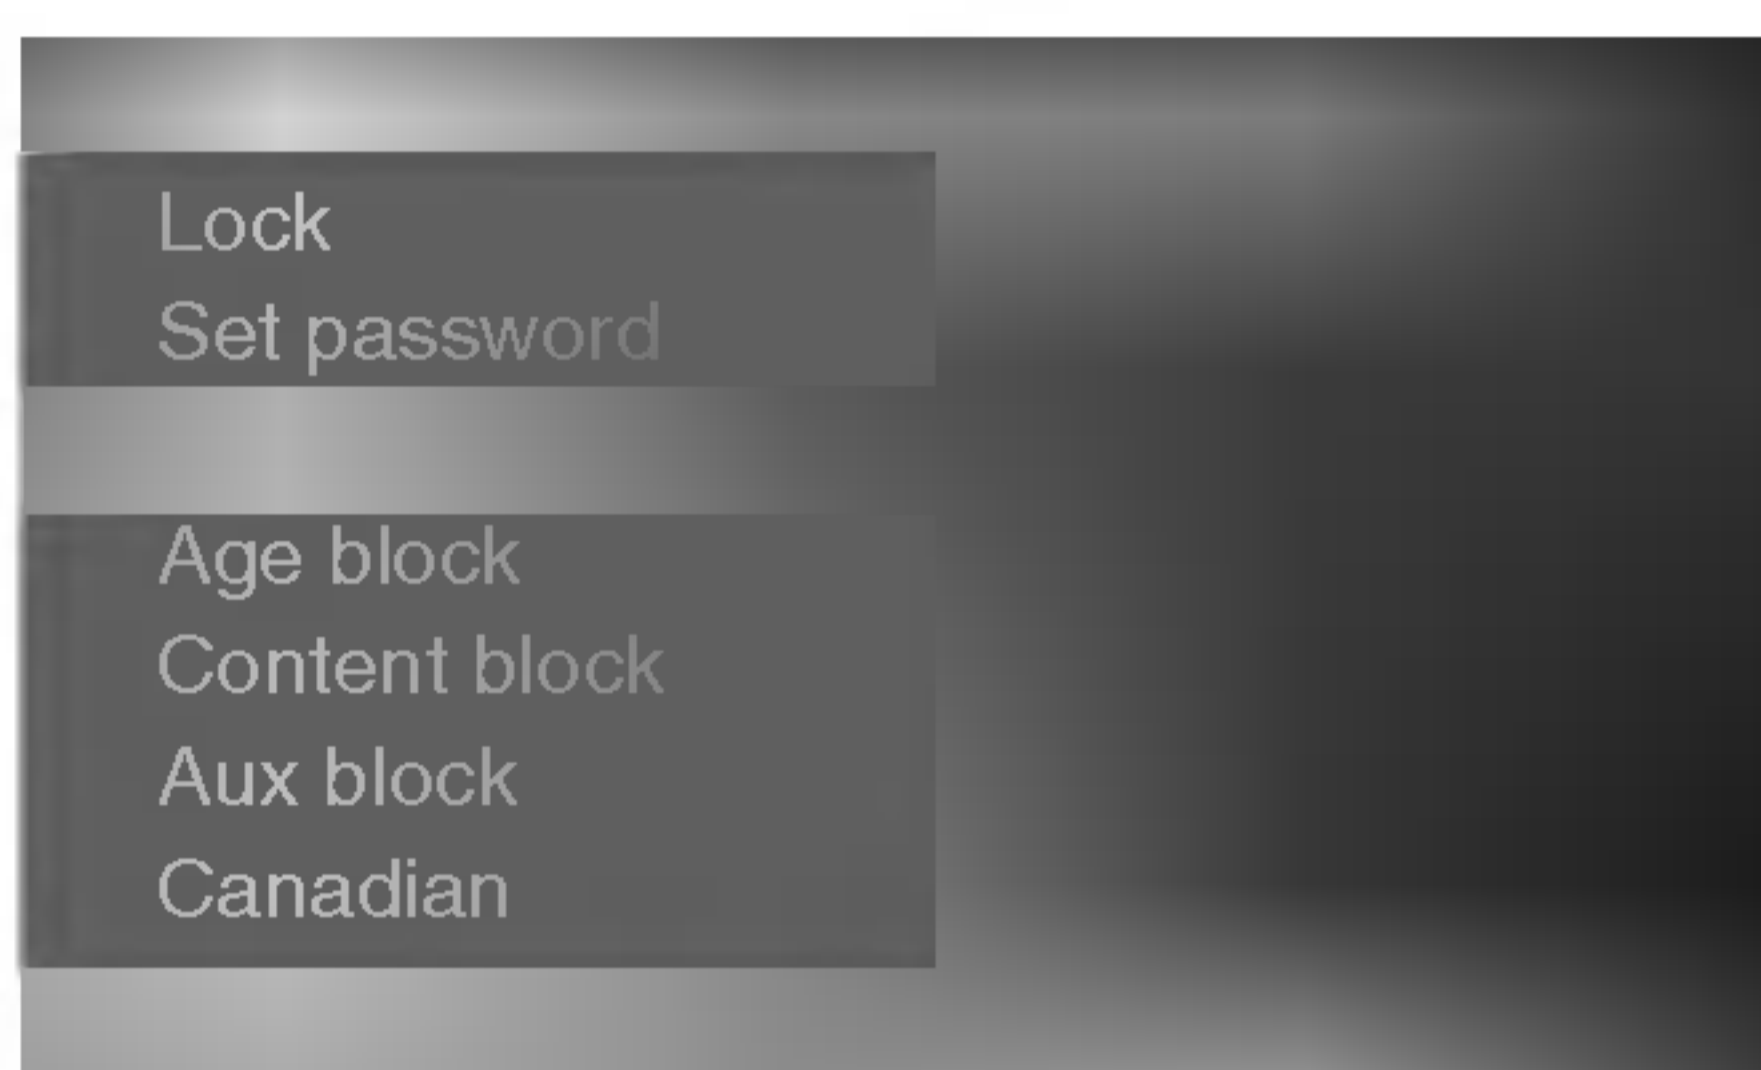

### MPAA

#### ■ MOVIE Ratings :

- Unblocked
- G&above : General audience
- PG&above : Parental guidance suggested
- PG-13&above : 13 years and up
- R&above : Restricted
- NC-17&above : 17 years and up
- X : Adult

If you set PG-13&above, G and PG movies will be available : PG-13, R, NC-17, and X will be blocked.




### Age block

#### ■ GENERAL TV Rating :

- Unblocked
- TV-G&above : General audience / Individual categories do not apply.
- TV-PG&above : Parental guidance suggested
- TV-14&above : 14 years and up
- TV-MA : Mature audience

#### ■ CHILDREN TV Rating :


- Unblocked
- TV-Y&above : Youth / Individual content categories do not apply.
- TV-Y7 : Youth, 7 years and up.

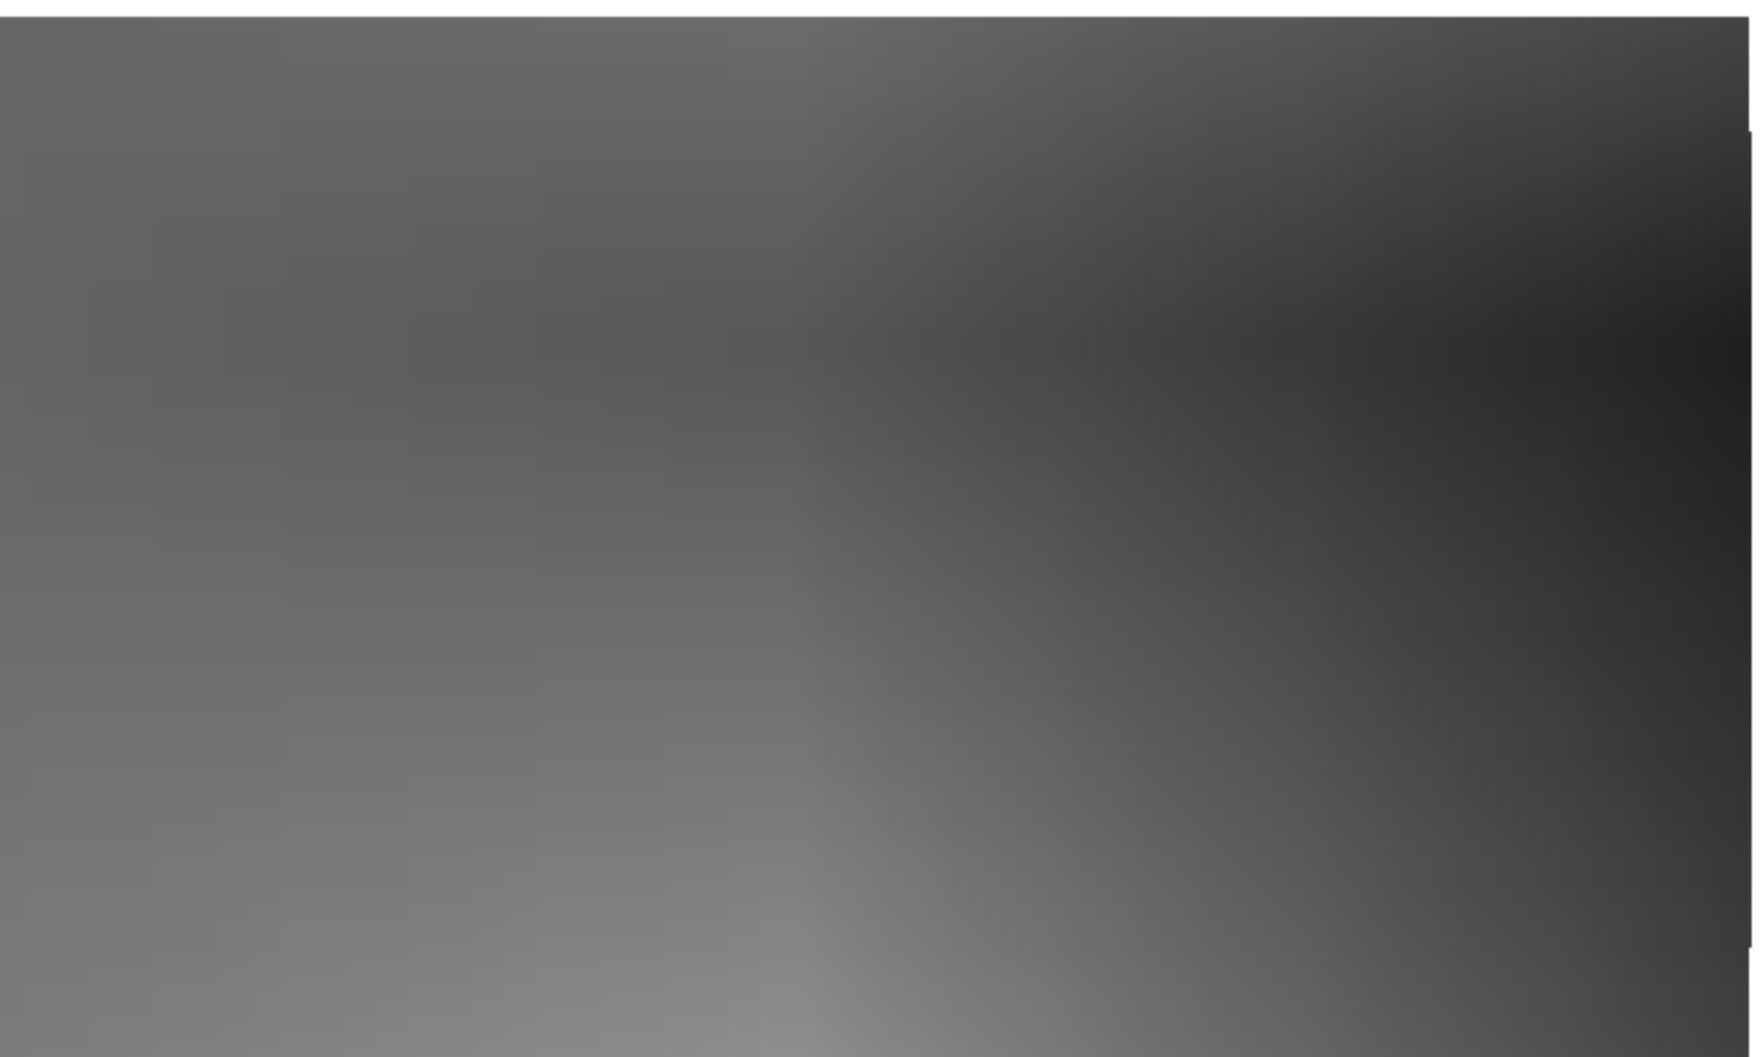


### Content block

#### ■ CONTENT Categories :


- Dialogue(sexual dialogue)  
: Applies to TV-PG&above, TV-14.
- Language(adult language)  
: Applies to TV-PG&above, TV-14&above, TV-MA.
- Sex (sexual situations)  
: Applies to TV-PG&above, TV-14&above, TV-MA.
- Violence  
: Applies to TV-PG&above, TV-14&above, TV-MA.
- F Violence(fantasy violence)  
: Applies only to TV-Y7.

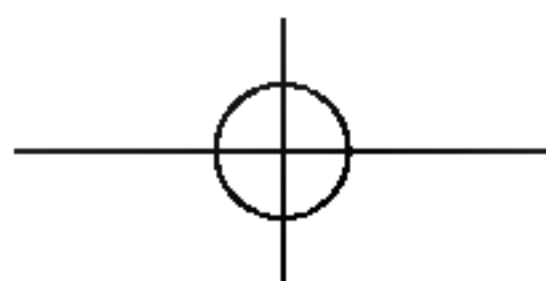

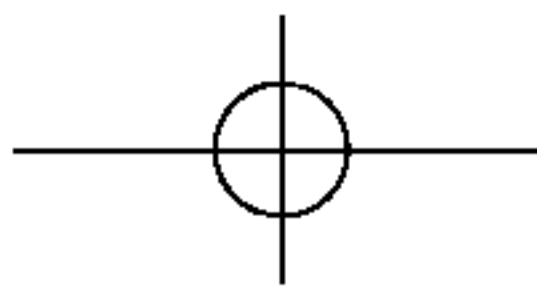

## Selecting the setup function (To adjust the CAPTION & VCHIP function)

### Aux.block

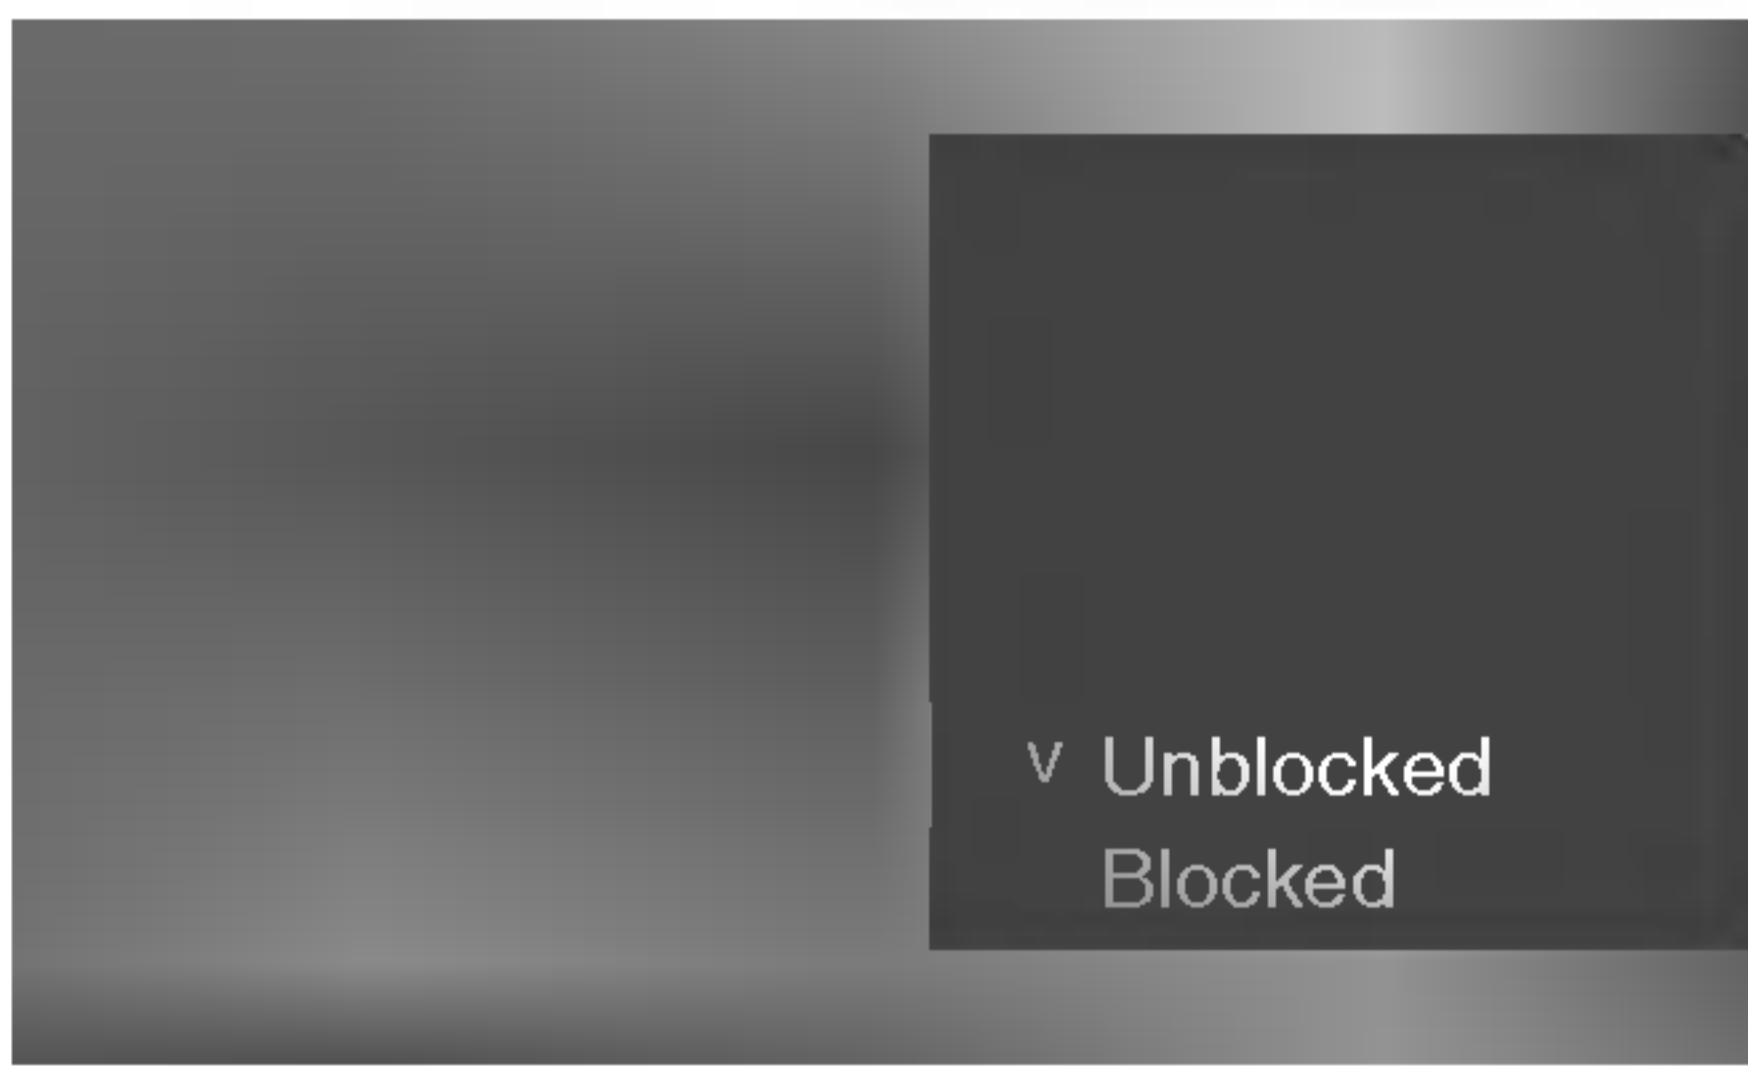

Enables you to select a source to block from the external source devices you have hooked up.




## Selecting the setup function (To adjust the CAPTION & VCHIP function - Canadian Only)

### ■ V-CHIP rating and categories (Optional) - Canadian Rating System

- Rating guidelines are provided by broadcast station. Most television programs and television movies can be blocked by TV rating and/or individual categories.

### Canadian

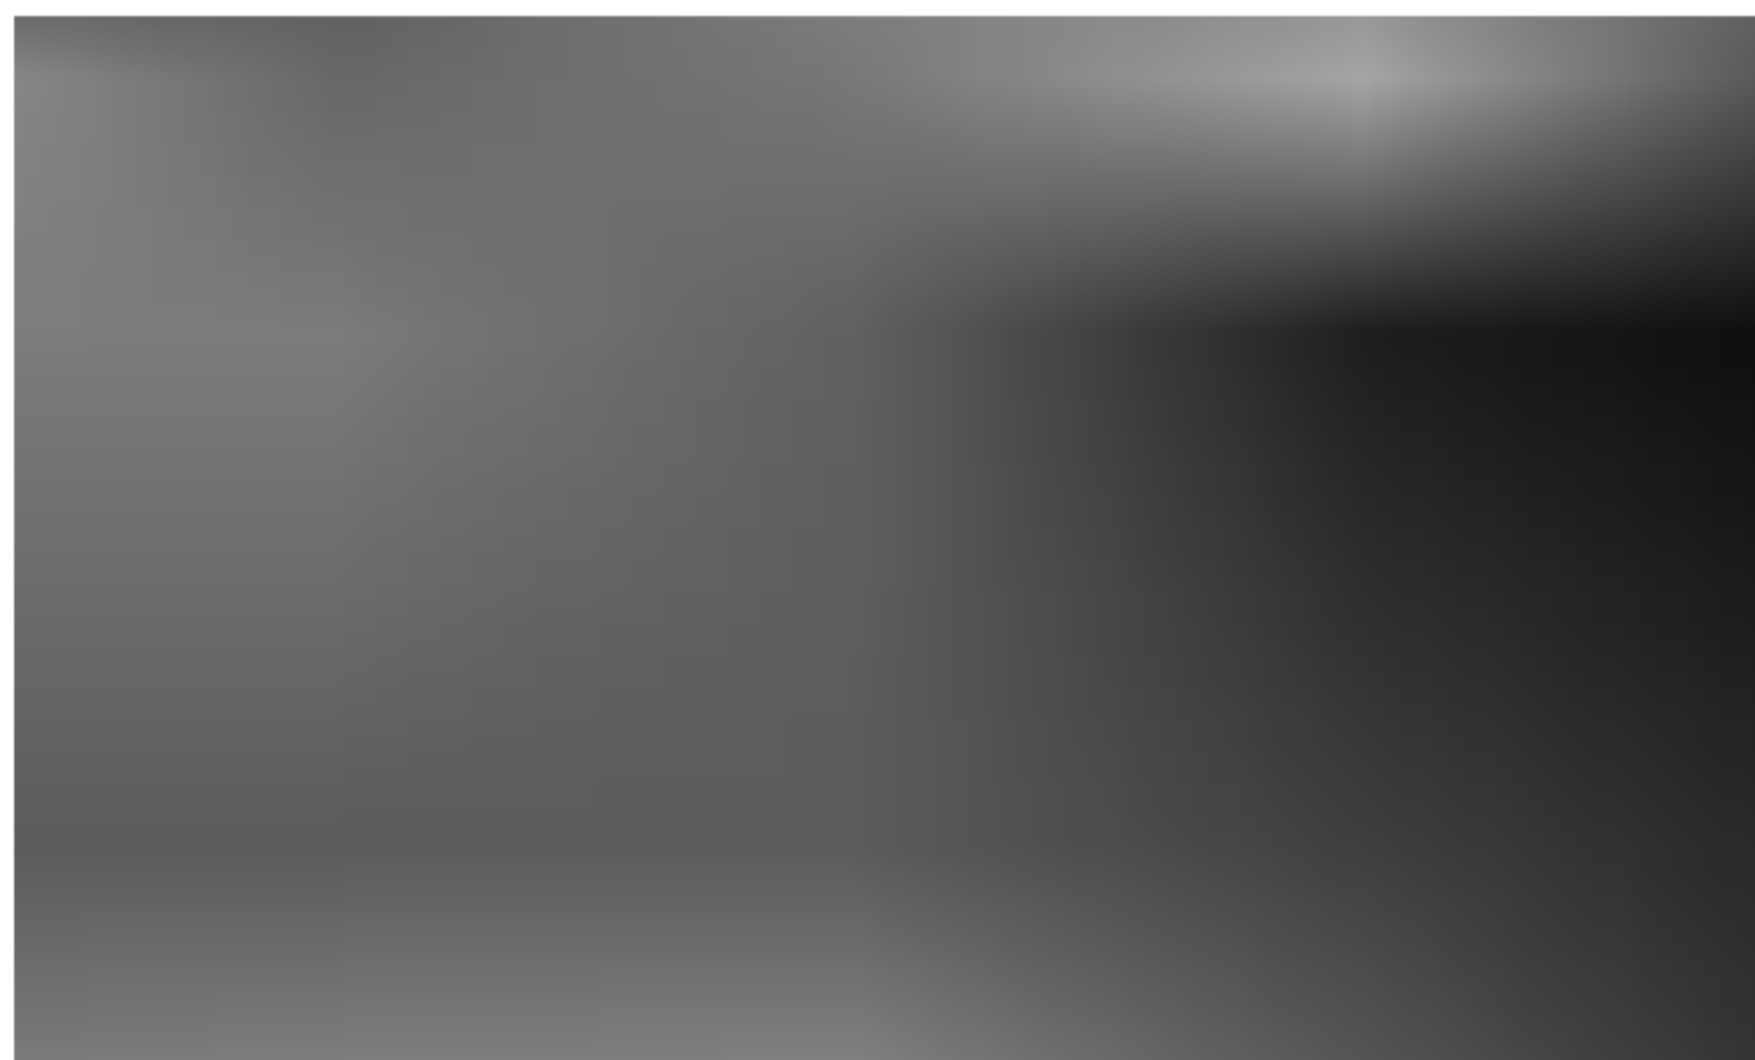

#### English

##### ■ MOVIE Ratings :


- Unblocked
- C&Above : Under 8 years
- C8+ : 8 years and up
- G&Above : General audience
- PG&Above : Parental guidance suggested
- 14+ : 14 years and up
- 18+ : Adult

#### Français

##### ■ MOVIE Ratings :

- Unblocked
- G&Above : General audience
- 8 ans + : 8 years and up
- 13 ans + : 13 years and up
- 16 ans + : 16 years and up
- 18 ans + : 18 years and up



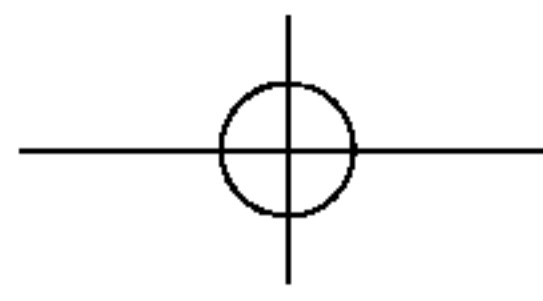

# Selecting and Adjusting the Screen

## Closed Captions - Optional

---

Closed captioning is a process which converts the audio portion of a television program into written words which then appear as subtitles on the television screen. Closed captions allow viewers to read the dialogue and narration of television programs.


### Using Closed Captions

Captions are the subtitles of the dialogue and narration of television programs. For prerecorded programs, program dialogue can be arranged into captions in advance. It is possible to caption a live program by using a process called real-time captioning, which creates captions instantly. Real-time captioning is normally done by professional reporters using a machine shorthand system and computer for translation into English.


Captioning is an effective system for the hearing-impaired, and it can also aid in teaching language skills.

### Caption Tips

1. Not all TV broadcasts include closed caption signals.
2. Sometimes TV stations broadcasts four different caption signals on the same channel. By selecting **From CC1 ~ CC4, TEXT1 ~ TEXT4** you can choose which signal you view **CC1** is usually the signal with the captions, while **Another mode** might show demonstration or programming information.
3. Your TV might not receive caption signals normally in the following situations.
  - Poor reception conditions are encountered :
    - **IGNITION** :  
Picture may flutter, drift, suffer from black spots, or horizontal streaking. Usually caused by interference from automobile ignition systems, neon lamps, electrical drills, and other electrical appliances.
    - **GHOSTS** :  
Ghosts are caused when the TV signal splits and follows two paths. One is the direct path and the other is reflected off tall buildings, hills or other objects. Changing the direction or position of the antenna may improve reception.
    - **SNOW** :  
If your receiver is located at the weak, fringe area of a TV signal, your picture may be marred by small dots. It may be necessary to install a special antenna to improve the picture.
  - An old, bad or illegally recorded tape is playing.
  - Strong, random signals from a car or airplane interfere with the TV signal.
  - The signal from the antenna is weak.
  - The program wasn't captioned when it was produced, transmitted, or taped.

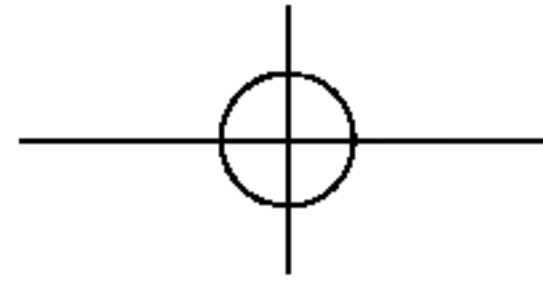

## Adjusting the screen function (PC only)

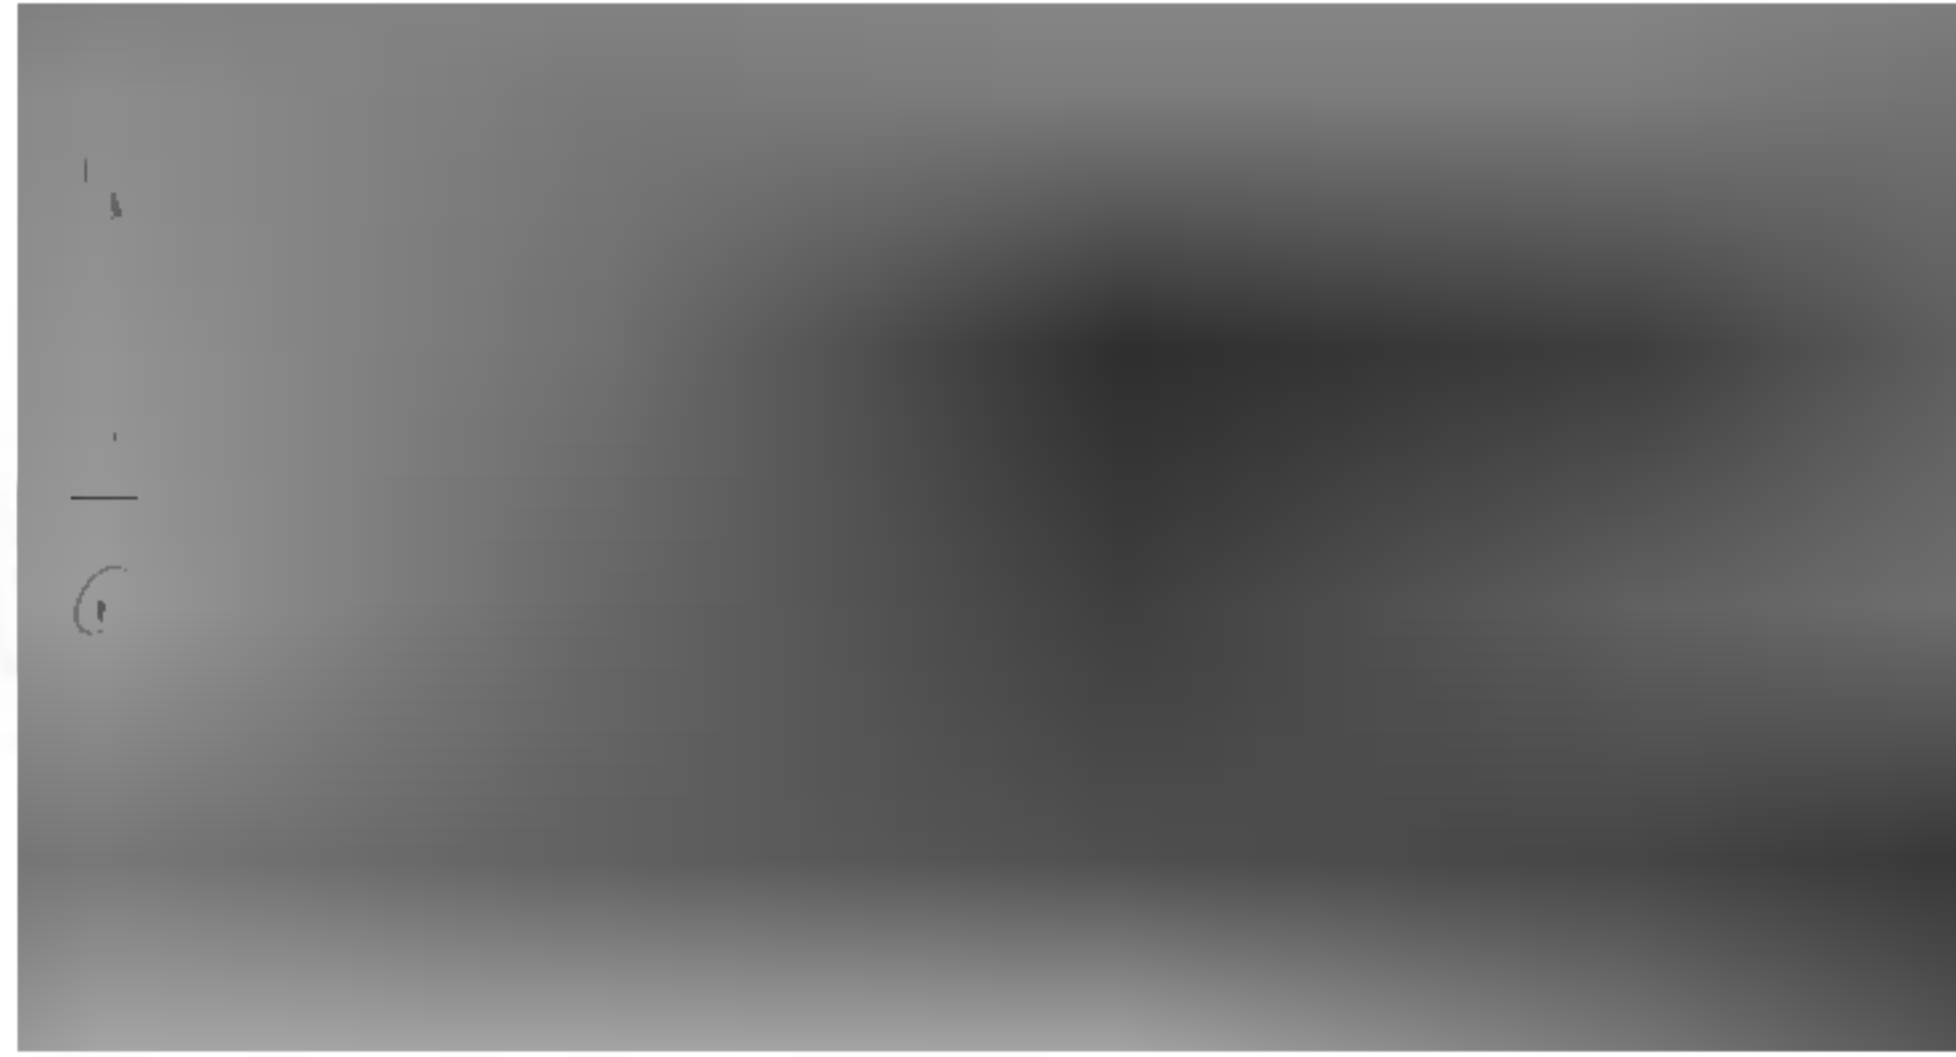

### Reset

Use this function to reset the product to the factory default. However, language selection will not be initialized.

### Auto configure

This button is for the automatic adjustment of the screen **Position**, **Clock** and **Phase**.

### Manual configure

This button is for the manual adjustment of the screen **Position**, **Clock** and **Phase**.

- **H-Position**

To move image left or right.

- **V-Position**




To move image up or down.


- **Clock**

To minimize any vertical bars or stripes visible on the screen background.  
The horizontal screen size will also change.

- **Phase**

To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.

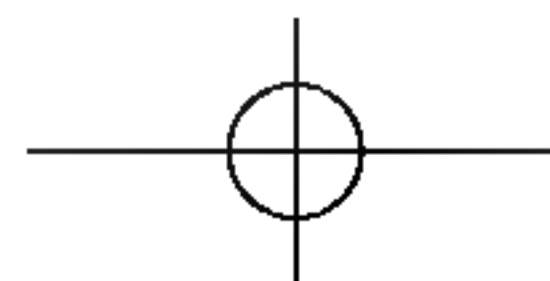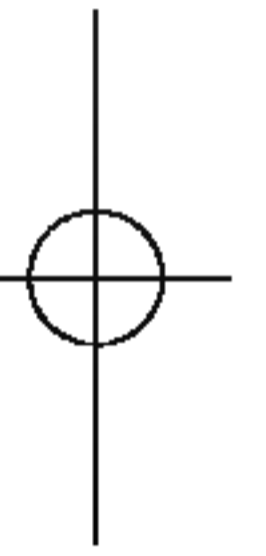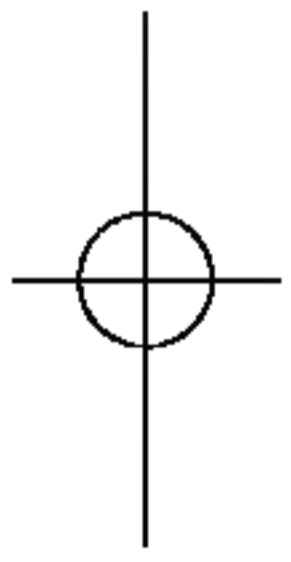

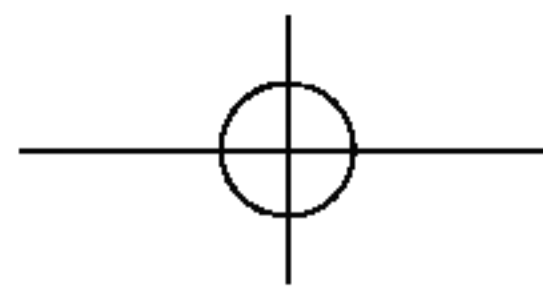

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>● Is the product power cord connected?</li> </ul>  | <ul style="list-style-type: none"> <li>• See if the power cord is properly connected to the outlet.</li> </ul>   |
| <ul style="list-style-type: none"> <li>● Does the power indicator is turned on?</li> </ul>                                      | <ul style="list-style-type: none"> <li>• See if the power switch is turned on.</li> </ul>  |
| <ul style="list-style-type: none"> <li>● Power is on, power indicator is blue but the screen appears extremely dark.</li> </ul> | <ul style="list-style-type: none"> <li>• Adjust brightness and contrast again.</li> </ul>  |
| <ul style="list-style-type: none"> <li>● Does the power indicator look amber?</li> </ul>  | <ul style="list-style-type: none"> <li>• If the product is in power saving mode, move the mouse or press any key.</li> </ul>   |
| <ul style="list-style-type: none"> <li>● Does the 'Out of range' message appear?</li> </ul>                                     | <ul style="list-style-type: none"> <li>• The signal from the PC (video card) is out of the vertical or horizontal frequency range of the product. Adjust the frequency range by referring to the Specifications in this user's guide.</li> <li>* <b>Maximum resolution</b></li> <li>17, 19 inch : 1280 x 1024 @75Hz</li> <li>15 inch : 1024 x 768 @75Hz</li> </ul> |
| <ul style="list-style-type: none"> <li>● Does the 'Check signal cable' message appear?</li> </ul>                               | <ul style="list-style-type: none"> <li>• The signal cable between PC and product is not connected. Check the signal cable.</li> <li>• Press the '<b>multimedia</b>' button in the remote control to check the input signal.</li> </ul>   |


- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>● Did you install the driver?</li> </ul> | <ul style="list-style-type: none"> <li>• Install the product driver, which is provided with the product, or download it from the web site. (<a href="http://www.lge.com">http://www.lge.com</a>)</li> <li>• See if the plug&amp;play function is supported by referring to the video card user's guide.</li> </ul> |
|---|--|





### Note

\* **Vertical frequency:** To enable the user to watch the product display, screen image should be changed tens of times every second like a fluorescent lamp. The vertical frequency or refresh rate is the times of image display per second. The unit is Hz.

\* **Horizontal frequency:** The horizontal interval is the time to display one vertical line. When the 1 is divided by horizontal interval, the number of horizontal lines displayed every second can be tabulated as the horizontal frequency. The unit is kHz.


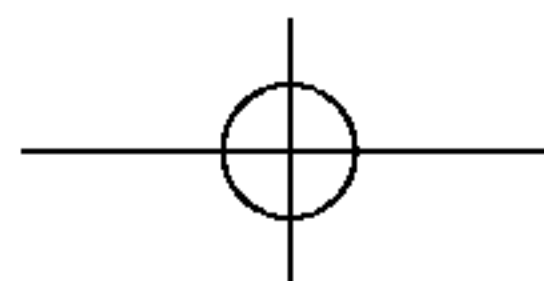


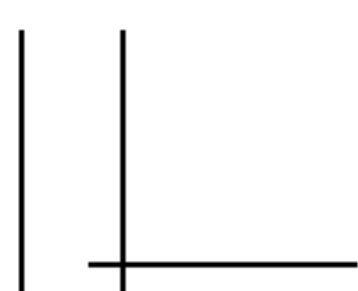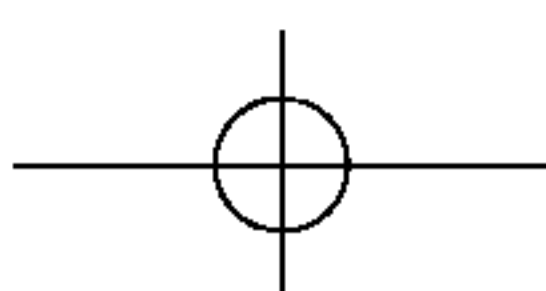


<ul style="list-style-type: none"><li>● <b>Is the screen position wrong?</b></li></ul>	<ul style="list-style-type: none"><li>• D-Sub analog signal – Press the AUTO/SELECT<sup>™</sup> button in the front side of the set to automatically select the optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Position OSD menu.</li><li>• See if the video card resolution and frequency are supported by the product. If the frequency is out of range, set to the recommended resolution in the Control Panel – Display – Setting menu.</li></ul>
<ul style="list-style-type: none"><li>● <b>Do thin lines appear on the background screen?</b></li></ul>	<ul style="list-style-type: none"><li>• D-Sub analog signal – Press the AUTO/SELECT<sup>™</sup> button in the front side of the set to automatically select an optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Clock OSD menu.</li></ul>
<ul style="list-style-type: none"><li>● <b>Horizontal noise appears or the characters look blurred.</b></li></ul>	<ul style="list-style-type: none"><li>• D-Sub analog signal – Press the AUTO/SELECT<sup>™</sup> button in the front side of the set to automatically select an optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Phase OSD menu.</li></ul>



<ul style="list-style-type: none"><li>● <b>After-image appears when the product is turned off.</b></li></ul>	<ul style="list-style-type: none"><li>• If you use a fixed image for a long time, the pixels may be damaged quickly. Use the screensaver function.</li></ul>
--	--

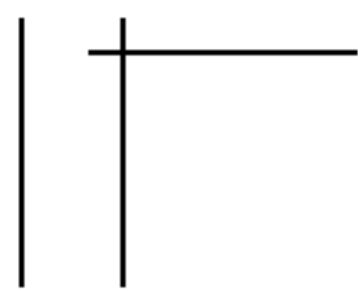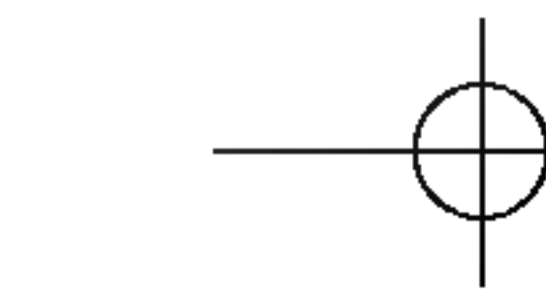


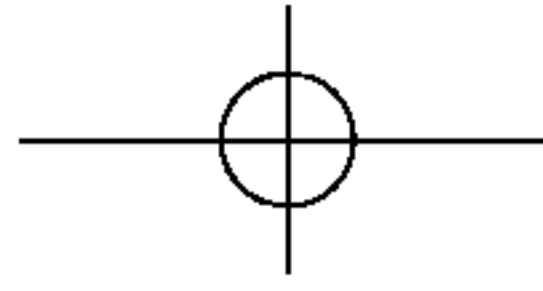


<ul style="list-style-type: none"><li>● <b>No sound?</b></li></ul>	<ul style="list-style-type: none"><li>• See if the audio cable is connected properly.</li><li>• Adjust the volume.</li><li>• See if the sound is set properly.</li></ul>
<ul style="list-style-type: none"><li>● <b>Sound is too low.</b></li></ul>	<ul style="list-style-type: none"><li>• Adjust the volume.</li></ul>

<ul style="list-style-type: none"><li>● <b>The TV signal is not being received.</b></li></ul>	<ul style="list-style-type: none"><li>• See if you have selected the proper channel mode.</li><li>• Use the automatic channel setup function.</li><li>• See if the TV antenna is properly connected.</li></ul>
---	--

<ul style="list-style-type: none"><li>● <b>Screen has poor color resolution (16 colors).</b></li></ul>	<ul style="list-style-type: none"><li>• Set the number of colors to more than 24 bits (true color) Select Control Panel – Display – Settings – Color Table menu in Windows.</li></ul>
<ul style="list-style-type: none"><li>● <b>Screen color is unstable or mono-colored.</b></li></ul>	<ul style="list-style-type: none"><li>• Check the connection status of the signal cable. Or, re-insert the PC video card.</li></ul>
<ul style="list-style-type: none"><li>● <b>Do black spots appear on the screen?</b></li></ul>	<ul style="list-style-type: none"><li>• Several pixels (red, green, white or black color) may appear on the screen, which can be attributable to the unique characteristics of the LCD panel. It is not a malfunction of the LCD.</li></ul>

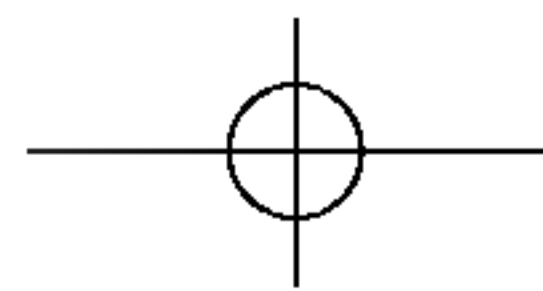



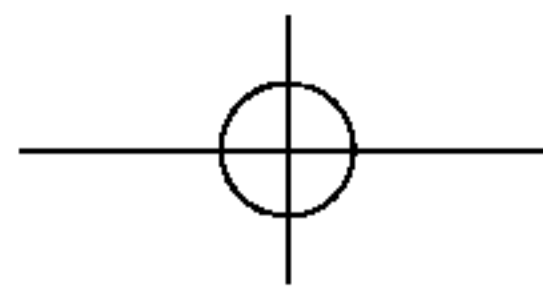


The product specifications can change without prior notice for product improvement.

[15 inch]

<b>LCD Panel</b>	<b>Screen Type</b>	15 inches (38.016 cm) TFT (Thin Film Transistor) LCD (Liquid Crystal Display) Panel Visible diagonal size: 38.016 cm
	<b>Pixel Pitch</b>	0.297 mm
<b>Video Signal</b>	<b>Max. Resolution</b>	1024 X 768 @75Hz
	<b>Recommended Resolution</b>	1024 X 768 @60Hz
	<b>Horizontal Frequency</b>	30 - 63 kHz
	<b>Vertical Frequency</b>	56 - 75 Hz
	<b>Synchronization Type</b>	Separate
<b>Input Connector</b>	S-Video, Composite video, TV, D-Sub Analog	
<b>Power</b>	<b>Rated Voltage</b>	AC 100-240V~ 50/60Hz 0.6A
	<b>Power Consumption</b>	On Mode: 30W Sleep Mode : ≤ 4W Off Mode : ≤ 2W
<b>Tilt</b>	<b>Tilt Range</b>	-5° ~ 25°
	<b>Tilt Stand</b>	Attached
<b>Dimension/Weight</b>	<b>Size (WxLxH)</b>	375.4 mm x 221.8 mm x 373.8 mm
	<b>Weight (excl. package)</b>	4.4 kg (9.7 lbs)
<b>Environmental Conditions</b>	<b>Operational Condition</b>	Temperature: 10°C ~ 35°C , Humidity: 10% ~ 80%
	<b>Storage Condition</b>	Temperature: -20°C ~ 60°C , Humidity: 5% ~ 95%

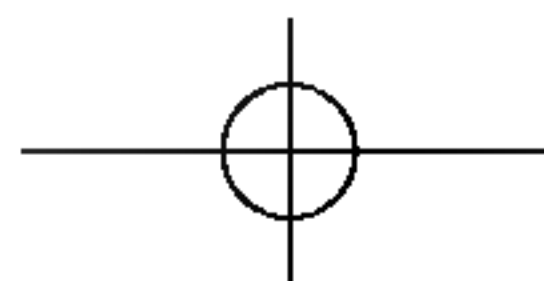


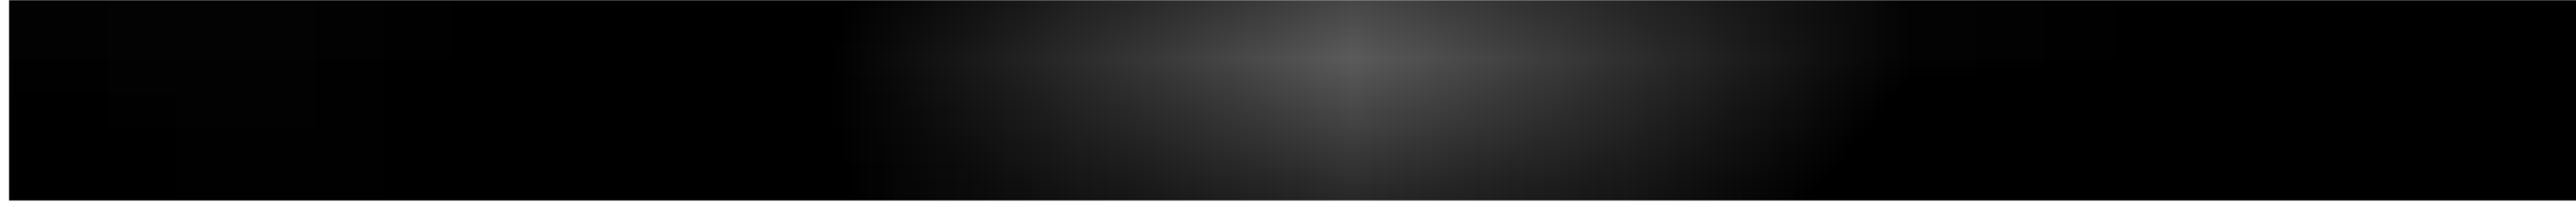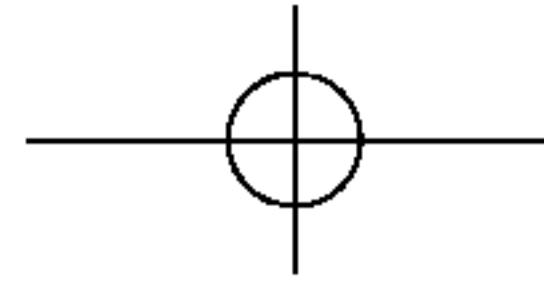


The product specifications can change without prior notice for product improvement.

[17 inch]

<b>LCD Panel</b>	<b>Screen Type</b>	17 inches (43.27 cm) TFT (Thin Film Transistor) LCD (Liquid Crystal Display) Panel Visible diagonal size: 43.27 cm
	<b>Pixel Pitch</b>	0.264 mm
<b>Video Signal</b>	<b>Max. Resolution</b>	1280 X 1024 @75Hz
	<b>Recommended Resolution</b>	1280 X 1024 @60Hz
	<b>Horizontal Frequency</b>	30 - 83 kHz
	<b>Vertical Frequency</b>	56 - 75 Hz
	<b>Synchronization Type</b>	Separate
<b>Input Connector</b>	S-Video, Composite video, TV, D-Sub Analog	
<b>Power</b>	<b>Rated Voltage</b>	AC 100-240V ~ 50/60Hz 1.0A
	<b>Power Consumption</b>	On Mode: 50W Sleep Mode : ≤ 4W Off Mode : ≤ 2W
<b>Tilt</b>	<b>Tilt Range</b>	-5° ~ 25°
	<b>Tilt Stand</b>	Attached
<b>Dimension/Weight</b>	<b>Size (WxLxH)</b>	419.9 mm x 221.8 mm x 423.5 mm
	<b>Weight (excl. package)</b>	5.9 kg (13.0 lbs)
<b>Environmental Conditions</b>	<b>Operational Condition</b>	Temperature: 10°C ~ 35°C , Humidity: 10% ~ 80%
	<b>Storage Condition</b>	Temperature: -20°C ~ 60°C , Humidity: 5% ~ 95%

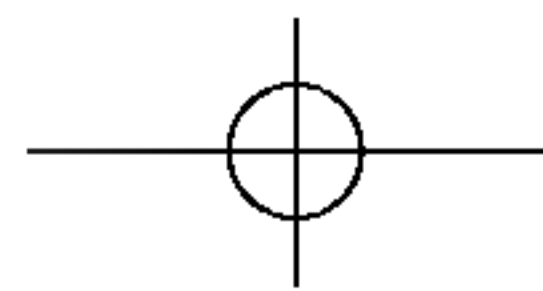


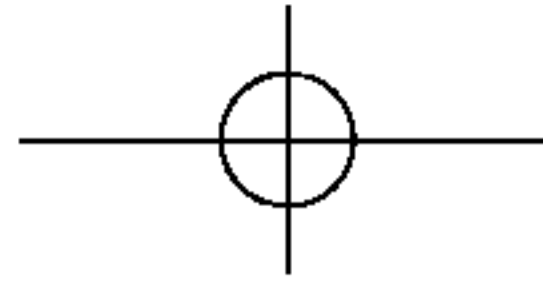


The product specifications can change without prior notice for product improvement.

[19 inch]

<b>LCD Panel</b>	<b>Screen Type</b>	19 inches (48.18 cm) TFT (Thin Film Transistor) LCD (Liquid Crystal Display) Panel Visible diagonal size: 48.18 cm
	<b>Pixel Pitch</b>	0.294 mm
<b>Video Signal</b>	<b>Max. Resolution</b>	1280 X 1024 @75Hz
	<b>Recommended Resolution</b>	1280 X 1024 @60Hz
	<b>Horizontal Frequency</b>	30 - 83 kHz
	<b>Vertical Frequency</b>	56 - 75 Hz
	<b>Synchronization Type</b>	Separate
<b>Input Connector</b>	S-Video, Composite video, TV, D-Sub Analog	
<b>Power</b>	<b>Rated Voltage</b>	AC 100-240V~ 50/60Hz 1.0A
	<b>Power Consumption</b>	On Mode : 55W Sleep Mode : ≤ 4W Off Mode : ≤ 2W
<b>Tilt</b>	<b>Tilt Range</b>	-5° ~ 25°
	<b>Tilt Stand</b>	Attached
<b>Dimension/Weight</b>	<b>Size (WxLxH)</b>	458.3 mm x 242.0 mm x 457.7 mm
	<b>Weight (excl. package)</b>	7.0 kg (15.4 lbs)
<b>Environmental Conditions</b>	<b>Operational Condition</b>	Temperature: 10°C ~ 35°C , Humidity: 10% ~ 80%
	<b>Storage Condition</b>	Temperature: -20°C ~ 60°C , Humidity: 5% ~ 95%

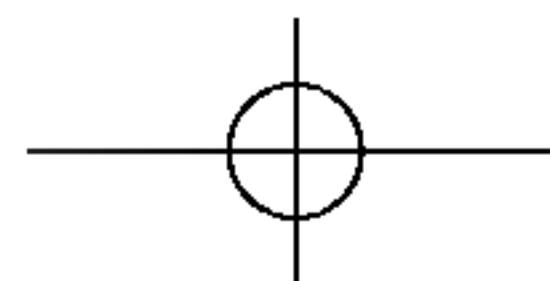

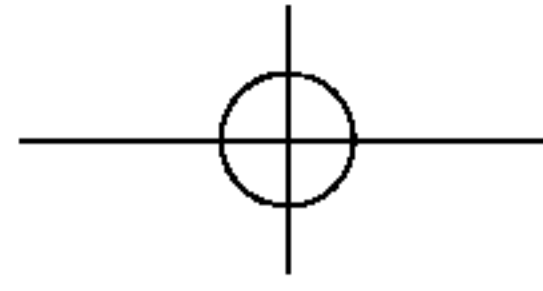

**● PC Mode – Preset Mode**

[15 inch]

1	VGA 640 x 350	31.468	70	8	VESA 800 x 600	37.879	60
2	VGA 720 x 400	31.468	70	9	MAC 800 x 600	48.077	72
3	VGA 640 x 480	31.469	60	10	VESA 800 x 600	46.875	75
4	VESA 640 x 480	35.000	66	11	MAC 832 x 624	49.725	74
5	VESA 640 x 480	37.861	72	12	VESA 1024 x 768	48.363	60
6	VESA 640 x 480	37.500	75	13	VESA 1024 x 768	56.476	70
7	VESA 800 x 600	35.156	56	14	VESA 1024 x 768	60.023	75

[17 inch]


1	VGA 640 x 350	31.469	70	8	VESA 1024 x 768	48.363	60
2	VGA 720 x 400	31.468	70	9	MAC 1024 x 768	60.123	75
3	VGA 640 x 480	31.469	60	10	VESA 1152 x 870	68.681	75
4	VESA 640 x 480	37.500	75	11	VESA 1152 x 900	61.805	65
5	VESA 800 x 600	37.879	60	12	VESA1280 x 1024	63.981	60
6	VESA 800 x 600	46.875	75	13	VESA1280 x 1024	79.976	75
7	VESA 832 x 624	49.725	74				


[19 inch]

1	VGA 640 x 350	31.469	70	8	VESA 1024 x 768	48.363	60
2	VGA 720 x 400	31.468	70	9	MAC 1024 x 768	60.123	75
3	VGA 640 x 480	31.469	60	10	VESA 1152x870	68.681	75
4	VESA 640 x 480	37.500	75	11	VESA 1152x900	61.805	65
5	VESA 800 x 600	37.879	60	12	VESA1280 x 1024	63.981	60
6	VESA 800 x 600	46.875	75	13	VESA1280 x 1024	79.976	75
7	VESA 832 x 624	49.725	74				


**● Power Indicator**

On Mode	Blue
Sleep Mode	Amber
Off Mode	Off

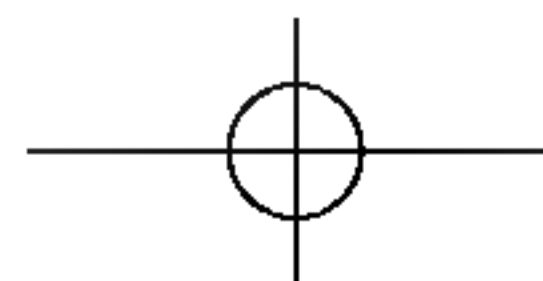

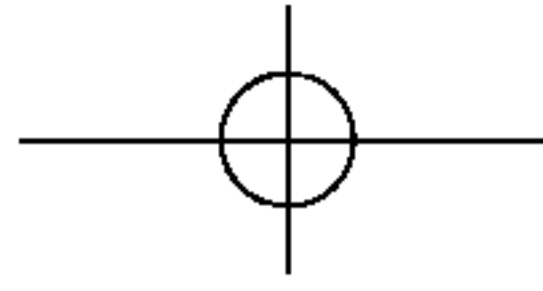


## ● VESA wall mounting

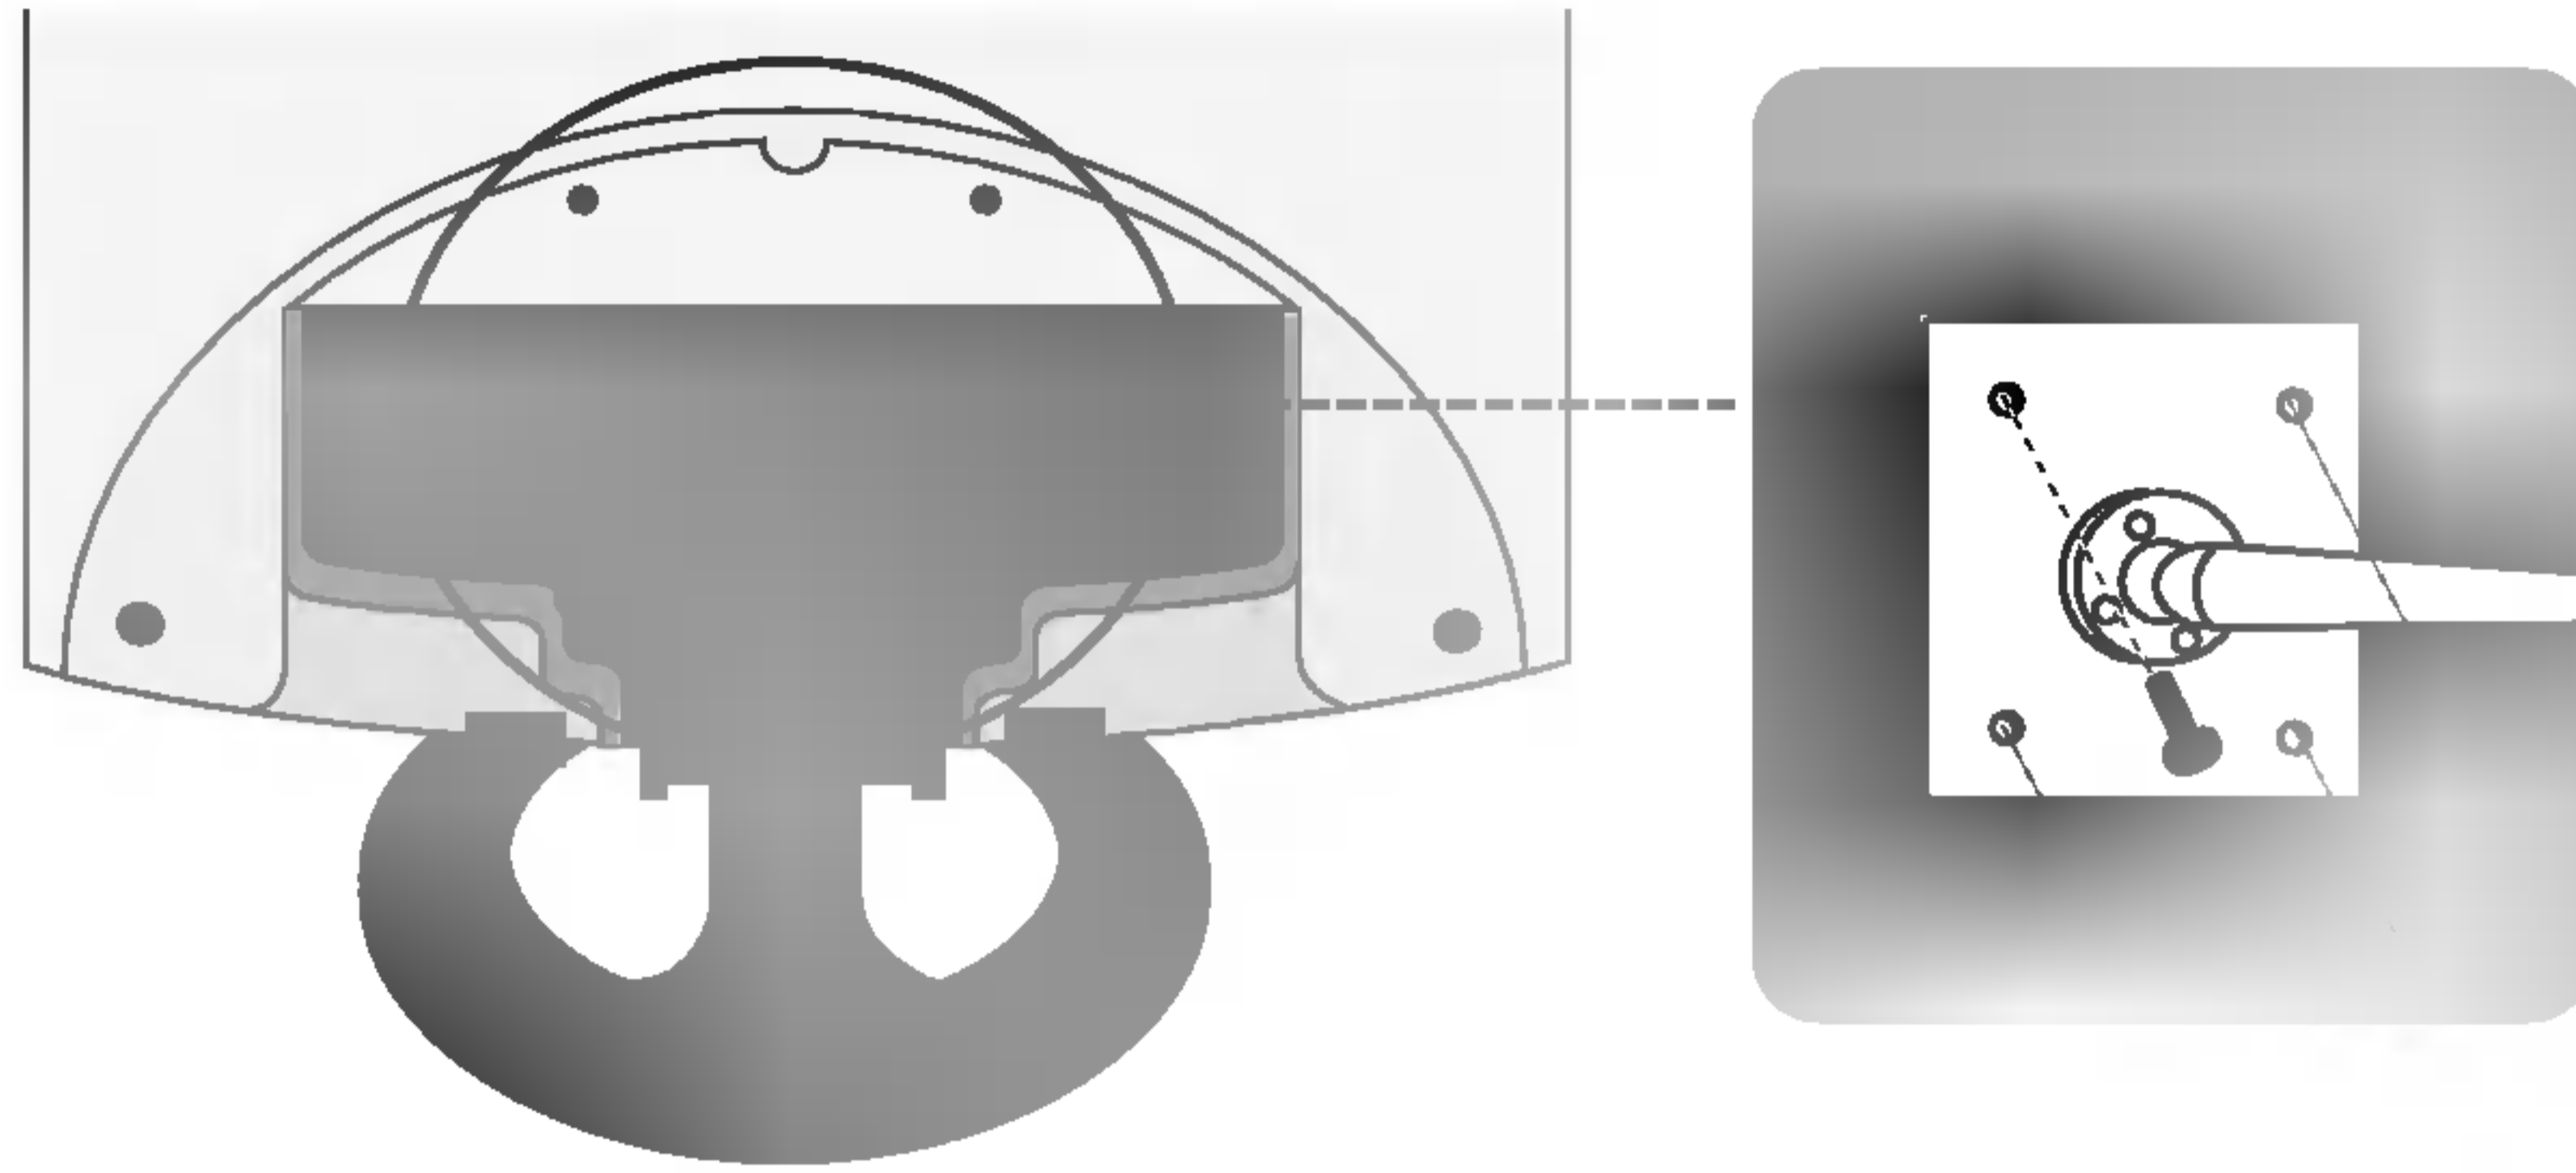

### **VESA wall mounting**

Connected to another object (Stand type and wall-mounted type),  
This monitor accepts a VESA-compliant mounting interfacepad.(optional)  
For further information, refer to the VESA Wall Mounting Instruction Guide.

## ● Theft prevention locking device

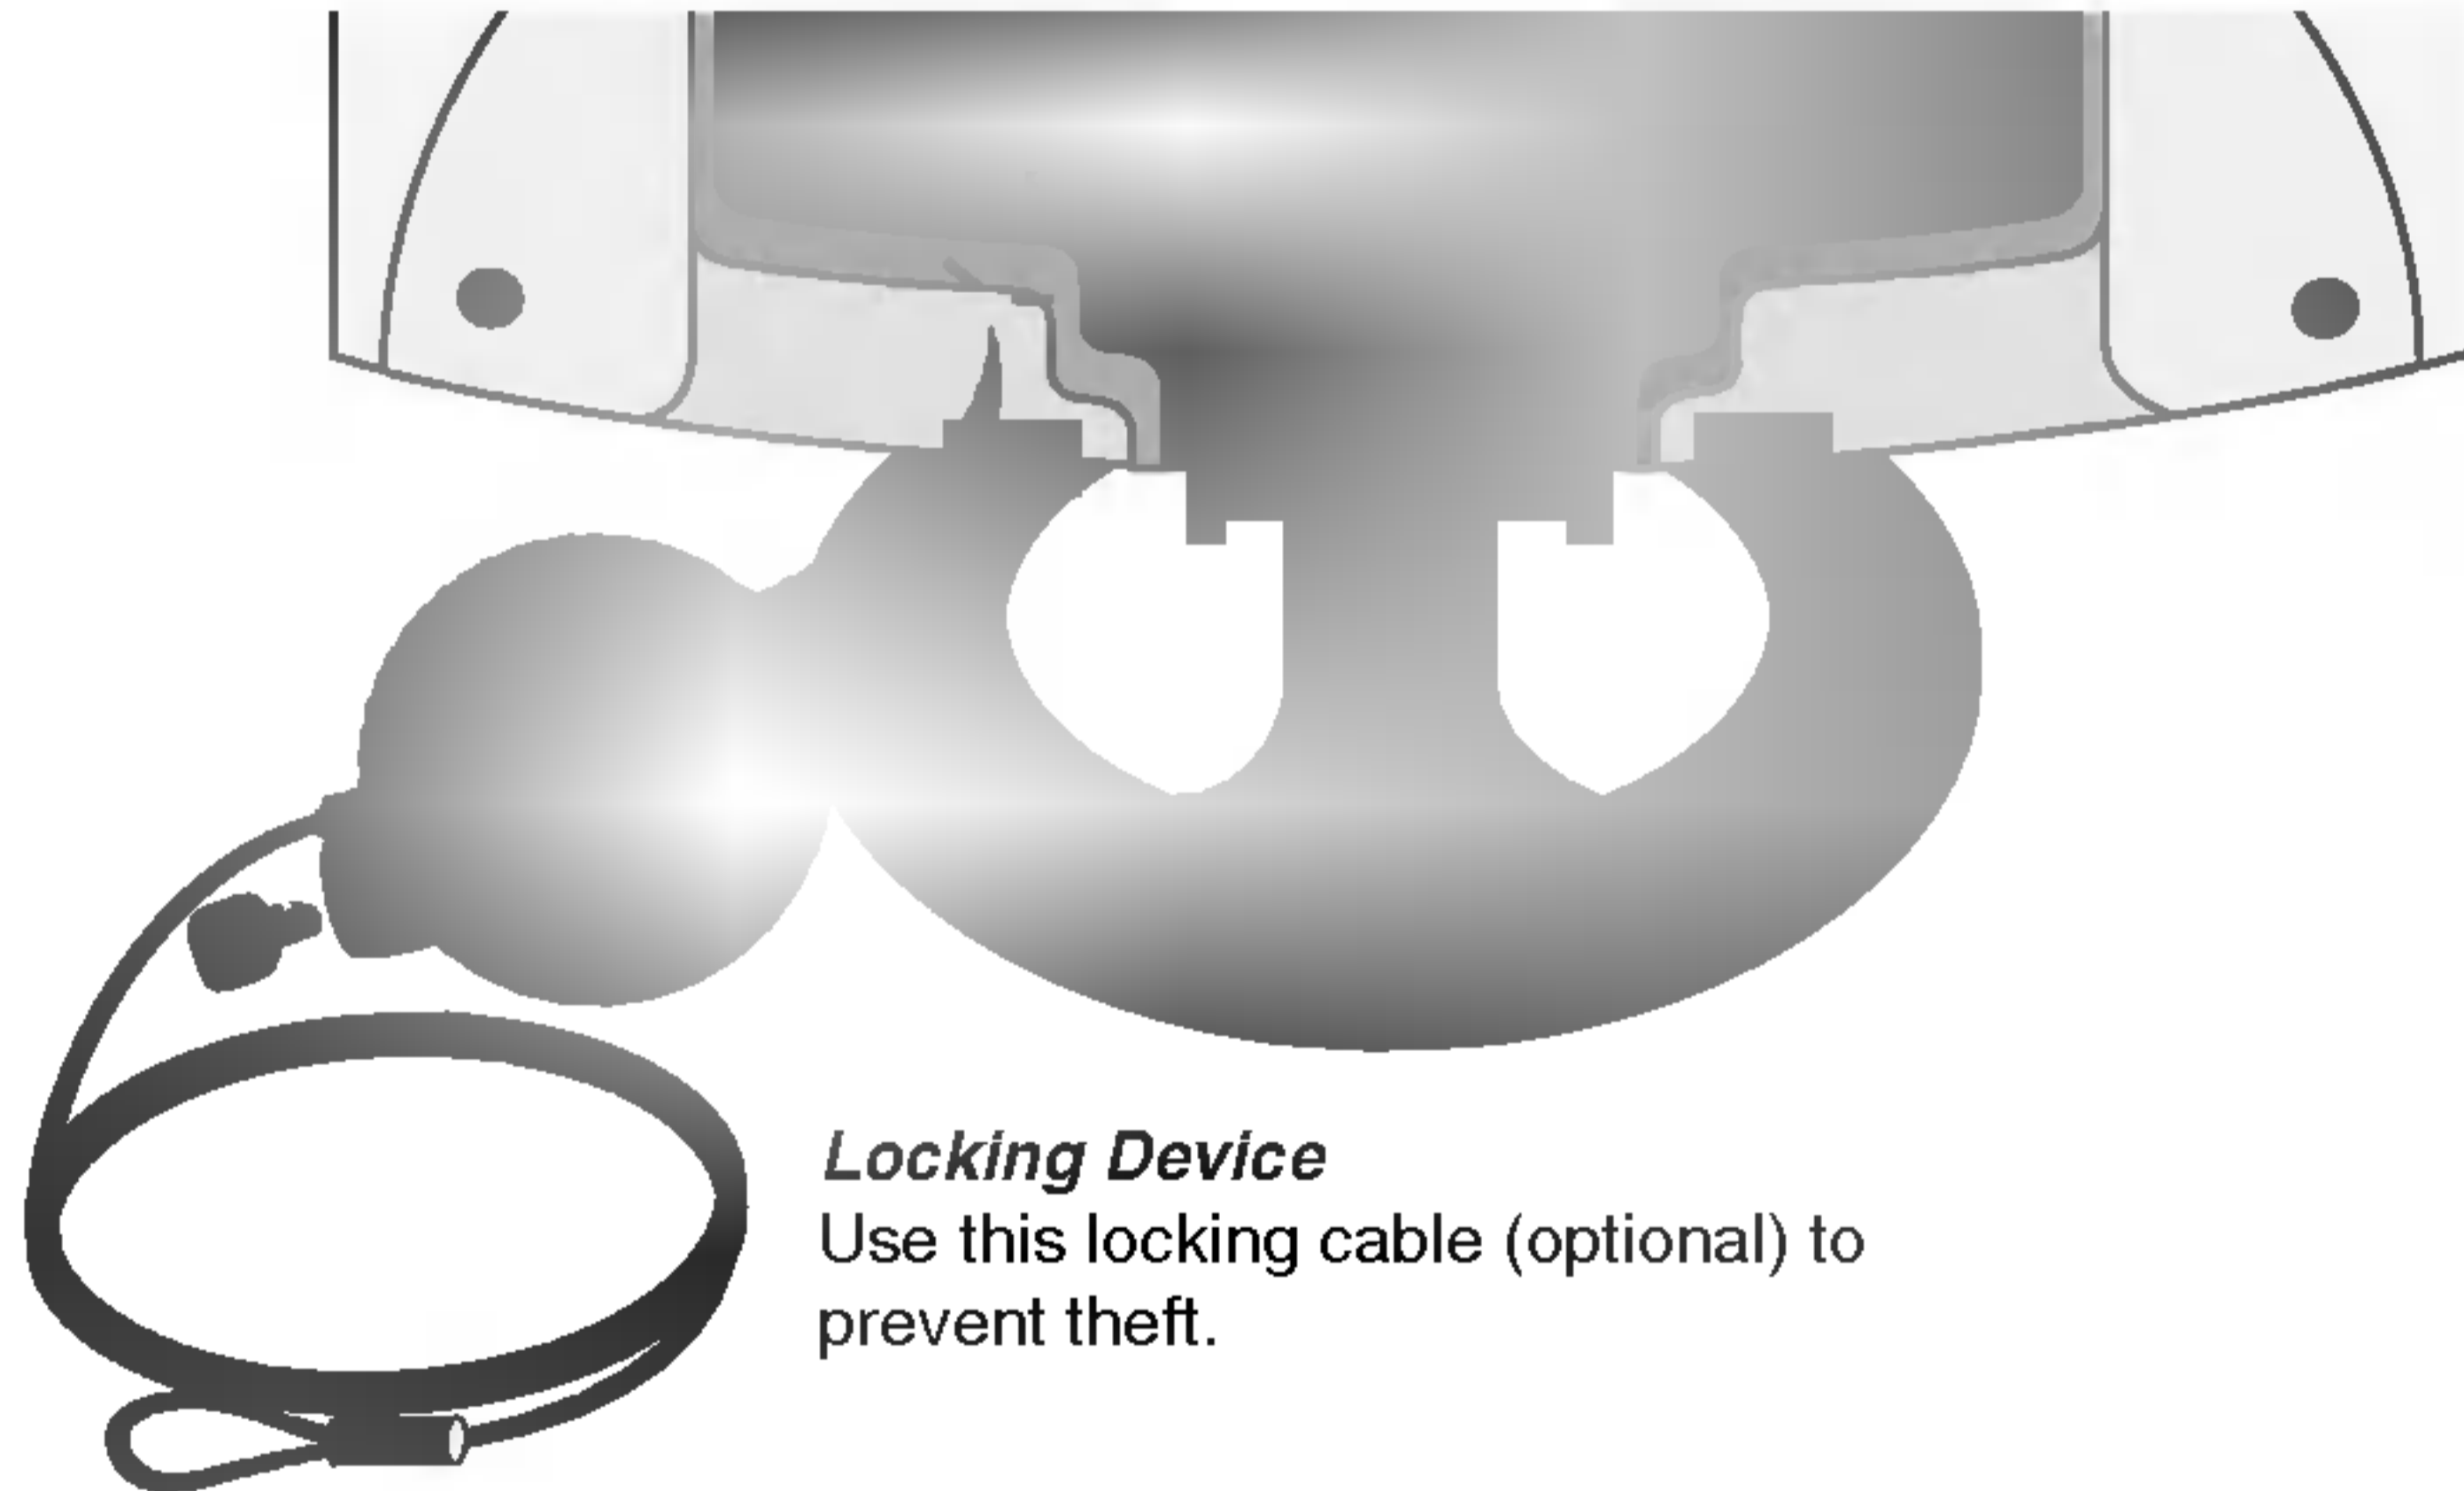

**Locking Device**  
Use this locking cable (optional) to  
prevent theft.

