

TG300 | USER GUIDE |

LG Electronics Inc.

<http://www.lgmobile.com>

P/N : MMBB0208703 (1.2) ■

| TG300 | USER GUIDE

LG Electronics Inc.



ENGLISH



| TG300 | USER GUIDE

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

CE 0168

| TG300 | USER GUIDE

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Note

- ▶ To connect your mobile phone to your computer, you will need the LG PC Sync software. Download and install the programs from the website listed below:

http://au.wowlg.com/phones/mnsw_list.jsp

- ▶ Press  to access Menu mode in standby mode.

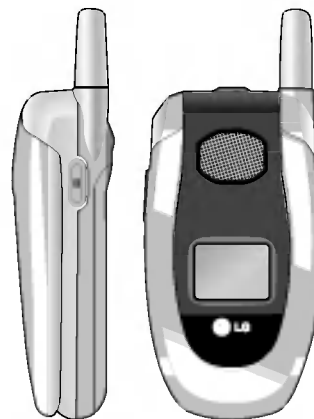 


Table of Contents

Unpacking	6
For Your Safety	7
Guidelines for safe and efficient use	8
Your Phone	14
Getting started	19
General Functions	23
Selecting functions and options	28
In-Call Menu	29
Menu Tree	32

SIM-Services	34
Messaging	35
Text	
Multimedia	
Inbox	36
Drafts	37
Outbox	
Sent	
Voice Mail	
Template	38
Text	
Multimedia	
Business Card	

Settings	39
Text Message	
Multimedia Message	
Vicemail Number	40
Download Messages	
Check Memory	

Recent Calls	41
Missed Calls	
Dialed Calls	
Received Calls	
Delete Recent Calls	
Call Duration	
Last Call	
Dialed Calls	42
Received Calls	
All Calls	
Call costs	
Settings	
Data Information	
Web Data	
Data Call	
Total Data	43

Tools	44
Camera	
Print via Bluetooth	45
Alarm Clock	46
Calendar	
Voice Memo	47
Calculator	48
Notepad	
World Clock	49
Unit Converter	
Tip Calculator	

BigPond	50
BigPond Home	
Favorites	
Go To URL	51
Network Profile	
Cache Settings	52
Clear Cache	
Allow Cache	
Security Certificates	
Information	

Table of Contents

<hr/> Push to Talk (PTT)	53	<hr/> Address Book	63	<hr/> Settings	65
PTT Contacts	57	Contacts		Audio	
<hr/> Add Contact	59	New Contact		Ringtones	
Add Group		Speed Dial List		Volume	
PTT Settings		Caller Groups		Ring Alert Type	
<hr/> My Stuff	61	<hr/> Copy All Contacts	64	Message Alert Tones	
Favorites		SIM To Phone		Key Tones	
Games & Apps		Phone To SIM		Voice Memo	
Audio		<hr/> Delete All Contacts		<hr/> Display	66
<hr/> Graphics	62	Set Memory		Wallpaper	
		Information		Backlight Timer	
		Check Memory		Contrast	
		My Numbers		Languages	
				<hr/> Bluetooth	
				Bluetooth On/Off	
				<hr/> Device List	67
				Settings	

Date & Time 67

Set Date

Date Format

Set Time

Time Format

Auto Update 68**Call**

Call Forwarding

Answer Mode

Send My Number

Call Waiting 69

Minute Minder

Auto Redial

Closed User Group

Send DTMF Tones

Security 69

Request PIN Code 70

Call Barring Services

Change Codes 71**Connection**

Network selection

Change Frequency Band

GPRS Attach

Network Profile 72

Reset Network Profile

PTT key Lock**Reset Default**

Q&A 73

Accessories 75

Technical data 76

Glossary 77

Index 79

Unpacking

Important Information

Unpacking



Handset



Standard Battery



Travel Adapter



User Guide

For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- ▶ Mobile Phones must be switched off at all times in aircrafts.
- ▶ Do not hold the phone in your hand while driving.
- ▶ Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- ▶ For your safety, use ONLY specified ORIGINAL batteries and chargers.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.

Caution

- ▶ Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- ▶ Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.
- ▶ Only use ORIGINAL accessories to avoid damage to your phone.
- ▶ All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- ▶ Batteries should be disposed of in accordance with relevant legislation.
- ▶ Do not dismantle the phone or battery

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information FCC Part 15 Class B Compliance

This mobile phone model TG300 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for

exposure to radio waves.

- ▶ The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.863 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.084 W/kg (10g) and when worn on the body, as described in this user's manual, is 0.826 W/kg (10g). (Bodyworn measurements differ amongphone models, depending upon available accessories and FCC requirements.)

While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) back of the phone. between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5cm) s body and the back must be maintained between the user s body and the back of the phone. Third-party beltclips, holsters, and similar accessories containing metallic components should not be used. Body-worn maintain 0.6 inches (1.5cm) separation distance between the user s body and the back of the phone, and have not been tested for typical bodyworn operations may not comply with FCC RF exposure limits and should be avoided.

Product care and maintenance

WARNING! *Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.*

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.

Guidelines for safe and efficient use

- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- ▶ Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in

your motor vehicle such as a car stereo or safety equipment.

- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Guidelines for safe and efficient use

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight

or use it in high humidity, such as in the bathroom.

- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- ▶ Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- ▶ Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow,

ice and even heavy traffic can be hazardous.

- ▶ Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- ▶ If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- ▶ Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- ▶ Use your wireless phone to call emergency services for yourself or others. Dial 0-0-0 local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
- ▶ Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call 0-0-0 to call emergency number, as you would want others to do for you.

- ▶ Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Your Phone

Phone Components

Your Phone





Your Phone's Features

1. Earpiece

2,12. Left soft key/Right soft key: Each of these keys perform the functions indicated by the text on the display immediately above them.

3. PTT key: Use for quick access to the PTT function.

- Pressing and releasing this key while idle displays your PTT contacts.
- Pressing and holding this key while idle displays your PTT history.
- Pressing and holding this key while in a PTT call allows you to speak to the other call participants.

4. Side keys: These keys are used to control the volume of ringtone in standby mode and speaker volume during a call.

5. Send key: You can dial a phone number and answer incoming calls. Press this key in standby mode to quickly access the most recent incoming, outgoing and missed calls.

6. Alphanumeric keys: These keys are used to dial a number in standby mode and to enter number or characters in edit mode.

7. Microphone: Can be muted during a call for privacy.

8. Active flip: Open the flip to answer an incoming call and close to end the call.

9. Display screen: Displays phone status icons, menu items, web information, pictures and more in full color.

10. Navigation key: Use for quick access to phone functions.

11. Confirmation key: Several short presses will launch the WAP browser. Allows you to select and confirm menu options.

13. Message key: Use to retrieve or send text messages.

14. Camera key: Press this key to use the camera feature. Directly goes to the camera mode.

15. End/Power key: Allows you to power the phone on or off, end calls, or return to Standby Mode.

16. Clear key: Allows you to delete the characters entered or return you to the previous screen.

Your Phone



 
Backlight

A backlight illuminates the display and the keypad. When you press any key or open the folder, the backlight turns on. It turns off if no key is pressed within a given period of time, depending on the Backlight Timer menu option. After 10 seconds, the display turns off to conserve your battery power. To specify the length of time the backlight is active, set the Backlight Timer menu option (Menu 9.2.2).

External Display

Your phone has an external display on the cover. It indicates when you have an incoming call or a message. It also alerts you at the specified time when you set an alarm by turning on its backlight and showing corresponding icon on it.

Display Information

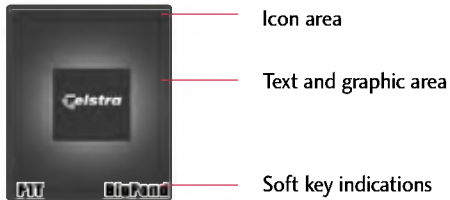











Area	Description
First line	Displays various icons. See page 17
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialed.
Last line	Shows the functions currently assigned to the two soft keys.



On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text message.
	Indicates the receipt of a MMS message.
	Indicates the receipt of a voice mail.

Your Phone

Icon	Description
	Indicates that the vibration has been set for alert.
	Indicates the silent has been set for alert.
	Indicates Ring has been set for alert.
	Indicates the speakerphone has been activated.
	Indicates that you received new download message.
	Indicates the Schedule function.
	Indicates the Bluetooth is On.
	Indicates that the status of PTT is Available .
	Indicates that the status of PTT is Unavailable.
	Indicates that the status of PTT is Do Not Disturb.

Icon	Description
	Indicates a PTT Message is waiting in the PTT Menu.
	Indicates the TTY has been set and is on.


Getting started

 
Installing the SIM card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


Important!

▶ The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
 - ① Push and hold the battery lock, located below the battery.
 - ② Slide down the battery cover, as shown.

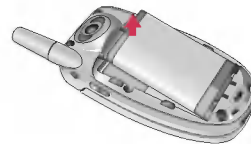

 - Slide the SIM card into the SIM card socket so that it locks the card into place. Make sure that the notched corner is bottom right and the gold contacts of the card face into the phone.

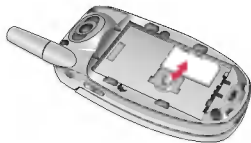**Note**

 - ▶ When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

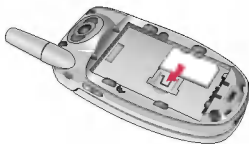

- To insert the battery, align the golden contacts of the battery with the corresponding connectors on the battery compartment. Press down on the opposite end of the battery until it snaps into place.



- Attach back cover by sliding up into position until it clicks.

 


Charging the Battery

Use of unauthorized accessories could damage your phone and void your warranty.

To use the travel charger provided with your phone:

1. With the battery in position on the phone, connect the lead from the travel charger to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the travel charger to a standard AC wall outlet. Only use the travel charger that comes included with the package.

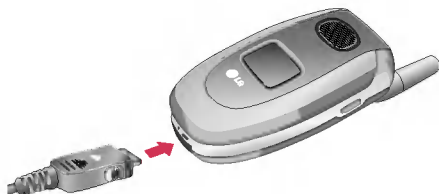

Warning

- ▶ The travel charger must be unplugged before you remove the battery, otherwise, the phone could be damaged.

3. When charging is finished, disconnect the travel charger from the phone by pressing on the gray tabs on both sides of the connector while pulling the connector out.



Notice



- ▶ If your phone is powered on while charging, you'll see the bars in the battery indicator icon cycle. When the battery is fully charged, the bars in the battery indicator icon will flash on and off.

Getting started

If the battery fails to charge completely:

- ▶ After turning the phone on and off, please attempt to recharge the battery.
- ▶ After detaching and reattaching the battery, please attempt to recharge the battery.

Turning Your Phone On and Off


1. Press the  [END] key to swith on the phone.
2. If the phone asks for a PIN, enter the PIN and press the  key.

The phone searches for your network and after finding it goes to the idle screen as illustrated below. From the idle screen, you can make or receive a call.



Notice

- ▶ The display language is preset to English at the factory. To change the language, use the Languages menu option (Menu 9.2.4).

3. When you wish to switch the phone off, hold down the  [END] key until the power-off image is displayed.

Access Codes





You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes can be changed by using the **Change Codes** feature (Menu 9.6.3).

Security code (4 digits)



The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Restore Factory Settings menu. The security code default setting can be modified from the Security Settings menu.

General Functions


Making a Call


1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  [SEND] key to call the number.
4. When finished, press the  [END] key.

Making a Call by Send Key


1. Press the  [SEND] key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the  [SEND] key.

Making International Calls

1. Press and hold the  key and the international access character '+' will appear.


2. Enter the country code, area code, and the phone number.
3. Press the  [SEND] key.

Ending a Call

When you have finished a call, press the  [END] key.

Making a Call From the Contacts

You can store names and phone numbers dialed frequently in the SIM card as well as in the phone memory known as the Contacts.

You can dial a number by simply selecting a name in the contacts and pressing the  [SEND] key.

Adjusting the Volume



During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the ring volume using the side keys.

General Functions


Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

1. Open the Flip and press the  [SEND] key or the left soft key to answer an incoming call. If Any Key has been set as the answer mode (Menu 9.5.2), any key press will answer a call except for the  [END] key or the right soft key.

Notice


- ▶ To reject an incoming call, press and hold the side keys on the left side of the phone.
- ▶ If **Flip Open** has been set as the Answer Mode (Menu 9.5.2), you do not need to press any key. You can answer the call simply by opening the flip.

2. End the call by closing the phone or pressing the  [END] key.

Notice

- ▶ You can answer a call while using the Address Book or other menu features.


Using the Speakerphone

You can use the speakerphone during a call by pressing the  [speakerphone] key located on the top of the phone. The loudspeaker is automatically deactivated when you end the call.

Warning

- ▶ Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

Vibrate Mode (Quick)

Vibrate Mode can be activated by pressing and holding down the  [Star] key.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, or creating scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.

T9 Mode


This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

To change to 123 mode in a text entry field, press  key until 123 mode is displayed.


Symbolic Mode

This mode allows you to enter special characters.

Notice

- ▶ You can select a different T9 language from the menu option. T9 is enabled by default on the handset.

Changing the Text Input Mode

Change the text input mode by pressing . You can check the current text input mode in the upper right corner of the screen.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

General Functions

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys to . Press one key per letter.

- ▶ The word changes as letters are typed - ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the up/down navigation keys once or more to cycle through the other word options.
- ▶ If the desired word is missing from the word choices list, add it by using the abc/ABC mode.

2. Enter the whole word before editing or deleting any keystrokes.

3. Complete each word with a space by pressing the key or the right navigation key.

To delete letters, press .

Press and hold down to erase the letters continuously. Continue holding to erase entire words.

Using the ABC Mode

Use the keypad keys to enter your text.











1. Press the key labeled with the required letter:

- ▶ Once for the first letter
- ▶ Twice for the second letter
- ▶ And so on

2. To insert a space, press the key once. To delete letters, press the key. Press and hold down the key to erase the letters continuously.

Note

- ▶ Refer to the table below for more information on the characters available using the keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	Space Key, 0 (Long press)	Space Key, 0 (Long press)


Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly.



Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the Symbol Mode

 
The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  [Star] key. Use the navigation keys to select the desired symbol and press the [OK] key.

Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked the left soft key  and the right soft key  key. Each menu and sub-menu allows you to view and alter the settings of a particular function.

The soft key functions vary depending on the mode of the phone. The label on the bottom of the display screen above the soft keys indicates current function.

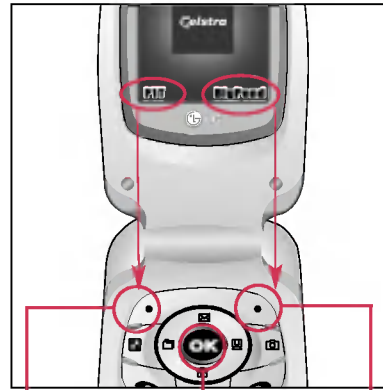

Press the left soft key to access PTT.

Press the right soft key to access Bigpond.

Short press will launch the WAP browser (In standby mode). Short press allows you to select and confirm menu options.

In-Call Menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the right soft key [**Options**].


During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

Making a Second Call

You can select a number you wish to dial from the Address Book to make a second call. Press the right soft key then select **Contacts**.


Swapping Between Two Calls

To switch between two calls, press the right soft key or the  [SEND] key, and then select **Swap**.

Answering an Incoming Call


To answer an incoming call when the handset is ringing,

simply press the [SEND] key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.

If Call Waiting is on, you can put the first call on hold and answer the second call, by pressing the  [SEND] key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  [END] key.

During a call, you can reject an incoming call by pressing the  [END] key.

Muting the Microphone



You can mute the microphone during a call by pressing the left soft key [**Mute**]. The handset can be unmuted by pressing the **Unmute** menu or the left soft key [**Unmute**]. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

In-Call Menu

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature. The conference call can only be set up when you have one call active and one call on hold, meaning both calls must have been answered. Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.


Making a Second Call

You can make a second call while currently on a call simply by entering the second number and pressing the  [SEND] key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  [SEND] key.

Setting Up a Conference Call

To set up a conference call, place one call on hold, conference in the second active call by pressing the right soft key and select the Join Calls sub menu option from the Conference Call menu.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  [SEND] key.


Adding Calls to the Conference Call

To add a call to an existing conference call, press the right soft key, and then select the Join Calls sub menu option from the Conference Call option.

Private Call in a Conference Call

To have a private call with one caller from a conference call, press the right soft key and select the Private Menu from the Conference Call option. When the numbers of the callers are displayed, select the one you wish to speak in private.

Ending a Conference Call

Currently active conference call can be disconnected by pressing the  [END] key.

Menu Tree

Note

▶ Press **OK** to access Menu mode in standby mode.

1. SIM-Services
2. Messaging
2.1 New Message
2.2 Inbox
2.3 Drafts
2.4 Outbox
2.5 Sent
2.6 Voice Mail
2.7 Template
2.8 Settings
2.9 Check Memory

3. Recent Calls
3.1 Missed Calls
3.2 Dialed Calls
3.3 Received Calls
3.4 Delete Recent Calls
3.5 Call Duration
3.6 Call Coats
3.7 Call Settings
3.8 Data Information


4. Tools
4.1 Camera
4.2 Print via Bluetooth
4.3 Alarm Clock
4.4 Calendar
4.5 Voice Memo
4.6 Calculator
4.7 Notepad
4.8 World Clock
4.9 Unit Converter
4.0 Tip Calculator

5. BigPond
5.1 BigPond Home
5.2 Favorites
5.3 Go To URL
5.4 Network Profile
5.5 Cache Settings
5.6 Security Certificates
5.7 Information
6. Push to Talk (PTT)
6.1 PTT Contacts
6.2 Add Contact
6.3 Add Group
6.4 PTT Settings

7. My Stuff
7.1 Favorites
7.2 Games & Apps
7.3 Audio
7.4 Graphics
8. Address Book
8.1 Contacts
8.2 New Contact
8.3 Speed Dial List
8.4 Caller Groups
8.5 Copy All Contacts
8.6 Delete All Contacts
8.7 Set Memory
8.8 Information

9. Settings
9.1 Audio
9.2 Display
9.3 Bluetooth
9.4 Date & Time
9.5 Call
9.6 Security
9.7 Connection
9.8 PTT key lock
9.9 Reset Default

SIM-Services



SIM-Services

Your service provider can offer special applications through SIM card, such as News & Fun, Games, etc. If you are registered for one of these services, the service name will appear. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.

New Message

Menu 2.1

Text (Menu 2.1.1)

1. Type in a message using key presses. For details on how to enter text, refer to page 25 (**Entering Text**).
2. After completing the message select the required option by pressing the right soft key [**Options**].

The following options are available.

▶ **Insert**

- **Symbol:** Attach special characters.
- **Picture:** Send and receive text messages that contain pictures, known as Enhanced Messaging Service. Several preset pictures are available in the phone.
- **Animation:** Attaching an animation in a message can be done through EMS(Enhanced Messaging Service).
- **Audio:** Attach sounds that are available for short message.
- **Text Templates:** Use the text templates already set in the phone.

- **Contact:** Attach a phone number.
- **Business Card:** Attach your name card.
- ▶ **Save to Drafts:** Save the message so that it can be sent later.
- ▶ **Set T9:** Switch on and off T9. For details on how to enter text, refer to page 25 (Using the T9 Mode).
- ▶ **Clear Text:** Deletes the written message.
- ▶ **Cancel:** Exit the text editor.
Press the left soft key [Send To].
- ▶ **Send To:** Enter the phone number or select the number from the address book.

Multimedia (Menu 2.1.2)

You can write and edit multimedia messages, checking message size.

You can create a new message or choose one of the multimedia message templates already made.

Press the left soft key [Send To].

- ▶ **Send To:** You can send multimedia messages to multiple recipients, prioritize your message, and make it sent later as well.

Messaging

The following options are available.

- ▶ **Insert:** Symbol, Graphic, Audio, New Slide, Text Templates, Contact or Business card.
- ▶ **Preview:** You can preview multimedia messages you wrote.
- ▶ **Save:** You can save multimedia messages **To Drafts** or **As Template**.
- ▶ **Edit subject:** You can edit the subject.
- ▶ **Delete Slide:** You can delete current slide.
- ▶ **Set Timer:** Allows you to set timer for your message.
- ▶ **Set T9:** Switch on/off T9 mode.
- ▶ **Cancel:** You can go back to the Message subject menu.

Note

- ▶ If you select the photo on writing multimedia message, loading duration will take about 5 seconds. At that time, keys will be momentarily deactivated. After the loading time, the keys will be re-activated, allowing you to continue writing the multimedia message.

Inbox

Menu 2.2

You will be alerted when you receive a message. They will be stored in the Inbox. When you are notified that you have received a multimedia message, you have to wait for the message to be downloaded before you can view it. To read a message, select one of the messages by pressing the left soft key. The following [Options] are available in the box list.

- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** Allows you to call the sender back.
- ▶ **Delete All read:** You can delete all messages read.
- ▶ **Delete All:** You can delete all messages received.

Drafts

Menu 2.3

You can view the messages saved as a draft. The following [Options] are available.

- ▶ **Delete:** Deletes the message you choose.
- ▶ **Delete All:** Deletes all messages in the folder.

Outbox

Menu 2.4

You can see unsent messages here.

When you didn't send the message, the following [Options] are available;

- ▶ **Delete:** You can delete the selected message that failed to send.
- ▶ **Resend:** You can resend the selected message that failed to send.
- ▶ **Delete all:** You can delete all messages that failed to send.

Sent



Menu 2.5

This is where you can view the lists and contents of sent messages and verify if the transmission was successful.

- ▶ **Delete:** Deletes the selected message from the Sent list.
- ▶ **Forward:** Forwards the current message to other recipients.
- ▶ **Delete All:** Deletes all messages from the Sent list.

Voice Mail

Menu 2.6

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your service provider. This may already be available; to check the voicemail, press and hold the  key. When new voicemail is received, the symbol  will be displayed on the screen.

Messaging

Template

Menu 2.7

There are 6 predefined messages in the list. You can view and edit the template messages or create new messages.

Text (Menu 2.7.1)

- Please call me back
- I'm late. I will be there at
- Where are you now?
- I'm on the way.
- Urgent! Please contact.
- I love you

There are 6 predefined messages in the list. You can

- ▶ **Edit:** You can edit the selected template message.
- ▶ **Send via**
 - **Text:** Sends the selected template message by SMS.
 - **Multimedia:** Sends the selected template message by MMS.

- ▶ **Delete:** Allows you to delete the selected template message.

Multimedia (Menu 2.7.2)

For further details, see page 35.

Business Card (Menu 2.7.3)

This option allows you to make your own name card. Key in the Name, Mobile number, Office number, Fax number and E-mail address.

- ▶ **Send Via**
 - **Text:** Sends the selected name card by SMS.
 - **Multimedia:** Sends the selected name card by MMS.
- ▶ **Delete:** Allows you to delete the selected name card.

Settings

Menu 2.8

Text Message (Menu 2.8.1)

▶ **Message types:**

Text, Voice, Fax, paging, X.400, Email, ERMES

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to Yes, you will be informed if your message has been sent successfully (operator dependent).
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill. This feature is not supported by some network operators.
- ▶ **Message Center Number:** Contains the SMS center number.
- ▶ **Email Gateway:** You can send the text message to

an Email Address via this gateway.

- ▶ **Subject:** If you set it to on, allows you to enter the subject.
- ▶ **Bearer Setting:** You can select GPRS or GSM. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.

Multimedia Message (Menu 2.8.2)

This menu, allows you to change settings related to multimedia messages.

The following options are available:

- ▶ **Subject:** Enter the message title.
- ▶ **Slide Duration:** Display the duration of each page when writing the message.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity Period:** This network service allows you to set how long your multimedia messages will be stored at the message center.

Messaging

- ▶ **Delivery Reports:** If yes has been selected, you will be informed if your message has been successfully delivered.
- ▶ **Read Receipts:** This menu allows you to request a read confirmation mail from the message recipient.
- ▶ **Auto Download**
 - **On:** Allows your handset to download multimedia messages automatically.
 - **Off:** You receive only notification messages in the inbox and then you can download the message.
- ▶ **Network Profile:** For further details, see page 51.

Vicemail Number (Menu 2.8.3)

This menu allows configure your voice mail number. Please check with your network service provider for details of their service in order to configure the handset accordingly.

Download Messages (Menu 2.8.4)

You can set the Service option to determine whether you will receive the service messages or not.

- ▶ **Receive:** You can set the option whether you will receive the message or not.

Check Memory

Menu 2.9

You can check the current memory status of each memory for Text and Multimedia.

Recent Calls

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time of the call. You can also view call times.

Missed Calls

Menu 3.1

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Dialed Calls

Menu 3.2

- View the number, if available, and call it or save it in the Address Book
- Enter new name for the number and save both in the Address Book
- Send a message by this number

- Delete the call from the list

Received Calls

Menu 3.3

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Delete Recent Calls

Menu 3.4

Allows you to delete **Missed**, **Received** and **Dialed call** lists. You can delete **All Calls** lists at one time.

Call Duration

Menu 3.5

This allows you to view the duration of the incoming and outgoing calls. You can also reset the call times. The following timers are available:

Last Call (Menu 3.5.1)

Length of the last call.

Recent Calls

Dialed Calls (Menu 3.5.2)

Length of the outgoing calls.

Received Calls (Menu 3.5.3)

Length of the incoming calls.

All Calls (Menu 3.5.4)

Total length of all calls made and incoming calls received since the timer was last reset.

Call costs

Menu 3.6

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to know your PIN2 code.

Settings

(SIM Dependent)

Menu 3.7

- ▶ **Call Cost Limit:** This network allows you to limit the cost of your calls by selected charging units. If you select Read, the number of remaining unit is shown. If you select Change, you can change your change limit.

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

- ▶ **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to On, you can see the last cost when the call is released.

Data Information

Menu 3.8

You can check the amount of data transferred over the network through the GPRS (General Packet Radio Service) information option. In addition, you can also view how much time you are online.

Web Data (Menu 3.8.1)

You can check the data volume and the duration spent surfing WAP.

Data Call (Menu 3.8.2)

You can check the data volume and the duration through GPRS by using an external device such as a serial port.

Total Data (Menu 3.8.3)



You can check the total amount of data through WAP and an external device.

Tools

Camera

Menu 4.1

The phone supports 3 modes that can be set to capture images and they are 160X120, 320X240 and 640X480.

You can access camera feature directly by pressing and holding the internal camera key  or external camera key .

Take Photo

Using the camera module built in your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message.

The right soft key [**Options**] will bring up the following options.

- ▶ **Image Size:** Sets the image size to 160X120, 320X240, 640X480 (default). The selected image size displays on the capture screen.
- ▶ **Brightness:** This adjusts the brightness level of the screen and there are 9 levels of setting.
- ▶ **White Balance:** This adjusts the Light Effect level and you can select from the following options: Auto/

Daylight/ Incandescent/ Cloudy/ Fluorescent.

- ▶ **Color Effect:** Allows you to apply special effects to the picture. Press the left or right navigation key to find the tone you want to use. Color, Sepia, Mono are available.
- ▶ **Self Timer:** Determines the delay time.
- ▶ **Flash:** Turns the flash feature on and off.
- ▶ **Multishot:** This feature enables the amount of continuous frames that can be taken at one time. The number of frames is determined by the image size setting.
- ▶ **Shutter Sound:** Allows you to select a sound when you press the shutter. Sound 1/ Sound 2/ Sound 3/ Silent
- ▶ **Default Settings:** This restores the original camera settings (Size, Brightness, Zoom, etc.).

Photo Album

In this menu, you can review the pictures you have taken. This feature offers the ability to store all captured photo images in an album. When no images have been captured, the **Empty** message will be displayed. The picture will display the last image

viewed. The title of the image will be displayed on top as well as the index number of the displayed image.

The left or right navigation key is used to view the previous or next image. Press the left soft key [View] and you can see the photo selected. Press the right soft key [Options] to display the following popup menu items.

- ▶ **Send Photo:** Allows you to send a multimedia message using the taken picture.
- ▶ **Take Photo:** Go to the camera application which enables you to take a still picture.
- ▶ **Set as Wallpaper:** Set selected photo image as a wallpaper.
- ▶ **Set as Photo ID:** You can add the selected image to a address book contact to use Photo Caller ID feature.
- ▶ **Delete:** Delete current image.
- ▶ **Print via Bluetooth:** For further details, see section (Menu 4.2)
- ▶ **Slideshow:** The Slide Show mode will display the images in slide show format. The images are shown every 1.5 second intervals.

- ▶ **Rename:** Allows you to rename the taken picture.
- ▶ **Delete All:** Delete all images in the album.
- ▶ **Information:** Displays Title, Size, Date and Time information on selected image.

Check Memory

This indicates the available memory capacity. The total available memory is 1.3MB and the used and remaining memory is displayed.

Print via Bluetooth

Menu 4.2

Most pictures that you've taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth to a printer.

1. Scroll to highlight the desired picture, and press the left soft key [Print].
2. Select the [New] by pressing the left soft key to search the printer device can be connected in range.
3. If the correct printer is found, the display of your phone shows the name of the printer.
4. Press [Connect].

Tools

Alarm Clock

Menu 4.3

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available:

On: Set the time(hour and minute) for activating the alarm.

1. Enter the menu.
2. Select [**On**] by pressing the right/left navigation keys.
3. If you want to set the time for activating the alarm, press the down navigation key.
4. Enter the required time, press the down navigation key.
5. The following options are available.
 - **Once:** The alarm rings only once and is then deactivated.
 - **Daily:** The alarm rings every day at the same time.
 - **Weekly:** The alarm rings every week on the same day and at the same time.
 - **Monthly:** The alarm rings every month on the same day and at the same time.

6. Allows you to select the alarm melody by using the right/left navigation keys.

7. Press the left soft key [**Set**].

Off: Cancel the alarm.





Note

- ▶ If this option is set to On, the alarm will ring at the specified time, even when the phone is switched off. To stop the alarm when it rings, open the phone and press the right soft key [**Quit**].

Calendar

Menu 4.4

When you enter this menu a calendar will be displayed. The square cursor is used to indicate a particular day. The highlight on the calendar indicates schedule(s) on for that day. This function helps to remind you of the schedule. The phone will sound an alarm tone if it has been set for a specific schedule item.

Key	Description
up/down navigation key	Weekly
left/right navigation key	Daily
 key/  key	Yearly
 key/  key	Monthly

Press [View] key and you can view the schedule. The following [Options] are available:

- ▶ **Delete:** Allows you to delete the schedule.
- ▶ **Add new:** You can edit maximum of 30 characters and create up to 30 notes.
- ▶ **Edit:** Allows you to edit the schedule.
- ▶ **Calendar:** Allows you to consult the calendar.
- ▶ **Scheduler Tone:** The phone can sound an alarm tone when the scheduled date for an event has been reached with this option.
- ▶ **All Schedules:** Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists.
- ▶ **Go to Date:** Allows you to jump to a specific date.

- ▶ **Delete Old:** Delete past schedule event that has already been notified.
- ▶ **Delete All:** Delete all schedules. You are asked to confirm your action.

Note

- ▶ You can see Edit, Delete, View all schedules, Delete past, and Delete all menus dependent on setting of the schedule.

Voice Memo

Menu 4.5

Allows you to record a memo. You can record up to 3 voice messages with each message up to 30 seconds. You can use the Voice Memo feature to:

- Play the recorded voice memos
 - Delete one or all voice memos
1. Once recording is started, the message 'Recording...' and the remaining time is displayed.

Note

- ▶ If all memo locations are full, you must delete an old memo before recording a new one.

Tools

2. If you want to finish recording, press the left soft key [**Save**].

▶ **Play:** Allows you to play back all memos recorded, starting with the most recent memo. The screen displays the date and time when the memo was recorded.

The following [Options] are available:

▶ **Delete:** Allows you to delete a specific memo.

▶ **Record New:** Allows you to record a memo.

▶ **Rename:** Allows you to rename a specific memo.



▶ **Send via Multimedia Message:** Sends the selected voice memo by MMS.

▶ **Delete All:** Allows you to delete all memos.

Calculator

Menu 4.6

The calculator function allows you to add, subtract, multiply and divide. You can input numbers using the number keys, and input operators using the up, down, left, and right navigation keys.

You can input a decimal point by pressing the  key. Whenever you press the  key, characters are sequentially deleted in reverse direction.

Notepad

Menu 4.7

To write, edit and delete a memo on a specific date, proceed as follows.

1. Press the left soft key [**New**].

2. Input the memo and press the right soft key [**Options**].

The following options are available.

▶ **Set T9:** Allows you to select the T9 language to use in memo.

▶ **Exit Editor:** Allows you to exit in memo editor.

Or

1. Select a Memo.

2. Press the right soft key [**Options**].

The following options are available.

▶ **Delete:** Allows you to delete the memo. You can press the right soft key [**Options** → **Delete**] to edit the memo displayed.

▶ **New Note:** Add a new memo, up to 20 memos and 40 characters per each memo.

▶ **Edit:** If you select a memo that already exists, you

can press the right soft key [**Options** → **Edit**] to edit the memo displayed.

- ▶ **Delete All:** Allows you to delete all memos. You are asked to confirm your action.

World Clock

Menu 4.8

Allows you to check the current Greenwich Mean Time(GMT) and major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to set, press the left soft key.

Note

- ▶ The time zone setting of each city in World time menu may be affected by network condition.

Unit Converter

Menu 4.9

This converts any measurement into a unit you want. There are 4 types that can be converted into units:

Length, Surface, Weight, and Volume.

1. You can select one of four unit types by pressing the left soft key [**Unit**].
2. Select the standard value by using the left/right navigation keys.
3. Select the unit you want to convert by pressing the up/down navigation keys.
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing the $\frac{\square}{\square}$ key.

Tip Calculator

Menu 4.0

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

BigPond


You can access various WAP (Wireless Application Protocol) / Web services such as news, and weather. These services are specially designed for mobile phones and they are maintained by the service providers.

Note

- ▶ Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services. Please contact your service provider to open an Internet account.

To launch the browser in standby mode, press the right soft key [BigPond].

Once connected, the homepage is displayed. The content depends on the service provider.

To exit the browser at any time, press the  [END] key. The idle screen is displayed.

Menus for the Browser

You can surf the Internet using either the phone keys or the WAP Browser menu.

Using the Navigation Keys

When surfing the Internet, the keys function differently than when in the phone mode.

Key	Description
up/down navigation key	Scrolls each line of the content area

Using the WAP Browser Menu

There are various menus available when surfing the Internet.

BigPond Home

Menu 5.1

Connect to Telstra's WAP homepage. The homepage is defined in the activated account and cannot be changed.

Favorites

Menu 5.2

You will be alerted when you have received a message. They will be stored in the Inbox. In the Inbox, you can identify each message by icons. For detail, see the icon directive.

Note

▶ Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should take the same precautions for security or content as you would with any site.

Options in the Favorites view

- **View:** Display the bookmark title and URL.
- **Delete:** Allow you to erase the selected bookmark.
- **Edit:** Modify the existing bookmark item.
- **Move to Folder:** Move the Favorite to other folder.
- **New Favorite:** Create new Favorite in current folder.
- **New Folder:** Create new sub-folder.
- **Send URL:** Allows the bookmark information to be sent via SMS to another person.
- **Delete All:** Allows you to erase all bookmarks.

Go To URL

Menu 5.3

You can directly connect to the site you want by entering a specific URL.

Network Profile

Menu 5.4

A Profile is the network information used to connect to the internet. Telstra supports two kinds of profiles: Telstra Internet, Telstra MMS.

Each profile has submenus as follows:

- ▶ **Edit:** Edit the various items of the current profile.
- ▶ **Rename:** Revise the name of profile.
- ▶ **New Network Profile:** Create new profile.
- ▶ **Delete:** Delete the profile.
- ▶ **Delete All:** Allows all Profiles within the Access Point to be deleted so please take precaution prior to using this option.

Note

▶ The changes using these options may affect the other application function.

Cache Settings

Menu 5.5

The web pages you have accessed are stored in the memory of the phone.

Clear Cache (Menu 5.5.1)

Remove all cached data in the memory.

Allow Cache (Menu 5.5.2)

Set a value whether a connection attempt is made through cache or not.

Note

- ▶ A cache is a buffer memory, which is used to store data temporarily.

Security Certificates

Menu 5.6

A list of the available certificates is shown.

Information

Menu 5.7

The WAP Browser version is displayed.

Push to Talk (PTT)

Welcome to PTT

Push to Talk (PTT) from Telstra let's you see whether your family, friends, and co-workers are available to talk before you call. You can reach them individually or all at once via a group call, all in an instant. Read on to hear about all of the features Telstra Push to Talk has to offer.

Initialize your PTT Service

Begin initializing your PTT service by pressing the PTT Key (gray button on left side of phone) or by entering Push to Talk(6) from the Main Menu.

You will then register your name and, once initialization completes, begin adding your family, friends, and co-workers who are also Telstra PTT subscribers.

PTT Tips

PTT is a great way of communicating instantly with the people who are important to you. Here are a few tips to help you.

1. Make sure you are holding the PTT Key down while you talk.
2. Make sure you don't start talking until AFTER you hear the tone.
3. Note the location of the speakerphone and microphone to make sure you aren't covering either with your grip.
4. PTT calls can be easily started with the flip closed. During a PTT call with the flip open and speaker OFF, the call will be terminated when the flip is closed. When the speaker is ON, closing the flip will not terminate the call.
5. Turn the volume up high to be able to hear PTT calls more clearly.

Icon Descriptions

- ▶ **My Availability:** Your availability icon appears next to the signal indicator on your idle screen. This icon indicates the availability others will see for you when you are listed in their PTT Contacts.

Available

This will be your availability state once you initialize service and it will not change unless you change it as noted below.

Unavailable

This becomes your availability state if you power

Push to Talk (PTT)

off your phone, turn PTT Off, or if the system detects you have moved out of coverage.

Do Not Disturb

This becomes your availability state if you change My Availability (Menu 6.4.1) to Do Not Disturb. In this state you may place PTT calls but will not receive a PTT call.

PTT Message

This icon appears in place of your availability status notifying you that a PTT message is waiting. To access these messages go to Push to Talk (6) on the Main Menu.

▶ **PTT Contact Availability:** This section covers the icons which will appear next to individuals and groups in your PTT Contacts list indicating their availability.

• INDIVIDUALS:

Available

This contact is available to talk.

Unavailable

This contact has turned PTT Off, powered down

their phone, or moved out of coverage.

Do Not Disturb

This contact is not receiving PTT calls.

Silent/Vibrate

This contact is available to receive PTT calls. However they will be given the option to accept or reject your PTT call.

Invitation in Progress

You are waiting for this contact to accept your invitation.

• GROUPS:

Available

At least one member of the group is available to talk.

Unavailable

Every member has powered down their phone, turned PTT Off, or moved out of coverage.

Do Not Disturb

None of the members of the group can be contacted.

Silent/Vibrate

All members of the group are available to receive a PTT call but each will be given the option to accept or reject your call.

Invitation in Progress

You have sent an invitation to join a group and none of the members have yet accepted. Once one member accepts this status will change and calls will complete to all members who have accepted and are available.

PTT Calls

A PTT call can only be made to individuals or groups you have established in your PTT Contacts. See PTT Contacts for instructions to set up individuals/groups.

Making a PTT Call

1. Push and quickly release the PTT Key to access your contact list. To access frequently called numbers, Push and hold the PTT Key to access your PTT Call History.
2. Select the individual or group you want to call. Make sure an available icon is displayed next to the name.

Note

▶ Calls can not be placed to Quick Groups in your PTT Call History.

3. Press and hold the PTT Key to activate the call. A tone will immediately play indicating you have the floor and may begin speaking.
4. Release the PTT Key when you are done speaking.

Receiving a PTT Call

1. For the best experience your ringer should be set to the highest possible volume.
2. If your status is Available you will hear a PTT Call tone and then the caller's voice.
3. If your status is Vibrate All your phone will vibrate and then you must accept or reject the call. If set to Silent their will be no call notification tone.
 - a. Accepting the call then plays the callers voice over the earpiece.
 - b. Rejecting the call terminates the call. PTT calls are not forwarded to voicemail.

Push to Talk (PTT)

Change to Mobile

During a PTT call the call originator may convert the call over to a mobile call.

1. Call originator selects Options and then selects Change to Mobile. The originator no longer has to press the PTT key to be heard.
2. Other participants on the call will remain in a PTT mode.

Call Waiting

- While on a PTT call you will be notified of incoming PTT calls. Accepting the incoming PTT call suspends the first call. Rejecting the incoming PTT call terminates it.
- While on a PTT call you will be notified of incoming mobile calls. Accepting the incoming mobile call suspends the PTT call. Rejecting the incoming cellular call forwards it to voicemail, if activated.
- While on a cellular call you will be notified of incoming PTT calls. Accepting the incoming PTT call suspends the cellular call. Rejecting the incoming PTT call terminates it.

How a PTT call works

When you make a PTT call, you can instantly speak to other Telstra PTT subscribers. During a PTT call only one person can speak at a time. You can tell whether it is your turn to speak by listening for the following tones:

PTT Floor Held tone

This tone plays when you press and hold the PTT Key. It indicates you have the floor and your speech will be heard by the other call participants.

PTT Floor Release tone

When you let go of the PTT Key you will hear this tone as will the other participants on the call. All of your speech prior to this tone has been heard by other participants. Others on the call are now aware that the floor is open and they have an opportunity to speak by pressing their PTT Key.

Error tone

If you attempt to speak by pressing your PTT Key and someone else still has the floor you will hear this tone.

The PTT Key

The grey key on the left hand side of the phone is your PTT Key.

- Pressing and releasing this key while idle displays your PTT contacts.
- Pressing and holding this key while idle displays your PTT history.
- Pressing and holding this key while in a PTT call allows you to speak to the other call participants.

To make a call press and release your PTT key to display your contacts. Select the person or group you wish to connect with and Press and Hold the PTT Key.

Note

- ▶ Customers should not initiate or participate in a PTT call whilst driving. The current version of our PTT product requires you to press the button while talking. For this reason we advise against using PTT while driving, even with the use of a car kit or personal handsfree kit.

PTT Contacts

Menu 6.1

When accessing your PTT Contacts, Options displays on your Right Soft Key. Options may change depending on whether an individual or a group was highlighted when you selected Options.

• INDIVIDUALS:

- ▶ **Call Me Alert:** This option allows you to send a message to an individual in your PTT Contacts whose status is Available, Silent/Vibrate, or Do Not Disturb. First select the individual, select Options, and then select Call Me Alert. A message will display on their idle screen "Please Call" and your name. They can simply press their PTT Key to call you back.
- ▶ **Quick Group Call:** This option allows you to make a group call without pre-establishing it in your PTT Contacts. After selecting this menu item from PTT Contacts, Options, a list of available individuals will present. Select those you wish to include in your call (up to 6). Then press the PTT Key to begin your Quick Group call.
- ▶ **Voice Message:** This option allows you to leave a voicemail instantly. To leave a voice message, simply

Push to Talk (PTT)

highlight the contact on your PTT Contacts, select Options, and select Voice Message. Pushing the PTT Key begins the recording. Releasing the PTT Key ends the recording and deposits your message.

- ▶ **New Contact:** This option allows you to send an invitation to the contact that the user has selected. After the person accepts the invitation, he or she will be listed as an available PTT contact.
- ▶ **Rename:** You can edit the name of the individual.
- ▶ **Delete:** You can delete the individual.
- ▶ **Copy to Address Book:** This option allows you to copy the name and number to your Address Book.
- **GROUPS:**
 - ▶ **View Members:** This option displays all members of a group along with their Availability.
 - ▶ **Dynamic Call:** It is similar to Quick Group Call however the participants you select from are only those participants in the group.
 - ▶ **Voice Message:** This option allows you to leave a voicemail to a group in your PTT Contacts or select members from the group. Select the members of Voice Message and press Ok once. Select the group

to receive the message. Pushing the PTT Key begins the recording. Releasing the PTT Key ends the recording and deposits your message.

- ▶ **Add Group:** This option allows you to create a new PTT group.
- ▶ **Add member:** This option displays only when you have highlighted a group which you have created. After adding any additional members, a notification is sent to the other group participants of the new group members.
- ▶ **Remove Member:** This option displays only when you have highlighted a group which you have created. After removing a member a notification is sent to the individual.
- ▶ **Delete Group:** Deleting a group which you created deletes the group from PTT Contacts for all participants.
- ▶ **Rename:** If you have joined a group originated by another this option allows you to edit the name of the group.

Add Contact

Menu 6.2

1. Select Add Contact in the PTT menu.
2. Enter the contact's name and phone number and then select [Save]. An invitation to join your PTT Contacts will be sent.
3. The availability icon will be Invitation in Progress until the individual accepts the invitation.
4. Once accepted they are part of your PTT Contacts and you are part of theirs.

Add Group

Menu 6.3

Setting up a PTT group is a great way to quickly call a group of people you routinely need to reach. A group can be made up of individuals in your PTT Contacts or other Telstra PTT subscribers you don't necessarily want to add to your PTT Contacts.

1. After selecting Add Group you will be asked to name your group.
2. Next step is to choose members. Choosing Select In Contacts lets you choose from your PTT Contacts. Choosing New Contact lets you add someone not in your PTT Contacts.

- a. If you want to add both types of contacts then you will need to select one option and save the group.
 - b. Then using Add Member in the PTT Contacts Options menu you can add the remaining members.
3. Once you have saved your group invitations will be sent to each contact for their acceptance. The Invitation in Progress icon will display next to the group until one member accepts. Availability will then update each time a person accepts.
 4. When a participant accepts your invitation the group is now in their PTT Contacts and they may also place calls to the group.
 5. Maximum members in a group is 30, 29 participants and yourself. You may have up to 30 groups in your PTT Contacts.

PTT Settings

Menu 6.4

- ▶ **My Availability:** This option allows you to change your Availability status between **Do Not Disturb** and Available.

Push to Talk (PTT)

- ▶ **Contact Alerts:** This feature allows you to be alerted when the availability status of a contact changes from Unavailable or Do Not Disturb to Available or Silent/Vibrate.
 1. Once Contact Alerts is selected a list of individuals from PTT Contacts will display. Select those individuals for whom you want to receive alerts for availability changes.
 2. Once selected you will receive alerts for availability changes until you de-select them.
 3. An alert consists of a tone as well as a PTT message when you access the PTT Menu.
- ▶ **Set Your Name:** When you initialized service you set a name for yourself. This name is presented in Contact Invitations. Changing your name will not impact invitations already sent but will be reflected in future invitations.
- ▶ **Auto Accept Invites:** If you do not want to prescreen all additions to your PTT Contacts you can use this menu item to automatically accept your invitations.
 - Enable All automatically accepts all invitations.
 - Contact Only automatically accepts individual invitations.
 - Group Only automatically accepts group invitations.
 - Disable All allows you to pre-screen all invitations.
- ▶ **PTT is On/PTT is Off:** This menu item allows you to turn your PTT Service off or turn it on.

Favorites

Menu 7.1

Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site.

Games & Apps

Menu 7.2

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using a WAP enabled phone. Depending on the service provider, Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Games & Apps menu where you can select, execute or delete. The Java program files saved in the phone are in .JAD and .JAR formats.

Note

- ▶ The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Warning

- ▶ Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment.
The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Audio

Menu 7.3

- ▶ **Send via Text message:** Melody Sound can be sent via SMS.
- ▶ **Set as Ringtone:** This sets the Ring Tone with currently selected Sound.
- ▶ **Delete:** This deletes currently selected Sound.
- ▶ **Rename:** This renames the title of currently selected Sound.

My Stuff

- ▶ **Delete All:** This deletes all sounds.

Note

- ▶ Sounds supplied as default can only be used under the Set As Ring Tone mode.

Graphics

Menu 7.4

- ▶ **Send via Multimedia Message:**
- ▶ **Set as Wallpaper:** Currently selected Picture can be set as a Wallpaper.
- ▶ **Delete:** You can delete a picture selected.
- ▶ **Print via Bluetooth:** For further details, see section (Menu 4.2)
- ▶ **Rename :** You can edit the picture name.
- ▶ **Delete all:** You can delete all pictures.

Contacts

Menu 8.1

This menu allows you to save and manage contact address information. The Contacts functions allow you to add a new address or search saved contact addresses by name.

New Contact

Menu 8.2

This menu allows you to add a new contact address. You can input contact address information including name, phone numbers, email addresses, group information items, memos, ringtones, and image (photograph).

You can save contacts to the Handset or SIM card memory.

Speed Dial List

Menu 8.3

This menu allows you to configure the speed dial numbers. You can select a number as a speed dial from 2 to 9. You can configure speed dial numbers for any of the 8 numbers for specific contact address. A contact address may have multiple speed dial numbers.

Caller Groups

Menu 8.4

There are 6 predefined groups as well as one additional group where you can create your own lists.

1. You can set the phone to ring in a specific way and display a preselected graphic icon when a particular person calls you.
2. Scroll to **Caller Groups** then press the left soft key **[OK]** to enter this menu.
3. Every Group list will be displayed : **Family, VIP, Friends, Colleague, Group 1, Group 2, No Group.**
4. Select the Group name that you want to manage by pressing the right soft key **[Options]**.
5. You will see the following submenus under the predefined groups except for the **No Groups** group.
 - **Group Ringtone:** Allows you to select the ring tone to be used when you receive a voice phone call from a person in the group.
 - **Group Icon:** Allows you to select the graphic icon to be displayed when you receive a call from a person in the group.
 - **Add Member:** Allows you to add the member to the group.

Address Book

- **Remove Member:** Allows you to delete the member in the group.
- **Rename:** Allows you to assign a name to the group.

Copy All Contacts Menu 8.5

This menu allows you to copy all of the information from your SIM card, e.g. name, mobile phone number, etc., to your handset. If a name is duplicated during the copying operation, the information is also duplicated.

SIM To Phone (Menu 8.5.1)


You can copy the entry from the SIM card to the phone memory.

Phone To SIM (Menu 8.5.2)

You can copy the entry from the handset memory to the SIM card (not all the data will be copied).

- ▶ **Keep Original:** When copying, original number is kept.
- ▶ **Delete Original:** When copying, original number will be erased.

Delete All Contacts Menu 8.6

You can delete all entries in the **SIM** and the **Phone**. Press the  [END] key to return to standby mode.

Set Memory Menu 8.7

- ▶ If you select **Ask Always** when adding entry, the phone will ask where to store.
- ▶ If you select **SIM** or **Phone**, the phone will store an entry to the SIM card or the phone.

Information Menu 8.8

Check Memory (Menu 8.8.1)

You can check how many names and numbers are stored in the Address Book (SIM card and phone memories).

My Numbers (Menu 8.8.2)

This displays your phone numbers stored in the SIM card.


Settings

Audio

Menu 9.1

You can use the Sound Settings feature to customize various settings, such as the:

- ▶ Ring melody, volume and type
- ▶ Sounds made when you press a key, make an error or receive a message

In addition, pressing and holding the  [Star] key on the idle screen allows the swapping between Normal and Vibrate modes. Headset mode is available when earpiece is attached.

Ringtones (Menu 9.1.1)

Shows and plays ringtones. These can be downloaded ringtones from Ringtone shops.

Volume (Menu 9.1.2)

- ▶ **Ringtone:** To set the volume level for the ringing tones.
- ▶ **Key Tone:** To set the volume level for keypad tones.
- ▶ **Earpiece:** Used to adjust the earpiece volume level.
- ▶ **Headset:** Allows volume adjustment when using the

Headset.

- ▶ **Handsfree:** Allows volume adjustment when using the Car Kit.

Ring Alert Type (Menu 9.1.3)

Supports 3 ring alert types. Ring, Ring and Vibrate, and Vibrate then Ring.

Message Alert Tones (Menu 9.1.4)

Allows you to select an alert tone which is played when a message is received. You can select any one from 5 message alert tones.

Key Tones (Menu 9.1.5)

This menu option allows you to select a tone that the phone sounds when a key is pressed. You can select an option from **Beep** and **Voice**.

Voice Memo (Menu 9.1.6)

For further details, see page 46 (Menu 4.5).

Settings

Display

Menu 9.2

Wallpaper (Menu 9.2.1)

You can select the background picture in standby mode.

Backlight Timer (Menu 9.2.2)

Use this to select how long the backlight stays on.

Contrast (Menu 9.2.3)

This option allows you to adjust the brightness level of the display screen.

You can adjust by using the right/left and up/down navigation key.

Languages (Menu 9.2.4)

You can change the language for the display text in your phone.

Bluetooth

Menu 9.3

Your phone has built-in Bluetooth wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, headset, BIP printer.

You can have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone.

Note

▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects in between your phone and the other Bluetooth device.

Bluetooth On/Off (Menu 9.3.1)

This menu sets the Bluetooth on or off using the navigation key.

Device List (Menu 9.3.2)

This function allows you to view the list of all devices that are paired with your phone at once.

To add a new device, press the left soft key [New]

1. Select the [New] key to search the device that can be connected and within range.
2. If you want to stop searching, press the right soft key [Cancel].
3. All of the searched devices are displayed in the pop-up menu.

Select the desired device by pressing the OK key, and entering the password of the device you are pairing (for example "0000").

Settings (Menu 9.3.3)

This menu allows you to configure the Bluetooth profile.

▶ My Visibility

1. Selecting the Show option exposes your phone to other Bluetooth devices.
2. Selecting Hide shows your phone only to already paired devices.

- ▶ **My Name:** Allows you to change the handset's name, as seen by other Bluetooth devices.

Date & Time

Menu 9.4

Set Date (Menu 9.4.1)

This allows you to enter the day, month and year. You can change the date format via the Date Format menu option.

Date Format (Menu 9.4.2)

YYYY/MM/DD(year/month/day)

DD/MM/YYYY(day/month/year)

MM/DD/YYYY(month/day/year)

Set Time (Menu 9.4.3)

This allows you to enter the current time. You can choose the time format via the Time Format menu option.

Time Format (Menu 9.4.4)

24 Hours/12 Hours

Settings

Auto Update (Menu 9.4.5)

Select On to set the phone to automatically update the time and date according to the current local time zone.

Call

Menu 9.5

Call Forwarding (Menu 9.5.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Select one of the divert options, for example, select If busy to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available:



- ▶ **All Voice Calls:** Diverts voice calls unconditionally.
- ▶ **If Busy:** Diverts voice calls when the phone is in use.
- ▶ **If No Reply:** Diverts voice calls which you do not answer.
- ▶ **If Out Of Reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All Data Calls:** Diverts to a number with a PC

connection unconditionally.

- ▶ **All Fax Calls:** Diverts to a number with a fax connection unconditionally.
- ▶ **Cancel All:** Cancels all call divert service.

Answer Mode (Menu 9.5.2)

This allows you to determine when to answer the phone.

- ▶ **Flip Open:** When the phone rings, you can answer a call simply by opening the flip.
- ▶ **Any Key:** You can answer an incoming call by pressing any key, except the  [END] key.
- ▶ **Send Key Only:** You can answer an incoming call by only pressing the  [SEND] key.

Send My Number (Menu 9.5.3)

This network service allows you to set your phone number to be displayed (**On**) or hidden (**Off**) from the person to whom you are calling. You can select **Set by Network** if you prefer to have different settings for different service provider.


Call Waiting (Menu 9.5.4)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View Status**, to check if the function is active or not.

Minute Minder (Menu 9.5.5)

This option allows you to specify whether the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Auto Redial (Menu 9.5.6)

Select **On**, your phone redials the number you're trying to call after you hear a quick, busy signal. Press  [END] to stop the call attempts.

Note

- ▶ There will be no alert indicating the call has been connected. You must stay on the line to hear when the call is connected.

Closed User Group (Menu 9.5.7)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, the network will use the preferential index (a specific index that is stored in the network.) Select **Preset** to activate the default group agreed on with the network operator, **On** to activate the selected CUG index.

Send DTMF Tones (Menu 9.5.8)

You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call.

This option is helpful for entering a password or account number when you call an automated system, like a banking service.

Security

Menu 9.6

Various codes and passwords are used to protect the features and settings of your phone. They are described in the following sections.

Settings

Request PIN Code (Menu 9.6.1)

When the PIN code request feature is set to 'On', you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note

- ▶ Before setting to Off the PIN code request feature, you must enter your PIN

The following [Options] are available:

- ▶ **Enable:** You must enter the PIN each time the phone is switched on.
- ▶ **Disable:** The phone connects directly to the network when you switch it on.

Call Barring Services (Menu 9.6.2)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- ▶ **All outgoing**
The barring service for all outgoing calls.

- ▶ **Outgoing International**

The barring service for all outgoing international calls.

- ▶ **O/G International Except Home Country**

The barring service for all international outgoing calls except home network.

- ▶ **All incoming**

The barring service for all incoming calls.

- ▶ **Incoming when Abroad**

The barring service for all incoming calls when roaming.

- ▶ **Cancel All Barrigs**

You can cancel all barring services.

- ▶ **Change password**

You can change the password for Call Barring Service.

The submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.

- **View status**

View the status whether the calls are barred or not.

Change Codes (Menu 9.6.3)

The Change codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one. You can change the access codes for: **Security Code**, **PIN1 Code**, **PIN2 Code**

Note

► **PIN**: Personal Identification Number.

Connection

Menu 9.7

Network selection (Menu 9.7.1)

Automatic

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected "Automatic", the phone will be set to "Automatic" even if the handset is restarted.

Manual

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone will let you select another network if the phone fails to access the selected network.

Preferred

You can set a list of preferred networks that the phone will attempt to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

Change Frequency Band (Menu 9.7.2)

Use this to set the network band between two choices, (850/ 1900) or(900/1800)

GPRS Attach (Menu 9.7.3)

If you select **Power On** and you are in a network that supports packet data, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If

Settings

you select **When Needed**, the phone will use a packet data connection only if you start an application or action that needs it. The GPRS connection is closed after it is not used by any application.

Note

- ▶ If there is no GPRS coverage and you have chosen Power On, the phone will periodically try to establish a packet data connection.

Network Profile (Menu 9.7.4)

This menu shows the Network Profile. You can register, delete and edit by using the Option Menu.

Reset Network Profile (Menu 9.7.5)

This allows Profile information to be restored to the original setting.

PTT key Lock

Menu 9.8

When PTT key Lock feature is enabled, the phone is locked.

Reset Default

Menu 9.9


Restores the settings (e.g.: Audio, Display, Language, Date & Time, Bluetooth Settings) stored in handset memory to default values.

Note


- ▶ The password is preset to **0000**.

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.


Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press the  key.

Q How do I clear all call history?

A From idle screen, press the ok key . Then select Recent Calls followed by Delete Recent Calls.

Q How do I view all numbers stored in memory?

A From idle screen, press the ok key . Then select Address Book, followed by Contacts.

Q Why is the connection inconsistent or not audible in certain areas?

A When frequency environment is unstable in a certain area, connection may be inconsistent and not audible. Relocate to another area and try again.

Q Why is the connection not consistent abruptly disconnects even when established?

A When frequency is unstable or weak or if there are too many users, connection may be cut off even after it was established. Please try again later or attempt after relocating to other areas.

Q Why does the LCD not turn on?

A Remove the battery and turn on the power after placing it back on. If there is no change, fully charge the battery and try again.

Q Why is there an echo when a connection is made with certain telephones in a certain area?

A This is called the 'Echo Phenomenon', where it occurs if connection volume is too high or caused by special properties (semi electronic telephone exchange) of the equipment on the other end.

Q&A

Q&A

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration or when games are played or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why does the battery life get shorter in standby mode?

A The battery is worn out. As time passes, the battery life gradually becomes shorter. If the battery lasts about half the amount of time as when first purchased, it's time to purchase a new battery.


Q Why does the battery run out so quickly during normal use?

A It is due to the user environment or a large number of calls or weak signal.

Q Why is no number dialed when you recall a Address Book entry?

A Check that the number has been stored correctly by using the address book Search feature. Re-store them, if necessary.

Q Why can't my correspondent reach me?

A Is you phone switched on ( pressed for more than three seconds)? Are you accessing the right cellular network? Or, you may have set an incoming call barring option.

Accessories

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery. It takes 5 hours to charge a completely discharged battery.



Data Cable Kit

Connects your phone to a PC.



Battery

Standard battery is available.



Headset

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer/termination button.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Technical data



Technical data

General

Product name : TG300

System : GSM 900/DCS 1800/
GSM 850/PCS 1900

Ambient Temperatures

Max : +55°C

Min : -10°C

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the feature on your mobile phone, here are a few definitions.

Call Barring

Ability to restrict outgoing and incoming calls.

Call Divert

Ability to reroute calls to another number.

Call waiting

Ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

Multiparty Calls

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

Glossary

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SIM card

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

Index

A

Access codes	22
Accessories	75
Active flip	14,15
Add member	58,63
Address book	63
Adjusting the volume	23
Alarm Clock	46
All Schedules	47
Answering a call	24
Answer Mode	68
Auto Redial	69

B

Backlight	16
Battery	6,75
Bearer Setting	39
Bluetooth	45,66

Brightness	44
Business card	38

C

Calculator	48
Calendar	46
Caller Groups	63
Call Divert	76
Call Duration	41
Call Waiting	56,69
Camera	44
Check Memory	64
Clear Cache	52
Clear key	14,15
Conference Calls	30
Copy All Contacts	64

Index



Index

D

Default Settings	44
Delete Recent Calls	41
Dialed Calls	41
Display screen	14,15
Display information	17

E

Ending a call	23
Entering Text	25

F

Flip open	68
-----------------	----

G

Games	61
Go to URL	51
GPRS	71,76
Group Icon	63

H

Headset	65,75
---------------	-------

I

Image Size	44
Inbox	36
In-call menu	29

L

Languages	66
Last Call	41
Lower Case	27

M

Making a Call	23
Making a PTT Call	55
Making international calls	23
Memo	47
Menu tree	32
Message key	14,15
Microphone	12,13
Minute minder	69
Missed Calls	41
Muting the Microphone	29
Multimedia Message	39
Multishot	44
My Numbers	64

N

Navigation key	14,15
New Message	35

O

Outbox	37
--------------	----

P

Phone To SIM card	64
Photo Album	44
Power key	14,15
Private Call	30
PTT	53
PTT Calls	55

R

Received Calls	41,42
----------------------	-------

Index

Index

S

Security code	22
Send key	14,15
Send My Number	68
Service Dial Number	77
Scheduler Tone	47
Shutter Sound	44
Side keys	14,15
Signal Strength	24
Speakerphone	16,24

T

Templates	38
Text Message	39
Time Format	67
Travel Adapter	6,75

U

Unit Converter	49
Upper Case	27

V

Validity Period	39
Vibrate Mode	24

W

Wallpaper	66
WAP browser	50
White Balance	44
World Clock	49

Z

Zoom	44
------------	----

Declaration of Conformity



LG Electronics

Responsible Details

Name
LG Electronics Inc

Address
: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name
Quad-band E-GSM 900/DCS 1800/GSM850/PCS1900 Cellular Mobile Radio with bluetooth

Model Name
TG3000

Trade Name
LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 511 V9.0.2
EN 300 328 V 1.6.1
EN 301 489-01 V1.5.1 / EN 301 489-07 v1.2.1 / EN 301 489-17 v1.2.1
EN 50360 : 2001 / EN 50361 : 2001
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by BAST.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name
Jin Seog, Kim / Director

Issued Date
15.May. 2006

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Amers, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative

MANUFACTURER 'S WARRANTY

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer. LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is good only to the Customer during the warranty period as long as it is in AUSTRALIA.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses.)
- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following telephone number from anywhere in AUSTRALIA:

LG Electronics Australia Pty Ltd
2 Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175

Tel: 1800-638-080

Fax: 02-8805-4201



LG Electronics Australia Pty Ltd.