



**LG**

website <http://www.lgservice.com>  
e-mail <http://www.lgeservice.com/techsup.html>


**LG**

# **MULTI V™ System**

## Indoor Unit

### **OWNER'S MANUAL**

**Type: Art Cool Series**

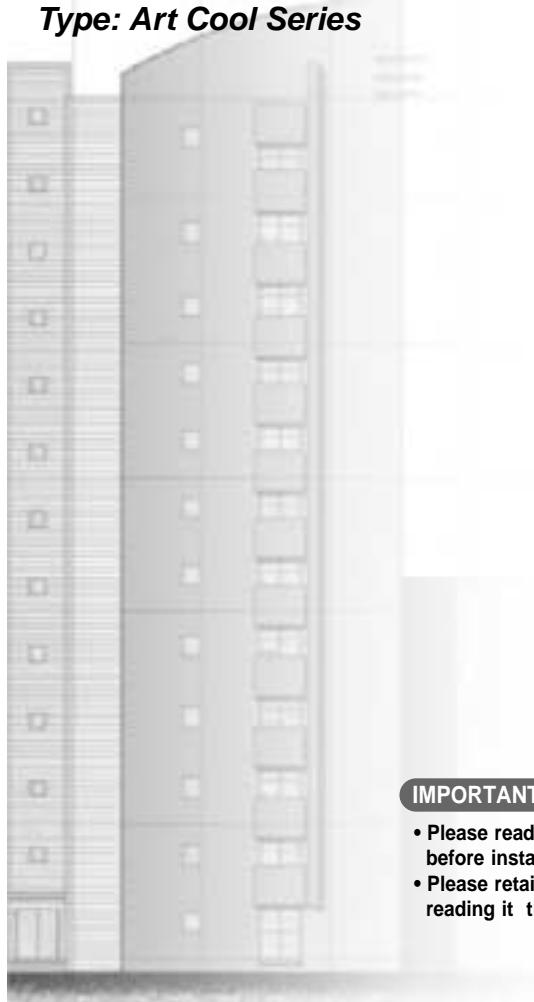

Prior to installation, this air-conditioning unit must be submitted for approval by the utility service which provides electricity (EN 61000-2, EN 61000-3 Norm).

ENGLISH

ITALIANO

ESPAÑOL

FRANÇAIS

DEUTSCH

#### **IMPORTANT**

- Please read this owner's manual carefully and thoroughly before installing and operating your room air conditioner.
- Please retain this owner's manual for future reference after reading it thoroughly.

# TABLE OF CONTENTS

<b>Safety Precautions .....</b>	<b>3</b>
<b>Prior to Operation .....</b>	<b>8</b>
<b>Operating Instructions .....</b>	<b>9</b>
<b>Maintenance and Service ....</b>	<b>12</b>
<i>Before you Call for Service.....</i>	<i>15</i>



## FOR YOUR RECORDS

Write the model and serial numbers here:

**Model #**

**Serial #**

You can find them on a label on the side of each unit.

**Dealer's Name**

**Date Purchased**

■ Staple your receipt to this page in the event you need to prove date of purchase or to issue warranty.



## READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

**Troubleshooting Tips** first, you may not need to call for service at all.



## PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



# Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

■ Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

**⚠ WARNING** This symbol indicates the possibility of death or serious injury.

**⚠ CAUTION** This symbol indicates the possibility of injury or damage to properties only.

■ Meanings of symbols used in this manual are as shown below.



**Be sure not to do.**




**Be sure to follow the instruction.**

**⚠ WARNING**

## ■ Installation


**Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.**

- There is risk of fire or electric shock.

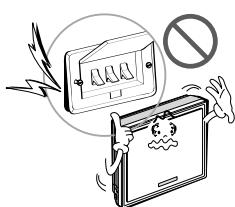

**For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.**

- Do not disassemble or repair the product. There is risk of fire or electric shock.

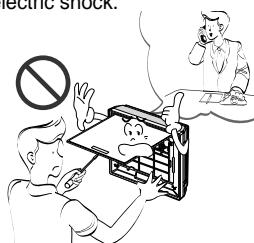

**Always ground the product.**

- There is risk of fire or electric shock.



**Install the panel and the cover of control box securely.**

- There is risk of fire or electric shock.




**Always install a dedicated circuit and breaker.**

- Improper wiring or installation may cause fire or electric shock.




**Use the correctly rated breaker or fuse.**

- There is risk of fire or electric shock.

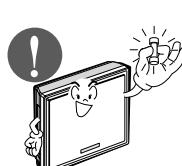


### Do not modify or extend the power cable.

- There is risk of fire or electric shock.

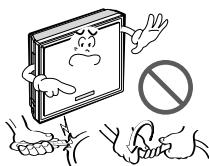

### Do not install, remove, or re-install the unit by yourself (customer).

- There is risk of fire, electric shock, explosion, or injury.

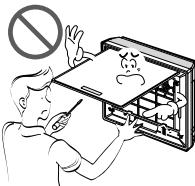


### Be cautious when unpacking and installing the product.

- Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.



### For installation, always contact the dealer or an Authorized Service Center.

- There is risk of fire, electric shock, explosion, or injury.

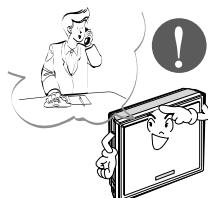


### Do not install the product on a defective installation stand.

- It may cause injury, accident, or damage to the product.



### Be sure the installation area does not deteriorate with age.

- If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

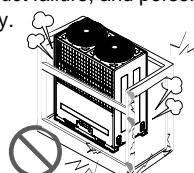

## ■ Operation


### Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

- Moisture may condense and wet or damage furniture.




### Take care to ensure that power cable could not be pulled out or damaged during operation.

- There is risk of fire or electric shock.

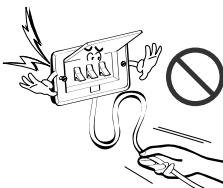


### Do not place anything on the power cable.

- There is risk of fire or electric shock.

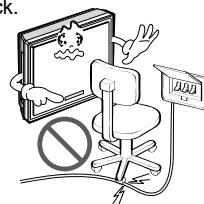


### Do not plug or unplug the power supply plug during operation.

- There is risk of fire or electric shock.

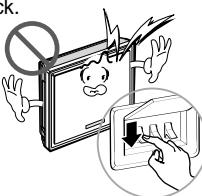


### Do not touch(operate) the product with wet hands.

- There is risk of fire or electrical shock.

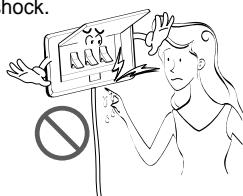

### Do not place a heater or other appliances near the power cable.

- There is risk of fire and electric shock.

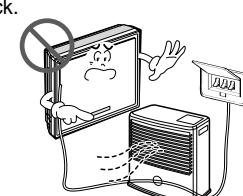

**Do not allow water to run into electric parts.**


- It may cause There is risk of fire, failure of the product, or electric shock.

**Do not store or use flammable gas or combustibles near the product.**


- There is risk of fire or failure of product.

**Do not use the product in a tightly closed space for a long time.**

- Oxygen deficiency could occur.

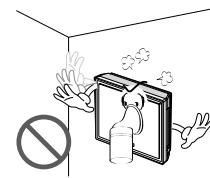**When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.**


- Do not use the telephone or turn switches on or off. There is risk of explosion or fire

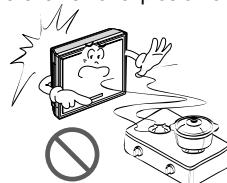**If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.**


- There is risk of electric shock or fire.

**Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.**

- There is risk of property damage, failure of product, or electric shock.

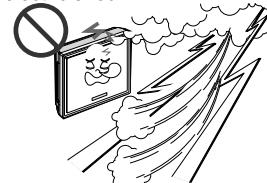**Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)**


- There is risk of physical injury, electric shock, or product failure.

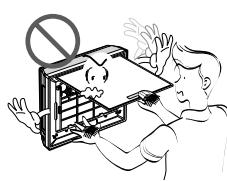**When the product is soaked (flooded or submerged), contact an Authorized Service Center.**


- There is risk of fire or electric shock.

**Be cautious that water could not enter the product.**


- There is risk of fire, electric shock, or product damage.

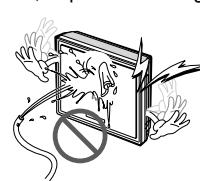**Ventilate the product from time to time when operating it together with a stove, etc.**

- There is risk of fire or electric shock.

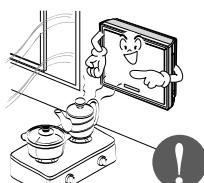
**Turn the main power off when cleaning or maintaining the product.**

- There is risk of electric shock.

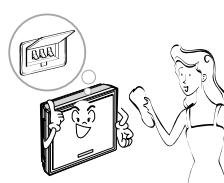


**When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.**

- There is risk of product damage or failure, or unintended operation.

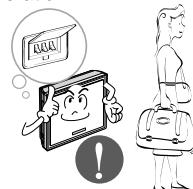

**Take care to ensure that nobody could step on or fall onto the outdoor unit.**

- This could result in personal injury and product damage.

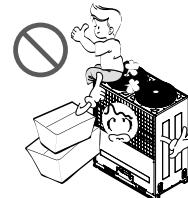


### CAUTION

## ■ Installation


**Always check for gas (refrigerant) leakage after installation or repair of product.**

- Low refrigerant levels may cause failure of product.

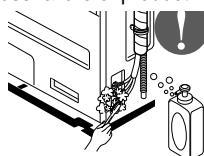


**Install the drain hose to ensure that water is drained away properly.**

 - A bad connection may cause water leakage.



**Keep level even when installing the product.**

- To avoid vibration or water leakage.

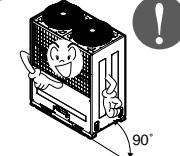


**Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.**

- It may cause a problem for your neighbors.




**Use two or more people to lift and transport the product.**

- Avoid personal injury.

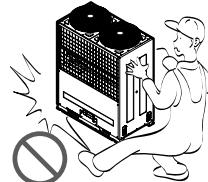

**Do not install the product where it will be exposed to sea wind (salt spray) directly.**

- It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

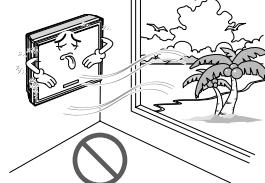

## ■ Operation


**Do not expose the skin directly to cool air for long periods of time.  
(Don't sit in the draft.)**

- This could harm to your health.




**Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.**

- There is risk of damage or loss of property.

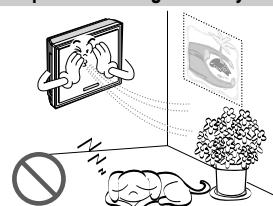

**Do not block the inlet or outlet of air flow.**


- It may cause product failure.

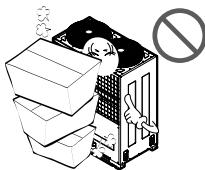**Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.**

- There is risk of fire, electric shock, or damage to the plastic parts of the product.

**Do not touch the metal parts of the product when removing the air filter. They are very sharp!**

- There is risk of personal injury.

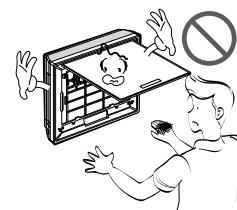**Do not step on or put anything on the product. (outdoor units)**


- There is risk of personal injury and failure of product.

**Always insert the filter securely. Clean the filter every two weeks or more often if necessary.**

- A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

**Do not insert hands or other objects through the air inlet or outlet while the product is operated.**

- There are sharp and moving parts that could cause personal injury.

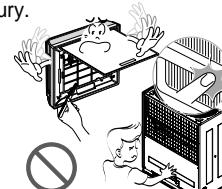**Do not drink the water drained from the product.**


- It is not sanitary and could cause serious health issues.

**Use a firm stool or ladder when cleaning or maintaining the product.**

- Be careful and avoid personal injury.

**Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.**

- There is risk of fire or explosion

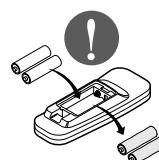**Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.**

- They may burn or explode.

**If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.**

- The chemicals in batteries could cause burns or other health hazards.



# Prior to Operation

## Preparing for operation

1. Contact an installation specialist for installation.
2. Use a dedicated circuit.

## Usage

1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

## Cleaning and maintenance

1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.

## Service


For repair and maintenance, contact your authorized service dealer.

# Operating Instructions

## Preparation before operation

### How to Insert the Batteries


1. Remove the battery cover by pulling it according to the arrow direction.
2. Insert new batteries making sure that the (+) and (-) of battery are installed correctly.
3. Reattach the cover by sliding it back into position.

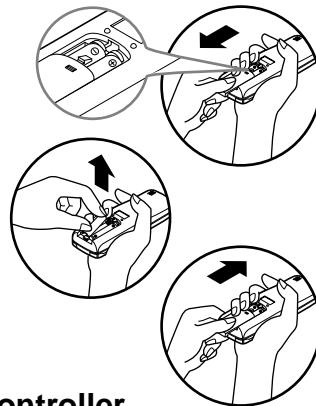

**NOTICE** Use 2 AAA(1.5volt) batteries.  
Do not use rechargeable batteries.

## Storage and Tips For Using the Remote Controller

- The remote controller may be stored by mounting it on a wall.
- To operate the room air conditioner, aim the remote controller at the signal receptor.

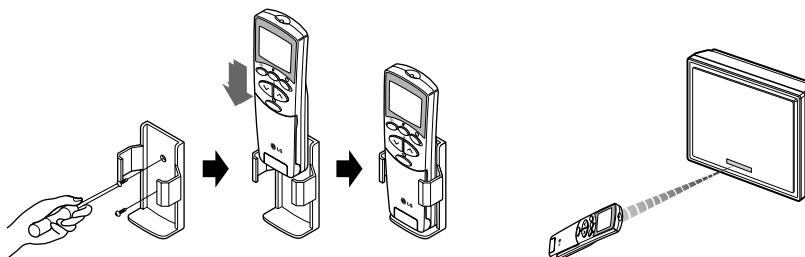


## Signal receptor

Receives the signals from the remote controller.(Signal receiving sound: two short beeps or one long beep.)

## Operation indicating lamps

	On/Off	: Lights up during the system operation.
	Sleep Mode	: Lights up during Sleep Mode Auto operation.
	Timer	: Lights up during Timer operation.
	Defrost Mode	: Lights up during Defrost Mode or <b>*Hot Start operation</b> (Heat pump model only)
	Outdoor Unit Operation	: Lights up during outdoor unit operation. (Cooling model only)
	NEO Plasma	: The function illustrates its dynamic mode by using a multiple lighting system.

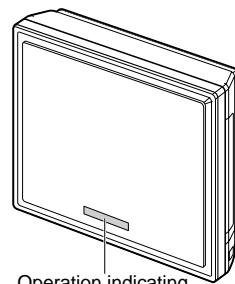


Operation indicating lamps

**\*Hot Start operation:** Stops the indoor fan in Heating Operation to prevent cold air from blowing out from unit.


## Remote Control Operations

The controls will look like the following.

### Controls

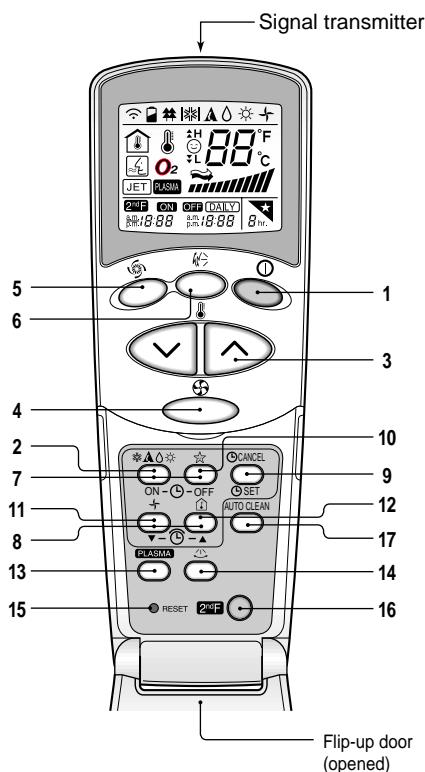

### Operation Mode

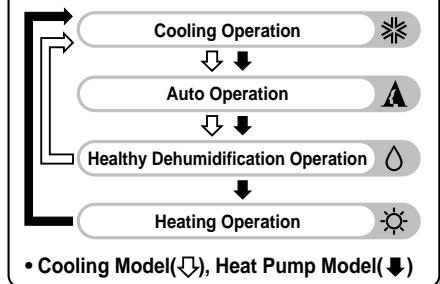

#### 1. START/STOP BUTTON

Operation starts when this button is pressed and stops when the button is pressed again.



#### 2. OPERATION MODE SELECTION BUTTON

Used to select the operation mode.



#### 3. ROOM TEMPERATURE SETTING BUTTONS

Used to select the room temperature.



#### 4. INDOOR FAN SPEED SELECTOR

Used to select fan speed in four steps low, medium, high and CHAOS.



#### 5. JET COOL/HEATING(OPTIONAL)

Used to start or stop the speed cooling/heating.(speed cooling/heating operates super high fan speed in cooling/heating mode.)



#### 6. CHAOS SWING BUTTON

Used to stop or start louver movement and set the desired up/down airflow direction.



#### 7. ON/OFF TIMER BUTTONS

Used to set the time of starting and stopping operation.



#### 8. TIME SETTING BUTTONS

Used to adjust the time.



#### 9. TIMER SET/CANCEL BUTTON

Used to set the timer when the desired time is obtained and to cancel the Timer operation.



#### 10. SLEEP MODE AUTO BUTTON

Used to set Sleep Mode Auto operation.



#### 11. AIR CIRCULATION BUTTON

Used to circulate the room air without cooling or heating.



#### 12. ROOM TEMPERATURE CHECKING BUTTON

Used to check the room temperature.



#### 13. NEO PLASMA(OPTIONAL)

Used to start or stop the plasma-purification function.



#### 14. HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (OPTIONAL)

Used to set the desired vertical airflow direction.



#### 15. RESET BUTTON

Used prior to resetting time.



#### 16. 2nd F Button

Used prior to using modes printed in blue at the bottom of buttons.




#### 17. AUTO CLEAN (OPTIONAL)

Used to set Auto Clean mode.

## **Forced operation**

Operation procedures when the remote control can't be used.  
The operation will be started if the power button is pressed.  
If you want to stop operation, re-press the button.

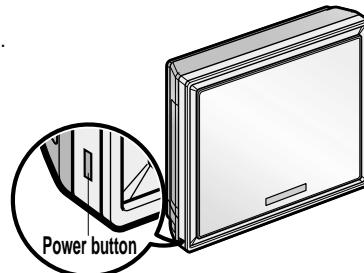

	Cooling Model	Heat pump Model		
		Room Temp. $\geq 24^{\circ}\text{C}$	$21^{\circ}\text{C} \leq \text{Room Temp.} < 24^{\circ}\text{C}$	Room Temp. $< 21^{\circ}\text{C}$
Operating mode	Cooling	Cooling	Healthy Dehumidification	Heating
Indoor FAN Speed	High	High	High	High
Setting Temperature	$22^{\circ}\text{C}$	$22^{\circ}\text{C}$	$23^{\circ}\text{C}$	$24^{\circ}\text{C}$

## **Test operation**

During the TEST OPERATION, the unit operates in cooling mode at high speed fan, regardless of room temperature and resets in 18 minutes.

During test operation, if remote controller signal is received, the unit operates as remote controller sets.  
If you want to use this operation, Press and hold the ON/OFF button for 3~5 seconds, then the buzzer sound 1 "beep".

If you want to stop the operation, re-press the button.


## **Auto restart**

In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.

So there is no need of activating this function by pressing any key or button.

In the initial mode, the fan operates at a low speed and the compressor starts 2.5~3 minutes later.

As the compressor starts, the fan speed also resumes its previous setting mode.

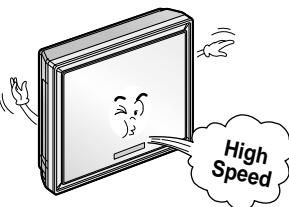

**Helpful information**

Fan speed and cooling capacity.  
The cooling capacity indicated in the specification is the value when the fan speed is set to high, and the capacity will be lower at low or medium fan speed.  
High fan speed is recommended when you wish to cool the room quickly.

## **NOTICE**

Auto restart function has set enable as factory default.

But customer can set up by following this instruction.

### **To be disable function**

- Press and hold the ON/OFF button for 6 seconds, then the buzzer sound 2 "beep" and the indicator lamp (1) blinks 4 times.

### **To be enable function**

- Press and hold the ON/OFF button for 6 seconds, then the buzzer sound 2 "beep" and the indicator lamp (1) brights 4 times.

# Maintenance and Service




**CAUTION:** Before performing any maintenance, turn off the main power to the system.

## Grille, Case, and Remote Controller


- Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

**NOTICE** Power supply must be disconnected before cleaning the indoor unit.

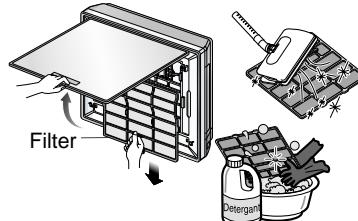

## **Air Filters**

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

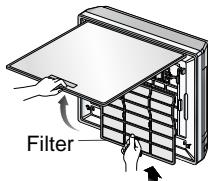

1. Lift the front access panel and pull the filter tab slightly forward to remove the filter.
2. Clean the filter with a vacuum cleaner or warm, soapy water.
  - If dirt is conspicuous, wash with a solution of detergent in lukewarm water.
  - If hot water (40°C or more) is used, it may be deformed.
3. After washing with water, dry well in the shade.
4. Re-install the air filter.

- Never use any of the followings:


- Water hotter than 40°C Could cause deformation and/or discoloration.
- Volatile substances Could damage the surfaces of the air conditioner.



## Cleaning Filter


- Recomended use period : About 3 months

1. Lift the front panel, hold it up and pull the Air filter.

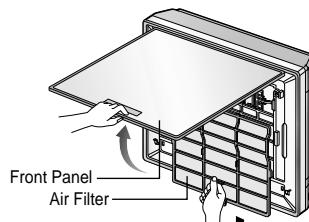


2. Remove the Plasma Filter.



**WARNING: Don't touch the PLASMA Filter within 10 seconds after opening the inlet grille, it may cause electric shock.**

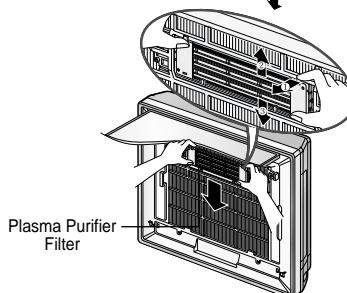

3. Put the Plasma Filter into the neutral detergent for 1~2 hours and then raise it.

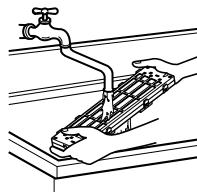

4. Insert the Plasma Filter after perfectly drying it in shade. Now insert Air Filter and close the front panel completely by matching the hook.

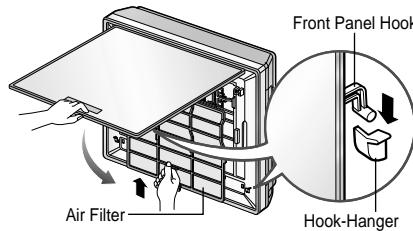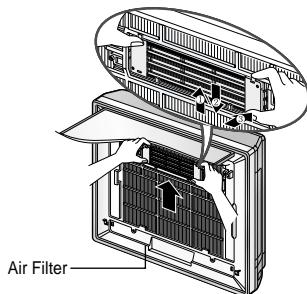

## When the air conditioner is not going to be used for a long time.

### When air conditioner is not going to be used for a long time.

- 1 Operate the air conditioner on Air circulation mode for 2 to 3 hours.
  - This will dry out the internal mechanisms.

- 2 Turn off the circuit breaker.

#### CAUTION

Turn off the circuit breaker when the air conditioner is not going to be used for a long time.

Dirt may collect and may cause a fire.

- 3 Remove the batteries from the remote controller.

### When the air conditioner is used again.

- 1 Clean the air filter and install it in the indoor unit.  
(Refer to page 13 for cleaning filters.)

- 2 Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

- 3 Check that the ground wire is connected correctly. It may be connected to the indoor unit side.

## Operation Tips

### Do not overcool the room.

This is not good for the health and wastes electricity.

### Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in operation.

### Keep the room temperature uniform.

Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.

### Make sure that the doors and windows are shut tight.

Avoid opening doors and windows as much as possible to keep the cool air in the room.

### Clean the air filter regularly.

Blockages in the air filter reduces the airflow and lowers the cooling and dehumidifying effects. Clean at least once in every two weeks.

### Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

## Before you call for service...



### Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persists, please contact your dealer.

Case	Explanation	See page
The air conditioner does not operate.	<ul style="list-style-type: none"> <li>Have you made a mistake in timer operation?</li> <li>Has the fuse blown or has the circuit breaker been tripped?</li> </ul>	
The room has a peculiar odor.	<ul style="list-style-type: none"> <li>Check that this is not a damp smell exuded by the walls, carpet, furniture, or cloth items in the room.</li> </ul>	
It seems that condensation is leaking from the air conditioner.	<ul style="list-style-type: none"> <li>Condensation occurs when the airflow from the air conditioner cools the warm room air.</li> </ul>	
Air conditioner does not operate for about 3 minutes when restarted.	<ul style="list-style-type: none"> <li>This is the protector of the mechanism.</li> <li>Wait about three minutes and operation will begin.</li> </ul>	
Does not cool or heat effectively.	<ul style="list-style-type: none"> <li>Is the air filter dirty? See air filter cleaning instructions.</li> <li>Has the temperature been set incorrectly?</li> <li>Are the indoor unit's air inlet or outlet vents obstructed?</li> </ul>	12
The air conditioner operation is noisy.	<ul style="list-style-type: none"> <li>For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit.</li> <li>For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit.</li> </ul>	
Remote controller display is faint, or no display at all.	<ul style="list-style-type: none"> <li>Are the batteries depleted?</li> <li>Are the batteries inserted in the opposite (+) and (-) directions?</li> </ul>	9
Crack sound is heard.	<ul style="list-style-type: none"> <li>This sound is generated by the expansion/constriction of the front panel, etc. due to changes of temperature.</li> </ul>	

#### NOTICE

WATER RESISTANT: The indoor unit is not water resistant and should not be exposed to excess water.

## *Memo*



P/No.: 3828A23001N

Printed in Korea

**After reading this manual, keep it in a place easily accessible to the user for future reference.**