

## L1515S/L1515SR

**M**ake sure to read the **Important Precautions** before using the product.  
Keep the User's Guide(CD) in an accessible place for future reference.

**S**ee the label attached on the back cover and quote this information to your dealer when you require service.

---

**This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential e shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.**

## On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury :

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- During a lightning storm or when the display is to be left unattended for an extended period of time, unplug it from the wall outlet.

## On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

## On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

 
## On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

 
- Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

## Unfolding the stand base

 
1. Place the monitor with its front facing upward on a cushion or soft cloth. Expand the stand base to its first step degree (65°), pulling it apart with two hands.

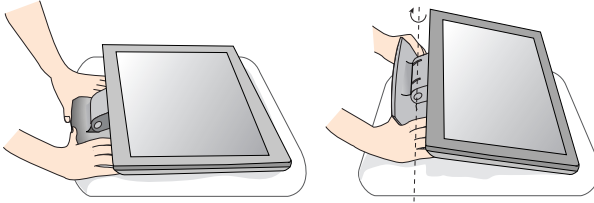

2. Place the monitor with its front facing downward and then further expand the stand base fully to 90 degrees. Do not apply excessive force to expand the stand base over 90 degrees as it may damage the monitor.

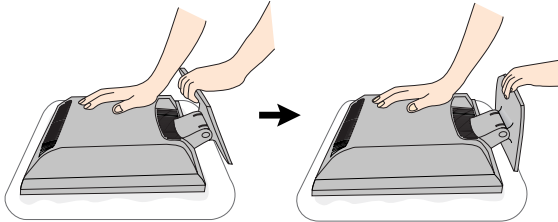 


3. Place the monitor upright and adjust the angle of the stand base as desired. Adjust the stand base angle with two hands, holding the monitor head.

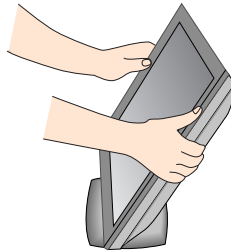

## Folding the stand base

1. Face the front of the monitor and push the monitor backwards, following the sequence shown in the picture. Be careful not to squash your hands while you fold the stand base.

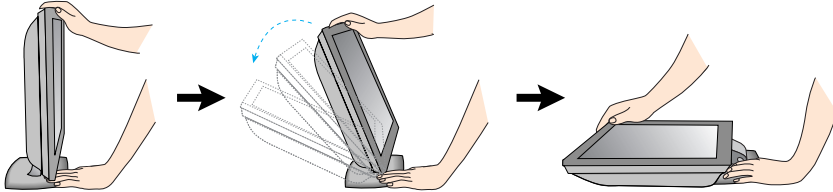

This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.



 
Do not touch or apply force to the monitor screen while expanding or folding the stand base.

## Using the Computer

1. Connect the signal cable. When attached, tighten the thumbscrews to secure the connection.
2. Connect the power cord into a proper power outlet that is easily accessible and close to the display.

 
### NOTE

- This is a simplified representation of the rear view.
- This rear view represents a general model; your display may differ from the view as shown.


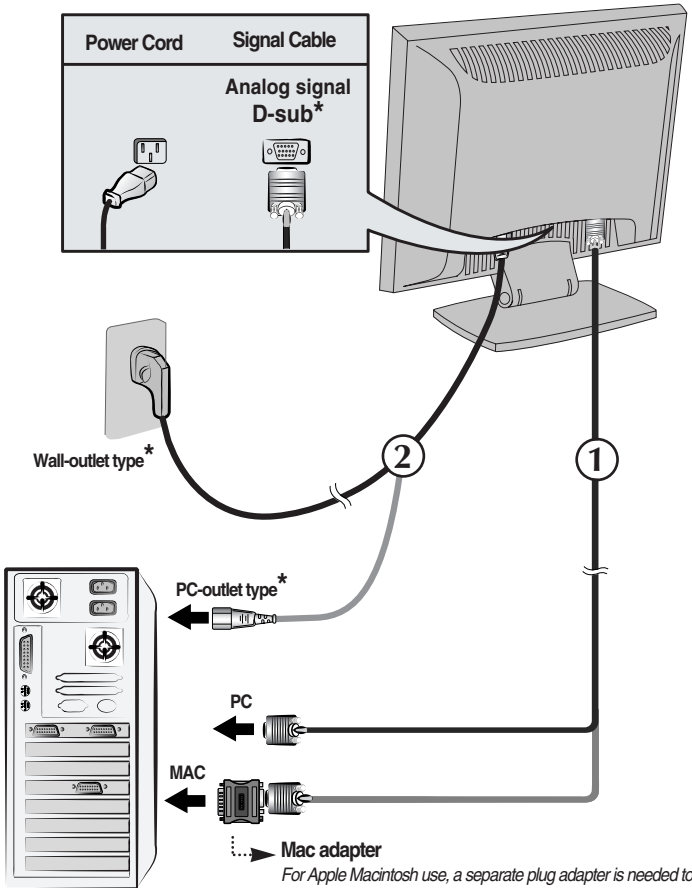





*For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-sub VGA connector on the supplied cable to a 15 pin 2 row connector.*
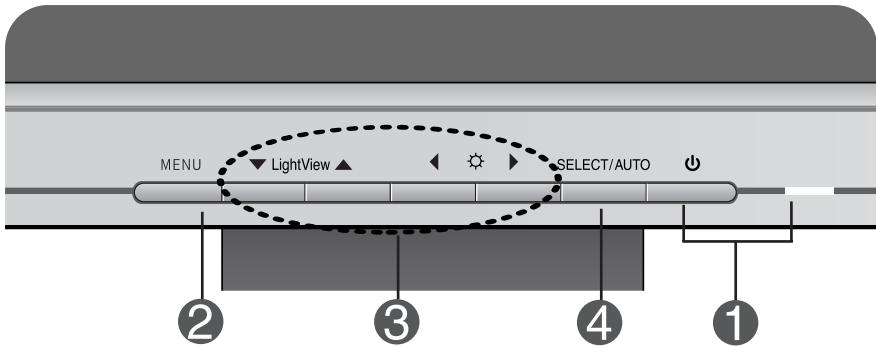
## Front Panel Controls

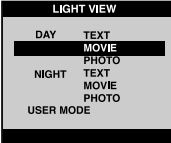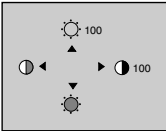

Control	Function
<b>1</b> <b>Power Button</b>	Use this button to turn the display on or off.
<b>Power (DPMS) Indicator</b>	This Indicator lights up green when the display operates normally. If the display is in DPM (Energy Saving) mode, this indicator color changes to amber.
<b>2</b> <b>MENU Button</b>	Use this button to enter or exit the On Screen Display.
<b>3</b> <b>▼▲◀▶ Buttons</b>	Use these buttons to choose or adjust items in the On Screen Display.
<b>4</b> <b>SELECT/AUTO Button</b>	Use this button to enter a selection in the On Screen Display.

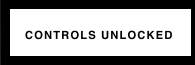Control	Direct Access Function
 <p>The image shows a rectangular OSD menu titled "LIGHT VIEW". It contains a grid of options: DAY, TEXT, MOVIE, PHOTO, NIGHT, TEXT, MOVIE, PHOTO, and USER MODE. The "MOVIE" option in the second row is highlighted with a black background.</p>	<h3 style="text-align: center;">3 ▼ LightView ▲</h3> <p>This feature lets you easily select the best desired image condition optimized to the environment (ambient illumination, image types etc.).</p> <ul style="list-style-type: none"> <li>• <b>DAY</b> : Bright ambient illumination</li> <li>• <b>NIGHT</b> : Dark ambient illumination</li> <li>• <b>TEXT</b> : For text images (Word processing etc.)</li> <li>• <b>MOVIE</b> : For animation images in videos or movies</li> <li>• <b>PHOTO</b> : For pictures or drawings</li> <li>• <b>USER MODE</b> : For use under user setup image conditions (Brightness, contrast and color tint are selected by the user in OSD Screen Setup Menu.)</li> </ul> <p style="text-align: center;">▼ LightView ▲ → ▼ LightView ▲ → MENU</p> <hr/>  <p>The image shows a control panel for brightness and contrast. It features a sun icon for brightness and a moon icon for contrast, both with "100" next to them. There are four arrow keys: left, up, down, and right. Below the icons, there are two sets of arrows: a left arrow followed by a sun icon and a right arrow, and a left arrow followed by a moon icon and a right arrow.</p> <p style="text-align: center;">Bring up Contrast and Brightness adjustment. : ◀ ☀ ▶ → ▼ ▲ ◀ ▶ → MENU</p>
 <p>The image shows a rectangular OSD box with a black border. Inside, it says "PROCESSING" on the top line and "AUTO CONFIGURATION" on the bottom line.</p>	<h3 style="text-align: center;">4 AUTO adjustment function</h3> <p>When adjusting your display settings, always press the <b>SELECT/AUTO</b> button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode).</p> <p>The best display mode is <b>1024x768</b>.</p>
 <p>The image shows a rectangular OSD box with a black border. Inside, it says "CONTROLS LOCKED".</p>	<h3 style="text-align: center;">CONTROLS LOCKED/UNLOCKED</h3> <p style="text-align: center;">: MENU and ▶</p> <p>This function allows you to secure the current control settings, so that they cannot be inadvertently changed. Press and hold the MENU button and ▶ button for 3 seconds: the message "<b>CONTROLS LOCKED</b>" appears.</p> <p>You can unlock the OSD controls at any time by pushing the MENU button and ▶ button for 3 seconds: the message "<b>CONTROLS UNLOCKED</b>" will appear.</p>
 <p>The image shows a rectangular OSD box with a black border. Inside, it says "CONTROLS UNLOCKED".</p>	

## Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

### NOTE

- Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:



- 1 Press the **MENU** Button, then the main menu of the OSD appears.
- 2 To access a control, use the ▼ or ▲ Buttons. When the icon you want becomes highlighted, press the **SELECT/AUTO** Button.
- 3 Use the ▼ ▲ ◀ ▶ Buttons to adjust the item to the desired level.
- 4 Accept the changes by pressing the **SELECT/AUTO** Button.
- 5 Exit the OSD by Pressing the **MENU** Button.

# On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Main menu	Sub menu		Reference
BRIGHTNESS CONTRAST	BRIGHTNESS		● To adjust the brightness and contrast of the screen
	CONTRAST		
COLOR	PRESET	9300K	● To customize the color of the screen
		6500K	
	R/G/B(User Color)		
	GAMMA		
POSITION	V POSITION		● To adjust the position of the screen
	H POSITION		
TRACKING	CLOCK		● To improve the clarity and stability of the screen
	PHASE		
SETUP	LANGUAGE		● To customize the screen status for a user's operating environment
	OSD POSITION		
	FACTORY RESET		
● : Adjustable			

## NOTE




- The order of icons may differ depending on the model (A9~A11).

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.


## NOTE

- OSD (On Screen Display) menu languages on the monitor may differ from the manual.

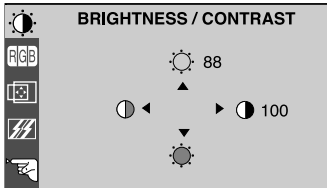


## To adjust the brightness and contrast of the screen

OSD Adjust	Description
 The screenshot shows the 'BRIGHTNESS / CONTRAST' OSD menu. On the left is a vertical toolbar with icons for brightness/contrast, RGB, input source, picture mode, and help. The main area has a sun icon with '88' next to it, and a slider with '100' on the right. Below the sun icon is a circular icon with a vertical line through it.	 <b>BRIGHTNESS</b> To adjust the brightness of the screen.
	 <b>CONTRAST</b> To adjust the contrast of the screen.

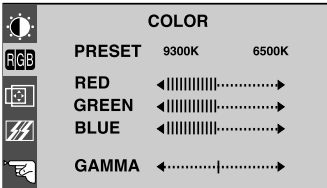
## To customize the color of the screen

OSD Adjust	Description
 The screenshot shows the 'COLOR' OSD menu. On the left is a vertical toolbar with icons for brightness/contrast, RGB, input source, picture mode, and help. The main area shows 'PRESET' with '9300K' and '6500K' options. Below are 'RED', 'GREEN', and 'BLUE' sliders, and a 'GAMMA' slider.	<b>PRESET 9300K/6500K</b> Select the screen color. <ul style="list-style-type: none"><li>• 9300K: Slightly bluish white.</li><li>• 6500K: Slightly reddish white.</li></ul>
	<b>RED GREEN BLUE</b> Set your own color levels.
	<b>GAMMA</b> Set your own gamma value. (-50~50) On the monitor, high gamma values display whitish images and low gamma values display high contrast images.

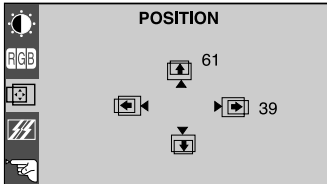
## To adjust the position of the screen

OSD Adjust	Description
 The screenshot shows the 'POSITION' OSD menu. On the left is a vertical toolbar with icons for brightness/contrast, RGB, input source, picture mode, and help. The main area shows a vertical slider with '61' and a horizontal slider with '39'.	 <b>Vertical Position</b> To move image up and down.
	 <b>Horizontal Position</b> To move image left and right.

## To improve the clarity and stability of the screen

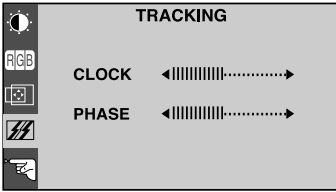OSD Adjust	Description
 The image shows the 'TRACKING' OSD menu. It has a vertical sidebar on the left with icons for a sun, RGB, a square with a plus sign, a lightning bolt, and a speech bubble. The main area contains two settings: 'CLOCK' and 'PHASE', each with a horizontal bar of vertical lines and a double-headed arrow pointing to the right.	<p><b>CLOCK</b> To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p><b>PHASE</b> To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>

## To customize the screen status for a user's operating environment

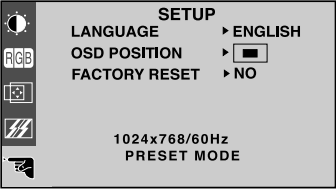OSD Adjust	Description
 The image shows the 'SETUP' OSD menu. It has a vertical sidebar on the left with icons for a sun, RGB, a square with a plus sign, a lightning bolt, and a speech bubble. The main area contains three settings: 'LANGUAGE' with a right-pointing arrow and 'ENGLISH' selected; 'OSD POSITION' with a right-pointing arrow and a black square selected; and 'FACTORY RESET' with a right-pointing arrow and 'NO' selected. At the bottom, it displays '1024x768/60Hz' and 'PRESET MODE'.	<p><b>LANGUAGE</b> To choose the language in which the control names are displayed.</p> <p><b>OSD POSITION</b> To adjust position of the OSD window on the screen.</p> <p><b>FACTORY RESET</b> Return to all factory default settings except "LANGUAGE". If you don't want to reset the monitor, use the ◀ ▶ button to select <b>NO</b> and then press the <b>SELECT/AUTO</b> button.</p>

Check the following before calling for service.

No image appears	
<ul style="list-style-type: none"><li>● Is the power cord of the display connected?</li></ul>	<ul style="list-style-type: none"><li>• Check and see if the power cord is connected properly to the power outlet.</li></ul>
<ul style="list-style-type: none"><li>● Is the power indicator light on?</li></ul>	<ul style="list-style-type: none"><li>• Press the Power button.</li></ul>
<ul style="list-style-type: none"><li>● Is the power on and the power indicator green?</li></ul>	<ul style="list-style-type: none"><li>• Adjust the brightness and the contrast.</li></ul>
<ul style="list-style-type: none"><li>● Is the power indicator amber?</li></ul>	<ul style="list-style-type: none"><li>• If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.</li><li>• Make sure if the power is on.</li><li>• Try to turn on the PC.</li></ul>
<ul style="list-style-type: none"><li>● Do you see an "INPUT SIGNAL OUT OF RANGE" message on the screen?</li></ul>	<ul style="list-style-type: none"><li>• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.</li></ul>
<ul style="list-style-type: none"><li>● Do you see a "NO SIGNAL" message on the screen?</li></ul>	<ul style="list-style-type: none"><li>• This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.</li></ul>

Do you see a "CONTROLS LOCKED" message on the screen?	
<ul style="list-style-type: none"><li>● Do you see "CONTROLS LOCKED" when you push MENU button?</li></ul>	<ul style="list-style-type: none"><li>• You can secure the current control settings, so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by pushing the <b>MENU</b> button and ► button for 3 seconds: the message "CONTROLS UNLOCKED" will appear.</li></ul>

## Display image is incorrect

### ● Display Position is incorrect.

- Press the **SELECT/AUTO** button to automatically adjust your display image to the ideal setting.  
If the results are unsatisfactory, adjust the image position using the **H position** and **V position** icon in the on screen display.
- Check **Control Panel --> Display --> Settings** and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.

### ● On the screen background, vertical bars or stripes are visible.

- Press the **SELECT/AUTO** button to automatically adjust your display image to the ideal setting.  
If the results are unsatisfactory, decrease the vertical bars or stripes using the **CLOCK** icon in the on screen display.

### ● Any horizontal noise appearing in any image or characters are not clearly portrayed.

- Press the **SELECT/AUTO** button to automatically adjust your display image to the ideal setting.  
If the results are unsatisfactory, decrease the horizontal bars using the **PHASE** icon in the on screen display.
- Check **Control Panel --> Display --> Settings** and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).

### ● The screen color is mono or abnormal.

- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at **Control Panel - Settings**.



### ● The screen blinks.

- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.
- Make sure the power voltage is high enough, It has to be higher than **AC100-240V 50/60Hz**.

## Have you installed the display driver?

- |   |  |
|---|--|
| <ul style="list-style-type: none"><li>● <b>Have you installed the display driver?</b></li><br/><li>● <b>Do you see an "Unrecognized monitor, Plug&amp;Play (VESA DDC) monitor found" message?</b></li></ul> | <ul style="list-style-type: none"><li>• Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: <a href="http://www.lge.com">http://www.lge.com</a>.</li><br/><li>• Make sure to check if the video card supports Plug&amp;Play function.</li></ul> |
|---|--|

# Specifications

<b>Display</b>	15 inches (38.1cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating 15 inches viewable 0.3 mm pixel pitch		
<b>Sync Input</b>	Horizontal Freq.	30 - 63kHz (Automatic)	
	Vertical Freq.	56 - 75Hz (Automatic)	
	Input Form	Separate TTL, Positive/Negative	
<b>Video Input</b>	Signal Input	15 pin D-Sub Connector	
	Input Form	RGB Analog (0.7Vp-p/75ohm)	
<b>Resolution</b>	Max	VESA 1024 x 768@75Hz	
	Recommend	VESA 1024 x 768@60Hz	
<b>Plug&amp;Play</b>	DDC 2B		
<b>Power Consumption</b>	Normal	: 25W	
	Stand-by/Suspend	≤ 3W	
	DPMS Off	≤ 3W	
<b>Dimensions &amp; Weight (with tilt stand)</b>	<b>Full Up Position</b>		<b>Folded Position</b>
			
	width	35.00 cm / 13.78 inches	35.00 cm / 13.78 inches
	Height	31.80 cm / 12.52 inches	33.40 cm / 13.15 inches
	Depth	13.30 cm / 5.24 inches	6.40 cm / 2.52 inches
	Net	2.5 kg (5.51 lbs)	
<b>Tilt Range</b>	Tilt	0°~25°	
<b>Power Input</b>	AC 100-240V~ 50/60Hz 0.6A		
<b>Environmental Conditions</b>	<b>Operating Conditions</b>		
	Temperature	10°C to 35 °C	
	Humidity	10 % to 80 % non-Condensing	
	<b>Storage Conditions</b>		
	Temperature	-20°C to 60 °C	
	Humidity	5 % to 95 % non-Condensing	
<b>Tilt Stand</b>	Attached( O ), Detached ( )		
<b>Signal cable</b>	Attached( ), Detached ( O )		
<b>Power cord</b>	Wall-outlet type or PC-outlet type		
<b>Regulations</b>	TCO99		

## NOTE

- Information in this document is subject to change without notice.

## Preset Modes (Resolution)

Display Modes (Resolution)			Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	VGA	640 x 350	31.468	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	35.000	66.67
5	VESA	640 x 480	37.861	72.8
6	VESA	640 x 480	37.500	75
7	VESA	800 x 600	35.156	56.25
8	VESA	800 x 600	37.879	60
9	VESA	800 x 600	48.077	72
10	VESA	800 x 600	46.875	75
11	MAC	832 x 624	49.725	75
*12	VESA	1024 x 768	48.363	60
13	VESA	1024 x 768	56.476	70
14	VESA	1024 x 768	60.023	75

### \*Recommended

Unlike CRT monitors, which require a high refresh rate to minimize flickering, TFT technology is inherently flicker-free. If possible, configure your computer for 1024 x 768 addressability at 60Hz vertical refresh rate.

 
---

## Indicator

MODE	LED Color
Normal	green
Stand-by/Suspend	amber
DPMS Off	amber

## VESA wall mounting

Connected to another object (stand type and wall-mounted type). This monitor accepts a VESA-compliant mounting interface pad.- **optional**  
For further information, refer to the VESA Wall Mounting Instruction Guide.

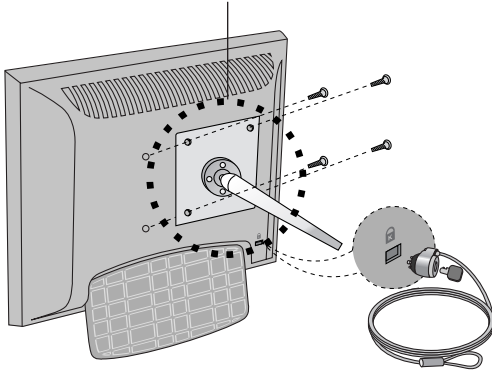

## Kensington Security Slot- optional

Connected to a locking cable that can be purchased separately at most computer stores

