



ENGLISH

Personal Navigation Device

OWNER'S MANUAL

N10



Please read this manual carefully before operating your navigation device.

Keep it for future reference.

Designs and specifications are subject to change without prior notice for improvement.

Safety notes



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT SPLIT COVER(OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



Do not handle the power plug nor the adapter with wet hands. This may result in a electrical shock.



Immediately power off the unit and unplug the car charger if you notice smoke or odors coming from the navigation device or adapter. Fire can result from improper use.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Make sure to insert the power plug tightly. Fire can result from improper use.



Always operate the vehicle in a safe manner. Do not become distracted by the navigation while driving, and always be fully aware of all driving conditions.

Minimize the amount of time spent viewing the navigation screen while driving and use voice prompts when possible.

Do not enter destinations, change settings, or access any functions requiring prolonged use of the unit's controls while driving. Pull over in a safe and legal manner before attempting such operations.



Use only the specified power adapter. Using a different type of adapter may damage the product. (5.0 +/- 0.2V)



The appliance is not intended for use by children or infirm persons without supervision.



Note that malfunctions may occur if you use the product in places where static electricity occurs frequently.



Do not use the unit near water. Do not touch the unit with wet hands.



Do not attempt to disassemble or repair the product yourself.



Do not kink or crease the power cable or place heavy objects on the power cable. Fire can result from damaged power cables.



Do not use the product for other purposes than those described in this guide.



Unplug the car charger during electrical storms. This may result in electrical shock.



Do not use in extreme temperatures. (-10°C~60°C)

Safety notes



Avoid leaving the product in hot or humid places.



When moving the product, separate the power plug from cigarette lighter socket then remove the navigation device from the windscreen mount. Finally slide the lever on the windscreen mount to all the suction cup to be released.



Take special attention when touching the product box, owner's manual and accessories to avoid cuts.



While driving, keep the sound volume to a level that does not distract you from driving.



Do not drop and avoid heavy impacts.



If you notice unusual odors, excessive heat coming from the product or anything else that seems unusual, stop use and contact our Customer Service Center.



Always use soft, dry cotton cloth when cleaning the product. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



When attaching a navigation holder to the windscreen remove impurities in the area before attaching and slide the suction lever to secure to the windscreen.



Do not pull out the SD Memory Card while the navigator is in operation as this may cause mechanical problems.



Do not use the navigator for extended periods of time. This may result in battery discharge.



Please obey all traffic regulations. To aid safe driving, information on safe driving routes and routes where accidents occur frequently is included. Voice guidance and map route may differ from the actual traffic conditions.



This product is manufactured to comply with Directive 2006/28/EEC (ANNEX I, 3.2.9), 72/245/EEC, 99/5/EC and 2006/95/EEC.

European representative :

LG Electronics Service Europe B.V.
Veluwezoom 15, 1327 AE Almere,
The Netherlands
(Tel : +31-036-547-8940)



Safety notes

- If you attach the windscreen mount on the glass for a long period of time, the pressure in the suction cup slowly reduces and the windscreen mount may fall off.
- The windscreen mount may fall off the windscreen if not properly installed. Should this occur, it is recommended that navigation device is installed as close to as possible to the dash board to avoid damage to the unit.
- Applying too much force to adjust the angle of the windscreen mount may cause damage. Take care when making adjustments.
- If the windscreen mount falls off, please follow the instructions again to reinstall and use it.
- Please note that if the product is damaged due to user negligence, it cannot be returned or refunded.
- Back up your data using our provided software in the CD.
- In order to protect the screen and the unit, always store it in the carry case.
- Do not use the memory card (SD card) with other devices as this may cause damage to the SD card.
- The navigation device needs to have direct line of sight with the sky in order to pick up a signal. For a speedier fix on your location, please allow up to 5 minutes at a standstill for the device to locate you.
- When installing the unit, make sure that it does not block the view on the windscreen. Make sure that unit does not interfere with the safety operations of the vehicle when installed. Eg. Deployment of air bags or other safety equipment.
- The unit may require the external antenna kit if the vehicle has a heat reflective shield embedded in the windscreen. Heat reflective windscreens can prevent a signal from being received by the navigation device. The external antenna kit is available as an optional accessory.

Caution : Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Winter precaution

- The windscreen mount can easily come off the glass due to differences in temperature between inside and outside the windscreen.

Summer precautions

- The windscreen mount can easily come off the glass due to difference in temperature between inside and outside of the windscreen.
- Remove the windscreen mount and store it separately when parking for a long period of time.
- The built-in battery may be damaged when kept under direct sunlight in the car for a long period of time.
Separate the unit and store it in a cool place. A temperature rise over 60 degrees can reduce the battery life span or cause an explosion.
- Never leave your unit/accessories (including windscreen mount, car charger etc) visible in an unattended vehicle, as these are a target for thieves.

- The guidance route is only a guide and there maybe some variances between the information on the navigation device with the actual roads. Road data is always being updated and furthers updates may be added subject to availability.
- The unit is designed to provide you with route suggestions, so it does not reflect road conditions, traffic congestion, weather conditions or other factors that may affect safety or timing while driving.



Table of contents

General information	.7
Package contents	.7
Option table by models	.7
Name of each component	.8
Front panel	.8
Rear / Side panel	.8
Connecting devices	.9-11
Installation sequence for the windscreen mount	.9
Detaching the windscreen mount	.10
Installing the external GPS antenna (Optional)	.10
Connecting the USB cable	.11
Disconnecting the USB lead from the navigation device	.11
Downloading files: Mass storage	.11
Basic operation	.12-13
Initial setting	.12
Turning the unit on/off	.13
Adjusting the Volume/ Brightness	.13
Mute	.13
Lock feature	.13
Using a earphone	.13
Getting started with navigation	.14-15
General operation	.14
Finding and storing a destination on the map	.14
Finding the stored destination	.14
Map screen	.15
Navigation Menu	.16-30
Navigation menu list	.16
General operations of navigation menu	.16
Address	.17
Recent Places	.18
My Places	.18-20
POI	.20-21
Route Manager	.22-23
TMC (Traffic Information)	.24-25
Setup	.26-30



Table of contents

Music Player30-31
Photo viewer32
Bluetooth33-38
<i>Bluetooth</i> wireless technology33
Connecting your unit and Bluetooth phone33-34
Setting the Bluetooth34
Disconnecting/Deleting/Connecting again the bluetooth phone34
Making a call with phone number35
Call History36
Using your phone book36-37
Using voice Dial37
Incoming calls38
Ending calls38
Listening to music files38
Installation39-40
Installing the Navigator “PC Portal”39
Recommended PC System Requirements39
Starting the “PC Portal” Wizard40
Using software40-43
Using the “PC Portal”40-41
Installing Maps42
Removing Maps42
Importing Favorite Locations42
General Warning Messages43
Troubleshooting44-45
Bluetooth phone compatibility list46-47
Specifications48
Support-Hotline49



General information

Package contents



Main Body



 
Windscreen mount




USB Cable




Car charger with TMC antenna

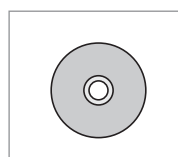

Installation CD

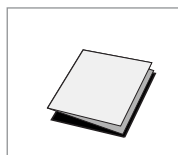 

Quick Reference Guide

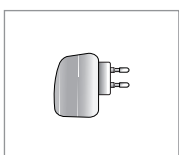 

AC Adapter (Optional)



GPS Antenna (Optional)



Supporter of Cradle (Optional)

Contents may be changed without notice.

Option table by models

Model	Bluetooth	TMC	TTS
N10E	X	X	X
N10T	X	X	O
N10R	X	O	X
N10B	O	X	X
N10Z	X	O	O
N10Y	O	O	O
N10S	O	X	O
N10Q	O	O	X

 
Note

The navigation menu varies depending on TMC function.

With the TMC function




Without the TMC function

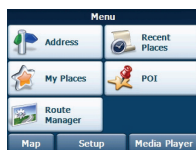



Name of each component

 Front panel

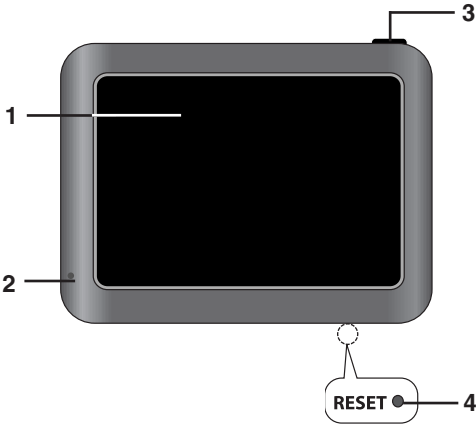

1. LCD

2. **Microphone (for use only with Bluetooth wireless technology)**

3. **POWER** (⏻)

- Power on: Press and hold this button in power off status.
- Power off: Press this button for about 2 seconds in power on status.
- Handy setup: Press this button briefly in power on status.

 
 
4. **RESET hole**

If the unit does not respond, press the RESET hole using a ball point pen or a similar tool.

Note

- To activate the menu function on LCD screen, touch the LCD screen with your finger.
- If you cut the external power supply or the battery level is too low, the device will be turned off after a few seconds.

Rear / Side panel

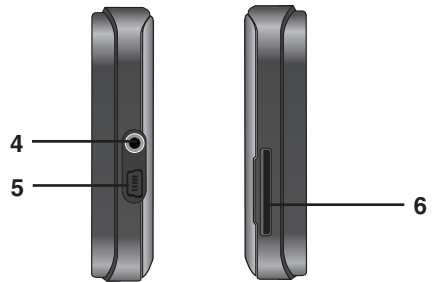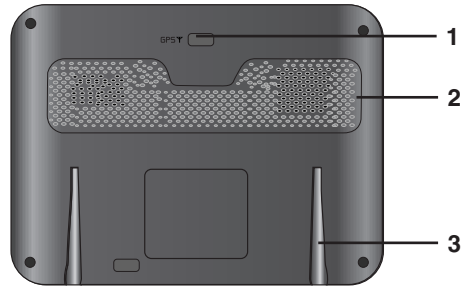

1. **External GPS Antenna Port**

2. **Speaker**

3. **Docking connector**

4. **Earphone jack**

5. **USB port/ Power supply connector (DC 5V)**

6. **Memory Card Slot**

Insert a SD Memory Card.

Caution

 
Deleting or altering the map data in the built-in memory may cause problems in the navigating operation.




Connecting devices

Installation sequence for the windscreen mount


1. Select the most suitable position on the windscreen.
2. Clean the surface of the windscreen, to remove any dust and grease.
3. Place the windscreen mount on the windscreen.

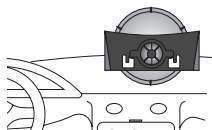

 4. Push back the lever to the left until you hear a click, fixing the windscreen mount in position.

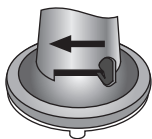

 
5. Align the docking connector at the windscreen mount then push the unit down until you hear a click.

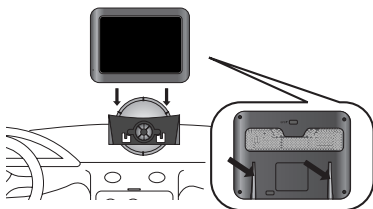

Note

Standard operation temperature of the suction mount is between -10°C and 60°C . The suction mount may disengage under a temperature outside of what is specified.

 6. Plug the small end of the car charger into the power supply connector at the side of the unit.

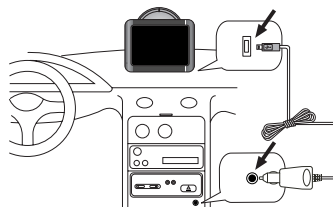

7. Plug the other end into your vehicle's 12V-24V (cigarette lighter) socket.
8. To adjust the angle of the mount, slacken the adjustable knobs at the suction-cup and then turn it gently. In addition to tilting the mount up and down and from side to side, you can also rotate the mount, from the left, -45° to 45° .
9. When you finish, tighten up the knobs again.

Note

 
- This unit and its car charger are designed for use in vehicles that have $5.0 \pm 0.2\text{V}$, negative ground electrical systems. (This is a standard for most vehicles.)
If your vehicle has a different type of electrical system, the DC power system cannot be used.
- The unit is automatically charged when connecting the USB port of the unit and your vehicle's 12V-24V (cigarette lighter) socket with the car charger.



Connecting devices

Detaching the windscreen mount

1. To separate the windscreen mount, pull the lever to the right.

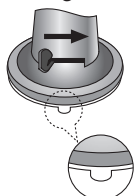


2. If the windscreen mount still doesn't detach from the windscreen, pull the tab on the suction cup.

Installing the external GPS antenna (Optional)

This unit has a built-in GPS antenna to receive the satellite signals.

The external GPS antenna is sold separately and will improve the reception from the satellites for cars with a heat reflective windscreen. To install the antenna:

 1. Select the place to attach the external GPS antenna.
2. Plug the jack of the GPS antenna into the socket on the rear of the navigation unit.

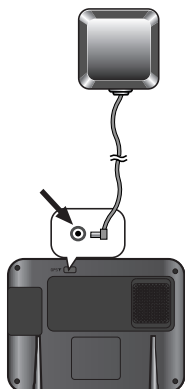

Installation of the external antenna inside the vehicle

Attach the external antenna onto a surface which is as level as possible, has line of sight with the sky and can be secured safely with the double sided tape.

Note

- Make sure the surface is free of moisture, dust, grime, oil, etc., before affixing the double sided tape.
- The double-sided tape contains a strong adhesive and may leave a mark on the dashboard if removed.
- Some vehicles use window glass that does not allow signals from GPS satellites to pass through. On such vehicles, install the GPS antenna on the outside of the vehicle.

Installation of the external antenna outside the vehicle

Place the external GPS antenna in a position as level as possible, such as on the roof or boot. (The GPS antenna is attached with a magnet.)

When routing the lead in from the top of the door

 
Make a U-shaped loop in the lead on the outside to prevent rainwater from flowing along the lead into the interior of the vehicle. (The GPS antenna is attached with a magnet.)



Connecting devices

Connecting the USB cable

- Connect one end to the USB port on your PC and then plug the other end into your unit's USB port.

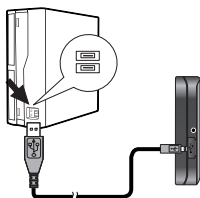

- The unit is automatically charged when connecting the USB port of the unit and your PC with the USB cable.

With the SD card inserted



Without the SD card



Note

You can not operate the navigator when the unit is connected to a PC with USB cable.

Disconnecting the USB lead from the navigation device

Wait until you get a message that you can safely unplug the device before disconnecting the USB device.

1. The safe remove icon is displayed in the system tray.



2. Click on the icon to eject the unit from the PC and select the 'Safely remove' message.
3. A message will appear indicating that it is now safe to disconnect the unit.
4. You can now go ahead and remove the USB cable from the PC.

Downloading files: Mass storage

1. Activate Windows Explorer on your PC. A mass storage device is displayed in window explorer.
2. Create a folder you want to use.
3. Select files you want to download, then drag and drop them to the folder you created.

Note

- When the SD card is inserted, you can download the data on the SD card.
- When the SD card is not inserted, you can download the data on the built-in memory.
- Don't remove the USB cable while uploading or downloading files.

Basic operation

Initial setting

When you turn the unit on for the first time after purchasing the unit, you must follow the steps as shown below.

 
If you turn the unit on after turning the unit off, the “Attention” screen appears.

Follow the steps 6-7 as shown later on the page.


1. Press and hold POWER (⏻).
The “Language Settings” screen appears. (Page 27)




2. Set “Language text” and “voice guidance” by touching ◀ / ▶ and then touch **OK**.
The “Display” screen appears. (Page 26)

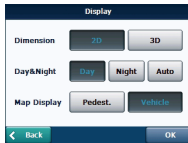

 3. Set “Dimension”, “Day&Night”, and “Map Display” by touching the items you want and then touch **OK**. The “Route Options” screen appears. (Page 23)

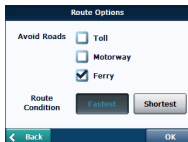


 4. Set “Avoid Roads” and “Route Condition” by touching the items you want and then touch **OK**. The “Units & Time” screen appears. (Page 27)

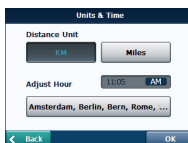


5. Set “Distance Unit” and “Adjust Hour” by touching the items you want and then touch **OK**.

 
The “Warning” screen appears.

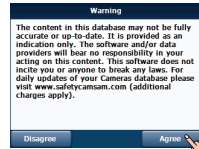

 6. Touch “Agree”.
The “Attention” screen appears.

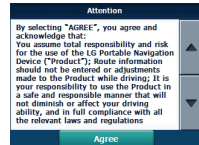

 
7. Touch “Agree”.
The “Information” screen appears.

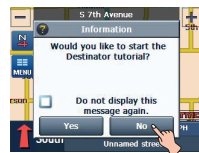

8. Touch “No”.
The map screen appears.



 If you touch the “YES”, the screen moves to the “Introduction” menu of “Tutorial” item. For detail, refer to the “Tutorial” on the page 29.

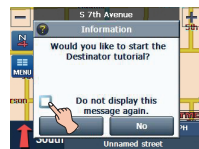

Touch in order not to display information screen again.

Basic operation

Turning the unit on/off

 
Press and hold POWER (⏻) to turn the unit on. Press and hold POWER for about 2 seconds until the unit is turned off.

Note

If you connect the unit to a power source, it will automatically turn on.

Adjusting the Volume/Brightness

1. Turn the unit on.
2. Press POWER (⏻) briefly when the map screen appears. The “Handy Setup” screen appears.

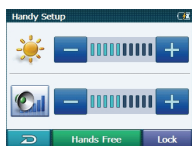

Map/Photo mode



Music mode

Note



When you have the unit with *Bluetooth* wireless technology, **Hands Free** and **Audio Output** appear on the screen.

3. Set the volume (🔊) and brightness (☀️) by touching **-** / **+** and then touch **➡️**.

Note

If there is no touch input for about 5 seconds, the screen moves to the previous screen.

 
Mute

Touch  on the “Handy Setup” screen to mute the sound. To cancel it, touch  again.

Lock feature

This feature locks the unit to prevent it from operating when you accidentally touch an item.


Touch **Lock** on the “Handy Setup” screen.

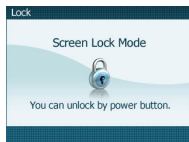

To cancel it, touch POWER (⏻).

Using a earphone

 Connect stereo earphones plug (ϕ 3.5 mm) to earphone jack for private listening.

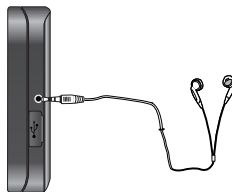

Note

- Always turn down the volume before connecting your earphone.
- The speakers are turned off while the earphone plug is inserted in the earphone jack.

Getting started with navigation

General operation

Finding and storing a destination on the map

1. Turn the unit on.
The map screen appears.

 


2. Select a destination by simply touching and dragging the map on the screen.



3. Touch **Go** to find a destination.
Drive in accordance with the screen and voice prompts.


The destination is stored in the “Recent Places” menu automatically. (Page 18)

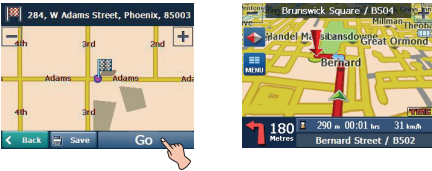

Touch **Save** if you want to store the destination.



 4. Set the group you want to store by touching **Left Arrow** / **Right Arrow** and then touch **Save**.
The destination is stored in the “My Places” menu. (Page 18)

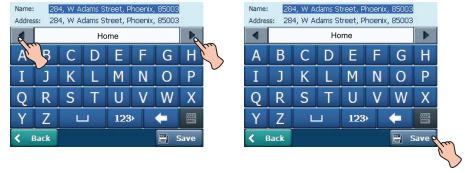

Note

 
- If you don't want to store a destination, touch **Cancel** on the screen.
- Touch **Back** on the screen to move to the previous screen.

Finding the stored destination

1. Touch **Menu** on the map screen and then touch **My Places**.



2. Touch group that the destination is stored in and then touch **OK**.

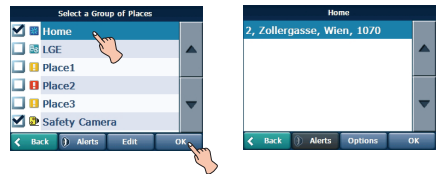


3. Touch the destination you want and then touch **OK**.




4. Touch **Go** to find the destination.
Drive in accordance with the screen and voice prompts.

Getting started with navigation

 Map screen

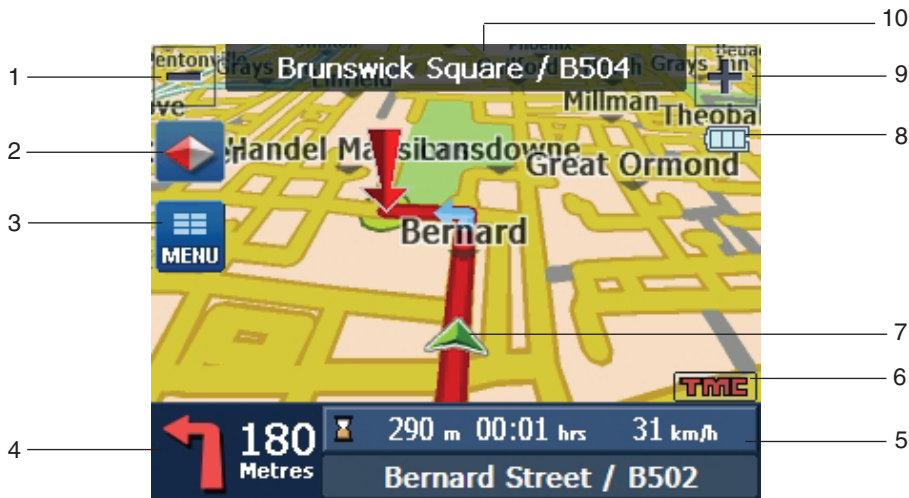


1. : Touch to zoom out.
2. : Touch to view the 2D/3D map.
3. : Touch to view the navigation menu.
4. Displays next turn direction and distance to the next turn.
Touch to view the "Turn by Turn" menu (Page 22).
5. Displays the remaining distance and time that the trip will take. If remaining time gets touched, it will display estimated time of arrival. Bottom of the bar displays the name of the current street you are on.
6. Receives the latest traffic information using FM multiplex broadcast.
7. : Indicates that the unit is receiving GPS signal and not found your current location.
: Indicates that the unit has not received GPS signal and found your current location.
8. Battery indicator
 - On the screen of the unit, the charging status will be displayed as follows:
 - : Full mode
 - : Medium mode
 - : Low mode
 - : Empty mode
 - : Charging
 - : Full charged
 - If the battery level is low, the following message will be displayed and then the device will be turned off a few seconds later.
9. : Touch to zoom in.
10. Displays the name of the next turn street.

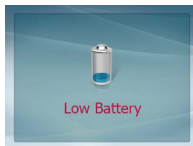 




Navigation menu

 Navigation menu list

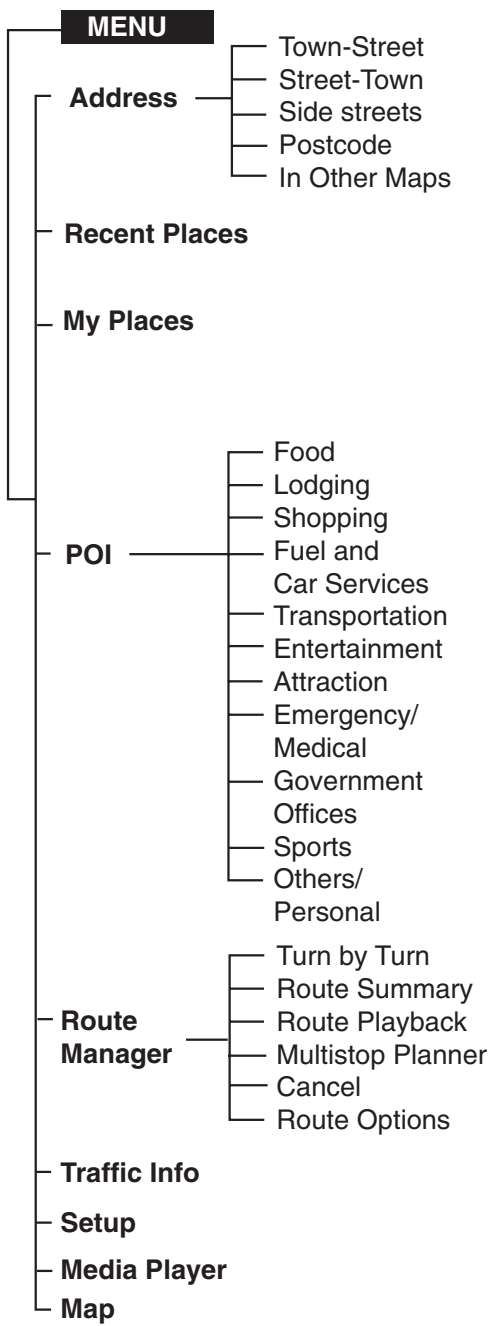


General operations of navigation menu

1. Turn the unit on.
2. Touch  to view the navigation menu on the map screen.



3. Touch **Address**, **Recent Places**, **My Places**, **POI**, **Route Manager**, **Traffic Info**, **Setup**, or **Media Player** to select the desired option, and the menu moves to the second level.
4. Touch the desired option and the menu moves to the third level.
5. Touch the desired setting. Some items require additional steps.



Note

- Touch  **Back** on the screen to move to the previous screen.
- Touch **Map** on the screen to move to the map screen.

Navigation menu

Address

You can find a destination using the address search.

1. Touch  on the map screen and then touch  Address .



2. Touch the desired items.



Selects the address in town, street, house number order using the keyboard.



 
Selects the address in street, town, house number order.



Selects the address in town, street, side streets order.



Selects the address in postcode, street, house number order.



Selects the address of other country. After selecting a map, select the address in town, street, house number order using the keyboard

3. Enter characters of address using keyboard provided as shown. The characters entered in the address field are highlighted in red



Deletes the last character in the address such as town or street names.



Extends or shortens the address list by hiding or displaying the keyboard.



Moves up or down the list of address items.




Displays uppercase, numeric, and special characters.

The operating system installed on the device must be able to support these characters.

Note

Sometimes, it may take some time to search the letters of address you entered using keyboard.

4. When the address search is completed, touch .



5. Touch  to find the destination.





Navigation menu

 
Recent Places

Your device can store up to total of 64 recent findings in the “Recent Places” list.

You can search the recent finds in the “Recent Places” list.

Finding and storing the destination in the “Recent Places”

1. Touch  on the map screen and then touch .

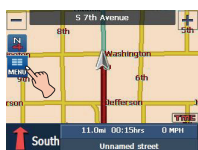



2. Touch a recent place you want to find and then touch **OK**.



Note

If you want to delete all entries in the “Recent Places” list, touch **Clear** and then touch **Yes**. If you want to delete only the selected destination, touch **Delete** and then touch **Yes**.



3. Touch **Go** to find the destination. Drive in accordance with the screen and voice prompts. Touch **Save** if you want to store the destination.
4. Set the group you want to store by touching  /  and then touch **Save**. The destination is stored in the “My Places” menu. (Page 18)



My Places

 
You can search the places stored in the “My Places” list.

Finding the destination in the “My Places”

1. Touch  on the map screen and then touch .



2. Touch the group you want and then touch **OK**.

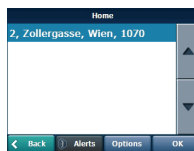

3. Touch the place you want and then touch **OK**.



4. Touch **Go** to find the destination. Drive in accordance with the screen and voice prompts.

Setting a group

You can add, delete or edit the group in the “My Places” list.

Note

You can not delete or edit the “Home” folder.

Navigation menu

 
Adding a group

1. Touch > > **Edit** > **Add Group**.



2. Enter the new group name and an icon to identify the group, as shown below and then touch **Save**.

The new group is added as shown below.

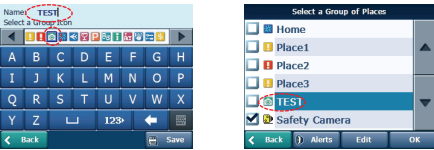

Note

The icon identifies all places located in this group, as displayed on the map.

Deleting the group

1. Touch > > **Edit** > **Delete Group**.
2. Touch a group you want to delete and then touch **Edit** > **Delete Group**.

 


3. Touch **Yes**.
The selected group is deleted.



Changing the group name

1. Touch > > **Edit** > **Edit Group**.
2. Touch the group you want to edit and then touch **Edit** > **Edit Group**.

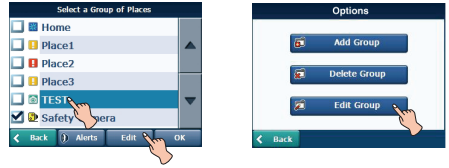

3. Change the group name or the group icon.



4. Touch **Save**.
The selected group is changed.



Alerting

The unit can sound the alert when the distance you set is closer than destination.

1. Touch > > **Alerts**.
2. Touch **Alerts** > Change the “Set Alert distances” using the > **OK**.






Note

The distance of “2nd Alert” is set closer than that of “1st Alert”.


Navigation menu

 
Setting the destination

You can show, edit or delete the place in the “My Places” list.

1. Touch  >  .
2. Touch a group you want and then touch  .




3. Touch  and then touch the desired items.

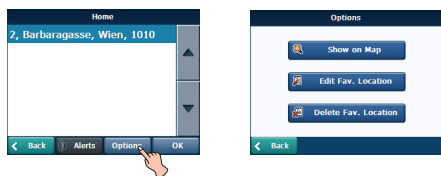

Show on Map :

You can search the selected place on the map.

 
Touch  on the screen. And then drive in accordance with the screen and voice prompts.

Edit Fav. Location :

You can change the name, comment, or the group of selected destination.

Delete Fav. Location :



You can delete selected place.

If you touch  , the selected place is deleted.

Points Of Interest (POI)

 
The POI list is a collection of hundreds of interesting or useful places organized by easy-to-find categories. For example, you can use the unit to guide you to a shopping centre, hotel, restaurant, or gas station.

Finding a place in the “POI” list


1. Touch  on the map screen and then touch  .



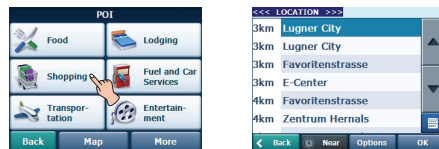

 2. Touch one of “POI” you want from the list.



Note

You can view additional “POI” list , if you touch  .

3. Select the “POI CATEGORY”, “SUBCATEGORY” and “LOCATION” you want to search and then touch  .
4. Touch  to find the destination. Drive in accordance with the screen and voice prompts.

Note

 
The “POI” list may not be shown on the “POI CATEGORY” and “SUBCATEGORY” menu.

Navigation menu

Setting the destination

You can show and add the place in the “POI” list. And you can sort the place in alphabetical and distance order. You can store in “My places” menu the places in the “POI” list.

1. Touch **Options** in the “LOCATION” list.

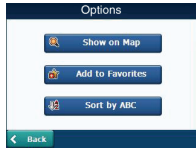

2. Touch the desired items.



Show on Map :

You can search for the selected place on the map.

Touch **Go** on the screen. And then drive in accordance with the screen and voice prompts.

Add to Favorites :

You can store the place in the “My Place” menu.

Set the group you want to store by touching **◀ / ▶** and then touch **Save**. The place is stored in the “My Places” menu. (Page 18)

 
 
Sort by ABC :

You can sort the place in alphabetical order.


Finding a destination with near place

You can find a place you want by searching a near place.

1. Touch **Near** in the “POI CATEGORY” or “SUBCATEGORY” list.

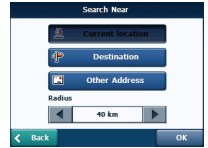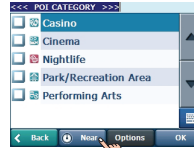

 2. Touch the desired items.

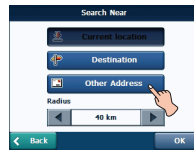

Current location :

 
You can search the place near the current location.

Destination :

You can search the place near the destination when you set the destination.

Other Address :

You can search the POI near the address when you set the address. Follow the steps 2-5 of “Address” on the page 17.



You can search for the POI within the radius you set.

Navigation menu

Route Manager

You can set the route you wish to use when you navigate a destination.

Route Playback

You can record your route while you're driving and view the recorded route.

1. Touch  >  >  >  .
The recording starts.



 
2. Touch  >  >  >  >  to stop recording.


3. Select the data file to play the recording and then touch  .

The navigator plays the recorded route on the main map screen.

4. Touch  >  >  >  to stop the playback .

Route Playback Options

 Touch  on the "Route Playback" menu and then touch the desired items.

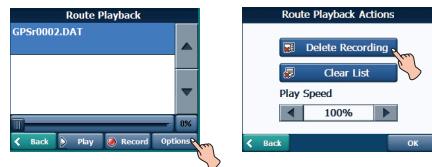


Delete Recording :

Deletes a selected recording.

Clear List :

Deletes all recordings.

Play Speed

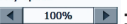 :

Adjust the playback speed. The range is from 100% to 300%.

Turn by Turn

1. Touch  >  >  . And then touch the list you want.





2. Touch the desired item.

Route :

You can view the entire route on the screen.

Turn :

You can only view the turn you select. You can also view the previous or next turn by touching  /  .

 
Avoid :

You can avoid the selected turn in the turn-by-turn list. The new route is recalculated automatically.


Route Summary

You can view an overview of your complete route on the map screen, the total driving distance to your destination, the estimated travel time, and the complete destination address.

1. Touch  >  >  .

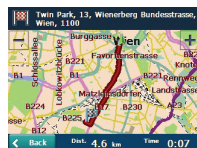



Note

Touch  on the screen to move to the previous screen.

Navigation menu


Multistop planner

  You can plan a route with up to 5 stops. When you touch the “Go” button, the route is calculated in each stage, from the departure point to the first stop. When you reach the first stop, the next route is calculated to the second stop, and so on.

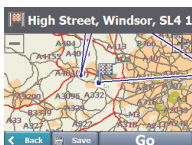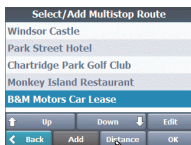

Setting stops along the route

 1. From the “Select/Add Multistop Route” screen, touch the “Add” button to add a stop by Address, POI, My Favourites, or Recent Locations.

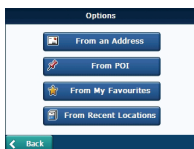

2. Select one of these options, specify a location, and touch the “OK” button. (If you touch **From an Address**, follow the steps 2-5 of “Address” on the page 17.)
3. The “Select/Add Multistop Route” screen appears with the selected location.



Use the “Up” or “Down” buttons to change the order of your itinerary.



Use the “Edit” button to show or delete a highlighted entry.



Use the “Distance” button to organize your entries from closest to farthest distance from your current location.

Cancel route

 
If you no longer need to travel to your destination or if you want to change your destination.

Touch > > Cancel .

Route options

You can use Route options to determine what road categories to avoid or allow and to set the default route type when navigation calculates your selected destination.

1. Touch > > . And then touch the desired items.

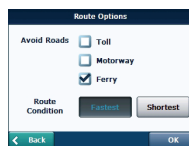

Avoid roads

Toll, Motorway, and Ferry route sections are avoided or allowed as determined by whether they are selected, when navigator calculates a route.

You cannot allow or avoid specific toll roads or ferry routes.

Route condition

Fastest:

This option selects the route that takes the least amount of time.

Fastest is the default value.

Shortest:

This option selects the route that is the shortest distance. Remember, the shortest route may not always be the quickest, as you are able to travel faster on some roads than on others.

2. Touch .

Note

Route generation excludes any detours, stops or delays along the route.

Navigation menu

TMC (Traffic Information)

What is Traffic Message Channel (TMC)

The Traffic Message Channel (TMC) is a specific application of the FM Radio Data System (RDS) used for broadcasting real-time traffic and weather information. Data messages are received silently, decoded, and delivered to a TMC enabled navigation system that can offer dynamic route guidance alerting the driver of a problem on the planned route and calculating an alternative route to avoid the incident.

Connect your TMC antenna

The car charger plays the part of the TMC antenna.

Connect the car charger on the unit.

Disclaimer

The developer is not responsible for any damage caused by an accident due to unreliable TMC radio transmissions by national, regional, or local broadcasters caused by TMC service restrictions, or by natural and man-made conditions that prevent real-time traffic and weather information from being delivered to the TMC-enabled navigation system.

The developer is not responsible for the quality or accuracy of the events broadcasted and the method they are displayed.

Service Information

 
When you are in an FM TMC service area, your Navigator receives traffic signals as soon as you connect the TMC module to your Navigator. You need to be in range of an FM station transmitting TMC (Traffic Message Channel) data to receive traffic information.

Traffic Message Alerts


Traffic (TMC) messages are national and regional public radio FM transmissions that are used to inform drivers of traffic, weather, and other driving conditions.

The traffic messages are displayed in the TMC Inbox screen, which can be opened by tapping the traffic info. button in menu

1. From the Navigation menu, select the “Traffic Info” button, which opens the TMC inbox, and displays traffic reports.

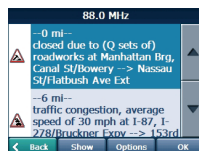

 2. You can select a traffic report and touch “OK” to show a map of the affected road. If you click the “Avoid” button, the Navigation recalculates your route.

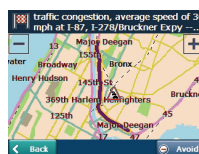

Note

 
- If the event was avoided, the Show Map screen displays the “Allow” button to recalculate to that previously avoided route section.
- All TMC messages are delivered to the TMC Inbox, but only messages relating the direct route and 200 meter radius are displayed. The radius is set to 160 kilometers when no route has been selected.

Navigation menu

Traffic Info Options

You can touch the “Options” button, the “Options” dialog box is displayed, as shown below.

These options have already been preconfigured for the best performance. It's not advisable to change them. However, you can change the Traffic Info. Option configurations by selecting the following settings:

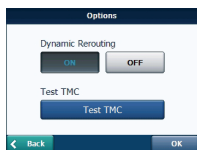

Dynamic Rerouting

ON - The navigation device automatically recalculates the route to avoid a road with adverse traffic conditions – traffic jam or accident only.

OFF - You can manually select the TMC event from the inbox and tap the “Avoid” button from the Show Map screen.

Test TMC

When you tap this button, The Navigation expands the search radius for to the "whole map" for one minute and switches automatically to the TMC Inbox screen and displays one test message called "Testing TMC Service". After one minute, navigation device reverts to the route and the 200 meter radius.”

If you do not receive any message after touching this button, please check in the following order:

1. If you see the tuner scanning but not locking on a TMC station, try to change your position and check that you have put your antenna vertically upright.
2. Depending on your location, you may not have TMC coverage.
3. Check that you are using the map of the country that you are currently traveling in.

Note

Please make sure your navigation unit acquires the GPS signal before starting Traffic service free trial or subscription. (Current position icon will turn green when GPS signal is acquired)

 
If you complete traffic service free trial without acquiring GPS signal, the unit may not display the accurate expiration date.

However, if the unit acquires GPS signal after completing traffic service free trial or subscription, the expiration date will be automatically adjusted and displayed correctly on the screen.


Navigation menu

Setup

You can make various adjustments to items by using the setup menu.

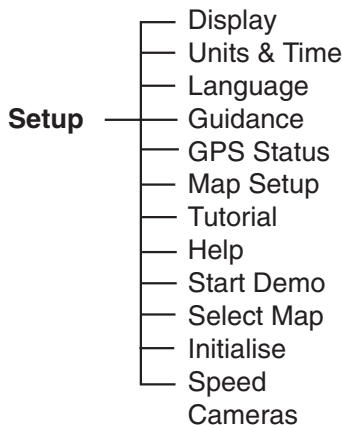


 
1. Touch  > .

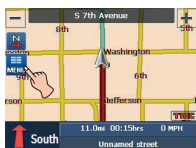

2. Touch the desired items.
For details, refer to the pages 26-30.

 
Note



- Touch  on the screen to move to the previous screen.
- Touch  on the screen to move to the map screen.

Display




1. Touch  >  > .

   2. Touch the desired items.

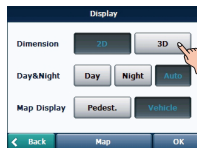


Dimension   :

   The 2D and 3D Mode buttons lets you display the map view in 2-dimensional or 3-dimensional views for either day or night driving.

Day&Night    :

The Day and Night Mode buttons lets you display the map view for either day or night driving.

 The Auto button automatically adjusts the map view for day or night driving by GPS time.

Map Display   :

The Pedestrian Mode button lets you toggle between travelling as a pedestrian or in a vehicle.

When in Pedestrian Mode, you can generate a route up to ten kilometres and you are not limited by vehicle constraints, such as one way streets.

When creating a pedestrian route, the navigator avoids motorways or other roads where pedestrians would not travel. Voice prompts are deactivated in this mode.

 
3. Touch .

Navigation menu

Units & Time

You can specify units of measure and adjust the time as displayed on your Navigator.

1. Touch  > **Setup** > .
2. Touch the desired items.

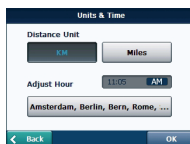

Distance Unit :

KM : Displays and announces in kilometres.

Miles : Displays and announces in miles.

Adjust Hour :

You will see the current values of GMT, and use one time zone, Greenwich Mean Time (GMT).

Language

1. Touch  > **Setup** > .
2. Touch the desired items.



Select Language Text :

You can select the language text.

Select Voice Guidance :

 
You can select voice travel messages and driving directions. You can hear the voice of language through speakers while driving.

3. Touch **OK**.

Guidance

You can select the types of voice and visual notifications that you would like to use while navigating as follows.

1. Touch  > **Setup** > .
2. Touch the desired items.

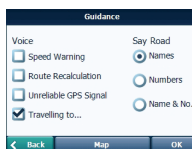

Speed Warning :

Warns you when your car exceeds the speed limit. This prompt is not active by default.

Route Recalculation :

Activated when the Navigator recalculates a new route.

This prompt is not active by default.

Note

Languages noted with (TTS) are text-to-speeches, which have an extensive vocabulary and pronounce the street names as you approach turns, the pre recorded voices have a limited vocabulary.

Unreliable GPS Signal :

Warns that the GPS signal is too low and unreliable for navigation.

This prompt is active by default.

Travelling to... :

Reminder at the start of each journey. This prompt is active by default.

Say Road :

You can set the type of the guidance name that you will use to navigate the route.

3. Touch **OK**.

 


Navigation menu

GPS Status

The Navigator uses the GPS receiver to pinpoint your location. GPS signals are automatically acquired and your vehicle's location and position are constantly updated. The GPS receiver may take a few minutes to find its initial location. For best results, ensure that the GPS receiver has a clear vertical view of the sky.

1. Touch  >  > .

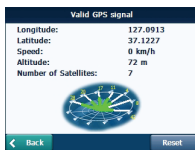

The following GPS information is displayed:

Longitude: The angular distance east or west on the earth's surface.


Latitude: The location of a place north or south on the earth's surface.

Speed: The rate of movement, as expressed by kilometre or miles per hour.

Altitude: The height above sea level.

Number of Satellites: You can check reception signals from the GPS satellite.

Note

If GPS signal can not be detected for long time, please restart whole navigation system by pressing .

GPS not found

When you first start the navigator you will hear the message "Signal too low". This message means that your navigation device hasn't yet located a reliable GPS signal. Check that your device is connected to the cigarette lighter and has a clear view of the sky.

The "GPS not found" message means that there is no GPS antenna or the antenna is not properly installed.

Please check that:

 
- The GPS antenna has a clear view of the sky for uninterrupted GPS reception. The navigator cannot calculate the route if there is no GPS reception (for example, in a tunnel).
- The navigation device is charged or connected to the cigarette lighter.

Map Setup

You can tap the "Map Setup" button to customize your map display.

1. Touch  >  > .

2. Touch the desired items.

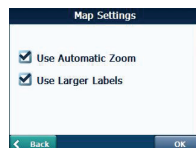

Use Automatic Zoom :

When this option is selected, the zoom is speed dependent. The map zooms out at higher speeds, displaying a larger map area, and zooms in at slower speeds, displaying a smaller map area.

If you manually change the zoom, the Automatic Zoom returns to a system defined zoom level after several seconds of inactivity.

Use Larger Labels :

This option increases the size of street names to make the text easier to read.

3. Touch .

Navigation menu

 
Tutorial

When you first start the Navigator, a message box appears prompting you to open the Navigator Guided Tour program.

The Guided Tour is an excellent way of becoming familiar with the different navigation features available. You can also start the Navigator Guided Tour any time, by touching the “Tutorial” button from the “Extras” menu.

1. Touch  > **Setup** > **More** > .

2. Touch the desired items.

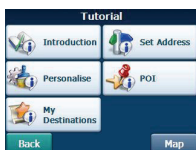

Help

You can display Navigator technical support information.

Touch  > **Setup** > **More** > .



Start Demo

This lets the Navigator display a simulated route. Many of the navigation features are disabled when the Demo is running.

Touch  > **Setup** > **More** > .

Touch  >  to end the Demo.

 
Note

The demo route is set, and depending on the current map data, the demo function may differ somewhat from the map data.

Select Map

This feature lets you change the currently selected map to another map saved on built in memory.

1. Touch  > **Setup** > **More** > .

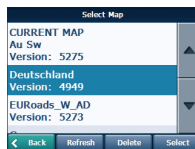

You can touch the “Select Map” button to display the maps saved on your built-in memory. The Select Map screen displays map details and version numbers. The map currently used appears at the top of the list.

Refresh : Lets you refresh the screen when a new memory card is inserted into the device.

Delete : Lets you permanently remove a selected map.

Note

You cannot delete the current map. Select lets you designate a selected map as the current map.

Initialise

1. Touch  > **Setup** > **More** > .



Clear Memory :

You can delete all list from the memory.

Factory Settings :

You can set all the function to their factory settings.

 
2. Touch **OK**.

Navigation menu/Music player

Speed Cameras

You should agree with developer's policy to use the speed camera warning function. If you agree with the provider's policy, you can be informed on the location and also the type of camera.

Touch  > **Setup** > **More** > 

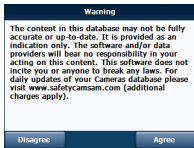

Dynamic database of the speed cameras

You are offered support for Dynamic updates. The content in this database may not be fully accurate or up-to-date. It is provided as an indication only. The software and/or data providers will bear no responsibility in your acting on this content. This software does not incite you or anyone to break any laws. The operating of speed cameras are permitted in some countries. The operation is at one's own risk.

Condition for operating is a PC with internet-connection. For daily updates of your Cameras database please visit www.safety-camsam.com (additional charges apply)." LG does not guarantee the accuracy of the data which offered on updating website (www.safetycamsam.com), and users are all responsible for use and update of the speed camera data.

 
Easy updates using PC Portal

PC Portal makes the update, supports mass storage device & SD card reader. For more information, see "Import Speed Camera Alerts" on page 41 and "Importing Favorite Locations" on page 42.

 
Playing music

Playing the files in "All Music" folder


1. Touch  > **Media Player** > .
The "Music List" screen appears.
There are two kinds of music list: All Music, My Music


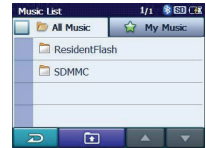


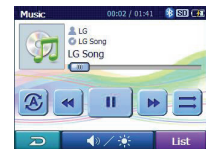

2. Touch the folder or file you want to play.



  
Playing the files in "My Music" folder

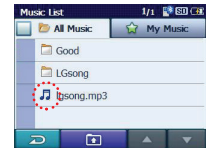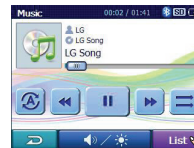1. Touch **List** during playback.
The  mark indicates playing music file.



 
2. Touch  in the left position of the screen.
The  mark appears and the file you touch is stored in "My Music" folder.



To cancel it, touch .

Music player


3. Touch **My Music** and then touch the desired file to play music in “My Music” folder.

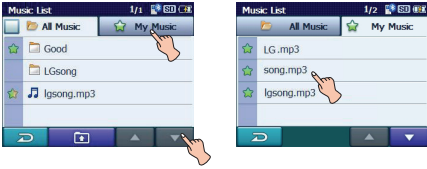

- Touch / on the screen to move to the previous/next page.
- Touch on the screen to move to the upper folder.
- Touch on the screen to move to the previous screen.

Note

 If there is no supported file, an error message is displayed on the screen and the next music file will be played.

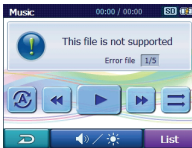

Pause

1. Touch during playback.
2. To return to playback, touch again.

Skip the next music

Touch briefly to move to the next music.

Skip the previous music

Touch briefly to move to the previous music.

Search

Touch and hold the or during playback and then release at the point you want. You can use the slide bar to search for the music.

Repeat

You can set the repeat playback mode by touching or .

: Plays repeatedly the current selected file.

: Plays repeatedly all music files in your device.

Shuffle

 
You can set the random playback mode by touching or .

: Returns to the normal playback.

: Plays randomly all the files in your device.

Viewing the information of music file

1. Touch during playback. The information of music file appears. (If you touch the information screen, it moves to the previous screen.)

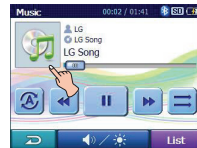

If there is no information of music file, appears.

Adjusting the Volume/Brightness

1. Touch during playback. The “Handy Setup” screen appears.
2. Set the volume () and brightness () by touching / and then touch .

Mute

Touch on the “Handy Setup” screen to mute the sound. To cancel it, touch again.


Photo viewer

Viewing photo

1. Turn the unit on.
The map screen appears.

2. Touch  > **Media Player** >  .
The “Photo List” screen appears.



3. Touch the folder or file you want to play and then touch  .
The slide show starts automatically.





Browse an image



1. Touch the screen during slide show and then touch **List** .





2. Touch the folder icon to display its sub-folders and thumbnail images.




- Touch  /  on the screen to move to the previous/next page.

- Touch  on the screen to move to the upper folder.
- Touch  on the screen to move to the previous screen.


Pause

1. Touch the screen during slide show.
2. Touch  to pause slide show.
3. To return to slide show, touch  again.



Skip to the next photo


Touch  to move to the next photo in the selected folder.


Skip to the previous photo

Touch  to move to the previous photo in the selected folder.


Repeat

You can set the repeat playback mode by touching  or .







 : Plays repeatedly all photo files in your device.

 : Plays repeatedly all the photos within folder.

Rotation

Press  repeatedly to rotate the photo clockwise.

Adjusting the Volume/Brightness

1. Touch  during playback.
The “Handy Setup” screen appears.
2. Set the volume () and brightness () by touching  /  and then touch .



Bluetooth

Bluetooth wireless technology

If you have a phone with *Bluetooth* wireless technology and it is compatible with your device (Please refer to the list of available phones on the page 46-47), you can use the following features in your device: Hands-free Calling, Audio streaming for mp3, and Phonebook sync and edit.

Hands free feature is to make or receive a phone call using microphone and speaker built in your device. Audio streaming feature is to enable to listen to music (especially, mp3 file) in your stereo headset and to enable to handle playing music such as play, pause, or skip. Lastly, phonebook sync and edit feature is to transfer your phonebook in your phone to your device, and to add and edit new phone numbers on your device. These features on your device are only available if your phone supports these features using *Bluetooth* wireless technology. To use these features, you must connect your phone with your device. You may initiate this connection from your phone or from your device. Please refer to phone's guidebook for more information.

Connecting your unit and bluetooth phone

To connect using the unit settings

1. Press POWER (⏻) briefly in power on status. The "Handy Setup" screen appears.



Map/Photo mode



Music mode

2. Touch **Hands Free**.
3. Touch **Settings**.



 
4. Touch **Search**.
The "Searching for available devices." pop-up screen appears on the screen.



It will take about 30-60 seconds, to continue the process.

To cancel, touch **Stop**.

5. Touch a bluetooth phone you desire from the "Search Results" screen.
The "Please enter the below PIN code in your phone" pop-up screen appears.

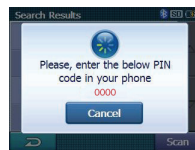

6. Input the PIN code (0000) in your phone when the pop-up screen is displayed on the screen.

When it is successfully connected, the mark is displayed in the "Handsfree - available devices" screen.



When it is not connected, the connection failure message appears.

Note


Before connecting, check the PIN code settings. Refer to "Setting the Bluetooth" on the page 34.



Bluetooth

To connect using the phone settings

 
 
Your phone's Bluetooth feature may be set to off by default. To use the Bluetooth feature, Bluetooth must be turned on in your phone. Refer to your phone's user guide.

1. Enable the phone's Bluetooth component. This might be in a menu called Settings, Bluetooth, Connections, or Hands-free.
2. Initiate a search for Bluetooth devices. These settings might be located in a menu called Bluetooth, Connections, or Hands-free.
3. Select your device from the list of phone.
4. Input the PIN code (0000) in your phone. When it is successfully connected, the  mark is displayed in the "Handsfree - available devices" screen.


Setting the Bluetooth

You must select **Enable** to connect successfully your unit and bluetooth phone.

1. Touch **Options** in the "Handsfree - available devices" screen. And then touch **Enable**.

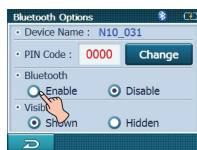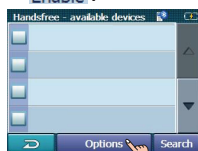

 2. Check the PIN code. Change the PIN code using the number buttons if you want to change the PIN code. And then touch **OK**.

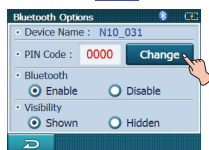


3. If the visibility option has set as **Hidden**. Other Bluetooth devices can't find your device.

Disconnecting/Deleting/Connecting again the bluetooth phone

 
1. Touch the connected phone. And then touch **Disconnect**.




Touch **OK**. Your phone is disconnected and the  mark disappears.



2. Touch the disconnected phone again to connect again or delete your phone.

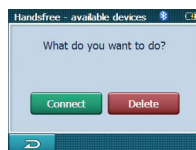

When you touch **Connect**, the disconnected phone is connected again to the unit. The  mark appears again.



When you touch **Delete**, the disconnected phone is deleted.



 


Bluetooth



Making a call with phone number

Connect your unit and bluetooth phone before you make a call.

1. Press POWER (⏻) briefly. And then touch

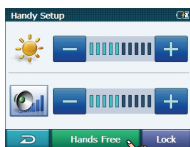

  2. Input the phone number you want to call, by touching the number buttons. And then touch **Send**.

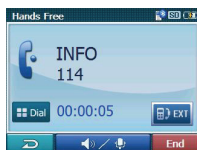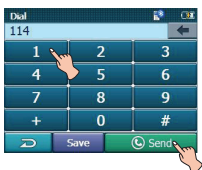

Note

- If you make a mistake while dialling, touch **←** to erase one digit at a time.
- Touch **Save** if you want to store the phone number. It is stored in the phone book.

3. Touch **End** to finish the telephone conversations.



 
If you want to store the phone number, touch **Save**, then input the name using key board. And then touch **OK** and it is stored in the phone book.

Touch **Redial** if you want to make a call again.

If there is not any touch for about 10 seconds, the screen moves to the "MENU" screen.

Storing the phone number

1. Input the phone number in the "Dial" screen. And then touch **Save**.

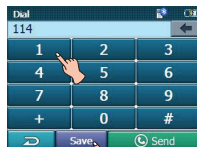

2. Input the name. And then touch **OK**. It is stored in the phone book.



Adjusting the Volume/Microphone level

 
 
1. Touch **Volume & Microphone** during a call. The "Volume & Microphone" screen appears.
2. Set the volume (🔊) and microphone level (🔇) by touching **-** / **+** and then touch **OK**.

Note

- Touch **🔇** to cut the microphone sound. To cancel it, touch **🔊** again.
- If there is not any touch for about 5 seconds, the screen moves to the previous screen.

Switching the sound path during a call

You can hear sound through the speaker of unit or phone by touching **EXT** / **INT**.

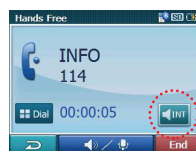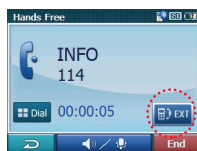

Note

If you want to send the DTMF (Dual Tone Multi-Frequency), touch **Dial**.

Bluetooth

 
Call History

Your unit keeps a record of your recently received and dialling calls.

1. Press POWER (⏻) briefly. And then touch




2. Touch the list you want to call. And then touch **Send**.

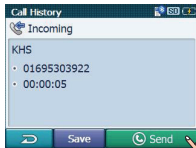


Using your phone book

 1. Press POWER (⏻) briefly. And then touch

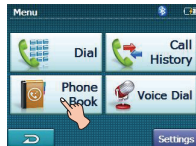


 2. Touch the list you want to call. And then touch **Send**.


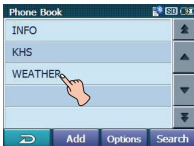


Adding the phone number

 1. Touch **Add** in the “Phone Book” screen. And then Touch **Next** after inputting the number buttons.

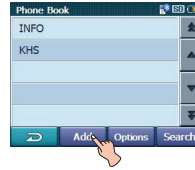

  2. Touch **OK** after changing the name.

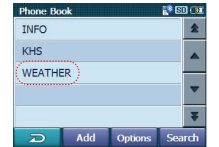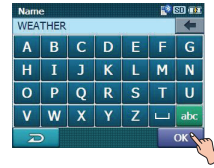

Receiving all list in your phone

Touch **Options** in the “Phone Book” screen. And then touch **Receive**.



- Your device will receive the contact(s) via Bluetooth in your phone. If your phone is not connected, it needs to enter the PIN code in the phone.
- With receiving phone book from your phone, and the data will be stored in the resident memory of your device.



Bluetooth

Getting all list from you phone

If your phone supports the synchronization of phone book, you can get all list from the phone.

- * If the phone hasn't been registered to available list on your device, you will meet the below pop-up, "Do you want to get the phonebook from your phone?", after connecting your phone with the your device.



 
Touch **Options** in the "Phone Book" screen. And then touch **Get**.




The synchronisation with your phone book will begin automatically, the data will be stored in the resident memory of your device. (It will takes a few minutes according to the number of phone book in your phone.)

Deleting all list in the phone book

1. Touch **Options** in the "Phone Book" screen. And then touch **Delete All**.

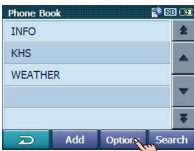

 2. Touch **OK**.

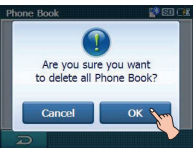


Deleting the phone number

Touch the list to delete in the "Phone Book" screen. And then touch **DEL**.



Editing the phone number

 1. Touch the list to edit in the "Phone Book" screen. And then touch **Edit**.

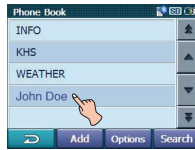


2. Touch **Next** after changing the number. And then touch **OK** after changing the name.



Using voice Dial

You can make a call by speaking the contact's name.

 
1. Press POWER (⏻) briefly. And then touch

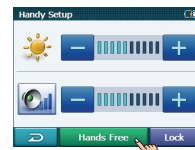



Bluetooth

 
- Speak the contact name from your phone. And then follow up the instruction from your phone.

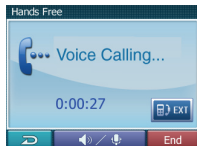

- Touch **End** to finish the telephone conversations.

Incoming calls

 
- If there is an incoming call, your phone rings and the "Call from" pop-up screen is displayed on the screen.
- Touch **Accept** to answer the call.

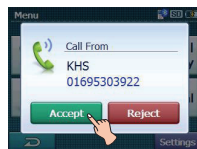


If you want to reject a call, touch **Reject**.

Ending calls

 When you are calling on the map, music, or photo mode, **END** appears in the screen. Touch **END** to finish the telephone conversations.

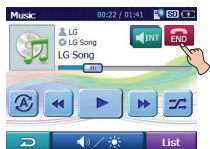

Music mode

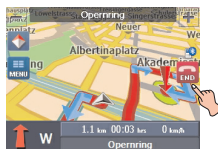 

Map mode



Photo mode

Listening to music files

You can control and hear the music (especially, mp3) files saved on your device via the your stereo headset with *Bluetooth* wireless technology.

Touch **Audio Output** in the "Handy Setup" screen.



Notes

- You can hear the sound through the speaker of unit or Bluetooth stereo headsets by touching **EXT** / **INT**.
- The sound quality depends on Radio Frequency (RF) conditions and the sampling rate of audio.
- Sampling rate of MP3 file that can hear the music using Bluetooth stereo headset
 - 16 KHz , 32 KHz , 44.1 KHz , and 48 KHz
 - The sound quality may be poor on the sampling rate of 16 KHz , 32 KHz.



Installation

Installing the Navigator “PC Portal”

Installation of the Microsoft .Net Framework 2.0 for computer can be done by following the instruction.

1. Insert the Navigator CD into the PC's CD-ROM drive. The “PC Portal” Installation wizard prompts you to select the language used for the installation process. When you have selected a language, click “OK”.
2. Read the Welcome message and click “Next”.
3. From the Select Directory screen, either accept the recommended default directory or browse to a different directory to install the “PC Portal”. Click “Next”.
4. If you want to change the directory location before installing, click “Back”. When you are ready to install the “PC Portal”, click “Next”.
The installation status box displays the progress of the installation process.
5. When the installation is complete, click the “Finish” button.
6. After finishing installing PC Portal, install the “Maps installer” program. This procedure is similar to PC Portal install.
7. When the installation is complete, click the “Finish” button, The Select Language box appears.
8. From the Select Language dialog box, you can select the display language for the “PC Portal”. Select the Launch “PC Portal” checkbox for “PC Portal” to immediately start and click “OK”. Alternatively, you can start the “PC Portal” from the Microsoft® Windows® Programs menu.

9. Select from up to two connected devices. (N10)

Note

Please pay close attention to all the programs before installing the CD to your personal computer.

Please pay close attention especially for anti-virus programs like spyware.

Recommended PC System Requirements

Please review the following system requirements before installing “PC Portal”:

- CPU: AMD/Intel® Processor 300 MHz or faster
- Operating System: Windows® 2000/XP/Vista
- Memory: 128 MB RAM (minimum)
- Hard drive free space: 500 MB (minimum)
- CD-ROM: 4x drive or higher
- ActiveSync Version 3.8 to 4.2 supported under Windows 2000 and XP
- USB Version 1.1 or 2.0 connection (compatible 2.0)
- Microsoft .Net Framework 2.0

Installation/Using software

 

Starting the “PC Portal” Wizard

The first time you start the “PC Portal”, the “PC Portal” Wizard automatically starts, letting you install navigator software, supported languages and voice prompts, and maps.

For a complete description of the “PC Portal”, see Using the “PC Portal” on the page 40-41.

1. Click the Microsoft® Windows® Start button.
2. Click the Programs > LGE > “PC Portal”. The “LGE PC Portal for N10” appears.
3. If this is your first time using “PC Portal”, the “PC Portal” wizard automatically starts and displays the Welcome screen.
4. Make sure that your device is connected by USB cable to a port on your PC. You will see Connected on the “PC Portal” screen.
5. Click the   buttons to move to the previous or next screen.
6. Select software components to install to your device.


Note

- If you want to start the wizard, click  from the “PC Portal” Main screen.
- If you want to stop the wizard, click .

The “PC Portal” Main screen is displayed.

- If after selecting component, software, and voice options, you want to return to the original selections, click .

 Using the “PC Portal”

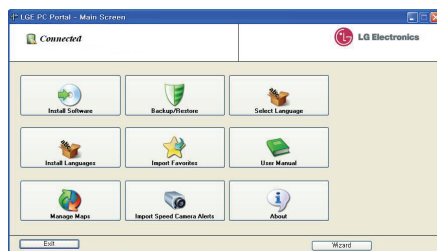

Click “Install Software” and select from the following components to install to your device:

- LGE: GPS navigation software
- Tutorial: Tutorial guide

To install navigator components:

1. From the Install Software screen, select from the list of components, as described above.
2. Click the Install button.
3. Navigator “PC Portal” installs the selected components to the device’s main memory.



Click “Manage Maps” to install or remove a map.

For more information, see “Installing Maps” on the page 42.



Click the “User Manual” button to see a user manual.



Click the “Select Language” button to show a list of languages that you can choose from to display the “PC Portal”.



Click the “About” button to check software version.

Using software



Click "Import Speed Camera Alerts" to update the Speed Cam. You can visit the Speed Cam Update site.



Click the "Backup/Restore" button to backup the following Navigator items:

- Favourites: All locations that are displayed in Navigator's Favourites screens.
- Trips: All locations that appear in Navigator's Multistops screens.
- LGE Settings: Setting configurations, such as map views (2D/3D and Day/Night), prompts, units of measurement, and map and route setting preferences.

When you select Backup, "PC Portal" makes a copy and stores the information to your computer.

 
To backup Navigator data to your PC:

1. From the Backup/Restore screen, select Backup.
2. Select the items that you want to make a copy of and save to your computer.
3. Click the "Backup" button.
4. "PC Portal" saves the selected items to your computer.

Click the Backup/Restore button to restore Favourites, Multistops, and My Navigator data to a navigation device. When you select Restore, "PC Portal" recovers the information stored on your computer.

To restore stored Navigator data to a navigation device:

1. From the Backup/Restore screen, select Restore.
2. Select the items that you want to restore.
3. Click the "Restore" button.
4. "PC Portal" restores the selected items.



Click to import favorite locations from your PC to the selected My Favorites group on your device.

For more information, see "Importing Favorite Locations" on page 42.



 
Click Install Languages to install a language to your device.

To install languages:

1. From the Install Languages screen, select the languages to be installed to the device.
2. Click the Install button.
3. Navigator PC Portal installs the selected languages to the device's main memory.
4. You can display the Navigator interface in the language of your choice by tapping the Language Settings button on the Setup menu and selecting the language in Navigator.

Using software

Installing Maps

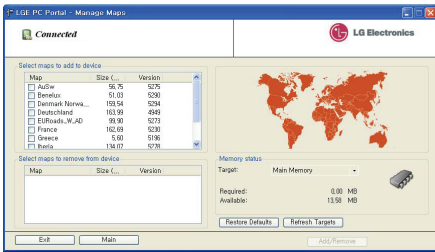

1. From the Desktop Maps pane, select a map.
2. From the “Target” context box, select the main memory.
3. When you select a Target option (Storage Card, Main Memory) the “PC Portal” displays the following information:
 - Required: The amount of free space necessary to install the map on the selected Target option.
 - Available: The amount of free space available for the selected Target option.Note: If the free space required is equal or greater than the free space available, “PC Portal” will not install the selected map.
4. Select a map to add or remove.
5. Click the “Add/Remove” button.
6. The selected map is installed and displayed in the Device Maps panel.

Removing Maps

You can remove a map by selecting a map in the Device Maps panel and clicking the “Add/Remove” button.

Importing Favorite Locations

Import Favorites lets you import content created externally as a new Favorites category. You can download a category of favorite destinations from your PC to your device. Destination data must be contained in a comma-separated values (.csv) file. You can import favorites to your device by following the procedure as displayed on the Import Favorites screen.

This feature lets you import your favorite destinations into LGE.

1. Please select the file in CSV format:
2. Change the group name (optional):
3. Click OK to import the selected destinations to LGE. A new group will be added to My Favorites.

The .csv file contains the following fields:

Fav. Name	Notes	Longitude	Latitude
Fav.place 1	Comm. 1	39.21370	38.78903
Altitude	City	Street	Address
8033	Munich	Adaloweg	173

- The longitude, latitude, and altitude are numerical values. All other fields contain string values.
- Even if the .csv file does not contain longitude, latitude, and altitude values, the separating commas must still be included.
- The .csv file contains the values in a table as a series of ASCII text lines, organized so that each column value is separated by a comma from the next column's value and each row starts a new line.



Using software

General Warning Messages

The following warning messages can appear when you're working with navigator "PC Portal".

Lost connection transfer

If at any point during the installation or data transfer, the connection to the device is lost, the following message is displayed:
"Connection to the device has been lost. Please check your connection."

Uninstalling Navigator Console

When a version of navigator programme (versions prior to the "PC Portal") is located on your computer, the following message is displayed:

"A previous version of "PC Portal" was found. Do you wish to uninstall?"

It is recommended to uninstall the previous program before installing "PC Portal".

Uninstalling "PC Portal"

When an earlier version of navigator "PC Portal" is located on your computer, the following message is displayed:

"A previous version of "PC Portal" was found. Do you wish to uninstall? "

It is recommended to uninstall a previous version of "PC Portal" before installing the current version.

Updates to "PC Portal"

If there are updates in navigator, you are prompted to download them in the following message:

"There are updates to "PC Portal", do you wish to download and install them?"

Previous maps

If maps from a previous version are located on your computer, the following message is displayed:

"Existing maps data found. Do you want to keep it?"

Clicking "Yes" lets you install maps from previous versions.

Remove maps

The following message appears when you have selected an installed map and clicked the Actions button:

"Selected maps shall be removed from your device. Are you sure you wish to continue?"

Data Transfer

If you close the PC Portal while install navigator software, a map, importing or exporting a Favourite location, or backing up data. the following message appears. : "if you will close the PC Portal now, the [process] shall not be completed. Are you sure you wish to close?"

Backup Data

If stored data is located on your computer, the following message appears:

"Navigator Backup data found. Do you want to keep it?" It is recommended to keep backup data.



Troubleshooting

Navigation program and map data protection

- If you want to operate this product properly, navigation program and map data provided by LGE should be in LGE folder on your navigation device.
- Don't erase or modify any contents in the LGE folder using USB mass storage connection. (All contents are important to operate navigation. Deleting this data may cause navigation to lead to malfunction.)

Audio streaming

To enjoy high quality music using Bluetooth stereo headsets, we recommend over 16-bit audio with sampling rates of 48 KHZ and 44.1 KHZ. (The sound quality depends on sampling rates of audio and your headset.)

Picture format

JPG: Image file size should be less than 1600 MP (megapixels).

Cannot identify the current location. (GPS not receiving)

GPS cannot be used indoors and must be connected to the power with ACC to a vehicle in a location where the sky can be seen well.

When initially connecting the GPS, it usually takes about 10 minutes to operate normally, but the connection speed can differ depending on the weather condition, and surrounding obstacles.

If the GPS connection is unstable for a long period of time, try the following.

- Check if the power is connected to the product.
- Check if the back of the GPS product is in a location where the sky can be seen well.
- If there are high buildings or if you are under a tree, move to a location where there aren't any obstacles.
- Check the GPS receiving condition from the GPS menu.

Cannot hear the voice guide.

You can hear the voice guide when you select

“Guidance” in “Setup”.

But during actual driving, the voice guide is provided.

If the volume is too low, adjust the volume on the right unit.

Cannot see the map.

This is when you cannot see the map even when you have executed the navigation menu.

This happens when the data within the memory is damaged. Delete all the data within the memory and reinstall the data.

If the problem persists after the installation, contact the Customer Service Centre.

Map data and dangerous area information are not updated.

You must periodically update the map data. Refer to the homepage for details on how to update the data.

The path guide can be different from the actual path. (Path guide error)

- When the road is closely parallel.
- When the splitting road angle is very small.
- When there is an adjacent road when turning.
- When driving on a road that is narrowing fast.
- When driving through the mountain or where the road is too curvy.
- When the starting, passing and arriving locations are too close within 10 km.
- When you have set the starting, passing or arriving location more than 1 km away from the road.
- When driving through the tunnel.
- When driving through high buildings.



Troubleshooting

There is a difference between the driving road and the road on the map in the product.

Even though GPS is usually very accurate, it has an error range.

When GPS receiver is installed, there can be an error of about 5 to 15m. But for newly constructed roads, the problem could be from the data update to the map.

 
What is GPS?

The Global Positioning System (GPS) is a satellite-based navigation system made up of a network of 24 satellites placed into orbit by the U.S.

Department of Defence. GPS was originally intended for military applications, but in the 1980s, the government made the system available for civilian use.


GPS works in any weather conditions, anywhere in the world, 24 hours a day.

There are no subscription fees or setup charges to use GPS.

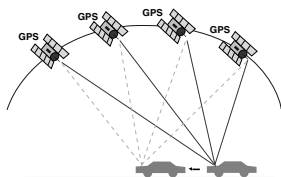


Map matching

 The GPS used by this Mobile Navigation System is susceptible to certain errors. Their calculations may on occasion place you in a location on the map where no road exists. In this situation, the processing system understands that vehicles travel only on roads, and is able to correct your position by adjusting it to a near road. This is called map matching.

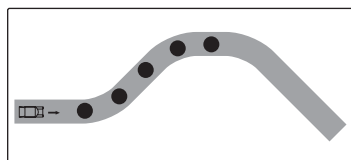

With map matching.

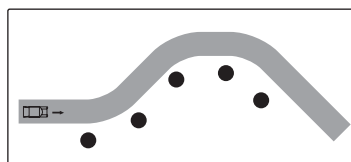 

With no map matching.

Basic operation tips

1. After charging or connecting to a power source, turn the unit on.
2. Make sure you are stopped (not moving) in a location with a clear view of the sky.
3. You will see your current location within a few minutes and then you can start navigating.
4. If the correct location is not found within 6 minutes, restart the unit using the ON/OFF button on the side of the unit.



Bluetooth phone compatibility list

- If even a phone as described in this list meets requirements of Bluetooth Hand-free Profile 1.5 and Object Push Profile 1.1, it can operate. However, it is noted that we cannot assure for operation by function.
- As difference in functional operation by model is mainly resulted from feature of a hand-free phone, consult manufacturer of a phone if you have any question.
- There may be restrictions on using Bluetooth technology depending on some locations or wireless environment. Due to the variety of Bluetooth phones and their firmware version, your device may respond differently when performing over Bluetooth.

Manufacturer	Model	Year	Hansfree Calling	Display Caller ID	Voice Dial	Phone Book Sync	Object Push (vCard)
BLACK BERRY	8100	2007	YES	YES	YES	NO	NO
BLACK BERRY	8800	2007	YES	YES	YES	NO	NO
HP	H6315	2005	YES	YES	NO	NO	YES
HP	HW6915	2007	YES	YES	NO	YES	YES
LG	CU500	2007	YES	YES	NO	NO	YES
LG	CU575	2007	YES	YES	YES	NO	YES
LG	KE500	2007	YES	YES	NO	NO	YES
LG	KE850	2007	YES	NO	NO	YES	NO
LG	KE970	2007	YES	YES	NO	NO	YES
LG	KG245	2006	YES	YES	NO	NO	YES
LG	KG290	2007	YES	YES	NO	NO	YES
LG	KG800	2006	YES	YES	NO	NO	YES
LG	KU380	2007	YES	YES	NO	NO	YES
LG	KU580	2007	YES	YES	NO	NO	YES
LG	KU970	2007	YES	YES	NO	NO	NO
LG	M4410	2006	YES	YES	NO	NO	YES
LG	ME970	2007	YES	YES	NO	YES	NO
LG	MG280	2007	YES	NO	NO	NO	YES
LG	MG320	2007	YES	YES	NO	NO	YES
LG	U890	2006	YES	YES	NO	NO	NO
MOTOROLA	A1000	2004	YES	YES	YES	NO	YES
MOTOROLA	E1000	2005	YES	YES	YES	YES	YES
MOTOROLA	E550	2004	YES	YES	YES	YES	YES
MOTOROLA	KRZR K1	2006	YES	YES	YES	YES	YES
MOTOROLA	RAZR V3i	2006	YES	YES	YES	YES	YES
MOTOROLA	RIZR Z80	2007	YES	YES	NO	NO	YES
MOTOROLA	ROKR E2	2006	YES	YES	YES	NO	YES
MOTOROLA	ROKR E6	2007	YES	YES	NO	NO	YES
MOTOROLA	SLVR L7	2006	YES	YES	YES	YES	YES
MOTOROLA	U6	2006	YES	YES	YES	YES	NO
MOTOROLA	V195	2006	YES	YES	YES	YES	YES
MOTOROLA	V360	2006	YES	YES	YES	YES	YES
MOTOROLA	V525	2004	YES	YES	YES	YES	YES
MOTOROLA	V600	2006	YES	YES	YES	YES	YES
MOTOROLA	V600	2004	YES	YES	YES	YES	YES
NOKIA	3230	2005	YES	YES	YES	NO	YES
NOKIA	3650	2004	YES	NO	YES	NO	YES
NOKIA	5300	2006	YES	YES	YES	YES	YES
NOKIA	5500	2006	YES	YES	YES	NO	YES



Bluetooth phone compatibility list

Manufacturer	Model	Year	Hansfree Calling	Display Caller ID	Voice Dial	Phone Book Sync	Object Push (vCard)
NOKIA	6103	2006	YES	YES	YES	YES	YES
NOKIA	6131	2006	YES	YES	YES	YES	YES
NOKIA	6230	2004	YES	YES	YES	NO	YES
NOKIA	6280	2006	YES	YES	YES	YES	YES
NOKIA	6600	2004	YES	YES	YES	NO	YES
NOKIA	6670	2006	YES	YES	YES	NO	YES
NOKIA	6670	2005	YES	YES	YES	NO	YES
NOKIA	6680	2005	YES	YES	YES	NO	YES
NOKIA	7370	2006	YES	YES	YES	YES	YES
NOKIA	7380	2006	YES	YES	YES	YES	YES
NOKIA	7610	2004	YES	YES	YES	NO	YES
NOKIA	8600	2007	YES	YES	YES	YES	YES
NOKIA	9500	2004	YES	YES	NO	NO	NO
NOKIA	6230i	2005	YES	YES	YES	YES	YES
NOKIA	6820a	2004	YES	YES	YES	NO	YES
NOKIA	8910i	2004	YES	YES	NO	YES	YES
NOKIA	E50	2006	YES	YES	YES	NO	YES
NOKIA	E60	2006	YES	YES	YES	NO	YES
NOKIA	E61	2006	YES	YES	YES	NO	YES
NOKIA	E62	2006	YES	YES	YES	NO	YES
NOKIA	E70	2006	YES	YES	YES	NO	YES
NOKIA	N70	2006	YES	YES	YES	NO	YES
NOKIA	N73	2006	YES	YES	YES	NO	YES
NOKIA	N77	2007	YES	YES	YES	NO	YES
NOKIA	N80	2006	YES	YES	YES	NO	YES
NOKIA	N91	2007	YES	YES	YES	NO	YES
NOKIA	N91	2007	YES	YES	YES	NO	YES
NOKIA	N92	2006	YES	YES	YES	NO	YES
NOKIA	N95	2007	YES	YES	YES	NO	YES
NOKIA	N-GAGE	2004	YES	YES	YES	NO	YES
PALM	TREO750V	2007	YES	YES	NO	NO	YES
SAMSUNG	A707	2007	YES	YES	NO	NO	NO
SAMSUNG	D600	2006	YES	YES	NO	NO	YES
SAMSUNG	D820	2006	YES	YES	NO	NO	YES
SAMSUNG	D900	2007	YES	YES	NO	YES	YES
SAMSUNG	i600	2007	YES	YES	YES	NO	NO
SAMSUNG	T509	2006	YES	YES	NO	NO	YES
SAMSUNG	Z540V	2006	YES	YES	NO	NO	NO
SHARP	GX15	2004	YES	NO	NO	NO	YES
SIEMENS	S65	2004	YES	YES	NO	YES	YES
SIEMENS	SK65	2004	YES	YES	NO	YES	YES
SIEMENS	SX1	2004	YES	YES	YES	NO	YES
SONY	K700i	2005	YES	YES	YES	YES	YES
SONY	K750i	2006	YES	YES	YES	YES	YES
SONY	S700i	2005	YES	YES	YES	YES	YES
SONY	T610	2004	YES	YES	YES	YES	YES
SONY	V800	2005	YES	YES	YES	YES	YES
SONY	W710i	2006	YES	YES	YES	YES	YES
SONY	Z600	2004	YES	YES	YES	YES	YES



Specifications

ITEM	SPECIFICATION	REMARK
OS CPU MEMORY	Win CE 5.0 ARM9 400 MHz 512MB/1GB/2GB (It depends on models.)	Built-in Memory
DISPLAY	3.5 inch TFT LCD Resolution 320 X 240 LED type Backlight Touch Screen	Analog resistive type
AUDIO	Mono, Internal Speaker	Typical 1.0W (1EA)
GPS	SiRF star III, Internal Antenna	
NAVI	EU (It depends on models.) (TMC : FM Traffic Receiver)	Voice Guidance
MAP	Navteq	
POWER	DC 5V/1A	Vehicle Power Cigar-jack Input (12-24V)
TEMPERATURE	Operating : -10 °C to 60 °C Storing : -30 °C to 80 °C	
Built-in BATTERY	DC 3.7 V (Li-Ion), 1100mAh - MP3: 5 hours [Brightness: Minimum, Volume: 5 (Centre)] - Navigation: 4.5 hours [Brightness: 5 (Centre) , Volume: 5 (Centre)] - Photo: 5 hours [Brightness: 5 (Centre) , Volume: 5 (Centre)]	
INTERFACE	Mini-USB Port External GPS Jack	USB 2.0
Multimedia	Image Audio	JPG MP3



Support-Hotline

If you have other questions about the Navigation Device, please contact your supplier or Technical Support:

www.lge.com/support/software.jsp

For questions on products please visit our site or contact the Support Team.

Monday-Fridays : 09 : 00 am - 6 : 00 pm

LG Subsidiary	Country	Service Number
LG Electronics ESPANA S.A.	SPAIN	902 500 234
LG Electronics U.K. Ltd	U.K. / IRELAND	0870 873 5454
LG Electronics France	FRANCE	0825 825 592
LG Electronics Deutschland GmbH	GERMANY	01805 4737 84
LG Electronics Italia S.p.A	ITALY	199600099
LG Electronics Hellas S.A	GREECE	801 11 200 900
LG Electronics Benelux B.V	BELGIUM LUXEMBOURG Netherlands	015 200 255 0032 15 200 255 0900 543 5454
LG ELECTRONICS MAGYAR KFT	HUNGARY Bulgaria	06 40 545454 0700 1 5454
LG Electronics Polska Sp. z.o.o	POLAND	0801 54 54 54
LG Electronics Portugal, S,A	PORTUGAL	808 78 5454
LG Electronics Nordic AB	SWEDEN DENMARK FINLAND NORWAY	0771 41 4379 8088 5758 0800 116 587 800 18 740
LG Electronics Austria GmbH	AUSTRIA SWITZERLAND	0810144131 0848 543 543
RUMANIA	RUMANIA	031 228 3542
CZECH REPUBLIC	CZECH SLOVAKIA	810 555 810 0850 111 154



“The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.”

P/N: AFN32793967