

Model: FB-K163Q
(FB-K163Q, FBS163V)

 
ENGLISH

РУССКИЙ

Қазақ тілі

О'ЗБЕК

УКРАЇНСЬКА




The working life of this product is 7 years since the date of purchase

Internet address ; <http://ua.lge.com>

Customer Information Center LG ; (380-44) 490-7777, 8-800-303-0000.



 KARAOKE



Safety Precaution



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

 


WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit; That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Types of Playable Discs

Type	Logo
DVD-VIDEO: Discs such as movies that can be purchased or rented.	
DVD-R: Video mode and finalized only	
DVD-RW: Video mode and finalized only	
DVD+R: Video mode only Supports the double layer disc also	
DVD+RW: Video mode only	
Video CD (VCD/SVCD):	
Audio CD:	
In addition, this unit can play a DVD±R/RW, SVCD and CD-R or CD-RW that contains audio titles, MP3, WMA, JPEG files. Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs may not be played on the unit due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Player does not support these kinds of discs.	

Dolby™, *Pro Logic*™, and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license from Dolby Laboratories.

About the Symbol Display

" " may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific DVD video disc.

Regional code

 
This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or "ALL".

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from your player, the message "Check Regional Code" appears on the TV screen.

Copyrights

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission. This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p UNIT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.



Welcome to your new KARAOKE Micro Hi-Fi System

Contents

Safety Precaution	2
Types of Playable Discs	3
Setting up	5
Main Unit	6
Hooking up the unit -I	7
Hooking up the unit -II (Optional)	8
Remote control	9
OSD Initial language setting (Optional) ..	10
Initial Setting the Area Code (Optional) ..	10
Adjust the setting	10-11
Displaying Disc Information	12
Setting the clock	12
Use your player as an alarm clock ..	12-13
Setting the sound mode	13
Playing a Disc	14
Playing a DivX Movie file	15
Listening to Audio CD,MP3 or WMA files ..	15-16
Viewing photo files	16-17
Listening to the radio	17
Listening to music from your portable player	18

Connecting your portable USB player	18
USB DIRECT RECORDING	19
Using iPod (Optional)	20
Using OSD iPod (Optional)	20
Karaoke Basic Playback	21
Reserving the Song	22
Karaoke Menu Playback	22-23
Language Codes	24
Area Codes	24
Troubleshooting	25
Specifications	26

Power Save Mode

You can set up the unit into an economic power save mode.
In power-on status, press and hold \odot (STANDBY/ON) button for about 3 seconds.
- Nothing is displayed in the display window when the unit is turned off.
To cancel, press \odot (STANDBY/ON) , CLOCK, TIMER or VSM/DEMO.

Precautions in using the touch buttons

- Use the touch buttons with clean and dry hands.
- In a humid environment, wipe out any moisture on the touch buttons before using.
- Do not press the touch buttons hard to make it work.
- If you apply too much strength, it can damage the sensor of the touch buttons.
- Touch the button that you want to work in order to operate the function correctly.
- Be careful not to have any conductive material such as metallic object on the touch buttons. It can cause malfunctions.


Setting up

Attaching the speakers to the unit

Connect the wires to the unit.

Match each wire's coloured band to the same coloured connection terminal on the reverse of the unit.


To connect the cable to the unit, press each plastic finger pad to open the connection terminal. Insert the wire and release the finger pad. The connector will open ready to receive a cable.

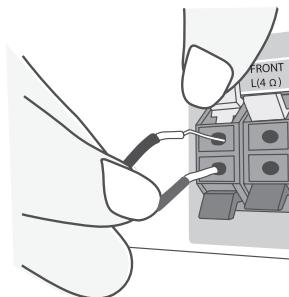

Connect the red end of each wire to the terminals marked +(plus) and the black end to the terminals marked -(minus).

COLOUR	SPEAKER	POSITION
Red	Front	In front of you, to the right of the screen
White	Front	In front of you, to the left of the screen

Speaker Deco : This part of speaker makes a no sound.

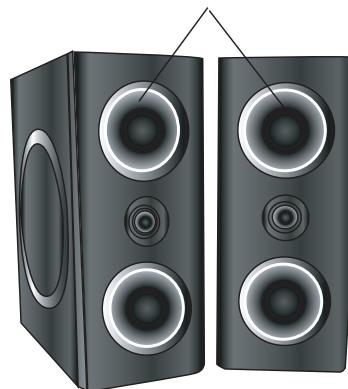

Be careful of the following

- Be careful to make sure children not to put their hands or any objects into the speaker duct.
- Speaker duct : A hall for plentiful bass sound on speaker cabinet (enclosure).

Remote control Operation

Point the Remote Control at the remote sensor and press the buttons.

Remote control Battery Installation

Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with \oplus and \ominus aligned correctly.

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

Main unit

• **FUNC.** To select the Functions press FUNC.
(DVD/CD →USB →OSD IPOD (Optional) →IPOD (Optional) →TV- AUDIO(Optional)→PORTABLE →FM→ AM) . .

• **XDSS Plus (MP3 Optimizer)**

Reinforce the treble, bass and surround effect,XDSS ON will show in the display,press again for NORMAL. (Page 13)

• **⊕ (STANDBY/ON)**

Turn on or off

• **TIMER** (Use your player as a desired time.)

• **CLOCK** For setting the clock and checking the time.(see setting the clock)


• **VSM (VIRTUAL SOUND MATRIX)**

/ **DEMO** Press **DEMO** in power off state to demonstrate the function on display window. To cancel it, press **⊕** or **DEMO** again.

• **SET** confirms the time you have selected when setting the clock.

• **USB connector**

Connect a remote USB compatible player here.

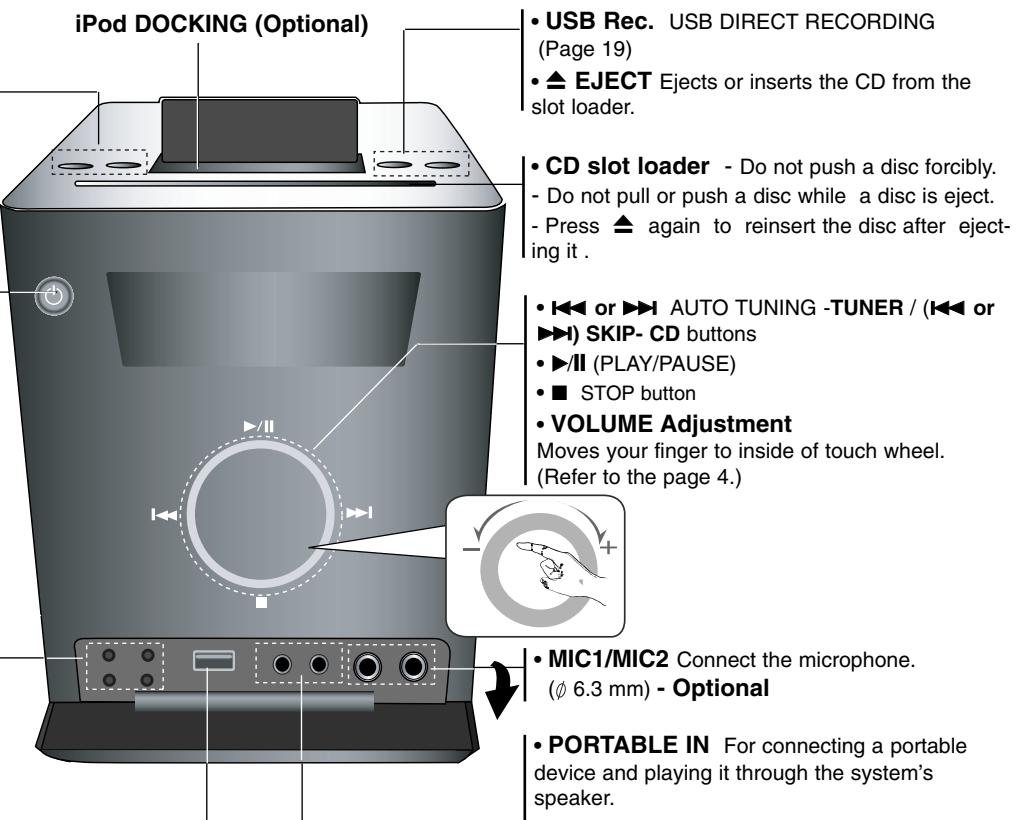

• **USB Rec.** USB DIRECT RECORDING (Page 19)

• **▲ EJECT** Ejects or inserts the CD from the slot loader.

• **CD slot loader** - Do not push a disc forcibly.

- Do not pull or push a disc while a disc is eject.
- Press **▲** again to reinsert the disc after ejecting it .

• **◀◀ or ▶▶ AUTO TUNING -TUNER / (◀◀ or ▶▶) SKIP- CD buttons**

• **▶/II (PLAY/PAUSE)**

• **■ STOP button**

• **VOLUME Adjustment**

Moves your finger to inside of touch wheel. (Refer to the page 4.)

• **MIC1/MIC2** Connect the microphone. (Ø 6.3 mm) - **Optional**


• **PORTABLE IN** For connecting a portable device and playing it through the system's speaker.

• **Headphone jack**

Connect a headphone plug (Ø3.5 mm) into the jack to listen to the sound through headphones (not supplied).

Hooking up the unit - I

MONITOR OUT / OUT PUT(COMPONENT /PROGRESSIVE SCAN) connections

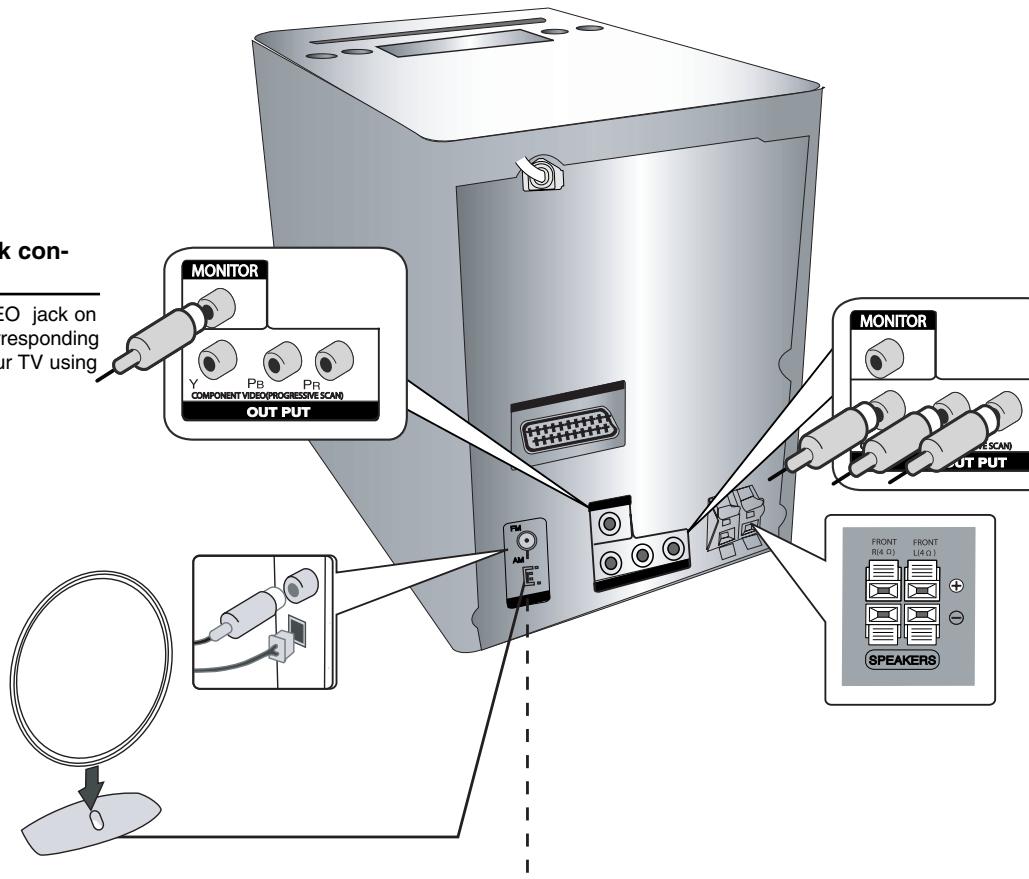

MONITOR jack connection

Connect the VIDEO jack on the unit to the corresponding input jacks on your TV using a Video cable.



OUT PUT (COMPONENT VIDEO) jacks connection

Connect one end of the component(Y PB PR) cable to the COMPONENT VIDEO jack on the unit and other end to the COMPONENT INPUT jack on your TV.

Hooking up the unit -II (Optional)

SCART connection- Optional

- 1 Connect one end of the scart cable into the TO TV SCART jack on the unit and other end to the corresponding in jack on your TV. You can get Audio and Video signals together with this connection.
- 2 Plug the power cord into the power source.

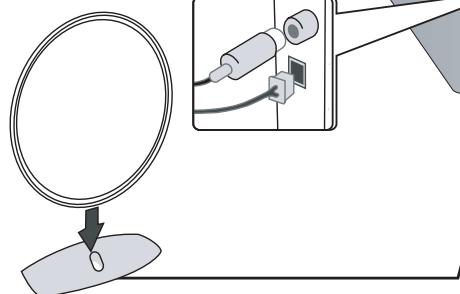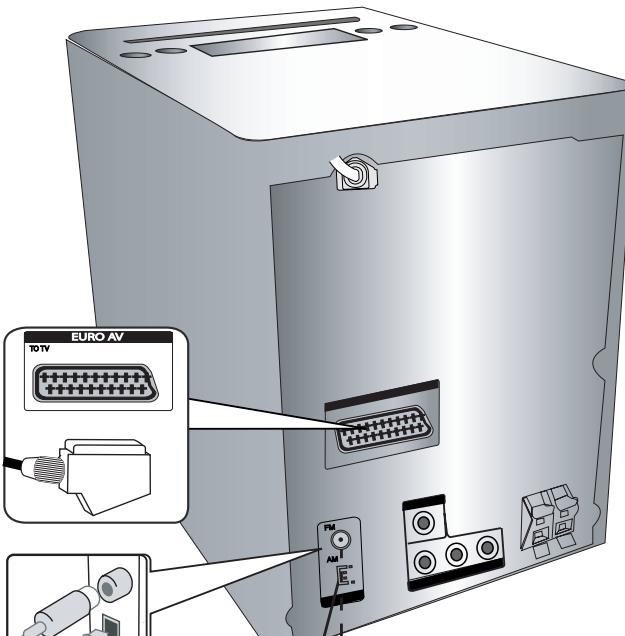

Antenna connection


Fit the AM loop aerial to its stand

Connect the AM loop aerial to the player.

Connect the FM aerial

The reception will be at its best when the two loose ends of the aerial are in a straight line and horizontal.

Remote control

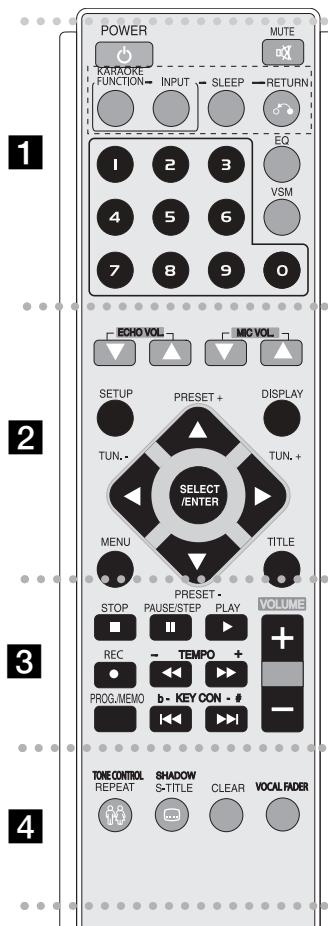

• • • • • 1 • • • • •

POWER : Switches the unit ON or OFF.

MUTE : Press MUTE to mute your unit. You can mute your unit in order, for example, to answer the telephone.

KARAOKE/FUNCTION : (DVD/CD→FM→AM)

INPUT : Changes the input source (USB→OSD IPOD (Optional) → IPOD (Optional) → TV AUDIO (Optional) → PORTABLE)

SLEEP : You can set the unit to turn off automatically at a specified time.

- **DIMMER** Dims the LED (Light-emitting diode) of front panel by half in power-on status.

RETURN (↶): Press to move back wards in the menu.

EQ (EQUALIZER Effect) : You can choose 7 fixed sound impressions.(page 13)

VSM : Press **VSM** to set the VIRTUAL sound.(page 13)
0-9 numerical buttons: Selects numbered options in a menu.

• • • • • 2 • • • • •

ECHO VOL.(▼/▲):Adjusts echo volume (Optional)

MIC VOL.(▼/▲): Adjusts microphone volume (Optional)

SETUP : Accesses or removes setup menu

MENU : Accesses the menu on a DVD disc.

DISPLAY: Accesses On-Screen Display.

TITLE : If the current DVD title has a menu, the title menu appears on the screen. Otherwise, the disc menu may appear.

◀/▶/▲/▼ (left/right/up/down):Used to navigate on-screen displays.

SELECT/ENTER : Acknowledges menu selection.

PRESET(-/+)(▼/▲) : Selects programme of Radio.

TUN.(-/+)(◀/▶): Tunes in the desired radio station.

• • • • • 3 • • • • •

PLAY (▶): Starts playback.

• • • • • 4 • • • • •

- 1.5 speed playback

The 1.5 speed allows you to watch the pictures and listen to the sound quicker than playing at a normal speed on the disc.- (page 14)

- **MONO/STEREO** FM mode state,selects MONO or STEREO by pressing play button

STOP (■): Stops playback or recording.

PAUSE/STEP(II): Pause playback.

REC (●) : USB DIRECT RECORDING

This function enable you to record music to a connected USB storage device from any other source (Audio CD) - (page19)

TEMPO(-/+) : This function enable you to fast paly or slow the music speed in KARAOKE mode.

- **SCAN(◀◀/▶▶)** : Search backward or forward.

KEY CON.(b/ #): This function can change the key to suit your vocal range.

- **SKIP (◀◀ / ▶▶)**: Go to next or previous chapter/track>Title.

PROG./MEMO : Accesses or removes Program menu.

VOLUME (+/-) : Adjusts speaker volume.

• • • • • 4 • • • • •

REPEAT : Repeats a Chapter/ Track/ Title all.

- **TONE CONTROL(ֆֆ)**:Adjusts man's or woman's key in the karaoke mode.(page 21)

CLEAR: Removes a track number on the Program List.

S-TITLE: During playback,S - TILTE repeatedly to select a desired subtitle language .

- **SHADOW** : If Video CD caption and the song's subtitle are mixed up, the song's subtitle may be invisible. In this case, to highlight the song's subtitle, press SHADOW.

- It will be highlighted by background shadow image.

VOCAL FADER (Optional) : You can enjoy the function as karaoke, by reducing singer vocal of music in the various source. MP3/WMA/CD/DD etc.(Page13)

OSD Initial language setting (Optional)

After factory setting ,this beginning menu language will only be displayed at DVD or USB mode if you turn on the power at the first time .

	ON PLAYER	ON REMOTE
1. Turn the power on:	STANDBY/ON	POWER
2. Select the language :		▲▼◀▶
3. Press:		SELECT/ENTER
4. To confirm press:		SELECT/ENTER

Initial Setting the Area Code (Optional)

After factory setting ,To set the Area code you have to as below.

	ON REMOTE
1. Display setup menu:	SETUP
2. Select LOCK menu on the first level:	▲▼
3. Move to second level: Appears the activated Area code on the second level.	▶
4. Move to third level:	▶
5. Enter the new pass word and then, press:	Numerical button of 0~ 9 then, SELECT/ENTER
6. Recheck entered new pass word and then, press:	Numerical button of 0~ 9 then, SELECT/ENTER
7. Select a code for a geographic area: After select,Rating and Password will be activated.(page 24)	▲▼◀▶

Adjust the setting

	ON REMOTE
1. Display setup menu:	SETUP
2. Select a desired option on the first level:	▲▼
3. Move to second level:	▶
4. Select a desired option on the second level:	▲▼
5. Move to third level:	▶
6. Change the setting:	▲▼ and SELECT/ENTER

Adjust the settings - more you can do

Adjust the language settings

OSD – Select a language for the Setup menu and on-screen display.

Disc Audio/Subtitle/Disc Menu – Select a language for the Menu/Audio/Subtitle.

[Original]: Refers to the original language in which the disc was recorded.
 [Others]: To select another language, press number buttons then SELECT/ENTER to enter the corresponding 4-digit number according to the language code list in the reference chapter . If you make a mistake while entering number, press CLEAR to delete numbers then correct it.
 [OFF] (for Disc Subtitle): Turn off Subtitle.

Adjust the display settings

TV Aspect – Select which screen aspect to use based on the shape of your TV screen.

[4:3]: Select when a standard 4:3 TV is connected.
 [16:9]: Select when a 16:9 wide TV is connected.

Display Mode – If you selected 4:3, you'll need to define how you would like widescreen programs and films to be displayed on your TV screen.

[Letterbox]: This displays a widescreen picture with black bands at the top and bottom of the screen.
 [Panscan]: This fills the entire 4:3 screen, cropping the picture as necessary.

TV Output Select (Optional) – Select an option according to the TV connection type. [YPbPr]: When your TV is connected with the COMPONENT/PROGRESSIVE SCAN jacks on the unit.

[RGB]: When your TV is connected with the SCART jack.
- When connected by RGB, COMPONENT OUT not operate.

Progressive Scan

Progressive Scan Video provides the high quality pictures with less flickering. If you are using the Component Video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set [Progressive Scan] to [On]. Press SELECT/ENTER to confirm your selection.
- If you not press ENTER within 10 seconds it will be [OFF].

Adjust the audio settings

DRC (Dynamic Range Control) – Make the sound clear when the volume is turned down (Dolby Digital only). Set to [On] for this effect.

Vocal – Select [On] to mix karaoke channels into normal stereo. This function is effective for multi-channel karaoke DVDs only.

Adjust the lock settings

To access the lock options, you must enter the 4-digit password. If you have not yet entered a password you are prompted to do so. Enter a 4-digit password. Enter it again to verify. If you make a mistake while entering number, press CLEAR to delete numbers then correct it.

If you forget your password you can reset it. Press SETUP and Input '210499' and press SELECT/ENTER. The password has now been cleared.

Rating – Select a rating level. The lower the level, the stricter the rating. Select [UNLOCK] to deactivate the rating.

Password – Sets or changes the password for lock settings.

[New]: Enter a new 4-digits password using the numerical buttons then press SELECT/ENTER. Enter the password again to confirm.

[Change]: Enter the new password twice after entering the current password.

Area code – Select a code for a geographic area as the playback rating level. This determines which area's standards are used to rate DVDs controlled by the parental lock. See the Area Codes on page 24.

Adjust the others settings

PBC (Playback Control) – Playback control provides special navigation features that are available on some Video CDs. Select [On] to use this feature.

DivX (R) Registration - We provide you with the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service.

For more information, visit www.divx.com/vod.

Press SELECT/ENTER when [Select] icon is highlighted and you can view the registration code of the unit.

Semi Karaoke (Optional) - When a chapter/ title / track is fully finished, this function shows the score in the screen with a fanfare sound.

• **Semi Karaoke on** : Turn the "Semi Karaoke" function on. When you finished singing a score will appear on the screen.

• **Semi Karaoke off** : Turn the "Semi Karaoke" function off. Fanfare and score do not appears on the screen

Available discs for the Semi Karaoke function:

 
- DVD ,DVD Karaoke ,VCD discs with more than 2 tracks

- This function operate on the DVD/CD mode.

- The Semi Karaoke function is available only when a microphone is connected.

- When you watching movies, "off " the Semi Karaoke at the SETUP menu or enjoy it without connecting the MIC if the fanfare or score appears during changing a chapter.

Bit Rate - Select Bit Rate signal speed 96kbps or 128kbps (Rec. Bit rate)



Displaying Disc Information

	ON REMOTE
1. Press :	DISPLAY
2. Select a item:	▲▼
3. Adjust the Display menu settings:	◀▶
4. To return the exit	DISPLAY

Displaying Disc Information - more you can do

You can select an item by pressing ▲▼ and change or select the setting by pressing ▶▶.



- Current title (or track)
number/total number of titles (or tracks)
- Current chapter number/total number of chapters
- Elapsed playing time
- Selected audio language or channel
- Selected subtitle
- Selected angle/total number of angles
- Selected Sound mode

Symbol Used in this Manual

All discs and file listed below

ALL

MP3 files

MP3

DVD and finalized DVD±R/RW

DVD

WMA files

WMA

Video CDs

VCD

DivX files

DivX

Audio CDs

ACD

Setting the Clock

	ON PLAYER	ON REMOTE
1. Turn the power on:	POWER	POWER
2. Press for at least 2 seconds:	CLOCK	
3. Choose from either: AM 12:00 (for an am and pm display) or 0:00 (for a 24 hour display)	◀◀ or ▶▶	
4. Confirm your selection:	SET	
5. Select the hours:	◀◀ or ▶▶	
6. Press:	SET	
7. Select the minutes:	◀◀ or ▶▶	
8. Press:	SET	

Use your player as an alarm clock

 
Press and hold **TIMER** for two seconds. Each function, DVD/CD,USB TUNER flashes for two seconds. Press **SET** when the function you want to be woken by is showing.


 
If you choose DVD/CD or USB you will be shown below.

You will be shown the "ON TIME" display. This is where you set the time you want the alarm to go off. Use ▶▶ or ▶▶ to change the hours and minutes and **SET** to save. You will then be shown the "OFF TIME" display. This is where you set the time you want the function to stop. Use ▶▶ or ▶▶ to change the hours and minutes and press **SET** to save.

Next you will be shown the volume (VOL) you want to be woken by. Use ▶▶ or ▶▶ to change the volume and **SET** to save. Switch the system off. The clock icon shows that the alarm is set.

When the system is turned off you can check the time the alarm is set for by pressing **TIMER**. You can also turn the alarm on and off by pressing **TIMER**. To set the alarm to go off at a different time, switch the system on and reprogramme following the same steps as initially.



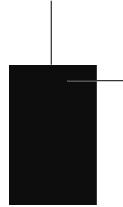

Fall asleep while listening to your player

You can set the unit to turn off automatically at a specified time. Each time you press SLEEP the setting changes in the following order. (DIMMER ON)→SLEEP 180→150→120→90→80→70→60→50→40→30→20→10→(DIMMER OFF)

DIMMER

Press SLEEP once. The LED (Light-emitting diode) of front panel is turned off and the display window will be darken by half. To cancel it, press SLEEP repeatedly until dim off.

Setting the sound mode

XDSS Plus (Extreme Dynamic Sound System)

Press XDSS Plus to reinforce treble, bass and the surround effect. The "XDSS ON" or "NORMAL" indicator lights.

This function optimizes for compressed MP3 files
DVD **DivX** **VCD** **ACD** : XDSS ON ↔ NORMAL
WMA **MP3** : XDSS ON → MP3 -- OPT ON
 → NORMAL → XDSS ON .

EQ (EQUALIZER Effect) :

You can choose 7 fixed sound impressions.

Each time you press the button the setting changes in the display window as shown below. (AUTO EQ operates only in the MP3/ WMA files which include the Tag information)

NORMAL → NATURAL →(AUTO EQ) → POP →
 CLASSIC → ROCK → JAZZ →NORMAL...

VSM (VIRTUAL SOUND MATRIX) :

Press VSM to set the virtual sound or to change sound mode repeatedly.

- When you press the Rec button during VSM, appointed sound mode return to BYPASS.

• 2.1Ch source : 3D STEREO

Realtime 3D positioned sound rendering technology with stereo sources, optimized for stereo speakers. Listeners may experience amazing virtual surround effects with their own multimedia players.

BYPASS → VIRTUAL→ON STAGE

VOCAL FADER (OPTIONAL)

You can enjoy the function as karaoke, by reducing singer vocal of music in the various source. (MP3/WMA/CD/ DTS/DD etc.) except for Karaoke mode.

- This function available to use only when a microphone is connected.
- Press VOCAL FADER button then you can see "FADE ON" or "FADE OFF" on the front display.
- This function supports for 2 channel or more.

Using Microphone (OPTIONAL)

You can sing to a music source by connecting a microphone to the unit.

Connect your microphone to the MIC1/ MIC 2 Jacks.

" " will be shown in the display window.

Play the music you want.

Sing along with the accompaniment.

Adjust the microphone volume by pressing MIC volume button. (MIN,1 - 14, MAX steps)

Note

- When not using the microphone, set the **MIC VOL.** volume button to minimum or turn off the MICs and remove the microphone from the MIC Jacks.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the **MIC VOL.** volume button.
- If sound through the microphone is extremely loud, it may be distorted. In this case, press the **MIC VOL.** volume button toward minimum.

Playing a Disc

	ON PLAYER	ON REMOTE
1. Insert a Disc:	▲	
2. To Start playback:	▶/II	▶
3. To Stop playback:	■	■ STOP

Playing a Disc - more you can do

Playing a DVD or Video CD that has a menu DVD VCD

Most DVD or Video CD now have menus which load first before the film begins to play. You can navigate these menus using ▲▼◀▶ or number button to highlight an option. Press **SELECT/ENTER** to select.

Skip to the next/previous chapter/track ALL

Press **SKIP** (▶▶) to move to the next chapter/track.

Press **SKIP** (◀◀) to return to the beginning of the current chapter/track.

Press **SKIP** (◀◀) twice briefly to step back to the previous chapter/track.

Pause a playback ALL

Press **PAUSE/STEP** (II) to pause playback. Press **PLAY** (▶) to continue playback.

Frame-by-Frame playback DVD DivX VCD

Press **PAUSE/STEP** (II) repeatedly to play Frame-by-Frame playback.

Playing repeatedly ALL

Press **REPEAT** repeatedly to select an item to be repeated. The current title, chapter or track will be played back repeatedly. To return to normal playback, press **REPEAT** repeatedly to select [Off]. On a Video CD with PBC, you must set PBC to Off to use this function.

DivX VCD : Track → All → Off

ACD WMA MP3 : TRACK → ALL → [OFF No display]

DVD : Chapter → Title → Off

Selecting a subtitle language DVD DivX

During playback, press **S-TITLE** (■) repeatedly to select a desired subtitle language.

Fast forward or fast reverse

DVD DivX VCD ACD WMA MP3

Press **SCAN** (◀◀ or ▶▶) to play fast forward or fast reverse during playback. You can change the various playback speed by pressing **SCAN** (◀◀ or ▶▶) repeatedly. Press **PLAY** (▶) to continue play at normal speed.

Watch and listen 1.5 times faster DVD VCD ACD WMA MP3

Press **PLAY** when a disc is already playing to watch and listen to a DVD 1.5 times faster than normal playback speed. ▶x1.5 will appear on the screen. Press **PLAY** again to return to normal playback speed.

Slow down the playing speed DVD VCD

While playback is paused, press **SCAN** (▶▶) to slow down forward playback. You can change the various playback speed by pressing **SCAN** (▶▶) repeatedly. Press **PLAY** (▶) to continue play at normal speed.

DVD disc can operate Slow down Forward/ Reverse playback only.

Viewing the title menu DVD

Press **TITLE** to display the disc's title menu, if available.

Viewing the DVD menu DVD

Press **MENU** to display the disc menu, if available.

Starting play from selected time DVD DivX VCD

Searches for the starting point of entered time code. Press **DISPLAY** then select clock icon. Enter a time then press **SELECT/ENTER**. For example, to find a scene at 1 hours, 10 minutes, and 20 seconds, enter "11020" and press **SELECT/ENTER**. If you enter the wrong number, press **CLEAR** to enter again. On a Video CD with PBC, you must set PBC to Off to use this function.

Last Scene Memory 

This unit memorizes last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the player or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

Screen Saver

The screen saver appears when you leave the unit in Stop mode for about five minutes.

System Select

You must select the appropriate system mode for your TV system. Remove any disc that might be in the unit, press and hold **PAUSE/STEP (II)** for more than five seconds to be able to select a system (PAL, NTSC, AUTO).

Mixed disc or USB Flash Drive – DivX, MP3/WMA and JPEG

When playing a disc or USB Flash Drive contained with DivX, MP3/WMA and JPEG files together, you can select which menu of files you would like to play by pressing **TITLE**.

Playing a DivX movie file

	ON PLAYER	ON REMOTE
1. Insert a Disc:	▲	
2. Select a movie file from the menu:	◀◀ or ▶▶	▲▼
3. To Start playback:	▶/II	SELECT/ENTER
4. To Stop playback:	■	■ STOP

Playing a DivX movie file - more you can do**Changing the character set to display DivX® subtitle correctly**

If the subtitle dose not display properly,press and hold S-TITLE button about 3seconds to display the language code menu and then,press S-TITLE button repeatedly to change the language code until the subtitle is displayed properly.

DivX disc compatibility with this player is limited as follows:

- Available resolution size of the DivX file is under 800x600 (W x H) pixel.
- The file name of the DivX subtitle is available by 45 characters.
- If there is impossible code to express in the DivX file, it may be displayed as " _ " mark on the display.
- If the number of the screen frame is over 30 per 1 second, this unit may not operate normally.
- If the video and audio structure of recorded files are not interleaved, either video or audio is outputted.

Playable DivX file : ".avi ", ".mpg ", ".mpeg ", ".divx"

Playable Subtitle format : SubRip(*.srt/*.txt) ,SAMI(*.smi), SubStation

Alpha(*.ssa/*.txt) MicroDVD(*.sub/*.txt) SubViewer 2.0(*.sub/*.txt)

VobSub(*.sub)

Playable Codec format : "DIVX3.xx ", "DIVX4.xx ", "DIVX5.xx ", "MP43 ", "3IVX ".

Playable Audio format : "AC3 ", "PCM ", "MP3 ", "WMA ".

• Sampling frequency: within 32 - 48 kHz (MP3),within 32 - 48kHz (WMA)

• Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)

Listening to Audio CD, MP3 or WMAfiles

	ON PLAYER	ON REMOTE
1. Insert a Disc:	▲	
2. Select a music file from the menu:	◀◀ or ▶▶	▲▼
3. To Start playback:	▶/II	▶ PLAY
4. To stop playback:	■	■ STOP

Listening to Audio CD, MP3 or WMA files - more you can do

Creating your own program

You can play the contents of a disc in the order you want by arranging the order of the musics on the disc. The program is cleared when the disc is removed. Select a desired music then press PROG. or select "  " and then press SELECT/ENTER to add the music to the program list. To add all music in the disc, select "  " and then press SELECT/ENTER. Select a music from the program list then press SELECT/ENTER to start programmed playback. To clear a music from the program list, select the music you want to clear then press CLEAR or select "  " icon and then press SELECT/ENTER. To clear all music from the program list, select "  " then press SELECT/ENTER.

Displaying file information (ID3 TAG)

While playing a MP3 file containing file information, you can display the information by pressing DISPLAY repeatedly.

MP3 / WMA disc compatibility with this player is limited as follows:

- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)
- The unit cannot read an MP3/WMA file that has a file extension other than ".mp3" / ".wma".
- CD-R physical format should be ISO 9660
- If you record MP3 / WMA files using software that cannot create a file system (eg. Direct-CD) it is impossible to playback MP3 / WMA files. We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.
- File names should have a maximum of 8 letters and must incorporate an .mp3 or .wma extension.
- They should not contain special letters such as / ? * : " < > | etc.
- The total number of files on the disc should be less than 999.

This unit requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback.

Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

Viewing photo files

	ON PLAYER	ON REMOTE
1. Insert a Disc:		
2. Select a photo file on the menu:	 or 	 
3. Select a photo file on the menu:		
4. Display the selected file in full screen:	 /II	ENTER/SELECT
5. To stop playback:		 STOP

Viewing photo files - more you can do

Viewing photo files as a slide show

Use     to highlight () icon then press SELECT/ENTER to start slide show.

You can change slide show speed using   when () icon is highlighted.

Skip to the next/previous photo

Press SKIP ( or ) to view the previous/next photo.

Rotate a photo

Use     to rotate the photo in full screen.

Pause a slide show

Press PAUSE/STEP () to pause a slide show. Press PLAY to continue the slide show.

JPEG disc compatibility with this player is limited as follows:

- Depending upon the size and the number of JPEG files, it could take a long time for the this unit. to read the disc's contents. If you don't see an on-screen display after several minutes, some of the files may be too large — reduce the resolution of the JPEG files to less than 2M pixels as 2760 x 2048 pixels and burn another disc.
- The total number of files and folders on the disc should be less than 999.
- Some discs may not operate due to a different recording format or the condition of disc.
- Ensure that all the selected files have the ".jpg" extensions when copying into the CD layout.
- If the files have ".jpe" or ".jpeg" extensions, please rename them as ".jpg" file.
- File names without ".jpg" extension will not be able to be read by this unit. Even though the files are shown as JPEG image files in Windows Explorer.

Listening to the radio

	ON PLAYER	ON REMOTE
1. Select FM/ AM:	FUNC.	KARAOKE FUNCTION
2. Select the radio station:	◀◀ or ▶▶	TUN.- / TUN.+
3. To 'save' a radio station: A preset number will show in the display		PROG./MEMO.
4. To select a 'saved' station:	-	PRESET(+/-)
5. To confirm press: Up to 50 radio stations can be saved		PROG./MEMO.

Listening to the radio - more you can do**Look for radio stations automatically**

Press **◀◀** or **▶▶** on the front panel (or press **TUN.- /TUN.+** on the remote control) for more than 0.5 second. The tuner will scan automatically and stop when it finds a radio station.

Delete all the saved stations

Press and hold **PROG./MEMO.** for two seconds. "ERASE ALL" shows. Press **PROG./MEMO.** to erase all the saved stations.

Choose a 'preset number' for a radio station


Select a station you want by pressing **◀◀** or **▶▶** on the front panel or **TUN.- /TUN.+** on the remote control. Press **PROG./MEMO.**, the station flashes. Press **PRESET (+/-)** on the remote control to select the preset number you want. Press **PROG./MEMO.** to save it.

Improve poor FM reception

Press **PLAY ▶** on the remote control This will change the tuner from stereo to mono and usually improve the reception.

Listening to music from your portable player

The player can be used to play the music from many types of portable player.

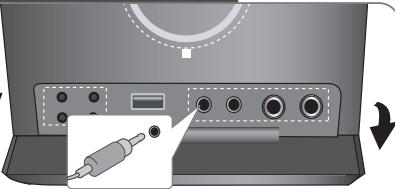

	ON PLAYER	ON REMOTE
1. Connect the portable player by plugging the unit into PORTABLE IN on the side of the player:		
2. Turn the power on:	STANDBY/ON	POWER
3. Select the PORTABLE function:	FUNC.	INPUT
4. Turn the portable player on and start it playing:		

Connecting your portable USB player

The advantage of connecting your portable USB player through the system's USB port is that the portable device can be controlled from the system. Connect the portable player to the system using a USB cable (not supplied).

	ON PLAYER	ON REMOTE
1. Select the USB function:		FUNC.
2. The display will show "SEARCHING", followed by the number of files displayed:		
3. Select a Title MENU		TITLE
4. Start selected file	▶/II	SELECT/ENTER
5. Before disconnecting the portable USB player, change to any other function by pressing:	FUNC.	KARAOKE FUNCTION or INPUT
6. Remove the USB player		

Compatible USB Devices

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- MP3 Player : Flash type MP3 player.
The MP3 player requiring installation of a driver is not supported.
- USB Flash Drive : Devices that support USB2.0 or USB1.1.

USB device requirement

- Do not extract the USB device in operating.
- A back up demands to prevent a data damage.
- If you use a USB extension cable or USB hub, the USB device might not be recognized.
- A device using NTFS file system is not supported. (Only FAT (16/32) file system is supported.)
- The USB function of this unit does not support all USB devices.
- Digital camera and mobile phone are not supported.
- This unit is not supported when the total number of files is 1000 or more.
- If the drive of USB device is two or more, a drive folder is displayed on the screen. If you want to move to the previous menu after you select a folder, press RETURN.

USB DIRECT RECORDING

Record AUDIO CD source to USB

This function enable you to record music to a connected USB storage device from Audio CD

	ON PLAYER	ON REMOTE
1. Select the DVD/CD mode:	FUNC.	KARAOKE FUNCTION or INPUT
2. Select the track (file) :	◀◀/▶▶	◀◀/▶▶
3. Press Appears "USB REC" on the display window.	USB Rec.	●
4. To stop a Recording:	■	■ STOP

USB Direct Recording - more you can do

Record AUDIO CD source to USB

One track recording : If the usb recording is played during playback of the cd, the only track would be recording into the USB

All track recording: If the USB Rec. button is pressed at the CD stop, all track would be recording.

Program list recording: USB Records after selecting the tracks pressing the PROG./MEMO. button if you want to record the tracks you want.

 
NOTES :

- When you start the USB direct recording ,you can check the Recording percentage rate for the USB record on the display window during the recording.
- During the recording is no sound and not operate for volume .
- When you stop recording during playback ,the file that has been recorded at that time will be stored
- If you disconnect the USB without STOP button while recording ,the file can not delete in the PC.
- It is impossible to record from " MIC IN"
- Playable USB REC. Bit rate : 96/128kbps (Refer to the SET UP page)
- During USB record can not operate Pause key for Audio CD only.
- Multicard reader device can not be use for USB record.
- USB port of the unit can not be connected to PC. The unit can not be used as a storage device.
- If the USB can not record appears "NO USB". "ERROR", "USB FULL" , "NO REC" on the display window.
- File will be stored to CD_REC folder in a format "TRK_001.mp3".
- In the state CD-G ,USB direct Recording is not operated.
- If you record more 999 files on CD_REC folder appears "ERROR" on the display.
- New files are numbered in numeric sequence. if the total number of the files are more than 999, delete some or store some in PC.
- External HDD,Card reader, Locked device and MP3 player is not supported.


The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense.

This equipment should not be used for such purposes.

**Be responsible
Respect copyrights**



Using iPod mode (Optional)

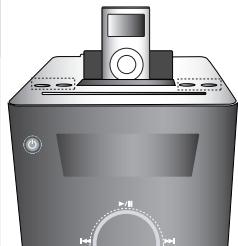

You can listen to the music by connecting iPod to "iPod DOCK" on the upper part of the player.

iPod will not be charged when selecting the iPod mode .but you can enjoy better sound quality.

	ON PLAYER	ON REMOTE
1. Select the iPod function:	FUNC.	INPUT
2. "IPOD" displays :		
3. Start the playing :	▶/II	▶
4. Before disconnecting the iPod ,change to any other function by pressing:	FUNC.	KARAOKE FUNCTION or INPUT
5. Remove iPod:		

Playing in the Remote iPod mode - more you can do

You can operate your iPod by using the supplied remote control and controls on your iPod.

Press **INPUT** on the Remote Control until "IPOD" appears in the display window. Use **▲ / ▼** and **SELECT/ENTER** on the Remote Control or controls on your iPod to display the list of menu by viewing your iPod. Press **SELECT/ENTER** to play.

- When you connect the unit and TV to VIDEO IN/OUT, TV screen is turned off.
- iPodTV Can be outputted only in the devices :iPod photo and 5G iPod.
- Interference may happen depending on iPod devices.
- This unit not supported the video output for iPod device.

NOTES :

- It works with all iPod models that have a dock connector.
- Compatibility with your iPod may vary depending on the type of your iPod.
- Depending on your iPod's software version, it may not be possible to control your iPod from the unit. We recommend installing the latest software version.
- Adjust the volume to a moderate level before you connect your iPod and this unit.
- MIC function is not supported on the IPOD mode.


Using OSD iPod mode (Optional)

If you want to charge the iPod while listening music,selects the OSD iPod mode.

	ON PLAYER	ON REMOTE
1. Select the IPOD OSD function: "IPOD " displays	FUNC.	INPUT
2. To select the music menu list : (Playlist,Artists,Albums...)		▲▼
3. Comfirms selected menu:		SELECT/ENTER
4. Selects file list and then con- firm:		▲▼ and SELECT/ENTER
5. To stop press: To move the previous mode , press the MENU button on the remote control.		■


Music

Classifies and plays the files by Playlists, Artists, Albums, Genres, Songs, and Composers.

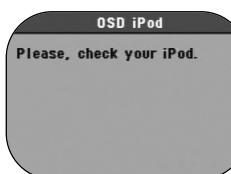

iPod message

 If the power of your iPod is insufficient or the iPod is misconnected or unknown device, the screen on the left appears. Reset the iPod,If the iPod is not operated normally (Refer to <http://www.apple.com/support/>)



Karaoke Basic Playback

	ON PLAYER	ON REMOTE
1. Check if the system is connected. (page 5)		
2. Turn on the power of TV and DVD Karaoke.	①/②	①
3. Open the disc tray and insert supplied karaoke disc.	▲	
4. Close the disc tray:	▲	
5. To enter to the karaoke mode	FUNC.	KARAOKE/ FUNCTION
6. Connect the microphone to the MIC jacks.		
7. Press the melody number you want. If you cancel the selected melody number, press the CLEAR.		NUMERIC No. 0 ~ 9
8. To start Press	▶	SELECT/ENTER or ▶
9. To stop press	■	STOP ■

Note:

The selected melody number is played.

Sing in tone with microphone.

After melody ends, it is stopped automatically and score appears.

Karaoke Advanced Playback - more you can do

You can change the key to suit your vocal range with Key Control .

You can adjust the key to 13 steps (6steps higher, 6steps lower and the original key).

- The setting appears on the screen.

Press KEY CONTROL (b/#) repeatedly on the remote control to find the key that suits your vocal range.

- To flatten the key one by one, press the KEY CONTROL (b) repeatedly during playback.
- To sharp the key one by one, press the KEY CONTROL (#) repeatedly during playback.
- To return to the original key, press the KEY CONTROL (b/#) repeatedly to appear the original key.

To adjust ECHO Volume

You can give an echo effect to the sound from the microphones.

Press the ECHO VOL. (▼/▲) on the remote control to increase the echo volume or decrease it. (MIN,1 - 14, MAX steps)

Note:

After the one song finishes its playback, the next song will be playback automatically.

To adjust the Tone Control

If you want to adjust the tone of song in the karaoke mode

Press TONE CONTROL() button repeatedly to change MAN's or WOMEN's tone

- Every time the button press, will move alternately between man's tone and woman's tone.

Tempo Change

You can use this function when you want to play fast or slow.

- Press TEMPO + repeatedly during singing to play faster.
- Press TEMPO - repeatedly during singing slower.

Shadow Function

If KARAOKE CD caption and the song's subtitle are mixed up, the song's subtitle may be invisible. In this case, to highlight the song's subtitle, press SHADOW.

- It will be highlighted by background shadow image.

Reserving the Song

When you want to make a reservation of next melody, you can enjoy the most 8 melodies reservation Without waiting.

	ON REMOTE
1. To reserve melody number you want in the karaoke disc play mode. Melody number appears on the TV screen.	NUMERIC No. 0 ~ 9
2. To reserve: The melody number is reserved.	PROG./MEMO.
3. Repeat steps 1-2. You can reserve 8 songs.	

Note:

After the one song finishes its playback, the next song will be playback automatically.

To cancel the reserved song

Each time you press CLEAR, the reserved song will be cancelled one by one.

To cancel or change the wrong reserved song

Press the PROG./MEMO. to move to the desired position, then press the CLEAR to cancel the reserved song.

Karaoke MENU Playback

1.SETUP (1. УСТАНОВКИ)

	ON PLAYER	ON REMOTE
1. Open the disc tray:	▲	
2. Insert a Karaoke Disc:		
3. Close the disc tray:	▲	
4. Appears the main menu on the screen:		
5. Select "1. SET UP " item from the menu, and press		▲▼ and SELECT/ENTER
6. Select desired option for each of item as below , and press.		◀▶ and SELECT/ENTER

SETUP OPTION

1.SCORE ON/OFF(1. БАЛЛЫ ВКЛ ВЫКЛ)

ВКЛ: When singing by selection of melody, song score comes out after one piece of song is ended.

2.FANFARE ON/OFF (2. ФАНФАРЫ ВКЛ ВЫКЛ)

ВКЛ: In condition of POWER ON, scoring fanfare operates. The fanfare sound comes out after singing finished.

3.LYRIC ON/OFF (3. ТЕКСТ ПЕСНИ ВКЛ ВЫКЛ)

ВКЛ: When singing by selection of melody, song lyric appears on the TV screen.

4.CHORUS ON/OFF (4. БЭК-ВОКАЛ ВКЛ ВЫКЛ)

ВКЛ: When singing by selection of melody, song chorus is heard a sound.

To cancel it, select the **ВЫКЛ**.

Note:

To move to the main menu, press MENU.

To move the previous mode, select the  by pressing the ▲▼,then press SELECT/ ENTER.

Karaoke MENU Playback

2.MUSIC LIST (2. СПИСОК КОМПОЗИЦИЙ)

	ON REMOTE
1. When the main menu appear on the screen, select “2.MUSIC LIST” item from the menu, and press	▲▼ and SELECT/ENTER
2. Select one among 1.LOCAL SONG(1. РОССИЙСКИЕ ПЕСНИ), 2.POP SONG (2. ЗАРУБЕЖНЫЕ ПЕСНИ) or 3.CLASSIC (3. КЛАССИЧЕСКАЯ МУЗЫКА) items from the menu, and press.	▲▼ and SELECT/ENTER
3.-1 If you select the LOCAL SONG or POP SONG, appear the 1.SONG LIST (1. СПИСОК песен) and 2.SINGER LIST(2. СПИСОК исполнителей) on the TV screen.	
3- 2.If you select the CLASSIC appear the 1.CLASSIC LIST(1. СПИСОК КОМПОЗИЦИЙ) and 2.COMPOSER LIST(2. СПИСОК КОМПОЗИТОРОВ) on the TV screen.	
4. Select the 1.SONG LIST or 1.CLASSIC LIST	▲▼ and SELECT/ENTER
5. Select initial of song title you want.	
6. Select the song title you want.	
7. Select the “2.SINGER LIST” or “2.COMPOSER LIST”.	
8. Select initial of the singer or composer you want.	
9. Select the SINGER or COMPOSER you want.	
10. Select the song title of the singer or composer.	

Karaoke MENU Playback

3.RANDOM (3. СЛУЧАЙНЫЙ ВЫБОР)

It has a function which enjoy a song Randomly.

ON REMOTE
1. When the main menu appear on the screen,select “3.RANDOM” item from the menu, and press.
2. Press.

 
Karaoke MENU Playback

4.CHALLENGE (4. СОРЕВНОВАНИЕ)

It has a function which enjoy a song game dividing by two teams of red team & blue team.

ON REMOTE
1. When the main menu appear on the screen,select “4.CHALLENGE” item from the menu, and press.
2. Select Количество попыток.
3. To select the winner's number
4. Select Желаемый результат .
5. To select the success score select one of 60,70,80,or 90 and then press.
6. Press СТАРТ and select number to sing along with the accompaniment. Repeat step 6.to change the team of red team or blue team alternately.
7. Whether you keep going the song game or not, select 1.ДА or 2.НЕТ .

Note: When reaching the targeted winning number, the Поздравляем! will be shown on the TV screen.



Language Codes


Use this list to input your desired language for the following initial settings: Disc Audio, Disc Subtitle, Disc Menu.



Language	Code	Language	Code	Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	Croatian	7282	Hausa	7265	Lingala	7678	Quechua	8185	Tajik	8471
Afrikaans	6570	Czech	6783	Hebrew	7387	Lithuanian	7684	Rhaeto-Romance	8277	Tamil	8465
Albanian	8381	Danish	6865	Hindi	7273	Macedonian	7775	Rumanian	8279	Telugu	8469
Amharic	6577	Dutch	7876	Hungarian	7285	Malagasy	7771	Russian	8285	Thai	8472
Arabic	6582	English	6978	Icelandic	7383	Malay	7783	Samoan	8377	Tonga	8479
Armenian	7289	Esperanto	6979	Indonesian	7378	Malayalam	7776	Sanskrit	8365	Turkish	8482
Assamese	6583	Estonian	6984	Interlingua	7365	Maori	7773	Scots Gaelic	7168	Turkmen	8475
Aymara	6588	Faroese	7079	Irish	7165	Marathi	7782	Serbian	8382	Twi	8487
Azerbaijani	6590	Fiji	7074	Italian	7384	Moldavian	7779	Serbo-Croatian	8372	Ukrainian	8575
Bashkir	6665	Finnish	7073	Javanese	7487	Mongolian	7778	Shona	8378	Urdu	8582
Basque	6985	French	7082	Kannada	7578	Nauru	7865	Sindhi	8368	Uzbek	8590
Bengali, Bangla	6678	Frisian	7089	Kashmiri	7583	Nepali	7869	Singhalese	8373	Vietnamese	8673
Bhutani	6890	Galician	7176	Kazakh	7575	Norwegian	7879	Slovak	8375	Volapük	8679
Bihari	6672	Georgian	7565	Kirghiz	7589	Oriya	7982	Slovenian	8376	Welsh	6789
Breton	6682	German	6869	Korean	7579	Panjabi	8065	Spanish	6983	Wolof	8779
Bulgarian	6671	Greek	6976	Kurdish	7585	Pashto, Pushto	8083	Sudanese	8385	Xhosa	8872
Burmese	7789	Greenlandic	7576	Laotian	7679	Persian	7065	Swahili	8387	Yiddish	7473
Byelorussian	6669	Guarani	7178	Latin	7665	Polish	8076	Swedish	8386	Yoruba	8979
Chinese	9072	Gujarati	7185	Latvian, Lettish	7686	Portuguese	8084	Tagalog	8476	Zulu	9085

Area Codes

Choose a area code from this list.


Area	Code	Area	Code	Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Costa Rica	CR	Greenland	GL	Maldives	MV	Paraguay	PY	Sri Lanka	LK
Argentina	AR	Croatia	HR	Hong Kong	HK	Mexico	MX	Philippines	PH	Sweden	SE
Australia	AU	Czech Republic	CZ	Hungary	HU	Monaco	MC	Poland	PL	Switzerland	CH
Austria	AT	Denmark	DK	India	IN	Mongolia	MN	Portugal	PT	Taiwan	TW
Belgium	BE	Ecuador	EC	Indonesia	ID	Morocco	MA	Romania	RO	Thailand	TH
Bhutan	BT	Egypt	EG	Israel	IL	Nepal	NP	Russian Federation	RU	Turkey	TR
Bolivia	BO	El Salvador	SV	Italy	IT	Netherlands	NL	Saudi Arabia	SA	Uganda	UG
Brazil	BR	Ethiopia	ET	Jamaica	JM	Netherlands Antilles	AN	Senegal	SN	Ukraine	UA
Cambodia	KH	Fiji	FJ	Japan	JP	New Zealand	NZ	Singapore	SG	United States	US
Canada	CA	Finland	FI	Kenya	KE	Nigeria	NG	Slovak Republic	SK	Uruguay	UY
Chile	CL	France	FR	Kuwait	KW	Norway	NO	Slovenia	SI	Uzbekistan	UZ
China	CN	Germany	DE	Libya	LY	Oman	OM	South Africa	ZA	Vietnam	VN
Colombia	CO	Great Britain	GB	Luxembourg	LU	Pakistan	PK	South Korea	KR	Zimbabwe	ZW
Congo	CG	Greece	GR	Malaysia	MY	Panama	PA	Spain	ES		

 

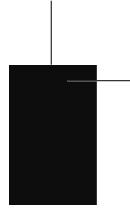 

Troubleshooting

Symptom	Cause	Correction
POWER		
No power	The power cord is not plugged in.	Plug in the power cord.
RADIO		
No sound	The function switch is not set to the Radio mode.	Set the switch to the Radio mode.
Some noise occurs.	There are electronic devices near the player. The antenna is positioned or connected poorly	Set the player far from the devices. Check the antenna connection and adjust its position
DVD/CD		
The unit does not start playback	An unplayable disc is inserted. The disc is placed upside down.	Insert a playable disc. Place the disc with the playback side down.
No picture	The disc is not placed within the guide. The TV is not set to receive the video signal	Place the disc on the disc tray correctly inside the guide. Clean the disc. Select the appropriate video input model on the TV so the picture from the unit appears on the TV
REMOTE CONTROL		
The remote control does not work properly.	The remote control is not pointed at the remote sensor of the unit directly. The batteries in the remote control are exhausted.	Point the remote control the remote sensor directly of the unit. Replace the batteries with new ones.
iPod		
iPod does not work.	Check whether the player is connected to the unit Correctly .	Connect it to the unit correctly.

 

Specifications

General

Power supply	Refer to main label.
Power consumption	Refer to main label.
Net Weight	3.31 kg
External dimensions (W x H x D)	170 x 253 x 265 mm
Operating conditions	Temperature: 5°C to 35°C, Operation status: Horizontal
Operating humidity	5% to 85%

Tuner

FM Tuning Range	87.5 - 108.0 MHz or 65.0 - 74.0 MHz, 87.5 - 108.0 MHz
Intermediate Frequency	10.7 MHz
AM Tuning Range	522 - 1,620 kHz or 520 - 1,720 kHz
Intermediate Frequency	450 kHz

Amplifier

OUTPUT POWER	80 W + 80 W (4Ω, THD 0.5%)
Stereo Mode	80 W + 80 W (4Ω, THD 0.5%)
Frequency Response	40 - 20000Hz
Signal-to-noise ratio	75dB

DVD/VCD/CD player


Frequency response (audio)	40 - 20000 Hz
Signal-to-noise ratio (audio)	More than 75 dB (1 kHz)
Signal-to-noise ratio (video)	More than 75 dB (1 kHz)
Dynamic range (audio)	More than 75 dB
Video output	1.0 V (p-p), 75 Ω
Component Video output	(Y) 1.0 V (p-p), 75 Ω (Pb)/(Pr) 0.7 V (p-p), 75 Ω




Speakers

Type	FBS163V
Impedance	3 Way 3 Speaker
Rated Input Power	4 Ω
Max. Input Power	80 W
Net Dimensions (W x H x D)	160W
Net Weight	132 x 286 x 253 mm
	4.3 kg

Notice (the date of the production of goods).
 First figure (of the left) of series number
 means Year, next 2 figures
 - Month of the production of this goods.

    Designs and specifications are subject to change without
 prior notice.





P/NO : MFL41599921

