



# OWNER'S MANUAL

# MICROWAVE/GRILL/CONVECTION

PLEASE READ THIS OWNER'S MANUAL THOROUGHLY BEFORE OPERATING.

MC-9287BR

MC-9287UR

MC9287BR

MC9287UR

# Precautions

## Precautions to avoid possible exposure to excessive microwave energy.

You cannot operate your oven with the door open due to the safety interlocks built into the door mechanism. These safety interlocks automatically switch off any cooking activity when the door is opened; which in the case of a microwave oven could result in harmful exposure to microwave energy.

**It is important not to tamper with the safety interlocks.**

Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces.

Do not operate your oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door(bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.

Your oven should not be adjusted or repaired by anyone except qualified service personnel.

When heating liquids, e.g. soups, sauces and beverages in your microwave oven, delayed eruptive boiling can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

- 1 Avoid using straight sided containers with narrow necks.
- 2 Do not overheat.
- 3 Stir the liquid before placing the container in the oven and again halfway through the heating time.
- 4 After heating, allow to stand in the oven for a short time, stir or shake them(especially the contents of feeding bottles and baby food jars) again carefully and check the temperature of them before consumption to avoid burns (especially, contents of feeding bottles and baby food jars). Be careful when handling the container.

### **WARNING**

**Please ensure cooking times are correctly set as over cooking may result in the FOOD catching fire and subsequent damage to your oven.**

### **WARNING**

**Always allow food to stand after being cooked by microwaves and check the temperature of them before consumption. Especially contents of feeding bottles and baby food jars.**

# Contents

## How the Microwave Oven Works

Microwaves are a form of energy similar to radio and television waves and ordinary daylight. Normally, microwaves spread outwards as they travel through the atmosphere and disappear without effect. Microwave ovens, however, have a magnetron which is designed to make use of the energy in microwaves. Electricity, supplied to the magnetron tube, is used to create microwave energy.

These microwaves enter the cooking area through openings inside the oven. A turntable or tray is located at the bottom of the oven. Microwaves cannot pass through metal walls of the oven, but they can penetrate such materials as glass, porcelain and paper, the materials out of which microwave-safe cooking dishes are constructed.

Microwaves do not heat cookware, though cooking vessels will eventually get hot from the heat generated by the food.

## A very safe appliance

Your microwave oven is one of the safest of all home appliances. When the door is opened, the oven automatically stops producing microwaves. Microwave energy is converted completely to heat when it enters food, leaving no "left over" energy to harm you when you eat your food.


Precautions	2
Contents	3
Unpacking & Installing	4 ~ 5
Setting the Clock	6
Child Lock	7
Micro Power Cooking	8
Micro Power Level	9
Quick Start	10
Grill Cooking	11
Convection Preheat	12
Convection Cooking	13
Grill Combination Cooking	14
Convection Combination Cooking	15
Keep Warming	16
Quick Defrost	17 ~ 18
Auto Defrost	19
Auto Weight Defrost Guide	20
Auto Cook	21 ~ 26
Auto Reheat	27 ~ 28
Auto Roast	29 ~ 30
More or less cooking	31
Rotisserie Assembly	32
Rotisserie Installation & Cooking	33 ~ 34
Heating or Reheating Guide	35
Fresh Vegetable Guide	36
Grill Cooking Guide	37
Important safety instructions	38 ~ 39
Microwave - safe Utensils	40
Food characteristics & Microwave cooking	41 ~ 42
Questions & Answers	43
Plug Wiring Information/Technical Specifications	44

# Unpacking & Installing

By following the basic steps on these two pages you will be able to quickly check that your oven is operating correctly. Please pay particular attention to the guidance on where to install your oven. When unpacking your oven make sure you remove all accessories and packing. Check to make sure that your oven has not been damaged during delivery.

**1**

Unpack your oven and place it on a flat level surface.

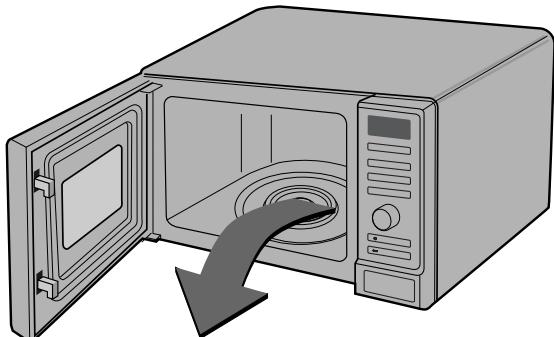

HIGH RACK



 
LOW RACK




ROTISSERIE BAR



GLASS TRAY



METAL TRAY

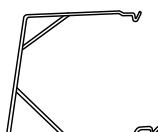


HANDLE


**2**

Place the oven in the level location of your choice with more than 85cm height but make sure there is at least 20cm of space on the top and 10cm at the rear for proper ventilation. The front of the oven should be at least 8cm from the edge of the surface to prevent tipping.

An exhaust outlet is located on top or side of the oven. Blocking the outlet can damage the oven.

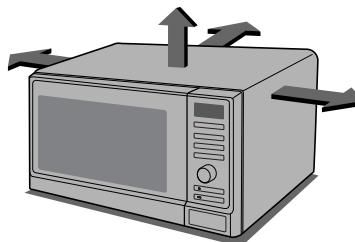

MC-9287BR(MC9287BR)

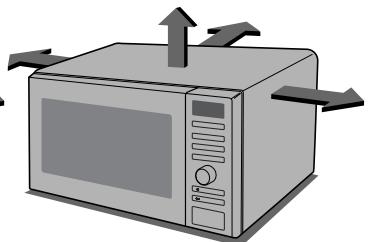

MC-9287UR(MC9287UR)

THIS OVEN SHOULD NOT BE USED FOR COMMERCIAL CATERING PURPOSES

**3** Plug your oven into a standard household socket. Make sure your oven is the only appliance connected to the socket. **If your oven does not operate properly, unplug it from the electrical socket and then plug it back in.**

**4** Open your oven door by pressing the **DOOR OPEN BUTTON**. Place the **ROTATING RING** inside the oven and place the **GLASS TRAY** on top.

**5** Fill a **microwave safe container** with 300 ml (1/2 pint) of water. Place on the **GLASS TRAY** and close the oven door. If you have any doubts about what type of container to use please refer to page 40.



**6** Press the **STOP** button, and press the **START** button one time to set 30 seconds of cooking time.



You will hear a BEEP each time you press the button. Your oven will start before you have finished the sixth press; don't worry this is normal.



**7** The **DISPLAY** will count down from 30 seconds. When it reaches 0 it will sound BEEPS. Open the oven door and test the temperature of the water. If your oven is operating the water should be warm. **Be careful when removing the container it may be hot.**



**YOUR OVEN IS NOW INSTALLED**

**8** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

#### HOW TO USE THE ACCESSORY

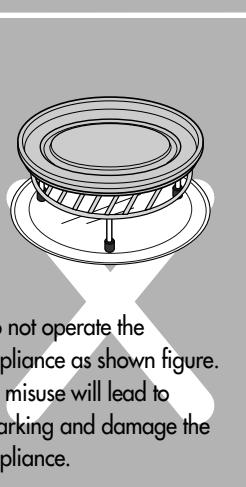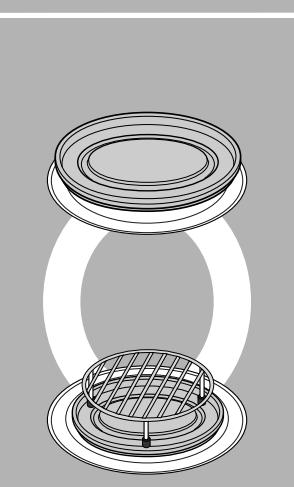

Do not operate the appliance as shown figure. As misuse will lead to sparking and damage the appliance.

# Setting the Clock



When your oven is plugged in for the first time or when power resumes after a power cut, a '0' will be shown in the display; you will have to reset the clock.

If the clock (or display) shows any strange looking symbols, unplug your oven from the electrical socket and plug it back in and reset the clock.

You can set either 12 hour clock or 24 hour clock.

In the following example I will show you how to set the time for 14:35 when using the 24 clock. Make sure that you have removed all packaging from your oven.

Make sure that you have correctly installed your oven as described earlier in this book.


Press **STOP/CLEAR**.



Press **Clock** once.


Press **DIAL** for 24 hour clock conformation.

(If you want to use a 12 hour clock, Press **Clock** once more. If you want to change different option after setting clock, you have to unplug and plug it back in.)

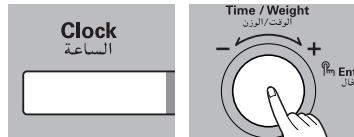

Turn **DIAL** until display shows "14:00".


Press **DIAL** for hour confirmation.

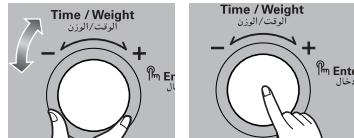

Turn **DIAL** until display shows "14:35".

Press **DIAL**.

The clock starts counting.

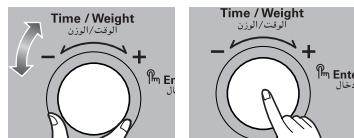

# Child Lock



Your oven has a safety feature that prevents accidental running of the oven. Once the child lock is set, you will be unable to use any functions and no cooking can take place. However your child can still open the oven door.

Press **STOP/CLEAR**.



---

Press and hold **STOP/CLEAR** until "L" appears on the display and BEEP sounds.

The **CHILD LOCK** is now set.



---

To cancel **CHILD LOCK** press and hold **STOP/CLEAR** until "L" disappears. You will hear BEEP when it's released.



# Micro Power Cooking

In the following example I will show you how to cook some food on 80% power for 5 minutes and 30 seconds.



 
Your oven has five microwave Power settings.

POWER	%	Power Output
<b>HIGH MAX</b>	100%	900W
<b>MEDIUM HIGH</b>	80%	720W
<b>MEDIUM</b>	60%	540W
<b>DEFROST</b>	40%	360W( ٣٦٠ )
<b>MEDIUM LOW</b>		
<b>LOW</b>	20%	180W


## Don't Use



METAL TRAY



ROTISSERIE

 

HIGH RACK



 
LOW RACK

Make sure that you have correctly installed your oven as described earlier in this book.

Press **STOP/CLEAR**.



Press **MODE**.




Press **DIAL** for micro mode confirmation.

(MICRO mode(  ) is automatically available when MODE button is selected)




Turn **DIAL** until display shows "720".

Press **DIAL** for power confirmation.

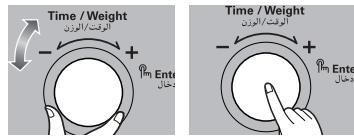

Turn **DIAL** until display shows "5:30".

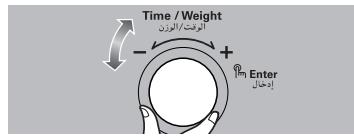

Press **START**.

When cooking you can increase or decrease cooking time by turning **DIAL**.



# Micro Power Level

Your microwave oven is equipped with 5 power levels to give you maximum flexibility and control over cooking. The table below shows the examples of food and their recommended cooking power levels for use with this microwave oven.

POWER LEVEL	USE	POWER LEVEL (%)	POWER OUTPUT
HIGH	<ul style="list-style-type: none"> <li>* Boil Water</li> <li>* Brown minced beef</li> <li>* Cook poultry pieces, fish, vegetables</li> <li>* Cook tender cuts of meat</li> </ul>	100%	900W
MEDIUM HIGH	<ul style="list-style-type: none"> <li>* Reheating(Liquid)</li> <li>* Roast meat and poultry</li> <li>* Cook mushrooms and shellfish</li> <li>* Cook foods containing cheese and eggs</li> </ul>	80%	720W
MEDIUM	<ul style="list-style-type: none"> <li>* Reheating(Mashed potato, Plated meal, Ready meal)</li> <li>* Prepare eggs</li> <li>* Cook custard</li> <li>* Prepare rice, soup</li> </ul>	60%	540W
DEFROST/ MEDIUM LOW	<ul style="list-style-type: none"> <li>* All thawing</li> <li>* Melt butter and chocolate</li> <li>* Cook less tender cuts of meat</li> </ul>	40%	360W( $\frac{**}{88}$ )
LOW	<ul style="list-style-type: none"> <li>* Soften butter &amp; cheese</li> <li>* Soften ice cream</li> <li>* Raise yeast dough</li> </ul>	20%	180W



# Quick Start

In the following example I will show you how to set 2 minutes of cooking on 900W power.



The **QUICK START** feature allows you to set 30 seconds intervals of HIGH power cooking with a touch of the **QUICK START** button.

## Don't Use



METAL TRAY



ROTISSERIE



HIGH RACK



LOW RACK

Press **STOP/CLEAR**.



CLEAR إيقاف

**STOP** توقف

Press **QUICK START** four times to select 2 minutes on 900W power.  
Your oven will start before you have finished the fourth press.



QUICK START بداية سريعة

**START** ابدأ

During **QUICK START** cooking, you can extend the cooking time up to 99 minutes 59 seconds by repeatedly pressing the **QUICK START** button.

# Grill Cooking

In the following example I will show you how to use the grill to cook some food for 12 minutes and 30 seconds.




This model is fitted with a **QUARTZ GRILL**, so preheating is not needed.

This feature will allow you to brown and crisp food quickly.

The metal tray is placed between a glass tray and a grill rack at the grill mode.


**The grill rack(high rack) must be used during grill cooking.**

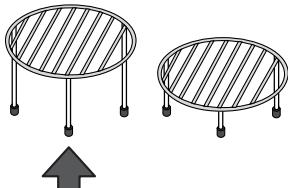

Press **STOP/CLEAR**.





Press **MODE**.

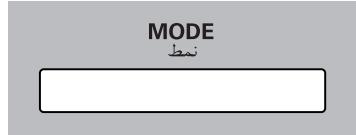

Turn **DIAL** to select **GRILL**.

The following indication is displayed: "□"

 Press **DIAL** for mode conformation.

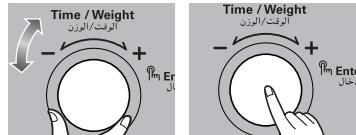

Turn **DIAL** until display shows "12:30".



Press **START**.

When cooking you can increase or decrease cooking time by turning **DIAL**.



# Convection

## Preheat

In the following example I will show you how to preheat the oven at a temperature of 230°C.



The convection oven has a temperature range of 40 °C and 100 °C~250 °C (180 °C is automatically available when convection mode is selected).

The oven has a ferment function at the oven temperature of 40°C. You may wait until the oven is cool because you cannot use a ferment function if the oven temperature is over 40°C.

When you use this function if the oven temperature is over 70°C Error code "F-14" displays.

Your oven will take a few minutes to reach the selected temperature.

Once it has reached correct temperature, your oven will BEEP to let you know that it has reached the correct temperature.

Then place your food in your oven: then tell your oven to start cooking.

Press **STOP/CLEAR**.

Press **MODE**.




**MODE**  
نقط

Turn **DIAL** to select **CONV**.


The following indication is displayed: "  "

Press **DIAL** for mode confirmation.

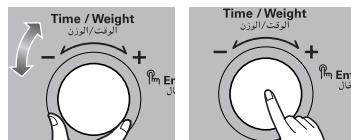

Turn **DIAL** until display shows "230°C".

Press **DIAL** for temperature confirmation.

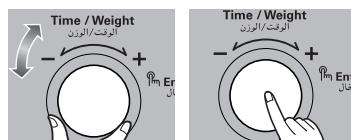

Press **START**.

Preheating will be started with displaying " Pr-H".




In the following example I will show you how to preheat the oven first, then cook some food at a temperature of 230°C for 50 minutes.

# Convection Cooking




If you do not set a temperature your oven will automatically select 180 °C, the cooking temperature can be changed by turning DIAL.

**The convection rack(low rack) must be used during convection cooking.**

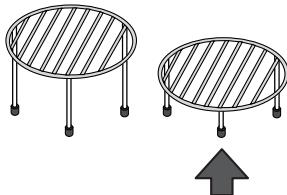

Press **STOP/CLEAR**.


Press **MODE**.

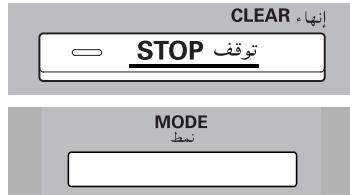

Turn **DIAL** to select **CONV**.


The following indication is displayed: “”

Press **DIAL** for mode confirmation.

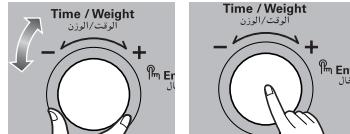

Turn **DIAL** until display shows “230°C”.

Press **DIAL** for temperature confirmation.

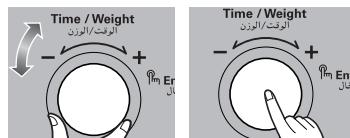

Turn **DIAL** until display shows “50:00”.

5



Press **START**.

5

When cooking you can increase or decrease cooking time by turning **DIAL**.



# Grill Combination Cooking

In the following example I will show you how to programme your oven with micro power 20% and grill for a cooking time of 25 minutes.



 
Your oven has a combination cooking feature which allows you to cook food with **heater** and **microwave** at the same time or alternately. This generally means it takes less time to cook your food.

You can set three kinds of micro power level(20%, 40% and 60%) in combi mode.

Press **STOP/CLEAR**.




Press **MODE**.




Turn **DIAL** to select **GRILL COMBI** until display shows "540".  
The following indications are displayed: "  ", "  ".

Press **DIAL** for mode conformation.

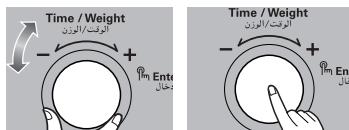


Turn **DIAL** until display shows "180".

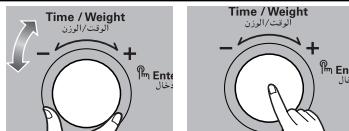

Press **DIAL** for power confirmation.

Turn **DIAL** until display shows "25:00".

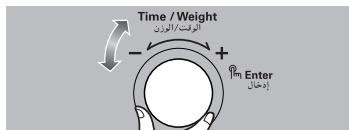

Press **START**.

When cooking you can increase or decrease cooking time by turning **DIAL**.

*Be careful when removing your food because the container will be hot!*



# Convection Combination Cooking

In the following example I will show you how to programme your oven with micro power 60% and at a convection temperature 200 °C for a cooking time of 25 minutes.




You can set three kinds of micro power level(20%, 40% and 60%) in combi mode.


Microwave Power (%)	(Watts)
20	180
40	360
60	540

Press **STOP/CLEAR**.

Press **MODE**.

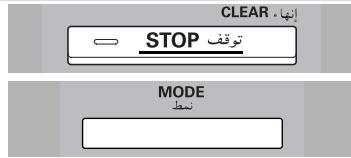

Turn **DIAL** to select CONV. COMBI until display shows "540".  
The following indications are displayed: "  " , "  " .

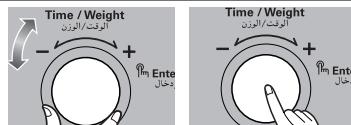


Press **DIAL** for mode confirmation.

Press **DIAL** for power confirmation.  
(540W is automatically available when CONV. COMBI mode is selected.)



Turn **DIAL** until display shows "200°C".

Press **DIAL** for temperature confirmation.

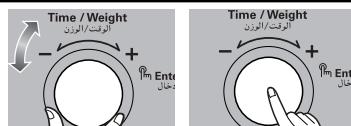

Turn **DIAL** until display shows "25:00".



Press **START**.

When cooking you can increase or decrease cooking time by turning **DIAL**.

*Be careful when removing your food because the container will be hot!*



# Keep Warming

In the following example I will show you how to keep warming at the temperature of 90 °C for 30 minutes.



The oven has a temperature range of 30 °C~90 °C when keep warming is selected.


When you press keep warming, 60 °C is set initially.

Your oven will take a few minutes to reach the selected temperature.

Once it has reached correct temperature, your oven will BEEP to let you know that it has reached the correct temperature.


Press **STOP/CLEAR**.

Press **MODE**.

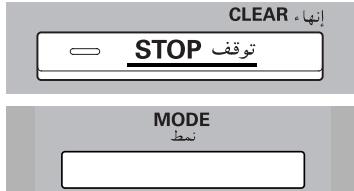


Turn **DIAL** until display shows "60°C".

Press **DIAL** to select keep warming.

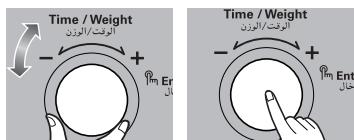

Turn **DIAL** until display shows "90°C".

Press **DIAL** for temperature confirmation.

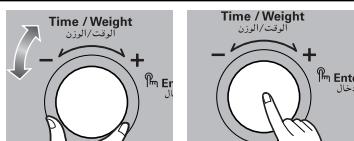

Turn **DIAL** to set keep warming time until display shows "30:00".



Press **START**.

When cooking you can increase or decrease cooking time by turning **DIAL**.



# Quick Defrost

Use this function to thaw only 0.5kg of Minced meat very quickly.

This will require a standing time to allow the center to thaw. In the following example will show you how to defrost 0.5kg of frozen minced meat.



Your oven has a microwave quick defrost setting (MEAT).

**Don't Use**



METAL TRAY



ROTISSERIE

Press **STOP/CLEAR**.

Weight the food that you are about to defrost. Be certain to remove any metallic ties or wraps; then place the food in your oven and close the oven door.

CLEAR إيقاف

**STOP** توقف

Press **Quick Defrost**.

(Put the 0.5kg of Meat)

The oven will start automatically.

**Quick Defrost** **Auto Defrost**  
إذابة سريعة **إذابة آلية**

During defrosting your oven will "BEEP", at which point open the oven door, turn food over and separate to ensure even thawing. Remove any portions that have thawed or shield them to help slow down thawing. After checking close the oven door and press **START** to resume defrosting.

**Your oven will not stop defrosting (even when the beep sounded) unless the door is opened.**

Use this function to defrost quickly for minced meat.

Remove the meat completely from its wrapping. Place the mince onto a microwave-safe plate. When beeps, at this point remove the mince from the microwave oven, turn the mince over and return to the microwave oven. Press start to continue. At the end of the program remove the mince from the microwave oven, cover with foil and allow to stand 5-15 minutes or until completely thawed.

<b><i>Category</i></b>	<b><i>Weight</i></b>	<b><i>Utensil</i></b>	<b><i>Instructions</i></b>
Minced Meat	0.5kg	Microwave ware (Flat plate)	Minced meat only Turn food over at beef After defrosting, let stand for 5-15 minutes.

# Auto Defrost

The temperature and density of food varies, I would recommend that the food is checked before cooking commences. Pay particular attention to large joints of meat and chicken, some foods should not be completely thawed before cooking. For example fish cooks so quickly that it is sometimes better to begin cooking while still slightly frozen. The BREAD programme is suitable for defrosting small items such as rolls or a small loaf. These will require a standing time to allow the centre to thaw. In the following example I will show you how to defrost 1.4Kg of frozen poultry.



Your oven has four microwave defrost settings:- **MEAT**, **POULTRY**, **FISH** and **BREAD**; each defrost category has different power settings.

**Don't Use**



METAL TRAY



ROTISSERIE

Press **STOP/CLEAR**.

Weight the food that you are about to defrost. Be certain to remove any metallic ties or wraps; then place the food in your oven and close the oven door.




Press **Auto Defrost**.



**Quick Defrost** **Auto Defrost**  
إذابة سريعة إذابة آلية

Turn **DIAL** until display shows "dEF2".

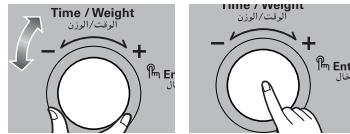

Press **DIAL** for category confirmation.

Enter the weight of the frozen food that you are about to defrost.

Turn **DIAL** until display shows "1.4kg".



Press **START**.



During defrosting your oven will "BEEP", at which point open the oven door, turn food over and separate to ensure even thawing. Remove any portions that have thawed or shield them to help slow down thawing. After checking close the oven door and press **START** to resume defrosting.

Your oven will not stop defrosting (even when the beep sounded) unless the door is opened.

## Auto weight defrost guide

- \* Food to be defrosted should be in a suitable microwave proof container and place uncovered on the glass turntable.
- \* If necessary, shield small areas of meat or poultry with flat pieces of aluminum foil. This will prevent thin areas becoming warm during defrosting. Ensure the foil does not touch the oven walls.
- \* Separate items like minced meat, chops and bacon as soon as possible.
- \* When BEEP, at this point remove the food from the microwave oven, turn the food over and return to the microwave oven. Press start to continue. At the end of the program, remove the food from the microwave oven, cover with foil and allow to stand until completely thawed. To thaw completely, for example joints of meat and whole chickens should STAND for a minimum of 1 hour before cooking.

Category	Weight Limit	Utensil	Food
Meat (dEF1)	0.1 ~ 4.0 kg	Microwave ware (Flat plate)	<b>Meat</b> Minced beef, Fillet steak, Cubes for stew, Sirloin steak, Pot roast, Rump roast, Beef burger, Lamp chops, Rolled roast, Cutlets(.2cm) Turn food over at beef  After defrosting, let stand for 5-15 minutes.
Poultry (dEF2)			<b>Poultry</b> Whole chicken, Legs, Breasts, Turkey breasts(under 2.0kg) Turn food over at beef  After defrosting, let stand for 20-30 minutes.
Fish (dEF3)			<b>Fish</b> Fillets, Steaks, Whole fish, Sea foods Turn food over at beef  After defrosting, let stand for 10-20 minutes.
Bread (dEF4)	0.1 ~ 0.5 kg	Paper towel or flat plate	Sliced bread, Buns, Baguette, etc.

# Auto Cook

In the following example I will show you how to cook 0.3kg of Rice. (Ac 2)



**AUTO COOK** allows you to cook most of your favorite food easily by selecting the food type and entering the weight of the food.

Press **STOP/CLEAR**.



CLEAR إهلا

**STOP** توقف

Press **Auto Cook**.



**Auto Cook** طبخ إلى

**Auto Reheat** إعادة تسخين تلقائية



Turn **DIAL** until display shows "Ac 2".



Press **DIAL** for category confirmation.



Turn **DIAL** until display shows "0.3kg".

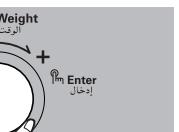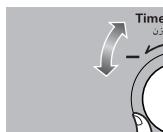

Press **START**.



When cooking you can increase or decrease cooking time by turning **DIAL**.

QUICK START بداية سريعة

**START** إبدأ

Auto Cook	Category	Weight Limit	Utensil	Food Temp.	Instructions
	Jacket Potato (Ac 1)	0.1 - 1.0kg	Metal tray	Room	<p>Choose medium sized potatoes 170 -200g.  Wash and dry potatoes. Pierce the potatoes several times with a fork. Place the potatoes on the metal tray on glass tray. Adjust weight and press start.  After cooking, remove the potatoes from the oven.  Let stand covered with foil for 5 minutes.</p> <p><b>CAUTION: The grill and surrounding oven will get very HOT. Use oven gloves.</b></p>
	Rice (Ac 2)	0.1 - 0.4kg	Microwave-safe bowl	Room	<ol style="list-style-type: none"> <li>1. Place rice and boiling water with 1/4 to 1 teaspoon salt in a deep and large bowl. Place food in the oven.</li> <li>2. After cooking, stir. Stand covered for 5 minutes.</li> </ol> <p><b>Notes :</b>  Add 300ml of boiling water per 100g white rice.  Cover with plastic wrap and vent.</p>
	Pasta (Ac 3)	0.1 - 0.4kg	Microwave-safe bowl	Room	<ol style="list-style-type: none"> <li>1. Place pasta and boiling water with 1/4 to 1 teaspoon salt in a deep and large bowl. Place food in the oven.</li> <li>2. After cooking, stir. Stand covered for 5 minutes.</li> </ol> <p><b>Notes :</b>  Add 400ml of boiling water per 100g pasta.  Do not cover. Stir at least twice during cooking to prevent sticking.</p>

<b>Auto Cook</b>	<b>Category</b>	<b>Weight Limit</b>	<b>Utensil</b>	<b>Food Temp.</b>	<b>Instructions</b>
 <b>Don't Use</b>	Fresh Vegetable (Ac 4)	0.2 - 0.8kg	Microwave-safe bowl	Room	<p>Place vegetables in a microwave-safe bowl. Add water. Cover with wrap. Adjust weight and press start. After cooking, stir and allow to stand for 2minutes. Add amount of water according to the quantity.</p> <p>** 0.2kg - 0.4kg : 2 Tablespoon</p> <p>** 0.5kg - 0.8kg : 4 Tablespoon</p>
 <b>ROTISSERIE</b>	Frozen Vegetable (Ac 5)	0.2 - 0.8kg	Microwave-safe bowl	Frozen	<p>Place vegetables in a microwave-safe bowl. Add water. Cover with wrap. Adjust weight and press start. After cooking, stir and allow to stand for 2 minutes. Add amount of water according to the quantity.</p> <p>** 0.2kg - 0.4kg : 2 Tablespoon</p> <p>** 0.5kg - 0.8kg : 4 Tablespoon</p>
	Fresh Fish (Ac 6)	0.1 - 0.6kg	Microwave-safe flan dish	Refrigerated	<p>Whole fish, steaks</p> <ul style="list-style-type: none"> <li>- Oily fish : salmon, mackerel</li> <li>- White fish : cod, haddock</li> </ul> <p>Arrange in a single layer in a large microwave-safe flan dish. Add 2 tablespoons of lemon juice. Cover dish tightly with plastic wrap and pierce in several places. Place on the glass turntable. Adjust weight and press start. After cooking, remove the dish from the oven. Allow to stand for 3 minutes before serving.</p>

<b>Auto Cook</b>	<b>Category</b>	<b>Weight Limit</b>	<b>Utensil</b>	<b>Food Temp.</b>	<b>Instructions</b>
 <b>Don't Use</b> <b>ROTISSERIE</b>	French fries (Ac 7)	0.2 - 0.5kg	Heatproof plate on the High rack	Frozen	<p>Spread frozen potato products out on the heatproof plate on the high rack. For the best results, cook in a single layer.</p> <p>When beep, turn food over.</p> <p>After cooking, remove from the oven and stand for 1~2 minutes.</p>
	Gratin (Ac 8)	0.5 - 1.2kg	Low rack on the Metal tray	Room	<p>Use this key to cook home made Gratin.</p> <p><b>* Potato Gratin *</b></p> <p><b>Ingredients</b></p> <p>400g potatoes 100g onions(cut into thin slices) 2/3 tablespoon butter 3 slices of bacon 350g white sauce 80g shredded mozzarella cheese Salt, black pepper</p> <p><b>(White Sauce)</b></p> <p>3 tablespoon butter, 5 tablespoon flour, 2 cups of milk Place butter in a large bowl. Microwave at HIGH until butter melts. Add flour and microwave for 2 minutes at HIGH. Add milk, salt and black pepper. Microwave at HIGH for 15 minutes. (During cooking, stir several times.)</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Bake potatoes for 7-8 minutes on Microwave HIGH. And then peel and slice into small size. Add salt, pepper.</li> <li>2. Combine onions and butter in a bowl. Microwave at HIGH for 2 minutes.</li> <li>3. Place one third of the white sauce in gratin dish. Add potatoes, onions and bacon. Cover with the rest of the white sauce.</li> <li>4. Sprinkle with cheese. Place on low rack on the metal tray.</li> </ol> <p>After cooking, stand for 2~3 minutes.</p>

<b>Auto Cook</b>	<b>Category</b>	<b>Weight Limit</b>	<b>Utensil</b>	<b>Food Temp.</b>	<b>Instructions</b>
	Kebab (Ac 9)	0.2 - 1.0kg	Rotisserie over the metal tray	Refrigerated	<p>600g meat(lamb, beef) 2 tablespoon Salt 1 large onion Olive oil 1 skewer: approx.0.2-0.25kg</p> <p>1. Cut the meat into the small and equal pieces. Grate the onion and separate its juice. Mix the onion juice and olive oil. Then cover the pieces of meat with the olive oil and onion juice for 3-4 hours.</p> <p>2. Fix the meat pieces into the skewers. Note that the skewers pass the meat center. Insert the roti-bar into the Roti-holder over the metal tray.</p> <p>3. Adjust weight and press start.</p> <p>4. After cooking, remove from the oven.</p>

Auto Cook	Category	Weight Limit	Utensil	Food Temp.	Instructions																					
	Chilled Pizza (Ac 10)	0.2 - 0.6kg	Low rack on the metal tray	Refrigerated	<p>This function is for reheating leftover chilled pizza. Place chilled pizza on the low rack on the metal tray.</p> <p>After cooking, take food out immediately. Stand for 1~2 minutes.</p>																					
	Fresh Pizza (Ac 11)	0.7 - 1.0kg	Metal tray on the low rack	Room	<table border="1"> <tbody> <tr> <td>Batter</td> <td>1.0kg</td> <td>0.7kg</td> </tr> <tr> <td>Dry yeast(g)</td> <td>7</td> <td>4</td> </tr> <tr> <td>All-purpose flour(g)</td> <td>300</td> <td>200</td> </tr> <tr> <td>Water, tepid(ml)</td> <td>150</td> <td>100</td> </tr> <tr> <td>Sugar(g)</td> <td>8</td> <td>5</td> </tr> <tr> <td>Salt(g)</td> <td>5</td> <td>3</td> </tr> <tr> <td>Vegetable oil(tablespoon)</td> <td>3</td> <td>1 1/2</td> </tr> </tbody> </table> <p>1. Combine a flour, yeast, sugar, salt and warm water.  2. Add oil and knead the batter well. And stand for 15-25 minutes on Convection 40°.... After finishing, knead again.  3. Drain the juice of canned tomatoes.  4. Grease the oil on the metal tray. Spread the batter on the metal tray. And prick the surface of the batter with a fork.  5. Place the tomato puree and canned tomatoes.  6. Place the other ingredients on the pie.  7. Sprinkle shredded mozzarella cheese on the pizza.  8. Choose the menu and press start without food.  9. The oven will beep at end of the preheating period. Open the door and place the prepared food on the low rack on the glass turntable. Press start to continue cooking.  10. After cooking, remove food from the oven and serve.</p>	Batter	1.0kg	0.7kg	Dry yeast(g)	7	4	All-purpose flour(g)	300	200	Water, tepid(ml)	150	100	Sugar(g)	8	5	Salt(g)	5	3	Vegetable oil(tablespoon)	3	1 1/2
Batter	1.0kg	0.7kg																								
Dry yeast(g)	7	4																								
All-purpose flour(g)	300	200																								
Water, tepid(ml)	150	100																								
Sugar(g)	8	5																								
Salt(g)	5	3																								
Vegetable oil(tablespoon)	3	1 1/2																								
	Frozen Pizza (Ac 12)	0.1 - 0.6kg	Low rack on the metal tray	Frozen	<p>This function is for cooking frozen pizza.</p> <p>Remove all package and place on low rack on the metal tray.</p> <p>After cooking, stand for 1~2 minutes.</p>																					

In the following example I will show you how to cook 0.3kg of Sauce. (rh 2)

# Auto Reheat



**AUTO REHEAT** cooking make food reheating convenient and easy to use. The oven has been pre-programmed to automatically reheat food.

Your oven has four **AUTO REHEAT** settings: Soup, Sauce, Chilled Meal, Frozen Meal.

Press **STOP/CLEAR**.



Press **Auto Reheat**.




**Auto Cook** طبخ إلى **Auto Reheat** إعادة تسخين تلقائية




Turn **DIAL** until display shows "rh 2".

press the **DIAL** for category confirmation.

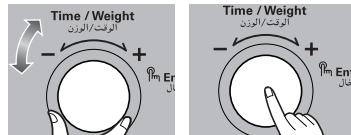

Turn **DIAL** until display shows "0.3kg"

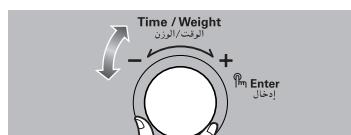

Press **START**.



<b>Category</b>	<b>Weight Limit</b>	<b>Utensil</b>	<b>Food Temp.</b>	<b>Instructions</b>
Soup (rh 1)	0.2 - 0.6kg	Microwave-safe bowl	Room	<p>Pour the soup into a microwave-safe bowl.</p> <p>Cover with lid or plastic wrap.</p> <p>After heating, stir. Allow to stand for 2 minutes with cover.</p> <p>And then stir again.</p>
Sauce (rh 2)	0.2 - 0.6kg	Microwave-safe bowl	Room	<p>Pour the sauce into a microwave-safe bowl.</p> <p>Cover with lid or plastic wrap.</p> <p>After heating, stir. Allow to stand for 2 minutes with cover.</p> <p>And then stir again.</p>
Chilled meal (rh 3)	0.3 - 0.6kg	Own tray	Refrigerated	<p>Pierce using a skewer on the surface.</p> <p>Place food on the glass turntable. After cooking, allow to stand for 2-3 minutes before serving.</p> <p> <ul style="list-style-type: none"> <li>- Stirrable e.g : Spaghetti bolognese, Beef stew</li> <li>- Non-stirrable e.g : Lasagne, Cottage pie</li> </ul> </p> <p><b>Note :</b></p> <p>For food contained in bag(s), pierce meat portion and rice/pasta portions, etc.</p> <ul style="list-style-type: none"> <li>- For stirrable foods, stir.</li> <li>- Non-stirrable foods, it is not necessary to stir at beep.</li> </ul>
Frozen meal (rh 4)	0.3 - 0.6kg	Own tray	Frozen	Same as above.

In the following example I will show you how to cook 0.5kg of Roast Beef. (Ar 1)

# Auto Roast



**AUTO ROAST** allows you to cook most of your favorite food easily by selecting the food type and entering the weight of the food.

Press **STOP/CLEAR**.



CLEAR إلغاء

**STOP** توقف

Press **Auto Roast**.




Clock الساعة

Auto Roast تشنوية تلقائية

Turn **DIAL** until display shows "Ar 1".



Press the **DIAL** for category confirmation.

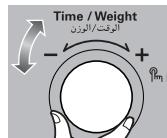

Turn **DIAL** until display shows "0.5kg".



Press **START**.



QUICK START بداية سريعة

**START** إبدأ

<b>Category</b>	<b>Weight Limit</b>	<b>Utensil</b>	<b>Food Temp.</b>	<b>Instructions</b>
Roast Beef (Ar 1)	0.5 - 1.8kg	Rotisserie over the metal tray	Refrigerated	<ol style="list-style-type: none"> <li>1. Brush the beef with melted margarine or butter.</li> <li>2. Pierce the beef with the roti-bar. Note that the bar pass through the beef completely.</li> <li>3. Tie the beef with a cotton thread and insert the bar into the roti-holder over the metal tray.</li> <li>4. Adjust weight and press start.</li> <li>5. After cooking, remove from the oven. Stand covered with foil for 10-15 minutes before serving.</li> </ol>
Roast Lamb (Ar 2)	0.5 - 1.8kg	Rotisserie over the metal tray	Refrigerated	<ol style="list-style-type: none"> <li>1. Brush the lamb with melted margarine or butter.</li> <li>2. Pierce the lamb with the roti-bar. Note that the bar pass through the lamb completely.</li> <li>3. Tie the lamb with a cotton thread and insert the bar into the roti-holder over the metal tray.</li> <li>4. Adjust weight and press start.</li> <li>5. After cooking, remove from the oven. Stand covered with foil for 10-15 minutes before serving.</li> </ol>
Chicken Portions (Ar 3)	0.2 - 0.8kg	High rack on the metal tray	Refrigerated	<p>Wash and dry skin. Brush the chicken legs with melted margarine or butter. Place on the high rack on the metal tray. Adjust weight and press start.</p> <p>When beeps, turn food over. And then press start to continue cooking. After cooking, stand covered with foil for 2-5 minutes.</p>
Whole Chicken (Ar 4)	0.8 - 2.4kg	Rotisserie over the metal tray	Refrigerated	<p>Whole chicken approx. 1.2kg (with skin) 2 large onions 3 tablespoon olive oil Salt</p> <ol style="list-style-type: none"> <li>1. Cover the chicken with the onion juice, salt and oil(or butter) for 3-4 hours.</li> <li>2. Pierce the chicken with the roti-bar. Note that the bar pass through the chicken completely.</li> <li>3. Tie its feet, wings and body with a cotton thread and insert the bar into the roti-holder over the metal tray.</li> <li>4. Adjust weight and press start.</li> <li>5. After cooking, remove from the oven. Stand covered with aluminium foil for 5 minutes before serving.</li> </ol>

# More or Less Cooking

In the following example I will show you how to change the preset AUTO COOK programmes for a longer or shorter cooking time.



If you find that your food is over or undercooked when using the AUTO COOK programme, you can increase or decrease cooking time by turning DIAL.

When cooking with auto and manual function, you can lengthen or shorten the cooking time at any point by turning DIAL.

There is no need to stop the cooking process.

Press **STOP/CLEAR**.



Set the required **AUTO COOK** programme.

Select weight of food.

Press **START**.


\*See **AUTO COOK** (page 21).

Turn **DIAL** clockwise.

The cooking time will increase by **10** seconds for each turning DIAL.

Turn **DIAL** counterclockwise.

The cooking time will decrease by **10** seconds for each turning DIAL.

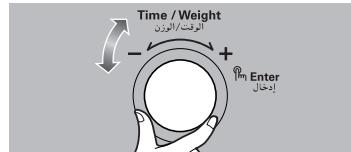

# **Rotisserie**



## Assembly



### **CAUTION**



Rotisserie is not a toy.  
Keep the Rotisserie away  
from the child.

### **1** Barbecue bars into the left plate

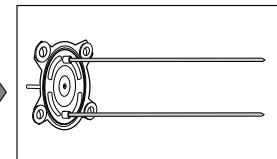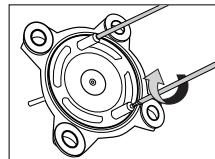


Screw the barbecue bar  
clockwise into the left plate

### **2** Assemble the right plate

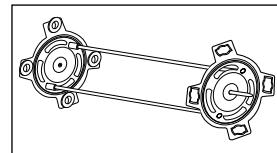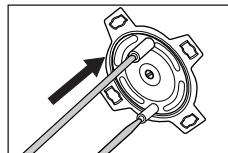


Push barbecue bars into right plate.


### **3** Assemble skewers

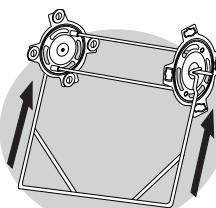


Install the handle on the  
rotisserie.

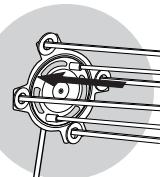

Insert the pointed edge of  
the skewer into hole on  
the left plate.

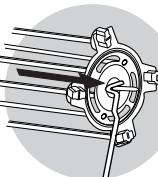

Insert the other edge  
of the skewer into a  
hole on the right plate.

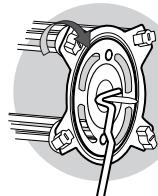

Turn it clockwise until it's  
fixed. Repeat 4 times until  
rotisserie is assembled.

# Rotisserie

## Installation & Cooking



### CAUTION

Rotisserie is not a toy.  
Keep the Rotisserie away  
from the child.

Tie chicken's feet, wings  
and body with a cotton  
thread before cooking  
whole chicken as show in  
the picture.



### Chicken



 
 


Press **Auto Roast**.

Turn **DIAL** until display shows "Ar 4".

Turn **DIAL** in order to set weight.

Prepare foods with the rotisserie.

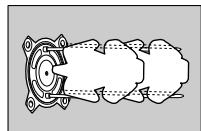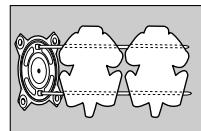

### Kebab




Press **Auto Cook**.

Turn **DIAL** until display shows "Ac 9".

Turn **DIAL** in order to set weight.

Clean the work space, before inserting the  
kebab.

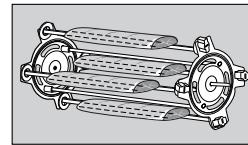

# **Rotisserie**

## **Installation & Cooking**




### **To Clean ROTISSERIE & METAL TRAY**

When cooking is completed, separate the ROTISSERIE from the food. Take care when handling both ROTISSERIE & metal tray and food stuff as it is very hot. During cooking it is normal for the ROTISSERIE & metal tray to be stained from the food. Simply clean the ROTISSERIE & metal tray with a warm soapy water and a soft cloth. If the ROTISSERIE & metal tray remain stained after washing, Utensils in hot soapy water for a few minutes.


Do not use metal scouring pads. They will scratch the surface.

Insert the shaft of right plate into the shaft of motor.

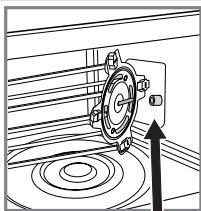

The shaft of motor

Put the shaft of left plate on the holder of rotisserie.

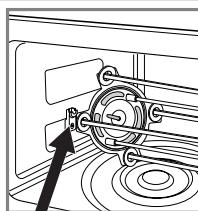

The holder of Rotisserie

Press **START**.



**After cooking hold the rotisserie bar of both side with the handle and lift up the right end slightly and pull out from the left end.**

### **NOTE:**

1. The rotisserie cooking is convenient for grilling of meat and poultry. All the surface of the food will become even brown without overturning.
2. The rotisserie cooking can be used in grill mode, convection mode and Persian Cook.
3. The rotisserie bar is used for rotisserie cooking only. After rotisserie cooking is finished remove the rotisserie bar and store with other accessories.

### **CAUTION**

- 1. DO NOT USE THE METAL TRAY AND ROTISSERIE WITH NO LOAD, IT WILL BE DAMAGED THE OVEN.**
- 2. AFTER COOKING, THE METAL TRAY WILL BECOME EXTREMELY HOT.**
3. It is recommended to remove the grease from the turntable every time before cooking. Hot grease on the turntable may cause smoke.

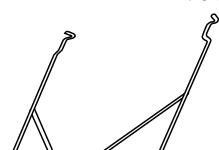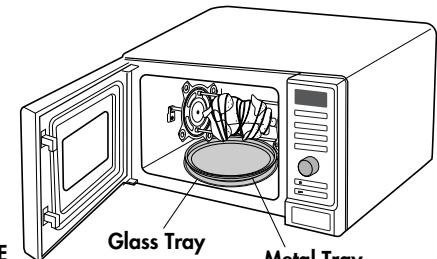

To heat or reheat successfully in the microwave, it is important to follow several guidelines. Measure the amount of food in order to determine the time needed to reheat. Arrange the food in a circular pattern for best results. Room temperature food will heat faster than refrigerated food. Canned foods should be taken out of the can and placed in a microwavable container. The food will be heated more evenly if covered with a microwavable lid or vented plastic wrap. Remove cover carefully to prevent steam burns. Use the following chart as a guide for reheating cooked food.

# Heating or Reheating Guide

Item	Cook time (at HIGH)	Special Instructions
Sliced meat 3 slices (0.5cm thick)	1~2 minutes	Place sliced meat on microwavable plate. Cover with plastic wrap and vent. • Note: Gravy or sauce helps to keep meat juicy.
Chicken pieces 1 breast 1 leg and thigh	2~3 minutes 3~3 <sup>1</sup> / <sub>2</sub> minutes	Place chicken pieces on microwavable plate. Cover with plastic wrap and vent.
Fish fillet (170~230g)	1~2 minutes	Place fish on microwavable plate. Cover with plastic wrap and vent.
Lasagne 1 serving(300g)	4~6 minutes	Place lasagne on microwavable plate. Cover with plastic wrap and vent.
Casserole 1 cup 4 cups	1 <sup>1</sup> / <sub>2</sub> ~3 minutes 4 <sup>1</sup> / <sub>2</sub> ~7 minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Casserole cream or cheese 1 cup 4 cups	1~2 <sup>1</sup> / <sub>2</sub> minutes 3 <sup>1</sup> / <sub>2</sub> ~6 minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Sloppy Joe or Barbecued beef 1 sandwich (1/2 cup meat filling) without bun	1~2 <sup>1</sup> / <sub>2</sub> minutes	Reheat filling and bun separately. COOK covered in microwavable casserole dish. Stir once. Heat bun as directed in chart below.

Item	Cook time (at HIGH)	Special Instructions
Mashed potatoes 350 g	6~7 minutes (at Medium)	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Baked beans 1 cup	1 <sup>1</sup> / <sub>2</sub> ~3 minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Ravioli or pasta in sauce 1 cup 4 cups	2 <sup>1</sup> / <sub>2</sub> ~4 minutes 7 <sup>1</sup> / <sub>2</sub> ~11 minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Rice 1 cup 4 cups	1~1 <sup>1</sup> / <sub>2</sub> minutes 3 <sup>1</sup> / <sub>2</sub> ~5 minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Sandwich roll or bun 1 roll	15~30 seconds	Wrap in paper towel and place on glass tray.
Vegetables 1 cup 4 cups	1 <sup>1</sup> / <sub>2</sub> ~2 <sup>1</sup> / <sub>2</sub> minutes 3 <sup>1</sup> / <sub>2</sub> ~5 <sup>1</sup> / <sub>2</sub> minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.
Soup 1 serving (8 oz.)	1 <sup>1</sup> / <sub>2</sub> ~2 minutes	COOK covered in microwavable casserole dish. Stir once halfway through cooking.

# Fresh Vegetable Guide

Vegetable	Amount	Cook time (at HIGH)	Instructions	Standing Time
Artichokes (230g each)	2 medium 4 medium	4 <sup>1</sup> / <sub>2</sub> ~ 7 10 ~ 12	Trim. Add 2 tsp water and 2 tsp juice. Cover.	2~3 minutes
Asparagus, Fresh, Spears	450g	2 <sup>1</sup> / <sub>2</sub> ~ 6	Add 1 cup water. Cover.	2~3 minutes
Green Beans	450g	7 ~ 11	Add 1/2 cup water in 1.5 litre casserole dish. Stir halfway through cooking.	2~3 minutes
Beets, Fresh	450g	11 ~ 16	Add 1/2 cup water in 1.5 litre covered casserole dish. Rearrange halfway through cooking.	2~3 minutes
Broccoli, Fresh, Spears	450g	5 ~ 8	Place broccoli in baking dish. Add 1/2 cup water.	2~3 minutes
Cabbage, Fresh, Chopped	450g	5 <sup>1</sup> / <sub>2</sub> -7 <sup>1</sup> / <sub>2</sub>	Add 1/2 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Carrots, Fresh, Sliced	200g	2 ~ 3	Add 1/4 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Cauliflower, Fresh, Whole	450g	5 ~ 7	Trim. Add 1/4 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Fresh, Flowerettes Celery, Fresh, Sliced	2 cups 4 cups	11 ~ 16	Slice. Add 1/2 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes

Vegetable	Amount	Cook time (at HIGH)	Instructions	Standing Time
Corn, Fresh	2 ears	4 ~ 8	Husk. Add 2 tbsp water in 1.5 litre baking dish. Cover.	2~3 minutes
Mushrooms, Fresh, Sliced	230g	1 <sup>1</sup> / <sub>2</sub> ~ 2 <sup>1</sup> / <sub>2</sub>	Place mushrooms in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Parsnips, Fresh, Sliced	450g	4 ~ 7	Add 1/2 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Peas, Green, Fresh	4 cups	6 ~ 9	Add 1/2 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Sweet Potatoes Whole Baking (170-230g each)	2 medium 4 medium	4 ~ 9 6~ 12	Pierce potatoes several times with fork. Place on 2 paper towels. Turn over halfway through cooking.	2~3 minutes
White potatoes, Whole Baking (170-230g each)	2 potatoes 4 potatoes	5 <sup>1</sup> / <sub>2</sub> ~ 7 <sup>1</sup> / <sub>2</sub> 9 <sup>1</sup> / <sub>2</sub> ~ 14	Pierce potatoes several times with fork. Place on 2 paper towels. Turn over halfway through cooking.	2~3 minutes
Spinach, Fresh, Leaf	450g	4 <sup>1</sup> / <sub>2</sub> ~ 7 <sup>1</sup> / <sub>2</sub>	Add 1/2 cup water in 2 litre covered casserole dish.	2~3 minutes
Courgette, Fresh, Sliced	450g	4 <sup>1</sup> / <sub>2</sub> ~ 7 <sup>1</sup> / <sub>2</sub>	Add 1/2 cup water in 1.5 litre covered casserole dish. Stir halfway through cooking.	2~3 minutes
Courgette, Fresh, Whole	450g	6 ~ 9	Pierce. Place on 2 paper towels. Turn courgette over and rearrange halfway through cooking.	2~3 minutes

# Grill Cooking Guide

## Directions for grilling meat on grill

- Trim excess fat from meat. Cut fat, making sure you do not cut into the lean. (This will stop the fat curling.)
- Arrange on the rack. Brush with melted butter or oil.
- Halfway through, turn the meat over.

Item	Weight	Approx. cooking time (in minutes)	Hints
Beefburgers	50g x 2 100g x 2	13-16 19-23	
Beefsteaks (2.5cm (1") thick)			Baste with oil or melted butter. Thin items should be placed on the grill rack. Turn food over after half the cooking time.
Rare	230g x 2	18-20	
Medium	230g x 2	22-24	
Well	230g x 2	26-28	
Lamb chops (2.5cm (1") thick)	230g x 2	25-32	Turn frequently.

## Directions for grilling fish and seafood

Place fish and seafood on the rack. Whole fish should be scored diagonally on both sides before grilling. Brush fish and seafood with melted butter, margarine or oil before and during cooking. This helps stop the fish drying out. Grill for times recommended in the chart. Whole fish and fish steaks should be carefully turned over halfway through grilling time. If desired thick fillets can also be turned halfway.

Item	Weight	Approx. cooking time (in minutes)	Hints
Fish fillets 1 cm (1/2") thick	230g 230g	17-21 20-24	Brush with melted butter and turn over halfway through cooking.
Fish steaks 2.5 cm (1") thick	230g	24-28	
Whole fish	225-350g each 450g	16-20 24-28	Allow extra time for thick and oily fish.
Scallops Prawns uncooked	450g 450g	16-20 16-20	Baste well during cooking.

# **Important safety instructions**

## **Read carefully and keep for future reference**

- 1 Do not attempt to tamper with, or make any adjustments or repairs to the door, control panel, safety interlock switches or any other part of the oven. It is hazardous for anyone to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy. Repairs should only be undertaken by a qualified service technician.
- 2 Do not operate the oven when empty. It is best to leave a glass of water in the oven when not in use. The water will safely absorb all microwave energy, if the oven is accidentally started.
- 3 Do not use the oven for the purpose of dehumidification. It can be the cause of serious damage of safety. (ex. Operating the microwave oven with the wet newspapers, clothes, toys, pet or portable electric devices, etc.)
- 4 Do not cook food wrapped in paper towels, unless your cook book contains instructions, for the food you are cooking.
- 5 Do not use newspaper in place of paper towels for cooking.
- 6 Do not use wooden containers. They may heat-up and char. Do not use ceramic containers which have metallic (e.g. gold or silver) inlays. Always remove metal twist ties. Metal objects in the oven may arc, which can cause serious damage.
- 7 Do not operate the oven with a kitchen towel, a napkin or any other obstruction between the door and the front edges of the oven, which may cause microwave energy leakage.
- 8 Do not use recycled paper products since they may contain impurities which may cause sparks and/or fires when used in cooking.
- 9 Do not rinse the turntable by placing it in water just after cooking. This may cause breakage or damage.
- 10 Small amounts of food require shorter cooking or heating time. If normal times are allowed they may overheat and burn.
- 11 Be certain to place the oven so the front of the door is 8 cm or more behind the edge of the surface on which it is placed, to avoid accidental tipping of the appliance.

### **⚠ WARNING**

*Please ensure cooking times are correctly set as over cooking may result in FIRE and subsequent DAMAGE to the OVEN.*

- 12 Before cooking, pierce the skin of potatoes, apples or any such fruit or vegetable.
- 13 Do not cook eggs in their shell. Pressure will build up inside the egg which will burst.
- 14 Do not attempt deep fat frying in your oven.
- 15 Remove the plastic wrapping from food before cooking or defrosting. Note though that in some cases food should be covered with plastic film, for heating or cooking.
- 16 If the oven door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified service technician.
- 17 If smoke is observed, switch off or disconnect the oven from the power supply and keep the oven door closed in order to stifle any flames.
- 18 When food is heated or cooked in disposable containers of plastic, paper or other combustible materials, check the oven frequently due to the possibility of the food container is deteriorating.
- 19 Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- 20 Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- 21 Do not operate the oven, if the door seals and adjacent parts of the microwave oven are faulty, until the oven has been repaired by a qualified service technician.
- 22 Check the utensils are suitable for use in microwave ovens before use.
- 23 Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, accessories and dishes during grill mode, convection mode and auto cook operations, unless wearing thick oven gloves, as they will become hot. Before clearing make sure they are not hot.

# ***Important safety instructions***

## **Read carefully and keep for future reference**

- 24 Only use utensils that are suitable for use in microwave ovens.
- 25 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- 26 If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- 27 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 28 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- 29 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- 30 Details for cleaning door seals, cavities and adjacent parts.
- 31 The oven should be cleaned regularly and any food deposits removed.
- 32 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 33 Only use the temperature probe recommended for this oven (for appliances having a facility to use a temperature-sensing probe).
- 34 If heating elements are provided, during use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- 35 The appliance is not intended for use by young children or infirm persons without supervision.
- 36 The microwave oven must be operated with the decorative door open.
- 37 This connection may be achieved by having the plug accessible or by incorporation a switch in the fixed wiring in accordance with the wiring rules.
- 38 Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

**⚠ WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

**⚠ WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

**⚠ WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

**⚠ WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

**⚠ WARNING:** Accessible parts may become hot during use. Young children should be kept away.

# Microwave-safe Utensils

## Never use metal or metal trimmed utensils in your microwave oven

Microwaves cannot penetrate metal. They will bounce off any metal object in the oven and cause arcing, an alarming phenomenon that resembles lightning.

Most heat resistant non metallic cooking utensils are safe for use in your microwave oven. However, some may contain materials that render them unsuitable as microwave cookware. If you have any doubts about a particular utensil, there's a simple way to find out if it can be used in your microwave oven.

Place the utensil in question next to a glass bowl filled with water in the microwave oven. Microwave at power HIGH for 1 minute. If the water heats up but the utensil remains cool to the touch, the utensil is microwave-safe. However, if the water does not change temperature but the utensil becomes warm, microwaves are being absorbed by the utensil and it is not safe for use in the microwave oven. You probably have many items on hand in your kitchen right now that can be used as cooking equipment in your microwave oven. Just read through the following checklist.

## Dinner plates

Many kinds of dinner-ware are microwave-safe. If in doubt consult the manufacturer's literature or perform the microwave test.

## Glassware

Glassware that is heat-resistant is microwave-safe. This would include all brands of oven tempered glass cookware. However, do not use delicate glassware, such as tumblers or wine glasses, as these might shatter as the food warms.

## Plastic storage containers

These can be used to hold foods that are to be quickly reheated. However, they should not be used to hold foods that will need considerable time in the oven as hot foods will eventually warp or melt plastic containers.

## Paper

Paper plates and containers are convenient and safe to use in your microwave oven, provided that the cooking time is short and foods to be cooked are low in fat and moisture. Paper towels are also very useful for wrapping foods and for lining baking trays in which greasy foods such as bacon are cooked. In general, avoid coloured paper products as the colour may run. Some recycled paper products may contain impurities which could cause arcing or fires when used in the microwave oven.

## Plastic cooking bags

Provided they are made specially for cooking, cooking bags are microwave safe. However, be sure to make a slit in the bag so that steam can escape. Never use ordinary plastic bags for cooking in your microwave oven, as they will melt and rupture.

## Plastic microwave cookware

A variety of shapes and sizes of microwave cookware are available. For the most part, you can probably use items you already have on hand rather than investing in new kitchen equipment.

## Pottery, stoneware and ceramic

Containers made of these materials are usually fine for use in your microwave oven, but they should be tested to be sure.

## CAUTION

**Some items with high lead or iron content are not suitable for cooking utensils.**

**Utensils should be checked to ensure that they are suitable for use in microwave ovens.**

# Food characteristics & Microwave cooking

## Keeping an eye on things

The recipes in the book have been formulated with great care, but your success in preparing them depends on how much attention you pay to the food as it cooks. Always watch your food while it cooks. Your microwave oven is equipped with a light that turns on automatically when the oven is in operation so that you can see inside and check the progress of your food. Directions given in recipes to elevate, stir, and the like should be thought of as the minimum steps recommended. If the food seems to be cooking unevenly, simply make the necessary adjustments you think appropriate to correct the problem.

## Factors affecting microwave cooking times

Many factors affect cooking times. The temperature of ingredients used in a recipe makes a big difference in cooking times. For example, a cake made with ice-cold butter, milk, and eggs will take considerably longer to bake than one made with ingredients that are at room temperature. All of the recipes in this book give a range of cooking times. In general, you will find that the food remains under-cooked at the lower end of the time range, and you may sometimes want to cook your food beyond the maximum time given, according to personal preference. The governing philosophy of this book is that it is best for a recipe to be conservative in giving cooking times. While overcooked food is ruined for good. Some of the recipes, particularly those for bread, cake, and custards, recommend that food be removed from the oven when they are slightly undercooked. This is not a mistake. When allowed to stand, usually covered, these foods will continue to cook outside of the oven as the heat trapped within the outer portions of the food gradually travels inward. If the food is left in the oven until it is cooked all the way through, the outer portions will become overcooked or even burnt. You will become increasingly skilful in estimating both cooking and standing times for various foods.

## Density of food

Light, porous food such as cakes and breads cook more quickly than heavy, dense foods such as roasts and casseroles. You must take care when microwaving porous food that the outer edges do not become dry and brittle.

## Height of food

The upper portion of tall food, particularly roasts, will cook more quickly than the lower portion. Therefore, it is wise to turn tall food during cooking, sometimes several times.

## Moisture content of food

Since the heat generated from microwaves tends to evaporate moisture, relatively dry food such as roasts and some vegetables should either be sprinkled with water prior to cooking or covered to retain moisture.

## Bone and fat content of food

Bones conduct heat and fat cooks more quickly than meat. Care must be taken when cooking bony or fatty cuts of meat that they do not cook unevenly and do not become overcooked.

## Quantity of food

The number of microwaves in your oven remains constant regardless of how much food is being cooked. Therefore, the more food you place in the oven, the longer the cooking time. Remember to decrease cooking times by at least one third when halving a recipe.

## Shape of food

Microwaves penetrate only about 2.cm into food, the interior portion of thick foods are cooked as the heat generated on the outside travels inward. Only the outer edge of food is cooked by microwave energy; the rest is cooked by conduction. The worst possible shape for a food that is to be microwaved is a thick square. The corners will burn long before the centre is even warm . Round thin foods and ring shaped foods cook successfully in the microwave.

## Covering

A cover traps heat and steam which causes food to cook more quickly. Use a lid or microwave cling film with a corner folded back to prevent splitting.

## Browning

Meats and poultry that are cooked fifteen minutes or longer will brown lightly in their own fat. Food that are cooked for a shorter period of time may be brushed with a browning sauce such as worcestershire sauce, soy sauce or barbecue sauce to achieve an appetizing colour. Since relatively small amounts of browning sauces are added to food the original flavour of the recipe is not altered.

## Covering with greaseproof paper

Greaseproofing effectively prevents spattering and helps food retain some heat. But because it makes a looser cover than a lid or clingfilm, it allows the food to dry out slightly.

## Arranging and spacing

Individual foods such as baked potatoes, small cakes and hors d'oeuvres will heat more evenly if placed in the oven an equal distance apart, preferably in a circular pattern. Never stack foods on top of one another.

# Food characteristics & Microwave cooking

## Stirring

Stirring is one of the most important of all microwaving techniques. In conventional cooking, food is stirred for the purpose of blending. Microwaved food, however, is stirred in order to spread and redistribute heat. Always stir from the outside towards the centre as the outside of the food heats first.

## Turning over

Large, tall foods such as roasts and whole chickens should be turned so that the top and bottom will cook evenly. It is also a good idea to turn cut up chicken and chops.

## Placing thicker portions facing outwards

Since microwaves are attracted to the outside portion of food, it makes sense to place thicker portions of meat, poultry and fish to the outer edge of the baking dish. This way, thicker portions will receive the most microwave energy and the food will cook evenly.

## Shielding

Strips of aluminium foil (which block microwaves) can be placed over the corners or edges of square and rectangular foods to prevent those portions from overcooking. Never use too much foil and make sure the foil is secured to the dish or it may cause 'arcing' in the oven.

## Elevating

Thick or dense foods can be elevated so that microwaves can be absorbed by the underside and centre of the foods.

## Piercing

Foods enclosed in a shell, skin or membrane are likely to burst in the oven unless they are pierced prior to cooking. Such foods include yolks and whites of eggs, clams and oysters and whole vegetables and fruits.

## Testing if cooked

Food cooks so quickly in a microwave oven, it is necessary to test it frequently. Some foods are left in the microwave until completely cooked, but most foods, including meats and poultry, are removed from the oven while still slightly undercooked and allowed to finish cooking during standing time. The internal temperature of foods will rise between 5°F (3°C) and 15°F (8°C) during standing time.

## Standing time

Foods are often allowed to stand for 3 to 10 minutes after being removed from the microwave oven. Usually the foods are covered during standing time to retain heat unless they are supposed to be dry in texture (some cakes and biscuits, for example). Standing allows foods to finish cooking and also helps flavour blend and develop.

## To Clean Your Oven

### 1 Keep the inside of the oven clean

Food spatters or spilled liquids stick to oven walls and between seal and door surface. It is best to wipe up spillovers with a damp cloth right away. Crumbs and spillovers will absorb microwave energy and lengthen cooking times. Use a damp cloth to wipe out crumbs that fall between the door and the frame. It is important to keep this area clean to assure a tight seal. Remove greasy spatters with a soapy cloth then rinse and dry. Do not use harsh detergent or abrasive cleaners. The glass tray can be washed by hand or in the dishwasher.

### 2 Keep the outside of the oven clean

Clean the outside of your oven with soap and water then with clean water and dry with a soft cloth or paper towel. To prevent damage to the operating parts inside the oven, the water should not be allowed to seep into the ventilation openings. To clean control panel, open the door to prevent oven from accidentally starting, and wipe a damp cloth followed immediately by a dry cloth. Press STOP/CLEAR after cleaning.

3 If steam accumulates inside or around the outside of the oven door, wipe the panels with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit.

4 The door and door seals should be kept clean. Use only warm, soapy water, rinse then dry thoroughly.

DO NOT USE ABRASIVE MATERIALS, SUCH AS CLEANING POWDERS OR STEEL AND PLASTIC PADS.

Metal parts will be easier to maintain if wiped frequently with a damp cloth.

5 Do not use any steam cleaner.

# Questions & Answers

## Q What's wrong when the oven light will not glow?

- A There may be several reasons why the oven light will not glow.  
Light bulb has blown  
Door is not closed

## Q Does microwave energy pass through the viewing screen in the door?

- A No. The holes, or ports, are made to allow light to pass; they do not let microwave energy through.

## Q Why does the beep tone sound when a pad on the Control Panel is touched?

- A The beep tone sounds to assure that the setting is being properly entered.

## Q Will the microwave oven be damaged if it operates empty?

- A Yes Never run it empty or without the glass tray.

## Q Why do eggs sometimes pop?

- A When baking, frying, or poaching eggs, the yolk may pop due to steam build up inside the yolk membrane. To prevent this, simply pierce the yolk before cooking. Never microwave eggs in the shell.

## Q Why is standing time recommended after microwave cooking is over?

- A After microwave cooking is finished, food keeps on cooking during standing time. This standing time finishes cooking evenly throughout the food. The amount of standing time depends on the density of the food.

## Q Is it possible to pop corn in a microwave oven?

- A Yes, if using one of the two methods described below  
1 Popcorn-popping utensils designed specifically for microwave cooking.  
2 Prepackaged commercial microwave popcorn that contains specific times and power outputs needed for an acceptable final product.

FOLLOW EXACT DIRECTIONS GIVEN BY EACH MANUFACTURER FOR THEIR POPCORN PRODUCT. DO NOT LEAVE THE OVEN UNATTENDED WHILE THE CORN IS BEING POPPED. IF CORN FAILS TO POP AFTER THE SUGGESTED TIMES, DISCONTINUE COOKING. OVERCOOKING COULD RESULT IN THE CORN CATCHING FIRE.

## CAUTION

NEVER USE A BROWN PAPER BAG FOR POPPING CORN. NEVER ATTEMPT TO POP LEFTOVER KERNELS.

## Q Why doesn't my oven always cook as fast as the cooking guide says?

- A Check your cooking guide again to make sure you've followed directions correctly, and to see what might cause variations in cooking time. Cooking guide times and heat settings are suggestions, chosen to help prevent overcooking, the most common problem in getting used to a microwave oven. Variations in the size, shape, weight and dimensions of the food require longer cooking time. Use your own judgement along with the cooking guide suggestions to test food condition, just as you would do with a conventional cooker.

## Q Why is the Cooling fan operated after some cooking? Is the oven wrong?

- A When the oven inside is hot, the cooling fan is automatically operating to cool down the oven for short time. This is not fault.

# Plug wiring information/ Technical Specifications

## ⚠ WARNING

### This appliance must be earthed

The wires in this mains lead are colored in accordance with the following codes  
BLUE ~ Neutral  
BROWN ~ Live  
GREEN & YELLOW ~ Earth

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is colored BLUE must be connected to the terminal which is marked with the letter N or Colored BLACK.

The wire which is colored BROWN must be connected to the terminal which is marked with the letter L or colored RED.

The wire which is colored GREEN & YELLOW or GREEN must be connected to the terminal which is marked with the letter E or  $\frac{1}{2}$ .

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard;

### Technical Specification

	MC-9287BR / MC-9287UR / MC9287BR / MC9287UR		
Power Input	220 V~ 50 Hz	230 V~ 50 Hz	240 V~ 50 Hz
Output		900 W (IEC60705 rating standard)	
Microwave Frequency		2450 MHz	
Outside Dimension	574 mm(W) X 376 mm(H) X 510 mm(D)		
Power Consumption			
Microwave	1350 watt	1350 watt	1350 watt
Grill	1150 watt	1250 watt	1350 watt
Combination	max. 2500 watt	max. 2600 watt	max. 2650 watt
Convection	1800 watt	1950 watt	2150 watt