



# LG

## Floor Standing Type Air Conditioner

### **OWNER'S MANUAL**

ENGLISH

LG

#### **IMPORTANT**

Please read through this manual. It contains valuable information about your air conditioner. This manual may help save time and money by explaining proper product maintenance and preventing improper use.

#### **PRECAUTIONS**

Pay close attention to precautions in order to prevent potential hazards and damage from misuse or improper installation. LG is not responsible for any damages caused by misuse of the product.

Prior to installation, this air-conditioning unit must be submitted for approval by the utility service which provides electricity (EN 61000-3 Norm.)

# TABLE OF CONTENTS

## 1. Safety Precautions

## 2. Operating Instructions

- a. Features and Specifications
- b. Indoor Unit Controls and Indicators
- c. Name and Function-Remote Control
- d. Air conditioner Operation

## 3. Care and Maintenance

## 4. Troubleshooting Tips Before You Call For Service



## **F**or Your Records

Write the model and serial numbers here:

**Model #** \_\_\_\_\_

**Serial #** \_\_\_\_\_

You can find them on a label on the side of each unit.

**Dealer's Name** \_\_\_\_\_

**Date Purchased** \_\_\_\_\_

## **R**ead This Manual

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.

## CAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.

**Safety  
Precautions**

**Precautions**

To prevent injury and property damage, follow these instructions.

- Incorrect operation due to ignoring instructions will cause harm or damage, the seriousness of which is indicated by the following symbols.

	<b>WARNING</b>	This symbol shows the possibility of death or serious injury.
	<b>CAUTION</b>	This symbol indicates the possibility of injury or damage to property.

	<b>Never Do This</b>
	<b>Always Do This</b>

- The following items are classified by these symbols.

**WARNING**

- **Do not install, remove and re-install the unit by yourself.**  
Improper installation will cause water leakage, electrical shock, or fire. Please consult authorized dealer or specialist for the installation work.

**CAUTION**

- The reverse cycle system of the air conditioner is based on the air cooling type heat pump which absorbs heated air from the outdoor unit and discharges it indoor. Therefore if the outdoor unit is exposed to very low temperature, specifically below 0°C, the heating capacity drops off rapidly.

OPERATING TEMPERATURE(°C)			
COOLING MODE			
INDOOR		OUTDOOR	
MAX.	MIN.	MAX.	MIN.
32°C	21°C	43°C	21°C
HEATING MODE			
INDOOR		OUTDOOR	
MAX.	MIN.	MAX.	MIN.
27°C	20°C	24°C	1°C

**WARNING**

<p> Do not damage or use an unspecified power cord.</p> <ul style="list-style-type: none"> <li>• It will cause electrical shock or fire.</li> </ul>	<p> Do not operate with wet hand.</p> <ul style="list-style-type: none"> <li>• It will cause electrical shock.</li> </ul>
<p> Do not insert anything into the air inlet/air outlet.</p> <ul style="list-style-type: none"> <li>• Since the fan rotates at high speed, this may cause an injury or damage the unit.</li> </ul>	<p> Do not expose the skin directly to cool air for long periods of time.</p> <ul style="list-style-type: none"> <li>• This could damage your health.</li> </ul>
<p> When an abnormality (smell of burning, etc) occurs, stop the air conditioner, and disconnect the power plug or turn off the circuit breaker.</p> <ul style="list-style-type: none"> <li>• If the unit continues to operate in an abnormal condition, it may cause fire, damage, etc. In this case, consult your dealer.</li> </ul>	<p> Repair or relocation should not be done by the customer.</p> <ul style="list-style-type: none"> <li>• If this is done incorrectly, it may cause a fire, electric shock, injury by dropping of the unit, water leakage, etc. Consult your dealer.</li> </ul>

## ⚠ CAUTION

- Contact the authorized Service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or infirm persons without supervision.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- If the supply flexible cord is damaged, it must be replaced by the manufacturer or the manufacturer's service agent or similarly qualified person in order to avoid hazard.

## ⚠ CAUTION

⊘ When the air filter is to be removed, do not touch the metal parts of the indoor unit.

- It may cause an injury.
- Should be disconnected from supply

⊘ Do not clean the air conditioner with water.

- Water may enter the unit and degrade the insulation. It may cause an electric shock.

⚠ Ventilate well when used together with a stove, etc.

- An oxygen shortage may occur.

⚠ When the unit is to be cleaned, switch off, and turn off the circuit breaker.

- It may cause an electric shock, burning.

⊘ Do not put a pet or house plant where it will be exposed to direct air flow.

- This could injure the pet or plant.

⊘ Do not leave on installation stand which is damaged.

- The unit may drop or fall down and cause an injury.

⊘ Do not apply an insecticide or flammable spray.

- It may cause a fire or deformation of the cabinet.

⊘ Do not put a stove, etc. where is exposed to direct air flow.

- It may affect combustion.

⊘ Do not step on the indoor/outdoor unit and do not put anything on it.

- It may cause an injury through dropping or falling down.

⊘ Do not insert your finger or stick etc. into the air inlet grille.

- It will cause an injury, electric shock by the high voltage.

⚠ When the unit is not going to be used for a long time, turn off the circuit breaker.

- If not, dirt may collect and cause a fire.

⊘ Do not open the air inlet grille during operation.

- It may cause an injury, electric shock by the high voltage.

⊘ Do not use for special purposes.

- Do not use this air conditioner to preserve precision devices, food, animal, plants, and art objects.  
It may cause deterioration of quality, etc.

 
 
⊘ Do not operate for a long time in high humidity, e.g. leaving a door or window open.

- In the cooling mode, if it is operated in a room with high humidity (80%RH or more) for a long time, water condensed in the air conditioner may drop and may wet and spoil furniture, etc.


## Features

- 1 Design for cooling & Heating
- 2 Super energy efficiency
- 3 Micom control
- 4 Whisper quiet operation
- 5 Wireless remote control
- 6 2 cooling speeds
- 7 Removable air filter
- 8 Anti-Bacteria filter
- 9 3 minutes delay circuit
- 10 Jet Cool operation
- 11 Energy saving
- 12 Auto restart
- 13 Plasma Air Purifying system (HB/ZA MODEL)
- 14 Digital Tele-Control (optional)


## Specifications

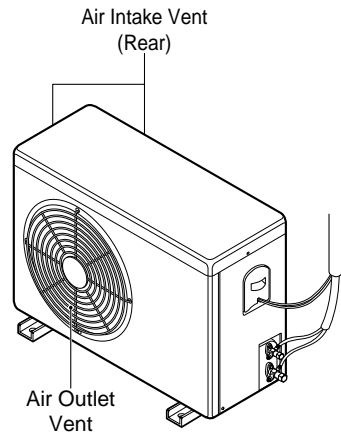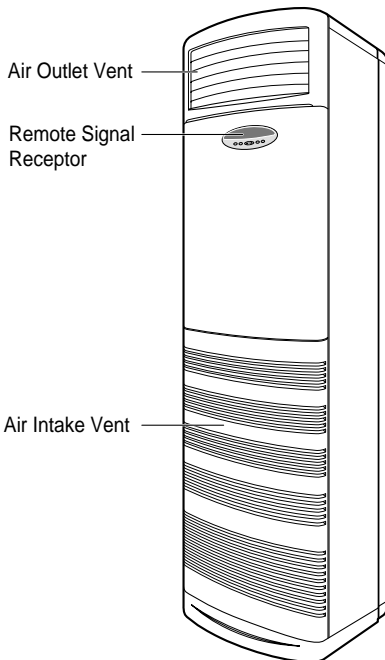

Features of the Function Setting Module

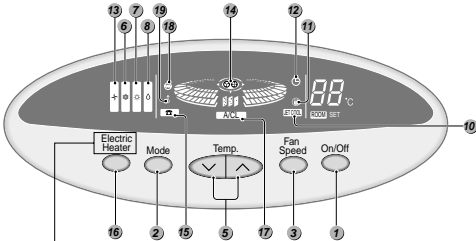 

(Heat Pump Model)


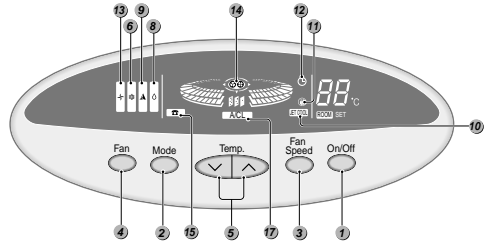 


(Cooling Model)

- 1 START/STOP BUTTON**  
Operation starts when this button is pressed and stops when the button is pressed again.
- 2 OPERATION MODE SELECTION BUTTON**  
Used to select the operation Mode.
- 3 INDOOR FAN SPEED SELECTION**  
Used to select fan speed in two steps-low, high.
- 4 FAN OPERATION BUTTON**  
Used to circulate room air without cooling.
- 5 ROOM TEMPERATURE SETTING BUTTONS**  
Used to select the room temperature.
- 6 COOLING OPERATION LAMP**
- 7 HEATING OPERATION LAMP**
- 8 SOFT DRY OPERATION LAMP**
- 9 AUTO OPERATION LAMP**
- 10 JET COOL OPERATION LAMP**
- 11 ENERGY SAVING OPERATION LAMP**
- 12 OFF TIMER OPERATION LAMP**
- 13 FAN OPERATION LAMP(CL/HL/ZL MODEL)**
- 14 AUTO AIRFLOW OPERATION LAMP(VERTICAL)**
- 15 TELE-CONTROL OPERATION LAMP (OPTIONAL)**
- 16 PLASMA AIR PURIFYING BUTTON(HB MODEL)  
ELECTRIC HEATER BUTTON(ZA/ZL MODEL)**
- 17 AIR CLEANER OPERATION LAMP (HB MODEL)**
- 18 ELECTRIC HEATER OPERATION LAMP(OPTIONAL)**
- 19 DEFROST OPERATION LAMP**

The remote control transmits the signals to the system.

## Feature of the Remote Control

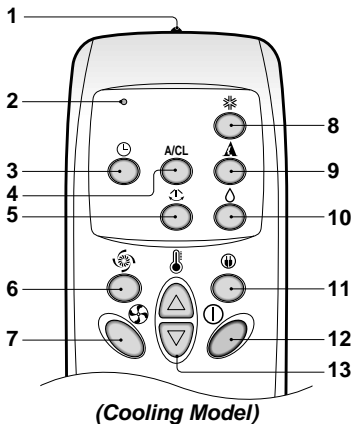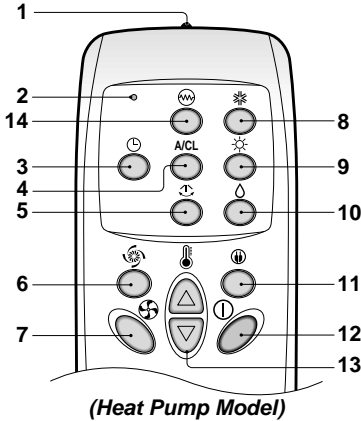  

### 1 Signal Transmitter

- Transmits the signals to the Floor Standing Type air conditioner

### 2 Operation Display of the Remote Control

### 3 Timer Set Button

- Each time the button is pressed, the mode is changed in the following process.

Timer set (1, 2, 3, 4, 5, 6, 7 hours)

If you select "0:00" the off Timer function will be canceled.

### 4 Plasma Air Purifying Button(CA/HA/ZA MODEL)

Fan Operation Button(CL/HL/ZL MODEL)

### 5 Auto Airflow Direction Control Button

- The vertical louvers swing left and right.

### 6 Jet Cool Operation Button

### 7 Indoor Fan Speed Selection Button

- To select the desired fan speed in two steps [Low, High]

### 8 Cooling ON Button

### 9 Heating Button (Heat Pump Model Only)

Auto Operation Button(Cooling Model Only)

### 10 Soft Dry Operation Button

### 11 Energy Saving Operation Button

### 12 Power ON/OFF Button

- Operation will start when this button is pressed, and stop when the button is pressed again.

### 13 Temperature Setting Buttons

### 14 Electric Heater ON/OFF Button(Optional)

## Wireless Remote Control Puts all functions at your fingertips

 
 
### Handling the remote control

- Aim at the signal receptor on the Floor Standing Type air conditioner when operating.
- The remote control signal can be received at a distance of up to about 7meters.
- Be sure that there are no obstructions between the remote control and the signal receptor.
- Do not drop or throw the remote control.
- Do not place the remote control in a location exposed to direct sunlight, or next to a heating unit, or other heat source.



## Remote Control Preparation

### How to mount on a wall

- 1 Use the screws to secure the holder to the wall or attach the holder side of indoor unit.

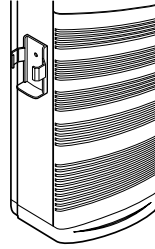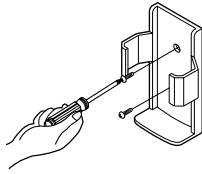


  - 2 To insert the remote control to the holder.

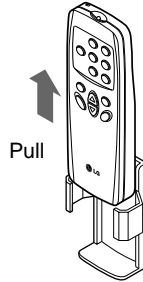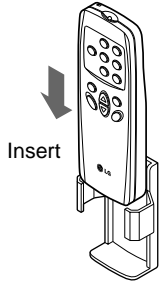

### How to insert batteries


 
- 1 Remove the cover from the back of the remote controller.
  - Slide the cover according to the arrow direction.
- 2 Insert two batteries.
  - Be sure that the (+) and (-) directions are correct.
  - Be sure that both batteries are new.
- 3 Re-attach the cover.
  - Slide the cover into back position.

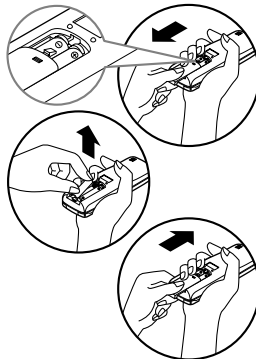

- Do not use rechargeable batteries such as batteries are different from standard dry cells in shape, dimensions, and performance.
- Change the batteries with a new one if the remote control does not work properly after using for an extended length of time.


## How to use the Operation Mode Button

  - Each time the Operation Mode Selection Button is pressed, the Operation Mode is shifted in the arrow direction.

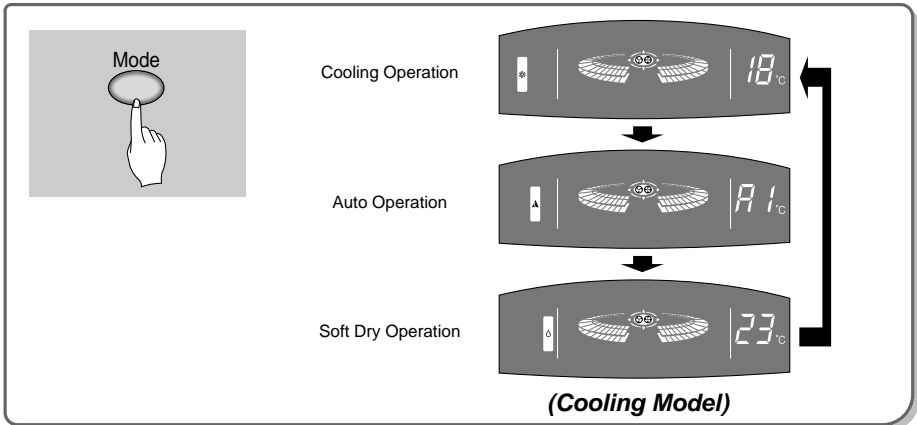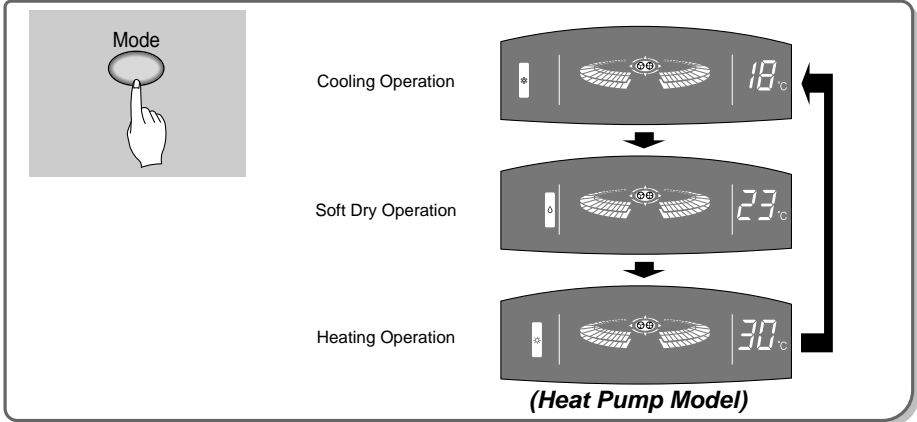

## How to use the Fan speed Button


 
- Each time the Fan speed Button is pressed, the Fan speed is shifted in the arrow direction.

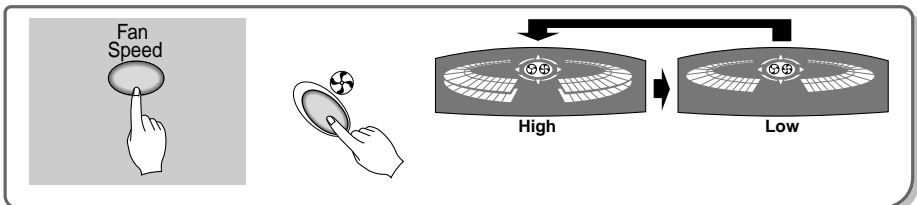

## Cooling Operation Mode



1

  Press the Start/Stop Button.

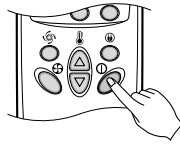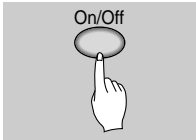



2

  Select **Cooling Operation**. Press the Operation Mode Selection Button. Press the Cooling Operation Button on the remote controller.

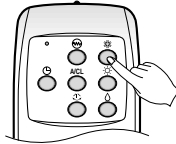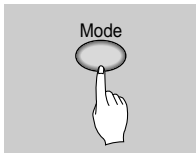


3

  Set the temperature lower than the room temperature.  
The temperature can be set within a range of 16°C~30°C by 1°C.

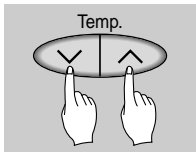



4

 When you finish the temperature setting.



5

  
Set the Fan Speed.

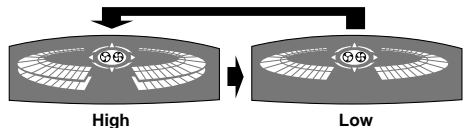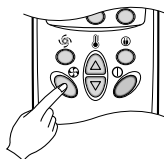



Each time the Fan Speed Button is pressed, the Fan Speed mode is shifted in the arrow direction.

## Soft Dry Operation


 
- 1** Press the Start/Stop Button.

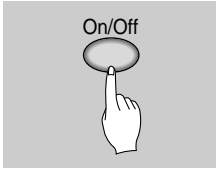

  - 2** Select Soft Dry Operation.  
Press the Operation Mode Selection Button.  
Press the **Soft Dry Operation** Button on the remote controller.

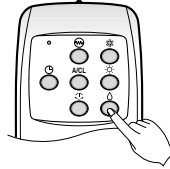
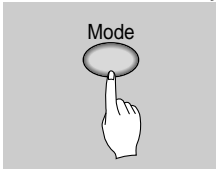


  - 3** Set the temperature lower than the room temperature.  
The temperature can be set within a range of 16°C~30°C by 1°C.

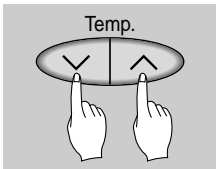

### During soft Dry Operation

 
 
- The indoor fan speed is automatically set to low and can be set fan speed.

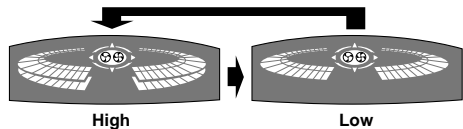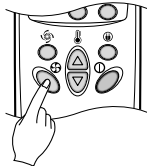

## Jet Cool Operation



1

  Press the Start/Stop Button.

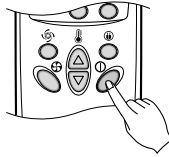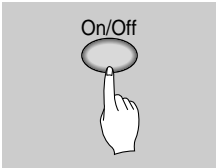



2

  Press the **Jet Cool** button to operate the speed cooling mode and the unit will operate in super high fan speed on cooling mode.

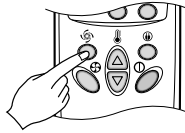

3

  To cancel the **Jet Cool** mode, press the **Jet Cool** button again or the fan speed button or the room temperature setting button and the unit will operate in high fan speed on cooling mode.

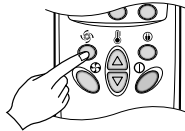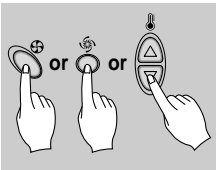


**NOTE:**



- During the JET COOL function at any moment, the A/C starts to blow the cool air at extremely high speed setting the room temp. automatically to 18°C. It is especially used to cool the room temp. in the shortest time in a hot summer.  
In heat pump mode or neuro fuzzy mode however, the JET COOL function is not available.
- In order to return to the normal cooling mode from the JET COOL mode, you just press either the operation mode selection button, airflow volume selection or temp. setting button or the JET COOL button again.

## Heating Operation Mode(Heat Pump Model Only)


 
**1** Press the Start/Stop Button.

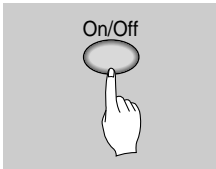

  **2** Select heating Operation.  
Press the Operation Mode Selection Button.  
Press the **Heating Operation** Button on the remote controller.

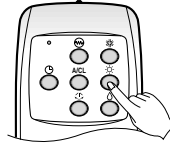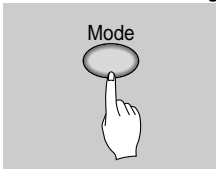

  **3** Set the temperature lower than the room temperature.  
The temperature can be set within a range of 16°C~30°C by 1°C.

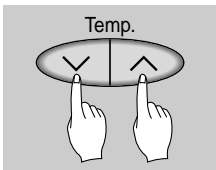

**4** Set the Fan Speed.




\* Each time the Button is pressed, the Fan Speed mode is shifted.

## Electric Heater Operation Mode(Optional)

 1

Press the Start/Stop Button.



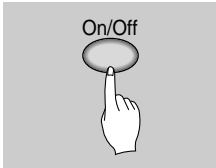


2

Select heating + E/heater Operation.

Press the Operation Mode Selection Button.

   
Press the **Heating Operation** Button on the remote controller.(When the unit operates in heating mode.)

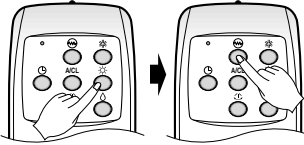

3

Set the temperature lower than the room temperature.

 The temperature can be set within a range of 16°C~30°C by 1°C.

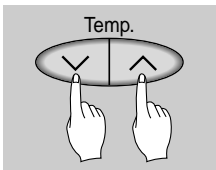

To raise the temperature

To lower the temperature



4

Set the Fan Speed.




\* Each time the Button is pressed, the Fan Speed mode is shifted.

## Auto Operation Mode(Cooling Model Only)


 
1

Press the Start/Stop Button.

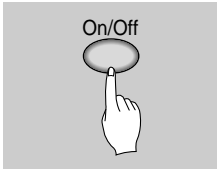



2

  Select Auto Operation.  
Press the Operation Mode Selection Button.  
Press Auto Operation Button on the remote controller.

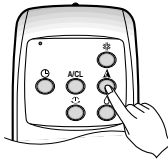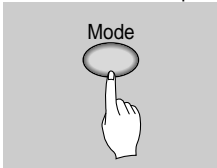

3

  Set the temperature upper than the room temperature.  
The temperature can be set within a range of -2~2 by 1 level.

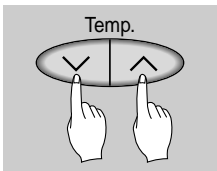

(This indication will be shifted to the initial Auto Mode Display state after 4 seconds.)



To raise the temperature (When you feel too cool or cold)

To lower the temperature (When you feel too warm or hot)

During Auto Operation


### During Auto Operation

 - It is impossible to switch the indoor fan speed because of being already set to the best condition by fuzzy rule.

## Energy Saving Mode(Cooling Operation Only)

1


Press the Start/Stop Button.

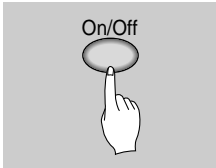

2

Select Energy Saving mode.

 You can select this function during the operation of Cooling/Auto/Soft Dry.

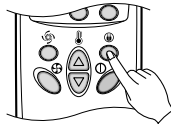

3

To cancel the Energy Saving mode, press the Energy Saving button again and the unit will operate on Cooling/Auto/Soft Dry mode.




**Auto restart**

### **Auto restart**


In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.

## Fan Operation Mode (CL/HL/ZL MODEL)


**1** Press the Start/Stop Button.

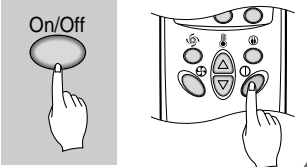

**2** Press Fan Operation Button.

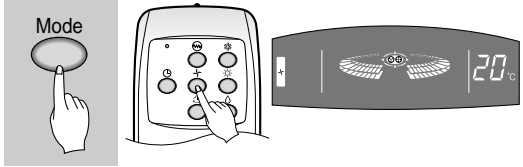


**3** Set the Fan Speed.

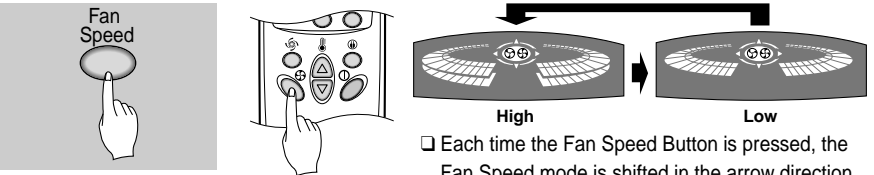

□ Each time the Fan Speed Button is pressed, the Fan Speed mode is shifted in the arrow direction.


## Airflow Direction Procedure

**1** Press the Start/Stop Button.

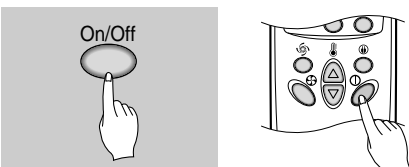

(Operation will start when the button is pressed, and stop when the button is pressed again.)

**2** Press the Auto Swing Button and then louvers will swing left and right. Press the Airflow Direction Control Button again to set the Vertical louver at the desired airflow direction.

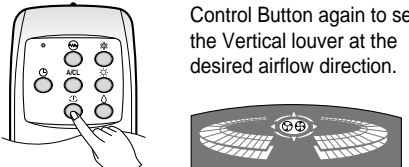

The vertical louver swing left and right.

### Note

Always use the remote control to adjust the right/left airflow direction, manually moving the vertical airflow direction louver by hand could change the air conditioner.

### Vertical Airflow Direction Control

Adjust the vertical airflow direction manually by moving the horizontal louvers with hand.

## Plasma Air Purifying Operation Procedure (HB/ZA MODEL)

### 1 Air Purifying Operation only

1 Press the Plasma Air Purifying Operation Start/Stop Button.

 


(HB MODEL ONLY)



(Operation will start when the button is pressed, and stop when the button is pressed again.)

2 Select Fan speed.  
The display shows low fan speed at the initial condition.

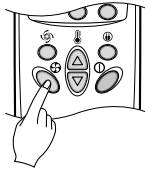

High



Low



- You can operate the Plasma Air Purifying under the unit operation of cooling, heating, soft dry or Auto mode.


### 2 Air Purifying Operation with Cooling or any other Operation.

 1. Press the Start/Stop Button.
2. Select the desired Operation Mode.
3. Press the Plasma Air Purifying Operation ON/OFF Button.
4. Set the fan speed.

**OFF Timer Setting Procedure(OFF TIMER Setting, or CANCEL)**



**1**

Press the Start/Stop Button.

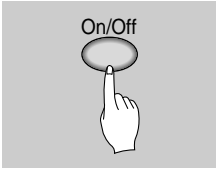

**2**

  Press the Timer Button.

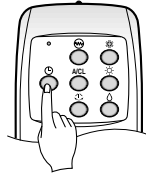


• If you press the button, the selected off timer is displayed as follows;

1 → 2 → 3 → 4 → 5 → 6 → 7 → 0

• If you select '0', the Off Timer function will be cancelled.

**3**

 When you finish the Off Timer setting, the Timer indicator lights off.

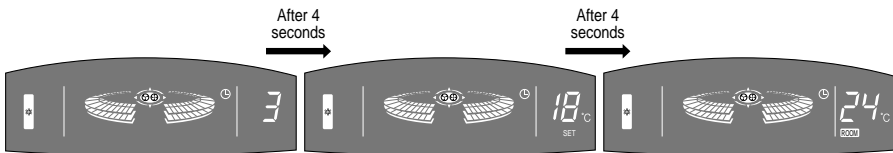


**4**

During off-timer operation if you press the Timer Button, the rest time will be displayed.

## Digital tele-Control function(Optional)



 On/Off function is selectable by phone-call.

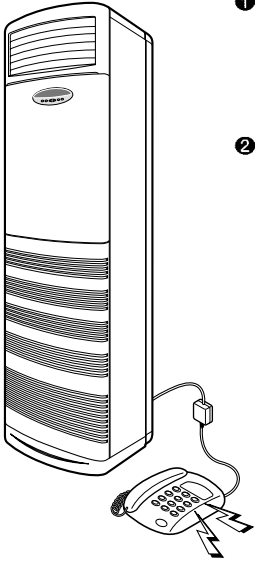

- 1 Please press the phone number connected to the product.
  - After buzzer rings 5 times, remote control is available.
  - On operation mode, buzzer beeps twice.
  - On stop mode, it beeps once.

- 2 After listening to beep sound, input password.

If you want to turn it 'ON'.

- After buzzing once, input password and 'ON(7,8)', then works after buzzing twice.

If you want to turn it 'OFF'.

- After buzzing twice, input password and 'OFF(7,9)' key, then stops after buzzing once.

※If the input is abnormal or not correct, the buzzer sounds four times.

### Reference


- Executing first signal between auto-response of the phone and digital tele-Control.
- At least 5 times ringing is necessary to perform digital tele-Control.
- If pick you up the phone before ringing 5 times, digital tele-Control is canceled.
- After ringing 5 times, press the button within 10 seconds, otherwise this function is canceled.
- Signal input is composed of 5 digits.

### A A B B

operation ON/OFF signal ON:78, Off:79  
password (00-99)

This function will not work from the EPABX system, or the pulse phone. Only works with TONE phone.

※ Tele-control operation lamp (  ) on display panel.



If it operates by tele-control, displays 'tele-control operation lamp (  )' on display panel.

If it controlled by main controller or remote controller on digital tele-Control function, then turn off the tele-control operation lamp on display panel.

## Digital tele-Control function(Optional)

1

Identification of password.



 

- Press  and  buttons for 3 seconds simultaneously,






then displays current password.(initial password is set 00)


2


Change of password.

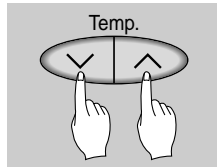 - Press  and  buttons for 3 seconds simultaneously,  
Change your password by pressing (  or  ) button.



 
- Press  and  buttons for 3 seconds simultaneously,  
Change your password.

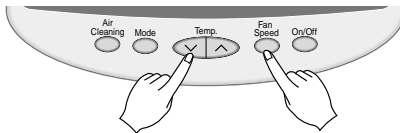

- ※After changing password, if you don't press  and  buttons for 3 seconds simultaneously, changed password is not available and is kept the previous password.

## Child Lock Operation Procedure

 
- 1** Press the fan speed and high temperature setting buttons simultaneously for 3 seconds. The unit will respond with beep.

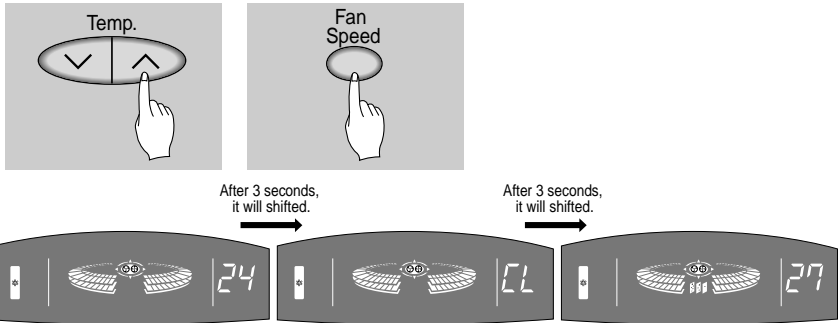

- 2** During Child Lock Operation

- ❶ Whenever you Touch any key on Touch panel, it will immediately display “CL”, which means Touch panel is Locked.
- ❷ All the key on the indoor unit Touch panel will not work.
- ❸ But the key on the remote controller will work.

 - 3** For releasing child lock operations  
Press the fan speed and high temperature setting buttons simultaneously for 3 seconds again. The unit will respond with beep, Child Lock Operation will removed.

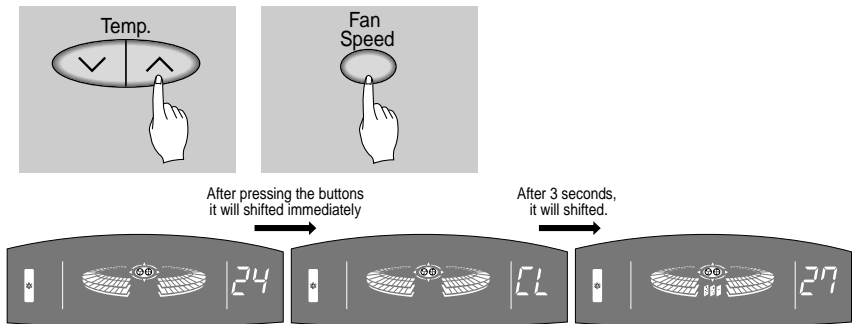

**CAUTION:** Before performing any maintenance, turn off the main power to the system.

**During the season**

**Cleaning of the air filters.**  
Recommended about once every two weeks

- 1 Remove the Air Filter.  
Take hold of the tab and pull slightly forward to remove the filter.
- 2 Clean.
  - To remove the dust adhering to the filters, either use a vacuum cleaner, or wash them in water and dry in the shade.
  - Re-insert the filter to the original position.

**Cleaning of the air cleaner.**  
Recommended about once every three months

- 1 Remove the Air Cleaner.  
Take hold of the tab and pull slightly forward to remove the air cleaner.
- 2 Clean.
  - Dip the air cleaner into the water mixed with detergent, for 20-30 minutes, and dry in the shade.
  - Re-insert the air cleaner to the original position.

**Cleaning of the air conditioner**

- Don't wash with water.
- Wipe with a soft dry cloth.

**Never use any of the followings.**

- Water hotter than 40°C.  
Could cause deformation and/or discoloration.
- Volatile substances.  
Could damage the surfaces of the air conditioner.

**When the air conditioner is not going to be used for a long time.**

**At the end of the season**

- 1 Operate the air conditioner at the following settings for 2 to 3 hours.
  - Type of operation : Cooling.
  - Temperature setting : 30°C.
 This will dry out the internal mechanisms.
- 2 Remove the batteries from the Remote Control.
- 3 Turn off the circuit breaker.

⚠ **CAUTION** ⚠

**Turn off the circuit breaker when the air conditioner is not going to be used for a long time.**  
Dirt may collect and may cause a fire.

**At the start of the season**

- 1 Clean the air filters, re-insert, then operate the air conditioner.
- 2 Be sure that nothing obstructs the air outlet and intake vents.

**Operation Tips**

<p>⚠ Do not overcool the room.</p> <p>This is not good for your health and wastes electricity.</p>	<p>⚠ Keep blinds or curtains closed.</p> <p>Do not let direct sunshine enter the room when the air conditioner is in operation.</p>	<p>⚠ Keep the room temperature uniform.</p> <p>Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.</p>
<p>⚠ Make sure that the doors and windows are shut tight.</p> <p>Avoid opening doors and windows as much as possible to keep the cool air in the room.</p>	<p>⚠ Clean the air filter regularly.</p> <p>Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.</p>	<p>⚠ Ventilate the room occasionally.</p> <p>Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.</p>

Check the following points before requesting repairs or service.... If the fault persists, please contact your dealer or service center.

Case	Explanation	See page
Does not operate.	<ul style="list-style-type: none"> <li>• Have you made a mistake in timer operation?</li> </ul>	
	<ul style="list-style-type: none"> <li>• Has the fuse blown or has the circuit breaker been tripped?</li> <li>• Is the power Switch at Off?</li> <li>• Is the unit at the starting of Heating Operation? If yes, Hot-start is activating.</li> <li>• Is the unit in the Deicing? If yes, wait for finishing the Deicing.</li> </ul>	-
The room has a peculiar odor.	<ul style="list-style-type: none"> <li>• Check that this is not a damp smell exuded by the walls, carpet, furniture, or cloth items in the room.</li> </ul>	-
It seems that condensation is leaking from the air conditioner.	<ul style="list-style-type: none"> <li>• Condensation occurs when the airflow from the air conditioner cools the warm room air.</li> </ul>	-
Air conditioner does not operate for about 3 minutes when restarted.	<ul style="list-style-type: none"> <li>• This is the Protection device of the air conditioner .</li> <li>• Wait about three minutes and operation will begin.</li> <li>• If the airflow begins before its temperature become warm, it will cause an undesired cooling effect. In order to prevent this, the airflow will not begin until it is sufficiently warm.</li> </ul>	
Does not cool or heat effectively.	<ul style="list-style-type: none"> <li>• Is the air filter dirty? See air filter cleaning instructions.</li> </ul>	23
	<ul style="list-style-type: none"> <li>• The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.</li> </ul>	-
	<ul style="list-style-type: none"> <li>• Has the temperature been set incorrectly?</li> <li>• Are the indoor unit's air inlet or outlet vents obstructed?</li> </ul>	-
The air conditioner operation is noisy.	<ul style="list-style-type: none"> <li>• For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit.</li> <li>• For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit.</li> </ul>	-
Remote controller display is faint, or no display at all.	<ul style="list-style-type: none"> <li>• Are the batteries depleted?</li> <li>• Are the batteries inserted in the opposite (+) and (-) directions?</li> </ul>	8

**NOTE**

**WATER RESISTANT:** The outdoor side of this appliance is WATER RESISTANT.

The indoor side is not water resistant and should not be exposed to excess water.

# MEMO

ENGLISH

A series of horizontal dotted lines for writing.



**LG Electronics Inc.**