



Washing Machine

OWNER'S MANUAL

MODELS : WF-L700TC / WF-L701TC

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model name and serial number of the set.
Quote this information to your dealer when you require service.

P roduct Features



Washer doesn't operate while the lid is open. If the lid is open during the wash, rinse or spin cycles, the operation stops for safety.

Fuzzy logic control

- A built-in load sensor automatically detects the laundry load and a microprocessor optimizes washing conditions such as ideal water level and washing time.



- Advanced technology is built into the Electronic Control System which ensures the best washing result.

Turbo drum washing (option)

- When "Punch + 3" washing wings turn, the washing tub turns in the opposite direction. This makes the both sides current of water which improve wash-performance by rubbing clothes strongly.



3 Step washing

- 3 step washing makes the best washing performance with low tangling.



Rubbing



*Rubbing and
Shaking*



*Shaking and
Disentangling*

ATTENTION : Be sure to remove the unit from the carton base, otherwise the machine will not be able to operate properly.

C ontents

READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your washer properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your washer. You will find many answers to common problems in the Troubleshooting section. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.

Introduction	Safety Information	4
	Identification of Parts	5
	Function Information	6
Before Starting to Wash	Preparation Before Washing	7
	Use of Water, Detergent, Bleach and Softener	8
	Special Guide for Stain Removal	11
	Function of each Button	12
Washing Programs	Fuzzy Wash (Normal Wash)	14
	Jean Wash	14
	Wool Wash	14
	Speedy Soak Wash	14
	Economy Wash	14
Additional Function Options	Delay Start (Reservation) Wash	16
	Option Washing	17
	Other Useful Functions	18
Installation	Placing and Leveling	19
	Connecting Water Supply Hose	20
	Connecting Drain Hose	23
Care and Maintenance	Grounding Method	24
	Cleaning and Maintenance	25
Troubleshooting	Common washing problems	27
	Troubleshooting	28
Terms of Warranty	Terms of Warranty	29
Specification	Specification	30

Safety Information



WARNING!

Read and follow this safety information carefully.


For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

Save these instructions.

WATER HEATER SAFETY	Under certain conditions hydrogen gas may be produced in a water heater that has not been used for two weeks or more. Hydrogen gas can be explosive under these circumstances. If the hot water has not been used for two weeks or more, prevent the possibility of damage or injury by turning on all hot water faucets and allowing them to run for several minutes. Do this before using any electrical appliance which is connected to the hot water system. This simple procedure will allow any built-up hydrogen gas to escape. Since the gas is flammable, do not smoke or use an open flame or appliance during this process.
PROPER INSTALLATION	- The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor. - Install or store where it will not be exposed to temperatures below freezing or exposed to the weather. - Properly ground washer to conform with all governing codes and ordinances. Follow details in Installation Instructions. - Must be positioned so that the plug is accessible.
YOUR LAUNDRY AREA	- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc. - Close supervision is necessary if this appliance is used by or near children. Do not allow children to play on, with, or inside this or any other appliance.
WHEN USING THE WASHER	- Use this appliance only for its intended purpose as described in this Owner's Manual. - Never reach into washer while it is moving. Wait until the machine has completely stopped before opening the lid. - Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover. Mixing different chemicals can produce a toxic gas which may cause death. - Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, dry-cleaning solvents, kerosene, etc.) which may ignite or explode. Do not add these substances to the wash water. Do not use or place these substances around your washer or dryer during operation. - The laundry process can reduce the flame retardancy of fabrics. To avoid such a result, carefully follow the garment manufacturer's wash and care instructions. - To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning. NOTE: Pressing Power button to turn off does NOT disconnect the appliance from the power supply. - Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
WHEN NOT IN USE	- Turn off water faucets to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they may need replacement after 5 years. - Before discarding a washer, or removing it from service, remove the washer lid to prevent children from hiding inside. - Do not attempt to repair or replace any part of this appliance unless specifically recommended in this Owner's Manual, or in published user-repair instructions that you understand and have the skills to carry out. - Do not tamper with controls.


Identification of Parts

Body

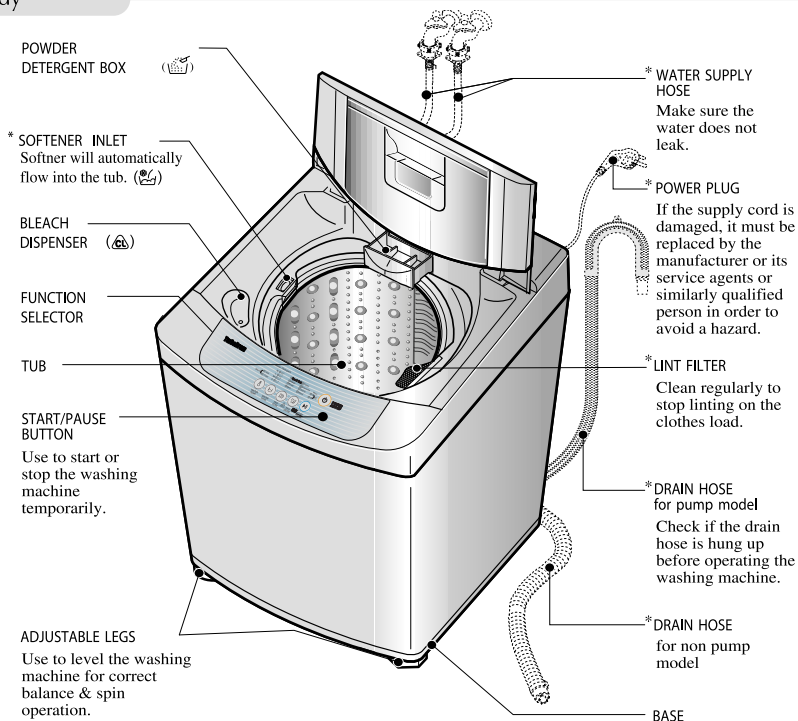

Accessories

 Water supply hoses



or

 


1 Each for COLD and
HOT water

Drain hose




or



Anti-rat cover (option)



 or



Note

* Part can be different according to the model.

Function Information

Our machine provides various washing methods which suits various conditions and types of laundry.

Different types of laundry washing

Fuzzy(Normal) Wash

Use this Program for everyday washing e.g. sheets, towels, T-shirts. *(refer to page14)*

Jean Wash

Use this Program for heavily soiled durable garments e.g. overalls, jeans.

Thick and heavy clothes or those which are excessively dirty like jeans or working uniforms can be washed.

(refer to page14)

Wool Wash

Delicate clothes (lingerie, wool, etc.) which may be easily damaged can be washed. *(refer to page14)*

The fibers of machine washable woolens have been specifically modified to prevent felting when they are machine washed.

Most handknitted garments are not made of machine washable wool and we recommend that you hand wash them

- Before washing your woolens check the care label for the washing instructions.
- When washing woolens use a mild detergent recommended for washing wool.
- Hand washed woolens may be spun in a washing machine to reduce the time they take to dry.
- To dry woolens lay down them flat on a towel and pat into shape. Dry woolens out of direct sunlight. (The heat and tumble action of a dryer may cause shrinkage or felting of woolen garments.)

Some wool underlays and sheepskin products can be washed in a washing machine but may cause pump blockages. (Ensure that the whole article is suitable for machine washing and not just the backing material.) You may wish to handwash these articles and place them in the machine to spin dry.

Washing according to the condition of laundry

Economy Wash

Economy wash can be selected to wash lightly soiled clothes of less than 2.0 kg in a short time.

(refer to page14)

Speedy Soak Wash

Speedy Soak Wash is designed to maximize washing performance and can be selected to wash heavily soiled laundry with Fuzzy or Jean Program. *(refer to page14)*

Other washing method

Delay start Wash

Delay start Wash is used to delay the finishing time of the operation. *(refer to page16)*

The number of hours to be delayed can be set by the user accordingly.

Option Wash

Spin, Rinse/Spin, Rinse, Wash/Rinse, and Wash only options can be selected. *(refer to page17)*

Preparation Before Washing

Care Labels

- * Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.



Sort clothes into loads that can be washed with the same wash cycle, water temperature and spin speed.

Sorting

To get the best results, different fabrics need to be washed in different ways.

- **SOIL** (Heavy, Normal, Light) Separate clothes according to the type and amount of soil.
- **COLOR** (Whites, Lights, Darks) Separate white fabrics from colored fabrics.
- **LINT** (Lint producers, Collectors) Separate lint producers and lint collectors.



Lint Producers

Terry cloth, Chenile, Towels, Nappies, Diapers

Lint Collectors

Synthetics, Corduroy, Permanent Press, Socks

Check before Loading

- **Check all pockets to make sure that they are empty.** Things such as nails, hairclips, matches, pens, coins, and keys can damage both your washer and your clothes.
- **Mend any torn garments or loose buttons.** Tears or holes may become larger during washing.
- Remove belts, underwires, etc. to prevent damage to the machine or your clothes.
- **Pretreat any dirt and stains.**
- Make sure the clothes are washable in water.
- Check the washing instructions.
- Remove tissue in pockets.



Pretreatment on stains or heavy soil

- Pretreat shirt collars and cuffs with a pre-wash product or liquid detergent when placing them in the washer. Before washing treat special stains with bar soaps, liquid detergent or a paste of water and granular detergent.
- Use a pretreat soil and stain remover. Treat stains AS SOON AS POSSIBLE. The longer they are left the harder they are to remove.

(For more detail refer to page11)

Loading

Do not wash fabrics containing flammable materials (waxes, cleaning fluids, etc.).

Load Size

The water level should just cover the clothes. Adjust the load size accordingly. Loosely load clothes no higher than the top row of holes in the washer tub. To add items after washer has started, press Start button and submerge additional items. Close the lid and press Start button again to restart.

Light and Large-sized clothing

Clothes like dresses and woollens are light weight, large and float easily. Use a nylon net and wash them in a small amount of water. If the laundry floats during the wash cycle, it may become damaged. Use dissolved detergent to prevent the detergent from clumping.

Long laundry items

Use nylon nets for long, delicate items. For laundry with long strings or long length, a net will prevent tangling during washing. **Fasten zippers, hook, and strings** to make sure that these items don't snag on other clothes.

※ Nylon net is not supplied by LG.



⚠ WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.


No washer can completely remove oil. Do not dry anything that has ever had any type of oil on it (including cooking oils). Doing so can result in death, explosion, or fire.

Use of Water, Detergent, Bleach and Softener

Using Water

Amount of Water Level

- This machine detects the quantity of laundry automatically, then sets the water level and proper amount of detergent.
- When you select a wash program, the water level and amount of detergent (to be used) will be shown on the control panel.
- The following table shows the amount of water.
- When the water level is automatically detected, it may differ depending on the quantity of laundry even though the same water level is indicated on the control panel.
- The amount of a cup in the diagram is about 40g for concentrated detergent.

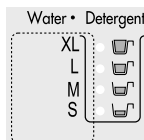

Water temperature

- The machine sets the appropriate temperature automatically according to the wash program .
- You can change the water temperature by pressing the **WATER TEMP.** button. (*refer to page 12*)
- The temperature of the water impacts the effectiveness of all laundry additives and therefore, the cleaning results. We recommend temperatures of:
 - HOT 49~60°C...(120-140°F) White items, diapers, underclothing and heavily soiled, colorfast items.
 - WARM 29~40°C...(85-105°F) Most items
 - COLD* 18~24°C...(65-75°F) Only very bright colors with light soil.
- When washing in cold water additional steps may be needed:
 - Adjust detergent amount and pre-dissolve detergent in warm water
 - Pretreat spots and stains
 - Soak heavily soiled items
 - Use appropriate bleach

* Temperature below 18°C...(65°F) will not activate laundry additives and may cause lint, residue, poor cleaning, etc. In addition, detergent manufacturers and care labels define cold water as 26~29°C...(80-85°F). If the temperature of the water in the tub is too cold for your hands, the detergent will not activate and clean effectively.

Attention

If iron is present in the water the clothes may become an all-over yellow or they may be stained with brown or orange spots or streaks. Iron is not always visible. Installation of water softener or an iron filter may be necessary for severe cases.

Using Detergent

Detergent

Follow the detergent package directions. Using too little detergent is a common cause of laundry problems. Use more detergent if you have hard water, large loads, greasy or oily soils or lower water temperature.

Choosing the right detergent

We recommend the use of domestic detergent, (powder, liquid or concentrated). Soap flakes or granulated soap powders should not be used in your washing machine. When washing woolens remember to use detergent suitable for washing woolens.

Using Detergent

How much detergent

When you select a wash program the water level and the amount of detergent (to be used) will be shown on the control panel. The amount of a cup in the diagram is about 40g for concentrated detergent.

The correct amount of detergent will vary depending on the amount of soil in your clothes (Jeans and work clothes may need more detergent, while bath towels usually need less.).

For liquid and concentrated detergents, follow the recommendations of the detergent manufacturer.

Note: To check you are using the correct amount of detergent, lift the lid of your machine about half-way through the wash. There should be a thin layer of foam over the surface of the water. Lots of foam may look good, but it does not contribute to cleaning your clothes. No foam means not enough detergent has been used; soil and lint can settle back on the clothes or the washing machine.

If excess detergent is used, the rinse will not be as clean and efficient. Also, it could cause environmental pollution, so use it accordingly.

Adding the detergent

Open the detergent dispenser and deposit the appropriate amount of detergent

where you deposit the detergent

Powder Detergent dispenser.

Some detergents **MUST** be fully dissolved before adding to your machine to get the best wash results.

Check the instructions on the detergent packet.

If you use powdered detergent it is essential that the required amount be fully dissolved in very hot water before being added to warm or hot water for the actual wash.

Pre-dissolving detergent in warm water when washing in cold water can improve its performance.

Powder Detergent Box
()

Where you
deposit the
detergent



Using Liquid Bleach

- Check clothing care label for special instructions and separate the laundry to be bleached
- Dilute liquid chlorine bleach.
- Measure the recommended amount of liquid bleach carefully following instructions on the bottle.
- Before starting the washer, pour measured amount of bleach directly into bleach dispenser. Avoid splashing or overfilling. Powdered bleach should be mixed with water before pouring.

Bleach dispenser
()



Attention


- Never pour undiluted liquid bleach directly onto clothes or into the wash basket.
This may cause change of color or damage the laundry.
- Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover. Mixing can reduce a toxic gas which may cause death.
- Do not pour powdered bleach into bleach dispenser.

Use of Water, Detergent, Bleach and Softener

Using Fabric Softener

- Dilute fabric softener with water.
Undiluted fabric softener may result in spots that look like oil stains.
- Measure and add the recommended amount of fabric softener into the compartment marked with this symbol (☼).
Follow manufacturer's direction.

- ☞ Fabric softener is automatically dispensed in the final rinse with indication beep.
- ☞ If you want extra rinse, **you must add fabric softener manually** when indication beep rings in the final rinse.
This maximize the fabric softener function.

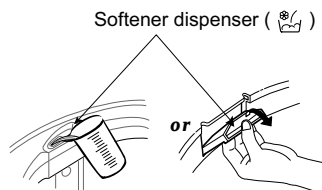

- Do not overfill. The dispenser hold max 35mL.
Never add more than 35mL.
Overfilling can cause early dispensing of the fabric softener which could result in stained clothes. A cup with a pouring spout will help you avoid spilling.
- The effect of adding fabric softener may vary according to its viscosity. The stickier fabric softener makes its effect the lower. For a sticky fabric softener it is recommended that it be diluted with water, then be manually put during the time when the washer beeps several times before the final rinse. This function informing correct time to dispense manually is optionally applied to some models. Please keep it in mind that fabric softener has to be diluted with water before dispensed and never poured directly on clothes.

Attention

- Do not mix with detergent or bleach.
- Never pour fabric softener directly on clothes. It may stain them.
- Do not stop the washer during the first spin for timely dispensing.
- Option washing is not designed to be used with fabric softener dispenser.

Scrud(Waxy Build up)

Scrud is the name given to the waxy build-up that can occur within any washer when the fabric softener comes into contact with detergent. This build-up is not brought about by a fault in the machine.

If scrud is allowed to build-up in the machine it can result in stains on your clothes or an unpleasant smell in your washer.

If you wish to use fabric softener we recommend

- Using fabric softener sparingly.
- When filling the dispenser, do not splash or overfill.
- Clean dispenser as soon as the cycle is finished.
- Clean your machine regularly. (*refer to page 26*)
- Cold water washing increases the chance of this build-up occurring. We recommend a regular warm or hot wash e.g. every 5th wash should be at least a warm one.
- Fabric softener of thinner consistency is less likely to leave residue on the dispenser and contribute to a build-up.

Special Guide for Stain Removal

⚠ WARNING

- Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acid or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.
- To reduce the risk of fire or serious injury to persons or property, comply with the basic warnings listed below:
 - Read and comply with all instructions on stain removal products.
 - Keep stain removal products in their original labeled containers and out of children's reach.
 - Thoroughly wash any utensil used.
 - Do not combine stain removal products, especially ammonia and chlorine bleach. Dangerous fumes may result.
 - Never wash items which have been previously cleaned in, washed in, soaked in or spotted with gasoline, dry cleaning solvents or other flammable or explosive substances because they give off vapors that could ignite or explode.
 - Never use highly flammable solvents, such as gasoline, inside the home. Vapors can explode on contact with flames or sparks.

For successful stain removal:

- Remove stains promptly.
- Determine the kind of stain, then follow the recommended treatment in the stain removal chart below.
- To pretreat stains, use a prewash product, liquid detergent, or a paste made from granular detergent and water.
- Use cold water on unknown stains because hot water can set stains.
- Check care label instructions for treatments to avoid on specific fabrics.
- Check for colorfastness by testing stain remover on an inside seam.
- Rinse and wash items after stain removal.



Follow fabric care label instructions

Stain Removal

STAIN	TREATMENT
Adhesive tape, chewing gum, rubber cement	Apply ice. Scrape off excess. Place stain face down on paper towels. Saturate with prewash stain remover or nonflammable dry cleaning fluid.
Baby formula, dairy products, egg	Use product containing enzymes to pretreat or soak stains.
Beverages (coffee, tea, soda, juice, alcoholic beverages)	Pretreat stain. Wash using cold water and bleach safe for fabric.
Blood	Rinse with cold water. Rub with bar soap. Or pretreat or soak with product containing enzymes. Wash using bleach safe for fabric.
Candle wax, crayon	Scrape off surface wax. Place stain face down between paper towels. Press with warm iron until wax is absorbed. Replace paper towels frequently. Treat remaining stain with prewash stain remover or nonflammable dry cleaning fluid. Hand wash to remove solvent. Wash using bleach safe for fabric.
Chocolate	Pretreat or soak in warm water using product containing enzymes. Wash using bleach safe for fabric.
Collar or cuff soil, cosmetics	Pretreat with prewash stain remover or rub with bar soap.
Dye transfer on white fabric	Use packaged color remover. Wash using bleach safe for fabric.
Grass	Pretreat or soak in warm water using product containing enzymes. Wash using bleach safe for fabric.
Grease, oil, tar (butter, fats, salad dressing, cooking oils, car grease, motor oils)	Scrape residue from fabric. Pretreat. Wash using hottest water safe for fabric. For heavy stains and tar, apply nonflammable dry cleaning fluid to back of stain. Replace towels under stain frequently. Rinse thoroughly. Wash using hottest water safe for fabric.
Ink	Some inks may be impossible to remove. Washing may set some inks. Use prewash stain remover, denatured alcohol or nonflammable dry cleaning fluid.
Mildew, scorch	Wash with chlorine bleach if safe for fabric. Or, soak in oxygen bleach and hot water before washing. Badly mildewed fabrics may be permanently damaged.
Mud	Brush off dry mud. Pretreat or soak with product containing enzymes.
Mustard, tomato	Pretreat with prewash stain remover. Wash using bleach safe for fabric.
Nail polish	May be impossible to remove. Place stain face down on paper towels. Apply nail polish remover to back of stain. Repeat, replacing paper towels frequently. Do not use on acetate fabrics.
Paint, varnish	WATER BASED : Rinse fabric in cool water while stain is wet. Wash. Once paint is dry, it cannot be removed, OIL BASED AND VARNISH : Use solvent recommended on can label. Rinse thoroughly before washing.
Rust, brown or yellow discoloration	For spots, use rust remover safe for fabric. For discoloration of an entire load, use phosphate detergent and nonchlorine bleach. Do not use chlorine bleach because it may intensify discoloration.
Shoe polish	LIQUID : Pretreat with a paste of granular detergent and water. PASTE : Scrape residue from fabric. Pretreat with prewash stain remover or nonflammable dry cleaning fluid. Rub detergent into dampened area, Wash using bleach safe for fabric.

Function of each Button



Water temperature button (Only 2 Valve)

- Use to select water temperature.
Pressing the button allows you to select Cold ► Warm (Hot&Cold) ► Hot ► Cold respectively. Default setting is Cold.

Water level button (indication of detergent amount)

- Use to adjust the water level as required. The appropriate amount of detergent is shown next to the water level in the Water-Detergent diagram
- Water level is automatically selected for fuzzy (normal) program.
The following settings are indicated as the button is pushed Large ► Ex-Large ► Small ► Medium ► Large

For Non Pump

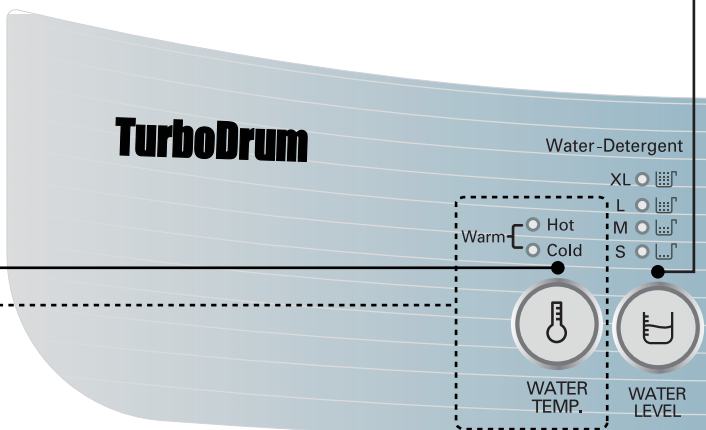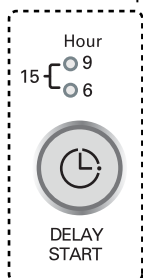

Process button

- Use to select Speedy Soak, Wash, Rinse and Spin functions as desired.

Child lock function

Use to lock or unlock the control buttons to prevent settings from being changed by a child.
To lock, push the PROCESS and PROGRAM buttons simultaneously and to unlock push them one more time during the washing process.


(refer to page 18)

Program button

- Use for selecting wash program.
- This button allows you to select 4 different programs for different kinds of laundry and dirtiness.
- Program selections light up in sequence as follows : Fuzzy (Normal) ► Economy ► Jean ► Wool Fuzzy (Normal) etc.
Select the desired program by pressing the button.

AUTO OFF (Power) button

- Use to turn the power on or off.
- Push again and power goes on or off
- The power goes off automatically about 10 seconds after the wash is finished.

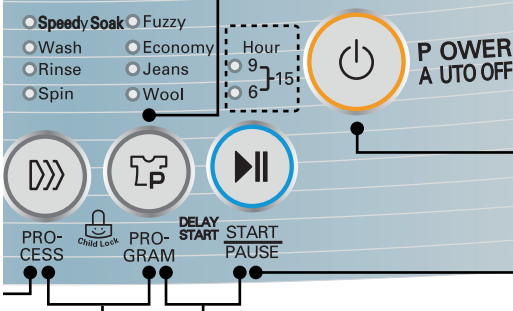

Delay Start (Reservation) button

- Use to set a delayed finishing time.
The time changes 6 ► 9 ► 15(6+9) ► 6hr when the button is pushed.
- To Delay Start, push both the PROGRAM, and START/PAUSE buttons simultaneously.
(refer to page 16)

Start/ Pause button

- Use to start or pause the washing process.
- Repeats start and pause by pushing the button.
- The power goes off automatically 10 minutes after stopping.
- ※ This appliance is fitted with a safety function that automatically stops the operation of the washing machine when it is exposed to heavy disturbance on the mains.

Washing Programs

Washing Programs		Add the laundry			Add the detergent
Fuzzy Washing (Normal Wash) Used for normal loads, this mode automatically selects the most appropriate conditions and completes the sequence in one operation. The built-in sensor detects the size of the load and the ideal wash power and wash, rinse and spin times are set accordingly					 · Add the appropriate quantity of detergent as indicated by the water level next to Water Detergent . Or follow the detergent manufacturer's instructions
Economy Wash Use this mode when washing lightly soiled clothes for a short time. The highly recommended laundry amount is under 2.0kg.			 · Select the Economy program on the Control panel.		 · Add the appropriate quantity of detergent as indicated by the water level next to Water Detergent . Or follow the detergent manufacturer's instructions
Jean Wash Use Jean program when washing Jeans of different sizes		 · Spread the jean evenly in the tub	 · Select the Jean program on the Control panel.		
Wool Wash Use this program for washing delicate fabrics such as lingerie and woollens. (wash only "water washable" clothes) Before washing your woollens check the care label for the washing instructions. (wash only water washable clothes)			 · Select the Wool program on the Control panel.		 · Use neutral detergent appropriate for the laundry. · When washing woollens use a mild detergent recommended for washing wool.
Speedy Soak Wash Use this mode to wash normal clothes or thick and heavy clothes which are excessively dirty. Speedy Soak mode can be used with Fuzzy or Jean program.			 · Speedy Soak will not work in Wool & Economy Program.		
· Keep pressing the PROCESS button until the Speedy Soak light is on and then Wash, Rinse, Spin lights are on simultaneously. · Until the washing process is completed, the Speedy Soak light is on.					



	Close the lid	Finish	Caution & Note
 · The pulsator rotates for 8 seconds to detect the laundry load. · Then the water level and the amount of detergent to be used will be shown and water will be supplied.	 · Water will be supplied for 2 minutes after the start of the wash to supplement the water the laundry has absorbed.	 · When the wash program ends, the buzzer will ring for 10 seconds before the Power goes off automatically.	· If water is already in the tub, or putting wet laundry into the tub before starting will increase the water level. · With lightweight bulky loads, water level can be set low. · Changes to water temperature (hot/cold) and wash level are possible during operation. <i>(refer to page 12)</i>
			
			
			· When setting the water level manually, do not set to Medium to prevent damage to laundry. · Washing with hot water may damage the laundry (Water is set to cold automatically). Ensure that the load is under 2kg · In order to avoid damage to laundry, the spin cycle may appear slow. This also avoids wrinkles and clothing may still contain some water. This is normal. · Speedy Soak Wash cannot be selected for the Wool Wash program.
 · The water level and the amount of detergent to be used will be shown and water will be supplied.			· If wool wash is selected, Gentle Spin will be set automatically.

Delay Start (Reservation) Wash

Delay Start (Reservation) Wash is used to delay the finishing time of the operation. The hours to be delayed can be set by the user accordingly. The time on the display is the finishing time, not the start time.

- 1 Press the **POWER** button to turn power on.



- 2 Press the **PROGRAM** button to select the washing program.



- Select the program for laundry on the Control panel. This program will not work in Wool Program.

- 3 Press the **PROGRAM** button and the **START/PAUSE** button simultaneously.



- The time changes as following order.
[6 → 9 → 15(6+9) → 6Hours].

Hour
• 9
• 6 } 15

- 4 Add the detergent.

- The appropriate quantity of detergent marked next to the water level of **Water•Detergent**.
When the lid is open the machine will not operate, and an alarm signal will remind you to close the lid

- 5 Add the laundry and press the **START/PAUSE** button.



- When you press the **START/PAUSE** button the light will blink.

- 6 Close the lid.

- Water will be supplied for 2 minutes after the start of the wash to supplement the water the laundry has absorbed.

Finish

The washing will be finished according to the delayed time.

Note

- If the lid is open, the machine will not work, and an alarm signal will alarm to remind you to close the lid.
- To select washing program, spinning time, water level or hot/cold manually, press the **DELAY START (RESERVATION)** button and select the desired option. Then press the **START/PAUSE** button.
- When the laundry cannot be taken out immediately after the wash program ends, it is better to omit the spinning program. (The laundry will be wrinkled if left for a long time after spinning.)

Option Washing

When you only need the Wash, Wash/Rinse or Rinse cycles, these can be set manually

- 1 Press the **AUTO OFF** (Power) button to turn power on.



- 2 『Wash』, 『Wash+Rinse』, 『Rinse』, 『Rinse+Spin』, 『Spin』 only options



- Press the **PROCESS** button until above Option Washing light is on. (refer to p13)
- When you want to only drain, wait until the water in the washing tub drains completely and then, turn off the power.

- 3 Press the **WATER LEVEL** button, to control the water level according to the amount of laundry. If you do not choose anything, it is set the Large water level automatically. *(refer to page 12)*



- 4 Add the laundry into the washing tub.

- 5 Press the **START/PAUSE** button.



- 6 Add the detergent and close the lid.

Note

- When a **Wash**, **Wash/Rinse** or **Rinse** only option is selected, after the wash is completed the water will not be drained off. If you wish to drain the water, press the **SPIN** button and wait until the water in the tub has drained completely. Then press the **START/PAUSE** button.
- **If you do not specify the water level**, then Medium will be automatically selected.
- If only Rinse is selected, the process will start from Water Supply.

Other Useful Functions

Child Lock Function

If you want to lock all the keys to prevent settings from being changed by a child, you can use the child lock option.

How to Lock

- 1 Press the **POWER** button.



 
- Turn Power on.

- 2 Press the **START/PAUSE** button to start washing.



- After all washing conditions are set according to the manual.

- 3 Press both the **PROCESS** button and the **PROGRAM** button simultaneously.



- During the wash program, all the buttons are locked until washing is completed or until the child-lock function is deactivated manually.

How to Unlock

If you want to unlock during wash, press both the **PROCESS** and the **PROGRAM** button simultaneously again.

Note

- In Child-Lock mode, all process light will blink.

Mute Option

If you want to use the washing machine without alarm signal sounds, press both the **WATER LEVEL** and **PROCESS** buttons simultaneously.

To make buzzer work, press both the **WATER LEVEL** and **PROCESS** buttons simultaneously one more time.


Placing and Leveling

Please ensure that transit restraint has been removed before operating your machine.

1 Place the machine on a flat and firm surface which allows proper clearance.

We suggest a minimum clearance of 2 cm to the right side and left sides of the machine for ease of installation.

At the rear, a minimum clearance of 10 cm is suggested.

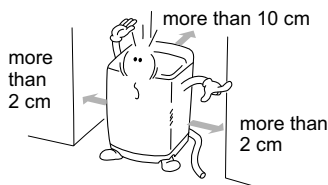


Caution

If the washer is installed on a uneven, weak or tilted floor causing excessive vibration, spin failure error can happen to it.
It must be placed on a firm and level floor to prevent spin failure.

2 Check that the machine is level


Open the lid and look from above to see if it is same as shown.

Top view of the machine

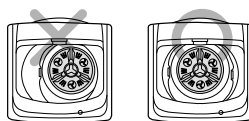


3 Leveling the machine

Lift the front of the washing machine and twist the Adjustable Leg until the washing machine is placed evenly.

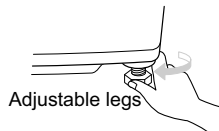

 ※ Installing the Anti-Rat Cover (option) Insert the anti-rat cover to be firmly fixed from the back or front of washing machine and screw it (1pcs)



Caution

If the power is supplied from a cord extension set or generator, the cord extension set or electrical portable outlet device should be positioned so that it is not exposed to splashing or ingress of moisture.

Connecting Water Supply Hose

Before connecting the Water Supply Hose to the water tap, check the hose type and then choose the correct instruction here under.

Note that the Water Supply Hose supplied may vary from country to country. Make sure to connect the blue inlet hose to the cold water tap, and the orange inlet hose to the hot water tap.


Connecting Water Supply Hose to water tap

Normal Type

(Normal tap without thread & screw type inlet hose.)


1 Untighten the screw

Untighten the screw of the connector so that the tap can be placed in the middle.

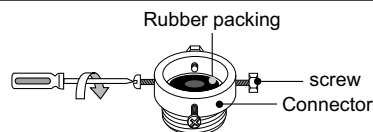


2 Fixing the connector to the tap

 Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.




3 Attach the water supply hose securely to the connector

Push the water supply hose vertically upwards so that the rubber seal within the hose can adhere completely to the tap.

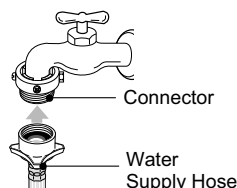

4 Fixing the connector to the water supply hose


Attach the water supply hose to the connector and then tighten it by screwing it to the right.

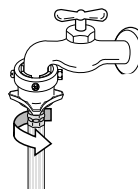

5 Check the connection of water supply hose and the connector

After connecting the hose, open the tap to check for any water leakage.

If the water leaks, close the tap and start again from step 1

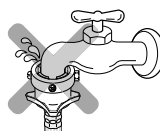

Attention


The washing machine is to be connected to the water mains using new hose-sets and old hose-sets should not be reused.

Normal Type


(Normal tap without thread & one touch type inlet hose.)

1 Separate Middle connector from Water Supply Hose

Separate Middle connector from the Water Supply Hose by pulling the Pressing Rod and the Pressing Handle that is attached to the Water Supply Hose.

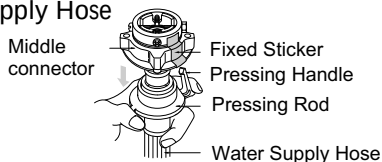
**2 Loosen the fixed nuts to connect the connector to the tap**

 Untighten the screw of the connector so that the tap can be placed in the middle.


**Note**

In case tap is too large.


If the tap diameter is too large or is square, untighten the 4 screws and remove the guide plate. Then follow step 1.

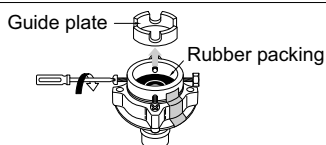**3 Fixing Connectors to the Tap**

 
Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

**4 Fixing Upper Connector and Middle Connector**

Remove the fixed sticker in between the Upper and Middle Connectors. Tighten the connectors by holding one connector and twist middle connector to the right.

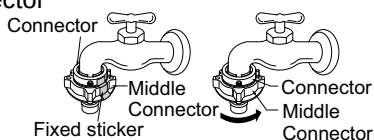**5 Connecting Middle Connector and Water Supply Hose**

Press down the pressing rod of the Water Supply Hose which was separated from middle connector (refer to Step1) and then join it to the middle connector.

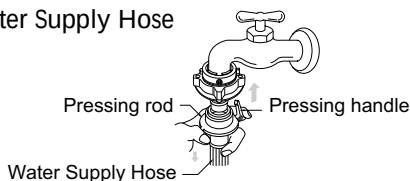**6 Check for water leakage**

After connecting the hose, open the tap to check for any water leakage.

If the connection leaks, close the tap and start again from step 1.

If you skip step 1, water leakage may occur.




Connecting Water Supply Hose

Screw Type


1 Attach the water supply hose to the tap.

Push the water supply hose up so that the rubber packing within the hose can adhere completely to the tap.

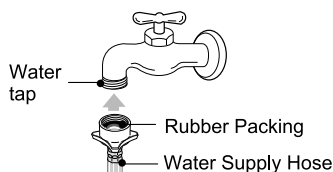


2 Connect the water supply hose to the tap.

 Connect the water supply hose to the tap and then tighten it by screwing it to the right.




3 Check water leakage.

 After connecting the hose, open the tap to check for any water leakage.




Connecting Water Supply Hose to the machine

- Connect the water supply hose to inlet valve of the washing machine, and then lock it by turning the hose connecting part.

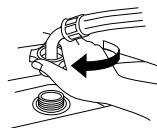

- Check to see if there is a rubber seal inside the connector.

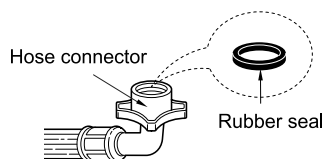


Connecting Drain Hose


Before connecting Drain Hose, check your Drain Hose model and choose the correct instructions.

Pump Model

 - 1 Fit the end of the drain hose to the outlet of the drain pump and tighten the clamp.



- 2 Put the other end of the drain hose over the standpipe or wash tub.

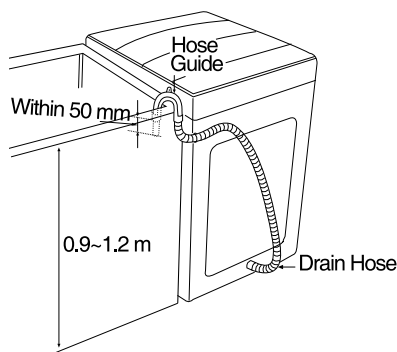


Note


- To prevent siphoning, the drain hose should not extend more than 50 mm from the end of the hose guide.
- The discharge height should be approximately 0.9 ~ 1.2 m from the floor.

Non-Pump Model


- 1 Before connecting
Ensure that the hose clip is set as indicated here.

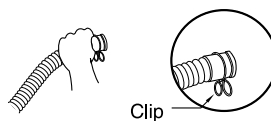

- 2 Connect the Elbow Hose
Push the elbow hose toward the body of the washing machine.

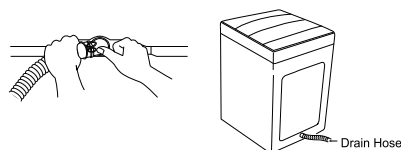

 - 3 Place the Drain Hose
To change the direction of the hose, pull out the elbow hose and change the direction.
Repeat Step 2.




Grounding Method

Earth wire should be connected.

If the earth wire is not connected, there is possible a danger of electric shock caused by the current leakage .

Grounding Method with Ground insert space Terminal


If the AC current outlet has a ground terminal, then separate grounding is not required. Note that AC power outlet configurations may differ from country to country

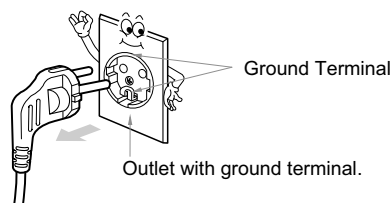

Other Grounding Method


Burying Copper Plate

Connect the Ground Wire to a Ground Copper Plate and bury it more than 75cm in the ground.

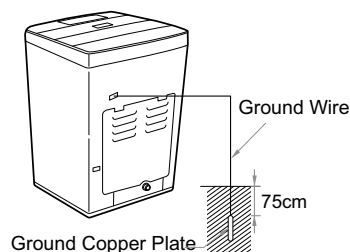

Using Ground Wire

Connect the ground Wire to the socket provided exclusively for Grounding.

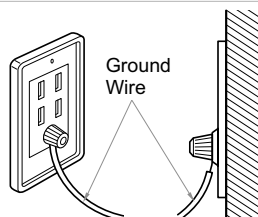

Using a Short Circuit Breaker

If grounding methods described above are not possible, a separate circuit breaker should be employed and installed by a qualified electrician



Caution

- To prevent a possible explosion, do not connect ground to a gas pipe
- Do not connect ground to telephone wires or lightning rods. This may be dangerous during electrical storms
- Connecting ground to plastic has no effect
- Ground wires should be connected when an extension cord is used.

Cleaning and Maintenance

Cold water washing

- If you always use cold water, we recommend that a warm or hot wash be used at a regular intervals e.g. every 5th wash should be at least a warm one

When you have finished

- Turn off taps to prevent the chance of flooding should a hose burst.
- Always unplug the power cord after use.

When water supply into the tub is not clean or the filter is clogged with particles (such as sand), clean the filter in the inlet valve occasionally.

(The figure of power cord and water tap may vary according to the country)

To Clean the Filter in the Inlet Valve

- 1 Close the tap before turning off the power. Select both hot/cold and then press the [START/PAUSE] button to remove water from the machine completely. 
- 2 Turn off the power before pulling out the cord. 
- 3 After removing the water supply hose pull out the filter. Then use a brush to clean the filter. 
- 4 Replace the filter after cleaning it.

Caution

- Before cleaning the filter, the impurities in the water supply hose should be removed.

 



To Clean the Lint Filter

- 1 Pull out the lint filter from the tub in the direction shown below. 
- 2 Turn the net inside out to clean the filter and rinse it with water. 
- 3 Replace the filter to the original location. Push the lip of the filter until a pop sound is heard. 

Note

- If the lint filter is torn or damaged, purchase a new one from LG service center.

To Clean the Pump casing (for pump model)

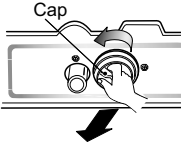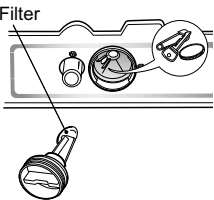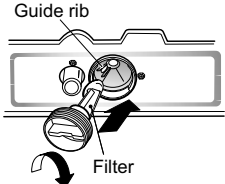- 1 Place a towel on the floor under the drain pump cap. Excess water may flow out. 
- 2 Turn the cap counter-clockwise and pull it out. 
- 3 Remove any foreign objects and fluff inside pump casing and from the filter. 
- 4 Replace the cap. Insert the filter along the guide ribs inside the pump casing. Filter must face the guide ribs inside pump casing and securely turn the cap clockwise. 

Caution

- Check if water leaks after reassembling. (The Rubber ring is in the cap)

Cleaning and Maintenance

When there is a fear of freezing

- Close the water taps and remove the Water Supply Hose.
- Remove the water which remains in the water supply.
- Lower the drain hose and drain the water in the bowl and the drain hose by spinning.

If frozen

- Remove the water supply hose, and immerse it in hot water at approx.. 40°C.
- Pour approx.. 2 liters of hot water at approx.. 40°C, into the bowl and let it stand for 10 minutes.
- Connect the water supply hose to the water tap and confirm that the washing machine performs the supply and drainage of water.

Wash Inner-tub

Leave the lid open after washing to allow moisture to evaporate. If you want to clean the inner-tub use a clean soft cloth dampened with liquid detergent, then rinse. (Do not use harsh or gritty cleaners.)

Inlet Hoses Exterior

Hoses connecting washer to faucet should be replaced every 5 years.
Immediately wipe off any spills. Wipe with damp cloth. Try not to hit surface with sharp objects.

Long Vacations

Be sure water supply is shut off at faucets. Drain all water from hoses if weather will be below freezing.

Cleaning the Inside of your Washer

If you use fabric softener or do regular cold water washing, it is very important that you occasionally clean the inside of your washer.

- Fill your washer with hot water.
- Add about two cups of a powdered detergent that contains phosphate.
- Let it operate for several minutes.
- Stop the washer, open the lid and leave it to soak overnight.
- After soaking, drain the washer and run it through a normal cycle.

We do not recommend that you wash clothes during this procedure.

Products that might damage your washing machine

- Concentrated bleaches and diaper sanitizer will cause damage to the paintwork and components of your washer.
- Hydrocarbon solvents i.e. petrol, paint thinners and lacquer thinners, etc. can dissolve plastic and blister paint (Be careful when washing garments stained with these solvents as they are flammable DO NOT put them in washer or dryer.)
- Some pretreatment sprays or liquids can damage your washer's control panel.
- Use of dyes in your washer may cause staining of the plastic components. The dye will not damage the machine but we suggest you thoroughly clean your washer afterwards. We do not recommend the use of dye strippers in your washer.
- Do not use your washer lid as a work surface.

C

Common washing problems

Many washing problems involve poor soil & stain removal, residues of lint and scum, and fabric damage. For satisfactory washing results, follow these instructions.

WASH PROBLEM

Problems	Possible Causes	Solutions & Preventive Measures
Poor soil removal	• Not enough detergent • Wash water temperature too low. • Overloading the washer • Incorrect wash cycle • Incorrect sorting • Do not pretreat stain	• Use correct amount of detergent for load size, amount of soil and water hardness. • Use warm or hot water for normal soil. Different water temperature may be required according to soil type. (<i>refer to page 8</i>) • Reduce load size. • Wash with Jean or Speedy Soak & Jean wash cycle for heavy soiled laundry. • Separate heavily soiled items from lightly soiled ones. • Pretreat stain and heavy soil according to directions shown on page 7.
Blue Stains	• Undiluted fabric softener dispensed directly onto fabric	• Rub the stain with bar soap. Wash. • Do not overfill fabric softener dispenser and do not pour liquid fabric softener directly onto fabric. See page 10 for more instructions.
Black or gray marks on clothes	• A buildup caused by the interaction of fabric softener and detergent can flake off and mark clothes • Not enough detergent	• Keep the recommendations against Scrud(waxy buildup). (<i>refer to scrud page10.</i>) • Use correct amount of detergent for load size, amount of soil and water hardness.
Yellow or brown rust stains	• Iron or manganese in water supply, water pipes, or water heater	• To restore discolored load of whites, use rust remover safe for fabric. • Install nonprecipitating water softener or an iron filter in your water supply system for an ongoing problem. • Before washing, run water for a few minutes to clear lines.
Lint	• Incorrect sorting • Tissues left in pocket • Overloading the washer	• Wash lint givers eg towels, flannelette sheets, separately from lint collectors eg synthetic fabrics and remove tissues in pockets before wash. See page 7 for sorting and caring before loading. • Do not overload the washer
Residue or detergent	• Overloading the washer • Undissolved detergent • Use too much detergent	• Do not overload the washer. • Some detergents need to be pre-dissolved, check the detergent instructions. Try pre-dissolving the detergent. • Increase water temperature using hot water safe for fabric. • Use proper amount of detergent.
Holes, tears, or snags	• Incorrect use of chlorine bleach. • Unfastened zippers, hooks, buckles • Ribs, tears and broken threads • Overloading the washer • Degradation of fabric	• Never pour chlorine bleach directly on fabric. See page 9 for adding liquid bleach. • Fasten zippers, hooks, and buckles. • Remove objects in pockets. See page 7 for caring before loading. • Do not overload the washer.

Troubleshooting

Before calling for service, check the problem against the list bellows.

Symptom	Error Message	Check up
Water Supply Failure	 Speedy Soak  Wash  Rinse  Spin	• Is the water tap shut off? • Is the water supply cut off ? • Is the tap or water supply hose frozen ? • Is the water pressure low or is the filter of the inlet valve clogged with impurities? • Is the Hot hose connected to cold? • Is the Cold hose connected to Hot?
Drainage Failure	 Speedy Soak  Wash  Rinse  Spin	• Is the drain hose positioned correctly? • Is the drain hose bent or placed too high? • Is the internal part of the hose or drain pump (only pump model) clogged with impurities? • Check if electric power has gone off.
Spin Failure	 Speedy Soak  Wash  Rinse  Spin	• Is the laundry evenly balanced? • Is the washing machine placed on a flat surface?
Door(Lid) Open	 Speedy Soak  Wash  Rinse  Spin	• Is the lid closed?
Internal sensing failure		• Please call your nearest LG Electronics service center for help.
Power failure		
Overflow failure		

Terms of Warranty


What Is Not Covered:

- Service trips to your home to teach you how to use the product.
- If the product is connected to any voltage other than that shown on the rating plate.
- If the fault is caused by accident, neglect, misuse or Act of God.
- If the fault is caused by factors other than normal domestic use or use in accordance with the owner's manual.
- Provide instruction on use of product or change the set-up of the product.
- If the fault is caused by pests for example, rats or cockroaches etc..
- Noise or vibration that is considered normal for example water drain sound, spin sound, or warming beeps.
- Correcting the installation for example, levelling the product, adjustment of drain.
- Normal maintenance which recommended by the owner's manual.
- Removal of foreign objects / substances from the machine, including the pump and inlet hose filter for example, grit, nails, bra wires, buttons etc.
- Replace fuses in or correct house wiring or correct house plumbing.
- Correction of unauthorized repairs.
- Incidental or consequential damage to personal property caused by possible defects with this appliance.
- If this product is used for commercial purpose, it is not warranted.

(Example : Public places such as public bathroom, lodging house, training center, dormitory)


If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.

Specification

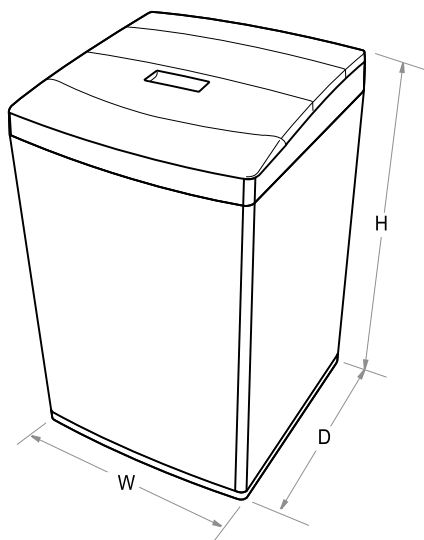

Model	WF-L700TC / WF-L701TC
Size	540(W)x540(D)x850(H) mm : WF-L700TC / WF-L701TC 540(W)x540(D)x910(H) mm :
Water tap pressure	30 - 800 kPa (0.3 - 8 kgf/cm ²)

※ In our continuing effort to improve the quality of our appliances, it may be necessary to make changes to the appliance without revising this manual.

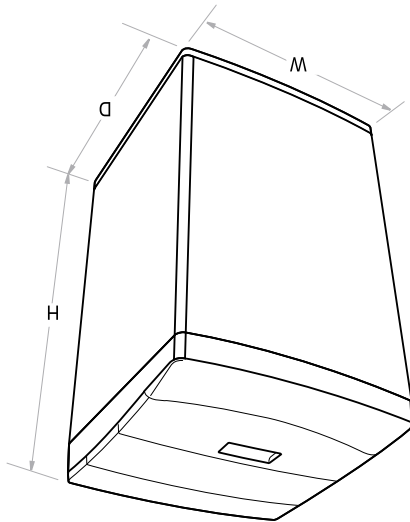

Model	WF-L700TC / WF-L701TC
ukuran	540(W)x540(D)x910(H) 540(W)x540(D)x850(H) : WF-L700TC / WF-L701TC
Tekanan air	30 -800 kPa (0.3 -8 kgf /cm ²)

* Dalam rangka peningkatan kualitas produk kami, perubahan terhadap produk dapat dilakukan jika perlu tanpa merubah cara penggunaannya.

Tidak Dijamin:

- Kunjungan gratis ke rumah Anda untuk mengajarkana menggunakan produk.
- Jika produk dihubungkan ke tegangan listrik selain yang ditunjukkan pada pelat.
- Jika kerusakan disebabkan oleh kecelakaan , kelalaian, dan salah penggunaan.
- Jika kerusakan disebabkan oleh faktor selain penggunaan dalam rumah tangga yang normal atau penggunaan menurut buku panduan.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- Jika kerusakan disebabkan oleh faktor selain penggunaan produk atau perubahan pengaturan produk.
- Jika kerusakan disebabkan oleh binatang seperti tikus, kecoa, dll.
- Suara berisik atau getaran yang dianggap normal seperti suara air buangan, suara pengering, atau suara perhatian.
- Merubah pemasangan misalnya meningkatkan posisi produk, atau selang buangan.
- Perawatan normal yang dianjurkan dalam buku panduan.
- Mengeluarkan benda-benda asing dari dalam mesin, termasuk pompa, dan filter dalam selang, atau butiran pasir, potongan kuku, tali bra, kancing, dll.
- Mengganti sekring listrik atau pengkabelan dalam rumah atau pipa rumah.
- Mengganti kerusakan yang disebabkan perbaikan di tempat yang tidak resmi.
- Kerusakan yang disengaja pada barang-barang pribadi yang disebabkan oleh kekurangan yang mungkin terjadi pada pemasangan.
- Tidak dijamin jika produk ini digunakan untuk kepentingan komersial.

(contoh: Tempat umum seperti kamar mandi umum, pusat pelatihan, rumah kos.)

Jika produk ini dipasang diluar wilayah servis yang normal, semua biaya transportasi pada perbaikan produk, atau penggantian suku cadang yang rusak, ditanggung oleh pemilik.

Perbaikan Gangguan

Sebelum diservis, periksa apakah masalah yang timbul tidak ada dalam daftar ini.

Gejala	Pesan Error	Periksa
Suplai air tidak mengalir	   	• Apakah keran air tertutup? • Apakah suplai air terpotong? • Apakah keran atau selang air membeku? • Apakah tekanan air rendah atau filter dalam pipa selang air tersumbat kotoran? • Apakah Hot/Cold dipilih ke Hot ketika selang yang terhubung adalah Cold? • Apakah selang Cold dihubungkan ke Hot?
Air buangan tidak keluar	   	• Apakah letak selang buangan sudah benar? • Apakah selang buangan bengkok atau terlalu tinggi? • Apakah bagian dalam pompa buangan (hanya model pompa) tersumbat kotoran? • Periksa apakah Power listrik sudah mati?
Pengeringan gagal	   	• Apakah letak cucian sudah seimbang? • Apakah mesin cuci diletakkan dipermukaan yang rata?
Pintu (Tutup) Terbuka	   	• Apakah penutup sudah tertutup?
Sensor dalam tidak bekerja	Power gagal	• Panggil bantuan ke cabang servis LG Electronic terdekat.
Air meluap		

Masalah yang sering timbul biasanya seputar penghilang noda dan kotoran yang buruk, kotoran masih tertinggal dan pakaitan rusak. Untuk hasil yang memuaskan, ikuti petunjuk-petunjuk dibawah ini!

M

asalah Umum Mencuci

MASALAH MENCUCI

Masalah	Penyebab	Pemecahan & Pencegahan
Kotoran tertinggal	• Deterjen kurang • Temperatur air mencuci terlalu rendah • Muatan terlalu banyak • Program cuci salah • Pemilihan pakaitan salah • Tidak merendam noda	• Gunakan deterjen yang sesuai dengan jumlah dan berat cucian serta kandungan air. • Gunakan air hangat atau panas untuk cucian normal. Temperatur air yang berbeda ditentukan berdasarkan jenis cucian. <i>(lihat hal 8)</i> • Kurangi beban muatan. • Untuk cucian tebal dan berat gunakan program cuci Jean dan Speedy Soak wash. • Pisahkan cucian yang berat dengan ringan. • Rendam dahulu noda dan pakaitan sangat kotor sesuai petunjuk di hal 7.
Noda Biru	• Pelembut pakaitan yang tidak diencerkan dan dituang langsung ke pakaitan	• Gosok noda dengan sabun batangan. Lalu cuci. • JANGAN mengisri terlalu penuh ruang pelembut pakaitan dan jangan menuang langsung ke pakaitan. • Untuk lebih jelas, lihat petunjuk di hal 7.
Tanda hitam dan abu-abu pada pakaitan	• Muncul karena disebarkan oleh lapisan yangn terjadi karena kontak deterjen dan pelembut pakaitan. • Deterjen kurang	• Lihat petunjuk terhadap Scrud (bentukkan Hlin). • Gunakan jumlah deterjen yang tepat sesuai dengan berat dan jumlah pakaitan serta kandungan air.
Noda karat warna kuning atau cokelat	• Ada kandungan besi atau logam pada air, pipa air atau pemasas air.	• Untuk mengembalikhan warna pakaitan menjadi putih, gunakan pengasirlah pengendap air atau Filter air pada sistem suplai air. • Anda untuk mencegahnya. • Sebelum mencuci, alirkan air dan biarkan beberapa menit.
Kotoran	• Pemilihan pakaitan salah • Tisu yang tertinggal • Muatan terlalu banyak	• Cuci bahan seperti handuk, kain flanel terpisah dari pakaitan yang menyeterap kotoran sebuk seperti bahan sintesis dan keluarkan tisu dari kantong sebelum mencuci. Lihat hal 7 untuk pemilihan dan perawatan sebelum mencuci. • JANGAN mencuci pakaitan melebihi kapasitas mesin.
Deterjen yang tertinggal	• Muatan terlalu banyak • Deterjen tidak dilarutkan • Deteren terlalu banyak	• JANGAN mencuci pakaitan melebihi kapasitas mesin. • Beberapa deterjen harus dilarutkan dahulu, lihat petunjuk pemakaian deterjen pada kemasanya. • Tambah suhu air dengan menggunakan air panas yang aman • Gunakan jumlah deterjen yang tepat.
Lubang, robek atau kusut	• Pemakaian pemutih chlorine yang salah • Kancing yang longgar, kait, gesper • Benda-benda keras yang rusak • Muatan terlalu banyak • Degradasisi pada bahan	• JANGAN menuang pemutih chlorine langsung ke pakaitan. • Lihat hal 9 untuk menambah cairan pemutih. • Kencangkan kancing, kait dan gesper. • Keluarkan benda-benda keras dalam kantong. Lihat hal 7 untuk perawatan sebelum mencuci. • JANGAN mencuci pakaitan melebihi kapasitas mesin.

M

embersihkan dan Merawat

Jika khawatir terjadi pembekuan

- Tutup keran air dan keluarkan Selang Saluran Air.
- Keluarkan sisa air dalam selang saluran air.
- Turunkan selang saluran buangan dan keluarkan airnya dengan cara diputar-putar.

Jika telah beku

- Keluarkan selang saluran air, dan rendamlah dalam air panas bersuhu sekitar 40°C.
- Tuang air panas sebanyak 2 liter bersuhu sekitar 40°C kedalam wadah dan biarkan selama 10 menit.
- Masukkan selang saluran air ke keran dan pastikan bahwa mesin cuci dapat menyuplai dan mengeluarkan air dengan baik.

Cuci tabung

Biarkan tutup mesin terbuka setelah mencuci agar uap air keluar. Jika Anda ingin membersihkan bagian dalam tabung, gunakan kain lembut yng telah ditesis deterjen cair, lalu bilas. (Jangan gunakan pembersih yang keras atau mengandung butiran.)

Selang Air Bagian Luar

Selang yang menghubungkan mesin ke keran harus diganti setiap 5 tahun sekali. Lap semua cairan yang tertumpah dengan kain lembab. Usahkan agar permukaan mesin tidak terkena benda tajam.

Bila berburir

Pastikan untuk mematikan keran air. Buanglah semua air di dalam selang. Jika suhu udara dibawah titik beku.

Membersihkan bagian dalam Mesin

Jika Anda biasa menggunakan pelembut pakaitan atau mencuci dengan air dingin, sebaiknya usahakan untuk membersihkan bagian dalam Anda sekali waktu.

- Isi mesin dengan air panas.
- Tambahkan sekitar dua cangkir deterjen bubuk yang mengandung fosfat.
- Nyatakan mesin beberapa menit.
- Matikan mesin, buka tutupnya dan biarkan terendam semalaman.
- Setelah itu keluarkan airnya dan jalankan mesin pada putaran normal.

Sebaiknya cucilah pakaitan Anda selama proses ini berlangsung.

Produk yang dapat merusak mesin

- Pemutih yang pekat dan diapers sanitizet dapat merusak cat dan komponen pada mesin Anda.
- Larutan Hydrocarbon misalnya, minyak bensin, pengencer cat dan pernis, dlll karena dapat mengurai plastik dan melepaskan cat. (Berhati-hatilah ketika mencuci pakaitan yang ternoda dengan larutan seperti ini karena mudah terbakar.
- JANGAN melelekkannya ke dalam mesin atau pengering).
- Beberapa cairan atau spray untuk perawatan dapat merusak panel kontrol pada mesin Anda.
- Penggunaan bahan cat dapat melunturkan plastik dalam mesin Anda. Bahan cat tidak akan merusak mesin tapi sebaiknya cucilah mesin Anda setelah melakukannya. Penggunaannya. Penggunaan bahan cat yang sudah lama pada mesin sangat tidak dianjurkan.
- Jangan gunakan tutup mesin Anda sebagai alas dalam bekerja.

Membersihkan dan Merawat



Mencuci dengan Air dingin

- Jika Anda selalu menggunakan air dingin, sebaiknya gunakanlah air hangat atau panas dalam satu interval secara teratur, misalnya setiap setelah 5 kali mencuci setidaknya harus ada satu kali dengan air hangat.

Jika telah selesai

- Matikan keran air untuk mencegah kemungkinan air meluap pada selang.
- Selalu cabut kabel power setelah digunakan.

Jika suplai air kedalam tabung tidak bersih atau filter air tersumbat partikel (seperti pasir), bersihkanlah

katup filter sesering mungkin.

(Bentuk kabel power dan keran air mungkin berbeda di tiap negara.)

Membersihkan Filter dalam Katup Inlet

- 1 Tutup keran air sebelum mematikan power. Pilihlah antara hot/cold lalu tekan tombol [START/PAUSE] untuk mengeluarkan air sepenuhnya dari mesin.



 
2

- 2 Matikan power sebelum mencabut kabel.



4

- 4 Pasang kembali filter setelah dibersihkan.



Perhatian

- Sebelum membersihkan filter, kotoran dalam selang saluran air juga harus dibersihkan.

Membersihkan Filter Kotoran

- 1 Tarik filter kotoran dari tabung sesuai dengan arah tanda panah dibawah ini.
- 2 Balikkan jarinya untuk dicuci dan bilaslah dengan air.
- 3 Masukkan kembali filter ke tempatnya. Tekan bibir filter sampai terdengar bunyi klik.



Catatan


- Jika filter kotoran robek atau rusak, belilah yang baru dari pusat servis LG.

etode Hubungan ke Tanah (Grounding)

Kawat tanah harus dihubungkan.
Jika kawat tanah tidak dihubungkan, maka bahaya kejutan listrik akibat hubungan pendek dapat terjadi.

Metode Grounding dengan memasukkan Terminal Tanah.


Jika AC outlet listrik Anda mempunyai Terminal Tanah, maka metode grounding terpisah tidak diperlukan. Ingatlah bahwa bentuk AC outlet power mungkin berbeda di tiap negara.

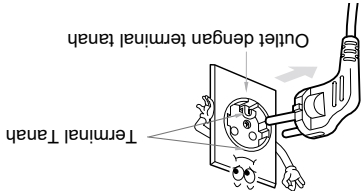

Metode Grounding Lain


Menanam Paku Tembaga

Lilitkan kawat tanah ke sebuah paku tembaga dan tanam lebih dari 75cm dalam tanah.

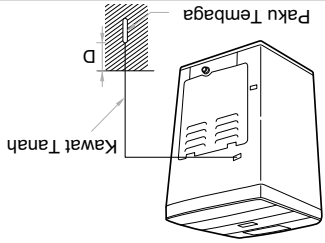


Menggunakan Kawat Tanah

Sambungkan Kawat Tanah ke soket yang khusus dibuat untuk metode Grounding.

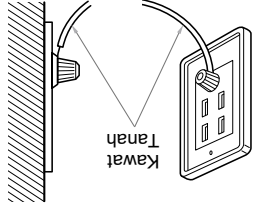

Pemutus Hubungan Pendek

Jika metode Grounding diatas tidak memungkinkan untuk dilakukan, pemutus hubungan pendek yang terpisah harus dipasang oleh ahli tukang listrik.

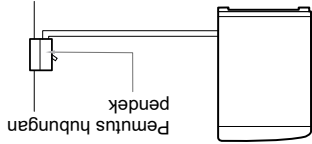

Perhatian

- Untuk mencegah kemungkinan melacak, jangan hubungkan kawat tanah ke pipa gas.
- Jangan hubungkan kawat tanah ke kabel telepon atau penangkal petir. Hal ini dapat berbahaya terutama jika ada petir.
- Menghubungkan kawat tanah ke plastik tidak akan membawa efek.
- Kawat tanah harus disambungkan jika mesin menggunakan kabel tambahan.



enghubungkan Selang Saluran Buangan

 
Sebelum menghubungkan Selang Saluran Buangan, periksa modelnya dan ikutilah petunjuk yang tepat.

Model Non-Pompa

1

Sebelum Menghubungkan

Pastikan jepit selang diatur seperti yang digambarkan.



2

Menghubungkan Ujung Selang

Tekan ujung selang ke arah badan mesin cuci.

 


3

Memindahkan Selang Saluran Buangan

Untuk mengubah arah selang, tarik keluar ujung selang dan ubalah arahnya.

Ulangi langkah 2.




enghnuungkan Selang Saluran air

Tipe Sekrup


1

Menyambung selang saluran air ke keran air
Tekan selang saluran air keatas sehingga bungkus karet yang terdapat didalam mulut selang dapat melekat sepenuhnya ke keran air.

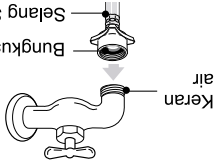

2

 
Menghubungkan selang saluran air ke keran air
Masukkan selang saluran air ke keran dan lalu kencangkan sekerupnya ke arah kanan.



3


Periksa kebocoran

 Setelah menghubungkan selang, bukalah keran air untuk memeriksa apakah ada air yang bocor.




Menghubungkan Selang Saluran Air ke mesin

• Masukkan selang saluran air ke dalam katup inlet mesin cuci, dan lalu kunciilah dengan cara memutar bagian ujung selang.

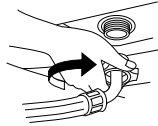


• Periksa apakah ada tutup karet didalam konektor.

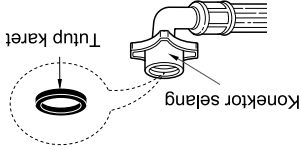

Tipe Normal (Keran normal tanpa lubang & tipe selang "one touch")


- 1

Pisahkan konektor tengah dari Selang Saluran Air dengan menarik batang penekan dan gagang penekan yang terlekat pada Selang Saluran Air.

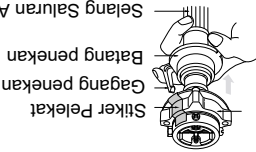
- 2


Lepaskan mur untuk menghubungkan konektor ke keran air

 Longgarkan sekrup konektor sehingga keran air dapat dimasukkan ke bagian tengah.




Catatan

Jika keran terlalu besar
Jika diameter keran terlalu besar atau berbentuk persegi, longgarkan 4 sekrupnya dan keluarkan pelat luncurnya. Lalu ikuti langkah 1.

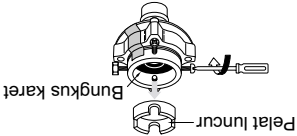
- 3


Mengencangkan Konektor ke Keran

 Tekan bagian atas konektor ke atas sampai bungkus karet melekat dengan kuat ke keran air. Lalu kencangkan 4 buah sekrupnya.


- 4


Mengencangkan Konektor Atas dan Tengah

Pindahkan stiker pelat diantara Konektor Atas dan Tengah. Kencangkan dengan cara memegang satu konektor dan memutar konektor tengah ke arah kanan.

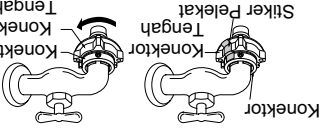
- 5

Menghubungkan Konektor Tengah dan Selang Saluran Air

Tekan ke bawah penekan dari Selang Saluran Air yang telah terpisah dari konektor tengah (lihat langkah 1) lalu gabungkan ke konektor tengah.

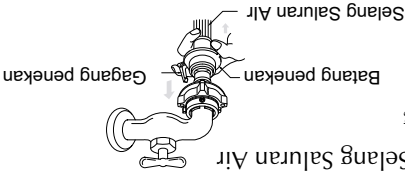
- 6

Periksa kebocoran

Setelah menghubungkan selang, bukalah keran air untuk mengetahui apakah ada air yang bocor. Jika samبungan bocor, tutup keran dan mulai lagi dari langkah 1.

Jika Anda melewatkan langkah 1, kebocoran dapat terjadi lagi.



enghubungkan Selang Saluran Air




Sebelum menghubungkan selang saluran air ke keran air, periksa jenis selang lalu pilihlah petunjuk yang tepat dibawah ini.
Perhatikan bahwa selang saluran air yang tersedia mungkin berbeda di tiap negara. Pastikan untuk memasukkan selang biru ke keran air dingin dan selang oranye ke keran air panas.


Menghubungkan Selang Saluran Air ke keran air

Tipe Normal


(Keran normal tanpa lubang dan tipe selang dengan sekrup)

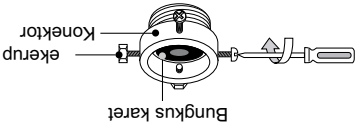

 
1 Longgarkan sekrup
Longgarkan sekrup dari konektor sehingga keran air dapat dimasukkan ke bagian tengah.




2 Mengencangkan konektor ke keran air
Tekan bagian atas konektor ke atas sampai bungkus karet melekat dengan kuat ke keran air. Lalu kencangkan 4 buah sekrupnya.

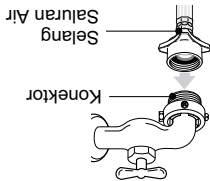

3 Memasang selang saluran air dengan seksama ke konektor
Tekan selang saluran air secara vertikal sehingga tutup karet didalam selang dapat melekat seluruhnya ke keran air.

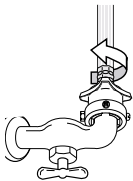

4 Mengencangkan konektor ke selang saluran air
Pasang selang saluran air ke konektor lalu kencangkan dengan cara memutar sekrupnya ke arah kanan.

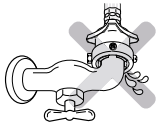

5 Periksa sambungan selang saluran air dan konektor
Setelah menghubungkan selang, bukalah keran air dan periksa apakah ada air yang bocor.
Jika air bocor, tutup kerannya dan mulai lagi dari langkah 1.

Perhatian

Mesin cuci harus dihubungkan ke sumber air dengan menggunakan perangkat selang yang baru dan perangkat selang yang lama tidak boleh digunakan.

Pastikan semua instrumen pengangkut telah dikeluarkan sebelum mengoperasikan mesin Anda.

1

Tempatkan mesin pada permukaan yang rata, kokoh dan aman

Sebaiknya dibuat jarak minimum 2 cm dari sebelah kanan dan kiri mesin agar pemasangan lebih mudah.

Pada sebelah belakang, buat jarak minimum 10 cm



Perhatian

Mesin dapat bergeser berlebihan jika dipasang dilantai yang tidak seimbang, rapuh atau miring. Pengerincian dapat gagal dan pesan error dapat muncul.
Mesin harus ditempatkan pada lantai yang kokoh dan rata untuk menghindari gagalnya pengerincian.

2

Periksa apakah mesin seimbang

Bukalah tutupnya dan lihat dari sebelah atas apakah sama seperti yang digambarkan disamping.



Tampak bagian atas mesin


3

Meninggikan mesin

Angkat bagian depan mesin cuci dan putarlah setelan kakinya sampai kedudukan mesin cuci seimbang.



※ Memasang Tutup Anti-Tikus (pilihan). Masukkan tutup anti-tikus agar pas terpasang dari sebelah belakang atau depan mesin cuci lalu pasang sekerupnya (1 bh).

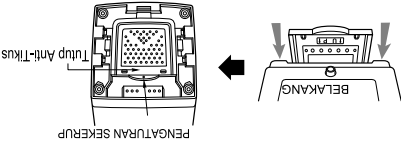

Perhatian

Jika power disuplai dari kabel tambahan atau generator, kabel tambahan atau cuk listrik yang digunakan harus diletakkan dengan aman sehingga terhindar dari tertiaprat atau dimasuki air.

Fungsi Guna Lain

Fungsi Child Lock

Anda dapat menggunakan pilihan Child Lock jika ingin mengunci semua tombol untuk mencegah pengaturannya berubah karena dimainkannya anak-anak.

Cara Mengunci

1 Tekan tombol **POWER**.



 
- Nyalakan Power.

2 Tekan tombol **START/PAUSE**.



- Setelah itu semua kondisi mengunci diatur sesuai buku panduan.

3 Tekan tombol **PROCESS** dan **PROGRAM** secara bersamaan.



- Selama program menuncit berlangsung, semua tombol terkunci sampai menuncit selesai atau sampai fungsi Child Lock dimatikan secara manual.

Cara Membuka

Jika Anda ingin mengaktifkan kembali, tekan kedua tombol **PROCESS** dan **PROGRAM** secara bersamaan lagi.

Catatan

- Pada mode child-Lock, semua lampu Program akan berkedip-kedip.

Pilihan Mute

Jika Anda ingin menggunakan mesin cuci tanpa bunyi sinyal alarm, tekan kedua tombol **WATER LEVEL** dan **PROCESS** secara bersamaan. Untuk mengaktifkannya kembali, tekan kedua tombol **WATER LEVEL** dan **PROCESS** secara bersamaan sekali lagi.

Mencuci Pilihan

Mencuci pilihan dapat diatur secara manual jika Anda hanya menginginkan untuk Mencuci, Cuci/ Bilas, atau Membilas.

1

Tekan tombol **AUTO OFF** (Power) untuk menyalakan power.



2

Wash, Wash+Rinse, Rinse, Rinse+Spin, Spin, only options



- Tekan tombol **PROCESS** sampai lampu pilihan mencuci di atas menyala. *(lihat hal 13)*
- Jika Anda hanya ingin mengeluarkan air, tunggu sampai air dalam tabung cuci keluar sepenuhnya, lalu matikan mesin.

3

Tekan tombol **WATER LEVEL**, untuk mengkontrol level air menurut jumlah cucian. Jika Anda tidak memilih apapun, maka panel akan mengatur ke level Large secara otomatis.

*(lihat hal 12)*

4

Masukkan cucian ke dalam tabung cuci.



6

Masukkan deterjen dan tutup penutupnya.

Catatan

- Jika hanya memilih **Wash, Wash/Rinse** atau **Rinse**, air tidak akan keluar setelah proses mencuci selesai. Jika Anda ingin mengeluarkan airnya, tekan tombol **SPIN** dan tunggu sampai air dalam tabung dikeluarkan sepenuhnya.
- **Jika Anda tidak mengatur level air**, maka pilihan Medium akan dipilih secara otomatis.
- Jika hanya Rinse yang dipilih, prosesnya akan dimulai dari suplai air.

Delay Start (Reservation) Wash

Delay Start (Reservation) Wash digunakan untuk menunda waktu penyelesaian. Jumlah jam yang ingin ditunda dapat diatur sesuai kebutuhan. Waktu yang ditunjukkan di panel adalah waktu selesai, bukan waktu memulai.

1

Tekan tombol **POWER** untuk menyalakan power.

2

Tekan tombol **PROGRAM** untuk memilih program mencuci.

- Pilih program untuk cucian pada Panel Kontrol.
- Metode ini tidak berfungsi pada program Wool.

3

Tekan tombol **DELAY START**.

- Waktu akan berubah seperti urutan ini

Hour { 15, 9, 6 }
[6 → 9 → 15(6+9) → 6 jam]

4

Masukkan deterjen.

- Jumlah deterjen yang sesuai akan tertera pada Water-Detergent di sebelah Water Level.
- Jika tutup dibuka mesin tidak akan beroperasi, dan sinyal alarm akan berbunyi untuk mengingatkannya.

5

Masukkan cucian dan tekan tombol **START/PAUSE**.

- Jika tombol **START/PAUSE** ditekan, lampunya akan berkedip-kedip.

6

Tutup penutupnya.

 
- Air akan mengalir selama 2 menit setelah memulai mencuci untuk menambah air ke cucian.

Selesai

Pencucian akan selesai menurut waktu tunda.

Catatan


- Jika tutup terbuka, mesin tidak akan beroperasi dan sinyal alarm akan berbunyi untuk mengingatkannya.
- Untuk memilih program mencuci, waktu pengeringan, level air atau hot/cold secara manual, tekan tombol **DELAY START (RESERVATION)** dan pilih yang diinginkan. Lalu tekan tombol **START/PAUSE**.
- Jika cucian tidak dapat dikeluarkan dengan segera setelah mencuci selesai, lebih baik batalkan program pengeringan. (Cucian dapat mengkerut jika dibiarkan dalam waktu yang lama sesudah pengeringan).

	• Pulsator berputar 8 detik untuk mendeteksi banyaknya muatan cucian. • Lalu level air dan jumlah deterjen yang digunakan akan muncul dan air akan mengalir.						• Level air dan jumlah deterjen yang akan digunakan akan muncul dan air akan mengalir.
Tutup	• Air akan mengalir selama 2 menit setelah memulai mencuci jumlah air ke cucian.						
Penyelesaian	• Jika program mencuci selesai, "buzzer" akan mati secara otomatis.						• Jika mengatur level air secara manual, jangan memilih Medium agar pakaian tidak rusak. • Mencuci dengan air panas dapat merusak cucian (Air dipasang otomatis pada mode dingin). • Putaran pengering mungkin terlihat lambat, ini untuk mencegah kerusakan pada pakaian. • Juga untuk menghangatkan dan pakaian masih mengandung air. Hal ini normal. • Speedy Soak Wash tidak bisa dipilih untuk program Wool Wash. • Jika memilih program wool wash, Gentle Spin akan dipilih secara otomatis.
Perhatian & Catatan	<i>(lihat hal 12)</i> • Jika sudah ada air didalam tabung, atau cucian dalam keadaan basah sebelum memulai, maka level air akan naik. • Dengan muatan cucian yang sedikit ringan, level air dapat diatur rendah. • Selama proses mencuci, Anda bisa mengubah temperatur air (hot/cold) dan level mencuci.						

d

Program Mencuci 	Fuzzy Washing (Mencuci Normal) Cunakan untuk muatan normal, mode ini otomatis akan memilih kondisi paling sesuai dan melengka- pi urutannya dalam satu langkah. Sensor di dalam akan mendeteksi dan mengatur besarnya muatan, kekuatan mencuci, memblas dan waktu mengeringkan yang ideal.	Economy Wash Cunakan mode ini untuk cucian yang ringan dan singkat. Berat cucian yang sangat dianjurkan adalah 2.0kg.	Jean Wash Cunakan program ini untuk mencuci Jins dalam berbagai ukuran.	Wool Wash Cunakan program ini untuk mencuci bahan halus seperti lingerie dan wol. Sebelum mencuci bahan wol, periksa label petunjuk mencuci pakaian "water washable" didalamnya.	Speedy Soak Wash Cunakan mode ini untuk mencuci pakaian berat, tebal dan sangat kotor. Mode Speedy Soak dapat digunakan dengan program Fuzzy atau Jean.
Masukkan cucian 	2	2	3 • Letakkan jins dalam tabung.	1	4
Masukkan deterjen 	4 • Masukkan sejumlah deterjen yang tertera pada panel water level disebelah Water Detergent. Atau ikuti petunjuk penggunaan deterjen pada kemasan.	5 • Masukkan sejumlah deterjen yang tertera pada panel water level disebelah Water Detergent. Atau ikuti petunjuk penggunaan deterjen pada kemasan.	3 • Pilih program Economy pada Panel kontrol.	2 • Pilih program Jean pada panel kontrol.	2 • Pilih program Wool pada panel kontrol.
					3 • Pilih program Speedy Soak Wool&Economy pada program tidak bekerja.
					5 • Masukkan deterjen netral yang sesuai untuk pakaian. • Gunakan deterjen ringan yang khusus untuk mencuci bahan wol.
					6

※ ❷ : langkah bekerja pada program Fuzzy dan Jean dengan level air pada Large dan Medium.

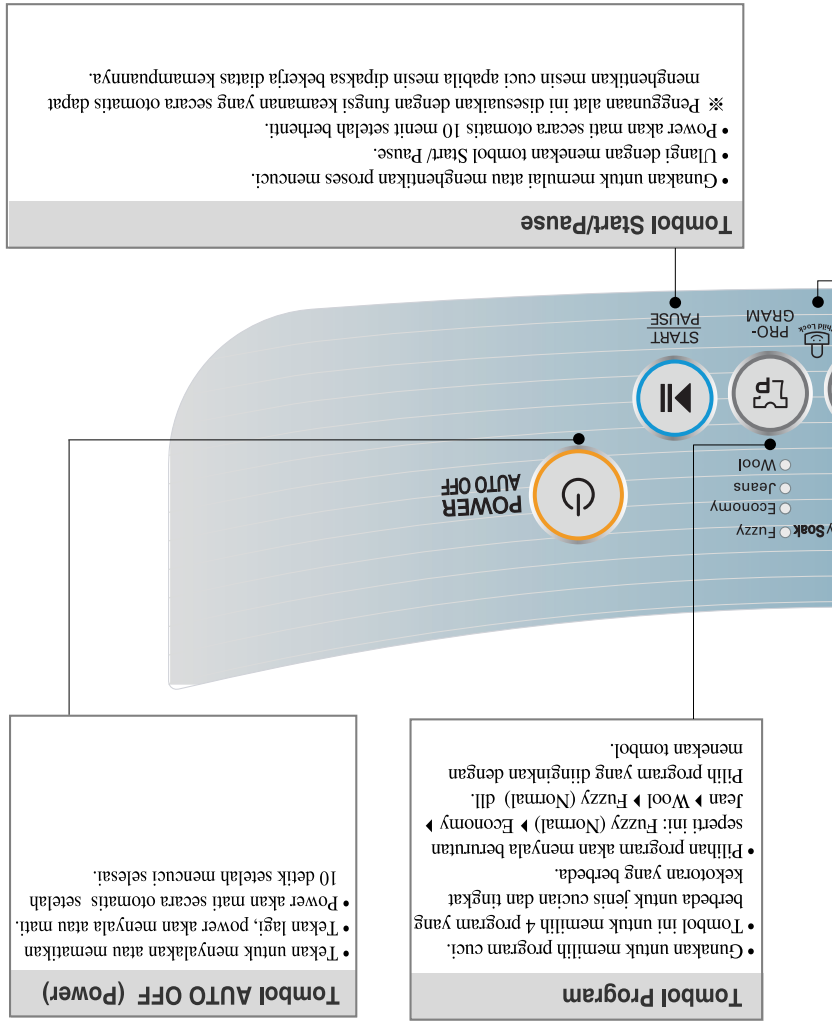

Fungsi Tombol

Tombol Delay Start (Cadangan)

(lihat hal 16)


- Gunakan untuk menunda waktu penyelesaian.
- Waktu berubah jadi 6 ▶ 9 ▶ 15(6+9) 6hr jika tombol ditekan.
- Untuk mengaktifkan Delay Start, tekan kedua tombol PROGRAM, dan START/PAUSE secara bersamaan.

Tombol Process

- Gunakan untuk memilih Speedy Soak, Wash, Rinse dan Spin sesuai keinginan.

Tombol Water level (indikasi jumlah deterjen)

- Atur level air sesuai kebutuhan. Jumlah deterjen yang tepat akan tertera disamping level air pada gambar Water-Detergent di bawah ini.
- Level air secara otomatis akan memilih program Fuzzy (normal) dan program Jean.
- Pengaturan dibawah ini akan muncul jika tombol ditekan Large ▶ Ex-Large ▶ Small ▶ Medium ▶ Large

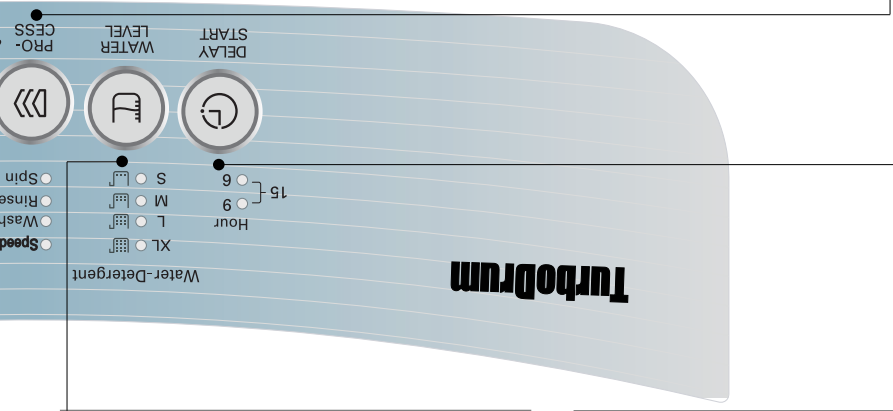

Fungsi Child lock

(lihat hal 18)

Gunakan untuk mengunci atau membuka tombol kontrol untuk mencegah tertekan oleh anak-anak. Untuk mengunci, tekan kedua tombol **PROGRAM** dan **PROCESS** bersamaan dan untuk membukanya tekan sekali lagi selama proses mencuci berlangsung.

Panel kontrol mungkin berbeda tergantung pada model.

Catatan

Petunjuk Khusus Menghlangkan Noda

PERINGATAN

- JANGAN gunakan atau mencampur pemutih chlorine dengan cairan kimia lain seperti pembersih toilet, penghlangan jawa, zat asam yang mengandung amoniak. Campuran ini dapat memproduksi gas yang berbahaya bagi keselamatan jiwa.
- Untuk mengurangi atau keceakaan, perlihatkan daftar peringatan dasar di bawah ini:
- Baca dan perhatikan dengan seksama semua instruksi pada produk penghlangan noda.
- Jaga agar produk penghlangan noda berada dalam kemasan aslinya dan jauhkan dari anak-anak.
- Cuci bersih semua perkakas bekas dipakai.
- JANGAN menggunakan produk penghlangan noda, terutama pemutih chlorine dan amoniak. Dapat menghasilkan gas beracun.
- JANGAN membersihkan pakaian yang sebelumnya dibersihkan, dicuci, dicelup atau dicuci dengan bensin, pelarut kimia atau zat-zat lain yang mudah terbakar karena zat seperti ini mengeluarkan uap yang dapat terbakar atau meledak.
- JANGAN gunakan larutan yang mudah terbakar seperti bensin, didalam rumah. Uapnya dapat meledak jika kena percikan api.

Agar noda dapat hilang:

- Sihkan dahulu pakaian yang terkena noda.
- Kenali jenis noda, lalu ikuti petunjuk perawatan menghlangkan noda pada label di bawah.
- Untuk merendam noda, gunakan produk seperti deterjen cair atau pasta yang terbuat dari campuran bubuk deterjen dengan air.
- Gunakan air dingin untuk noda yang tidak diketahui.
- Periksa label instruksi mencuci pada pakaian.
- Periksa perubahan warna dengan cara mengetes terlebih dahulu pada bagian dalam.
- Cuci dan bilas pakaian setelah diberi penghlangan noda.



Ikuti label instruksi mencuci pada pakaian

Menghlangkan Noda

NODA

TINDAKAN

Len, perkar, pemerk karet, sepihan bahan karet	Gunakan es. Gosok kuat. Balikkan noda ke kertas serap. Bubuhkan dengan penghlangan noda atau cairan pembersih lain yang tidak mudah terbakar.
Makanan bayi, produk susu, telur	Gunakan produk yang mengandung enzim untuk merendam noda terlebih dahulu.
Minuman (kopi, teh, soda, jus, minuman beralkohol)	Rendam dengan menggunakan air dingin dan pemutih yang aman untuk pakaian.
Darah	Bilas dengan air dingin. Gosok dengan sabun batangan. Atau rendam dengan produk yang mengandung enzim.
Bian hlin, krayon	Gosok permukaan hlin. Letakkan bagian ternoda diantara kertas serap. Tekan dengan setrika hangat hingga tercap, ganti kertas serap jika perlu. Rendam noda yang terisis dengan penghlangan noda atau cairan pembersih yang tidak mudah terbakar. Gosok dengan tangan. Lalu cuci dengan pemutih yang aman untuk pakaian.
Cokelat	Rendam dalam air hangat dengan produk yang mengandung enzim. Cuci dengan pemutih yang aman untuk pakaian
Kerah/lemgan baju, kosmetik	Rendam penghlangan noda atau gosok dengan sabun batangan.
Umplangan cat pada bahan putih	Gunakan produk penghlangan noda warna. Cuci dengan pemutih yang aman untuk pakaian.
Tanah rumput	Gunakan produk penghlangan noda atau gosok dengan sabun batangan.
Pelumas, minyak, ler (menega, lemak, saus salad, minyak sayur, pelumas motor/mobil).	Gosok noda pada pakaian. Rendam. Cuci dengan air panas yang aman untuk pakaian. Untuk noda berat dan ter, oleskan cairan pembersih tidak mudah terbakar dibagian belakang noda. Ganti kertas dibawah noda jika perlu.
Tinta	Ada tinta tertentu yang tidak bisa dihilangkan. Mencucinya hanya akan menghlangkan sedikit nodaunya. Gunakan penghlangan noda. Alkoholi bekas atau cairan pembersih yang tidak mudah terbakar.
Gosong, hangus	Cuci dengan pemutih chlorine yang aman untuk pakaian. Atau, rendam dalam air panas dan pemutih oksigen sebelum dicuci. Bahan yang gosong tidak dapat dipertakl.
Lumpur	Sikatlah lumpur yang kering. Rendam dengan produk yang mengandung enzim.
Saus Milsard, tomat	Rendam dengan penghlangan noda. Lalu cuci dengan pemutih yang aman untuk pakaian.
Cat kuku	Mungkin tidak dapat dihilangkan. Balikkan bagian yang ternoda ke kertas serap. Cuci dengan penghlangan noda kuku
Cat, permis	BAHAN DASAR AIR. Bilas pakaian dalam air dingin ketika noda masih basah. Cuci. JANGAN menggunakan cat kering dibagian belakang noda. Ulangi, ganti kertas serap jika perlu. JANGAN digunakan pada bahan Asetal.
Karet, perubahan warna ke cokelat atau kuning	BAHAN DASAR AIR MINYAK & PERNIS:Gunakan larutan yang tertera pada kaleng. Bilas sebelum dicuci.
Semir sepatu	Untuk bintik-bintik, gunakan penghlangan karet yang aman untuk pakaian. Untuk perubahan warna keseluruhan, gunakan deterjen. JANGAN gunakan pemutih nonchlorine.
	CAIR: Rendam dengan bubuk deterjen dalam air. KRLM: Gosok noda di pakaian. Rendam dengan penghlangan noda atau cairan pembersih yang aman untuk pakaian. Sikat dengan deterjen dibagian ternoda. Cuci dengan pemutih yang aman untuk pakaian.

Penggunaan Air, Deterjen, Pemutih dan Pelembut

Menggunakan Pelembut Pakaian

- Encerkan pelembut dengan air.
- Pelembut yang tidak dicerinkan dapat menimbulkan bintik-bintik seperti noda minyak.
- Takarlah jumlah pelembut pakaian yang akan dimasukkan kedalam tempatnya yang bersimbol seperti ini ()
- Ikuti petunjuk yang tertera pada kemasan.

- Pelembut pakaian akan dipakai pada bilasan akhir ditandai dengan bunyi beep.
- Jika ingin menambah bilasan, **Anda harus menambah pelembut secara manual** ketika beep berbunyi pada bilasan terakhir. Hal ini dapat mengoptimalkan hasilnya.

- JANGAN isi terlalu penuh. Ruang pelembut dapat menampung max 35mL.
- Jika terlalu penuh pelembut dapat tertuang lebih awal ke pakaian dan menyebabkan noda pada pakaian. Gunakan cangkir dengan moncong diujungnya untuk menghindari tumpah.

- Efek dari pelembut pakaian dapat berbeda tergantung dari kekecilaannya. Semakin kentel kandungan pelembut pakaian, efeknya semakin berkurang. Sangat dianjurkan untuk mengencerkan pelembut pakaian dengan air, lalu dimasukkan secara manual ketika mesin berhenti beberapa kali sebelum bilasan terakhir. Fungsi ini membantu menghemat waktu mencuci manual, tersedia pada beberapa model. Harap dingat bahwa pelembut pakaian harus dicerinkan dengan air sebelum dimasukkan dan jangan dituang langsung ke pakaian.

Perhatian

JANGAN dicampur dengan deterjen atau pemutih. JANGAN pernah menuang pelembut pakaian langsung ke pakaian karena dapat meninggalkan noda. JANGAN meninggalkan mesin selama pengeringan pertama. Pilihan mencuci tidak didesain untuk digunakan dengan pelembut pakaian.

Scrud (Bentukan lilin)

Scrud adalah istilah untuk lilin yang terbentuk yang dapat timbul didalam mesin cuci jika pelembut pakaian bercampur dengan deterjen. Pembentukan ini tidak terjadi dengan sengaja di dalam mesin.

Jika Scrud telah terbentuk didalam mesin maka dapat meninggalkan noda pada pakaian Anda dan menyebabkan bau yang tidak sedap di dalam mesin Anda.

Jika ingin menggunakan pelembut pakaian sebaiknya

- Gunakan pelembut pakaian secara terpisah.
- JANGAN samapai terciprat atau terlalu penuh ketika mengisi ruang pelembut pakaian.
- Bersihkan ruang pelembut segera setelah mencuci selesai.
- Bersihkan mesin cuci Anda secara teratur. (*lihat hal 26*)
- Penggunaan air dingin dalam mencuci dapat meningkatkan kemungkinan timbulnya Scrud. Sebaiknya gunakan satu kali pencucian dengan air hangat setiap 5 kali mencuci secara teratur.
- Pemakaian pelembut yang dicerinkan secara teratur dapat mengurangi sisa-sisa zat yang dapat mendukung terbentuknya Scrud.

Menggunakan Deterjen

Takaran deterjen

Ketika memilih program cuci, level air dan jumlah deterjen (yang akan digunakan) akan ditampilkan dalam panel kontrol. Berat deterjen per kat dalam satu kotak kurang lebih 40g.

Jumlah deterjen yang tepat akan berbeda tergantung pada jumlah berat pakaian Anda (jins dan pakaian kerja mungkin membutuhkan deterjen yang banyak, sementara handuk mandi biasanya kurang).

Untuk deterjen cair dan pekat, ikuti petunjuk penggunaan yang terdapat pada kemasan.

Catatan: Untuk mengetahui apakah takaran deterjen sudah sesuai, angkatlah tutup mesin cuci kira-kira

setelah setengah waktu berjalan. Busa yang sesuai akan mengambang tipis diatas permukaan air. Busa berarti deterjen yang digunakan kurang; kotoran dan noda dapat dapat menempel kembali ke pakaian atau

ke mesin cuci Anda.

Jika deterjen yang digunakan berlebihan, pembilasan tidak akan bersih dan efisien. Selain itu dapat menyebabkan polusi lingkungan. Jika dari itu gunakanlah deterjen secukupnya.

Menambah deterjen

Buka tempat deterjen dan masukkan dalam jumlah yang tepat ke dalam kotak bubuk

deterjen.

Untuk hasil cuci terbaik, ada deterjen tertentu

yang HARUS diarturikan dahulu sebelum

dimasukkan ke dalam mesin cuci Anda.


Periksa instruksi yang tertera pada kemasan deterjen.

Jika Anda menggunakan bubuk deterjen , sangat dianjurkan untuk melarutkannya terlebih dahulu dalam air panas sebelum dimasukkan pada cucian yang menggunakan air panas atau hangat.

Jika mencuci dengan air dingin, larturkan dahulu deterjen dalam air hangat agar lebih efisien.

Menggunakan Cairan Pemutih

- Periksa label instruksi mencuci pada pakaian dan pisahkan cucian yang ingin diberi pemutih.
- Encerkan cairan pemutih chlorine.
- Ikuti dengan sekama petunjuk yang diinstruksikan pada kemasan botol pemutih.
- Sebelum menyalakan mesin, tuang pemutih sesuai takaran melalui lubang katup pemutih. Hindari dari terciprat atau kepenuhan. Pemutih dalam bentuk bubuk harus dicampur air terlebih dahulu sebelum dituang.

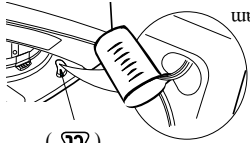

Lubang Katup Pemutih

Perhatian

- Jangan menuangkan cairan pemutih yang tidak dicerinkan dahulu langsung ke pakaian atau ke dalam mesin cuci. Hal ini dapat menyebabkan kain rusak atau berubah warna.
- Jangan mencampur pemutih chlorine dengan Amoniak atau zat asam seperti cuka atau penghilang karat.
- Campuran ini dapat menghasilkan gas beracun yang dapat menyebabkan kematian.
- Jangan menuangkan pemutih dalam bentuk bubuk ke dalam lubang katup pemutih.

Penggunaan Air, Deterjen, Pemutih dan Pelembut

Menggunakan Air

Jumlah level air

- Mesin dapat mendeteksi jumlah cucian secara otomatis, lalu mengatur level air dan jumlah deterjen yang tepat.
- Ketika memilih program cuci, level air dan jumlah deterjen (yang akan digunakan) akan ditampilkan dalam panel kontrol.
- Tabel disamping menunjukkan jumlah air.
- Level air yang secor otomatis terdeteksi mungkin berbeda meskipun level air yang tertera pada panel kontrol menunjukkan tanda yang sama. Hal ini tergantung pada jumlah cucian.
- Berat deterjen pekat dalam satu kotak gambar kurang lebih 40g.



Temperatur Air

- Mesin dapat mengatur temperatur secara otomatis menurut program mencuci.
 - Anda dapat mengubah temperatur dengan menekan tombol WATER TEMP (lihat hal 12)
 - Temperatur air mempengaruhi keefektifan semua bentuk cucian dan tentunya hasil cucinya.
- Temperatur yang dianjurkan yaitu:
- PANGAS 49~60°C... (120-140°F) Pakaian putih, pakaian dalam dan berat
 - HANGAT 29~40°C... (85-105°F) Semua pakaian
 - DINGIN* 18~24°C... (65-75°F) Hanya pakaian terang dan ringan

* Ketika mencuci dengan air dingin sebaiknya:

- Atur jumlah deterjen dan larutan lebih dahulu dalam air hangat.
- Rendam dan bersihkan dahulu noda dan kotoran yang melekat.
- Rendam pakaian yang berat.
- Gunakan pemutih yang tepat.

Temperatur dibawah 18°C... (65°F) tidak akan mengubah cucian dan dapat menyebabkan pencucian jadi kotor, noda tertinggal, dll. Deterjen dan label petunjuk cuci untuk air dingin berkisar 26~29°C... (80-85°F). Jika temperatur air terlalu dingin jika disentuh tangan, maka deterjen tidak dapat membersihkan dengan efektif.

Perhatian

Jika air mengandung besi, pakaian dapat menjadi kuning seluruhnya atau dapat timbul titik-titik atau bercak berwarna oranye. Kandungan besi tidak selalu dapat terlihat. Pemasanangan filter air mungkin dapat berguna untuk beberapa kasus seperti ini.

Menggunakan Deterjen

Deterjen

Ikuti petunjuk dalam kemasan deterjen. Penggunaan deterjen terlalu sedikit adalah masalah umum mencuci. Gunakan deterjen lebih banyak jika airnya banyak, muatannya besar, berminyak atau bertemperatur rendah. Memilih deterjen yang tepat

Dianjurkan untuk memakai deterjen untuk rumah tangga, (bubuk, cairan, larutan). Butiran sabun atau bubuk sabun yang dilarutkan sebaiknya jangan digunakan dalam mesin cuci. Jika mencuci bahan dari wol jangan lupa untuk menggunakan deterjen yang sesuai untuk bahan wol.

Persiapan Sebelum Mencuci

Label petunjuk perawatan

 
- * Lihat label petunjuk perawatan pada pakaian Anda untuk mengetahui jenis bahan dan cara mencucinya.
- Pilih-pilahlah cucian yang dapat dicuci dengan pilihan cucii, temperatur dan pengeringan yang sama.



Memilih pakaian

Untuk hasil terbaik, bahan berbeda harus dicuci dengan cara berbeda pula.

- **BAHAN** (Barat, Normal, Ringan) Pisahkan menurut jenis dan berat cucian
- **WARNA** (Putih, Terang, Gelap) Pisahkan bahan putih dengan yang berwarna
- **KOTORAN** (Penghasil, Penyerap) Pisahkan yang menghasilkan dan menyerap kotoran



Penghasil Kotoran
Penyerap Kotoran
Sintesis, Corduroy, Cetak Permanen, Kaos kaki
Baju bayi, Bahan-bahan handuk, Lap, Diapers

Periksa sebelum memasukkan

- **Periksa dan pastikan semua kantong telah kosong.** Benda seperti pakn, jepit rambut, korek api, pulpen, koin, dan kunci dapat merusak mesin dan pakaian.
- **Perbaiki pakaian yang robek atau kancing yang lepas.** Robek dapat membesar selama dicuci.
- **Rendam dan bersihkan dahulu noda kotoran dan yang luntur.**
- **Periksa instruksi mencuci** pada pakaian.
- **Keluarkan tisu dari kantong.**



Perawatan awal pada bahan ternoda

- **Bersihkan krah baju dan lengan dengan cairan pembersih sebelum dimasukkan dalam mesin.** Sebelum mencuci, bersihkan noda dengan sabun batangan, deterjen cair atau gosok dalam air dengan bubuk deterjen.
- **Gunakan penghilang noda untuk kain.** Bersihkan noda SECEPATNYA. Semakin lama dibiarkan semakin susah dibersihkan.

(Untuk langkahnya lihat hal 11)

Muatan

Jangan mencuci pakaian yang mengandung bahan mudah terbakar (ilin, dll)

Ukuran muatan

Level air harus menutupi pakaian. Susuaikan dengan ukuran muatan. Usahakan muatan tidak melebihi barts lubang atas tabung cuci. Untuk menambah cucian setelah mesin berjaln, tekan tombol START dan masukkan pakaiannya. Letakkan tutupnya dan tekan lagi tombol START.

Pakaian ringan dan besar

Pakaian seperti wol biasanya ringan, besar dan mudah mengapung. Gunakan jaring nylon dan cuci dengan sedikit air. Cucian dapat rusak jika mengapung selama dicuci. Gunakan deterjen yang telah dilarutkan untuk mencegah agar tidak menggumpal.



Cucian berukuran panjang

Gunakan jaring nylon untuk pakaian lembut dan panjang. Pakaian dengan tali atau berukuran panjang tidak akan terhilir selama dicuci. **Kencangkan kancing, kait dan tali** agar tidak mengat pakaian yang lain.



⚠ PERINGATAN

Bahaya Api

Jangan masukkan benda yang mengandung bensin atau cairan mudah terbakar lain ke dalam mesin cuci. Minyak tidak dapat hilang sepenuhnya dalam mesin cuci. Jangan mengeringkan apapun yang mengandung minyak (termasuk minyak sawit). Hal ini dapat menyebabkan ledakan atau api.

Mesin ini menyediakan berbagai metode mencuci yang sesuai dengan berbagai kondisi dan jenis cucian.

Mencuci dengan jenis cucian yang berbeda

Fuzzy(Normal) Wash

Gunakan program ini untuk mencuci sehari-hari seperti sprei, handuk, kaos. *(lihat hal 14)*

Jean Wash

Gunakan program ini untuk mencuci bahan berat, seperti baju terusan, jins. Pakaian yang tebal, berat dan sangat kotor seperti jins atau pakaian kerja juga dapat dicuci dengan ini. *(lihat hal 14)*

Wool Wash

Pakaian halus (pakaiannya dalam, wol, dll) yang mudah rusak juga dapat dicuci. *(lihat hal 14)*

Serat bahan wol yang dapat dicuci di mesin telah dimodifikasi sedemikian rupa untuk mencegah berbulu ketika dicuci di mesin. Hampir semua bahan rajutan tangan tidak terbuat dari wol yang dapat dicuci di mesin dan sebaiknya dicuci dengan tangan.

- Periksa label instruksi mencuci pada bahan wol sebelum mencuci.
- Gunakan deterjen khusus untuk wol jika ingin mencuci bahan wol.
- Bahan wol dapat dikeringkan dalam mesin untuk menghemat waktu pengeringan.
- Letakkan dan atur bahan wol diatas handuk. Jangan langsung terkena sinar matahari. (Panas dan pengering dapat membuat bahan wol jadi mengkerut dan berbulu.)

Beberapa produk yang mempunyai lapisan dari wol dan kulit dapat dicuci dalam mesin tapi dapat menyumbat pompa. (Pastikan bahwa seluruh materi bahan dapat dicuci dalam mesin cuci). Anda dapat mencuci bahan seperti ini dengan tangan dana mengeringkannya dengan mesin.

Mencuci menurut kondisi cucian

Economy Wash

Economy wash digunakan untuk mencuci pakaian ringan yang kurang dari 2.0 kg dalam waktu singkat. *(lihat hal 14)*

Speedy Soak Wash

Speedy Soak Wash didesain untuk memaksimalkan kemampuan mencuci dan dapat digunakan untuk mencuci pakaian yang berat dengan memakai program Fuzzy atau Jean. *(lihat hal 14)*

Metode mencuci lain


Delay start Wash (Cuci Tunda)

Delay start Wash digunakan untuk menunda waktu penyelesaian selama beroperasi. Jumlah jam yang ingin ditunda dapat diatur sesuai kebutuhan. *(lihat hal 16)*


Option Wash (Mencuci Pilihan)

Jika hanya menginginkan pilihan Spin, Rinse, Rinse/Spin, Wash, Wash/Rinse, Wash, Wash/Rinse/Spin, Speedy Soak/Wash/Rinse/Spin. *(lihat hal 17)*

Bagan

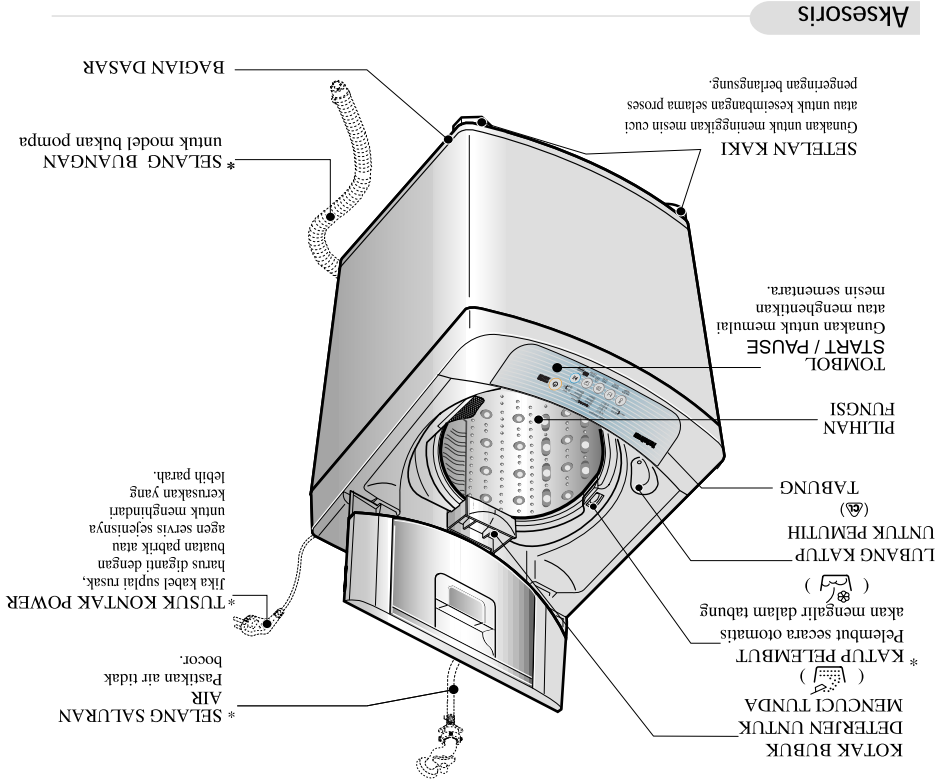

Aksesoris

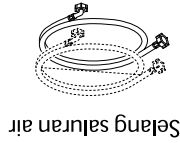

Selang saluran air



Selang buangan



Cover Anti-Tikus (pilihan)

Catatan

“*” Suku cadang dapat berbeda tergantung model.

PERINGATAN!



Simpan petunjuk ini.

PENCAMANAN AIR	• Dalam kondisi tertentu gas Hydrogen dapat terproduksi dalam pemanas air yang tidak terpakai selama dua minggu lebih. Gas Hydrogen dapat meledak dalam kondisi seperti ini. Jika air panas tidak terpakai selama dua minggu atau lebih, cegahlah kemungkinan rusak atau kecelakaan dengan mengeluarkan air panas dari keran dan biarkan selama beberapa menit. Lakukan ini sebelum menggunakan aplikasi listrik yang berhubungan dengan sistem air panas. Prosedur sederhana ini dapat mengeluarkan gas Hydrogen yang terproduksi didalam. Karena gas mudah terbakar, jangan merokok atau menyalaikan api selama proses ini berlangsung.
PEMASANGAN YANG BENAR	• Pembukaan dasar tidak boleh terhalang oleh karpet ketika mesin cuci dipasang di lantai yang berkarpet • Pasang atau letakkan mesin ditempat yang terhindar dari udara yang sangat dingin atau sangat panas. • Tempatkan mesin cuci dengan benar sesuai dengan semua kode dan arah pengaturannya. Untuk lebih lengkap lihat instruksi pemasangan. • Mesin sebaiknya diletakkan dekat dengan tusuk kontak.
AREA MENCUCI ANDA	• Jika area dibawah dan sekitar mesin cuci agar bebas dari bahan mudah terbakar seperti kertas, bahan kimia, dll • Jika dengan seksama jika mesin digunakan atau berada dekat dengan anak-anak, jangan biarkan anak bermain dengan atau didalam mesin cuci.
MENGGUNAKAN MESIN CUCI	• Gunakan mesin cuci hanya untuk keperluan mencuci seperti yang dijelaskan dalam buku panduan. • Jangan memasukkan sesuatu kedalam mesin ketika menyala. Tunggu sampai mesin telah berhenti benar sebelum membuka tuapnya. • Jangan mencampur pemutih dengan Amoniak atau zat asam seperti cuka atau penghilang noda. • Campuran bahan kimia yang berbeda dapat memproduksi racun yang dapat menyebabkan kematian. • Jangan mencuci atau mengeringkan bahan yang dibersihkan, dilucupkan, atau diuji dengan bahan mudah terbakar (seperti: lilin, minyak, cat, bensin, bahan pelarut pada dry-cleaning, minyak tanah, jangan gunakan atau letakkan bahan seperti ini dekat mesin cuci selama mencuci. • Proses pencucian dapat mengurangi kemilauan bahan. Untuk menghindari ini, ikuti instruksi mencuci bahan pakaian yang tertera pada label didalamnya. • Untuk mengurangi kemungkinan kejutan listrik, cabut kabel power atau cabut panel listrik dengan meminidahkan seketring listrik atau matikan pemutus aliran sebelum membersihkan.
CATATAN: Menekan tombol Power untuk mematikan TIDAK berarti memustuskan aliran listrik	
JKA TIDAK DICUNAKAN	
• Matikan keran air untuk menghindari tekanan pada selang dan kump untuk menghindari terjadı bocor atau patah. Periksa kondisi saluran selang, setelah 5 tahun selang mungkin harus diganti. • Sebelum mesin disimpan atau diperbaiki, keluarkan tuapnya untuk mencegah anak-anak bersembunyi didalamnya. • Jangan mencoba untuk memperbaiki atau mengganti bagian apapun dari mesin cuci kecuali jika diijinkan dalam Buku Panduan, atau jika Anda memang mengerti instruksi perbaikan yang ada dan mempunyai kemampuan untuk itu.	JANGAN PERUBAH MESIN MENGENAI MESIN DENGAN SENGAJA.

BACALAH BUKU PANDUAN INI

Dalam buku ini terdapat banyak petunjuk berguna bagaimana menggunakan dan merawat mesin dengan benar. Sedikit langkah pencegahan dapat menghemat waktu dan uang untuk perawatan mesin Anda. Dalam hal Perbaikan Gangguan, Anda akan menemukan jawaban seputar masalah umum penggunaan mesin ini. Anda mungkin tidak membutuhkan perbaikan sama sekali jika menyimak tips dalam Perbaikan Gangguan.

Pendahuluan	Informasi Pengamanan	4
	Pengenalan Bagian	5
	Fungsi	6
Sebelum Mencuci	Persiapan Sebelum Mencuci	7
	Penggunaan Air, Deterjen, Pemutih&Pelembut	8
	Petunjuk Khusus Menghilangkan Noda	11
	Fungsi Tombol	12
Program Mencuci	Fuzzy Wash (Cuci Normal)	14
	Jean Wash	14
	Wool Wash	14
	Speedy Soak Wash	14
	Economy Wash	14
Pilihan Fungsi Tambahan	Delay Start (Reservation) Wash	16
	Mencuci Pilihan	17
	Fungsi Cuna Lain	18
Pemasangan	Penempatan	19
	Menghubungkan Selang Saluran Air	20
	Menghubungkan Selang Saluran Buangan	23
Perawatan&Pemeliharaan	Metode Hubungan ke Tanah (Grounding)	24
	Membersihkan dan Merawat	25
Perbaikan Gangguan	Masalah Umum Mencuci	27
	Perbaikan Gangguan	28
Kondisi Penjaminan	Kondisi Penjaminan	29
Spesifikasi	Spesifikasi	30



Mesin cuci tidak akan beroperasi jika tutup dibuka. Mesin akan berhenti jika tutup dibuka selama mencuci, memblilas atau mengeringkan.

Fuzzy logic control

- Sensor yang terpasang didalam dapat mendeteksi secara otomatis banyaknya cucian dan microprocessornya dapat mengoptimalkan kondisi mencuci, seperti level air dan waktu mencuci yang ideal.



- Sistem kontrol elektronik yang dirancang dengan teknologi tinggi dapat menghasilkan proses mencuci yang terbaik.

Mencuci dengan Turbo drum (pilihan)



- ketika baling-baling mesin "Punch + 3" berputar, tabung mesin berputar berlawanan arah. Ini menghasilkan putaran air yang berlawanan sehingga pakaian dapat tergosok dengan kuat.

※ Untuk model: WF-T * * * * *

3 Langkah mencuci

- 3 langkah mencuci untuk performa mencuci terbaik.





Mesin Cuci

BUKU PETUNJUK

MODELS : WF-L700TC / WF-L701TC

Bacalah buku ini dengan cermat sebelum mengoperasikan mesin cuci Anda.
Simpanlah buku ini sebagai petunjuk dimasa mendatang.
Catatlah model dan nomor seri mesin cuci ini.
Berikan buku ini kepada dealer, jika Anda ingin menseervis mesin cuci ini.