

1 Remove Packaging

- The appliance is fitted with transit bolts to prevent internal damage during transport. Be careful, heavy load!
- Packing and all transit bolts must be removed before using the washing machine.
- When unpacking the base, be sure to remove the additional packing support in the middle of the base packing.

i Store original packing for future move.
Dispose of packing material according to local regulations.

2 Transit bolts

To prevent internal damage during transport, the special 4 bolts are locked. If they are not removed, it may cause heavy vibration, noise and machine to malfunction.

Remove the 4 bolts along with the rubber bungs by slightly twisting the bung.

Unscrew the 4 bolts using the spanner supplied.

Close the holes with the caps supplied.

i Keep the 4 bolts and the spanner for the future use. Refit transit bolts before transporting the appliance.

3 Requirements for installation site

Level floor: Permissible floor gradient under entire washing machine is 1°.

Power socket: Must be within 100 cm of either side of location of washing machine. Do not overload the socket with more than one appliance.

Additional Clearance: For wall, floor and door space is needed. (10cm: rear / 2cm: right & left side). Do not place or store laundry products on top of the washing machine at any times. They can damage the finish or controls of the machine.

4 Electrical connection

BS Plug Safety Details (For U.K. User)

5 Connecting water supply hose

6 Installation of drain hose

7 Level adjustment

! Safety instructions for the installation

! Troubleshooting

Owner's Manual

F1403TD(1~9)

WD-1685TK

LG

8 Technical Specification

9 Disposal

10 ! Safety instructions for use

11 Troubleshooting

12 Owner's Manual

13 F1403TD(1~9)

14 WD-1685TK

