



# OWNER'S MANUAL

# NEW TYPE CYCLONE

# VACUUM CLEANER

This information contains important instructions for the safe use and maintenance of the vacuum cleaner. Especially, please read all of the information on page 4, 5 for your safety. Please keep this manual in an easily accessible place and refer to it anytime.

VK8820\*\*\*\*



# Table of contents

<b>Important safety instructions</b> .....	4~5
<b>How to use</b> .....	6
Assembling vacuum cleaner .....	6
Operating vacuum cleaner .....	8
Using carpet and floor nozzle / all floor nozzle .....	9
Using the corner free nozzle .....	10
Using accessory nozzles .....	11
Using the sani punch nozzle .....	12~16
Emptying dust tank .....	17
Cleaning dust tank .....	18
Cleaning air filter and motor safety filter .....	19
Cleaning exhaust filter .....	20
<b>What to do if your vacuum cleaner does not work</b> .....	21
<b>What to do when suction performance decreases</b> .....	21

# IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following EC Directives :-2006/95/EC Low Voltage Directive -2004/108/EC EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION."

These words mean:



## WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



## CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



## WARNING

- **Do not plug in if control knob is not in OFF position.**  
Personal injury or product damage could result.

- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury.**  
The cord moves rapidly when rewinding.

- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**  
Failure to do so could result in electrical shock or personal injury.

- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**  
Doing so could result in death, fire or electrical shock.

- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**  
The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.

- **Do not handle plug or vacuum cleaner with wet hands.**  
Doing so could result in death or electrical shock.

- **Do not unplug by pulling on cord.**  
Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.

- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**  
Failure to do so could result in electrical shock or personal injury.

- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord.**  
Keep cord away from heated surfaces.

- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**  
Failure to do so could result in electrical shock or personal injury or fire or product damage.

- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**  
Personal injury or product damage could result.

- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not use vacuum cleaner if it has been under water.**  
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not continue to vacuum if any parts appear missing or damaged.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not use an extension cord with this vacuum cleaner.**

Fire hazard or product damage could result.

- **Using proper voltage.**

Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.

- **Turn off all controls before unplugging.**

Failure to do so could result in electrical shock or personal injury.

- **Do not change the plug in any way.**


Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.

- **Repairs to electrical appliances may only be performed by qualified service engineers.**

Improper repairs may lead to serious hazards for the user.

- **Do not put fingers near the gear.**

Failure to do so could result in personal injury.

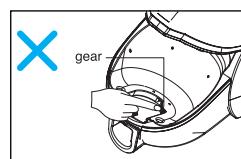

# IMPORTANT SAFETY INSTRUCTIONS

## ⚠ CAUTION


- **Do not put any objects into openings.**  
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**  
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust tank and/or filters in place.**  
Failure to do so could result in product damage.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**  
These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**  
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**  
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**  
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**  
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**  
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**  
Failure to do so could result in personal injury or product damage.

- **Use accessory nozzles in sofa mode.**  
Failure to do so could result in product damage.
- **Don't grasp the tank handle when you are moving the vacuum cleaner.**  
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result. You should grasp the carrier handle when you are moving the vacuum cleaner. (Page 8)
- **If after emptying the dust tank the indicator light is on(red), clean the dust tank.**  
Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**  
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**  
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**  
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**  
Failure to do so could result in fire hazard.
- **If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**  
Children should be supervised to ensure that they do not play with the appliance.

### Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch. If the vacuum cleaner still does not run, contact a qualified electrician.

# How to USE Assembling vacuum cleaner

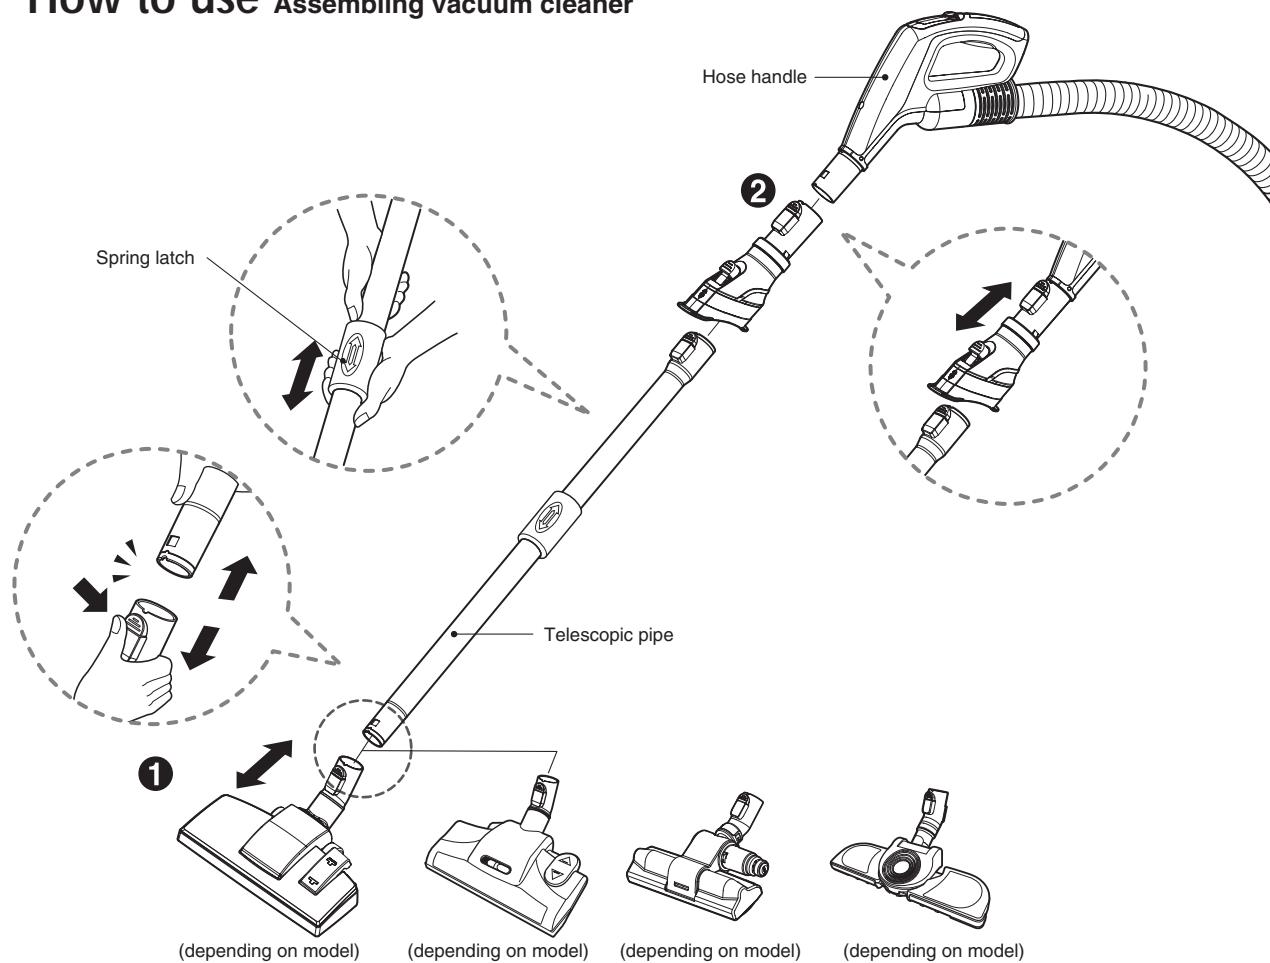


## ① Carpet and floor nozzle(depending on model)

Push the nozzle into the telescopic pipe.

## ② Telescopic pipe


- Push telescopic pipe firmly into hose handle.
- Grasp the spring latch to expand.
- Pull out the pipe to desired length.

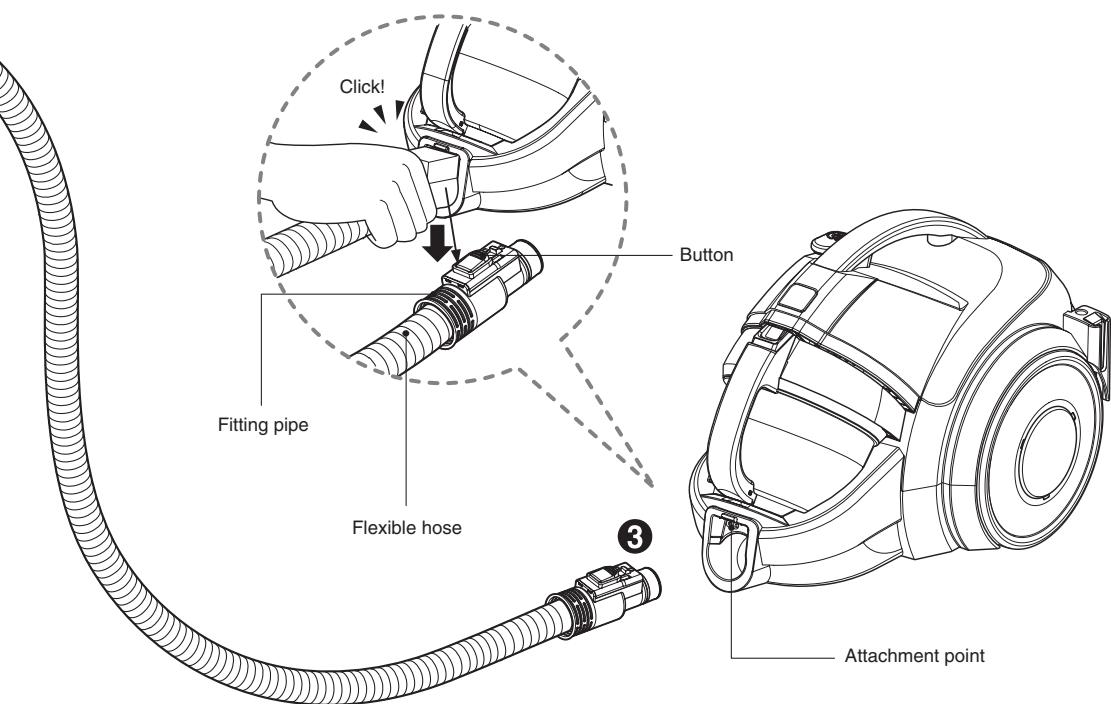

### ③ Connecting the hose to the vacuum cleaner

Push the fitting pipe on the flexible hose into the attachment point on the vacuum cleaner.  
To remove the flexible hose from the vacuum cleaner, press the button situated on the fitting pipe, then pull the fitting pipe out of the vacuum cleaner.

# How to use Operating vacuum cleaner

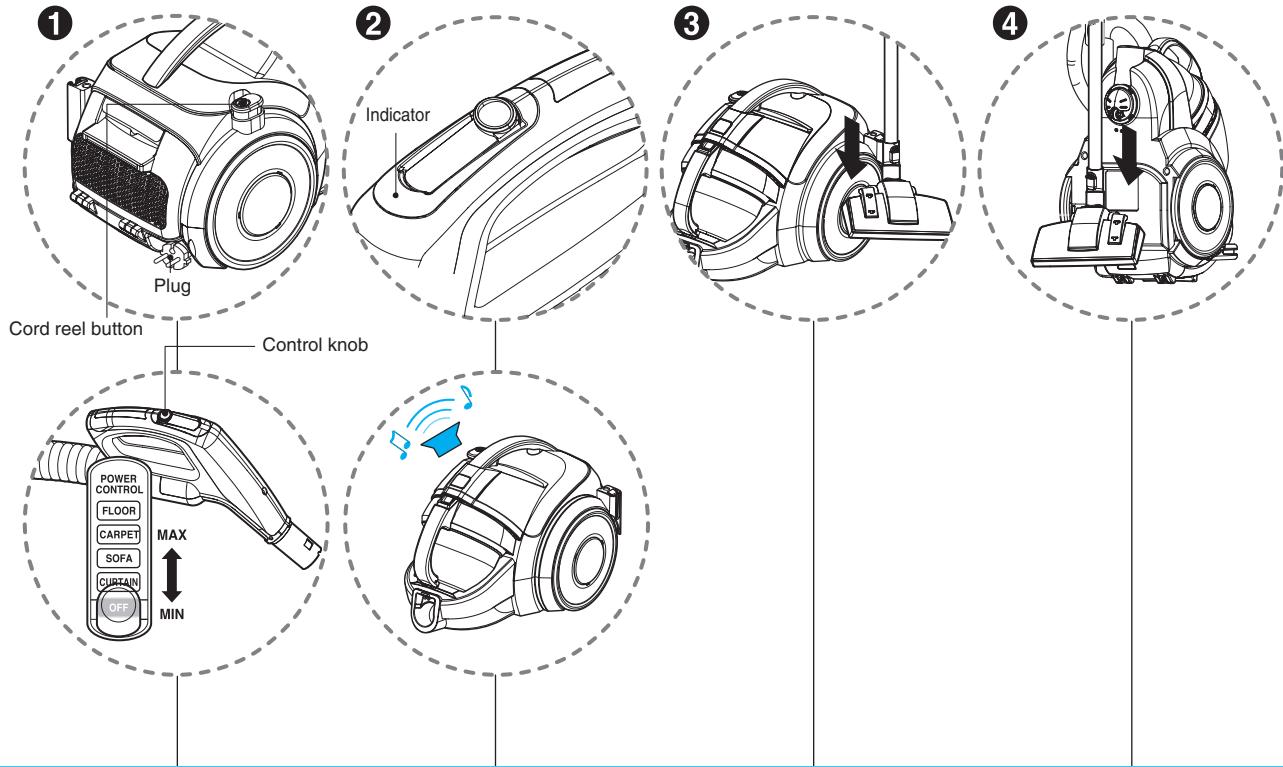

## ① How to operate

- Pull out the power cord to the desired length and plug into the socket.
- Place the control knob of the hose handle to the required position.
- To turn off, slide control knob to OFF position.
- Press the cord reel button to rewind the power cord after use.

## ② Indicator and alarm sound

- The indicator light of the hose handle is on and alarm will sound when dust tank is full. After about 1 min 30 sec, vacuum cleaner will turn itself off and alarm will sound.
- Empty the dust tank and reuse the vacuum cleaner.

## ③ Park mode

- To store during vacuuming, for example to move a small piece of furniture or a rug, use park mode to support the flexible hose and nozzle.
- Slide the hook on the nozzle into the slot on the side of vacuum cleaner.

## ④ Storage


- When you have switched off and unplugged the vacuum cleaner, press the cord reel button to automatically rewind the cord.
- You can store your vacuum cleaner in a vertical position by sliding the hook on the nozzle into the slot on the underside of the vacuum cleaner.

### NOTE

When indicator light flashes and alarm sounds :

1. Dust tank is full
  - slide handle knob to OFF position and empty dust tank
2. Power is on without dust tank
  - slide handle knob to OFF position and reattach dust tank
3. Rotating plate in the dust tank is restricted because of obstruction
  - slide handle knob to OFF position and remove obstruction

# How to USE Using carpet and floor nozzle / all floor nozzle

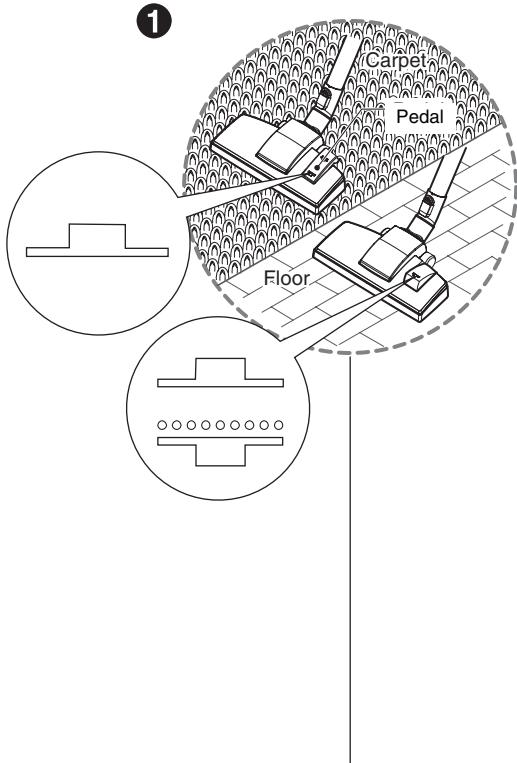

## ① Carpet and floor nozzle (depend on model)

### • The 2 position nozzle


This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.

### • Carpet or rug position

press the pedal (  $\square$  ) to lower brush.

### • Hard floor position (tiles, parquets floor)

Both pedal position are suitable.

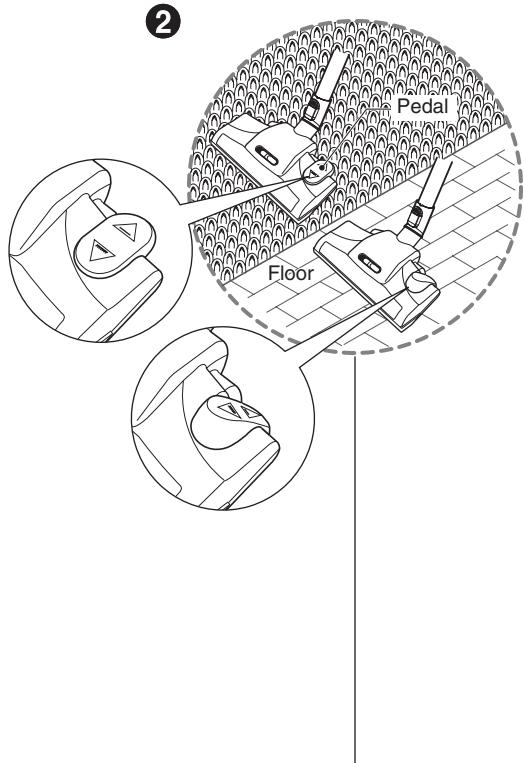

## ② All floor nozzle (depend on model)

### • The 2 position nozzle

This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.


### • Carpet or rug position

Press the pedal (  $\triangle$  ), then brush is will rotate.

### • Hard floor position


Press the pedal (  $\triangle$  ), then brush will stop rotating.

### Cleaning carpet and floor nozzle

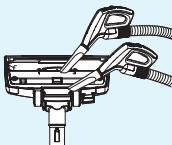

- Clean the hole and brush of the nozzle.


### Cleaning carpet and floor nozzle

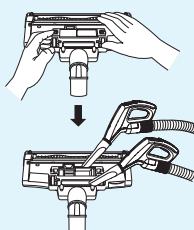

- Open the cover by pulling the hook.

- Clean the hole and brush of the nozzle.


## How to USE Using the corner free nozzle

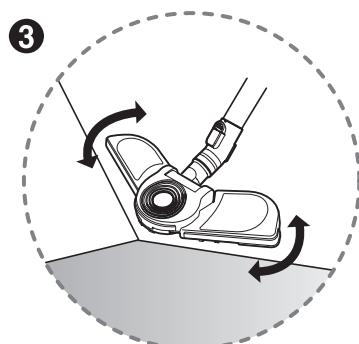


### ③ Corner free nozzle(depending on model)

- You can perform cleaning at any place such as corner or narrow crack by utilizing the structure that both sides of the suction hole are leaned back.


# How to use Using accessory nozzles

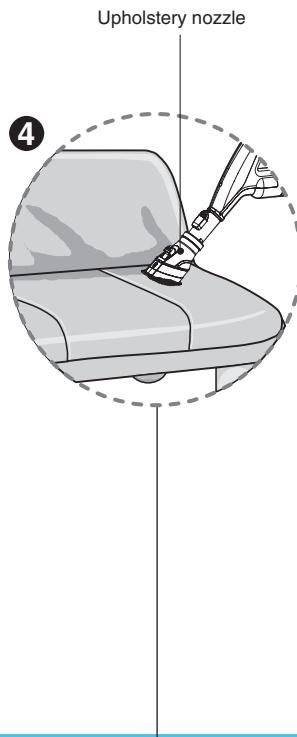

④ Upholstery nozzle

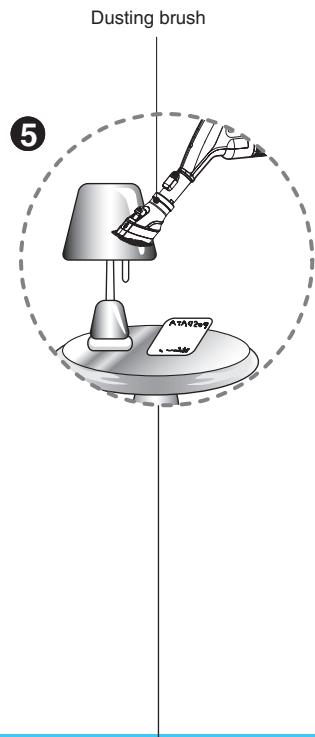

⑤ Dusting brush

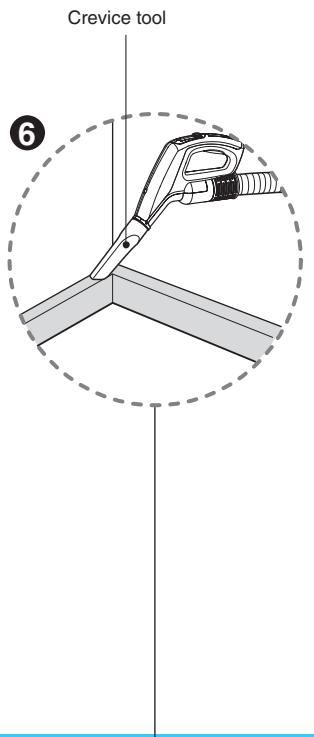


⑥ Crevice tool

Upholstery nozzle is for vacuuming upholstery, mattresses, etc.


Dusting brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.

Crevice tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.


Push the button

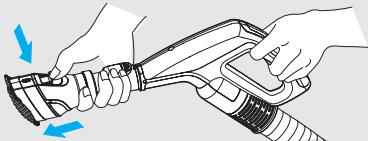

< Upholstery nozzle mode >

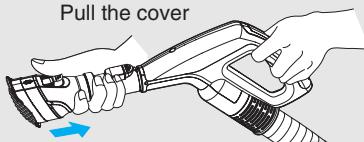


< Dusting brush mode >

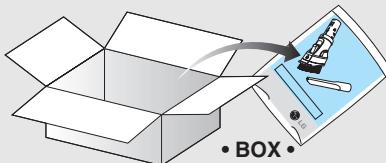

• Accessory nozzles include in the "PE BAG" with owner's manual.

## NOTICE

 Use accessory in the sofa mode



# How to USE Using the sani punch nozzle

## Features


This nozzle picks up even dust inside through beating. The bottom part can be separated to be cleaned. Since the bottom does not stick to the surface, vacuuming is easy.

## How to use

Follow the directions below for proper use.

## Assembly

Connect the nozzle to the telescopic tube.

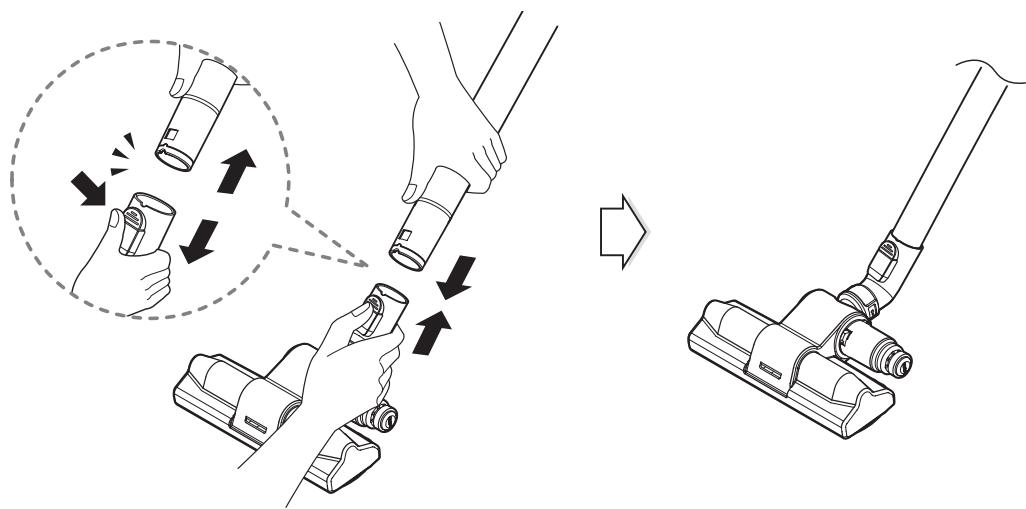


## Sani punch nozzle(depending on model)

Set the suction power control switch to MAX POWER before vacuuming. Depending on the type of bedding, handling may be awkward or it may cause a lot of noise. If this is the case, adjust the suction power control switch to a lower setting.

This sani punch nozzle is for effective cleaning of beds and blankets to remove mites and dust.

Effective cleaning

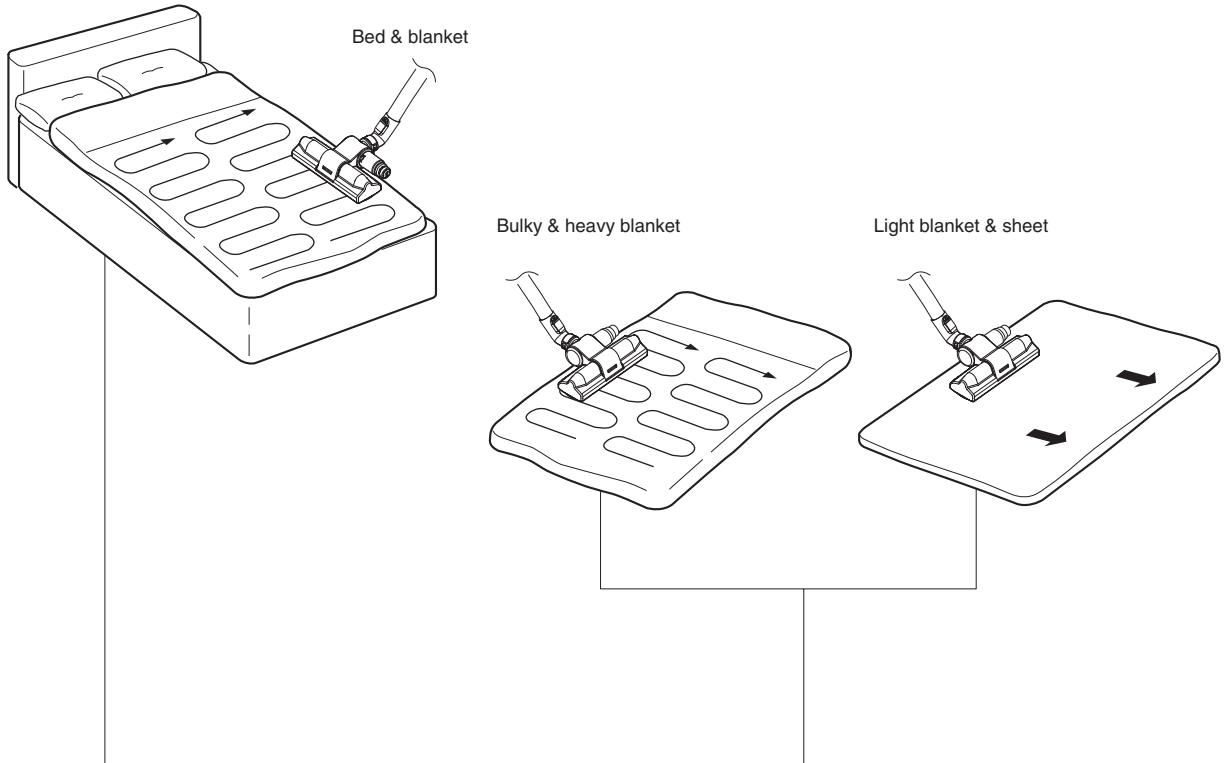


#### When using on the bed

Lay out the blanket  
and vacuum it on the bed

#### When using on the floor

It is easier to clean a light blanket or sheet  
by pushing the nozzle in the direction of the  
arrow.  
To increase cleaning efficiency for light  
blankets, lay on top of a bulky blanket and then  
clean.


For simple cleaning of the vacuum nozzle, detach the sani punch nozzle from the telescopic tube and attach the crevice tool to vacuum dust.

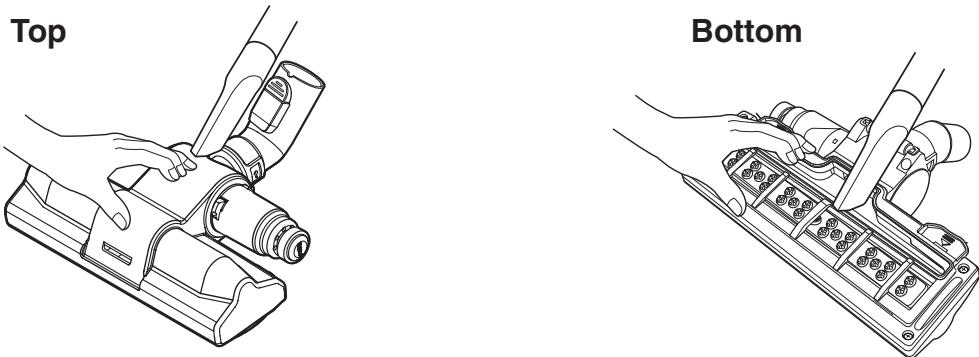

Since the vibrator inside is composed of precision parts, never disassemble the body.  
Be careful not to let foreign objects clog the air suction part on top of the vacuum nozzle.  
Since removal of the punch bar may cause performance problems, do not warp or remove it.  
Attach the bottom plate properly before using. Without this bottom plate, it may not function.

Since this vacuum nozzle has been made exclusively for cleaning beds, blankets and upholstery, use it only for these cleaning purposes.  
(Using it to clean the floor may result soiling it or a drop in performance, do not use it for such purposes.)

Follow the instruction below for through washing.  
(Do not soak the entire body of the vacuum nozzle in water, it may cause the vibrator to malfunction)

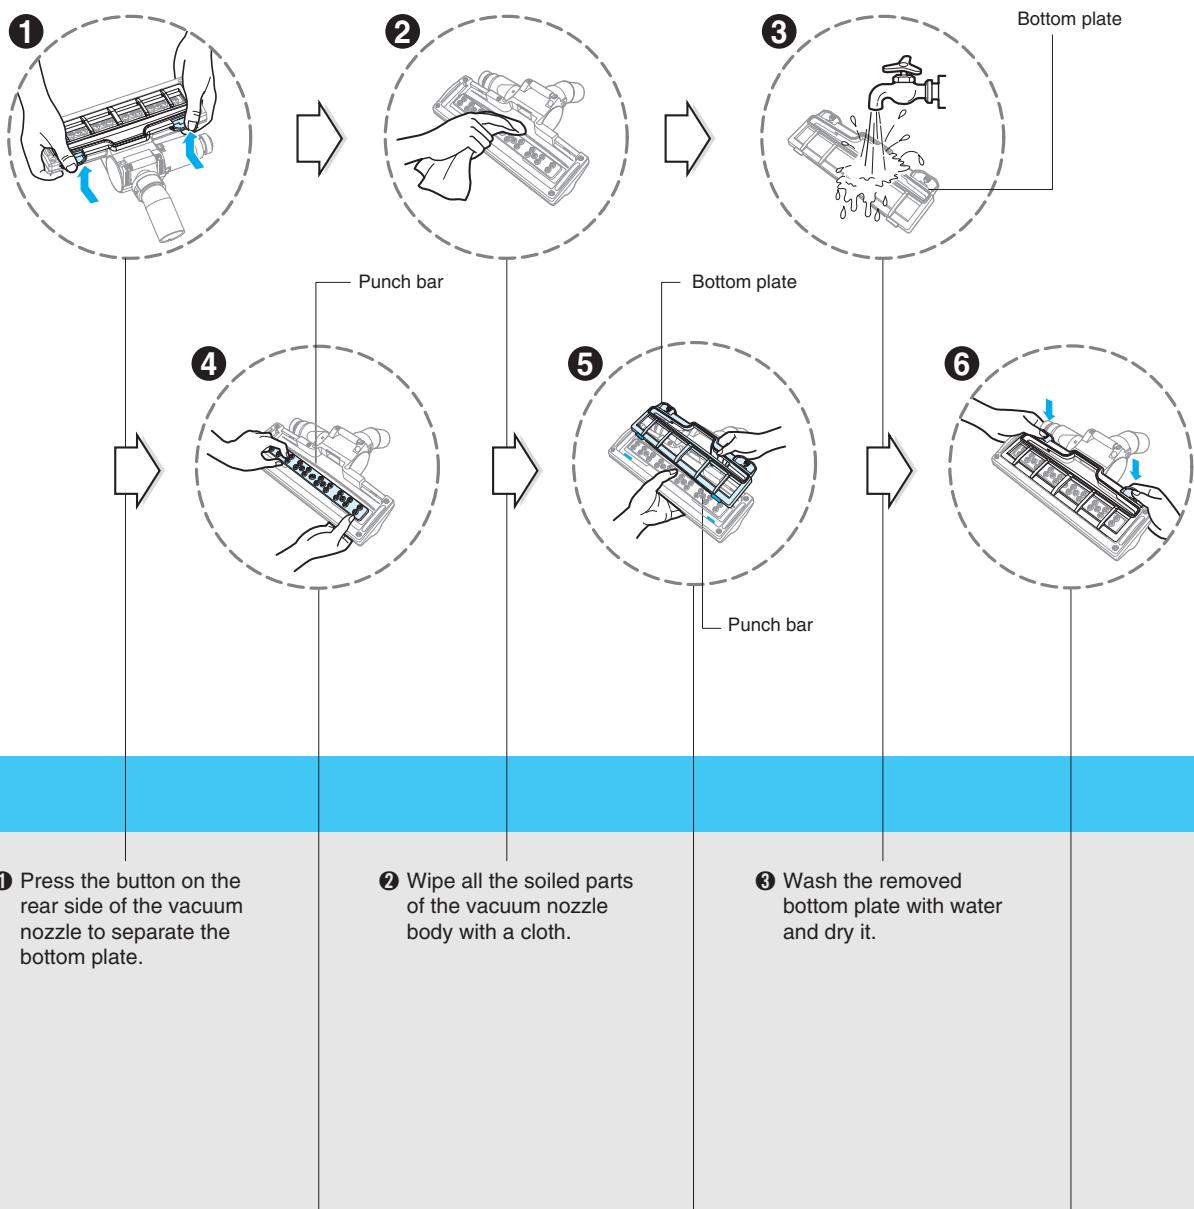

① Press the button on the rear side of the vacuum nozzle to separate the bottom plate.


② Wipe all the soiled parts of the vacuum nozzle body with a cloth.

③ Wash the removed bottom plate with water and dry it.

④ Straighten the punch bar on the lower section.

⑤ Insert the attachment projections on bottom plate to the vacuum nozzle grooves.

⑥ Push down the tabs to secure.

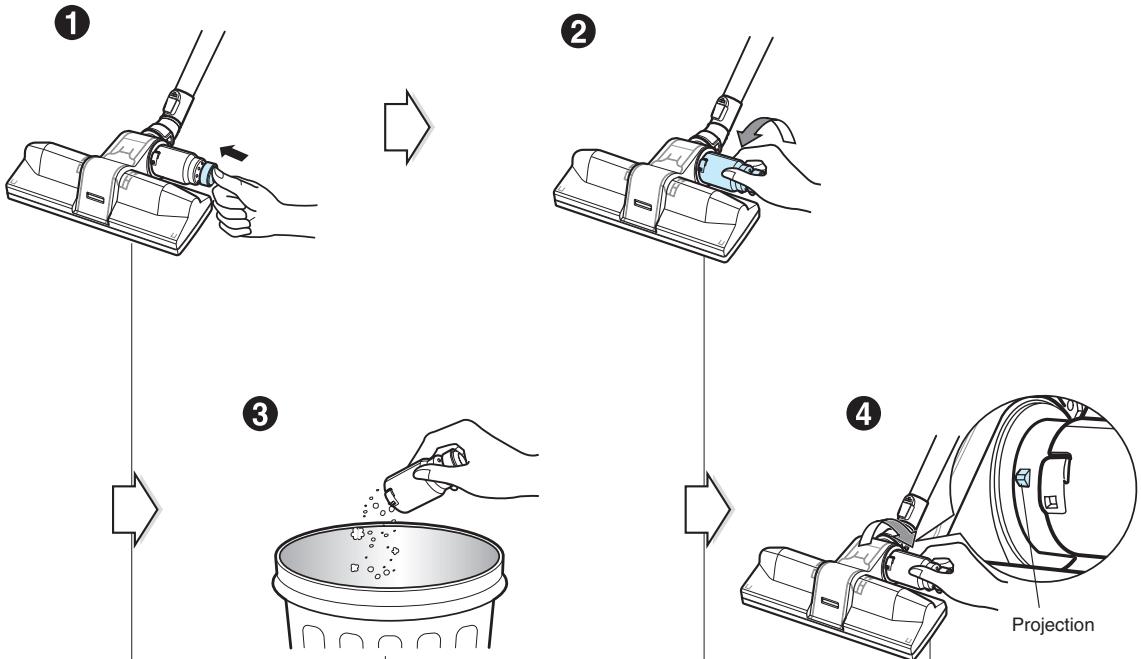


① Push the button 2-3 times when the dust is filled in the dustbin while cleaning

② When the dust is fully filled after cleaning, take the bin and turn it counterclockwise to disconnect

③ Waste the dust in the bin.

④ Take the bin to fix into the projection part and then turn it clockwise to connect.

# How to use Emptying dust tank

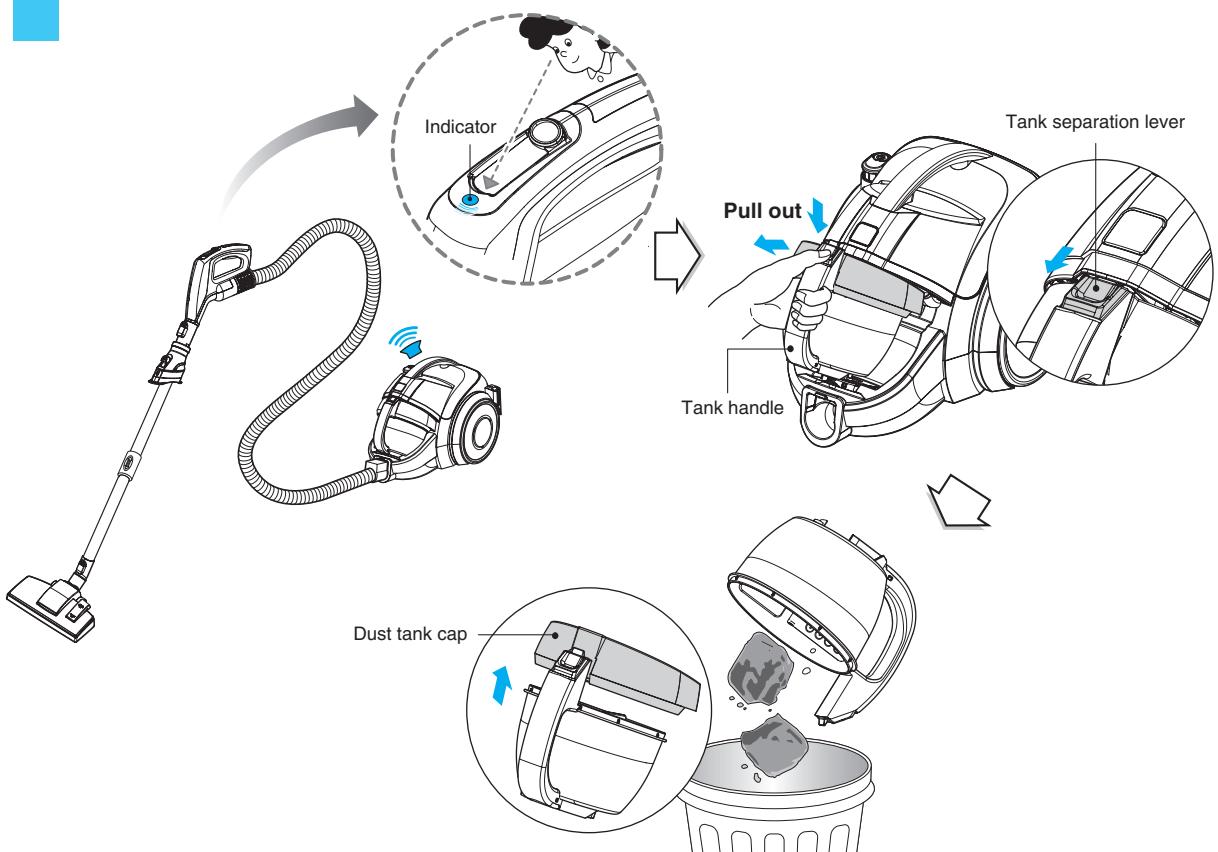

The dust tank needs emptying when indicator light is on.


- Turn off the vacuum cleaner and unplug it.
- Grasp the handle of the tank and then press the tank separation lever.
- Pull out the dust tank.
- Empty the tank and then assemble the dust tank as below

## NOTICE

If suction power decreases after emptying dust tank,  
clean dust tank ➡ next page

Since dust tank is full, indicator continues to flash for  
1 minute and suction power will decrease for a while,  
then vacuum cleaner will turn itself off.

## Assembling dust tank

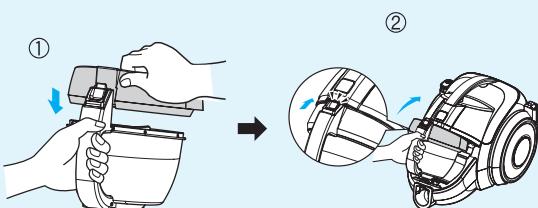


## Moving the vacuum cleaner

- Don't grasp the tank handle when you are moving the vacuum cleaner. The vacuum cleaner's body may fall when separating tank and body.  
You should grasp the carrier handle when you are moving the vacuum cleaner.



# How to use Cleaning dust tank

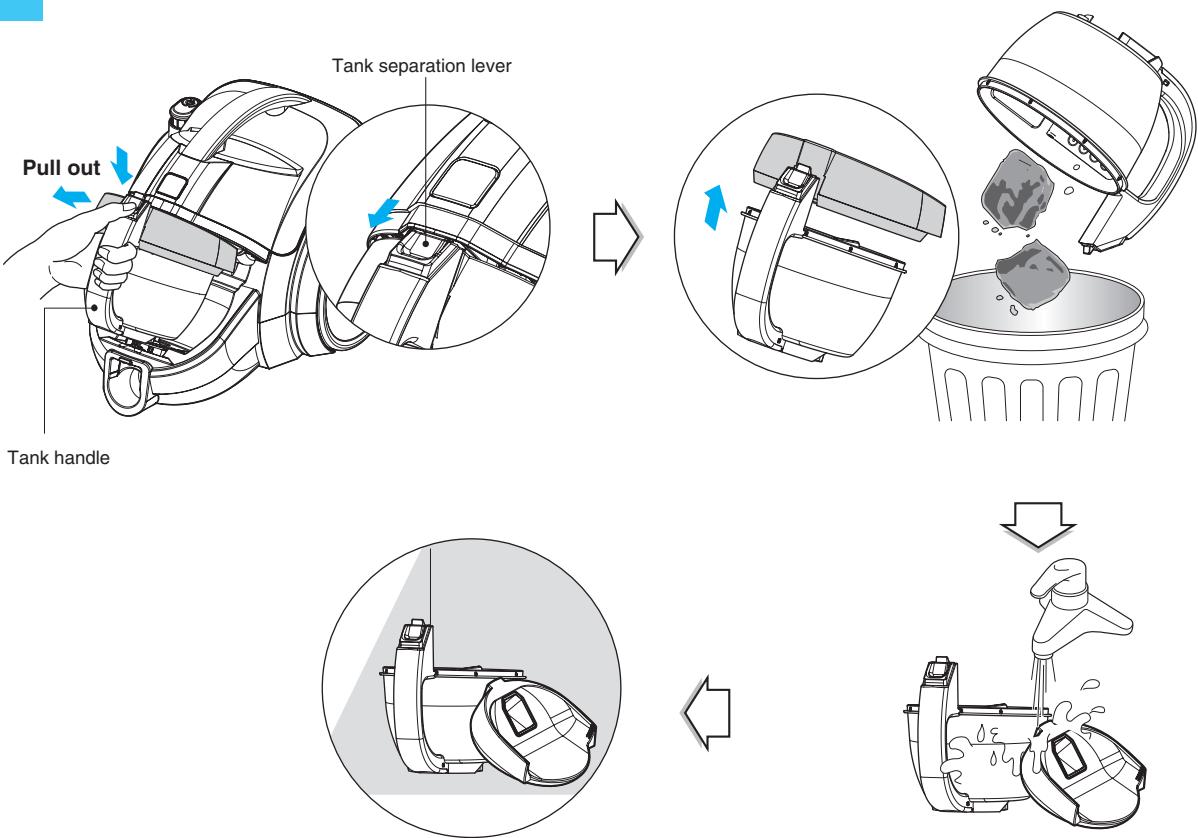


- Press tank separation button and pull out dust tank.
- Raise dust tank cap
- Dry fully in shade so that moisture is entirely removed.

## NOTICE

If suction power decreases after cleaning dust tank, clean air filter and motor safety filter. ➡ Next page

# How to USE Cleaning air filter and motor safety filter

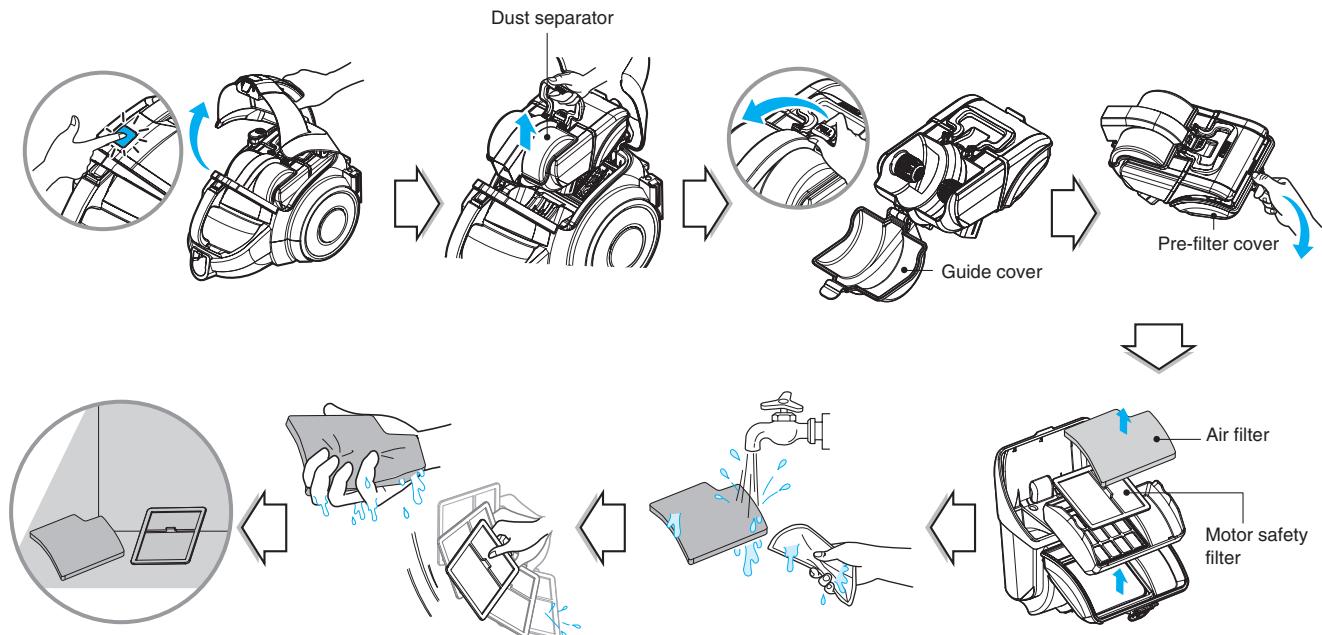

If suction power is decreased after cleaning dust tank or indicator light is on, clean air filter and motor safety filter.

Air filter and motor safety filter are located at the up of vacuum cleaner in the above figure.

- Open the Vacuum cleaner cover by pushing the button.
- Grasp the handle of the dust separator and take out it.
- Open the guide cover by pulling the guide cover lever and remove dust.
- Open the pre filter cover by pulling the pre filter cover lever and take out pre filter assembly.
- Wash air filter and motor safety filter with water.
- Do not wash filters with hot water.
- Dry fully in shade so that moisture is entirely removed.
- Air filter and motor safety filter should be cleaned in the above case.


## NOTICE

If filters are damaged, do not use them.

In this cases, contact LG Electronics Service Agent.

Wash filters at least once a month.

## How to use Cleaning exhaust filter

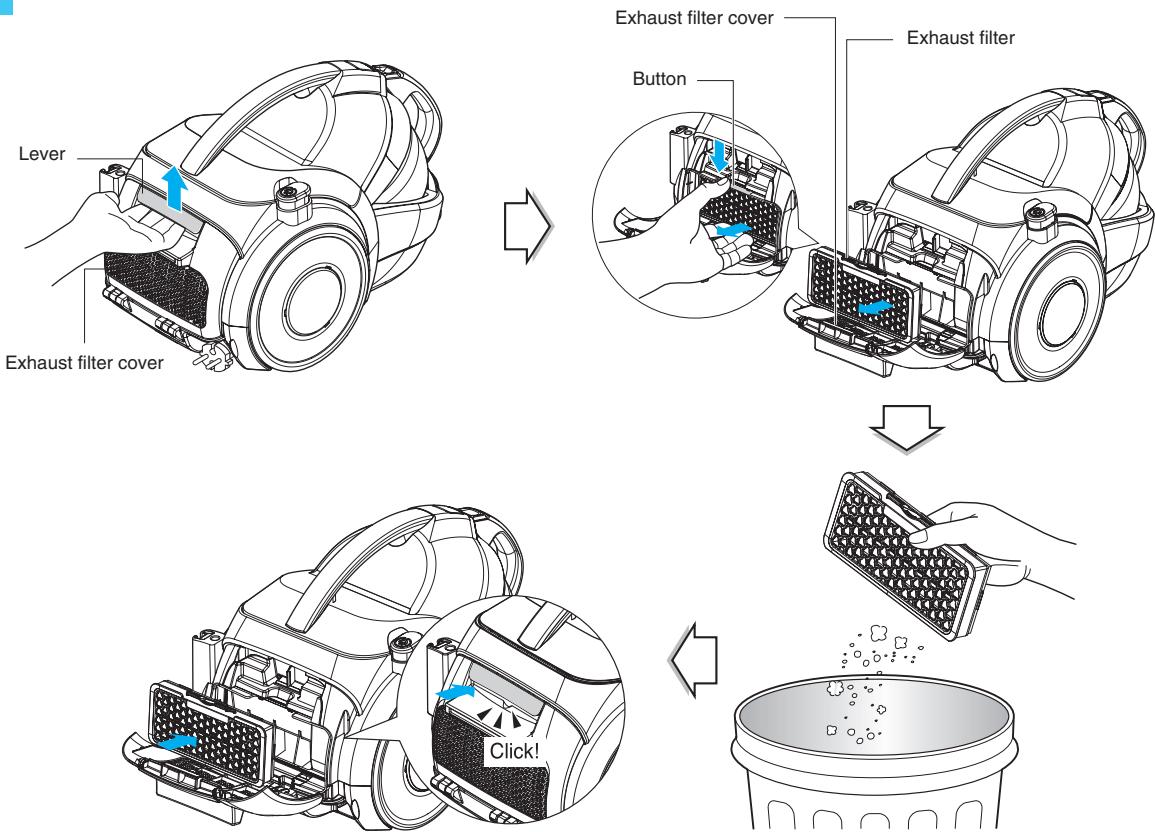

- The exhaust filter is a reusable.
- To clean the exhaust filter, remove the Exhaust filter cover on the body by pulling out it.
- Separate the exhaust filter.
- Dust off filter.(Do not wash filter with water.)
- The exhaust filter should be cleaned at least a year.

### Exhaust filter cover assembling

- Fit exhaust filter cover lugs to the grooves of vacuum cleaner body.
- Join it the body.

## What to do if your vacuum cleaner does not work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

## What to do when suction performance decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic pipe, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust tank is not full. Empty if necessary.
- Check that the exhaust filter is not clogged. Clean the exhaust filter if necessary.
- Check that the air filter is not clogged. Clean the air filter if necessary.

# Note



# Note





Made in Korea