



User Manual

LG Condensing Dryer

**RC8011A / RC8011B / RC8011C
RC8011A1 / RC8011B1 / RC8011C1
TD-C8011C**


Please read this manual carefully prior to use.
Keep it for future reference.
Write down model name and serial number of your product.
Have all these details ready when you call for servicing.

Features



Ultra Big Capacity Drum

LG ultra big 8.0kg dryer allows you to dry more of your wash load at one time.

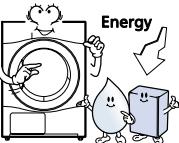

Lower Energy Consumption

LG dryers use less energy than conventional dryers due to the cutting-edge technology we have applied to the drying system and to the heat control mechanism. This LG Dryer has been designed to save you money.




Reduced Drying Times

Drying times are now shorter because of efficient air flow mechanism and optimised heater.



Reduced Noise Levels

We have reduced the operating noise of this LG Dryer by using innovative sound-absorbing and noise-screening technologies, making it much quieter than conventional dryers.

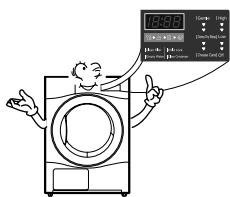

Easy to Use

The wide, electronically controlled LED display on this machine is very easy to use. Simply select the programme you require and your LG Dryer will do the rest.

Contents

Safety Instructions.....	3
Installation Instructions	6
Appearance & Design	9
Operating Your Dryer	10
Additional Functions	13
Caring for Your Dryer	15
Additional Tips for Smart Use	18
Troubleshooting Guidelines	20
Technical Data.....	22
Warranty	23


Safety Instructions

To help reduce any risk of electric shock, fire, or other personal or property injury when using your dryer, please follow the basic safety instructions.

⚠ WARNING


Serious injury or death may occur when not observing the following rules.

🚫 Not allowed actions.

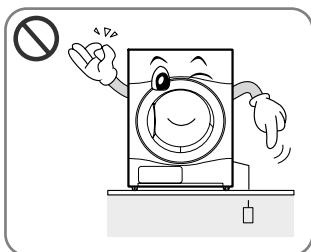


- Before plugging in the power cord, make sure the cord is grounded and connected to the circuit breaker.

No grounding may cause breakdowns or Short circuit.

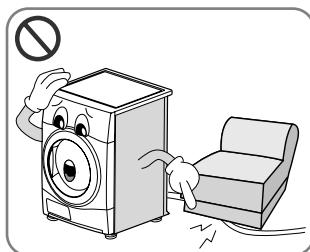


- Do not use a damaged power cord or place heavy objects on the cord.

The damaged power cord may cause fire or short circuit.

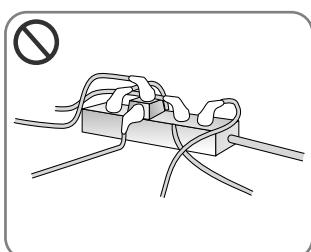


- Do not share the electrical socket with other appliances. Do not use extension power socket.

Over heating of outlet may cause fire.

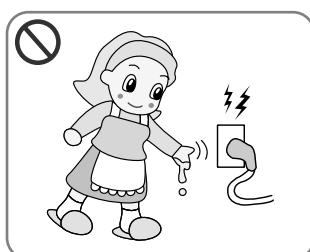


- Do not grasp power cord or switch on/off with wet hands.

It may cause electric shock.

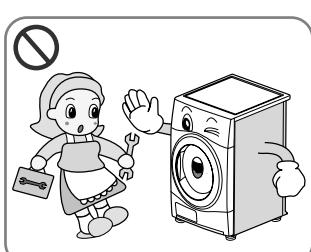


- Do not disassemble the top plate during installation.

It may cause breakdowns, fire or short circuit.

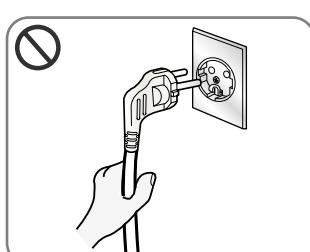


- Disconnect the power cord by grasping the plug, not the cord.

It may cause cutting off wires so results in hot heat or a fire. I don't understand this sentence.

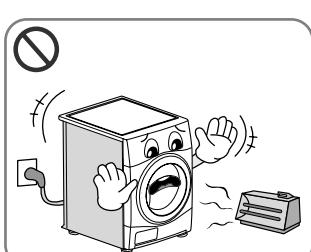

- Keep the dryer away from electric stove, candle and any inflammable objects.


These items may melt come of the parts and result a fire.

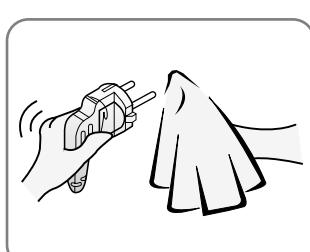

- Wipe the dirts and stains around the power cord and insert firmly back to the socket.

Dirts around it and improper connection may cause fire.


Safety Instructions

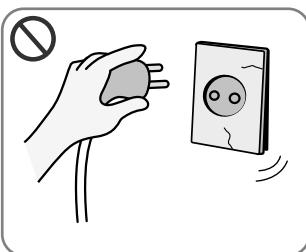

- Do not use damaged power cord, plug and socket.

.....


It may cause fire or an electric shock.

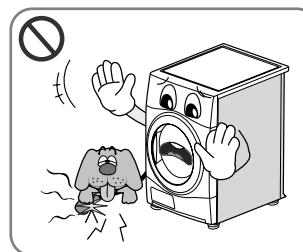

- Prevent pets biting the dryer.

.....


Pets may die from an electric shock or damage the surface of the dryer.

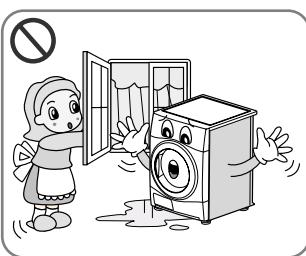

- Do not install or store the dryer where it will be exposed to the weather.

.....


It may cause an electric shock, fire, malfunction or deformation.

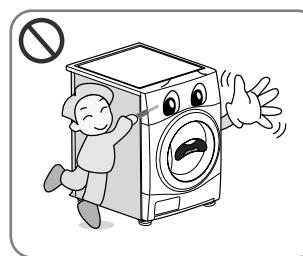

- Do not press the button with sharp edged devices like a screwdriver or a pin.

.....


It may cause electric shock.

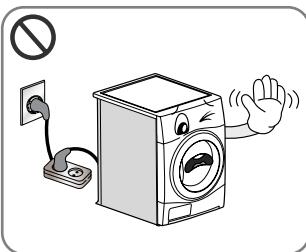

- Do not use an extension cord or an adaptor to connect the power cord.

.....


It may cause an electric shock or fire.

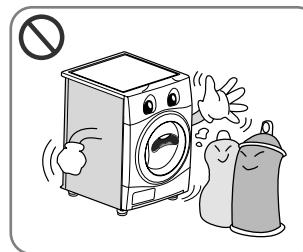

- Do not dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.)

.....


It may cause explosion or fire.

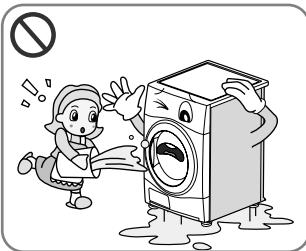

- Do not splash water on to the dryer.

.....


It may cause fire or short circuit.

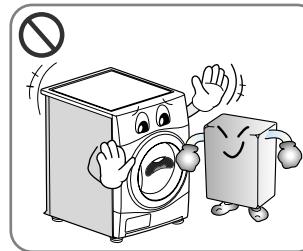

- Do not place flammable items near the dryer.

.....


It may cause toxic gas, parts damage, an explosion or fire.

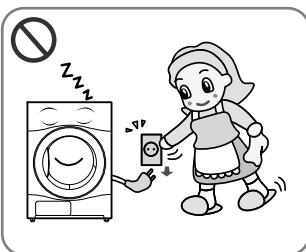

- Unplug the power cord when cleaning or not using the dryer.

.....

Water or dirts may cause electric shock.

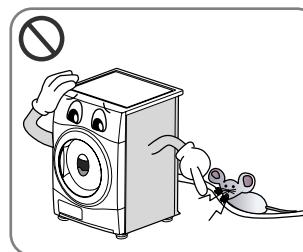

- Keep the dryer away from the reach of the cockroach and other insects.

.....


These pest might bite and damage the power cord.



- Do not allow children or pets to play on or inside the dryer.

.....

Children may fall off. Pets or children may be wounded by the rotating parts or suffocated inside the drum.

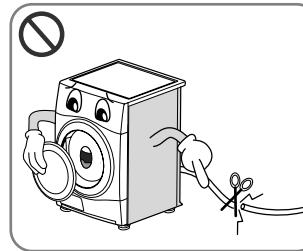


- Before disposing off the dryer, dismantle the door and cut the power cord in half.

.....

This is to prevent children playing inside the drum and others mishandle the dryer; and get injury.


Safety Instructions

Safety Instructions

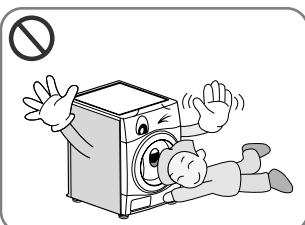


- Young children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.

Children may fall off. Pets or children may be wounded by rotating parts or suffocated inside drum.

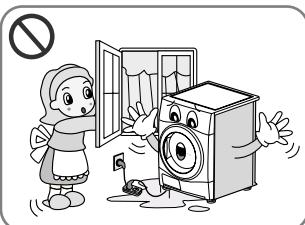


- If this appliance is supplied from a cord extension set or an electrical connector, portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

It may cause an electric shock, a fire, malfunction and deformation.

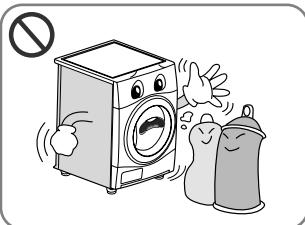


- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

It may cause explosion and/or fire by spontaneous combustion.

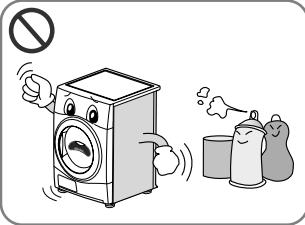

- Items that have been previously cleaned in washed in, soaked in, or spotted with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances should not be used in a tumble dryer.

It may cause explosion and/or fire by spontaneous combustion.

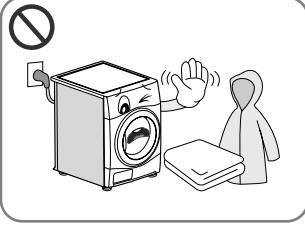


- Items made of foam, rubber, plastic, or other heat-sensitive fabrics (such as bathroom rugs, nonslip mats or raincoats) should not be dried in a tumble dryer on a heat setting.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

It may cause explosion and/or fire by spontaneous combustion.



- Plastic articles such as shower caps or babies waterproof napkin covers should not be placed in a tumble dryer.

It may cause an explosion and a fire by spontaneous combustion.

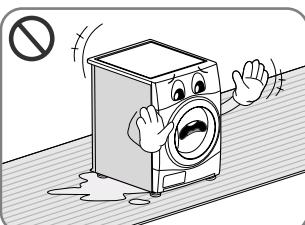

- If the dryer is installed on the carpet, it might cause some damages by the ventilated air.

It may cause explosion and/or fire by spontaneous combustion.

- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Installation Instructions

The following instructions will guide you through the initial steps of installing your dryer. Please note that every section of this manual provides important information regarding the installing and use of your dryer, and it is important that you review this entire manual before proceeding with any installation or use. Be sure to observe all listed warnings and cautions. These installation instructions are intended for use by qualified installers. Read these installation instructions completely and carefully.

Safety Information

Risk of Injury

The dryer is very heavy so you shouldn't try to lift it alone.

Do not lift the dryer by grasping any of the protruding parts e.g. the jog dial or the door, they may break off.

Risk of Tripping

Risk of tripping caused by hoses hanging down or cables. Ensure there are no loose hoses or cables.

Check the dryer for damage occurred during transportation.

Do not connect the dryer if it has visible signs of damage.

If you are not sure, contact your local agent. Always empty the dryer completely before transporting it.

Your dryer should not be located near gas hob, cooker, heater or eye level grill as flames from the burners could cause damage to your dryer. When the dryer is fitted under a work surface, allow 15 mm space from each side of the dryer for air to exit the rear grille. This airflow is critical to condense the water during drying.

If you use this dryer near or stacked on top of a washing machine, separate main plugs and sockets must be used for each appliance. Do not use 2-way adaptor or extension socket.

You can stack the dryer on top of washing machine to save the space. A stacking kit is available from your local shop.

Stacking Installation Instructions

The LG Dryer can be placed on the top of a front loading washing machine. They are to be fixed with stacking kit (See the next page). This installation must be conducted by an experienced installer to ensure both washer and dryer are properly fixed together. If this work is done carelessly, dryer may fall off during operation.

More importantly, certain washer model has matching dryer for stacking, please check with local agent for advice.

⚠ CAUTION

CAUTION Concerning the power cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

I nstallation Instructions

Grounding Instruction

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Additional Grounding Procedure


Some local codes may require a separate ground. In such cases, the required accessory ground wire, clamp and screw must be purchased separately.

Condensed Water Drain

The dryer can drain water without delivering to water container. Water is directly pumped out of the dryer.



Note

For better drying performance, Please keep the rear of product distance from wall.

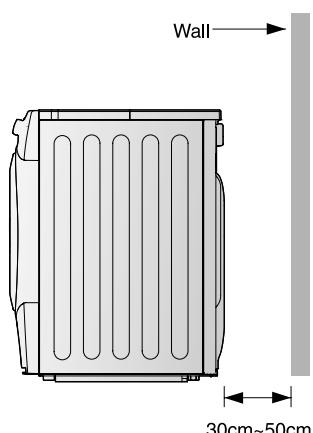


Stacking Kit

In order to stack this dryer on a LG washing machine, LG stacking kit is needed.

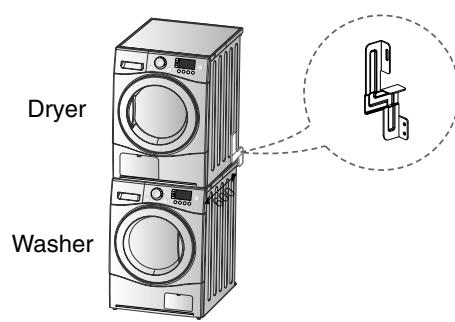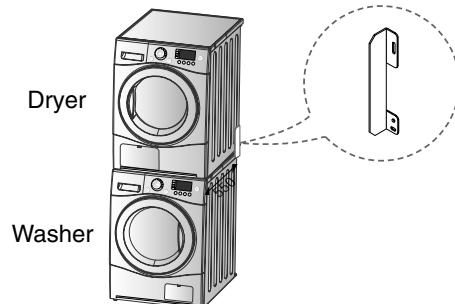

Washer top plate size


 
Shape	550 mm	600 mm
		

- You must use stacking kit according to your washer top plate size

In order to stack this dryer on LG washing machine, you must purchase the LG stacking kit that is fitted by LG washing machine top plate size.

Installation Instructions

Level the Dryer

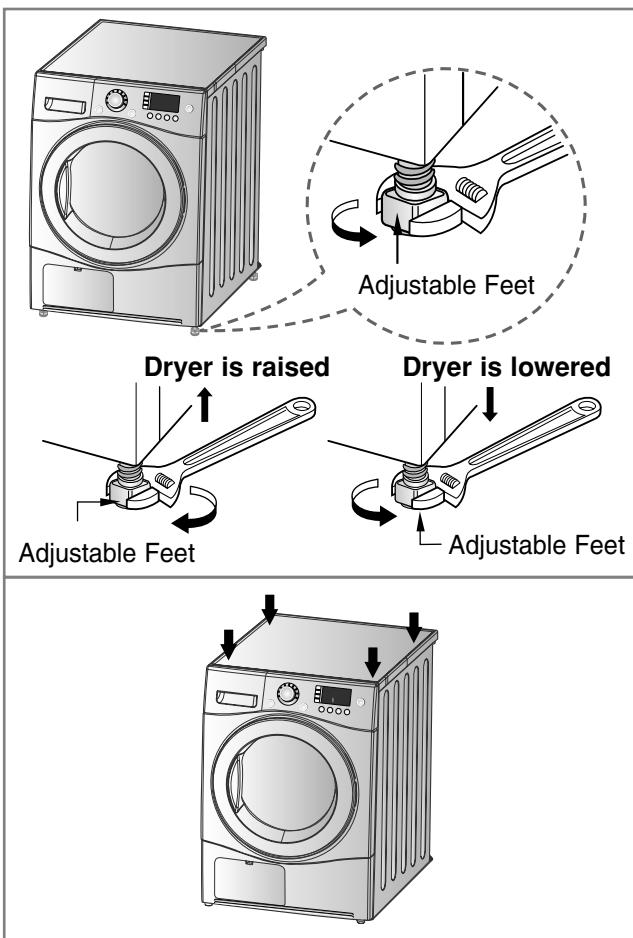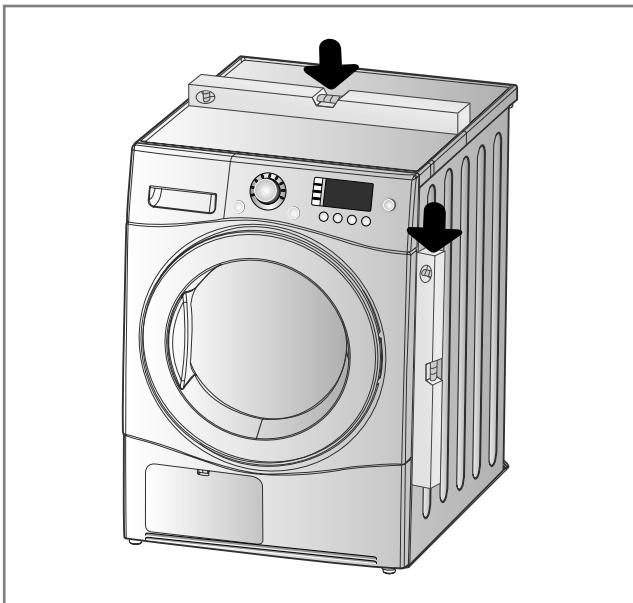

1. Leveling the dryer is to prevent undesirable noise and vibration.

When placing your dryer in an solid and level area where water is not dripping and freezing, flammable materials are not stored.

2. If the dryer is not properly level, adjust the front leveling legs up and down as necessary.

Turn them clockwise to raise and counterclockwise to lower until the dryer is not wobbling both front-to-back and side-to-side.


* Diagonal Check

*When pushing down the edges of the machine, the machine should not move up and down at all.
(Please, check both of two directions)*


If machine rocks when pushing the machine top plate diagonally, adjust the feet again.

Appearance & Design

■ RC8011A/B/C, TD-C8011C

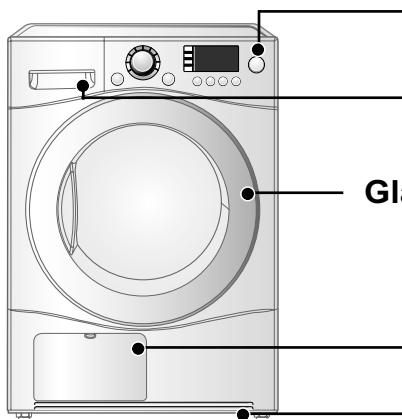


■ RC8011A1/B1/C1

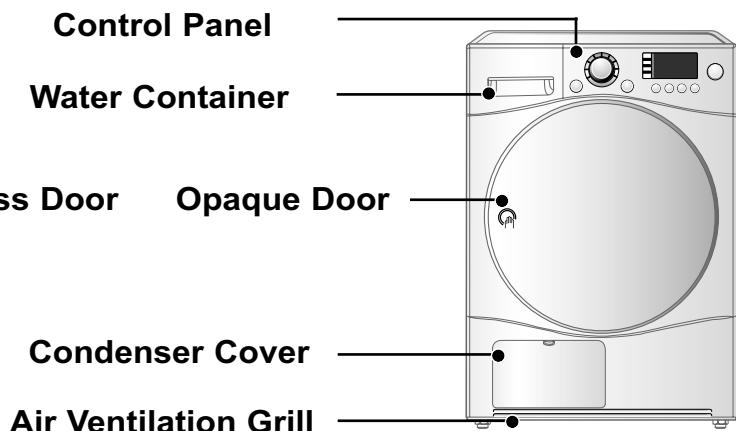


Control Panel

■ RC8011A/B/C, TD-C8011C

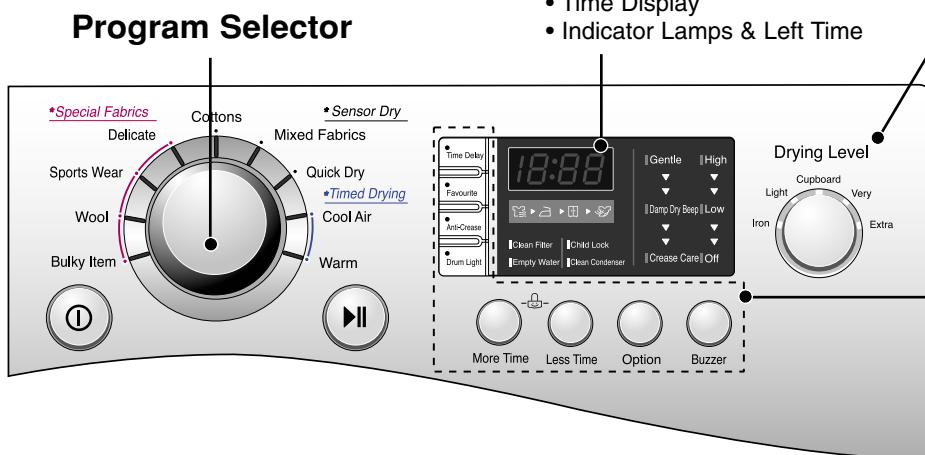

■ RC8011A1/B1/C1

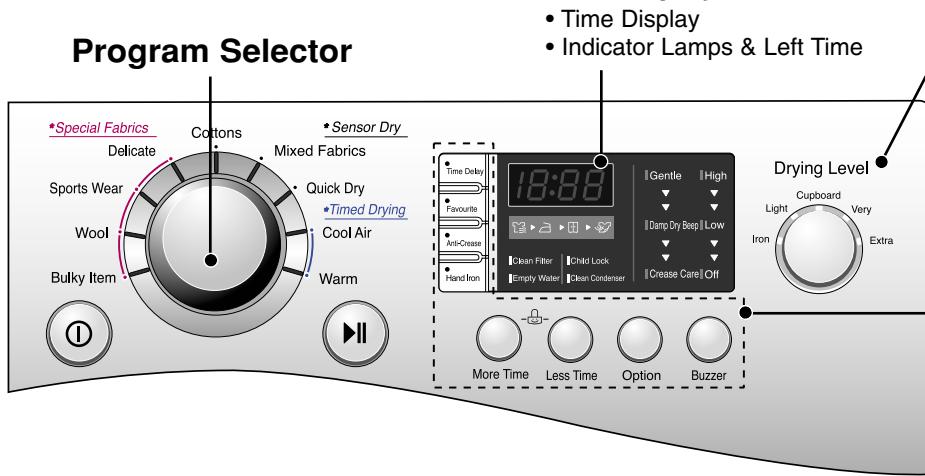

Additional Function Buttons

- More Time
- Less Time
- Option
- Buzzer
- Time Delay/Favourite
- Anti-Crease/Drum Light

Drying Level

- Iron
- Light
- Cupboard
- Very
- Extra

Additional Function Buttons

- More Time
- Less Time
- Option
- Buzzer
- Time Delay/Favourite
- Anti-Crease/Drum Light

Drying Level

- Iron
- Light
- Cupboard
- Very
- Extra

Additional Function Buttons

- More Time
- Less Time
- Option
- Buzzer
- Time Delay/Favourite
- Anti-Crease/Hand Iron

Operating Your Dryer

Cycle Selection Table

Electronic Sensor Dry Cycles			Drying Level
Cotton Cycles (Note) Select the gentle by pressing the option button for heat-sensitive items	Towels, dressing gowns and bed linen	For thick and quilted fabrics	Extra
	Terry towels, tea towels, towels, bed linen	For thick and quilted fabrics which do not need to be ironed	Very
	Bath towels, tea towels, underwear, cotton socks	For fabrics which do not need to be ironed	Cupboard
	Sheets, pillowcase, towels	For fabrics which do not need to be ironed	Light
	Bed linen, table linen, towels, T-shirts Polo shirts and work clothes	For fabrics which do need to be ironed	Iron
Mixed Cycles (Note) Select the gentle by pressing the option button for heat-sensitive items	Bed linen, table linen, tracksuits, anorak, blankets	For thick and quilted fabrics which do not need to be ironed	Very
	Shirts, blouses	For fabrics which do not need to be ironed	Cupboard
	Trousers, dressers, skirts, blouses	For fabrics which do need to be ironed	Iron
Quick Dry	A kind of linen and towel except for the special fabrics	For the small loads of qualified fabrics with short drying times	-
Special Fabrics Cycles			
Delicate	Silk, Women's thin clothes, lingerie	For fabrics which are heat-sensitive like synthetic fabrics	-
Sports Wear	Soccer uniform, training wear	For polyester material	-
Wool	Wool	For wool fabrics	-
Bulkey Item	Bed clothes, sheets	For bulky items	-
Timed Drying			
Cool Air	All fabrics needing freshening, tumbles without heat		-
Warm	Bath towels, bath robes, dishclothes, quilted fabrics made of acrylic	Small clothes & pre-dried laundry normal fabrics using hot temperature	-

⚠ CAUTION

If the load is less than 1kg, please use "Warm Course in Timed Drying Course" Your wool should be used in "Wool Program" and heat-sensitive fabrics including silk, underwears, lingerie should be used in "Delicates Courses".

And also please comply with the recommended laundry load when you use the special fabric course. (Refer to the page 18)

Otherwise, these clothes can cause undesirable drying results.

Operating Your Dryer


● Please read before using your LG Dryer for the first time

※ After removing the packaging, please carry out the following checks to ensure the LG Dryer is correctly installed and ready for use.

1. Check the dryer is well balanced by using a spirit level. If not, adjust the feet of the LG Dryer until the machine is balanced.
2. Check the water container, condenser, control panel and drum to make sure everything is in place.
3. Set the machine to dry for 5 minutes to warm up the drum.
4. Open the door between loads the first few times you use the machine to allow any odours from the interior of the LG Dryer to escape.

1. Turn the power on.

First, press the “Power” button. The indicator light above the button will become illuminated indicating that the machine is all set to run.

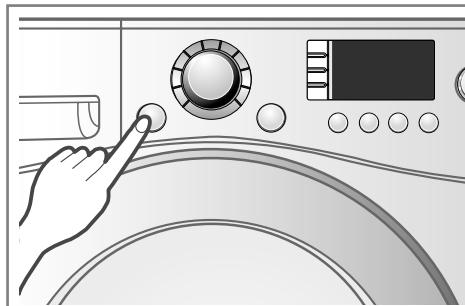


Turn the power on.

2. Open the door.

3. Check the lint filter, water container and condenser.

The lint filter near the door, should be emptied after or before drying operation.

Open the door and check if lint filter is cleaned. If not, please clean it referring to page 15. Water container and condenser are also checked to be emptied and cleaned for better drying result.

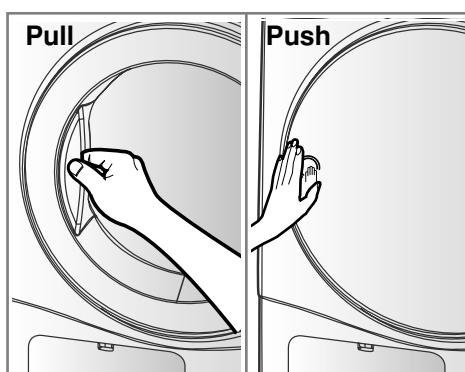


Open the
Door.

4. Place laundry into the drum after sorting.

Sorting:
The clothes should be sorted by its fabric type and dryness level and all the strings and belts of clothes should be well tied and fixed before being put into the drum.

It is desired that you push laundry all the way back to keep it away from the door seal. If not, door seal and clothes may be damaged.

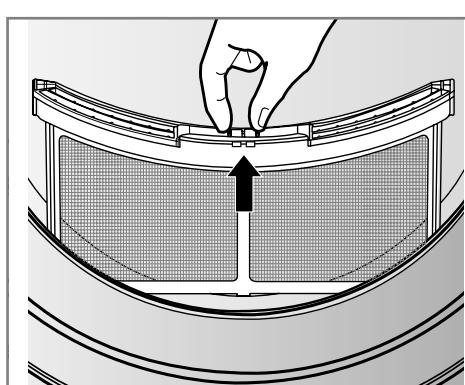

Check the
lint filter.

! CAUTION

Do not dry unwashed items in the tumble dryer.


Operating Your Dryer

5. Close the door.

Before you close the door, make sure fabrics are well placed inside and that foreign objects, especially flammable ones, are not caught around door.

⚠ CAUTION

Be careful not to trap laundry in between the loading door and rubber seal.

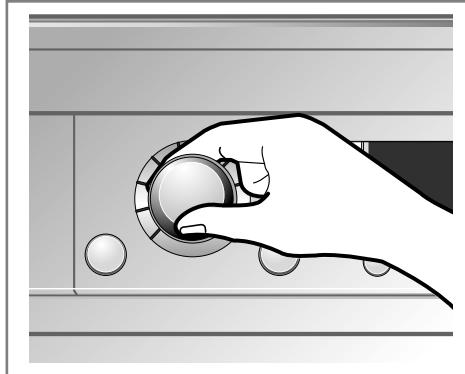

Select the desired cycle.

6. Select the drying cycle you want.


You can choose a cycle by turning the program control knob until the required program reaches to its indicator. If you only press Start/Pause button without choosing any cycle, the dryer will proceed with the Cupboard program. [Please refer to following Cycle Selection table (page 10) for the detailed information]

7. Press the start button.

You can hear drum rotating sound.

8. After operation is completed, open the door and remove the laundry.

Careful! the drum inside could be still hot. (Operation time varies depending on your cycle selection or options.)

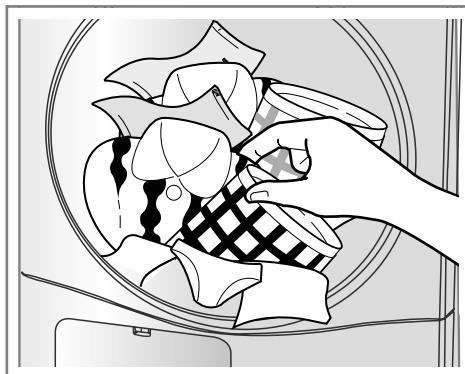


Take out the laundry.

Note

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

9. Clean the lint filters and empty water container.

The lint filter should be cleaned after each load.

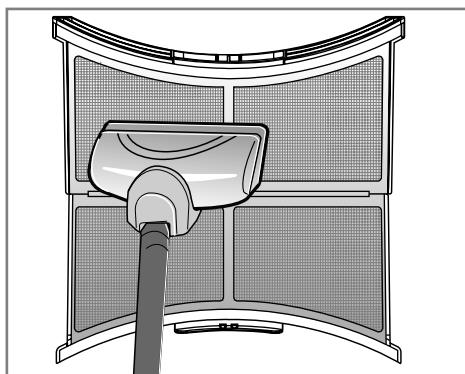

Clean the door lint filter.

10. Turn off the dryer.

Press the "Power" button.

⚠ CAUTION


- Be careful of the fact that filter should not be torn when using a vacuum cleaner. If there is a little residue buildup on filter, you can scrub lint screen with the brush to remove.
- If you want to open the door while dryer is operating, please press the Start/Pause button first, wait until drum completely stops and then open the door.

⚠ WARNING


Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

A dditional Functions

■ RC8011A/B/C, TD-C8011C

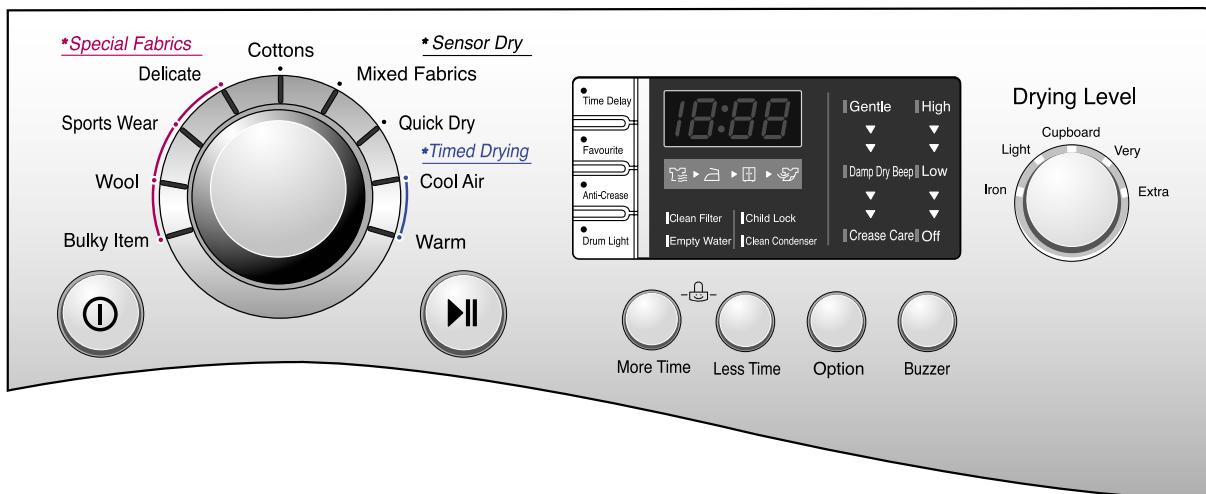

■ RC8011A1/B1/C1

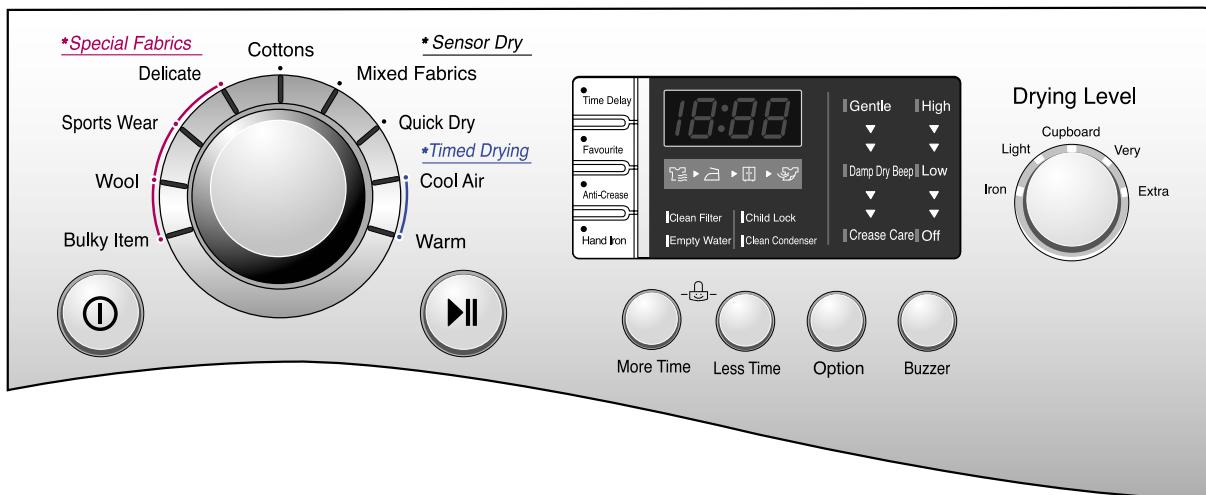

● Time Delay

You can use the Time Delay function to delay the finishing time of drying cycle.

Maximum Time Delay is 19 hours.

Minimum Time Delay is 3 hours.

1. Turn the dryer on
2. Select cycle
3. Set time delay hour
4. Press Start/Pause button

● Favourite

If there is some cycle you would like to make based on your own drying habit, use "Favourite". Once favourite cycle is stored, you can repeatedly use next time before changing the stored setting. For instance, you turn power on and select Extra Dry in Cotton Cycle and Low temp and Anti-Crease in series and then lastly press "Favourite" until the dryer beeps. It's about 3 seconds. That's all you have to do.

The next time, when turning the dryer on and pressing "Favourite" you can see the above options you select displays on the panel.

Additional Functions

Anti-Crease

Anti-Crease is functioning to prevent creases and ripples that are formed when the laundry is not unloaded promptly at the end of drying cycle. In this function, the dryer repeatedly runs and pauses to the cycle end.

If the door is open during Anti-Crease process, this function is cancelled.

Drum Light/Hand Iron

Drum Light (Glass Door)

- During operating cycle, you can see the drum inside by choosing drum light function. It helps easy viewing the drying cycle.

Hand Iron (Opaque Door)

- This function remains more moist than the condition for ironing.

Note

This function is available only with Cotton-Iron and Mixed-Iron cycles.

More Time/Less Time

Press More Time or Less Time until the desired drying time is set.

Note

These buttons are available only with Timed Drying, before you push Start/Pause button.

Child Lock (CL)

For the safety of your children, press More Time and Less Time buttons at the same time for about 3 seconds. You can see "CL" sign on LED window.

Note

For "CL" off, press More Time and Less Time buttons at the same time for about 3 seconds.

Option

Gentle

- This is a function to shorten or lengthen the cycle time by increasing or decreasing temperature.
- This option only is used with the Cotton and Mixed Fabrics cycles.

Damp Dry Beep

- This is a function to inform when is the most suitable for ironing with beeper sound.
- This option only is used with the Cotton and Mixed Fabrics cycles.
- You can not use the 'Damp Dry Beep' when you select iron drying level.

Crease Care

- This is a function to reduce wrinkles.
- This is a function to set up automatically when you only select the Mixed Fabrics cycle, but cancellation is impossible.

Note

The option might be changed by the number of pressing the option button.

- Once : Gentle is selected.
- Twice : Damp Dry Beep option is selected.
- 3 Times : Gentle and Damp Dry Beep options are selected.
- 4 Times : No selected.

Buzzer

This is a function to able to adjust volume of beeper sound.

Caring for Your Dryer

How important care and cleaning is~

It's not very difficult to care for your dryer. All you have to do is to follow the information below.


Clean Lint Filter

Clean lint filter after each use and check it before each use. It should also be cleaned if the "Clean Filter" light becomes illuminated and the buzzer sounds during operation of the dryer. Cleaning or emptying the filter will reduce drying times and energy consumption and lengthen the dryer life.


⚠ CAUTION

- The lint trap has to be cleaned frequently, if applicable.
- Lint must not to be allowed to accumulate around the tumble dryer.


1. Open the door.

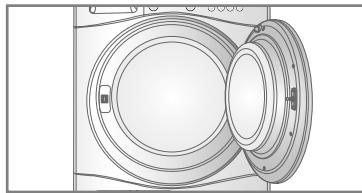

2. Pull the filter out.

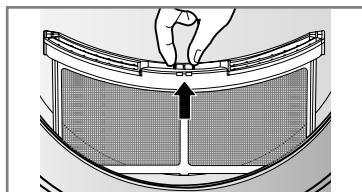


3. Clean the filter by using a vacuum cleaner or rinsing under the tap.

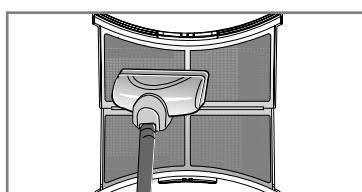

4. Replace the filter.

- Push the filter all the way down to avoid interference with the door.

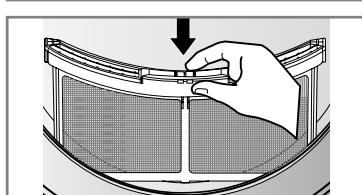

5. Close the door.

⚠ CAUTION

Wash the "Lint Filter" in warm, soapy water. Dry thoroughly and replace.

Clean lint filter during a cycle

If "Clean Filter" indicator lamp flashes during operation, clean the filter promptly.


1. Cool the dryer down and follow the mentioned steps.
2. Press the start/Pause button.

Empty Water Container


Condensed water is collected to water container. You should empty the water container after every use. Not doing this may result in improper drying performance.

If water container is full, "Empty Water" Lamp glows and a buzzer sounds while the dryer is operating. In this case, water container must be emptied in 1 hour

1. Draw water container out.

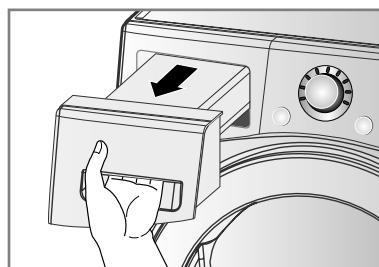

2. Empty water container to sink.

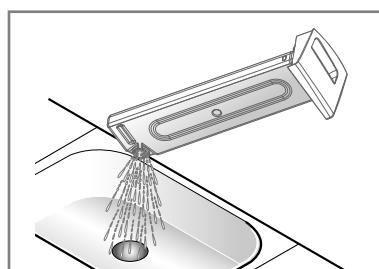

3. Push it back.

4. Press the Start/Pause button.

Note

High speed spinning, while washing, makes better energy consumption.

A high surrounding temperature & a small room might increase the drying time as well as energy consumption.

⚠ WARNING

Don't drink the condensed water, absolutely.

⚠ CAUTION

If the laundry is not spun at high speed, while washing, energy consumption and the Drying time will increase.


In some case, the laundry lamp flashes "Empty Water", then the dryer might stop.

Caring for Your Dryer


Condenser

Condenser is also a very important part for efficient drying performance result so it needs a special care from you. It is recommended that condenser be cleaned three or four times a year or when the condenser clean lamp blinks.


1. Open condensing cover by using a coin or flat blade screwdriver.

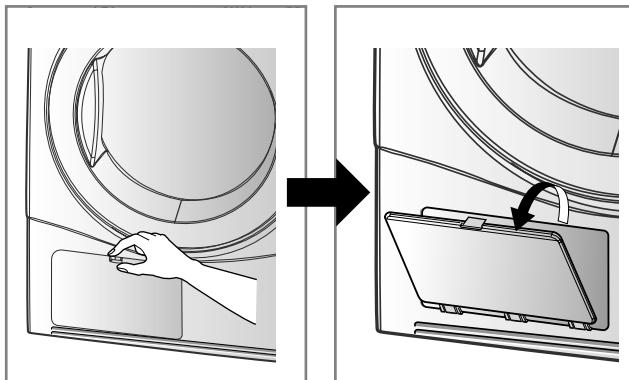


2. Open sealing cover by turning a locking lever.

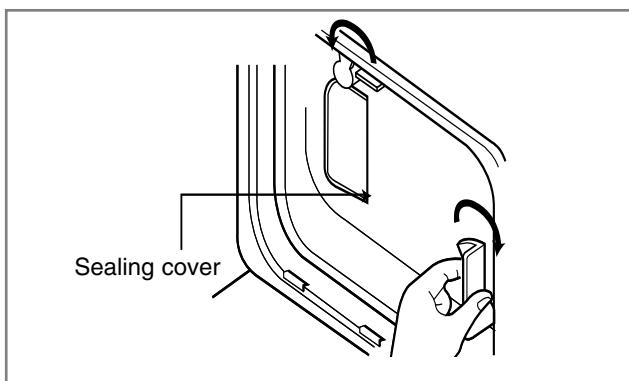

3. Draw the condenser out by inserting a finger into a hole down the front of condenser.
(Don't forcefully treat condenser.)

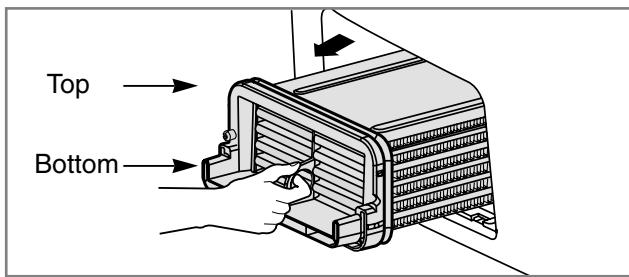

4. Clean the condenser completely under the tap letting water to flow through.

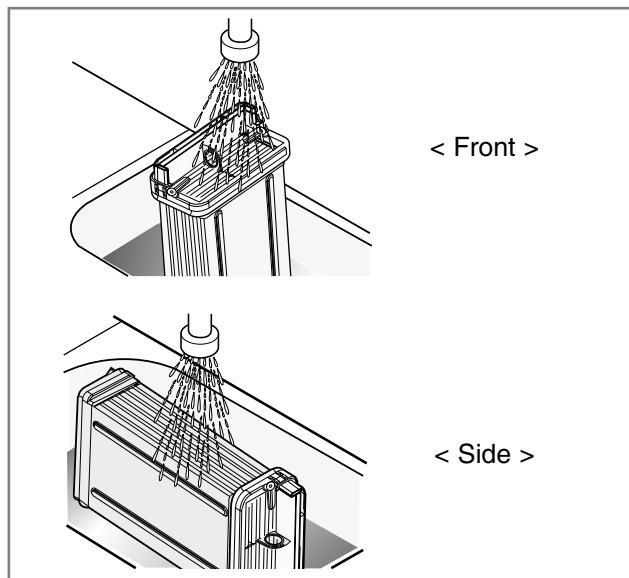

5. Close all with the reverse order of opening.



CAUTION

- Operating when the condenser is clogged with lint can damage the dryer. This also increases energy consumption.
- Do not use sharp objects to clean the heat exchanger. You could damage it and cause leaks.
- Never operate the dryer without the heat exchanger.

Caring for Your Dryer

● Ventilation Grille and Cool Air Inlet Grille

Vacuum the front ventilation grill 3~4 time a year to make sure there must be no build-up of lints or dirts which cause improper intake air flow.

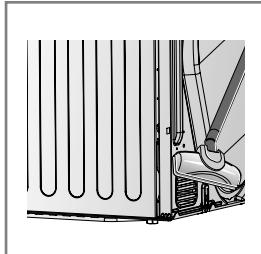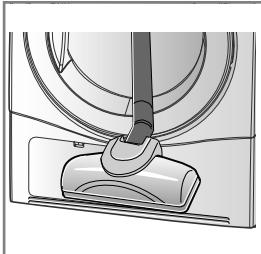


Note

- The warm air is exhausted through the ventilation grill.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliance's burning other fuels, including open fires.


● Condensed Water Drain-out

Normally, condensed water is pumped up to water container where water is collected until emptied. Not only using water container, but water can be drained out directly to drain hose especially when dryer is stacked on top of washing machine. With connecting kit for drain hose, you can simply change water path and water reroute to the drainage facility. Please follow the below steps.


1. Take connecting kit out.

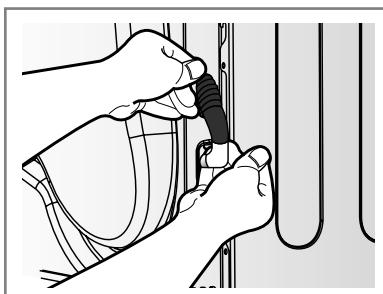

2. Separate water container hose from the kit.

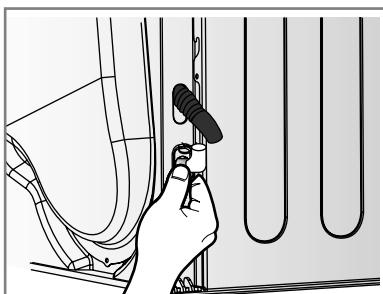


3. Connect drain hose to the kit.

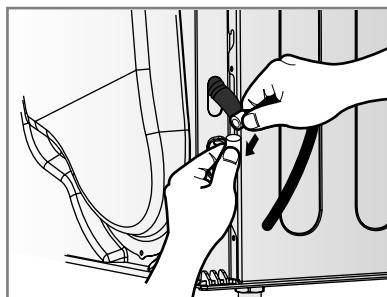

● Moisture Sensor?

This device functions to sense the moisture remaining contents of the laundry during operation which means it must be cleaned all the time. The main reason of cleaning this part is to remove the build-up of lime scale on the surface of sensor. Wipe the sensors inside drum (Shown in the picture).

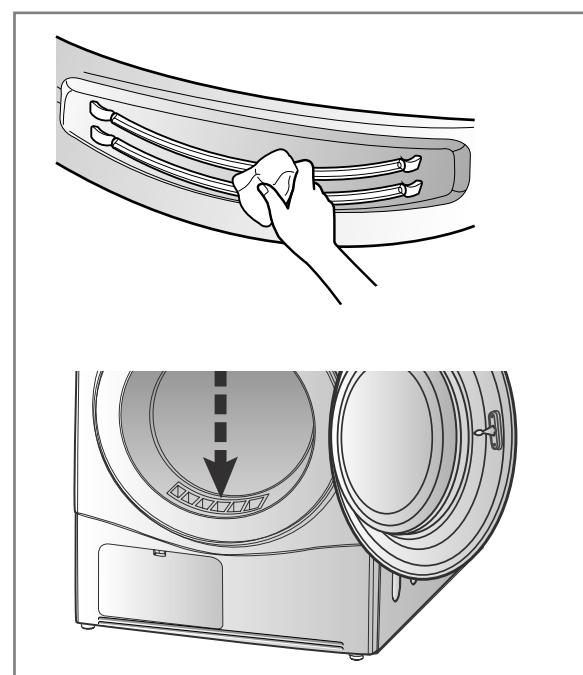

Additional Tips for Smart Use

Drying Guide & Capacity for laundry type

Course		Capacity of Dryer
Cottons	Iron	8kg
	Light	8kg
	Cupboard	8kg
Mixed Fabrics	Cupboard	4kg
	Quick Dry	2kg
Special Fabrics	Delicate	1.5kg
	Sports Wear	1.5kg
	Wool	1kg
	Bulkey Item	2.5kg

Woolen Article

Dry woolens in "wool" cycle. Be sure to follow fabric care label "symbols", first. Wool is not completely dried from the program so don't repeat drying. Pull woolens to their original shape and dry them flat.

Woven and Loopknit Materials

Some woven and loopknit materials may shrink, depending on its quality.

Permanent Press and Synthetics

Do not overload your dryer. Take out permanent press article as soon as the dryer stops to reduce wrinkles.

Baby Clothes and Night Gowns

Always check the manufacturer's instructions.

Rubber and Plastics

Do not dry any items made from or containing rubber or plastics such as:

- a) Aprons, Bibs and Chair Covers
- b) Curtains and Table Clothes
- c) Bathmats

Fiber Glass

Do not dry fiberglass articles in your dryer. Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer and irritate your skin.

Fabric Care Labels

Clothes have its own wash care labels so drying according to wash care labels is recommended. Not only that, the laundry must be sorted according to size and fabric type.

Do not overload in order to save you energy, time and best dry performance.

Below are fabric care labels.

Symbols	Instructions
	Dry
	Tumble dry
	Permanent Press / Wrinkle resistant
	Gentle / Delicate
	Do not tumble dry
	Do not dry
	High heating
	Medium heating
	Low heating
	No heat / air
	Line Dry / hang to dry
	Drip dry
	Dry flat
	In the shade

Additional Tips for Smart Use

Spare Parts

Spare parts in your need are provided under the terms of warranty. Components covered by warranty is provided free of charge. If coverage is expired, spare parts must be purchased from service center.

Disposal of the Dryer

It is desirable for you to dispose the dryer safely to keep your children away from the possible injury. The door and lid and other protruded items must be taken away and power cord must be cut off to avoid future use. After that, the dryer is to be disposed safely.

Service Contact

If there is something wrong with your dryer, first you must be through the troubleshooting table. In case that you can't find the same trouble and you can not handle by yourself, please contact the service centre.


A service person will ask you some questions like followings:

1. Your name, address and postcode.
2. Your phone number.
3. Description of trouble.
4. The model No. and the serial No. of your dryer.
5. The date of purchase.


Accessory Parts

- Your dryer comes with accessories such as


1. Condensing Drain Hose

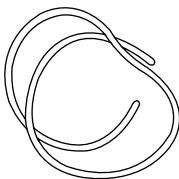

2. Hose Holder

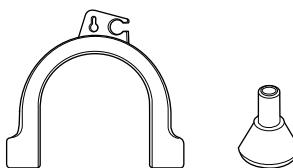


Stacking Kit

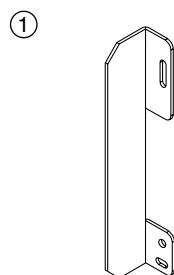

Holder : 2EA, Screw : 4EA

Purchased Separately

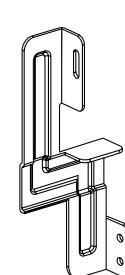

Holder : 2EA, Screw : 4EA

Purchased Separately

- Stacking kit Use condition

- fig ① : Washer top plate size 550
- fig ② : Washer top plate size 600

If stacking is needed, you must stack the dryer upon LG washing machine. In order to do this, stacking kit must be purchased separately.

Troubleshooting Guidelines

Troubleshooting Tips

To save you time and money, the following page will help answer your questions before service call.

Questions	What to do
Dryer doesn't work	<ol style="list-style-type: none">1. Check dryer is plugged in.2. Check "Start" button is pressed.3. Check door is properly closed.4. Check Room temperature is below 5°C.5. Check a fuse is not blown or the circuit breaker is tripped and replace them. (Caution : electric dryers generally use two fuses or breakers) After emptying the water container and Cleaning filter during operation, you must press Start button, then the dryer operates again.
It takes a long time to dry	<ol style="list-style-type: none">1. Filter should be cleaned after each load.2. Check water container is emptied.3. Check cleanliness of condenser.4. Check to select correct program setting for fabric type.5. Check air ventilation grille or rear vents of the dryer to be obstructed.6. Check the clothes is "excessively wet".7. Check correct program selected.8. Check dryer is overloaded.
"Clean Filter" lamp flashes	<ol style="list-style-type: none">1. Check filter is cleaned.2. Check condenser unit is clogged.
Clothes are covered in Fluff	<ol style="list-style-type: none">1. Check lint filter is empty.2. Check dryer has only clean items.3. Check laundry is properly sorted in the drum.4. Check laundry is overloaded.5. Check there is any paper, tissue,or similar item in the pockets of laundry.
The drying time is not consistent	The drying time for a load will vary depending on the heat setting, the size of the load, the type of fabrics, the wetness of the clothes and the condition of the lint filter.
Water is leaking	Check the door and sealing cover is dirty and damaged.
The clothes are wrinkled	Check the laundry is overloaded. Try a shorter drying time and remove items while they still retain a slight amount moisture.
The clothes shrinked	To avoid shrinkage, please carefully follow the care and use instructions for your garment, because some fabrics will naturally shrink when washed. Other fabrics can be washed but will shrink when dried in a dryer.

Troubleshooting Guidelines


● Error Mode

- *dE* : LED displays “*dE*” in case of the door open. The door must be closed and start Button must be pressed for re-operation.
- *EE1,EE2,EE3,EE4* : If display errors continues to occur, unplug the power cords and then call to the Service Center.

● Drum light does not work

- Connect customer service

Technical Data

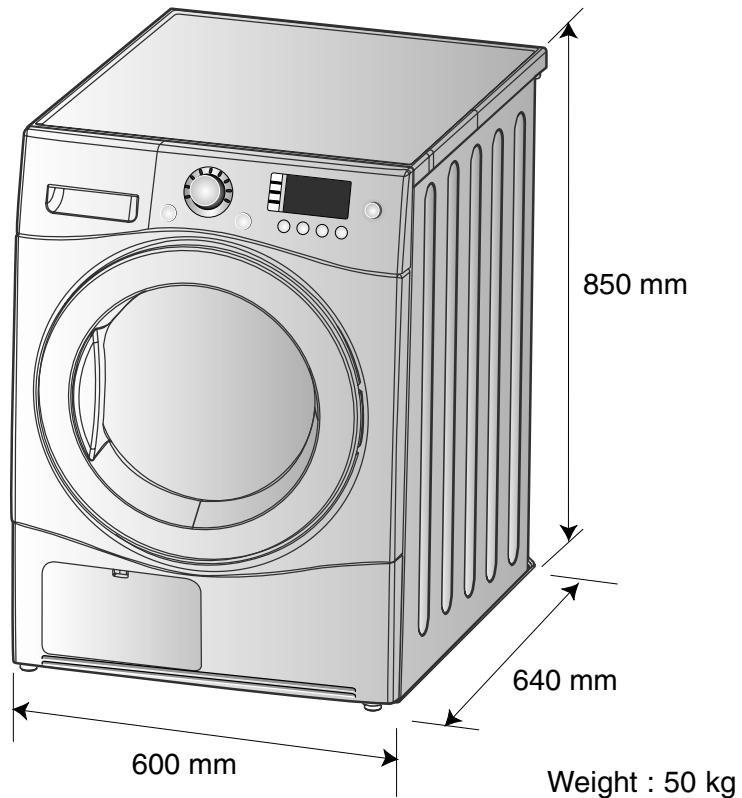

● Electrical Requirements

Volts	Hertz	Watts
230 V	50 Hz	2600

You are sure to check the rating plate on the dryer to make sure the dryer has right rating.

Warranty

■ What is not covered.

Service trips to your home to instruct you on the product.

If the product is connected to any voltage other than that shown on the rating plate.

If the fault is caused by accidents, neglects, misuses of Acts of God.

If the fault is caused by reasons except for normal domestic use or use in accordance with the owner's manual.

If the fault is caused by pests, for example, rats or cockroaches etc..

Noise or vibration that is considered normal, for example, water drain sound, spin sound or warning beeps.

Correcting the installation for example, leveling the product, adjustment of drain.

Normal maintenance recommended by the owner's manual.

Removal of foreign objects/substances from the machine including the pump and inlet hose filter, for example, grit, nails, bra wires and buttons etc..

Replace fuses in or correct wiring or correct house plumbing.

Correction of unauthorized repairs.

Incidental or consequential damage to personal property caused by possible defects with this appliance.

If this product is used for commercial purposes, it is not warranted.

(Example: Public places such as public bathroom, lodging house, training center, dormitory)

If the product is installed outside the normal service area, any cost of transportation involved in the repair of the products, or the replacement of a defective part, shall be borne by the owner.

Warranty conditions for dryer

- 1. The warranty period begins** on the purchase date and is valid for 24 months. Begin of warranty period is proven if, the buyer submits purchase receipt together with the warranty card, filled in and signed by the seller. The serial number of the product must agree with the number entered onto the warranty card.
- 2. During the warranty period, we will** correct any defects at no cost to you, if it can be proven that these are attributed to manufacturing or material defeats.
- 3. Damages due to incorrect handling, non-compliance with instructions for use and normal wear are not covered by this warranty.** Also, the warranty does not cover wear parts or easily broken parts (for example, viewing glass, light bulbs). The buyer is responsible for any damages during transport as well shipping and packaging costs.
- 4. We decide whether to make repairs, exchange or replace parts.** Exchanged or replaced parts are our property. The original warranty period is not prolonged if a refrigerator is repaired or certain parts are replaced.
- 5. The warranty is nullified** if any person intervenes in the apparatus that are not authorised by LG Electronics, if the apparatus is used for commercial purposes.
- 6. Always keep the original packaging,** so that if the apparatus requires servicing, it can be transported without damaging it.
- 7. If a repair is covered by this warranty,** always contact your dealer or an authorised service centre.
- 8. Further claims are excluded.** If parts of these provisions are invalid, they apply in the sense of the wording. The validity of the other provisions is not effected.

Warranty Certificate

For offer a 24-month warranty for this apparatus

During the 24-month warranty period, we will repair your apparatus at no cost to you or make available spare parts to your dealer free, if this apparatus fails due to manufacturing or material defects. Further claims are excluded.

Your warranty conditions on the rear also apply!

Type of apparatus : _____

Serial number : _____

Name of buyer : _____

Purchase date : _____

Dealer's stamp and signature

Memo

Memo

Memo



LG Electronics Inc.