



LG

Room Air Conditioner

OWNER'S MANUAL

- Please read carefully and thoroughly this manual before operating this unit.
- Contact the authorized SVC man for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

Prior to installation, this air-conditioning unit must be submitted for approval by the utility service which provides electricity (EN 61000-3 Norm).

Safety Precautions

Warning	2
Caution	3

Operating Instructions

Preparation before operation	4
Remote Control Features	6
Operation Mode Selection	7
Additional features	13

Care and Maintenance

Care and Maintenance	17
Operation Tips	19

Troubleshooting tips

Before You Call For Service	20
-----------------------------------	----

Safety precautions

To prevent injury and property damage, follow these instructions.

⚠ Incorrect operation due to ignoring instructions will cause harm or damage, the seriousness of which is indicated by the following symbols.

●  **WARNING** ●

This symbol shows the possibility of death or serious injury.

●  **CAUTION** ●

This symbol indicates the possibility of injury or damage to property.

■ The following items are classified by these symbols.

	Never Do This
	Always Do This

●  **WARNING** ●

①  **Plug in the power plug properly.**

- Otherwise, it will cause electric shock or fire due to heat generation or electric shock.

②  **Do not operate or stop the unit by inserting or pulling out the power plug.**

- It will cause electric shock or fire due to heat generation.

③  **Do not damage or use an unspecified power cord.**

- It will cause electric shock or fire.
- In the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. (Y Attachment)

④  **Do not modify power cord length or share the outlet with other appliances.**

- It will cause electric shock or fire due to heat generation.

⑤  **Do not operate with wet hands or in a damp environment.**

- It may cause electric shock.

⑥  **Do not direct airflow at room occupants only.**

- This could damage your health.

⑦  **Always perform grounding work.**

- No grounding may cause electric shock.

⑧  **Do not allow water to run into electric parts.**

- It may cause failure of machine or electric shock.

⑨  **Always install air leakage breaker and a dedicated switching board.**

- No installation may cause fire and electric shock accident.

⑩  **Unplug the unit if strange sounds, smell, or smoke comes from it.**

- It may cause fire and electric shock accident.

⑪  **Do not use the socket if it is loose or damaged.**

- It may cause fire and electric shock.

⑫  **Do not open the entrance during operation.**

- It may cause electric shock.

⑬  **Keep firearms away.**

- It may cause fire.

⑭  **Do not use the power cord close to the heating tools.**

- It may cause fire and electric shock.

⑮  **Do not use the power cord near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.**

- It may cause an explosion or fire.

WARNING

! Ventilate before operating air conditioner when gas goes out.

- It may cause explosion, fire and, burn.

! Do not disassemble or modify products randomly.

- It may cause failure and electric shock.

CAUTION

! Never touch the metal parts of the unit when removing the filter.

- They are sharp and may cause injury.

! Do not clean the air conditioner with water.

- Water may enter the unit and degrade the insulation. It may cause an electric shock.

! Ventilate well when used together with a stove, etc.

- An oxygen shortage may occur.

! When cleaning the unit, first make sure the power and breaker are turned off.

- Since the fan rotates at high speed during operation, it may cause injury.

! Do not put a pet or house plant where it will be exposed to direct air flow.

- This could injure the pet or plant.

! Do not use appliance for special purpose such as animals or vegetables, precision machine, or conservation of art articles.

- It may cause damage of animals or vegetables or loss of property.

! Stop operation and close the window in storm or hurricane.

- Operation with windows opened may cause wetting of indoor and soaking of household furniture.

! Hold the plug by the head of the power plug when taking it out.

- It may cause electric shock and damage.

! Turn off the main power switch when not using it for a long time.

- It may cause failure of product or fire.

! Do not place obstacles around the absorption inlet or instead of blowing-out inlet.

- It may cause failure of appliance or accident.

! Ensure that an installation console of the outdoor appliance is not damaged due to the use for a long time.

- If leaving appliance damaged, there is concern of damage due to the falling of product.

! Always insert the filters securely. Clean it once every two weeks.

- Operation without filters may cause failure.

! Do not use strong detergent such as wax or thinner but use a soft cloth.

- Appearance may be deteriorated due to change of product color or scratching of its surface.

! Do not place heavy object on the power cord and take care so that the cord should not be pressed.

- There is danger of fire or electric shock.

! Do not drink water drained from air conditioner.

- It contains contaminants and will make you sick.

! Use caution when unpacking and installing. Sharp edges could cause injury.

- There is danger of fire or electric shock.

! If water enters the product, turn the power switch of the main body of appliance off. After taking the power-plug out from the socket, contact with the service center.


Preparation before operation

How to Insert the Batteries

- 1 Remove the battery cover by pulling it according to the arrow direction.
- 2 Insert new batteries making sure that the (+) and (-) of battery are installed correctly.
- 3 Reattach the cover by sliding it back into position.


NOTES:

- Use 2 AAA(1.5volt) batteries. Do not use rechargeable batteries.

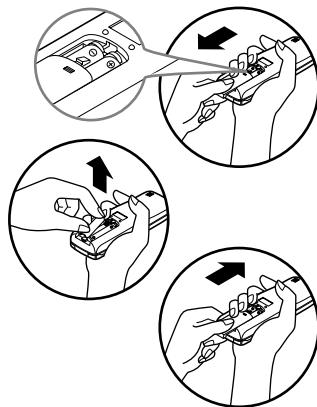

Storage and Tips For Using the Remote Control

- The remote control may be stored by mounting it on a wall.
- To operate the room air conditioner, aim the remote control at the signal receptor.

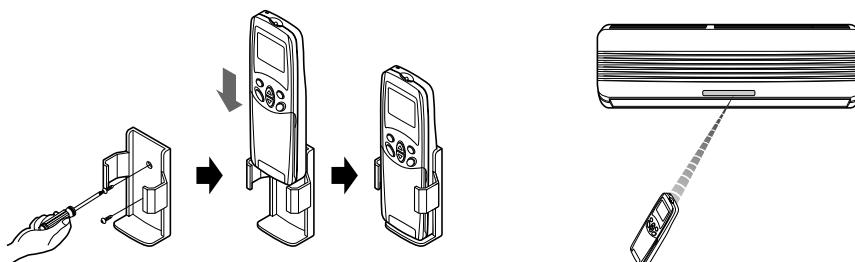

Signal Receptor

Receives the signals from the remote control.(Signal receiving sound: two short beeps or one long beep.)


Operation Indication LCD

With LCD display showing the operation mode, you can easily check the current status and control the operation mode.

SET TEMP. 18°C

When selecting cooling mode

When you select cooling mode with the remote controller, you can see the description "COOLING ON" flowing on the LCD display in front and it shows 'SET TEMP. 18°C' with fixed display.

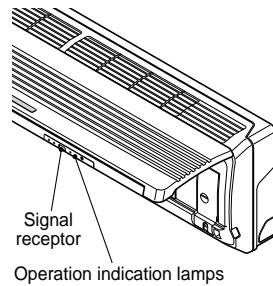



LCD Display Operation

- When the user control the unit with remote controller or it is turned on/off by the telephone memory, it displays the operation status.
- After flowing the description of the status change, it shows the current operation mode on LCD display. (refer to the below table for each mode)

Remote Control	Operation Model	Flow Letter Display	Fixed Display
Start Button	Cooling	COOLING ON	SET TEMP. 18°C
	Auto	AUTO OPERATION ON	AUTO OPERATION
	Heating	HEATING ON	RISC. T. 30°C
Stop Button	Stop	GOODBYE	
Operation Mode Selection Button	Cooling	COOLING ON	SET TEMP. 18°C
	Auto	AUTO OPERATION ON	AUTO OPERATION
	Healthy Dehumidification	DEHUMIDIFYING ON	DEHUMIDIFYING
	Heating	HEATING ON	SET TEMP. 30°C
Air Circulation Mode Button	Air Circulation	FAN ONLY	FAN ONLY
Jet Cool Button	Jet Cool ON	JET COOL ON	JET COOLING
	Jet Cool OFF	JET COOL OFF	SET TEMP. 18°C
Room Temperature Setting Buttons	Cooling		SET TEMP. 18°C
	Heating		SET TEMP. 30°C
	Auto		AUTO OPERATION
Indoor Fan Speed Selector Button			Operation Mode
ON/OFF Timer Delay Start Buttons		ON TIMER SET	Operation Mode
ON/OFF Timer Pre-Set Buttons		OFF TIMER SET	Operation Mode
Timer Cancel Button		TIMER SETTING CANCELLED	Operation Mode
Sleep Mode Auto Button	1,2,3,4,5,6,7 Hr.	SLEEP MODE ON	Operation Mode
	0 Hr.	SLEEP MODE OFF	Operation Mode
Chaos Swing Button	Chaos Swing ON	CHAOS SWING ON	Operation Mode
	Chaos Swing OFF	CHAOS SWING OFF	Operation Mode
Left/Right Swing Button	Left/Right Swing ON	LEFT-RIGHT SWING ON	Operation Mode
	Left/Right Swing OFF	LEFT-RIGHT SWING OFF	Operation Mode
PLASMA Button	PLASMA ON (START)	PLASMA OPERATION ON	PLASMA OPERATION
	PLASMA ON	PLASMA ON	Operation Mode
	PLASMA OFF	PLASMA OFF	Operation Mode


Telephone Control Operation ON	Operation ON	TELEPHONE ACTIVATED	Operation Mode
Telephone Control Operation OFF	Operation OFF	TELEPHONE DE ACTIVATED	

About the remote control on the system


The remote control transmits the signals to the system.



Features of the Remote Control- Door Opened

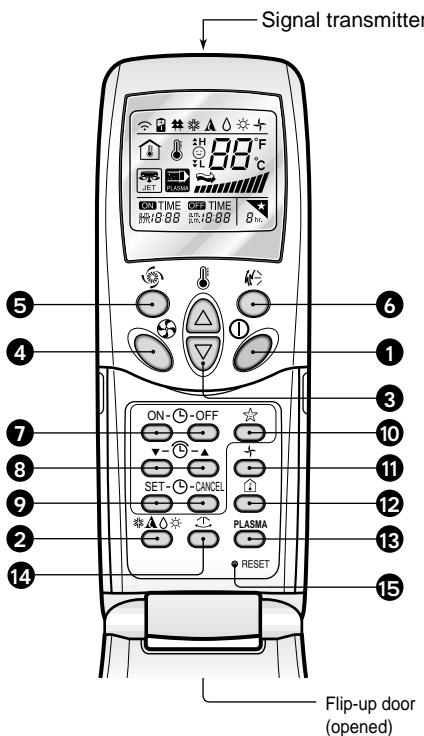


- 1 **START/STOP BUTTON**
Operation starts when this button is pressed and stops when the button is pressed again.
- 2 **OPERATION MODE SELECTION BUTTON**
Used to select the operation mode.
- 3 **ROOM TEMPERATURE SETTING BUTTONS**
Used to select the room temperature.
- 4 **INDOOR FAN SPEED SELECTOR**
Used to select fan speed in four steps low, medium, high and CHAOS.
- 5 **JET COOL**
Used to start or stop the speed cooling. (Speed cooling operates super high fan speed in cooling mode.)
- 6 **CHAOS SWING BUTTON**
Used to stop or start louver movement and set the desired up/down airflow direction.
- 7 **ON/OFF TIMER BUTTONS**
Used to set the time of starting and stopping operation.
- 8 **TIME SETTING BUTTONS**
Used to adjust the time. (See page 13)
- 9 **TIMER SET/CANCEL BUTTONS**
Used to set the timer when the desired time is obtained and to cancel the Timer operation. (See page 13)
- 10 **SLEEP MODE AUTO BUTTON**
Used to set Sleep Mode Auto operation. (See page 13)
- 11 **AIR CIRCULATION BUTTON**
Used to circulate the room air without cooling or heating. (See page 14)
- 12 **ROOM TEMPERATURE CHECKING BUTTON**
Used to check the room temperature.
- 13 **PLASMA(OPTION)**
Used to start or stop the plasma-purification function. (See page 12)
- 14 **HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (NOT ON ALL MODELS)**
Used to set the desired horizontal airflow direction. (See page 14)
- 15 **RESET BUTTON**
Used prior to resetting time or after replacing batteries.

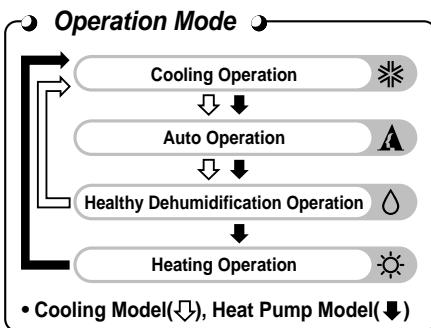

How to use the Operation Mode Selection button


Cooling Operation

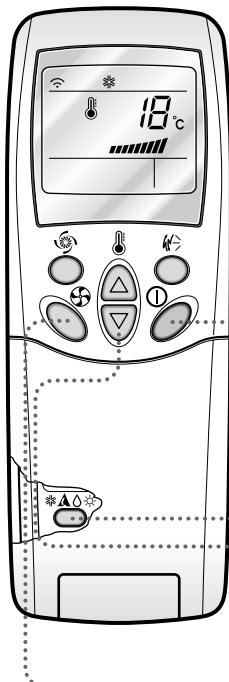


1 Press the Start/Stop button. The unit will respond with a beep.



2 Open the door on the remote control. To select **Cooling Operation**, press the Operation Mode Selection button. Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

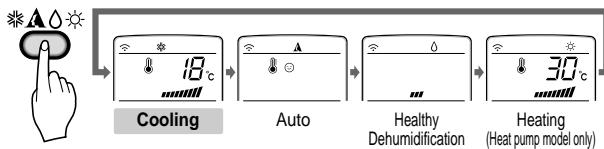

 3 Close the door on the remote control. Set the temperature lower than the room temperature. The temperature can be set within a range of 18°C~30°C in 1°C increments.



4 Set the fan speed again with the door of the remote control still closed. You can select the fan speed in four steps: low, medium, high and CHAOS. Each time the button is pressed, the fan speed mode is shifted.




Natural wind by the CHAOS logic

For more fresh feeling than other fan speed, press the Indoor Fan Speed Selector and set to CHAOS mode. In this mode, the wind blows like natural breeze by automatically changing fan speed according to the CHAOS logic.



Auto Operation

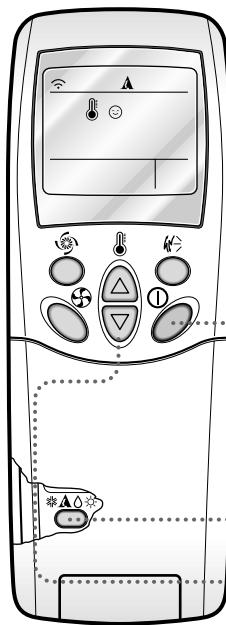


1

Press the Start/Stop button.
The unit will respond with
a beep.




2

Open the door on the remote control. To select **Auto Operation**, press the Operation Mode Selection button. Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

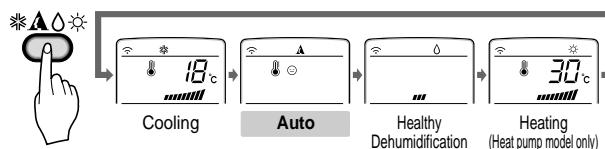

3

 The temperature and fan speed are automatically set by the electronic controls based on the actual room temperature. If you want to change the set temperature, close the door on the remote control and press the Room Temperature Setting buttons. The cooler or warmer you feel, the more times (up to two times) you should press the button. The set temperature will be changed automatically.




During Auto Operation:

- ❑ You cannot switch the indoor fan speed. It has already been set by the Fuzzy rule.
- ❑ If the system is not operating as desired, manually switch to another mode. The system will not automatically switch from the cooling mode to the heating mode, or from heating mode to cooling mode, it must be done by manually resetting.
- ❑ During Auto Operation, pressing the chaos swing button makes the horizontal louvers swing up and down automatically. If you want to stop auto-swing, press the chaos swing button again.



Healthy Dehumidification Operation

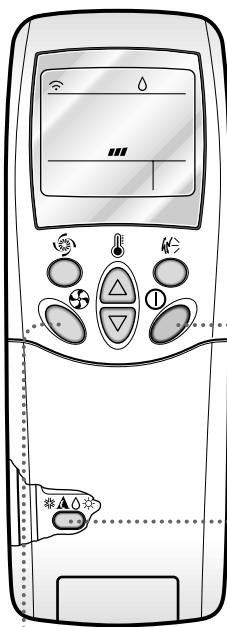


1 Press the Start/Stop button. The unit will respond with a beep.



2 Open the door on the remote control. To select **Healthy Dehumidification Operation**, press the Operation Mode Selection button.

Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

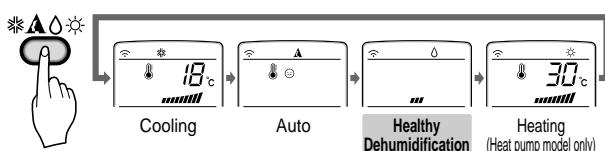

3 Set the fan speed again with the door of the remote control still closed. You can select the fan speed in four steps: low, medium, high, or CHAOS. Each time the button is pressed, the fan speed mode is shifted.



Natural wind by the CHAOS logic

- For more fresh feeling than other fan speed, press the Indoor Fan Speed Selector and set to CHAOS mode. In this mode, the wind blows like natural breeze by automatically changing fan speed according to the CHAOS logic.

During Healthy Dehumidification Operation:


- If you select the dehumidification mode on the operation selection button, the A/C starts to run the dehumidification function. It automatically sets the room temp. and airflow volume to the best condition for dehumidification, based on the sensed current room temp.

In this case, however, the setting temp. is not displayed in the remote control and you are not able to control the room temp. either.

- During the healthy dehumidification function, the airflow volume is automatically set according to the optimization algorithm responding to the current room temp. status which makes the room condition healthy and comfortable even in the high humidity season.



Heating Operation(Heat pump model only)

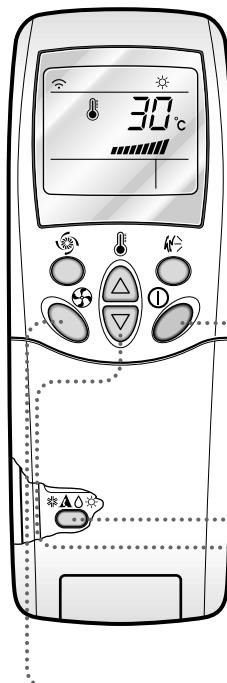


1

Press the Start/Stop button.
The unit will respond with
a beep.




2

Open the door on the remote control. To select **Heating Operation**, press the Operation Mode Selection button. Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

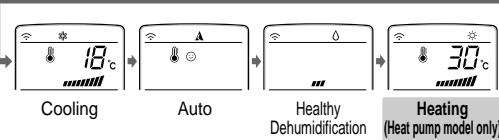

3

 Close the door on the remote control.
Set the temperature higher than the room temperature.
The temperature can be set within a range of 16°C~30°C in 1°C increments.



To raise the temperature



To lower the temperature

4


Set the fan speed again with the door of the remote control still closed. You can select the fan speed in four steps-low, medium, high and CHAOS. Each time the button is pressed, the fan speed mode is shifted.



Natural wind by the CHAOS logic

- For more fresh feeling than other fan speed, press the Indoor Fan Speed Selector and set to CHAOS mode. In this mode, the wind blows like natural breeze by automatically changing fan speed according to the CHAOS logic.

Jet Cool Operation

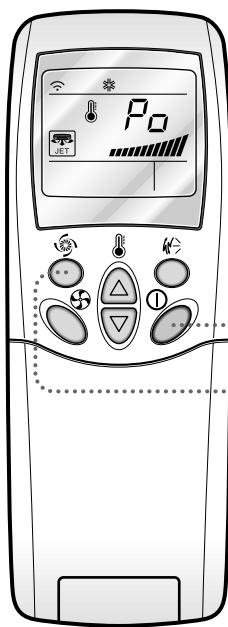

1

Press the Start/Stop button.
The unit will respond with
a beep.




2

Press the **Jet Cool** button to operate
the speed cooling mode and the unit
will operate in super high fan speed
on cooling mode for 30 minutes.



3

To cancel the **Jet Cool** mode, press the **Jet Cool** button or
the fan speed button or the room temperature setting button
again and the unit will operate in high fan speed on cooling
mode.

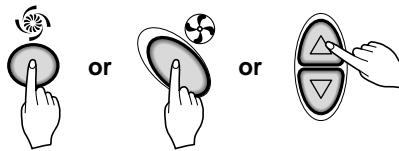


NOTE:

- ❑ During the **JET COOL** function at any moment, the A/C starts to blow the cool air at extremely high speed for 30 minutes setting the room temp. automatically to 18°C. It is especially used to cool the room temp. in the shortest time in a hot summer.
- In heat pump mode or neuro fuzzy mode, however, the **JET COOL** function is not available.
- ❑ In order to return to the normal cooling mode from the **JET COOL** mode, you just press either the operation mode selection button, airflow volume selection or temp. setting button or the **JET COOL** button again.



PLASMA Purification Operation(Optional)

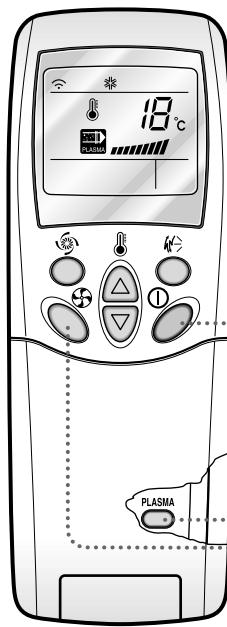

1 Press the Start/Stop button.
The unit will respond with a beep.



2 Open the door on the remote control.
Press the PLASMA air purifying operation ON/OFF button.
Operation will start when the button is pressed and stop when the button is pressed again.




3 Set the fan speed again with door of the remote control closed. You can select the fan speed in four steps-low, medium, high or CHAOS. Each time the button is pressed, the fan speed mode is shifted.



* Air purifying operation (PLASMA) can be with cooling, Heating or any other operations.

PLASMA Air Purifying Operation only

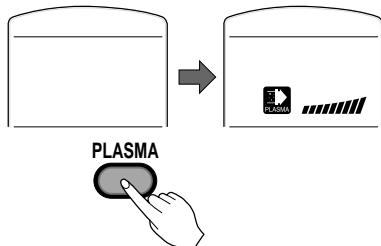

If you press the only PLASMA button, only PLASMA air purifying operates.

Then, fan speed is low. You can select the fan speed in four steps-low, medium, high or CHAOS.

Each time the button () is pressed, the fan speed mode is shifted.

Additional features



Sleep Mode

- 1 Press the Sleep Mode Auto button to set the time you want the unit to turn off automatically.
- 2 The Timer is programmed in one-hour increments by pressing the Sleep Mode Auto button 1 to 7 times.
- 3 Make sure the Sleep Mode Auto LED lights up.



To cancel the Sleep Mode, press the sleep Mode Auto button several times until the star (★) disappears from the operation display.

Note: The Sleep Mode will be operated at slow fan speed (cooling) or medium fan speed (heat pump only) for quiet sleeping.

IN COOLING MODE OR HEALTHY DEHUMIDIFICATION MODE:

The temperature will automatically rise by 1°C over the next 30 minutes and by 2°C in 1 hour for comfortable sleeping.



 
Setting the Time

- 1 Time can be set only when you have pressed the Reset button. If you have just replaced the batteries, the Reset button should be pressed to reset the time.

Press the Start/Stop button.



- 2 Press the Time Setting buttons until the desired time is set.



- 3 Press the Timer SET button.



Note: Check the indicator for A.M. and P.M.



 
Delay Start/Pre-Set Stop

- 1 Make sure the time is set correctly on the remote control display.

- 2 Press the ON/OFF Timer buttons to turn Timer on or off.



- 3 Press the Time Setting buttons until the desired time is set.



- 4 Press the selected on/off setting by pressing the Timer SET button while aiming the remote control at the signal receptor.



To cancel the timer setting

 
Press the Timer Cancel button while aiming remote control at the signal receptor.
(The timer lamp on the air conditioner and the display will go out.)

NOTE: Select one of the following four types of operation.

with the unit running



Delay OFF Timer



Delay ON Timer



Delay OFF and ON Timer



Delay ON and OFF Timer



Vertical Airflow Direction Control

The up/down airflow (Vertical Airflow) can be adjusted by using the remote control.



1 Press the Start/Stop button to start the unit.

2 Press Chaos Swing button and the louvers will swing up and down. Press the Chaos Swing button again to set the vertical louver at the desired airflow direction.



Note:


□ If you press the CHAOS swing button, the horizontal airflow direction is changed automatically based on the CHAOS algorithm to distribute the air in the room evenly and at the same time to make the human body feel most comfortable, as if enjoying a natural breeze.

□ Always use the remote control to adjust the up/down airflow direction. Manually moving the vertical airflow direction louver by hand, could damage the air conditioner.

□ When the unit is shut off, the up/down airflow direction louver will close the air outlet vent of the system.

To adjust left/right(Horizontal Airflow) direction


Caution : Ensure that the unit is turned off before adjusting the horizontal airflow direction control. Carefully open vertical louver to allow access to the horizontal airflow direction. Adjust the left/right airflow direction by hand.

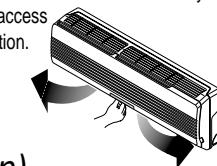

Horizontal Airflow Direction Control (Option)

The left/right(Horizontal Airflow) can be adjusted by using the remote control. Press the Start/Stop button to start the unit.

Open the door on the remote control. Press the Airflow Direction Start/Stop button and the louvers will swing left and right. Press the Horizontal Airflow Direction Control Button again to set the horizontal louver at the desired airflow direction.

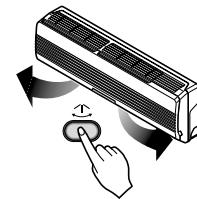


Air Circulation Mode

Circulates the room air without cooling or heating.

1 Press the Start/Stop button. the unit will respond with a beep.

2 Open the door on the remote control. Press the Air Circulation button. Close the door on the remote control. Now each time that you press the Indoor Fan Speed Selector, the fan speed is shifted from low to CHAOS and back to low again.

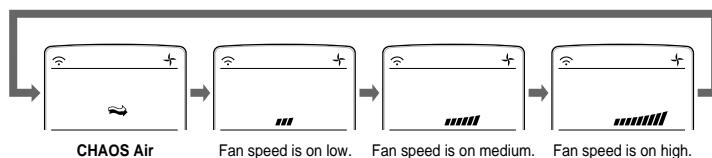

Note:

□ CHAOS Air economizes power consumption and prevents overcooling. The fan speed is automatically changed from high to low or vice versa, depending on the ambient temperature.

Auto restart

In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.

So there is no need of activating this function by pressing any key or button.

In the initial mode, the fan operates at a low speed and the compressor starts 2.5~3 minutes later.


As the compressor starts, the fan speed also resumes its previous setting mode.

Helpful information

Fan speed and cooling capacity.

The cooling capacity indicated in the specification is the value when the fan speed is set to high, and the capacity will be lower at low or medium fan speed.

High fan speed is recommended when you wish to cool the room quickly.

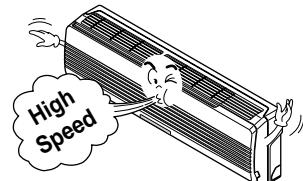

Telephone Control Operation

Calling from outside, you can start the air conditioner to keep the room comfortable.

Even though you went out with the air conditioner on, you can turn it off using the phone outside.

1 TURN ON



1. Dial the number which is connected with the air conditioner.
2. After ringing 5 times.
3. You can hear the "Beep" sound (if the air conditioner is off), then press the numbers as following :-

Operation Mode	Numbers	XX (Desire Temp.), For example 080 20 means Cooling mode 20°C
Cooling	080 XX	You can choose among 18~30
Heating	081 XX	You can choose among 16~30
Auto	082 00	The temp. is fixed by program (default)
Healthy Dehumidification	083 00	The temp. is fixed by program (default)

When using along with ARS telephone

2. OGM guide is provided after signal sound rings four times and then "Beep"(sounds from telephone itself) sounds so that outside recording can be done.
3. Press the numbers as following :-

Operation Mode	Numbers	XX (Desire Temp.), For example 080 20 means Cooling mode 20°C
Cooling	080 XX	You can choose among 18~30
Heating	081 XX	You can choose among 16~30
Auto	082 00	The temp. is fixed by program (default)
Healthy Dehumidification	083 00	The temp. is fixed by program (default)

4. With the sound "Beep, Beep" the air conditioner starts on.
5. Hang up the phone.

2 TURN OFF

1. Dial the number which is connected with the air conditioner.
2. After ringing 5 times.
3. You can hear the Beep Beepsound (if the air conditioner is ON),then press the numbers "0" "9" "0" "0" "0" accordingly.

When using along with ARS telephone

2. OGM guide is provided after signal sound rings four times and then "Beep"(sounds from telephone itself) sounds so that outside recording can be done.
3. Press the numbers "0" "9" "0" "0" "0" accordingly.
4. With the sound "Beep--" the air conditioner is turned off.
5. Hang up the phone.

Note:

- This product works after telephone rings 5 times.
- If internal user picks up the phone before 5 rings, Telephone control function does not work.
- If user doesn't push the telephone button 25 seconds after beep, Telephone control function doesn't work.

When using along with ARS telephone

- The numbers of response bell should be adjusted to four times if pressing "Out-of-office" button or taking other action for automatic response.
- The recording time of OGM (Outgoing Message) should be less than approximately 15 seconds.
- If it is connected to key phone, it cannot be worked.

Care and maintenance of the air conditioner

CAUTION: Before performing any maintenance, turn off the main power to the system.


Indoor Unit

Grille, Case, and Remote Control

- Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.


NOTE:

Supply power must be disconnected before cleaning the indoor unit.

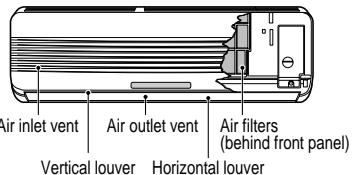


AIR FILTERS

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

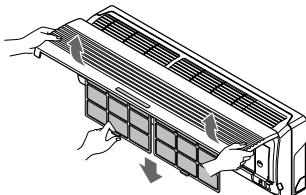

PLASMA FILTER, DEODORIZER FILTER(OPTIONAL)

The PLASMA filter behind the air filters should be checked and cleaned once in every 3 months or more often if necessary.

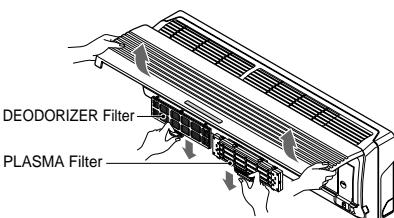

Don't touch this PLASMA Filter within 10 seconds after opening the inlet grille, it may cause an electric shock.

- Never use any of the followings:

- Water hotter than 40°C
Could cause deformation and/or discoloration.
- Volatile substances
Could damage the surfaces of the air conditioner.



1 Lift the front access panel and pull the filter tab slightly forward to remove the filter.

2 Clean the filter with a vacuum cleaner or warm, soapy water.

- If dirt is conspicuous, wash with a solution of detergent in lukewarm water.
- If hot water (40°C or more) is used, it may be deformed.

3 After washing with water, dry well in the shade.

4 Re-install the air filter.

1 After removing the air filters, pull slightly forward to remove the PLASMA filter.

2 Dip the PLASMA filter into the water mixed with neutral detergent, for 20~30 minutes.

3 Dry the PLASMA filter in the shade for a day (Especially, the humidity must be removed perfectly on this parts).

4 Note the cuts of electric discharge lines.

5 Re-install the PLASMA filter to the original position.

1 After removing the air filters, pull slightly forward to remove the DEODORIZER filter.


2 Dry in the sunlight for two hours.

3 Re-install the DEODORIZER filter to the original position.


Replacement of Purifying Filter(Option)

- Recomended use period : About 2 years

1 Open front panel and remove air filters.


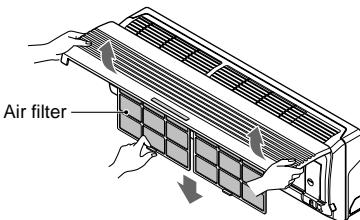


4 Reinsert air filters and close front panel.

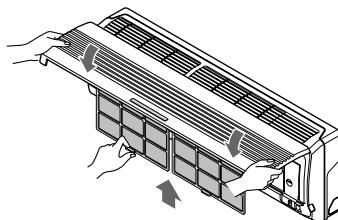

2 Remove air purifying filters.

3 Insert new air purifying filters.


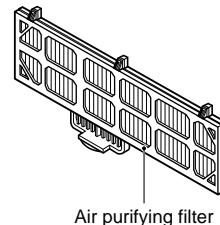
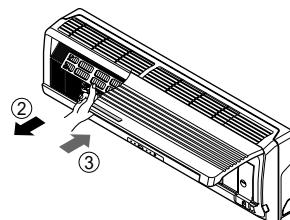


Outdoor Unit

The heat exchanger coils and panel vents of the outdoor unit should be checked regularly. If clogged with dirt or soot, the heat exchanger and panel vents may be professionally steam cleaned.

NOTE:

Dirty or clogged coils will reduce the operating efficiency of the system and cause higher operating costs.

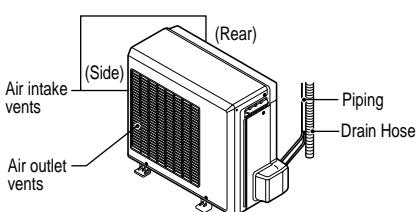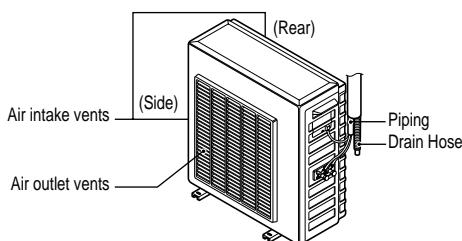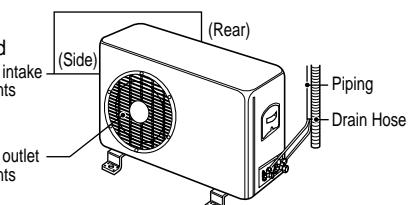

When the air conditioner is not going to be used for a long time.

When air conditioner is not going to be used for a long time.

- 1 Operate the air conditioner on Air circulation mode (Refer to page 14) for 2 to 3 hours.
 - This will dry out the internal mechanisms.
- 2 Turn off the circuit breaker, and disconnect the plug.

CAUTION

Turn off the circuit breaker when the air conditioner is not going to be used for a long time.
Dirt may collect and may cause a fire.

- 3 Remove the batteries from the remote control.

When the air conditioner is to be used again.

- 1 Clean the air filter and install it in the indoor unit.
(Refer to page 17 for cleaning filters.)
- 2 Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

Operation Tips

Do not overcool the room.

This is not good for the health and wastes electricity.

Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in operation.

Keep the room temperature uniform.

Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.

Make sure that the doors and windows are shut tight.

Avoid opening doors and windows as much as possible to keep the cool air in the room.

Clean the air filter regularly.

Blockages in the air filter reduces the airflow and lowers the cooling and dehumidifying effects. Clean at least once in every two weeks.

Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

Before you call for service...



Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the fault persists, please contact your dealer or service center.

Case	Explanation	See page
The air conditioner does not operate.	<ul style="list-style-type: none"> • Have you made a mistake in timer operation? • Has the fuse blown or has the circuit breaker been tripped? 	13
The room has a peculiar odor.	<ul style="list-style-type: none"> • Check that this is not a damp smell exuded by the walls, carpet, furniture, or cloth items in the room. 	-
It seems that condensation is leaking from the air conditioner.	<ul style="list-style-type: none"> • Condensation occurs when the airflow from the air conditioner cools the warm room air. 	-
Air conditioner does not operate for about 3 minutes when restarted.	<ul style="list-style-type: none"> • This is the protector of the mechanism. • Wait about three minutes and operation will begin. 	-
Does not cool or heat effectively.	<ul style="list-style-type: none"> • Is the air filter dirty? See air filter cleaning instructions. • Has the temperature been set incorrectly? • Are the indoor unit's air inlet or outlet vents obstructed? 	17 7, 10 -
The air conditioner operation is noisy.	<ul style="list-style-type: none"> • For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit. • For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit. 	-
Remote control display is faint, or no display at all.	<ul style="list-style-type: none"> • Are the batteries depleted? • Are the batteries inserted in the opposite (+) and (-) directions? 	4
Crack sound is heard.	<ul style="list-style-type: none"> • This sound is generated by the expansion/constriction of the front panel, etc. due to changes of temperature. 	-

NOTE

WATER RESISTANT: The outdoor side of this appliance is WATER RESISTANT.

The indoor side is not water resistant and should not be exposed to excess water.