



ENGLISH

РУССКИЙ

КАЗАК

OWNER'S MANUAL

FRIDGE-

FREEZER

Please read this owner's manual thoroughly before operating and keep it handy for reference at all times.



3828JD8636W

www.lg.com

Table of Contents

Introduction	Registration	4
	Important Safety Instruction	5
	Identification of Parts	18
 Operation	 Temperature Control	 19
	Super Freezer	21
	Self Test	21
	Door Alarm	21
	Miracle Zone	22
	Snack Bin	22
	Ice Making	23
	Defrosting	23
	Folding Shelf	24
 Suggestion On	 Food storage	 25
 Care and	 General Information	 27
Maintenance	Lamp Replacement	28
	To Reverse the Doors	28
	Cleaning	29
 Trouble Shooting	 Trouble Shooting	 30
Product information	Product information	32

* Refer to Installation Instruction for details.

Registration

Introduction

The model and serial number are found on the rear of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase : _____

Dealer Purchased From : _____

Dealer Address : _____

Dealer Phone No. : _____

Model No. : _____

Serial No. : _____

Important Safety Instruction

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

⚠ This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

⚠ DANGER You will be killed or seriously injured if you don't follow instructions.

⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

⚠ CAUTION Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Important Safety Instruction

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

1. When connecting the power


A dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- If unit is connected to an earth leakage breaker it may trip resulting in spoiled food.



Do not allow the power plug to face upward or to be crushed at the back of the fridge-freezer.

If the cord is crushed behind the refrigerator it may damage the cable resulting in fire. An upward facing plug may pull loose under the weight of the cord resulting in electrical failure causing fire or the fridge turning off and spoiling food.

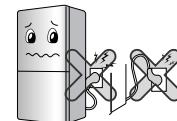

Prevent the power cord from being crushed or kinked if the refrigerator is pushed in after the power plug is extracted during the installation.

Crushed or kinked cables can become the cause of fire or electric shock.

When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

Do not allow heavy objects to kink or crush the power cord.

It may damage the power cord and become a cause of fire or electric shock.



Important Safety Instruction

Do not extend or modify the length of the power plug.

This may become the cause of fire or electric shock.



 
Unplug the power plug when cleaning, handling or replacing the interior lamp of the fridge-freezer.

- It may cause electric shock or injury.
- When replacing the interior lamp of the fridge-freezer, make sure that the insulating rubber ring within the socket is not taken off.



Do not pull out the cord or touch the power plug with wet hands.

It may cause electric shock or injury.



Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may cause fire or electric shock.



Do not disconnect by pulling on the cord. Always disconnect by grasping and pulling on the plug top.


Pulling on the cable may damage the cable resulting in electric shock or fire.



Important Safety Instruction

Make sure of grounding.

Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded or not.

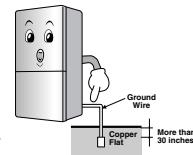


Incorrect grounding may lead to electric shock in the event of a breakdown.

Always have unit grounded in accordance with local regulations.

If incorrectly grounded it may become the cause of a fire.

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

 It may cause electric shock or be the cause of a fire.



Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the refrigerator to fail.



2. When using the fridge-freezer

Do not place heavy objects or liquid filled objects on the top of the refrigerator.

Heavy objects may fall when opening and closing doors resulting in injury. Liquid filled objects may leak or fall and break resulting in injury, or electric shock.



Do not lean on or hang from the doors or shelves of the refrigerator.

This may damage the doors or shelves of the refrigerator or cause it to topple over resulting in injury and damage. Always supervise children when they are near the refrigerator.



Important Safety Instruction

Prevent children from entering the product.

It may endanger the life of a child if the child enters the refrigerator.



Take care when opening and closing the refrigerator doors. Vigorous opening or closing may cause the contents to topple out resulting in injury or damage.

Do not install the refrigerator in a damp or wet environment.

Moisture may penetrate electrical components resulting in fire or electric shock.



Do not store or use Inflammable materials in or around the refrigerator.

It may become the cause of an explosion or fire.



Do not use or place heated or flame based scented products (Such as scented candles or incent burners) in the fridge to deodorise.

It may become the cause of an explosion or fire.



Important Safety Instruction

Do not store medicine or academic materials in the fridge-freezer.

If materials with strict temperature restrictions, such as medicines, are stored, they may deteriorate or react undesirably resulting in possible harm or risk.



Do not use any combustible spray near the fridge-freezer.

It may become the cause of an explosion or fire.



Avoid any heating devices. Install in places away from any flame. Such as fireplaces, heaters and ovens. Pay particular attention to avoid locating near gas related products.

It may become the cause of an explosion or fire.




Do not place flower vases, cups, cosmetics, medicine or any container with water on the fridge-freezer.

It may fall, leak or spill resulting in possible electric shock or fire.



In case of a heavy electrical storm or if unit is not to be used for a long period of time, disconnect the power plug.


There is a possibility for electrical damage. This may lead to an electric shock or fire.

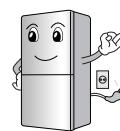

Important Safety Instruction


DO NOT use a water damaged unit until it has been certified safe by a licensed electrician or similarly qualified person.

It may be the cause of an electric shock or fire.

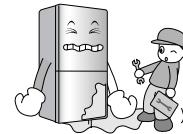

When gas is leaked, do not touch the fridgefreezer or the outlet and ventilate the room immediately.

- The explosion by spark may cause fire or burn.
- Because this fridge-freezer uses natural gas (isobutane, R600a) as the environmentfriendly refrigerant, even a small amount (80~90 g) is combustible. When the gas is leaked by the severe damage during delivering, installing or using the fridge-freezer, any spark may cause fire or burn.

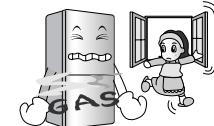


Do not spray water on either the inside or outside of the refrigerator. Do not use alcohol or mineral based cleaners on the refrigerator (such as Benzene or Thinners).

These may deteriorate or penetrate the insulation or electrical components resulting in possible electric shock, fire or damage to refrigerator.



When any strange smell or smoke is detected from the fridge-freezer, disconnect the power plug immediately and contact a service center.


Continuing to run unit may result in Damage or fire.

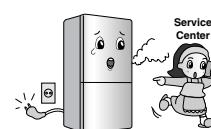

Important Safety Instruction


Do not allow any person except a qualified engineer to disassemble, repair or alter the fridge-freezer.

It may cause injury, electric shock or fire.

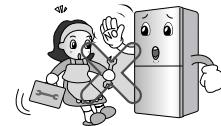

Do not use the fridge-freezer for non-domestic purposes (storing medicine or testing material, or use in a mobile application.)

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

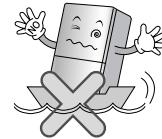

When disposing the fridge-freezer, remove the doors from the refrigerator.

Failure to do so may cause a child to become trapped inside.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Important Safety Instruction


Install the fridge-freezer on a solid and level floor.

Installing it in an unstable place may cause death by the refrigerator falling down when opening or closing the door.



Do not insert hands or a metal object into the exit of cool air, the cover, the bottom of the fridge-freezer, the heatproof grill (exhaust hole) at the back.

It may cause an electric shock or injury.

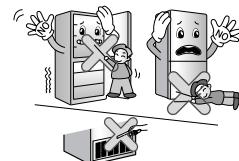

⚠ CAUTION

Violating this direction may cause injury or damage to house or contents. Always be careful, please.

Do not touch food or containers in the freezer with wet hands.

It may cause frostbite.



Ensure that all foods and containers are stored or stacked in a stable manner.

The food may fall during opening and closing of the door of the refrigerator and hurt people.

Do not put filled bottles in the freezer.

It may freeze the contents and break the bottle possibly resulting in injury.



Important Safety Instruction


Do not insert hands into the bottom of the fridge-freezer.

The iron plate at the bottom may cause injury.




Carry the fridge-freezer with the handles at the bottom of the front and the top of the rear.

Otherwise, your hands may slip possibly resulting in injury or product damage. Because the product is heavy, carrying it alone may hurt people or accidents may occur.

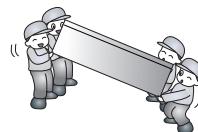

Because opening or closing the door of the fridge-freezer may cause injury to other people around it, be careful, please.

Opening both doors can result in fingers or hands being crushed in the small gap between the doors. Open doors could result in children being hurt by the corners of the doors (particularly the freezer door as lower edge might be out of line of site).

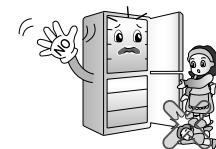

Do not put any living animal in the fridge-freezer.



Important Safety Instruction

⚠ WARNING

Precaution


- This fridge-freezer must be properly installed and located in accordance with the Installation Instruction before it is used.
- Before you install this fridge-freezer refer to installation manual.
- Never unplug your fridge-freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- After your fridge-freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Pull out the power plug prior to cleaning the fridge-freezer.
Never damage, severely bend, pull out, or twist the power cord because power cord damage may cause a fire or electric shock.
Never place glass products in the freezer because they may be broken when their inner contents are frozen.
- Do not directly spray water inside or outside the fridge/freezer.
There is a risk of explosion or fire.
- Do not insert the power plug with wet hands.
You may receive an electric shock.
- Do not install the fridge/freezer in a damp place, where it could be splashed with water.
Water may penetrate electrical components causing a risk of fire, electric shock or damage.

Important Safety Instruction

- Do not disassemble, repair or alter the appliance. It may cause fire or abnormal operations, which may lead to injury.
- Pull the power plug out of the socket before replacing the interior light in the refrigerator. Otherwise, there is a risk of electric shock.
- If possible, connect the fridge-freezer to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload.

Do not modify or extend the Power Cord length.

It will cause electric shock or fire.

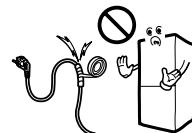

Accessibility of Supply Plug

The supply plug of the refrigerator-freezer should be placed in easy accessible position for quick disconnection in emergency.

Supply Cord Replacement

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Danger

Risk of child entrapment.

Before you throw away your old refrigerator or freezer:
Take off the doors.

Leave the shelves in place so that children may not easily climb inside.

Don't store

Don't store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Grounding (Earthing)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock.

Important Safety Instruction

⚠ WARNING

- ⚠ Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ⚠ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ⚠ Do not damage the refrigerant circuit.
- ⚠ Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ⚠ The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.



This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1 m² in size for every 8 g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.


Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

Important Safety Instruction

⚠ CAUTION

- If the wall socket is loose, do not insert the power plug.
It may cause an electric shock or fire.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull it straight out from the outlet.
You may disconnect a wire and cause a short circuit that could cause an electric shock or fire.
- Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter from the power plug pins.
Otherwise, there is a risk of fire.
- Do not put your hands into the bottom area of the appliance.
Any sharp edges may cause personal injury.
- After unplugging the appliance, wait for at least five minutes before plugging it again to the wall socket.
Abnormal operation of the freezer may cause material damage.
- If the appliance is not to be used for a long time, pull out the power plug.
Any deterioration in the insulation may cause fire.
- Do not let children touch or play with the control panel on the front of the appliance.
- The refrigerant used in a fridge/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Identification of Parts

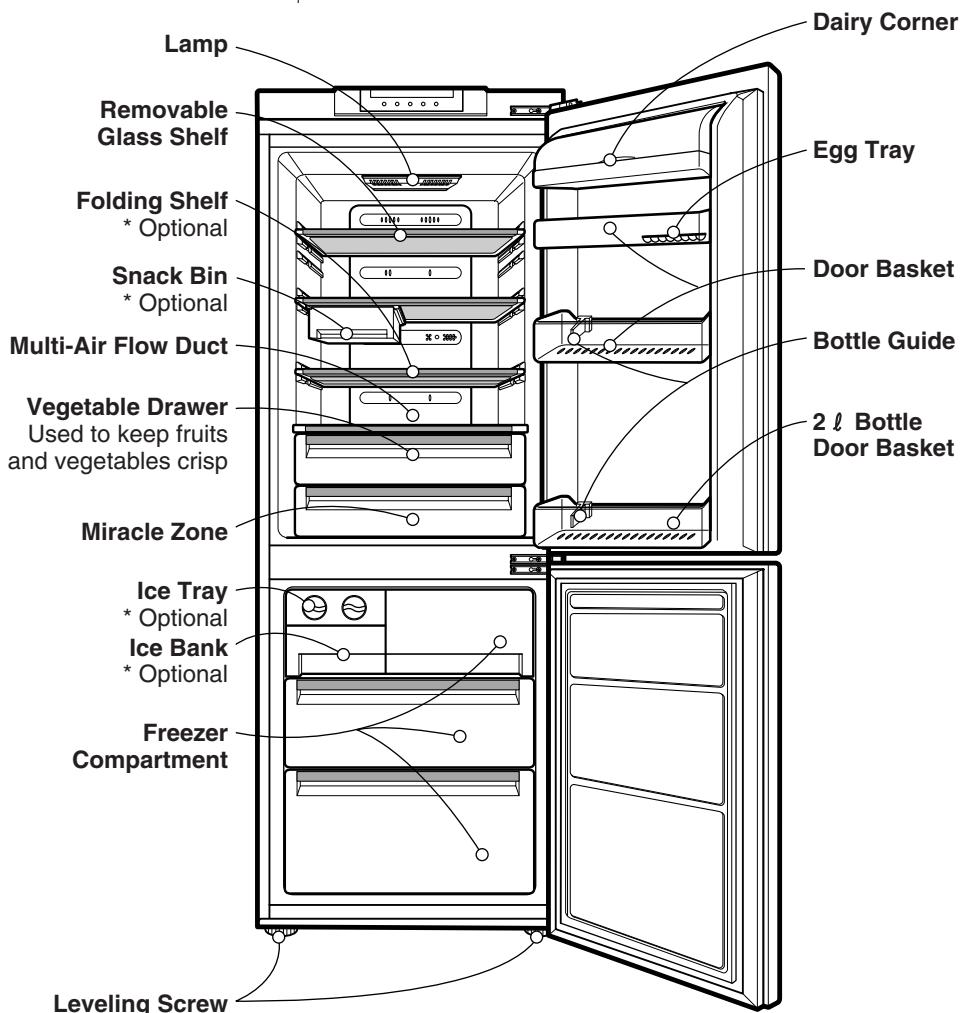

- The components can be different by model.


Temperature Control

Your fridge-freezer has controls that lets you regulate the temperature in the fridge and freezer compartments.

Adjusting the temperatures and functions


Display Panel For Temperature Control

Display Panel

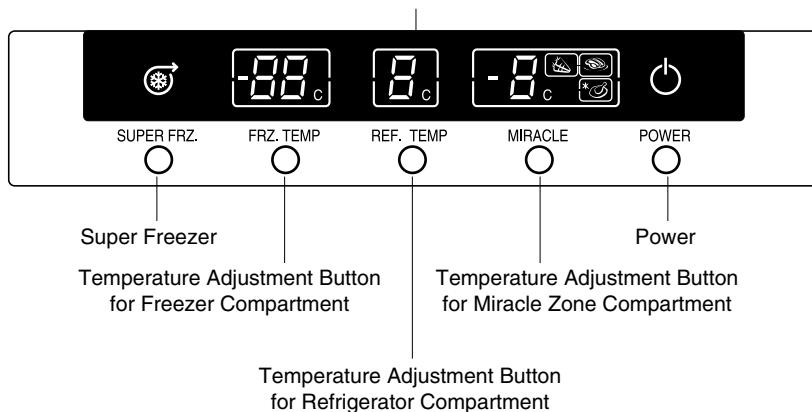


Power

- If you push button more than 3 seconds you can switch on or off the Refrigerator.

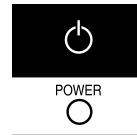

How to adjust the temperature in the refrigerator and freezer compartment

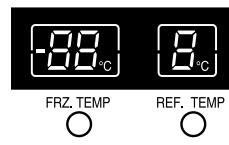

- When you press the temperature control button, the temperature of the Freezer or Refrigerator part is change by 1 degree.

Note

The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator. Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.

Super Freezer

- Please select this function for faster freezing.
- This function is used when you want to freeze the foods quickly. Press the SUPER FRZ (Super Freezer) button once, and then the quick freeze operation starts with the lamp lit.
- The Super Freeze operation takes about 3 hours. When its operation ends, it automatically returns to the previous temperature setting. If you want to stop the quick freeze operation, press the SUPER FRZ button once more, the lamp goes out, and the Super Freeze operation stops and the refrigerator returns to the previous temperature setting.



Self Test

This function allows you to check for operational problems. If you think you have a problem with your fridge-freezer, then press the temperature control button:

- If the indicate lights move up or down, then there is no problem with your fridge-freezer.
- If the indicate lights do not move up or down, then please leave the power connected and call your nearest service agent.

Door Alarm

When the door of the fridge is left open for a while, the alarm sounds.

Miracle Zone Temperature Transition Corner

- By pressing the button, store vegetables, fruits (at relatively low conservation temperature) or other types of food such as meat to be defrosted, raw fish, etc.

Method to Use

- You can select optimum temperature range depending on types of food stored.




- 3 steps of temperature selection including 2°C, -1°C, -3°C is available.

Vegetables/fruits and cold storage foods requiring humidity maintenance and meats/fishes can be more freshly stored depending on type of food stored.


Snack Bin

The Snack Bin can move left and right.

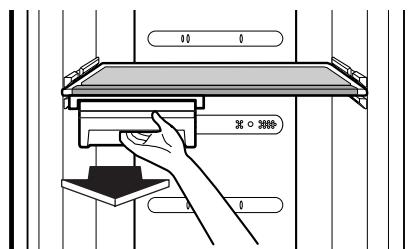

Ice Making

- Fill water in ice making box of the ice making corner. Only fill with enough water to maintain individual ice cubes. If over filled, the cubes will not separate when harvested resulting clumps. Water may also spill over causing cubes in ice bin to clump.
- Ice will be dropped into the ice storage bin by rotating ice separation handle of ice making compartment.

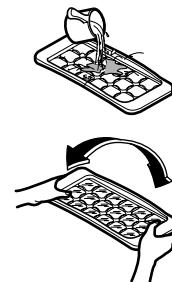

Note


- Rotating the ice separation handle before ice is fully frozen may cause the remaining water to drop into the ice storage bin and clump the ice together.

Defrosting

- Defrosting takes place automatically.
- The defrosting water flows down to the evaporating tray and is evaporated automatically.

Folding Shelf



- You can store taller items such as decanters or bottles by simply pushing in front half of shelf underneath back half of shelf.
Pull toward you to return to a full shelf.

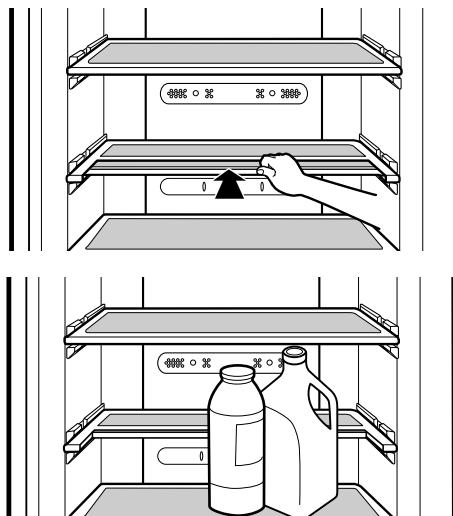


Storing Food

⚠ CAUTION

- Do not store food which goes bad easily at low temperature, such as banana, and melon.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- When storing the food, use a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause the temperature to rise.
- Never keep too many foods in door rack, as this may stop the door from fully closing.
- Do not store bottles in the freezer compartment, Miracle Zone or snack bin they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- Do not store pharmaceutical products, scientific materials or other temperature sensitive products in the refrigerator. Products that require strict temperature controls must not be stored in the refrigerator.
- If you want to quick freeze new food, you put it in the middle drawer of freezer compartment, and then press the Super Freezer button.
- Do not put in front of the air hole of the upper drawer of freezer compartment. It could decrease freezer capacity.

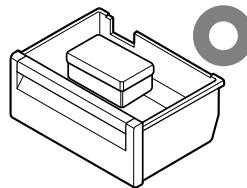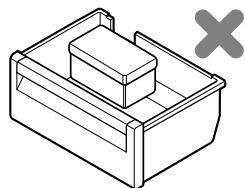

- To ensure good air circulation in the appliance, insert the freezer drawers all the way.
- If large quantities of food are to be stored in the freezer, a middle drawer of freezer compartment can be taken out of the appliance and the food can be stored directly right over the food stacked from the lower drawer.
To remove a freezer drawer, pull out all the way, lift at the front and remove.

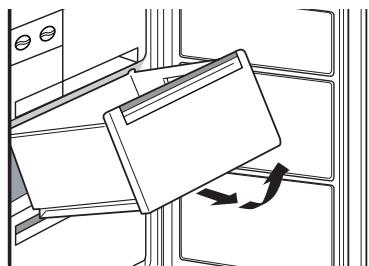

Note

If you keep the fridge-freezer in a hot, and humid place, frequently open its door or put a lot of vegetables in it, dew may form in it, which has no effect on its performance. Remove the dew with a lint free cloth.

General Information

Power Failure

- 1~2 hour power failure does no harm to the foods stores. Try to avoid opening and closing the door too frequently.


If You Move

- Take out foods from the fridge-freezer and firmly fix the loose items with tape.
- Do not move the fridge freezer by sliding.

Anti Condensation Pipe

- The Anti-Condensation pipe is installed around the front side of fridge-freezer as well as on the partition between fridge compartment and freezer compartment to prevent dewing.
- Especially after installation or when ambient temperature is high, the fridge-freezer may feel hot, which is quite normal.

Anti-Condensation Pipe

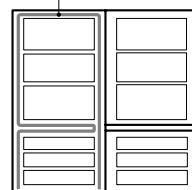


Appliance usage range

- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

Lamp Replacement

[GR-N319LLA] AC Bulb Lamp Type

1. Unplug the power cord from the outlet or shutdown the main switch in your house.
2. Remove the room lamp lid by pulling on the back of the lamp cover then pivot down on front edge.
3. Remove the lamp by turning it counterclockwise and replace new one.
4. Assemble in reverse order of disassembly.
Replacement bulb must be the same specification as original.

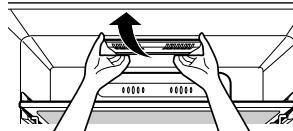

⚠ CAUTION

- You must check the O-RING, which is made from rubber.
- Don't touch the lamp, if the light was on for a long time. Because it can be very hot.

Note

- Lamp capacity is MAX 30W.
- The lamp will remain "ON" for 7minutes if the door is left open and then it turns "OFF" for safety. (If you reopen the door, the lamp is "On".)

⚠ CAUTION

[GR-N319LLB/LLC] DC LED Lamp Type

When you want to replace the led lamp, you must contact a service agent.

To Reverse the Doors

- Your fridge-freezer is designed with reversible doors, so that they may open from either the left or right hand side to suit your kitchen design.

⚠ CAUTION

However, When you want to reverse the doors, you must contact a service agent.

Cleaning

Before Cleaning

Be sure to unplug the power or shutdown the main switch in your house.

Exterior

Clean the outside of the fridge-freezer with a hot damp cloth with or without cleaning detergent. If you use a detergent, be sure to wipe it with a clean wet cloth.

Interior

As above.

After Cleaning

Check that the power cord is not damaged, power plug has not overheated, and that the power plug is tightly inserted into the outlet.

⚠ WARNING

Be sure to dry the appliance with a cloth after washing it with water.

Do not use abrasive, petroleum, benzene, thinner, hydrochloride acid, boiling water, rough brush, etc, as they may damage parts of the fridge-freezer.

**Before calling for service, check this list.
It may save you both time and expense.
This list includes common occurrences that are not
the result of defective workmanship or materials in
this appliance.**

Problem

Fridge-Freezer does not operate

Possible Causes

- Power plug may be unplugged from the electric outlet.
Plug it in securely.
- House fuse has blown or circuit breaker has tripped.
Check and/or replace fuse and reset circuit breaker.
- Power cut.
Check other appliances in the house for operation.

Fridge or Freezer Compartment Temperature too warm

- Temperature control not set on proper position.
Refer to Temperature Control section.
- Appliance is placed close to heat source.
- Warm weather-frequent door openings.
- Door left open for a long time.
- Package holding door open or blocking air duct in freezer compartment.

Vibration or Rattling or Abnormal Noise

- The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable.
Level refrigerator by adjusting the leveling feet.
- Objects fallen or stored behind refrigerator.

Frost or Ice Crystals on frozen Food


- Door may have been left ajar or package holding door open.
- Door opened too frequently or for to long a period.
- Frost within package is normal.

Moisture forms on Cabinet Surface

- This phenomenon is likely to occur when installation location is in a high humidity or damp environment.
Wipe it with a dry towel.

Problem**Moisture collects inside****Fridge has door****Door not closing properly****Interior light does not work****Possible Causes**

- Door opened too frequently or for too long a period.
- In humid weather, air carries moisture into fridge when doors are opened.
- Foods with strong odors should be tightly covered or wrapped.
- Check for spoiled food.
- Interior needs cleaning.
Refer to CLEANING section.
- Food package is keeping door open.
Move packages that stop door from closing.
- Fridge-freezer is not level.
Adjust the leveling screws.
- The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable.
Adjust leveling feet to create a slight tilt backwards on the refrigerator.
- No power at outlet.
- Light lamp needs replacing.
Refer to the Lamp Replacement section.

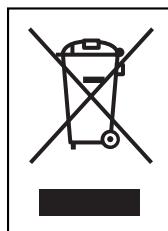**DISPOSAL OF YOUR OLD APPLIANCE**

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Product information

Model		GR-N319LL*	
Producer		LG Electronics	
Category		Refrigerator-Freezer	
Capacity (l)	ISO Gross	Total	263
		Freezer	71
		Refrigerator	192
	ISO Storage	Total	248
		Freezer	60
		Refrigerator	188
Weight (kg)	Net / Packing	73/80	
	Width x Height x Depth	Product	554X1775X545
		Packing	614X1915X622
Free standing / Built-in		Built-in	
Defrost system		Frost Free	
Sound Power (dB)		37	
Energy Class		A	
Energy Consumption (kWh/year)		330	
Temperature rise time (hr)		10	
Freezing Capacity (kg/24hr)		10	
Refrigerant		R600a	
Star Rating			
Climate Class		N	

※ Climate Class : N (This appliance is intended to be used at an ambient temperature between 16°C and 32°C.)



8-800-200-7676	Россия
0-800-303-000	Украина
8-8000-805-805	Казахстан
2255	Казахстан для мобильных телефонов
8-820-0071-1111	Беларусь
8-0200-201	Латвия
8-800-08-081	Литва
800-9990	Эстония
8-800-120-2222	Узбекистан
8-0000-710-005	Кыргызстан

LG Customer Information Center

LG Twin Tower, 20, Yoido-Dong,
Youngdungpo-Gu, Seoul, 150-721, Korea.

Импортер в Российской Федерации:

ООО «ЛГ Электроникс РУС»

143160, Российская Федерация, Московская область,
Рузский район, сельское поселение Дороховское,
86 км Минского шоссе, д.9



Printed in Korea