



LG

Life's Good

ENGLISH

ESPAÑOL

OWNER'S MANUAL

TOP MOUNT

REFRIGERATOR

Please read this manual carefully before operating your set and retain it for future reference.

MANUAL DE USUARIO

REFRIGERADOR

CONGELADOR SUPERIOR

Lea detenidamente este manual antes de empezar a utilizar el refrigerador y guárdelo como referencia para el futuro.

TABLE OF CONTENTS

Table of Contents	1
Important Safety Instruction	2
Identification of Parts	4
Installation	6
Unpacking	6
Away from heat sources and humidity	6
Strong and even floor	6
Ambient Temperature	6
A proper distance from adjacent items	6
Waiting period	7
Before storing food	7
In case of uninstalling	7
Installation of the Base Grille	7
Water dispenser	8
Operation and Functions	9
Connection	9
Icemaker operation	9
Thawing	10
Vegetable drawer	10
Adjusting temperature	10
Adjusting temperature, External	11
Adjusting temperature, Internal	12
Self check	13
Using your refrigerator	14
Shelves	14
Compartments	15
Water container	16
Water dispenser	16
Food storage suggestions	18
Maintenance	19
What to do when...	21
Knowing your refrigerator	23
Refrigerator performance may be affected	23
Tips for vacation period	23
When moving out or changing refrigerator location	23
Lamp replacement	23
"Ion Door Cooling"	24
The front area warms up	24
The back of the refrigerator warms up	24
Warranty for Argentina	50
Warranty for South America	51

SAFETY MEASURES

THIS IS THE SAFETY ALERT SYMBOL. IT WILL INDICATE WHEN CERTAIN ACTIONS MUST NOT BE DONE.

⚠ DANGER

⚠ WARNING

⚠ CAUTION

If you fail to follow these instructions you will be killed or seriously injured.

Misuses of the product will cause you physical damage or personal wounds.

Inadequate use and installation will cause damage to your property.


All safety labels will inform you of potential danger, ways to reduce chance of injury and what can happen if instructions are not followed.

Warnings and important safety measures

Read all instructions before using the product

⚠ NEVER USE EXTENSION CORDS

Never connect multiple machines to same socket; this can cause wiring to overcharge, warming, cause voltage vibrations and bad functioning.

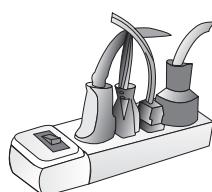


⚠ ELECTRICAL CORD REPLACEMENT

If feed cable gets damaged it must be replaced by the manufacturer, our service center or qualified LG Electronics personnel to minimize risks.


⚠ GROUND CONNECTION

In case of electrical surge, connection to ground will reduce risks of electric shock hazard. This unit must be grounded/landed. Consult a qualified electrician. When moving your refrigerator, be careful not to step on the feed cable with the machine's keepers.

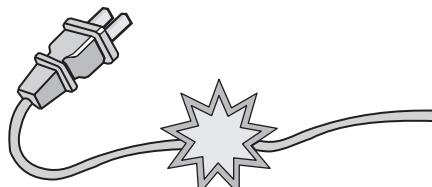


⚠ WHAT TO DO WITH YOUR OLD REFRIGERATOR

Your refrigerator contains liquids (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process. Contact local authorities.

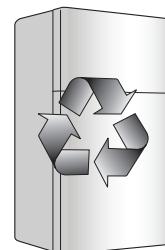

⚠ NEVER USE MECHANICAL DEVICES

Never use mechanical devices or any other means to accelerate the thawing process, use only those which are approved by the manufacturer.

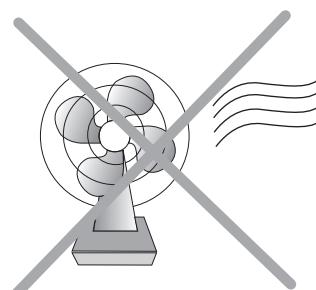


SAFETY MEASURES

Warnings and important safety measures

Read all instructions before using the product

⚠ DANGEROUS FUN

An empty refrigerator can be very dangerous for children. Remove doors or magnetic packaging when not in use or secure it in a way to make it impossible to open and allow a child to go in as this can lead to suffocation. Never allow a child to climb, hang or play with the refrigerator racks. They can get hurt and damage the refrigerator.

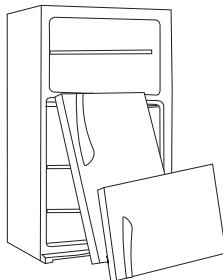

⚠ PLUG ACCESS

The refrigerator-freezer must be placed in a way that the Power cord can be pulled easily in case of emergency.

⚠ SUPERVISION IN RELATION TO THE USE

This appliance is not intended for use by children, persons with physical or mental disabilities, persons with reduced sensory or mental capacity, or persons that lack experience or know-how, unless they have supervision or instruction in relation to the use of the appliance by the person responsible for their safety. Children should be supervised to assure that they do not play with the appliance.


⚠ NEVER KEEP EXPLOSIVES INSIDE!!!

Never store explosive substances or chemicals in your refrigerator such as benzene, alcohol etc. It is **DANGEROUS!**




⚠ NEVER STORE ELECTRONIC DEVICES

Never use electronic equipment to store food unless they are specific models approved by the manufacturer.

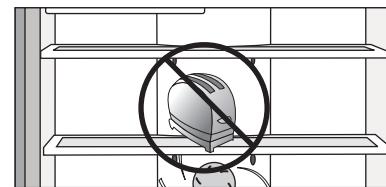


⚠ WHEN CLOSING REFRIGERATOR DOOR

Never place your thumb or fingers on the superior part of the handle, as it can be pressed against the lower part of the freezer handle. Keep away all fingers from injury prone areas such as where doors close cabinets and hinges, etc. Be careful when closing doors if children are nearby.

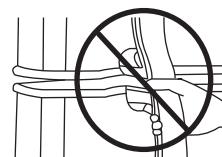

IDENTIFICATION OF PARTS

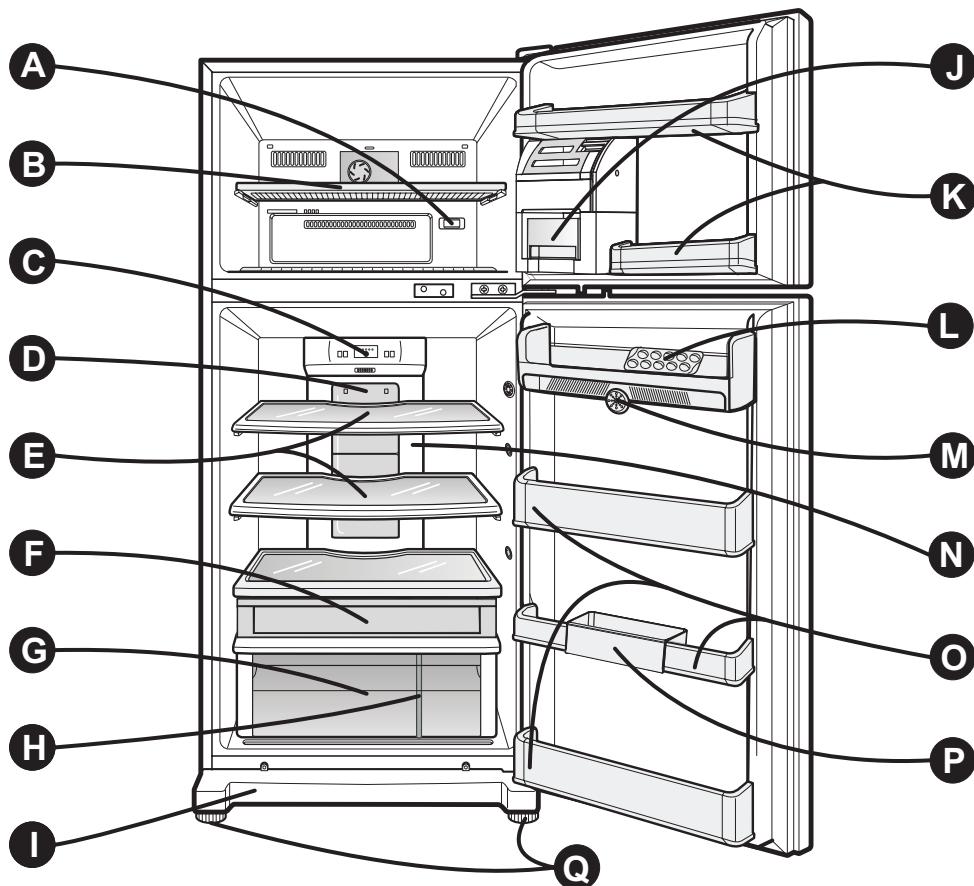


Note.- Certain components featured in the diagram may not be included in your refrigerator, as these vary depending on your model characteristics.

A	Temperature Control (Freezer)	I	Lower cover
B	Freezer Shelf (Rack)	J	Ice drawer
C	Temperature Control (Refrigerator)	K	Freezer Door Racks
D	Freezer Lamp (LED)	L	Eggs tray
E	Refrigerator Shelves (Glass, plastic or steel)	M	Door Cooling Cold air flow form door
F	Vegetables and fruits Compartment	N	Multi-flow air duct Distributes air to all refrigerator compartments
G	Vegetable Drawer Keeps fruits and vegetables fresh	O	Refrigerator Door Rack
H	Divisor Separates fruits from vegetables	P	Cans shelf (rack)
		Q	Leveling height adjusting screw

*Certain models

IDENTIFICATION OF PARTS

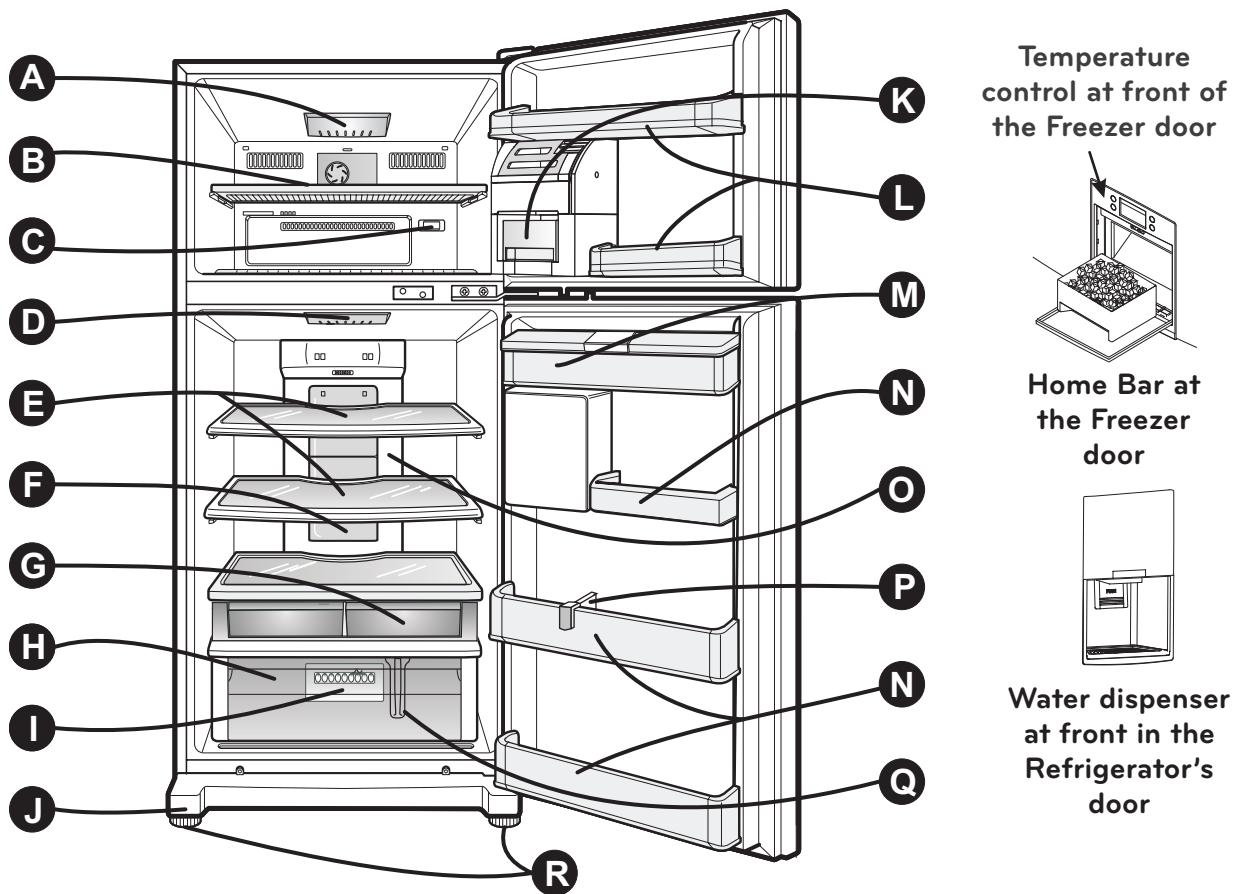

Note.- Certain components featured in the diagram may not be included in your refrigerator, as these vary depending on your model characteristics.

A Freezer Lamp (Optional LED)	J Lower Cover
B Freezer Shelf	K Ice Drawer
C Temperature Control (Freezer)	L Freezer Door Racks
D Refrigerator Lamp (Optional LED)	M Water container
E Refrigerator shelves (Glass, plastic or steel)	N Refrigerator Door Rack
F Refrigerator Lamp (LED)	O Multi-flow air duct Distributes air to all refrigerator compartments
G Compartment "2 in 1 Box"	P Bottles divider
H Vegetable Drawers Keeps fruits and vegetables fresh.	Q Divisor Separates fruits from vegetables
I "Vita Light"	R Leveling height adjusting screw

*Certain models

INSTALLATION OF THE REFRIGERATOR

1. UNPACKING

Before installing your refrigerator, remove any tape or temporary stickers. Do not remove any stickers that feature warnings, the model serial number or the technical label of the product located on the back of the refrigerator.

To remove adhesive tape residue, rub it well with your fingers and a little liquid detergent. Clean with warm water and let dry.


Do not use sharp instruments, rubbing alcohol, flammable liquids or abrasive cleaning products to remove the adhesive tape or glue. These products can damage the surface of your refrigerator.

The shelves come already installed in their factory position. Remove the shelves and replace them according to your spacing needs.

2. INSTALL IT AWAY FROM HEAT SOURCES AND HUMID AREAS


In places with high temperatures, freezing capacity can be affected and cause high consumption of electrical energy.

Never install in places with high humidity as this can cause oxidation and electric shock hazard.

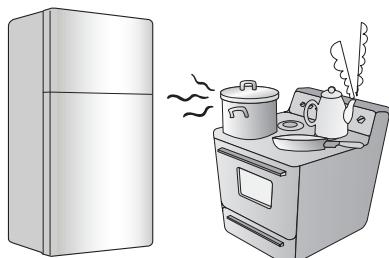

3. THOUGH AND EVEN FLOOR

Your refrigerator must be leveled and placed on a strong floor. An unstable installation can produce noise and vibrations. If the floor is uneven, level the unit by twisting the height adjusting screw, this will eliminate unwanted sounds and vibrations.

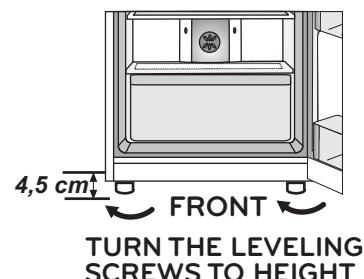


4. AMBIENT TEMPERATURE

The refrigerator will work efficiently if room temperature is between 10 °C and 43 °C (50 °F and 109,4 °F).

5. A PROPER DISTANCE FROM ADJACENT ITEMS

Adequate air flow is needed for an efficient operation. Keep your refrigerator at a relative distance from other objects. Reduces distance between the unit and other nearby objects can diminish freezing capacity and rise consumption of electrical energy.

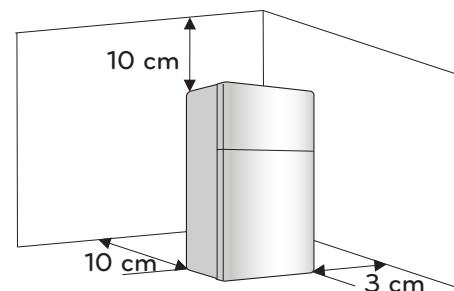

INSTALLATION OF THE REFRIGERATOR

⚠ WARNING

EXCESSIVE WEIGHT HAZARD. Use the assistance of two or more persons to move or install the refrigerator. Not following these instructions may cause injury to the back and other parts of the body.

6. WAITING PERIOD

Wait at least an hour before connecting, after installation was completed.


7. CONNECTION

⚠ DANGER

FOR YOUR PERSONAL SAFETY, this device must be properly landed. Connect to a single undamaged socket. Not having proper installation will require you to call qualified personnel to achieve it.

Do not, under any circumstance, cut or extract the third prong from the plug.


It is your responsibility and obligation to replace two-prong outlets with that of an adequately grounded three-prong outlet.

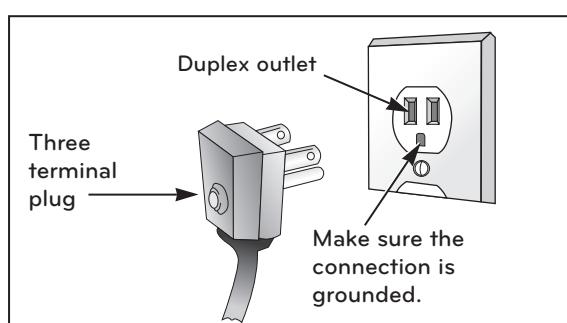

⚠ WARNING

REPLACING ELECTRICAL CABLE; if the power cord is damaged, it must be replaced by our service center or qualified LG technician to avoid any risk.

NEVER disconnect the refrigerator by pulling the power cord, always grip the plug firmly and disconnect it directly from the outlet.

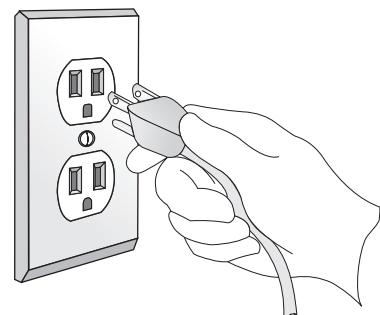

8. BEFORE STORING FOOD

Leave it working from 2 h to 3 h before storing food. If operation were to be interrupted wait 5 min before trying again.

9. IN CASE OF UNINSTALLING

If you wish to dispose of your refrigerator, keep in mind the following **WARNING**.

⚠ WARNING

If the use of this unit is no longer needed, please contact local authorities to dispose of this product in a safely manner; as is Pentane-cycle or pentane like gas for insulation. Insulation gases require a special elimination process. This product contains flammable insulation.

INSTALLATION OF THE REFRIGERATOR


10. INSTALLATION OF BASE GRILLE (some models)

Installing or Replacing the base grille:

1. Remove the 2 screws from the bottom front part of your refrigerator (in front).
2. Place base grille into position and insert and tighten screws.

To remove the base grille:

1. Open the refrigerator's door.
2. Once the door is open, remove screws from base grille and remove.
3. Remove the base grill.
4. Reattach screws to the base of refrigerator.

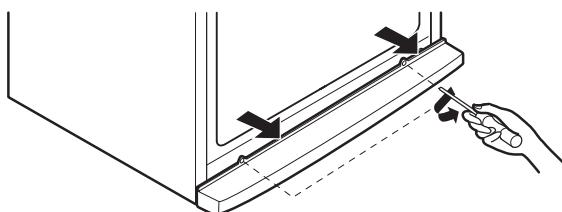

OPERATIONS AND FUNCTIONS

1. CONNECTION

Remember that your refrigerator must be landed.

⚠ CAUTION

If operation were to be interrupted, wait 5 min before restarting it.

2. ICEMAKER OPERATION

Ice@Door

- To make ice cubes, pull out the ice drawer and pour water on the shelves (Fig. 1.) Then place in their original position until you hear a "click" sound.

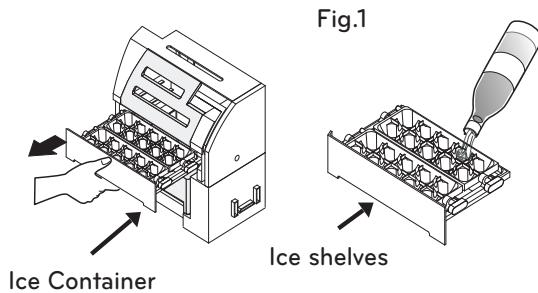


Fig.1

- The Icemaker takes around 4 h to produce ice cubes. Check the ice status through the transparent panel.
- To remove ice cubes, carefully pull the drawer lever Fig. 3. The ice cubes will fall into the ice container Fig. 4.

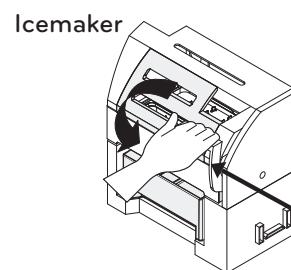


Fig. 3

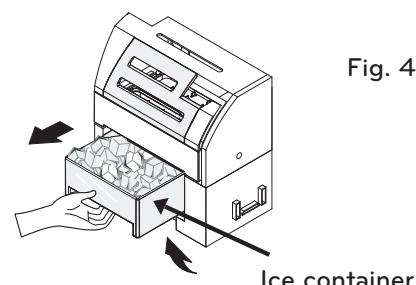


Fig. 4

⚠ WARNING

Fill only with potable water.

⚠ WARNING

Make sure the level of water in the shelf is even on the entire surface, guiding yourself with pointing arrows on Fig. 2.

Water must not surpass this level as it can get spilled when opening or closing door.

Water level indicators

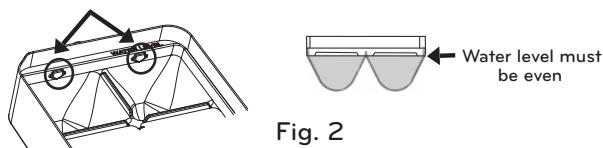


Fig. 2

⚠ WARNING

Refrain from pulling the lever before ice cubes have been completely made, as this can cause water to spill, freeze, and cause the container to stick to the Icemaker Fig. 5. If water spills, immediately wipe it off with a cloth. Avoid heavy ice accumulation in the container as this can cause problems to move the lever and/or container.

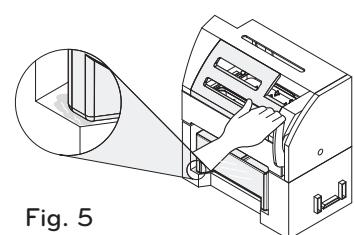


Fig. 5

OPERATIONS AND FUNCTIONS


3. THAWING

Thawing occurs automatically, you do not need to worry about this. Thawed water will flow into the evaporation shelf at the back of the refrigerator.


4. VEGETABLE DRAWER (some models)

Magic Crisper

- The magic crisper allows a better preservation of your fruits and vegetables allowing to easily control the level of humidity inside.

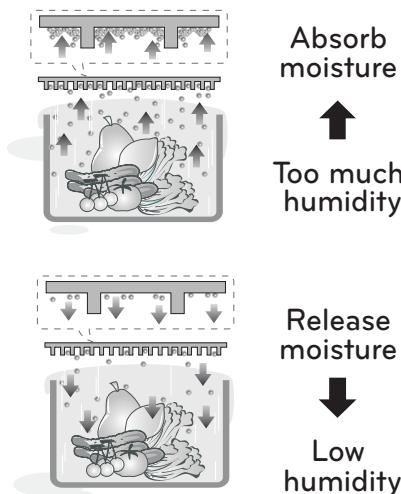


- It has a vent located in the inner wall of the lid to let humidity in or out.

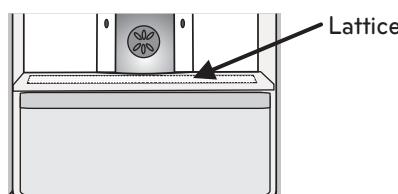

2. Vita Light

LED lamp automatically operates during all day allowing the photosynthesis of the vegetables.

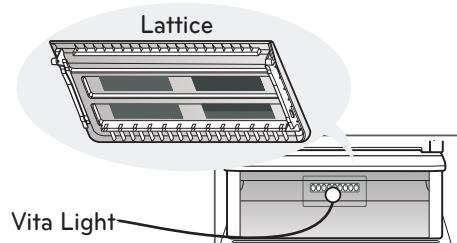

5. TEMPERATURE CONTROL FUNCTIONS

Before configuring temperature

- Refrigerator temperature will always be the same, despite ambient temperature changes.
- We recommend not to change the temperature adjustments after they have been set unless it is necessary.
- This refrigerator contains a button which controls the refrigerator's temperature and a knob to control the freezer's temperature.
- The correct temperature configuration for the refrigerator compartment should be 37.4 °F (3 °C).
- The correct temperature configuration for the freezer compartment should be -2.2 °F (-19 °C).
- The refrigerator compartment contains a temperature sensor which will automatically start and stop the compressor functions as needed.

OPERATIONS AND FUNCTIONS

5.1 External Temperature Control (applies to certain models)

1. **Refrigerator:** Monitors the refrigerator temperature. External temperature control, Fig. 6, (certain models)

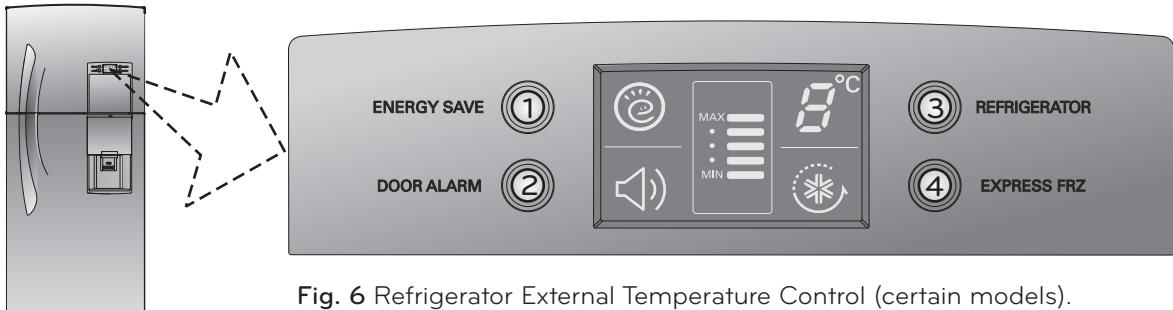


Fig. 6 Refrigerator External Temperature Control (certain models).

① **ENERGY SAVE:** By pressing this button the refrigerator will work with minimal power, reducing the time it is spent used and energy consumption. This feature will not activate if "EXPRESS FREEZING" is on.

② **DOOR ALARM:** You will hear an alarm when the refrigerator or freezer door stays open for over a minute. The alarm will continue to sound every 30 s. Alarm will stop once both doors have been shut. By pressing the button, the alarm can be deactivated.

③ **REFRIGERATOR:** This feature allows you to adjust the refrigerator temperature. The number appearing on the screen will match the degrees of the inside of the refrigerator. You can choose from 5 different settings, from 0 °C to 6 °C (32 °F to 42,8 °F).

④ **EXPRESS FREEZING:** Once this button is pressed, the refrigerator will begin to cool at full power to a maximum of two 2 h. Pressing the button a second time will deactivate the mechanism. This feature will not be available if "ENERGY SAVE" is on.

Temperature Configuration

HOW TO ADJUST		
COLDER	RECOMMENDED	LESS COLD

Press the "REFRIGERATOR" button until the bars reach the maximum limit and the temperature indicator reads 32 °F (0 °C).

Press the "REFRIGERATOR" button until the indicator reads 37,4 °F (3 °C). This is the desired temperature for best performance of this unit. (Up to the third bar will be lighted)

Press the "REFRIGERATOR" button until the bars reach the minimum level. The indicator will read 42,8 °F (6 °C).



2. **Freezer:** Controls the flow of cold air that goes from the freezer into the refrigerator.

NOTE: To check functions of the freezer temperature control, please look for **Internal Temperature Control Function**

OPERATIONS AND FUNCTIONS

5.2 Internal Temperature Control

1. **Freezer:** Controls the air flow from the freezer to the refrigerator, Fig 7.

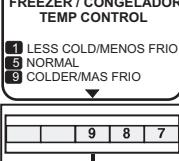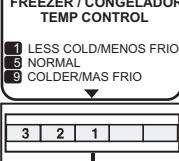HOW TO ADJUST	COLDER	RECOMMENDED	LESS COLD
To adjust the position knob turn to either side to make it turn. The arrow will set the temperature in your freezer.	<p>FREEZER / CONGELADOR TEMP CONTROL</p> <p>1 LESS COLD/MENOS FRIO 5 NORMAL 9 COLDER/MAS FRIO</p> 	<p>FREEZER / CONGELADOR TEMP CONTROL</p> <p>1 LESS COLD/MENOS FRIO 5 NORMAL 9 COLDER/MAS FRIO</p> 	<p>FREEZER / CONGELADOR TEMP CONTROL</p> <p>1 LESS COLD/MENOS FRIO 5 NORMAL 9 COLDER/MAS FRIO</p> 

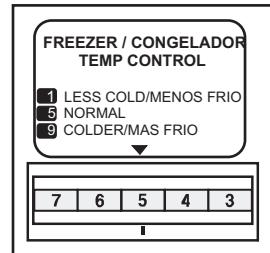
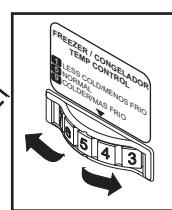
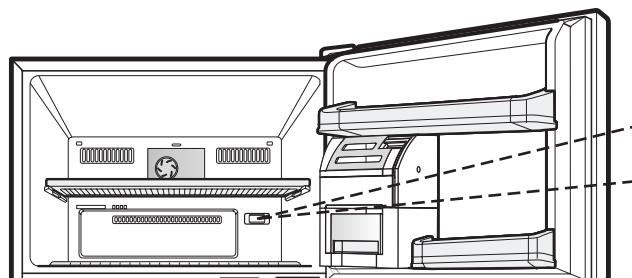


Fig. 7 Freezer Internal Temperature Control. Turning knob, (all models)

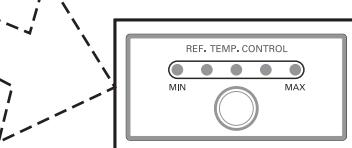
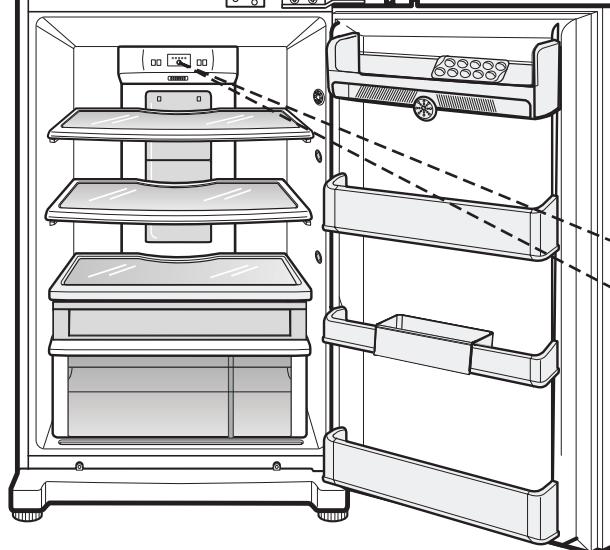
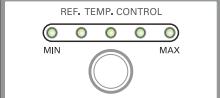
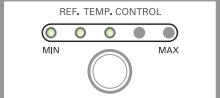
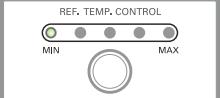


Fig. 8 Refrigerator Internal Temperature Control (certain models).

2. **Refrigerator:** Controls the temperature of the refrigerator. Control the internal temperature, Fig. 8 (according to every model)

HOW TO ADJUST		
COLDER	RECOMMENDED	LESS COLD
		
Press the button until the maximum level lights are on.	Press the button until the third light is on. This temperature is the recommended one for the optimum refrigerator performance.	Press the button until the first light is on. The temperature is the minimum.

USING YOUR REFRIGERATOR

1. SHELVES

The shelves of your refrigerator can be adjusted to comply with your storage necessities; depending on the model you have it can include glass shelves or wired shelves. Storing your foods together and adjusting the shelves to different heights will ease to help you locate what you need. This also helps your refrigerator to stay shut longer which will save you energy.

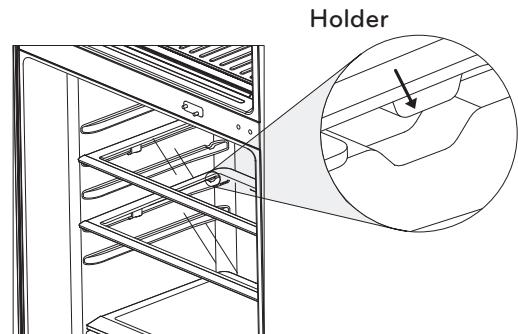


Fig. 10

IMPORTANT: While your refrigerator glass shelves are cold do not clean with hot or warm water. The glass shelves may break if exposed to rapid temperature changes or hard impacts. For your safety the glass shelves are made out of tempered glass so when at breaking they will fracture into tiny fragments.

NOTE: Be careful while moving or relocating the shelves, they are heavy. If moving the shelves is required keep in mind to locate them in a safe environment to prevent them from breaking.

⇒ Shelf (Refrigerator)

In order to remove the refrigerator shelves follow the next instructions:

1. Take the shelf from the back.
2. Lift it from the bottom by using the necessary strength Fig. 9.

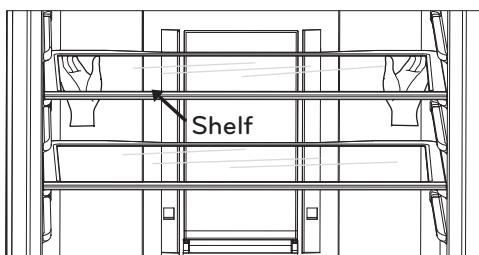


Fig. 9

3. Release the locks Fig. 10.
4. Slide it towards outside Fig. 11.

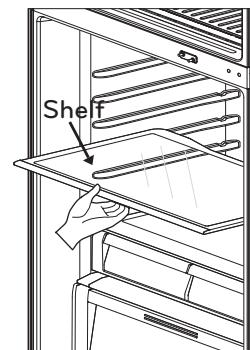


Fig. 11

⇒ Shelf (Freezer)

If you need to remove the shelf of the freezer, follow the instructions for not damaging it:

1. Hold the shelf by the front part Fig. 12.

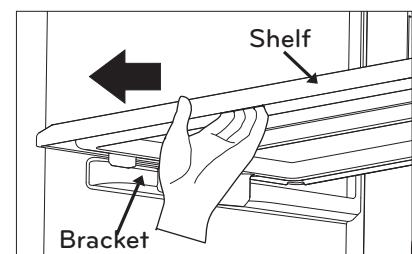


Fig. 12

2. Pull the shelf outwards lifting it slightly until it leaves the hold from the bracket Fig. 13.

OPERATIONS AND FUNCTIONS

6. AUTOCHECKING

Your refrigerator has the capacity of autochecking. If any failure comes to happen a code will be displayed to help the technician for it repairing. While this code is on display, the rest of the functions of control a visualizing will not be functioning.


NOTE: In the temperature controls, the code is represented with a no consecutive blinking of the leds (left to right/down to up) as would be in the normal mode.

EXAMPLE:

The error is represented with letters



The first LED is off

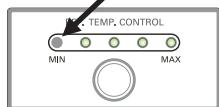

⚠ CAUTION

When ever this happens **DO NOT** unplug the refrigerator; call the service center.

USING YOUR REFRIGERATOR

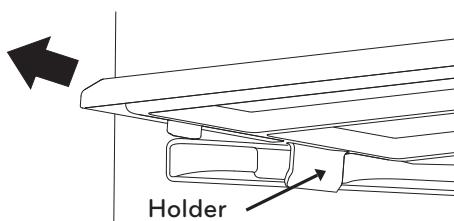


Fig. 13


NOTE: Be careful when you remove the shelves from the refrigerator, because they are secured to the refrigerator walls .

2. COMPARTMENTS

⇒ Door Racks

Door racks can be taken off in order to clean them better.

1. To remove the rack, raise it and pull it.
2. To replace the rack again slide it on the desirable guide and push it down until it is tighten (You will listen a "tick").

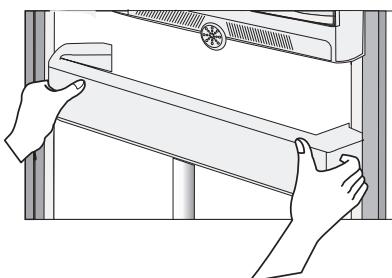

⚠ WARNING

Someone could get hurt if the racks are not well assembled.

NOTE: Empty the food charge before you move the containers.

⚠ CAUTION

DO NOT allow children play with baskets. Sharp corners on basket could cause injury.

⇒ Compartment "Ice Home Bar" (certain models)

In order to obtain the ice without opening the door, open the 'Home Bar' door only by pressing the "PUSH" button (located at the door of the "Home Bar", Fig. 14).


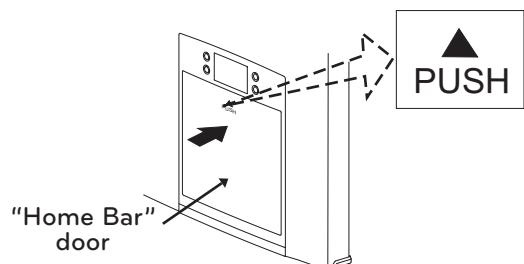


Fig. 14

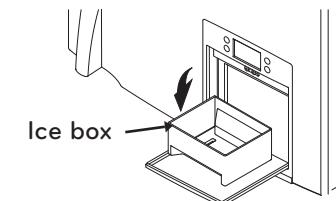

⚠ WARNING

When the door of the "Home Bar" is open, children might harm themselves when walking around; to avoid any damage, avoid children to play with or near the "Home Bar".

USING YOUR REFRIGERATOR


⇒ Compartment "2 in 1 box" / Vegetables and fruits compartment (certain models)

Even with the door open, warm air can not affect the freshness zone, so you can keep in it the store food more fresh.


The compartments should be correctly closed, because having the door open could affect the refrigerator's operation.

The compartments can be opened pulling the tray.

NOTE: Check the position before storing the food because it can clog if it is not closed properly.

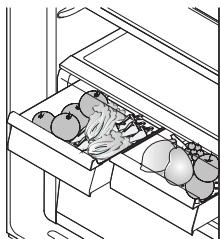

2 in 1 box

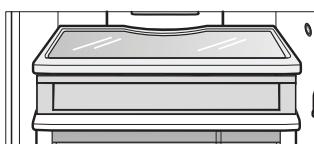


Vegetable and fruit compartment

3. WATER CONTAINER (some models)

1. Filling the water container


- To supply water, open the cover as it is shown in the picture. You can fill it with a jar or a glass.

NOTE: The container's capacity can vary from model to model.

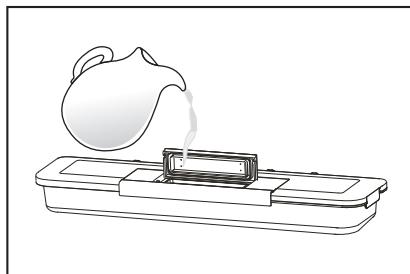

2. If you need to empty the water container:

- Remove the water container.
- Remove the container's cover.
- Throw the water away.

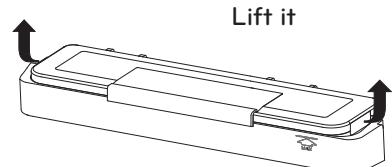



NOTE: It is not necessary to empty the water container before removing it.

⚠ WARNING

Fill only with potable water.

3. How to install the Water container

To install the container in its original position, make sure the valve fits correctly in the door's hole; you can do that by pressing the container down when it is already placed in the door (as it is shown in the picture).

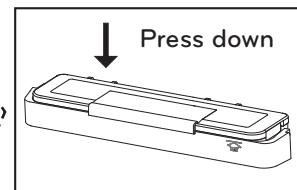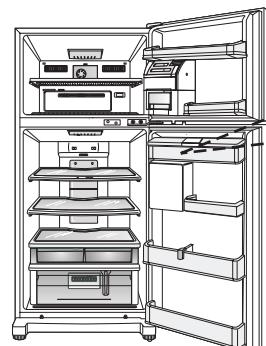

NOTE: If the water container is not well placed, water could spill or drain and no water will come out from the dispenser in the door.


4. WATER DISPENSER

Your refrigerator has a mechanism that dispatches cool water without opening the door.

USING YOUR REFRIGERATOR


NOTE: Use only water (do not add sugar). Any other kind of liquid can cause damage on the mechanism.

To obtain water, push upward the dispenser lever with a glass until water start flows.

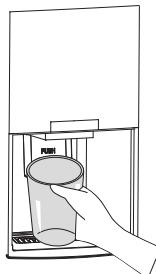


⇒ Tray

The tray can be removed easily by holding and sliding it out.

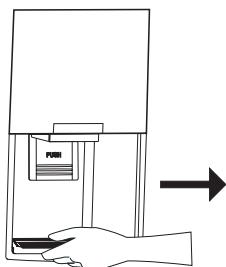


To reinstall the tray, just slide it in.

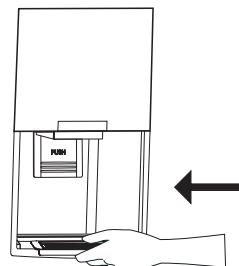


STORING FOOD SUGGESTIONS


- Keep fresh food in the refrigerator.
- Freeze only small amounts of food.

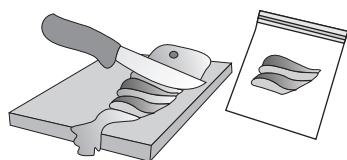


- After you freeze some food, once you thaw it do not freeze them again, they lose their taste and nutritional value; after thawing them, you might keep them in the refrigerator up to 48 h.
- Do not store food that might get decomposed under low temperatures. (ie pineapple, bananas, and cantaloupe).

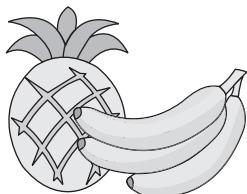

- Do not store garlic in the refrigerator.
- When storing food in the refrigerator use closed containers to avoid odor mixing and loss of humidity.

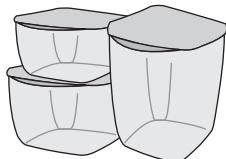


- Always clean the food before placing them in the refrigerator. Wash and dry the fruits and vegetables.

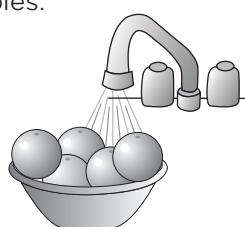

- It is recommendable to store onion in plastic bags to avoid other food odor to get mixed with it odor.
- If you are going to store ice cream for a long period of time, place it on the freezer grid and not on the freezer door.
- When storing eggs always place them in the highest shelf or in the first grid in order to keep them fresh for a longer period of time.
- Throw away any food that is being decomposed; it may contaminate other foods.



- Store cold cuts, cheese and sausages in bags or plastic sealed containers.

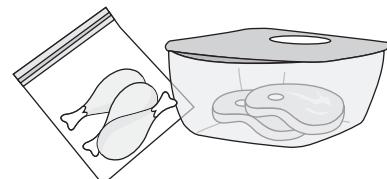

- Do not store glass bottles in the freezer because they can break when they freeze.
- Do not store hot food inside the refrigerator they might decrease the refrigerator's efficiency.



- In the models with water dispenser it is recommended that you change the water at least every 7 days.


CLEANING

In order to avoid bad or unwanted odors, is important to keep the refrigerator clean. Any spilled food must be cleaned immediately; they can stain and/or acidify the plastic parts of the refrigerator if they are let to get dry.

⇒ Exterior

Use a warm mixture of mild detergent or soap to clean the refrigerator's surface. Clean with a damp cloth and dry immediately.

Fig. 17

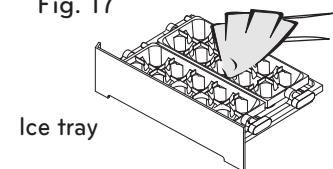

⇒ Interior

It is recommended to clean the interior often. Wash all the bins and drawers with a mixture of bicarbonate or mild detergent with water. Clean and dry. Using other kinds of products might damage your refrigerator.

⚠ CAUTION

Do not immerse the ice tray in water. If done, completely dry the tray.

⇒ Ice Tray Kit

Indoor Ice Maker

- Remove the ice tray from the kit. Fig. 15.
- Clean the inside and the outside of the tray with a mild soap, rinse with tap water. Fig. 16.
- Pass a damp piece of cloth, dry Fig. 17.

Fig. 15


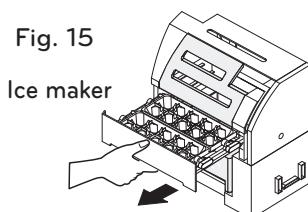


Fig. 16

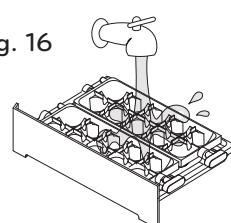

⇒ Door lining and gaskets

Use only a mild detergent (such as dish soap).


⇒ Plastic Parts (covers and panels)

Do not use abrasive, paper or rough products. These could damage the product.

⇒ Back Cover

In order to get an efficient performance of your refrigerator, clean the rear part of it at least twice a year.

Cover Back

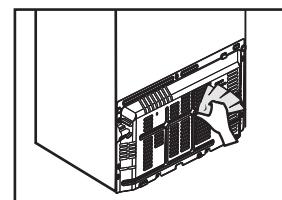

CLEANING

⇒ Water container

1. Remove the water container Fig. 18 (it is no necessary to empty it before remove).
2. Remove the container lid, opening the snaps and wash it with dishwashing detergent.
3. Rinse thoroughly under water Fig. 19.
4. Wipe it with a clean cloth Fig. 20.

Fig. 18

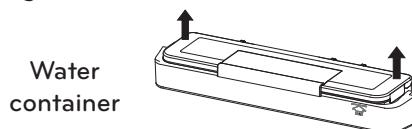


Fig. 19


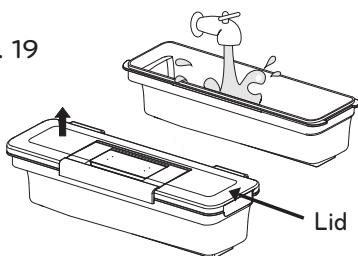


Fig. 20

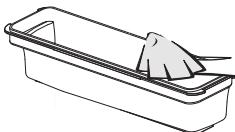

⇒ Before cleaning

Check that the plug is not damaged or overheated and it is properly plugged.

⚠ WARNING

Unplug the power plug always before cleaning around the electrical parts (lamps, switches, etc.) clean any humidity to avoid any liquid might get into any electrical part. Do not touch the frozen part with wet hands, humid or wet object stick to frozen surfaces.

WHAT TO DO WHEN...

The refrigerator doesn't work

- ⇒ Check if any fuse is broken in the electric facility.
- ⇒ Check if the power cord is correctly plugged.
- ⇒ Check if the power outlet is not damaged. Identify if there are any high consume electrical appliances working at the same time, unplug the one that are not necessary.

The temperature of the refrigerator or the freezer is to warm or hot

- ⇒ Check that the temperature control is in the right position.
- ⇒ Place the refrigerator away from any heat sources or direct sunlight.
- ⇒ Open the doors only when necessary.
- ⇒ There are too many food that block the air vents.
- ⇒ Don't let the doors open for too long.

I can hear some weird or abnormal sounds

- ⇒ Check that the refrigerator is placed over an even leveled surface, if not, adjust the refrigerator using the leveling height adjusting screws.
- ⇒ Remove the unnecessary object from the back or top of the refrigerator.
- ⇒ Check that the voltage is the correct one, if not call your electric company.

There are some odors in the refrigerator

- ⇒ Store all food in sealed containers.
- ⇒ Frequently clean the refrigerator inside.

Some humidity is formed in the cabinet's surface

- ⇒ When the weather is humid is normal.
- ⇒ The door might be opened, check that is properly closed.

The front part of the refrigerator is getting warm

- ⇒ Do not worry, is part of the normal functioning of the refrigerator, and this happens in order to avoid condensation or "sweat".
- ⇒ If this comes to happen, just clean with a dry piece of cloth.

The compressor works too frequently and for extended periods of time

- ⇒ Check if the temperature controls are place in the maximum, if so, place then in the middle.
- ⇒ Check that the doors are properly closed.
- ⇒ Do not store over heated products.
- ⇒ Do not let the doors open for too long.
- ⇒ Move away from any heat sources the refrigerator.

There is a power interruption

- ⇒ Check that no fuse is burned.
- ⇒ Check if the power cord is plugged.
- ⇒ Check that the outlet is not damaged.
- ⇒ Identify weather you have different high consumption equipment plugged at the same time, unplug the one you do not use.

In case of a black out, call your electric company and ask how long it will last.

1. In case of a 24 hour or less black out, do not open the refrigerator; this will keep the food fresh.
2. In case of a longer black out, do one of the following options:
 - a) Pull out all of the frozen food and keep them in an ice chest.

or

WHAT TO DO WHEN...

b) Put 2 lbs (0,907Kg) of frozen ice (make sure you use gloves) for each square foot (28 L) inside the freezer. This task will preserve the food for 2 to 4 days. While handling dry ice(CO₂), wear gloves to protect your hands from frostbite.

or



c) In case you do not possess neither ice chest or dry ice (CO₂), consume your food as soon as possible.

REMEMBER: A full freezer will stay cooler than a partially empty one. Also, a freezer containing meat will also maintain cooler than one containing bread, pastries, or any other baked food.

WHAT YOU HAVE TO KNOW ABOUT YOUR REFRIGERATOR

1. THE OVERALL PERFORMANCE OR EFFICIENCY OF YOUR REFRIGERATOR MIGHT BE AFFECTED IF:

- It is place near a heat source or humid area.
- You open the door frequently.
- If you introduce water or any object in the cold air vents.
- You block the air vents with food.
- You store hot food.

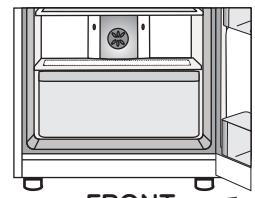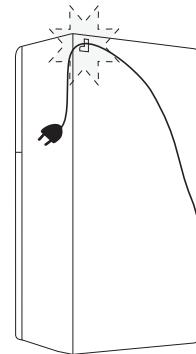

TURN THE LEVELING SCREWS UP TO REFRIGERATOR BASE

2. DURING VACATIONS WE RECOMMENDED YOU THE FOLLOWING:

- If the vacations are for a short period of time place the freezable food in the refrigerator.
- If you are going to be outside or away for a longer period of time, do the following:
 - ⇒ Take out all food.
 - ⇒ Unplug the power cord.
 - ⇒ Leave the doors open to avoid bad odors.
 - ⇒ Thoroughly clean the refrigerator.
 - ⇒ Empty and clean the water bin not forgetting to purge the system (turning on the switch).


3. IF YOU ARE PLANNING TO MOVE OR TO CHANGE YOUR REFRIGERATOR FROM IT CURRENT POSITION:

- Remove and secure all attachments inside the refrigerator.
- To avoid any damage to the leveling height adjusting screws, turn them completely until the base.
- Place the power cord in the hook located in the upper left side.
- Clean and empty the water container and do not forget to purge the system. (turning on the switch).
- After these procedures, you will be able to move your refrigerator.

4. LAMP REPLACEMENT

4.1 Freezer lamp

1. Unplug the power cord from the outlet.
2. Remove the tray from the freezer.
3. Remove the screw and remove with both hands, as shown in picture, in order to remove the lamp.
4. Remove the bulb by turning in the opposite direction to clockwise.

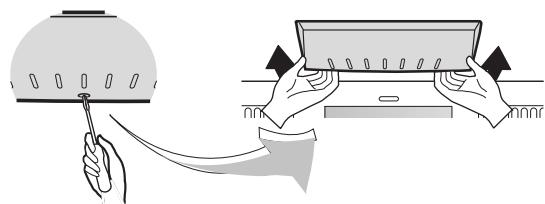


4.2 Refrigerator's lamp


1. Unplug the power cord from the outlet.
2. Remove refrigerator shelves.
3. Remove the cover lamp by pulling it forward.

To remove the cover of the lamp, lever with a screw driver (or similar) in the slots as shown in the next picture.

WHAT YOU HAVE TO KNOW ABOUT YOUR REFRIGERATOR

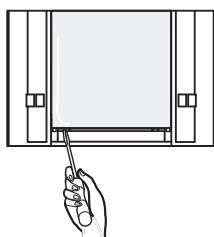

Slot

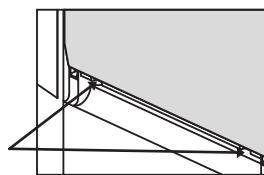

4. Unscrew the lamp clockwise.


⚠ ADVERTENCIA

In any given case the replacement bulb light must be the same size and wattage as the original. For the model with LED, call an authorized technician for replacement.

5. "Ion Door Cooling"


The negative ion covering on the multi cover lid, purifies the air and helps keep the stored food fresh longer periods.

If any water or other substances enter in the air vent, it will decrease its performance.

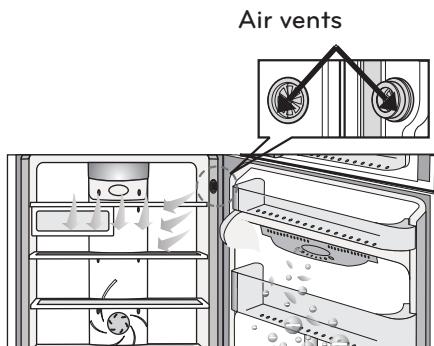


6. THE FRONT AREA WARMS UP

The front wall of the cabinet of the refrigerator might warm up sometimes specially during installation. DO NOT ALARM! It's normal due to avoid humidity or "sweat".

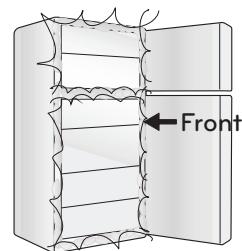

7. THE BACK OF THE REFRIGERATOR WARMS UP (some models)

The warming up is normal because from behind passes the cooling coil.

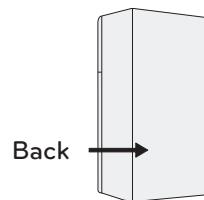



LG Electronics

Modelo: _____

Número de serie: _____

CERTIFICADO DE GARANTIA

Garantiza: LG ELECTRONICS ARGENTINA S.A.
Av. Del Libertador 498-Piso 22-C1001ABR
Capital Federal-Argentina
0800-888-5454 ó 0810-555-5454
www.lg.com.ar

Fábrica: LG ELECTRONICS MONTERREY MEXICO S.A DE C.V.
Av. Industrias 180 Fraccionamiento Industrial PIMSA Ote.
Apodaca, N.L.

Especificaciones técnicas y de uso: para una información más detallada de las especificaciones técnicas y modo de uso de su equipo, remitirse al manual de instrucciones adjunto.

Condiciones de instalación necesarias para su funcionamiento:

Remitirse al Manual de Instrucciones adjunto.

Condiciones de validez de la garantía:

LG ELECTRONICS ARGENTINA S.A. garantiza que el equipo será reparado sin cargo en los Servicios Técnicos autorizados. A tales efectos, es imprescindible que:

- 1-La fecha de compra figure con el sello y firma de la casa vendedora en el presente certificado.
- 2-El presente certificado no se encuentre alterado bajo ningún concepto y en ninguna de sus partes.
- 3-El comprador original acredite su calidad de tal exhibiendo la factura original con fecha de compra.
- 4-Serán causas de anulación de esta garantía:

- A)Uso impropio o distinto del uso doméstico.
- B)Exceso o caída de tensión eléctrica, que implique uso en condiciones anormales.
- C)Intervención del monitor por personal no autorizado por LG ELECTRONICS ARGENTINA S.A.
- D)La operación del equipo en condiciones no enunciadas en el manual de usuario.

5-La garantía carece de validez si se observa lo siguiente:

- A)Falta de factura de compra original o falta de fecha de la misma.
- B)Tachaduras en los datos del certificado de garantía o factura de compra.

-No están cubiertos por esta garantía los siguientes casos:

- A)Las roturas, golpes, caídas o ralladuras por cualquier causa.
- B)Daños ocasionados por otros equipos interconectados al producto.

-En caso de falla, LG ELECTRONICS ARGENTINA S.A. asegura al comprador la reparación y/o reposición de las partes para su correcto funcionamiento en un plazo no mayor a 30 días.

6-Cualquier cuestión judicial que pudiera dar lugar la presente, será resuelta ante la justicia ordinaria de Capital Federal.

IMPORTANTE: a) Nos reservamos el derecho de efectuar cambios de diseños y modificaciones sin incurrir en compromiso alguno de incorporar estos cambios en los productos ya vendidos; b) Las condiciones de instalación necesarias para el funcionamiento de los productos LG, con las especificaciones técnicas de indicación del producto para su correcta individualización, más la información para la solicitud de servicios u obtención de repuestos que figuran en el manual de instrucciones forman parte de esta garantía.

ADVERTENCIA: a) El presente certificado anula cualquier otra garantía implícita o explícita, por lo cual y expresamente no autorizamos a ninguna otra persona, sociedad o asociación a asumir por nuestra cuenta ninguna responsabilidad respecto a nuestros productos; b) Hacemos constar que estos productos han sido diseñados para uso familiar y/o individual según sea el caso. Los usos comerciales, industriales o afectaciones de cualquier otro tipo no están amparados por esta garantía, no asumiendo en consecuencia los daños y perjuicios directos o indirectos que pudiera sufrir el comprador, usuarios o terceros.

LG ELECTRONICS ARGENTINA S.A. no asume responsabilidad alguna por los daños personales o a la propiedad que pudiera causar la mala instalación o uso indebido del equipo.

LG ELECTRONICS ARGENTINA S.A. asegura que este equipo cumple con la normas de seguridad eléctricas vigentes S.I.C. y M Res. 92/98 (IRAM / IEC).

PLAZO: Por el término de 1(un) año a partir de la fecha de compra acreditada por la factura original.

PLAZO PARA COMPRESORES: Por el término de 3 (tres) años a partir de la fecha de compra.



LG Electronics Inc.

12 Meses

CERTIFICADO DE GARANTÍA LG

CONDICIONES DE LA GARANTÍA

LG Electronics garantiza una asistencia gratuita a sus productos dentro del período de garantía a través de sus centros de servicio autorizados.

1. LG Electronics Inc., garantiza servicio técnico contra cualquier defecto de fábrica durante el período de cobertura de garantía.
2. El servicio de garantía sólo será efectuado en los centros de servicio autorizados.
3. El certificado de garantía deberá ser presentado junto con la factura del producto.
4. El certificado de garantía deberá ser completado debidamente por el vendedor al momento de la compra.
5. Todo certificado de garantía deberá ser sellado por el almacén.

CASOS QUE LA GARANTÍA NO CUBRE

1. Daños causados por accidentes, transporte uso inadecuado del equipo, uso en condiciones ambientales deficientes o por agentes naturales (humedad, fuego, rayos, etc.)
2. Daños causados por oscilaciones excesivas en la red eléctrica.
3. Equipos que presenten alteraciones en el número de serie.
4. Equipos expuestos a modificaciones internas o externas.
5. Se suspenderá el derecho a la garantía a aquel equipo que haya sido revisado por un centro de servicio no autorizado por LGEPS.
6. Partes consumibles o accesorios adicionales
 - El reemplazo de bombillas, filtros o cualquier otra parte consumible.
 - Las bandejas, repisas, gavetas o cajones, agarraderas y cualquier otro accesorio del producto. También se excluyen las partes que no fueron incluidas originalmente con el producto.
7. Desgaste o deterioro natural.
 - En el caso de que la fecha de compra del aparato sea dudosa, el criterio a utilizar para determinar la duración de la garantía será 15 meses a partir de la fecha de fabricación (Verificado con base en el número de serie).
 - En el caso en que no se pueda aplicar el servicio de garantía, el técnico autorizado deberá aclarar el por qué, analizando y verificando el caso.

Modelo: _____

1 **Modelo:** _____

Serie: _____

Fecha de Compra: _____ / _____ / _____

Taller: _____

Recibido: _____ / _____ / _____

Serie: _____

Fecha de Compra: _____

2 **Modelo:** _____

Serie: _____

Fecha de Compra: _____ / _____ / _____

Taller: _____

Recibido: _____ / _____ / _____

Distribuidor: _____

Nombre del Cliente: _____

3 **Modelo:** _____

Serie: _____

Fecha de Compra: _____ / _____ / _____

Taller: _____

Recibido: _____ / _____ / _____

Dirección: _____

Tel.: _____

Centros de Información LG

COSTA RICA

Línea Telefónica: 0 - 800 - 507 - 5454

REP. DOMINICA

Línea Telefónica: 1 - 800 - 751 - 5454

ECUADOR

Línea Telefónica: 1 - 800 - 101092

EL SALVADOR

Línea Telefónica: 00 - 800 - 6309

GUATEMALA

Línea Telefónica: 1 - 801 - 422 - 5454

JAMAICA

Línea Telefónica: 1 - 800 - 2342675

NICARAGUA

Línea Telefónica: 001 - 800 - 507 - 0007

PANAMÁ

Línea Telefónica: 800 - 5454

PUERTO RICO

Línea Telefónica: 001 - 800 - 510 - 9564

TRINIDAD & TOBAGO

Línea Telefónica: 1 - 877 - 4909112

VENEZUELA

Línea Telefónica: 0 - 800 - 5424477

Para mayor información sobre productos, repuestos, accesorios o servicios, contacte a nuestro departamento de Atención al Cliente a los números asignados para cada país o escríbanos a:

clientes@lge.com



LG Electronics Panamá S. A.
Departamento de Atención al Cliente

For more information about products, parts, accessories or services, please contact our Customer Care department at the assigned numbers for each country or email us to:

customers@lge.com



LG Electronics Panamá S. A.
Departamento de Atención al Cliente

