



LG

Life's Good

OWNER'S MANUAL

SXS

REFRIGERATOR

Please read this owner's manual thoroughly before operating and keep it handy for reference at all times.

GR-P267FSN



MFL66986015

www.lg.com

Table of contents

Introduction	Entry	3
	Basic safety precautions	3
	Identification of parts	11
Installation	Where to install	12
	Door removal	13
	Door replacement	14
	Feed water pipe installation	14
	Height adjustment	15
Operation	Starting	17
	Adjusting the temperatures and functions	17
	Adjusting The Temperatures And Display	18
	Operating The Dispenser	19
	Setting The Functions	20
	Refreshment center (Applicable to some models only)	24
	Shelf	25
	Egg box	25
	Deodorizer	25
	Fresh compartment	26
	Vacuum fresh compartment	27
	Freezer/Fridge basket	28
	Dairy corner	28
How to exchange the water purifier filter (Applicable to some models only)	29	
Suggestion on food storage	Location of foods	30
	Storing foods	31
Care and maintenance	General information	32
	Cleaning	32
	Trouble shooting	33
	It is normal...	38



- This product is exclusive use at 230V/50Hz.
- You should purchase transformer of more than 2.0KVA when you want to use it at the 110V area.

Entry

The model and serial numbers are found on the inner case or the right side of the refrigerator compartment of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of purchase : _____
 Dealer purchased from : _____
 Dealer address : _____
 Dealer phone no. : _____
 Model no. : _____
 Serial no. : _____

Basic safety precautions

This guide contains many important safety messages.
 Always read and obey all safety messages.



This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can cause death or injury. Such hazards may damage the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



DANGER

Could cause death or serious injury if you don't follow instructions.



WARNING

Could cause death or serious injury if you don't follow instructions.



CAUTION

Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.


WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

1. When connecting the power


A dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may leak.

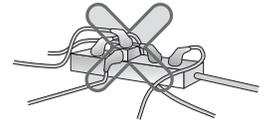

Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Water flowing into or on the plug may cause damage, which could cause a fire or electric shock.

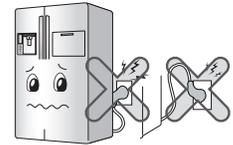

Do not leave the power cord squeezed or imprinted behind the refrigerator. When moving your appliance away from the wall, be careful not to roll over the power cord or to damage it in any way.

It could cause fire or electric shock.


Do not allow the power cord to be bent or pressed by a heavy object.

It may damage the power cord and cause fire or electric shock.



Do not extend or modify the length of the power plug.

This may damage the power cord and cause fire or electric shock.

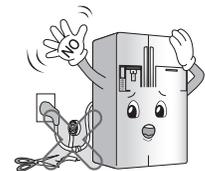


Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.

- Failure to do so may cause electric shock or injury.
- When replacing the interior lamp of the refrigerator, make sure that the rubber ring remains attached. It will prevent electric sparks within the socket.




Do not pull out the cord or touch the power plug with wet hands.

It may cause electric shock or injury.

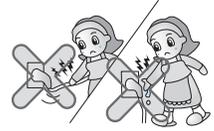

When inserting the power plug, remove any water or dust on the plug.

Make sure the ends of the pins are securely connected. Dust, water or unstable connection may cause fire or electric shock.

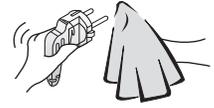

When cleaning or performing other tasks, unplug the power cord from the power outlet.

Failure to do so may cause electric shock or injury.


When pulling out the power plug, do not pull by the cord.

It may cause electric shock or short circuit to fire.
Pull by the plug.



Make sure of grounding. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

Incorrect grounding may cause breakdown and electric shock.

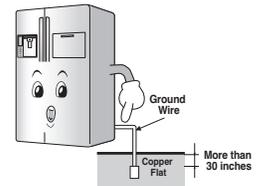


Always use grounded exclusive proper voltage consent for the power plug. Always use grounded extension consents when extension consents are used.

It could cause fire or electric shock.

Do not use a damaged power cord or power plug. Do not use outlets with loose holes.

It may cause electric shock or short circuit fires.

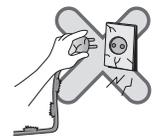

Wait for 5 minutes or longer when reconnecting the plug.

It may damage the freezer operation.



If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

2. When using the refrigerator


Do not place any heavy or dangerous objects (containers holding liquid) on the refrigerator.

It may fall and cause injury, fire or electric shock when opening or closing the door.



Do not install the refrigerator in a wet place. Avoid places where water or rain could seep in.

Deteriorated insulation of electric parts may cause electric leakage.

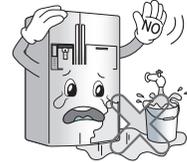


Do not cling to the door or the shelves of the door. Do not cling to the home bar of the freezer or the cooling chamber.

It may damage your hands or topple the refrigerator. Especially, prevent children from doing the above.



Prevent children from entering the product.

If a child enters the refrigerator, it may endanger the child's life.

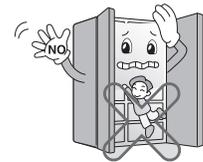


Be careful when opening and closing the door of the refrigerator vigorously.

It may cause the contents of the refrigerator basket to fall out and cause injury.


Do not use or store inflammable materials such as ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

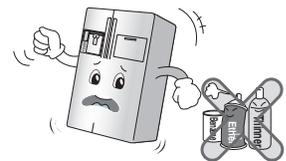

Do not use a dryer to dry the inside of the refrigerator. Do not light a candle to remove odors.

It may cause explosion or fire.

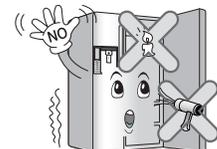


Do not store medicine or lab experiment material in the refrigerator.

If you store substances requiring strict temperature control, the substance may deteriorate or react unexpectedly. This may cause injury.




Do not use combustible sprays near the refrigerator.

It may cause fire.

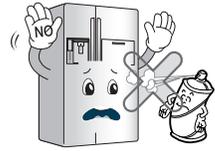

Install in places away from an open fire or a place where flammable gas could leak.

It may cause fire.

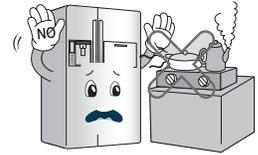


Do not place flower vases, cups, cosmetics, medicine or any containers with water on top of the refrigerator.

It may fall down and cause fire, electric shock or injury.




Do not put heavy things on the Home Bar. (Only for the models with the Home Bar)

Falling objects may hurt people.

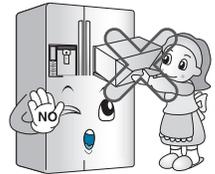


In case of thunder and lightning, or when you do not use the refrigerator for a prolonged period, detach the power plug.

Failure to do so may cause electric shock or fire.

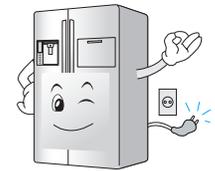


Please examine carefully before using a submerged refrigerator.

It may cause electric shock or fire.

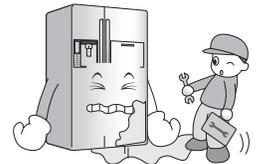

When gas is leaked, do not touch the refrigerator or the outlet. Ventilate the room immediately.

- A spark explosion may cause fire or burn.
- This refrigerator uses natural gas (isobutene, R600a) as natural gas is an environment-friendly refrigerant. But natural gas is highly combustible, even in small amounts (80~90g). If gas leaks during delivery, installation, or usage of the refrigerator, any spark may cause fire or burn.

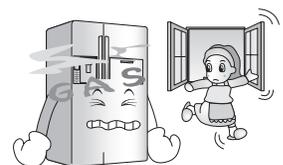


Do not spray water on the outside or the inside of the refrigerator. Do not clean the refrigerator with benzene or thinner.

Deteriorated insulation of electric parts may cause electric shock or fire.



When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact the service center.

Failure to do so may cause fire.

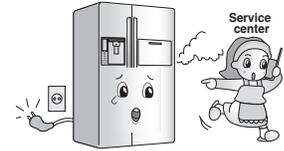


Do not allow any person except a qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.



Do not use the refrigerator for non-domestic purposes (storing medicine or testing material, using on a ship, etc.).

It may cause accidents such as fire, electric shock, deterioration of stored material or an unexpected chemical reaction.

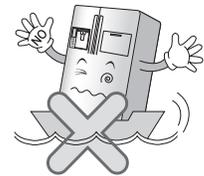

When disposing the refrigerator, remove the packing materials from the door or take off the doors. Leave the shelves in place so that children will not easily climb inside.

Children may be locked in.



Without supervision or instruction concerning use of the appliance by a person responsible for their safety, this appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

Children should be supervised to ensure that they do not play with the appliance.


Install the refrigerator on a solid and level floor.

Installing it on a unstable place may cause serious injury or even death by toppling the refrigerator when opening or closing the door.



Do not insert hands or metal sticks into the refrigerator's cool air exit, cover, bottom and heatproof grill (exhaust hole) on the backside.

It may cause electric shock or injury.

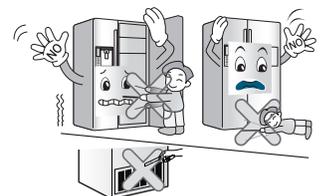

In case of appliance enclosure or built-in structures, keep ventilation openings clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not damage the refrigerant circuit.

Do not use electrical appliances inside the food storage compartments of the appliance, unless they are recommended by the manufacturer.

The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposing, please consult with a service agent or a similarly qualified person.



This appliance contains a small amount of isobutane refrigerant (R600a), a highly environmentally compatible, but combustible natural gas. When transporting and installing the appliance, be careful not to damage any parts of the refrigerating circuit. Refrigerant squirting out of the pipes could ignite or cause eye injuries. If a leak is detected, avoid any naked flames or potential sources of ignition and air in the room for several minutes.

In order to avoid creating a flammable gas air mixture when a leak in the refrigerating circuit occurs, the size of the room in which the appliance stands depends on the amount of refrigerant used. The room must be 1m² in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult with your dealer.

CAUTION


Violating these directions may cause injury or damage property. Please be careful at all times.

Do not insert hands into the ice bucket or the ice dispenser. Operating the ice maker may cause injury.



Do not touch the food or containers in the freezer with wet hands.

It may cause frostbite.

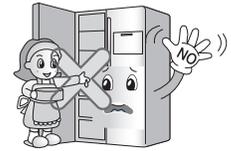**Do not put ice in thin crystal cups or ceramic ware.**


The cups or ceramic ware may break and cause injury.

**When the electricity is off, remove ice from the ice bucket (only for the model with the dispenser).**

A prolonged power failure may thaw the ice and damage the floor. When a prolonged power failure is expected, remove ice from the ice bucket.

**Supply the automatic ice maker with drinkable water only (only for models with the dispenser).**

Otherwise, it may cause accidents.

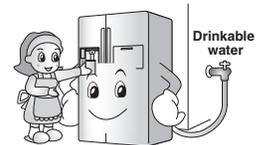**Do not remove the cover of the automatic ice maker. (Only for the models with the automatic ice maker)**

The mechanic parts of the ice maker may cause injury.

Please organize the food inside the refrigerator.


Food may fall during opening and closing the door and hurt people.

Do not put bottles in the freezer.


Frozen contents may break the bottle and cause injury.

**Do not insert your hands into the bottom of the refrigerator.**

The iron plate at the bottom may cause injury.

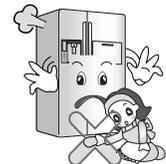
**When moving the refrigerator, use the handle bar at the bottom of the front and the top of the rear.**

Otherwise, your hands may slip and cause injury. Because the product is heavy, carrying it alone may cause injury.

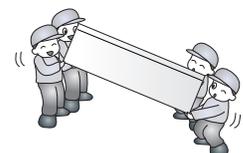


Be careful as the door and home bar may cause injury to the person in close proximity.


Opening or closing the door may cause feet or hands to be caught in the chink of the door. A child may be hurt by the corners.

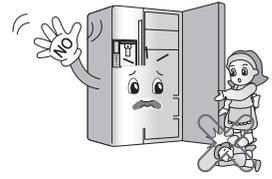

Do not put any living animals in the refrigerator.

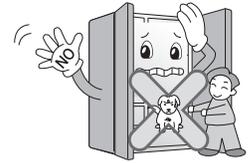

Identification of parts

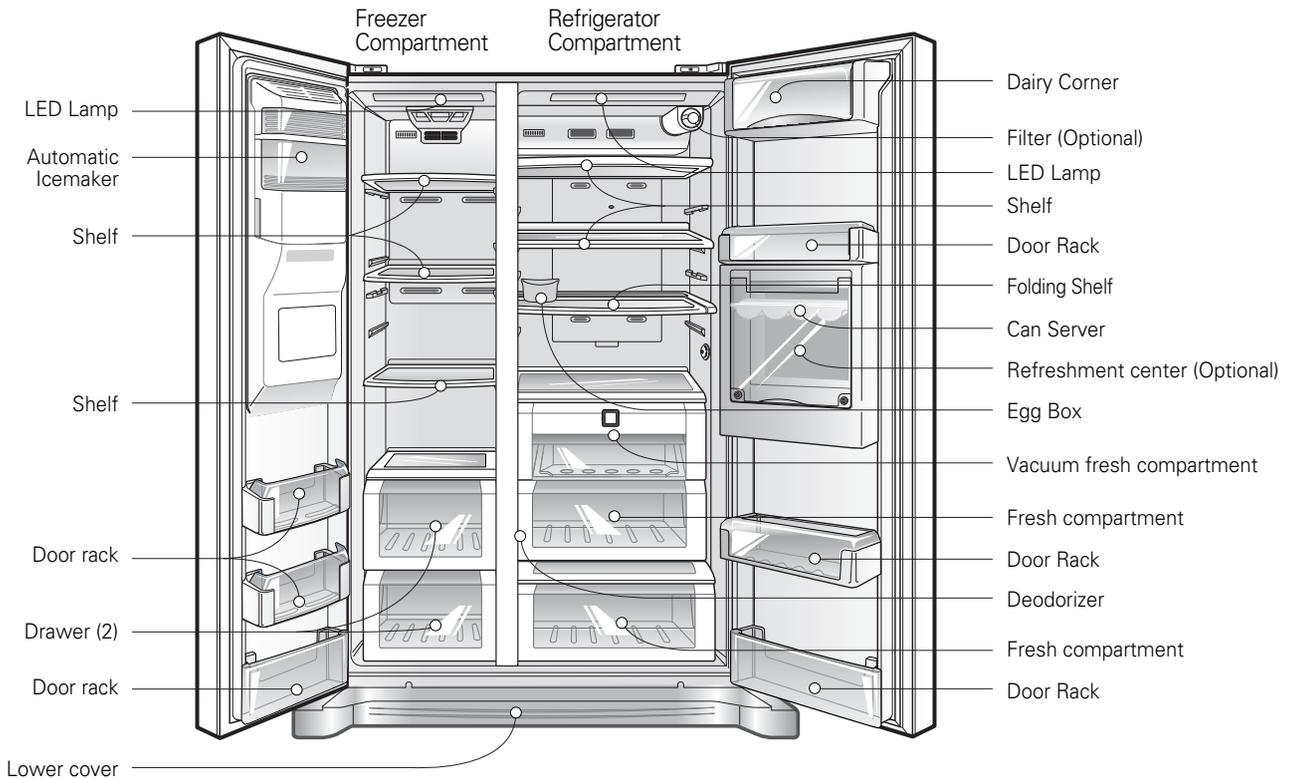


NOTE

- Parts, features, and options vary by model. Your model may not include every option.

Where to Install

Select a good location

1. Place your appliance where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To ensure proper air circulation around the fridge-freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
4. To avoid vibrations, the appliance must be leveled.
5. Don't install the appliance below 5°C. It may affect performance.

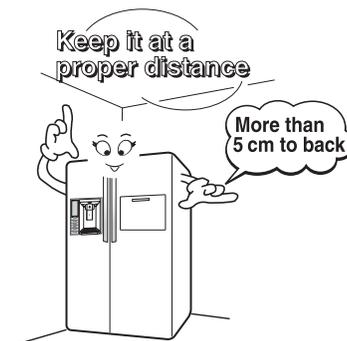

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable. All the important materials should be sent to the waste material collection center and can be reused after rework (recycling). For take back, please contact with the local agency.


WARNING

Door removal

Electric Shock Hazard

Disconnect electrical supply to refrigerator before installing. Failure to do so could result in death or serious injury.

If your access door is too narrow for the refrigerator to pass through, remove the refrigerator door and pass the refrigerator laterally.

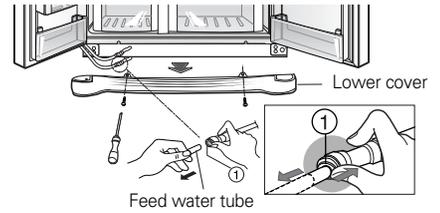

Remove lower cover and then feed water tube

Remove the lower cover by lifting upward and then pull up the feed water tube while pressing area ① shown in the figure to the right.

NOTE


- If a tube end is deformed or abraded, cut the part away.

Remove the freezer compartment door

1) Remove the hinge cover by loosening the screws. Separate all connection wires.




2) Remove the keeper by rotating it counter clockwise (①) and then lift the upper hinge up (②).

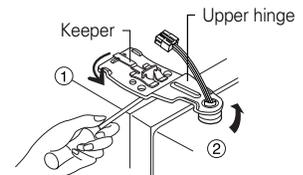

NOTE

- When removing the upper hinge, watch out for the door. It may fall forwards and cause injury.

3) Remove the freezer compartment door by lifting it upward. This time, the door should be lifted enough for the feed water pipe tube to be completely pulled out.

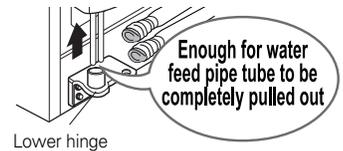


NOTE


- Move the refrigerator compartment door passing through the access door and lay it down, but be careful not to damage the feed water pipe tube.

Remove the refrigerator door


1) Loosen the hinge cover screws and remove the cover. Remove connection wires.

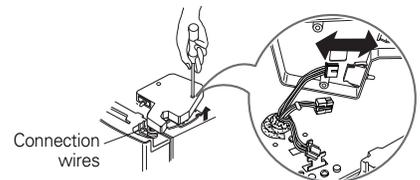

2) Remove keeper by rotating it clockwise (①) and then remove the upper hinge by lifting it up (②).

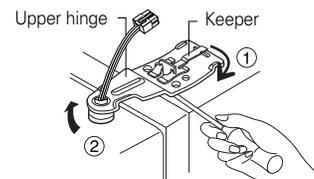


3) Remove the refrigerator compartment door by lifting it up.

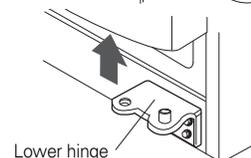

Pass the refrigerator

Pass the refrigerator laterally through the access door as shown in the right picture.

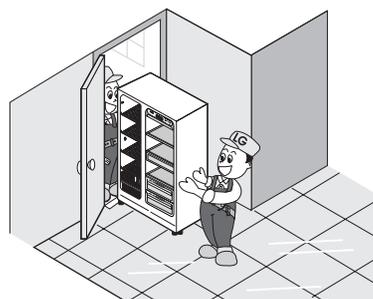**Door replacement**

Mount them in the reverse sequence of removal after they pass through the access door.

Feed water pipe installation**Before installation**

- Automatic ice maker operation needs water pressure of 147~834 kPa (1.5~8.5 kgf/cm²) (That is, an instant paper cup (180 cc) will be fully filled within 3 sec.).
 - If water pressure does not reach the rating 147 kPa (1.5 kgf/cm²) or below, it is necessary to purchase a separate pressure pump for normal automatic icing and cool water feed.
 - Keep the total length of the feed water pipe tube within 8 m and be careful for the tube not be bent. If the tube is 8 m or longer it may cause trouble in water feed owing to the drain water pressure.
 - Install the feed water pipe tube at a place free from heat.
- WARNING**
- Connect to potable water supply only.
 - Refer to instructions with water filter kit for installation.

Height adjustment

When the floor is not leveled

- If the freezer is not leveled when the refrigerator is installed, the refrigerator may not be leveled.


► When the freezer door is lower – ①

Level the door by turning the height adjustment screw on the left. Use a (-) driver or spanner to turn the screw's groove or nut in the counterclockwise direction.

► When the fridge door is lower – ②

Level the door by turning the height adjustment screw on the right. Use a (-) driver or spanner to turn the screw's groove or nut in the clockwise direction.

Height difference


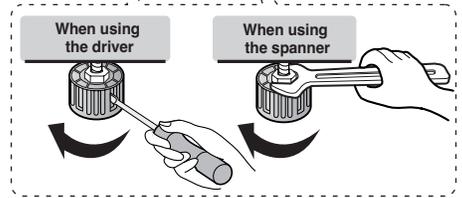


When the fridge door is lower than the freezer door

► When the fridge door is lower than the freezer door while using the refrigerator, level the doors.

1. Use the ③ tool for adjustment on the wide side to turn nut ① (↻) in the clockwise direction to loosen the keeper nut.
2. Use the ③ tool for adjustment on the narrow side to turn the adjustment hinge pin ② in (↻) clockwise direction or (↻) counterclockwise direction to adjust the height of the fridge and freezer doors.

Height difference

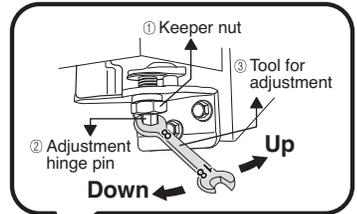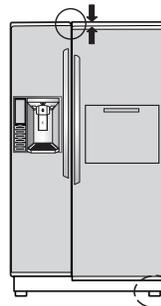

3. After aligning the height of the door, tighten the keeper nut in a counterclockwise direction.

⚠ CAUTION

Do not forcefully level the height. The hinge pin may fall out.
(Adjustable range of height is a maximum of 2" (5 cm))

After leveling the door height

The refrigerator doors will close smoothly by heightening the front side by adjusting the height adjusting screw. If the doors do not close correctly, performance may be affected.

Next


1. Wipe off all dust accumulated during shipping and clean your appliance thoroughly.
2. Install accessories such as the ice cube box, cover evaporating tray, etc., in their proper places. They are packed together to prevent possible damage during shipping.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.

Handle removal

To move the refrigerator through a house door, it may be necessary to remove the refrigerator door handles.

NOTE

- Handle appearance may vary from illustrations on this page.

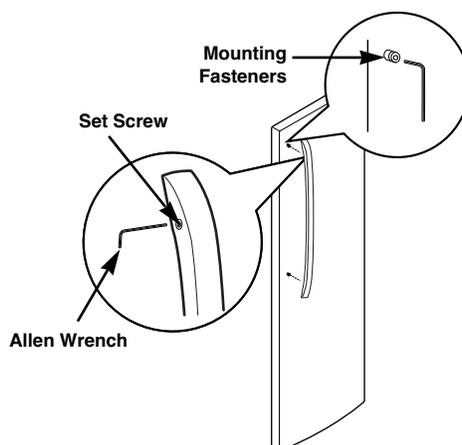


Loosen the set screws with a 2.5 mm (3/32") Allen wrench and remove the handle.

NOTE

- If the handle mounting fasteners need to be tightened or removed, use a 1/4" Allen wrench.

Handle reinstallation

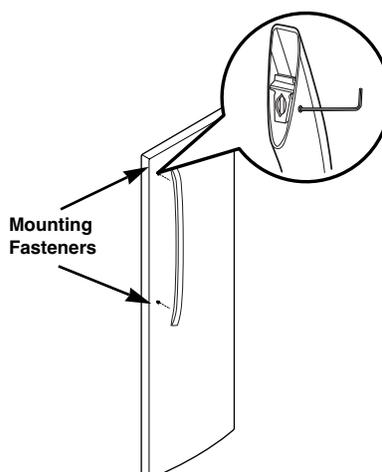

Place the handle on the door by aligning handle footprints to fit mounting fasteners and tighten the set screws with a 2.5 mm (3/32") Allen wrench.



NOTE

- If the handle mounting fasteners need to be tightened or removed use a 1/4" Allen wrench

Starting

When your refrigerator is first installed, allow it to stabilize at normal operating temperatures for 2-3 hours prior to filling it with fresh or frozen foods. If operation is interrupted, wait 5 minutes before restarting.

Adjusting the temperatures and functions

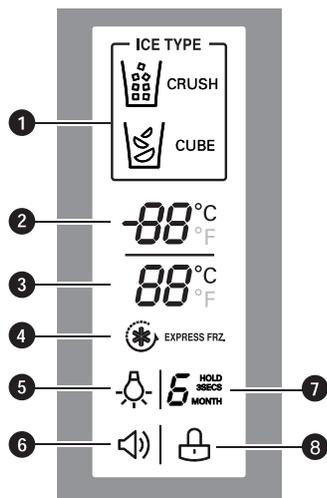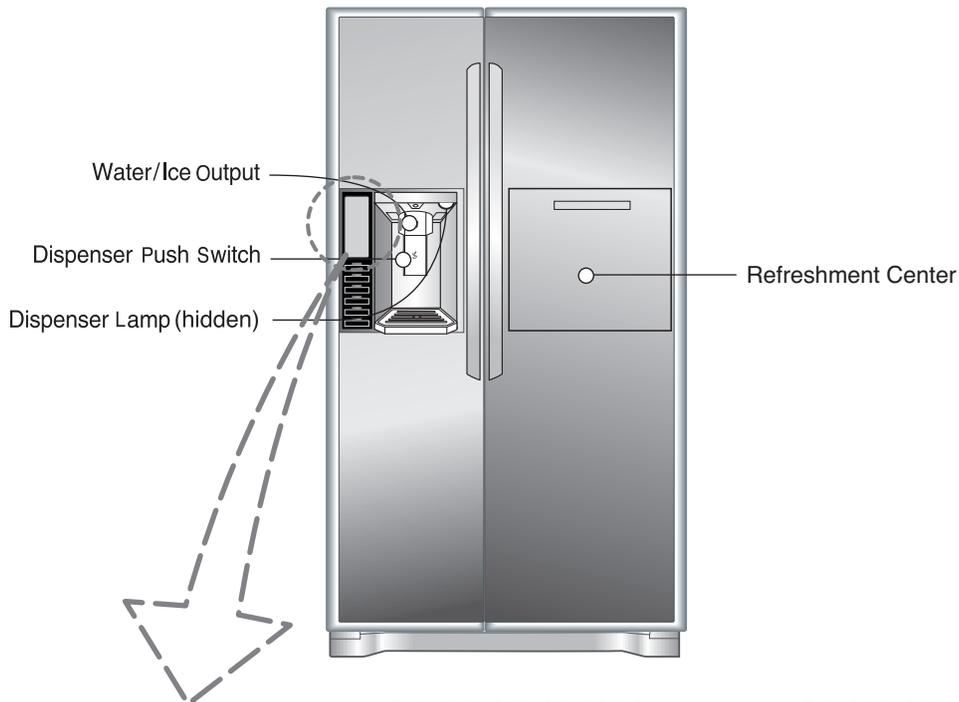

1 DISPENSER SELECTION INDICATOR

Shows Cubed ice or Crushed Ice selection that will be dispensed when the push switch is pressed.

2 FREEZER TEMPERATURE

Indicates the set temperature of the freezer compartment in Celsius or Fahrenheit.

3 REFRIGERATOR TEMPERATURE

Indicates the set temperature of the refrigerator compartment in Celsius or Fahrenheit.

4 EXPRESS FRZ.

When the EXPRESS FRZ. button is pressed, the display will indicate the selected function has been activated.

5 DISPENSER LIGHT INDICATOR

When the LIGHT button is pressed, the display will indicate the selected function: When the dispenser light is on, this indicator will appear on the display panel.

6 DOOR ALARM INDICATOR

This indicator shows that the door-open warning alarm is activated.

7 WATER FILTER STATUS

This indicator shows the current status for the water filter. See Resetting the Filter Indicator.

8 LOCK STATUS

This indicator shows the current status for the control panel functions is set to LOCK.

NOTE

- Your model may not include every option.

Adjusting The Temperatures And Display

Adjust Freezer Temperature

To adjust the temperature in the freezer compartment, press the FREEZER button to cycle through the the range of available settings.



Adjust Refrigerator Temperature

To adjust the temperature in the refrigerator compartment, press the REFRIGERATOR button to cycle through the range of available settings.



NOTE

- The actual inner temperature varies depending on the food status, since the indicated temperature setting is the target temperature and not the actual temperature within the refrigerator. Initially set the REFRIGERATOR CONTROL at 3 degrees C and the FREEZER CONTROL at -19 degrees C. Leave them at these setting for 24 hours (one day) to stabilize. Then adjust the compartment temperature as illustrated above.

Operating The Dispenser

Dispensing Crushed Ice

Press the ICE TYPE button to illuminate the Crushed Ice icon. Press the push ice switch with a glass or other container and crushed ice will be dispensed.



Dispensing Cubed Ice

Press the ICE TYPE button to illuminate the Cubed Ice icon. Press the push switch with a glass or other container and cubed ice will be dispensed.




NOTE

- Hold the glass or other container in place for a couple of seconds after dispensing ice or water to catch the last few cubes or drops. The dispenser is designed to not operate while either refrigerator door is open.


Controlling The Dispenser Light

Press the LIGHT/FILTER button to turn the dispenser light on and off.

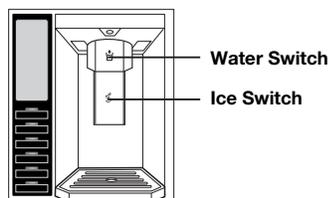

CAUTION

- When filling the container with a small opening, use it near the opening of the water or ice dispenser as close as possible.
- Do not dispense ice into fine china or crystal glasses. China or crystal can break.

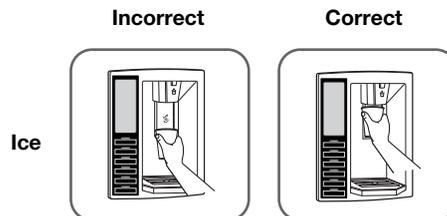

Setting The Functions

Press the button for the desired function to view and select other settings.

Setting The Dispenser Lock



Press and hold the ALARM/LOCK button for three seconds to lock the dispenser and all of the other control panel functions.

Press and hold again for 3 seconds to unlock.

Setting The Door Alarm



The ALARM/LOCK button also controls the door alarm that sounds three times in 30-second intervals when a compartment door is left open for more than 60 seconds.

The alarm stops sounding when the door is closed.

Press the ALARM/LOCK button once to activate and deactivate the door alarm function.

NOTE

- Contact your local service center if the alarm continues to sound after the doors are closed.

Resetting The Filter Indicator



Press and hold the LIGHT/FILTER button for more than 3 seconds to reset the filter indicator after the water filter has been replaced.

NOTE

- It is recommended that you replace the filter when the water filter indicator light reaches 0 or whenever the water or ice cube taste deteriorates noticeably.

Activating EXPRESS FREEZING




Press the EXPRESS FRZ. button once to activate the EXPRESS FREEZING function. The EXPRESS FRZ. icon on the display panel will illuminate when activated. The EXPRESS FREEZING function runs the freezer compartment at the coldest setting for a 24-hour period to increase icemaking by up to about 20%, and then turns off automatically.

NOTE


- Press the button again to cancel the EXPRESS FREEZING function.

After dispenser is used

The water collector has no self-drainage function, so it should be cleaned regularly. Remove the cover by pulling the front of the water collector cover and dry it with a cloth.

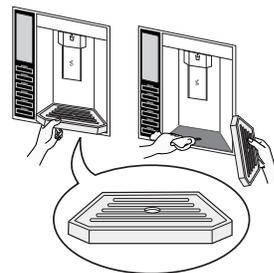

Automatic icemaker

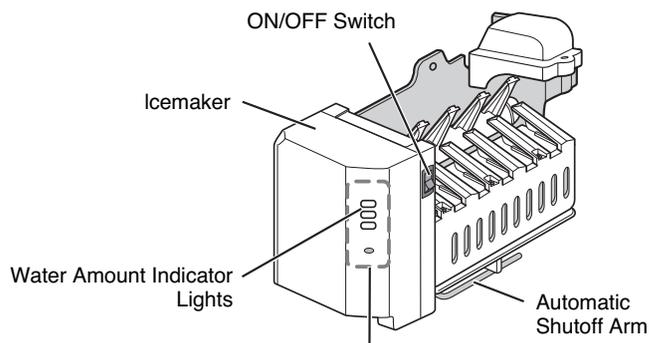

*** This Zone only**
Must control by Service man.

- The automatic icemaker can automatically make 6 cubes at a time, 70~120 pieces per day. This quantity may vary by circumstance, including ambient temperature, door opening, freezer load. etc.
- Icemaking stops when the ice storage bin is full.
- If you don't want to use the automatic icemaker, turn the icemaker switch to OFF. If you want to use automatic icemaker again, change the switch to ON.

NOTE

- It is normal that a noise is made when ice drops into the ice storage bin.

! WARNING

- Do not insert your hands in to the Icemaker in operation. It may cause injury.

When ice maker does not operate smoothly**Ice is lumped together**

- When ice is lumped together, take the ice lumps out of the ice storage bin, break them into small pieces, and then place them into the ice storage bin again.
- When the ice maker produces too small or lumped together ice, the amount of water supplied to the ice maker needs to be adjusted. Contact the service center.
- ✧ If ice is not used frequently, it may lump together.

Power failure

- Ice may drop into the freezer compartment. Take the ice storage bin out and discard all the ice then dry it and place it back. After the machine is powered again, crushed ice will be automatically selected.

The unit is newly installed

- It takes about 12 hours for a newly installed refrigerator to make ice in the freezer compartment.

The other functions***Door open warning***

- 3 times of warning sounds at the interval of 30 seconds if a minute passes with the door of refrigerator and the homebar door open or completely closed.
- Please contact with the local service center if warnings continue to sound even after closing the door.

Diagnosis (failure detection) function

- Diagnosis function automatically detects product failure.
- If product failure occurs, the buttons may not work. In this case, do not turn power off but immediately contact the local service center. If the product is turned off, it will require much time and effort for the service engineer to detect the reason of failure.

How ice/cold water is supplied

Water is cooled while stored in the water tank of the freezer door and then sent to the dispenser.

Ice is made in the automatic ice maker and sent to the dispenser divided into crushed or cubed form ice.

NOTE

- It is normal that the water is not very cold at first. If you want colder water, add ice into the glass.

CAUTION

Throw away the ice (about 20 pieces) and water (about 7 glasses) first made after refrigerator installation.

The first ice and water may include particles or odor from the feed water pipe or feed water box. This is necessary also if the refrigerator has not been used for a long time.

Keep children away from the dispenser.

Children may damage lamps or incorrectly push the buttons.

Make sure food does not block the ice passage.

If food is placed at the entrance of ice passage, ice may not be dispensed. The ice passage may also be covered with ice powder if only splinter ice is used. If so, remove the ice powder accumulated.

Never store beverage cans or other foods in ice storage bin for the purpose of rapid cooling.

Such actions may damage the automatic ice maker.

Never use thin crystal glass or crockery to collect ice.

They may break and cause injury.

Put ice first into a glass before filling water or other beverages.

Water may splash if ice is added to existing liquid in a glass.

Do NOT touch or use tools to touch the ice outlet.

Touching may cause part breakage or hand injury.

Never remove the ice maker cover.

Sometimes level the surface so that the ice storage bin is fully filled with ice.

Level the surface from time to time so that the ice storage bin is fully filled with ice. Ice is usually piled up just near the ice maker. The ice maker may regard the ice storage bin to be full and halt ice making operations.

If discolored ice is dispensed, immediately stop usage. Contact the service center.

Never use too narrow or deep glass.

Ice may be jammed in the ice passage and cause the refrigerator to fail.


Keep the glass at a proper distance from ice outlet.

A glass too close to the outlet may block ice from coming out.

Refreshment center (Applicable to some models only)

How to use the Home Bar





1. Press the top central part of the Home Bar until you hear the "Click" sound.
 - You can save electricity because you do not have to open the refrigerator door.
 - The lamps will turn on even by opening the Home Bar only, so you can easily take out what you want.
 - When closing the Home Bar, press until you hear the "Click" sound.
2. Open the door and use the door as the support board.
 - You can put the beverage or food on the support board.

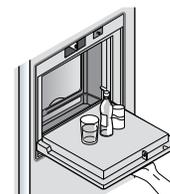

How to use the can server

Using the can server on the top and the side, you can arrange and store cans.

1. Pull down the handle when you want to store cans.
 2. If you do not want to use the can server, fixate the can server on the top so that you can utilize the space of Home Bar more effectively.
- * When you press both sides of the bottom part of the cover on the main unit of the Home Bar, it will be fixated to prevent the food inside the Home Bar from falling into the refrigerator.

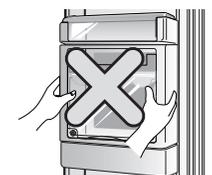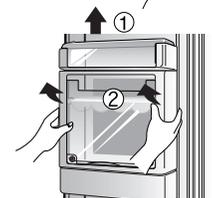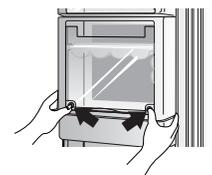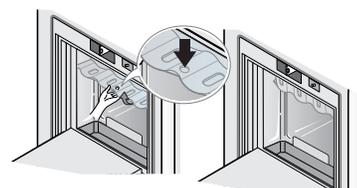


How to disassemble the fridge Home Bar cover

First separate the upper door basket of the Home Bar (1) and then pull up the Home Bar cover(2).

Precaution

1. Do not use the refrigerator without the internal Home Bar cover.
 - If the cover is removed, the Home Bar function will not function.
2. Be careful not to press or damage the Home Bar support board.
 - If you lean or press against the support board, you may damage it.
 - In order to prevent scratches, do not use the support board as a cutting board or use any sharp tools on the support board.
 - When the support board is wet with alien fluid such as juice, it may not operate properly.
 - When the packing part is wet with alien fluid such as juice, wipe it from time to time.

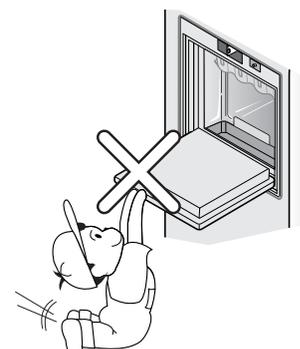


Shelf

How to use

You can store side dish or refrigerated food on the shelf with sufficient space in between the containers.


How to disassemble

1. Hold the front part of the shelf and pull it out up till the hooking part.
2. When you cannot pull out the shelf any more, lift it up slightly.
3. While holding the shelf slightly, tilt the shelf to pull it out.

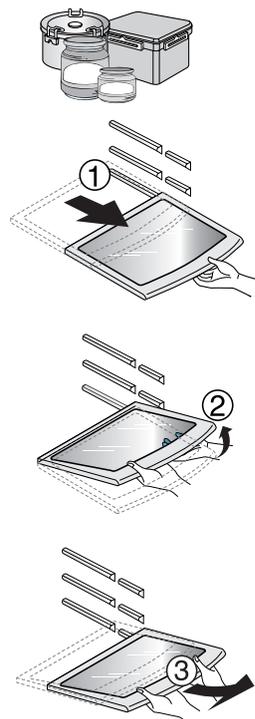


Egg box


You can move the egg box to wherever you want.

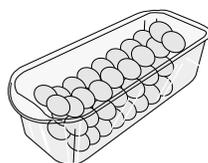

[Type-1]

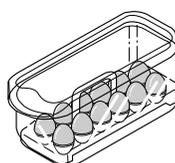

[Type-2]

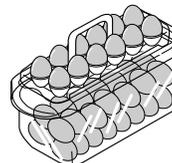

NOTE

- Never use the egg box as an ice storage bin. It can break.
- Never store the egg box in the freezer compartment or fresh compartment.


Deodorizer

How to use

With the Nano charcoal deodorizer system, you can deodorize the refrigerator repeatedly.


How to disassemble

Use the (+) driver on the bottom grooved part of the deodorizer cover. Pull it frontward to separate the cover.

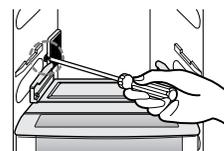

► How to reuse the deodorizer

You can reuse the deodorizer continuously by drying it well with the hair dryer.

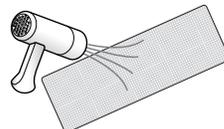


Fresh compartment

How to use

You can store fruits or vegetables.

How to disassemble the upper fresh compartment

1. Hold the front handle of the fresh compartment and pull it out until it gets blocked by the hooking part.

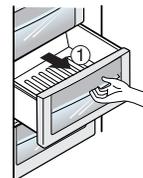


2. When you cannot pull out the fresh compartment any more, lift it up slightly to pull it out completely to the front side (outer side).



* You can reassemble the freezer drawer in the reverse order.

How to disassemble the lower fresh compartment

► When pulling out the lower fresh compartment

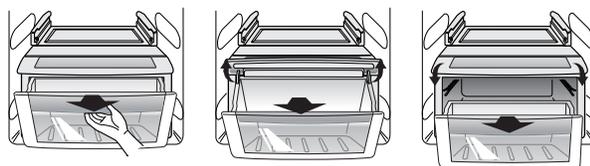

1. Hold the front handle of the fresh compartment and pull it forward.

2. When you cannot pull out the fresh compartment any more, lift it up slightly to pull it out to the front side.

► When inserting the lower fresh compartment



* When inserting the fresh compartment, always lift the cover up to push it in.

WARNING


- Always disassemble the fresh compartment using two hands. (The weight of the compartment may cause injuries.)

- When disassembling/reassembling, always open the refrigerator door fully.

How to disassemble upper/lower fresh compartment cover

Hold the cover with both hands and pull it out.

* When disassembling the cover, always disassemble the fresh compartment first.

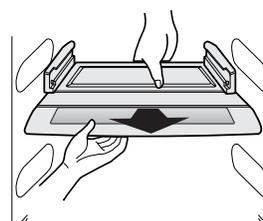

Vacuum fresh compartment

How to use


Keep Vegetables and Fruits Fresh Longer.

- Store vegetables and fruits in the bigger vegetable drawer with enhanced sealing capability. The new Magic Crisper feature can maintain the vegetable drawer in optimal humidity by absorbing moisture when humidity is high and releasing moisture when humidity is low. You can also check when moisture is formed and evaporated through the blue moisture visualization window.




1. Push the sealed vegetable drawer completely until it fully reaches the end.
2. Press the button on the vegetable drawer twice or three times. (Air is released outside the vegetable drawer as many times as you press the button, which enhances the sealing capability.)
 - * The Magic Crisper on the upper side inside the vegetable drawer helps to keep vegetables and fruits fresh, maintaining optimal humidity through the humidification process (moisture absorption and damp proof).

How to disassemble the vacuum fresh compartment

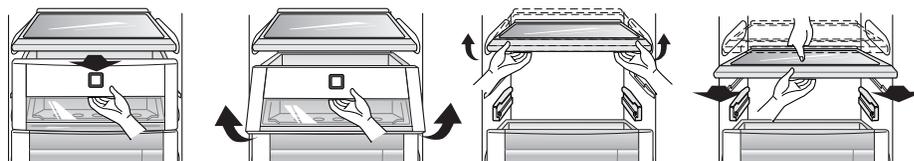

1. Pull the vacuum fresh compartment to the front and slightly lift it up to pull it out.
2. Hold the Case of vacuum fresh compartment with both hands and slightly lift it up.
 - * To disassemble the case, you must first remove foods in the case.
3. Pull it out to the front.

How to reassemble the Vacuum fresh compartment

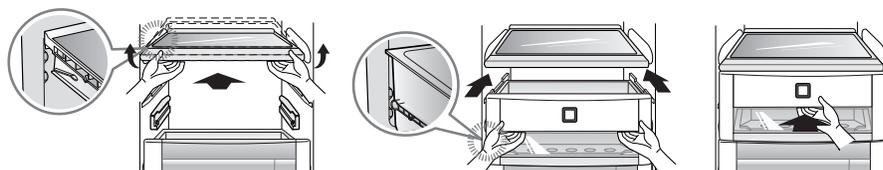

1. Align the top of the case to the side rails and push while slightly holding it up.
2. Align the bottom of the case on top of the rails and push while slightly holding it up.
3. Push the compartment fully inside.

WARNING

- You can disassemble/reassemble the freezer drawer in the same method.
- Always disassemble the fresh compartment using two hands. (You can be injured from the weight of the compartment when filled with food.)
- When disassembling/reassembling the fresh compartment or vacuum fresh compartment of the fridge, open the refrigerator door fully.

Freezer/Fridge basket


How to use

You can store small packaged frozen food (Freezer basket), small packaged refrigerated food or beverages (Fridge basket) such as milk, beer etc.

Do not store ice cream or food to store for a long period of time in the Freezer Basket.


How to disassemble

Hold the basket with both hands and slightly lift up the front part to pull it out.

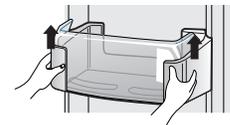

How to reassemble

Hold the basket with both hands and reassemble one side at a time by pushing it in.

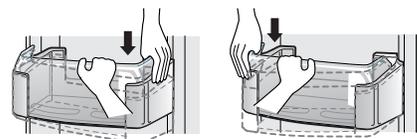

Two stars section ** (Applicable to some models only)

Freezer basket (two stars section)

- Two stars section means the space stored at -12°C~-18°C
- Freezer foods for short-terms storage.


Dairy corner

How to use


Do not store ice cream or food to store for a long period of time in the Freezer Basket.

How to disassemble

Hold the basket with both hands and pull it out by pulling it up(1).

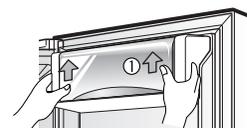

- ▶ Hold the basket with both hands and pull it upwards(1). Do not leave the dairy corner door open, as the refrigerator door may not open.

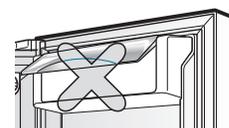

How to exchange the water purifier filter (Applicable to some models only)


The filter is assembled on the top right side of the refrigerator lamp case and removes the residual chlorine or odor. Exchange the filter every 6 months.

How to disassemble the filter


How to exchange

1. Disassemble the water purifier filter.

- To exchange the filter, turn the filter 90 degrees in a counterclockwise direction (1). Pull out the filter frontward (2).

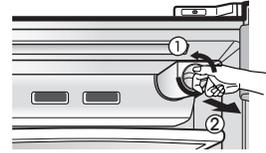


- As the water in the filter may drip, put a bowl slightly larger than the size of the filter underneath when disassembling.

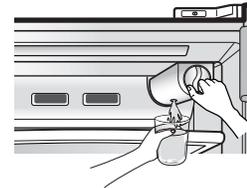

2. Insert the new filter.

- Align the filter on the indicated line on the control box (1) and then push it in. After checking whether the indicated line and the indicated locking line are aligned, turn the filter in a clockwise direction (2).
- After exchanging the filter, press the dispenser button once again to dispense the water for about 3 minutes (or about 1 liter) to remove any air or residual charcoal. (Charcoal is not hazardous to the human body.)

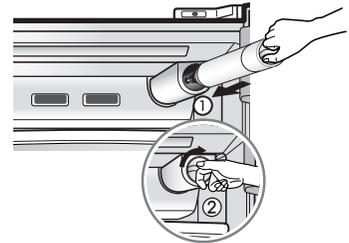

When LED lamp doesn't light up

Is LED lamp turned on?


- As LED lamp is difficult for customer to exchange directly, please contact to LG Electronics service center unless the lamp light up.

Location of foods

(Refer to identification of parts)


Freezer compartment shelf

Store various frozen foods such as meat, fish, ice cream, frozen snacks, etc..

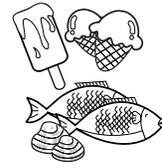


Freezer compartment door rack

- Store small amounts of frozen food.
- Temperature is likely to increase as door opens. Do not store long-term food such as ice cream, etc..

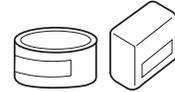

Freezer compartment drawer

- Store meat, fish, chicken, etc.. after wrapping them with thin foil.
- Store dry.

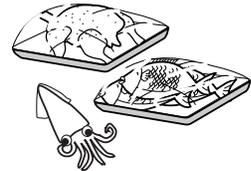

Dairy corner

Store milk products such as butter, cheese, etc..



Egg box

Place this egg box in the proper location.




Refreshment center

Store foods of frequent use such as beverages, etc..



Refrigerator compartment shelf

Keep a proper distance between dishes and foods.

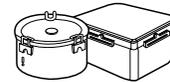


Refrigerator compartment door rack

Store small packed food or beverages such as milk, juice, beer, etc..



Vegetable drawer

Store vegetables or fruits.

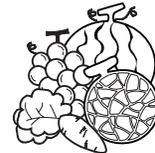

Storing foods

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store foods that go bad easily at low temperatures, such as bananas and melons.
- Allow hot food to cool down prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher energy consumption.
- When storing food, cover it with a plastic wrap or store it in a container with a lid. This prevents moisture from evaporating, and helps food keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Never keep too much food in door racks because they may push against inner racks and prevent the door from being fully closed.

Freezer compartment

- Do not store bottles in the freezer compartment - they may break while freezing.
- Do not refreeze food that has been thawed. The food will lose both taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Do not touch the cold foods or containers, especially made of metallic material, with wet hands. Do not place glass products in the freezer compartment. You may get chilblains. Glass may break when contents freeze, and cause injury.

Refrigerator compartment

- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack or box, make sure they are fresh. Always store them in an upright position, which keeps them fresh longer.

NOTE

- If you keep the refrigerator in a hot and humid place, frequent opening of the door or storing a large amount of vegetables may cause dew to form. Although the dew does not affect the refrigerator's performance, wipe the dew with a dust cloth.

General information

Vacation time

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life.

When you plan not to operate, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

Power failure

Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures.

However, you should minimize the number of door openings while the power is off.

If you move

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the height adjusting screws, turn them all the way into the base.

Anti condensation pipe

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerator to prevent "sweating" on the outer cabinet wall.

CAUTION

- You must check the O-RING, which is made by rubber and prevents electric spark.
- If the light has remained on for a long time, do not touch the lamp. It can be very hot

Cleaning

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Exterior

Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator.

Wipe with a clean damp cloth and then dry.

Interior

Regular cleaning is recommended. Wash all compartments a baking soda solution or a mild detergent and warm water. Rinse and dry.

After cleaning

Please verify that the power cord is not damaged or the power plug is not overheated. Make sure the power plug is well inserted into the power consent.

WARNING

Always remove the power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.).

Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing an electric shock.

Never use metallic scouring pads, brushes, coarse abrasive cleaners, strong alkaline solutions, flammable or toxic cleaning liquids on any surface.

Do not touch frozen surfaces with wet or damp hands, as damp objects will stick to extremely cold surfaces.

Trouble shooting

Before calling for service, review this list. Checking the following troubleshooting tips before calling the service center will save you both time and money. This list includes common occurrences that are not the result of defective workmanship or materials used in this refrigerator.

Occurrence	Possible cause	Solution
Runing of refrigerator		
Refrigerator compressor does not run.	Refrigerator control is off.	Set refrigerator control. See setting the controls.
	Refrigerator is in defrost cycle.	This is normal for a fully automatic defrosting refrigerator. The defrost cycle occurs periodically.
	Plug at wall outlet is disconnected.	Make sure plug is tightly pushed into outlet.
	Power outage. Check house lights.	Call local electric company.
Refrigerator runs too much or too long	Refrigerator is larger than the previous one you owned.	This is normal. Larger, more efficient units run longer in these conditions.
	Room or outside weather is hot.	It is normal for the refrigerator to work longer under these conditions.
	Refrigerator has recently been disconnected for a period of time.	It takes some hours for the refrigerator to cool down completely.
	Large amounts of warm or hot food may have been stored recently.	Warm food will cause the refrigerator to run longer until the desired temperature is reached.
	Doors are opened too frequently or too long.	Warm air entering the refrigerator causes it to run longer. Open the door less often.
	Refrigerator or freezer door may be slightly open.	Make sure the refrigerator is level. Keep food and containers from blocking door. See problem section. OPENING/CLOSING of doors.
	Refrigerator control is set too cold.	Set the refrigerator control to a warmer setting until the refrigerator temperature is satisfactory.
	Refrigerator or freezer gasket is dirty, worn, cracked, or poorly fitted.	Clean or change gasket. Leaks in the door seal will cause refrigerator to run longer in order to maintain desired temperatures.
	Thermostat is keeping the refrigerator at a constant temperature.	This is normal. Refrigerator goes on and off to keep the temperature constant.

Occurrence	Possible cause	Solution
Refrigerator compressor does not run.	Thermostat is keeping the refrigerator at a constant temperature.	This is normal. The refrigerator goes on and off to keep the temperature constant.
Temperatures are too cold		
Temperature in the freezer is too cold but the refrigerator temperature is satisfactory.	Freezer control is set too cold	Set the freezer control to a warmer setting until the freezer temperature is satisfactory.
Temperature in the refrigerator is too cold but the freezer temperature is satisfactory.	Refrigerator control is set too cold.	Set the refrigerator control to a warmer setting
Food stored in drawers freezes.	Refrigerator control is set too cold.	See above solution.
Meat stored in fresh meat drawer freezes.	Meat should be stored at a temperature just below the freezing point of water (32°F, 0°C) for maximum fresh storage time.	It is normal for ice crystals to form due to the moisture content of meat.
Temperatures are too warm		
Temperatures in the refrigerator or freezer are too warm.	Freezer control is set too warm.	Set the freezer or refrigerator control to a colder setting until the freezer or refrigerator temperature is satisfactory.
	Refrigerator control is set too warm. Refrigerator control has some effect on freezer temperature.	Set the freezer or refrigerator control to a colder setting until the freezer or refrigerator temperature is satisfactory.
	Doors are opened too frequently or too long.	Warm air enters the refrigerator/ freezer whenever the door is opened. Open the door less often.
	Door is slightly open.	Close the door completely.
	Large amounts of warm or hot food may have been stored recently.	Wait until the refrigerator or freezer has a chance to reach its selected temperature.
	Refrigerator has recently been disconnected for a period of time.	A refrigerator requires some hours to cool down completely.
Temperature in the refrigerator is too warm but the freezer temperature is satisfactory.	Refrigerator control is set too warm.	Set the refrigerator control to a colder setting.

Occurrence	Possible cause	Solution
Sound and noise		
Louder sound levels when refrigerator is on.	Today's refrigerators have increased storage capacity and maintain more even temperatures.	It is normal for sound levels to be higher.
Louder sound levels when compressor comes on.	Refrigerator operates at higher pressures during the start of the ON cycle.	This is normal. The sound will level off as the refrigerator continues to run.
Vibrating or rattling noise.	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and solid and can adequately support refrigerator.
	Items placed on the top of the refrigerator are vibrating.	Remove items.
	Dishes are vibrating on the shelves in the refrigerator.	It is normal for dishes to vibrate slightly. Move dishes slightly. Make sure refrigerator is level and firmly set on floor.
	Refrigerator is touching wall or cabinets.	Move refrigerator so that it does not touch the wall or refrigerator.
Water/Moisture /Ice inside refrigerator		
Moisture collects on the inside walls of the refrigerator.	The weather is hot and humid which increases the rate of frost buildup and internal sweating.	This is normal.
	Door is slightly open.	See problem section opening/closing of doors.
	Door is opened too often or too long.	Open the door less often.
Water/Moisture /Ice outside refrigerator		
Moisture forms on the outside of the refrigerator or between doors.	Weather is humid.	This is normal in humid weather. When humidity is lower, the moisture should disappear.
	Door is slightly open, causing cold air from the inside the refrigerator to meet warm air from the outside.	This time, close the door completely.

Occurrence	Possible cause	Solution
Odors in refrigerator		
	Interior needs to be cleaned.	Clean interior with sponge, warm water and baking soda.
	Food with strong odor is in the refrigerator.	Cover food completely.
	Some containers and wrapping materials produce odors.	Use a different container or brand of wrapping materials.
Opening/Closing of doors/Drawers		
Door(s) will not close.	Food package is keeping door open.	Move packages that keep door from closing.
Door(s) will not close.	Door was closed too hard, causing other door to open slightly.	Close both doors gently.
	Refrigerator is not level. It rocks on the floor when it is moved slightly.	Adjust the height adjusting screw.
	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and can adequately support refrigerator. Contact carpenter to correct sagging or sloping floor.
	Refrigerator is touching wall or cabinets.	Move refrigerator..
Drawers are difficult to move.	Food is touching shelf on top of the drawer	Keep less food in drawer.
	Track that drawer slides on is dirty.	Clean drawer and track.
Dispenser		
Dispenser will not dispense ice	Ice storage bin is empty.	When the first supply of ice is dropped into the bin, the dispenser should operate.
	Freezer temperature is set too warm.	Turn the freezer control to a higher setting so that ice cubes will be made. When the first supply of ice is made, the dispenser should operate.
	Household water line valve is not open.	Open household water line valve and allow sufficient time for ice to be made. When ice is made, dispenser should operate.
	Refrigerator or freezer door is not closed.	Be sure both doors are closed.

Occurrence	Possible cause	Solution
Dispenser will not dispense ice.	Ice has melted and frozen around auger due to infrequent use, temperature fluctuations and/or power outages.	Remove ice storage bin, and thaw and the contents. Clean bin, wipe dry and replace in proper position. When new ice is made, dispenser should operate.
Ice dispenser is jammed.	Ice cubes are jammed between the ice maker arm and back of the bin.	Remove the ice cubes that are jamming the dispenser.
	Ice cubes are frozen together.	Use the dispenser often so that cubes do not freeze together.
	Ice cubes that have been purchased or made in some other way have been used in the dispenser.	Only the ice cubes made by the ice maker should be used with the dispenser.
Dispenser will not dispense water.	Household water line valve is not open. See problem "Ice maker is not making any ice."	Open household water line valve.
	Refrigerator or freezer door is not closed.	Be sure both doors are closed.
Water has an odd taste and/or odor.	Water has been in the tank for too long.	Draw and discard 7 glasses of water to freshen the supply. Draw and discard an additional 7 glasses to completely rinse out tank.
	Unit not properly connected to cold water line.	Connect unit to cold water line which supplies water to kitchen faucet.
Sound of ice dropping	This sound is normally made when automatically made ice is dropped into ice storage bin. Volume may vary according to refrigerator's location.	
Sound of water supply	This sound is normally made when ice maker is supplied with water after dropping the automatically made ice.	
Other	Please thoroughly read 'Automatic ice maker and dispenser' in this manual.	

Warranty period of Linear Compressor :

Ten(10) years from the date of original retail purchase.

Part only (Consumer will be charged for labor)

Noises associated with normal operation and failure to follow instructions found in the use and care and installation guides or operating the unit in an unsuitable environment will not be covered under this warranty.

It is Normal...

The following occurrences are normal.

	Occurrence	Solution
Noise	When you hear a blunt sound	This is the sound of various parts expanding/contracting or various control devices operating depending on the temperature change within the refrigerator.
	When you hear "Deureureuk~", "Dulkuk" or "Woong" sound	This is the count of compressor or fan operating when the operation of the refrigerator is starting or ending. This is the same phenomenon of the sound generated when starting or turning off the engine of a car.
	When you hear "Gurgling" sound of water flowing	This is the sound of refrigerant changing the condition in the freezer/fridge. When the liquid changes to gas, you will hear the sound of water flowing and when gas changes to liquid, you will hear the "Kureureuk" sound.
	When you hear a "Whoosh" sound right after you close the door	This is the sound generated when the internal pressure is temporarily lowered when the warm air entered through the fridge or freezer is cooled fast.
	When you hear the vibrating sound	If the refrigerator is installed on wooden floor or wooden wall, or if the refrigerator is not leveled properly, the sound can be loud from the vibration.
	When you hear a loud sound after installing the product for the first time	When you operate the refrigerator for the first time, the refrigerator will operate at high speed to cool fast and the sound can seem louder. When the internal temperature falls below a certain level, the noise will subside.
Door open	When the door is slightly opened after closing the door.	Depending on the force or speed of closing the fridge or freezer door, the door can open slightly and then get closed. Be careful not to close the door too hard.
	When closing refrigerator door, freezer door opens and closes.	It is linked between the refrigerator and freezer in order to make cold air circulation. So, when you close the refrigerator door, air in the refrigerator goes into the freezer. It makes the freezer door open. Please relax as it is not a breakdown.
Icing/ Dew drops	When there is icing or dew drops formed on the inner or outer side of the refrigerator	When external air flows into the cool inner surface of the refrigerator, icing/dew drops can be formed. Especially, this will happen more easily when you open and close the refrigerator door more frequently. Also, if the humidity of the installed location is high or during the rainy season or on a rainy day, dew drops can form on the outer side of the refrigerator. This is a natural phenomenon that occurs during humid weather. Wipe the water drops with a dry cloth.
Temperature	When the front side of the refrigerator is warm	Heat pipes are installed around the front part of the refrigerator and on the divider of the freezer and fridge to prevent the dew drops from forming. The refrigerator may feel warmer after installation or during the hot summer, but this is not a problem and you can be rest assured.

