



KF700 User Guide

**CE 0168**

[www.lgmobile.com](http://www.lgmobile.com)


P/N : MMBB0279331 (1.0) H

LG ELECTRONICS INC.

**KF700**

ENGLISH

Bluetooth QD ID B013790

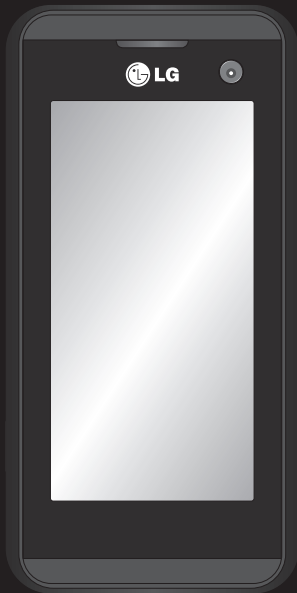

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## KF700 User Guide

Congratulations on your purchase of the advanced and compact KF700 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your standby screen	02
The basics	03
Get creative	04
The web	05
Get organised	06
Settings	07
Accessories	08

# Contents

## Set up

Getting to know your phone .....	8
Open view .....	9
Installing the USIM and battery.....	10
Memory card .....	12
Menu map.....	13

## Your standby screen

Touchscreen tips.....	14
The quick keys.....	15
The status bar .....	16

## The basics

<b>Calls .....</b>	<b>18</b>
Making a call or video call .....	18
Making a call from your contacts .....	18
Answering and rejecting a call.....	18
In-call options.....	19
Adjusting the call volume .....	19
Speed dialling.....	20
Viewing your call logs .....	20
Using call divert.....	20
Using call barring.....	21
Changing the common call settings .....	21
Changing your video call settings.....	22
<b>Contacts .....</b>	<b>23</b>
Searching for a contact.....	23
Adding a new contact .....	23
Contact options .....	23

Creating a group.....	24
Changing your contact settings.....	24
Viewing information .....	25
<b>Messaging.....</b>	<b>26</b>
Sending a message .....	26
Entering text.....	26
T9 predictive .....	27
Abc manual.....	27
Setting up your email .....	27
Retrieving your email .....	28
Sending an email using your new account.....	28
Changing your email settings .....	29
Message folders .....	29
Managing your messages .....	30
Using templates.....	30
Using emoticons.....	30
Changing your text message settings.....	31
Changing your multimedia message settings.....	31
Changing your other settings.....	32

## Get creative

<b>Camera.....</b>	<b>33</b>
Taking a quick photo.....	33
After you've taken your photo .....	33
Getting to know the viewfinder.....	34
Using the flash .....	35

Adjusting the contrast.....	35	Editing your photos.....	46
Using the advanced settings.....	35	Adding text to a photo.....	47
Changing the image size.....	36	Adding an effect to a photo.....	47
Choosing a colour tone.....	37	Adding a colour accent to a photo.....	47
Using the inner camera.....	37	Swapping the colours in a photo.....	48
Viewing your saved photos.....	37	<b>Multimedia</b> .....	<b>49</b>
Viewing the details of a photo.....	38	My images.....	49
<b>Video camera</b> .....	<b>39</b>	My images options menu.....	49
Shooting a quick video.....	39	Sending a photo.....	49
After you've shot your video.....	39	Using an image.....	50
Getting to know the viewfinder.....	40	Organising your images.....	50
Adjusting the contrast.....	41	Deleting an image.....	50
Using the advanced settings.....	41	Moving or copying an image.....	50
Changing the video image size.....	42	Marking and unmarking images.....	51
Choosing a colour tone.....	42	Creating a slide show.....	51
Using the inner video camera.....	42	Checking your memory status.....	51
Watching your saved videos.....	43	My sounds.....	52
<b>Your photos and videos</b> .....	<b>44</b>	Using a sound.....	52
Viewing your photos and videos.....	44	My videos.....	52
Adjusting the volume when viewing a video.....	44	Watching a video.....	52
Capturing an image from a video.....	44	Using options while video is paused.....	52
Viewing the details of a video or photo ..	44	Sending a video clip.....	52
Sending a photo or video from the gallery.....	45	Using a video clip as a ringtone.....	52
Viewing your photos as a slide show.....	45	Using the video options menu.....	53
Setting a photo as wallpaper.....	46	My games and apps.....	53
		Downloading a game.....	53
		Playing a game.....	53

# Contents

Using the games options menu.....	53	<b>Get organised</b>	
Flash contents.....	53	<b>Organiser</b> .....	60
Viewing an SWF file.....	54	Adding an event to your calendar.....	60
Using options viewing the SWF file.....	54	Changing your default calendar view.....	60
Transferring a file to your phone.....	54	Adding an item to your to do list.....	60
Viewing a file.....	54	Sharing a to do item.....	60
Playing a song.....	54	Using date finder.....	61
Creating a playlist.....	55	Setting your alarm.....	61
Editing a playlist.....	55	Adding a memo.....	61
Deleting a playlist.....	56	Voice recorder.....	62
Searching for stations.....	56	Recording a sound or voice.....	62
Resetting channels.....	56	Sending the voice recording.....	62
Listening to the radio.....	56	Using your calculator.....	63
		Adding a city to your world clock.....	63
<b>The web</b>		Converting a unit.....	63
Accessing the web.....	57	Using the stopwatch.....	63
Adding and accessing your bookmarks.....	57	<b>PC Sync</b> .....	64
Saving a page.....	57	Installing LG PC Suite on your computer ...	64
Accessing a saved page.....	57	Connecting your phone and PC.....	64
Viewing your browser history.....	58	Backing up and restoring your phone's	
Changing the web browser settings.....	58	information.....	64
Using your phone as a modem.....	58	Viewing your phone files on your PC.....	64
Access to Google Service.....	59	Synchronising your contacts.....	65
		Synchronising your messages.....	65
		Using your phone as a mass storage	
		device.....	65

## Settings

Changing your screen settings.....	66
Personalising your profiles.....	66
Changing your phone settings.....	66
Changing your connectivity settings.....	67
Using memory manager .....	67
Sending and receiving your files using Bluetooth.....	68
Pairing with another Bluetooth device.....	69
Using a Bluetooth headset.....	69

<b>Accessories</b> .....	70
--------------------------	----

<b>Network service</b> .....	71
------------------------------	----

<b>Technical data</b> .....	71
-----------------------------	----

## Guidelines

Guidelines for safe and efficient use .....	74
---	----

# Getting to know your phone

## Charger, Cable, Handsfree connector

**TIP:** To connect the USB cable, wait until the phone has powered up and has registered to the network.

## Inner camera lens

## End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to the standby screen.

## Clear key



Deletes a character with each press.

## Call key

Dials a phone number and answers incoming calls.

## OK key

## Lock/ Unlock key

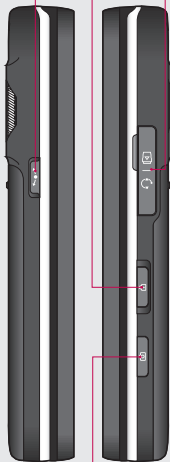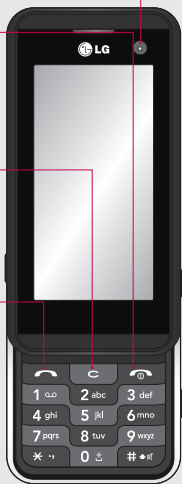

**WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

## Capture button

# Open view

## Shortcut dial

Zooms in or out when in camera or video mode.  
Scrolls through menus.

**TIP:** You can adjust the volume level when enjoying music, games and during a call.

**WARNING:** Close contact with a magnetic object may cause a malfunction of the wheel key.

Memory card slot

Battery cover

Battery

Flash

Camera lens

USIM Card Socket

01

02

03

04

05

06

07

08

# Installing the USIM and battery




## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.


**WARNING:** Do not use your fingernail when removing the battery.

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

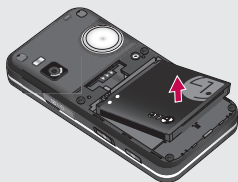

## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

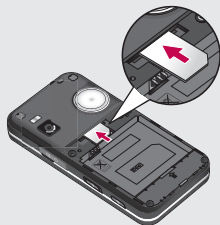


## 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards.


To remove the SIM card, pull it gently in the reverse direction.

# Installing the USIM and battery

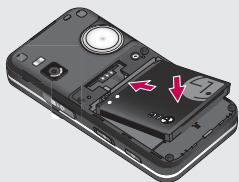

## 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

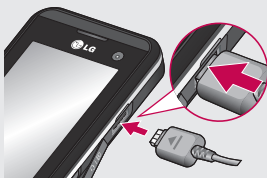

## 6 Charging your phone

Pull open the cover of the charger socket on the side of your KF700. Insert the charger and plug into a mains electricity socket. Your KF700 will need to be charged until a message reading Fully Charged appears on screen.



## 5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

01

02

03

04

05

06

07

08

# Memory card

## Installing a memory card



Expand the memory space available on your phone using a memory card. The KF700 will support up to a 4GB memory card.

- 1 Remove the cover then slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing upwards.




## Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.

- 1 From the standby screen touch  and select .
- 2 Choose **Phone settings** and select **Memory manager** and choose **External memory**.


 
- 3 Touch **Format** and enter the password, which is set to 0000 as the default. Your card will be formatted and ready to use.
- 4 Inside **my stuff** select **my memory card**. You'll see five folders: **My images**, **My sounds**, **My videos**, **My games and apps** and others.

For more details on using a memory card, see page 67.


 **WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

## Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen touch , and choose .
- 2 Select **Contacts** and choose **Settings** and select **Copy** or **Move**.
- 3 Choose **USIM to Handset** then **All together** or **One by one**.
- 4 Touch **OK** to confirm.

# Menu map

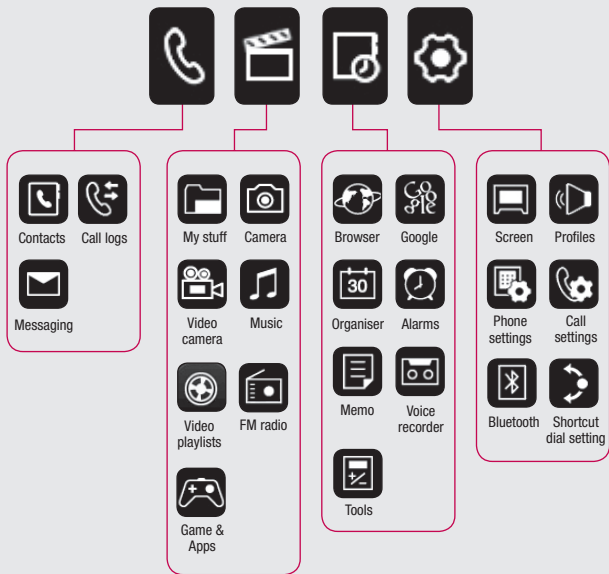

01

02

03

04

05

06

07

08

## Your standby screen

Whenever your KF700 isn't in use it'll return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

### Touchscreen tips

The standby screen is also a great place to get accustomed to the InteractPad.

To select an item touch the icon on the touchscreen accurately. Your KF700 will vibrate slightly when it recognises you've touched an option.

- There's no need to press too hard, the InteractPad is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- When the screen light is off, press the lock/unlock key on the right hand side of the phone to restore the standby screen.
- Don't cover the phone with a case or cover as the InteractPad will not work with any material covering it.



▲ Touchscreen

## The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to open the call screen. You can call without having to slide the phone open. To initiate a video call, press the **Video call** tab after inputting the number.



Touch to open your address book. Your contacts are displayed as an alphabetical list. You can also create new contacts and edit existing ones. See page 23 for details.



Touch to create and send an SMS message. See page 26 for details.



Touch to open the full menu which is separated into four sub-menus. Touch each sub-menu's vertical tab to view further options.

### Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as depicted in the figure below.













Please do not cover the antenna area with your hand during a call or whilst using a Bluetooth connection. It may degrade speech quality.













# Your standby screen

## The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.



Icon	Description
	Multitasking (In sub-menu)
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set


Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Flight mode is selected
	Bluetooth is active
	HSDPA available
	3G available


## Changing your Status from the status bar

Touch the icon that represents your current setting in the status bar and the Status Summary will open. It shows the current Time, Network, Service ID, Battery, Handset memory, External Memory, Profile, MP3, Flight Mode and Bluetooth status. You can set Profile type, play MP3 and activate/deactivate Flight Mode and Bluetooth.

## Using the Multitasking function

If you use any function, you can find Multitasking  on the top. Touch  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

From any application, touch  and select Home screen to return to the stand by screen without exiting or exiting all application.

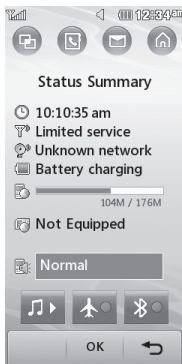

01

02

03

04

05




06


07

08

# Calls

## Making a call or video call



- 1 Slide open the phone.
- 2 Key in the number using the keypad.  
To delete a digit press the **C** hard key.
- 3 Touch **Call** or press the  hard key to initiate the call. Touch  to make a video call.
- 4 To end the call press the  hard key.


**TIP!** To call with the slide closed. Touch  to open the touchscreen keypad. Enter the number and press **Call**.

**TIP!** To enter + for making an international call, press and hold 0.


**TIP!** Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.

## Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call.
- 4 Touch **Call** or press the  hard key to initiate the call.

**TIP!** When the slide is closed, touch  to open your address book. Scroll using the side bar or type the first letter of your contact's name to jump to that section of your contact list.

## Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Press **Unlock** then **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

**TIP!** To answer a call with the slide closed touch **Unlock** and select **Accept**.

**TIP!** To reject a call with the slide closed touch **Unlock** and select **Silent**, then **Reject**.

## In-call options

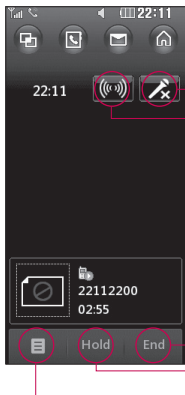

**Mute** - Touch to turn off the microphone so the person you are talking to cannot hear you.

**Speaker** - Touch to turn on the speaker phone.

**End** - Touch to end the call.

**Hold** - Touch to put a caller on hold. Touch **Resume** to continue your conversation.

**Options** - Choose from a list of further in-call options, including **Go to contacts** and **Go to messages** so you can check your messages and add contacts during a call. You can also end the call from here by touching **End call**.

### Adjusting the call volume

To adjust the volume during a call turn the jog wheel clockwise to increase it or anti-clockwise to decrease it.

01

02

03

04

05

06



07


08


# Calls

## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Touch , select .
- 2 Choose **Contacts** and touch **Speed dials**.
- 3 Your Voicemail and Videomail are already set to speed dial. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once.

To call a speed dial number, slide open the phone and hold the assigned number until the contact appears on screen. The call will initiate automatically, there's no need to press .

**TIP!** When the slide is closed, touch . Select the contact you'd like to call then touch and hold their number. The call will initiate automatically.

## Viewing your call logs

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch , select .

- 2 Choose **Call logs** and it allow you to view the menus.

**All calls** - View the complete list of all your dialled, received and missed calls.


**Dialled calls** - View the list of all the numbers you have called.

**Received calls** - View the list of all the numbers you have received calls from.

**Missed calls** - View the list of all the calls you have missed.



**Call charges** - View the charges applied to your dialled numbers (this service is network dependant, some operators are unable to support this) and the call duration of all your calls; received and dialled.

**Data volume** - View the amount in kilobytes of all your received and sent data.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.

**TIP!** Touch any single call log entry then **View** to view the date, time and duration of the call.

## Using call divert

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call divert** and choose **Voice calls**, **Video calls**, or **Deactivate all**.

- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable then touch **Activate**.
- 4 Choose whether you'd like to divert to voicemail or input the number you'd like to divert to.
- 5 Touch **Divert** to activate.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.


**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch , select  and choose **Call settings**.
- 2 Touch Call barring and choose **Voice calls**, **Video calls**, or **Deactivate all**.
- 3 Choose any or all of the five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**
- 4 Enter the call barring password.  
Please check with your network operator for this service.

**TIP!** Select **Fixed dial numbers** from **Call settings** to turn on and compile a list of numbers which be called from your phone. You'll need your PIN2 code from your operator. If you create a fixed dial list, only the numbers in the list can be called from your phone.

## Changing the common call settings

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Common setting**. From here you can amend the settings for:
  - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups or contacts, calls from unregistered numbers (those not in your contacts) or callers who don't have caller ID on.
  - Send my number** - Choose whether your number will be displayed when you call someone.
  - Auto redial** - Choose **On** or **Off**.
  - Answer mode** - Choose how to answer the phone: **Press send key**, **Slide up** or **Press any key**.
  - Minute minder** - Select **On** to hear a tone every minute during a call.

# Calls

**BT answer mode** - Select **Hands-free**



to be able to answer a call using a Bluetooth headset or select **Handset** to press a key on the handset to answer a call when using a Bluetooth headset.

**Save new number** - Choose **Yes** or **No**.

**Slide close settings** - choose what happens when you close the slide during a call. Choose from **End call** or **Continue call**.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

## Changing your video call settings


- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Video call setting**.
- 3 Choose the settings of your video calling. Determine whether to **Use private image** and **Select private image**, and switch on the **Mirror** (so you can see yourself on screen).

# Contacts




## Searching for a contact

There are two ways to search for a contact:




### From the standby screen

From the standby screen touch  to open the address book.

### From the main menu

- 1 Touch  and tap  and select **Contacts**. Then touch Search.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call to jump to that section.
- 4 Touch **Call** or press the  hard key to initiate the call.



## Adding a new contact

- 1 Touch  and tap  and select **Contacts**.
- 2 Touch **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Input the number and touch  and you can input more numbers.  
For example, you can input a different

number for their Mobile, Home, Office, Pager and Fax.


- 6 You can then add up to two email addresses.
- 7 Assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add an Image, Ringtone, Homepage, Home address, Company name, Job title, Company address and a Memo.
- 9 Touch **Save** to save the contact.

**TIP!** You can create customised groups for your contacts, see **Creating a group** on page 24.

**TIP!** When the slide is closed, touch  and key in the contact's number. Touch  and choose **Save number** then **New contact**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press  to open the list of options. From here you can:  
**Edit** - Change any of the contact's details.

01

02

03

04

05

06

07

08

# Contacts

**Send message** - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS. See page 26 for details on how to send messages.

**Send business card** - Send the contact's details to another person as a business card. Choose to send it as a **Text message, Multimedia message**, using **Email** or via **Bluetooth**.

**Make a video call** - Video call the contact.


**Save to USIM/Handset** - Choose to save the contact to the USIM card or handset.

**Delete** - Delete the contact. Touch **Yes** if you are sure.

## Creating a group

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Groups** and touch .
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Save**.


**Note:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

**TIP!** You can edit an existing group by highlighting it and touching . Choose to Add a member to the group from your contacts, assign a group ringtone, rename the group or delete a group.

## Changing your contact settings

You can adapt your contact settings so that your address book works in the way you prefer.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch  then tap . Select **Contacts** and choose **Settings**.
- 2 From here you can adjust the following settings:  
**Contact list settings** - Choose whether to view contacts saved to both your **Handset & USIM, Handset** only or **USIM** only. You can also select to show the first name or last name of a contact first.

**Copy** - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to, e.g. if you move a contact from your USIM to the handset it will be deleted from the USIM memory.



**Send all contacts via Bluetooth** - Beam all of your contacts to another device or computer using Bluetooth.

**Backup contacts** - See **Backing up and restoring your phone's information** on page 64.

**Restore contacts** - See **Backing up and restoring your phone's information** on page 64.

**Clear contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

## Viewing information

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

**TIP!** If you've yet to add a business card for yourself, select **Add** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07




08

# Messaging



## Messaging


Your KF700 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then tap  and select **Messaging**.

## Sending a message

- 1 Touch  then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. Or to send an email, choose **Email**. See page 29 for details.
- 3 A new SMS or email will open. Write your message as normal.
- 4 Touch  then **Insert**, to add an image, video, sound or other information, including contact details.
- 5 Touch **Send**. Choose a contact from your list and press **Select** or key in a new number. You can add multiple contacts.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

## Entering text

There are two ways to enter text: T9 predictive and ABC manual.

To switch between text entry methods touch the corresponding icon at the top of the screen.

 **T9 predictive text, Abc manual** -

Touch to turn on T9 predictive text then select T9 abc, T9ABC, 123. Touch again to turn T9 predictive off.

 **Abc manual** - Choose abc, ABC or 123.


To enter a space touch **0**.

To delete a character use the **C** hard key below the screen.

To enter a symbol touch **★** key.

## T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'. If there is more than one option for the keys you have pressed, a list will appear on the screen. Select the word you want by touching the screen.

If the word you want doesn't appear, touch  and select **Add to dictionary**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.



## Abc manual

In Abc mode you must touch the key repeatedly to choose a letter from the choices available on the key. For example, to write 'hello', touch **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

## Setting up your email

You can stay in touch on the move using email on your KF700. It's quick and simple to set up a POP3 or IMAP4 email account.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select **Settings**.
- 2 Touch **Email** then **Email accounts**.
- 3 Open  and touch **Add new**.
- 4 You then enter an email set up wizard. Follow the instructions and touch Continue to move on. You will need the following details:

**Title** - Enter a name for this account.

**My name** - Enter your name.

**Username** - Enter the account's username.

**Password** - Enter the account's password.

**Email address** - Enter the account's email address.

**Reply email address** - Enter the 'reply to' email address.

01

02

03

04

05

06

07

08

# Messaging

**Maximum receive size** - Choose the size limit of your emails, the maximum is 1MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

**Save sent mail into** - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

**Access point** - Choose your Internet access point. Touch access point to use a preset access point .

**Auto retrieve** - Choose whether to fetch your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**SMTP port number** - Normally, this will be 25.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**SMTP username** - Enter the SMTP username.

**SMTP password** - Enter the SMTP password.


**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.


## Retrieving your email

You can automatically or manually check your account for new email. See 'Change your email settings' to check automatically.

To check manually:

- 1 Touch  then **Settings**, followed by **Email**.
- 2 Touch **Retrieve interval** and choose an interval time to switch auto retrieve on.

## Sending an email using your new account

- 1 Touch  then chose **Create new**.
- 2 Choose **Email** and a new email will open.
- 3 Enter the recipient's address and write your message. Touch the paperclip symbol to attach images, videos, sounds or other file types.
- 4 Touch **Send** and your email will be sent.

**TIP!** You can email Word, Excel, PowerPoint and PDF documents to your KF700 so you can review them on the move.

## Changing your email settings

You can adapt your email settings so that it works in the way you prefer. You may have already entered some of this information during the set up wizard.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then open **Settings**.
- 2 Touch **Email** then you can adapt the following settings :
  - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
  - Request reply email** - Choose whether to request 'read confirmation' messages.
  - Retrieve interval** - Choose how often your KF700 checks for new email messages.
  - Include message in Fwd & Reply** - Choose to include the original message or not.
  - Include attachment** - Choose to include the original attachment.
  - Auto Retrieval in Roaming** - Choose to auto retrieve your messages when abroad, or stop auto retrieval.

**New Email notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Message folders

You'll recognise the folder structure used on your KF700, it's fairly self-explanatory.

**Inbox** - All the SMS and MMS messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

**Mailbox** - All the email messages you receive are placed in your mailbox. If you have more than one email account set up messages are filed into the correct account.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - All the messages you send are placed into your Sent items folder.

**My folders** - Create new, personal folders to manage your messages.

**Templates**

**Emoticons**


**Settings**

# Messaging

## Managing your messages

You can use your Inbox to manage your messages.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
  - Reply** - Send a reply to the selected message.
  - Forward** - Send the selected message on to another person.
  - Call** - Make a Voice or Video call to the person who sent you the message.
  - Delete** - Delete the message.
  - Create new message** - Open a new, blank message or email.
  - Mark/Unmark** - Mark your messages for multiple deletion or to move them into a different folder.
  - Copy & Move** - Choose to make a copy of your message or move it to a different folder.
  - Filter** - View your message by type. This will group SMS separately from MMS.

**Message info.** - See additional information for the message, for example, the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to Add new, Edit, Delete or Delete all for Text templates, and Add new, Write multimedia message or Edit for Multimedia templates.

## Using emoticons


Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons**.
- 2 Touch  to **Add new, Edit, Delete** or **Delete all** emoticons.

## Changing your text message settings

Your KF700 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, see below for more information.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** then **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.


**Validity period** - Choose how long your message is stored at the message centre.

**Message types** - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded, this impacts the size of your message and therefore data charges.

**Send long text as** - Choose to send as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Touch  then choose **Settings** then **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Delivery time** - Deliver your message at a specific time.

**Multi msg. centre** - Enter the details for your message centre.

**Note:** See page 29 for details on how to change your email settings.

01

02

03

04

05

06

07

08

# Messaging

## Changing your other settings

Touch  then choose **Settings** then:

**Videomail** - If your operator supports this service you can create a new account.


**Voicemail** - Your voicemail service has already been set up although you can add new voicemail services here.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info. service** - Choose your reception status, language and other settings.


# Camera


## Taking a quick photo


- 1 Press the  key on the right hand side of the handset.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly press the capture button. The white viewfinder box in the centre of the screen will change to red as the camera attempts to focus.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press the capture button fully.

## After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and five icons will appear.

 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to look at the other photos in your album. Your current photo will be saved. See page 37 for **Viewing your saved photos**.

 Touch to send the photo as an MMS, Email or via Bluetooth. You can also print the photo using Bluetooth. See page 26 for **Sending a message**, page 68 for **Sending and receiving your files using Bluetooth**.

 Touch to set the photo you have just taken as your wallpaper.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

01

02

03

04

05


06

07

08

# Camera


## Getting to know the viewfinder

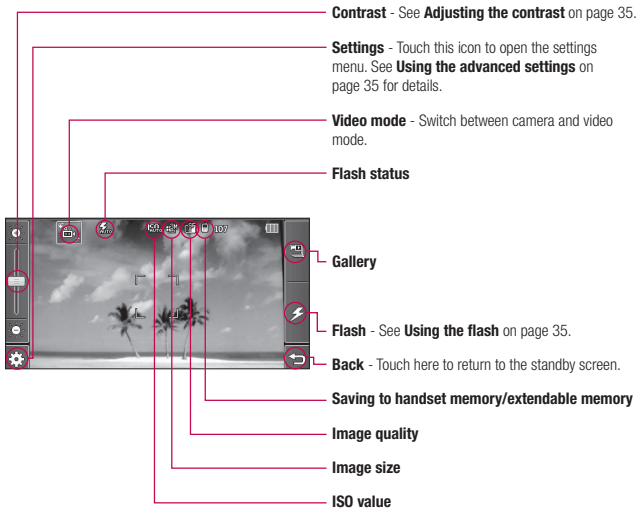



**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

## Using the flash


The flash is set to Auto as a default, but there are other options.


- 1 Select  from the middle right of the viewfinder to enter the flash sub-menu.
- 2 There are four flash options:  
**Auto** - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.  
**When taking a picture** - The flash will only come on as you take a photo.  
**Always on** - The flash will always be on when in camera mode.  
**Always off** - The camera will never flash. This is useful if you want to save battery power.
- 3 Touch the flash option you'd like to use.
- 4 When you've made your selection the flash menu will automatically close, ready for you to take your picture.


## Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.


## Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

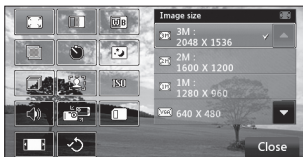

 **Image size** - Change the size of the photo to save on memory space or take a picture preset to the correct size to attach to a contact. See **Changing the image size** on page 36.

 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

01

02

03

04

05


06


07


08


# Camera


 **Colour tone** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.


 **Self-timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.


 **Night mode** - Choose between **Off** and **On**. In the night, this mode is useful for taking good photos.


 **Burst shot** - The camera will take a series of shots (three, six or nine), great for recording a fast paced activity.

 **Frame shot** - You can choose to apply a frame to the photo you take.

 **ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto**, **ISO 100**, **ISO 200**, **ISO 400** or **ISO 800**.

 **Shutter sound** - Select one of the pre-set shutter sounds.

 **Swap cam** - Switch between the LG KF700's **inner camera** and **Outer camera**. See **Using the inner camera** on page 37 for details.

 **Memory in use** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.

 **Wide view** - Choose between **Off** and **On**.



 **Reset settings** - Choose **Yes** to reset your phone to its original camera settings.

**Note:** Always touch **Close** after selecting a new setting to implement the changes you've made.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu. Remember to touch **Close** before exiting to apply any changes.


 
## Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.

- 3 Select a pixel value from the five numerical options (**3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset: **Contacts** - This sets up the camera to take a photo the perfect size to be added to a phone contact.


 
## Choosing a colour tone

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal(colour), Black & White, Negative, Sepia, Sketch, Solarize, Emboss.**
- 4 Touch the colour tone you'd like to use and select **Close**.


**TIP!** You can change a photo taken in colour to black and white or sepia after it's taken but you cannot change a picture taken in black and white or sepia back to colour.



## Using the inner camera

Your LG KF700 has a 640x480 inner camera, not just for video calling but for taking pictures too.

 

 
- 1 To switch to the inner camera touch  then select . Then choose **Inner camera**.

- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.


**TIP!** The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, image quality, white balance and more by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options as are available for an image taken with the main camera.
- 4 To return to the main camera touch  and then .

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply touch . From the standby screen you should touch , then select . Choose **My stuff** followed by **My Images**.
- 2 Your gallery will appear on screen.

# Camera

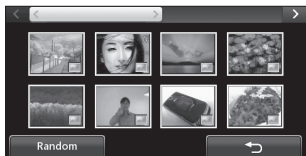




## Viewing the details of a photo

- 1 Touch the photo once then touch the **i** that appears.
- 2 The photo will reveal the name, the date it was taken, the size (in kilobytes and pixels) and the image type (e.g. jpeg) on the top.
- 3 Touch **x** to close the details and view the photo.


# Video camera


## Shooting a quick video


- 1 Press the camera key on the right side of the phone.
- 2 Touch the video camera icon in the viewfinder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording.
- 5 **REC** and a timer will appear at the bottom of the viewfinder.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.


## After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with three icons down the right side.

 Touch to shoot another video straight away. Your current video will be saved.

 Touch to look at the other video clips in your album. Your current video clip will be saved. See page 43 for **Watching your saved videos**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to send the video as an MMS, Email or via Bluetooth. See page 26 for **Sending messages**, or page 68 for **Sending and receiving your files using Bluetooth**.

01

02

03

04

05


06

07

08

# Video camera

## Getting to know the viewfinder

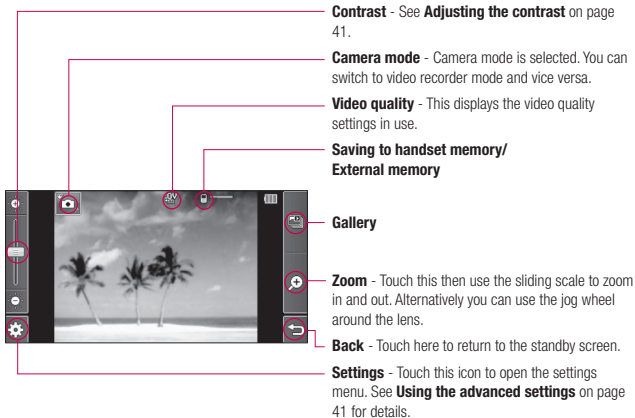

**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

## Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


Slide the contrast indicator along the bar, towards ☀️ for a lower contrast, hazier image, or towards 🌑 for a higher contrast, sharper image.


## Using the advanced settings


From the viewfinder touch ⚙️ to open all the advanced settings options.




 **Image size** - Change the size of the video to save on memory. See **Changing the video image size** on page 42.


 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.


 **White balance** - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.


 **Colour tone** - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 42.

 **Duration** - Choose **Normal** or limit your video to fit in an **MMS**.

 **Night mode** - Choose between Off and On.

 **Voice** - Choose **Mute** to record a video without sound.

 **Swap cam** - Switch to your LG KF700's inner camera to record a video of yourself. See **Using the inner video camera** on page 42 for details.

 **Memory in use** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

 **Reset settings** - Choose Yes to reset your phone to its original video settings.

01

02

03

04

05

06

07





08

# Video camera

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the video colour or quality you'll be able to see the viewfinder change in preview behind the settings menu.


## Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 Select a pixel value from the 2 options:  
 **320x240** - Smaller image size, therefore smaller file size. Great for saving on memory space.  
 **176x144** - Smallest image size and therefore smallest file size.

**TIP!** For video format conversion software, see the CD you received with your KF700.



## Choosing a colour tone



- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal** (colour), **Black & White**, **Negative**, **Sepia**, **Sketch**, **Solarize** and **Emboss**.
- 4 When you've made your selection touch **Close** and the changes will appear in your viewfinder.


**TIP!** You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

## Using the inner video camera




Your LG KF700 has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select .
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press it a second time to stop recording.

- 3 After you've shot the video you'll be offered all the same options as are available for a video shot using the main camera.
- 4 To return to the main camera touch  and then .

**TIP!** You can still alter the video size, video quality, duration, mute, white balance, colour tone and more by touching  in the same way as when using the main camera.

## Watching your saved videos

- 1 From the viewfinder, simply touch . From the standby screen you should touch , then select  and select **My stuff** and choose **My Videos**.
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.

01

02

03

04

05



06

07

08

# Your photos and videos

## Viewing your photos and videos

- 1 From the viewfinder, simply touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo you want to view once to bring it to the front of the gallery.
- 4 Touch it a second time to open it fully.
- 5 Videos will begin to play automatically. To pause playback touch the screen to bring up the options and select .




**TIP!** Change the way your photos and videos are displayed in the gallery by touching **Standard** or **Random** at the bottom of the screen.

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.

## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bars on the bottom of the screen. Alternatively, use the jog wheel next to the camera lens.



## Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image.
- 3 Touch .
- 4 The image will appear on screen, with its assigned image name.
- 5 Select **Save**.
- 6 Touch the image then  to return to the gallery.
- 7 The image will be saved in the My stuff **My images** folder and appear in the gallery. You need to exit gallery and then re-open for this to appear.



**WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

## Viewing the details of a video or photo

Videos and photos are grouped together in the gallery. If you have trouble telling which are photos and which are videos, check the details. For example, videos may be AVI or 3GP file types and photos may be JPEG or GIF file types.

- 1 Touch the video still or photo to bring it to the front of the gallery screen. Then touch  to see more information.
- 2 The video still or photo will reveal its name, the date it was taken, its size (in kilobytes and pixels) and whether it's an image or a video (e.g. MP4/3GP or JPEG) on the top.
- 3 Touch  to close the details and view the video still or photo.


## Sending a photo or video from the gallery

- 1 Touch a photo or video twice to open it. If you select a video, press  when it starts to play.
- 2 Select  and choose how you would like to send the video or photo: **Message**, **Email**, **Bluetooth**.
- 3 The chosen messaging application will open so you can send the video or photo.


**Note:** The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.


## Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slide show. Videos cannot be viewed as a slide show.

- 1 Touch the photo you would like to begin the slide show twice to open it.
- 2 Select  on the left hand side.
- 3 The slide show will begin.


There are five options within slide show:

 Touch to display the photo in full screen mode. The bar on the left hand can increase or decrease the speed of the slide show.

 Touch here to view the photos in a random order (i.e. not the chronological order they appear in your gallery).

 Touch to view fast.

 Touch to view slow.

 Touch to pause the slideshow on a particular photo. Touch again to resume playback.

01

02

03

04

05


06

07

08


# Your photos and videos

## Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch .
- 3 The screen will switch to portrait mode. Select the portion of the photo you would like to set as wallpaper. This area will appear in actual size on screen.
- 4 When you are happy with the section touch **Set**.

## Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.



- 1 Open the photo you'd like to edit and touch  to bring up the options.




- 2 Touch the icons to adapt your photo:
  -  Draw something on your photo freehand. Select the thickness of the line from the four options. To change the colour of the line see


 below (the colour icon will change to the colour you have selected).

 See **Adding text to a photo** on page 47.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be. To change the colour of a stamp see  below.


 Select a rectangular or ellipse area of your photo.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Change the colour of a stamp, line or some text. You must select the colour before you draw, write or stamp the photo.


 Undo the last edit you made to the photo.

 See **Adding an effect to a photo** on page 47.


 Touch to open further effect options including **Rotate** and **Mirror**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 48.

 Touch to return to the gallery.

## Adding text to a photo

- 1 From the editing screen, touch .
- 2 Input the letter you want.
- 3 Enter your text using the keypad and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

## Adding an effect to a photo


- 1 From the editing screen, touch .
- 2 Choose to apply any of the six options to the photo:
  - Soften** - Move the marker along the bar to soften the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
  - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
  - Mosaic blur** - Touch to apply a blurred mosaic effect to the photo. Touch  to return to the normal photo.
  - Colour Effect** - Change the colour of a photo to **Black and white**, **Sepia**, **Colour negative**, **Enhanced RGB** or **Contrast**. If you select **Contrast** move the marker along the bar to increase or decrease the contrast.

**Frame** - Add a frame to your photo.

You may be prompted to allow the image size to be changed. To see the frame types select **Yes**. The chosen frame will be superimposed over your photo.

**Resize** - Touch here for size options.

Touch your desired size to change the size of the photo.

- 3 To undo an effect simply touch .

**TIP!** You can add more than one effect to a photo, except for a colour effect of which you can only select one at a time.

## Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area that is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch **Save**.
- 5 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 6 Alter the intensity of the accenting by sliding the marker up or down the intensity bar.

01

02

03

04

05

06


07

08

# Your photos and videos

- 7 Select **Save** to save the changes.

## Swapping the colours in a photo


- 1 From the editing screen, touch **More**.
- 2 Choose **Colour Swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch  and select a colour.
- 5 Press **Swap**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

# Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then . Touch **My stuff** to open a list of folders storing all of your multimedia files.

## My images

**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera. Touch  to change the view from thumbnail image to list.

## My images options menu

Touch  for options.

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Print via Bluetooth**, **Sort by** and **Memory info**. options are available for default images.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

**Send** - Send the image to a friend.

**Use as** - Set the image to appear at certain times.

**Mark/Unmark** - Select multiple files.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete an image.

**Rename** - Rename an image.

**Create new folder** - Create a new folder within the **My images** folder.

**Slide show** - Start a slide show.

**Print via Bluetooth** - Print an image file via Bluetooth®.

**Sort by** - Sort images into a specific order.

**Memory Manager** - View the memory status.

## Sending a photo

- 1 Touch  then .
- 2 Touch **My stuff** then choose **My images**.
- 3 Select a photo and touch .
- 4 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.

01

02

03

04

05

06

07

08

# Multimedia

- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image

You can choose images to use as wallpapers or even to identify a caller.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:
  - Wallpaper** - Set a wallpaper for the standby screen.
  - Outgoing call** - Set an image to appear during outgoing calls.
  - Start-up** - Set an image to appear when you switch the phone on.
  - Shut down** - Set an image to appear when you switch the phone off.
  - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

## Organising your images

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then Sort by.
- 4 Choose from **Date**, **Type** or **Name**.

**Note:** As well as sorting your images by category, you can also manually sort them.

## Deleting an image

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Delete** then **Yes** to confirm.

**TIP!** To quickly delete any file in **My stuff**, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.





## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.





## Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Mark/Unmark**.
- 4 A box will appear to the left of each image. Touch the image twice and a tick will appear in the box marking it.
- 5 To unmark an image, touch the image again so that the tick disappears from the box.
- 6 Once you have marked all of the appropriate boxes, press  and choose one of the options.

## Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Slide show**.
- 4 Use the  and  to skip through the images or touch  to show your images in a random order.



## Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Memory info**.
- 4 Choose **Handset memory** or **My memory card**.

**Note:** If you do not have a memory card inserted, you will not be able to select **My memory card**.

# Multimedia

## My sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

## Using a sound

- 1 Touch  then .
- 2 Touch **My stuff** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and touch **Play** to listen to it.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up**, **Shut down**.

## My videos


The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch  then .
- 2 Touch **My stuff** then **My videos**.
- 3 Select a video and touch **Play**.


**TIP!** To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

## Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.
- Send** - Send the video in a Message, Email, or via Bluetooth.
- Delete** - Delete the video.
- Use as** - Use the video as a ringtone.

## Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **Email**, **Bluetooth** or **YouTube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Using a video clip as a ringtone

- 1 Select a video and touch .
- 2 Touch **Use as** and choose from **Voice ringtone** or **Video ringtone**.

## Using the video options menu

From the **My videos** folder, you can choose from the following options:

**Use as** - Set a video as your ringtone.

**Send** - Send a video to a friend.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Rename** - Rename a video.

**Mark/Unmark** - Select multiple files.

**Create new folder** - Create a new folder within the **My videos** folder.

**Sort by** - Sort videos into a specific order.

**Memory manager** - View the memory status.

## My games and apps

You can download new games and applications to your phone to help keep you amused when you have time to spare.

### Downloading a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Open Games folder, select **Download games** and touch **Connect**.

- 4 You will connect to the web portal from where you can find a game to download.

**TIP!** To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

### Playing a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Select a game and touch **Launch**.

### Using the games options menu

From the **My Games & Apps** folder, the following options are available:

**Create new folder** -  Create a folder within **My Games & Apps**.

**Sort by** - Sort the games and applications by **Date**, **Size** or **Name**.

**Memory manager** - View the memory status.

### Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.

01

02

03

04

05

06

07


08

# Multimedia



## Viewing an SWF file

- 1 Touch  then .
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file and touch **View**.

## Using options viewing the SWF file

**Full screen view** - View your SWF in full screen mode (this only appears if you touch  without pausing).

**Mute** - Switch the sound off.

 /  - Pause or resume playback.

**Use as wallpaper** - You can set the wallpaper with Default file.

**File info.** - View the name, Size, Date, Time, Type and Protection of the file.

## Documents

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files in **My stuff**.

## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 65 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

## Viewing a file

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **Open**.

## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appears in the others folder rather than the Documents folder. If this happens you can move them.


To Move a file from Others to Documents :


- 1 Touch  then .
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .

- 4 Touch **Move**, check the destination, then touch **Move** again.

## Playing a song



- 1 Touch  then .
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

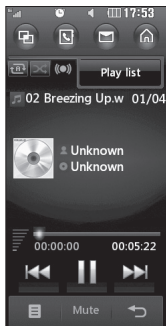**TIP!** To change the volume while listening to music, touch  or use the jog dial.



## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **Add**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to their name.
- 5 Touch **Done**.

To play a playlist, select it and touch **Play**.

**Note:** To add a second playlist, touch  then **Add new playlist**.

## Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch  then .
- 2 Touch **Music**, then **Playlists**.
- 3 Open the playlist.
- 4 Touch  and select:

**Now playing** – Play the playlist.

**Add new songs** – To add more songs to the playlist. Mark the ones you want and touch **Done**.

01

02

03

04

05

06

07

08

# Multimedia

**Move up/down** – Move the song up or down the list to change the playing order.

**Send** – Send a song as a message or via Bluetooth.

**Remove from list** – Remove a song from the playlist. Touch **Yes** to confirm.

**Mark/Unmark** – Select multiple files.

**Use as** – You can set the song as an effect sound.

**Memory info.** – View the memory status.

## Deleting a playlist

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch then **Delete** or **Delete all** to delete all of the playlists.

## Searching for stations

You can tune your phone into radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 24 channels on your phone.

### To auto tune:

- 1 Touch then .
- 2 Touch **FM radio** then .

- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to a channel number in your phone.

### To manually tune:

- 1 Touch then .
- 2 Touch **FM radio**.
- 3 Touch the channel number you want to save the station to.
- 4 Use the arrow keys at the top of the screen to find your station.
- 5 Press **Set** to save that station.

## Resetting channels

- 1 Touch then .
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

## Listening to the radio



- 1 Touch then .
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

# The web

With the browser at your fingertips, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.



## Accessing the web


- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.


## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.




- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required one and touch **Open**. You will be connected to your bookmark.

## Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Saved pages**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages, and delete saved pages.

## Accessing a saved page

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and touch , followed by **Open**.

01

02

03

04

05



06

07



08

# The web

## Viewing your browser history

- 1 From the standby screen select , then touch  and choose **Browser**. Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page and touch **Connect**.

## Changing the web browser settings

- 1 From the standby screen select , then touch  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Character encoding**, **Cache**, **Cookies**, **Java script**, **Security**, or to reset all settings, select **Reset Settings**.
- 3 Once you have changed your settings, select **OK**.

## Using your phone as a modem

Your KF700 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

## Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KF700 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF700.

**Note:** For more information on synchronising using the LG PC Suite see page 65.

## Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF700.
- 2 Pair your PC and KF700 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.

- 7 Click **Connect** and your PC will connect through your KF700.

**Note:** For more information on Bluetooth see pages 68-69.

## Access to Google Service

You can launch google services in this application. Select to Start the Google Service of selected list item Scroll to the Google Service items list and press OK.

- 1 **Search:** Google Mobile Web Search allows you to search for websites that are specifically designed for mobile phones and devices.
- 2 **Mail:** The Gmail for mobile application is a downloadable Java application, offering the best possible Gmail experience for supported mobile devices. To download, visit <http://gmail.com/app> from your mobile browser.
- 3 **Maps:** You can access maps from your mobile devices.
- 4 **Blogger:** You can manage your account and share your blog. It is available to upload a picture and video.
- 5 **YouTube:** You can watch videos on YouTube Mobile from your mobile device. You may want to contact your carrier for more information about the availability of data streaming on your mobile device.



# Organiser

## Adding an event to your calendar




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Add new event** option to add new event.
- 4 Select whether you would like to add an **Appointment, Anniversary or Birthday** and touch **OK**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject or Name** and type in your note, followed by **OK**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


**TIP!** You can set a holiday period in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holiday.

## Changing your default calendar view




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Settings**.
- 2 Touch **Calendar settings** and choose either **Default view** or **Week starts on**.
- 3 Press **OK** to confirm your choice.

## Adding an item to your to do list

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **To do** and touch  in the top right hand corner.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

**TIP!** You can edit an item by selecting it, and touching . Now select **Edit**. Confirm your amends by selecting **Save**.



## Sharing a to do item

- 1 From the standby screen select , then touch  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message, Multimedia msg., Email** or **Bluetooth**.




**TIP!** You can back up and synchronise your calendar with your computer. See **PC Sync** on page 64.


## Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.2007 will be 09.12.2007. This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

## Setting your alarm




- 1 From the standby screen select , then touch  and choose **Alarms**.
- 2 Touch  to set your alarm.
- 3 Set the time you would like the alarm to sound and touch **Set time**.
- 4 Choose whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun** or **Except holiday**. Press **OK**.

- 5 Select  to select a sound for your alarm. To listen to sounds touch the sound, followed by **Play**. After you have made your selection, touch **Select**.
- 6 Add a memo for the alarm. Touch **OK** when you have finished typing the memo. When the alarm sounds the memo will be displayed.
- 7 Finally you can set the snooze interval at **5, 10, 20, 30** minutes, **1** hour or **off**. Press **OK** to confirm your choice.
- 8 Once you have set your alarm, touch **Save**.

**Note:** You can set up to 5 alarms.

**TIP!** Even when your phone is off, the alarm will still sound at the set time. If you touch snooze the alarm will sound again in 5 minutes. If you touch **Stop** the message 'Turn on your phone?' will pop up.

## Adding a memo

- 1 From the standby screen select , then touch  and choose **Memo**.
- 2 Touch  to add a new memo.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

01

02

03

04

05

06

07

08

# Organiser

**TIP!** You can edit an existing memo. Select the one you want to edit and touch **Edit**.

## Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Touch  then .
- 2 Touch **Voice recorder** and press  to start recording or press  and choose from:


**Duration** – Set the recording duration. Choose from **MMS msg. size**, **1 min** or **No limit**.

**Quality** – Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

**Go to my sounds** – Open the Voice recordings folder in **My sounds**.


## Recording a sound or voice

- 1 Touch  then .
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

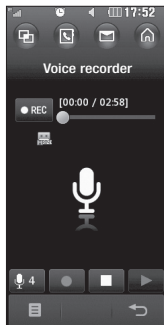




## Sending the voice recording




- 1 Once you have finished recording, touch .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**Note:** After you have finished recording, touch  and choose **Send, Files(Rename, File info.), Delete, Use as** (to use the recording as your ringtone) or **Go to my sounds**.

## Using your calculator



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Calculator**.
- 3 Use the keypad to input numbers.
- 4 For simple calculation, touch the function you require (+, -, ÷, x), followed by =.
- 5 For more complex calculations, touch  and choose from the **+/-, sin, cos, tan, log, ln, exp, sqrt, deg,** or **rad**.

## Adding a city to your world clock



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively touch **Map**, and select your chosen city from the map.
- 4 Touch **Select** to confirm your choice.

**TIP!** If you are abroad you can change your time zone from World Clock by touching , followed by **Set as time zone**.

## Converting a unit

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can now select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

## Using the stopwatch

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at or touch **Reset** to begin the time again.

01

02

03

04

05

06



07

08

# PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, but also as a backup to put your mind at ease.

## Installing LG PC Suite on your computer

- 1 From the standby screen select , then touch  and choose **Phone settings**.
- 2 Select **Connectivity**, then **USB connection mode**.
- 3 Select **Data Service** and touch **Select**.
- 4 Insert the supplied CD into your PC. **LG PC Suite Installer** will appear on your screen. Click on **LG PC Suite Installer**.
- 5 Select the language you would like the installer to run in and click **OK**.
- 6 Follow the instructions on screen to complete the **LG PC Suite Installer** wizard.
- 7 Once installation is complete, the **LG PC Suite Icon** will appear on your desktop.

## Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.

- 4 Click on **Next**, then **Next** again, then **Finish**.  
Your phone and PC are now connected.

## Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup or Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

## Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, Flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

## Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.


**Note:** To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

## Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

## Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen select **•••**, then touch  and choose **Phone settings**.
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Select **Mass storage** and touch **select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.
- 6 All of your phone files will automatically be stored on to your PC hard drive.

**Note:** Mass Storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

# Settings

Within this folder you can adapt your settings to make your KF700 personal to you.

**Note:** For information on call settings see page 21.




## Changing your screen settings

- 1 Touch  then choose .
- 2 Touch **Screen** and then choose from:
  - Screen theme** - Choose the theme for your Home screen, Outgoing call, Start-up and Shut down.
  - Clock & calendar** - Choose how these are displayed on the screen.
  - Backlight** - Choose how long the backlight and keypad remains on for.
  - Brightness** - Adjust the screen's brightness.
  - Handset theme** - Quickly change the whole look of your screen.
  - Font** - Adjust the font colour.
- 3 Touch **Save** to save your settings.

## Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon at the top of your screen.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose .
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 Touch  and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message alerts, Slide tone** settings and more.

## Changing your phone settings

Enjoy the freedom of adapting your KF700 so that it works in a way which suits you best.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose .
- 2 Touch **Phone settings** then choose from the list below.
  - Date & time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
  - Power save** - Choose to switch the factory set power saving settings **On** or **Off**.
  - Languages** - Change the language of your KF700's display.
  - Auto key lock** - Choose when and how your keypad is locked.

**Security** - Adjust your security settings, including PIN codes and handset lock.

**Connectivity** - See **Changing your connectivity settings** below for more information.

**Touchscreen effect** - Change the touchscreen settings.

**Memory manager** - See **Using memory manager** below for more information.

**Touchpad calibration** - Reset your screen for ease of use.

**Reset settings** - Reset all the settings to their factory definitions.

**Handset information** - View the technical information for your KF700.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then . Touch **Phone settings** and select **Connectivity**.

**Network settings** - Your KF700 connects automatically to your preferred network.

To change these settings use this menu.

**Internet profiles** - You can set and view Internet profiles.

**Access point** - Your network operator has already saved this information. You can add new access points using this menu.

**USB connection mode** - Choose **Data service** and synchronise your KF700 using the LG PC Suite software to copy files from your phone. See page 65 for more information on synchronisation.

**Synch service** - See page 65 for more information on synchronisation.

**Streaming settings** - Your network operator has already saved this information. You may edit it if you'd like to make changes.

## Using memory manager

Your KF700 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by . Select **Phone settings** then **Memory manager**.

**Handset common memory** - View the memory available on your KF700 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications, Documents and others.

# Settings

**Handset reserved memory** - View the memory available on your handset for Text msg on the phone, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**USIM memory** - View the memory available on your USIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage settings** - Choose the location you prefer items to be saved to.

**TIP!** See page 12 for information on **inserting a memory card**.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**.  
Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.



- 4 Your KF700 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the relevant folder in My stuff.

### Changing your Bluetooth settings:

- 1 Touch  then touch .
- 2 Choose **Bluetooth** then **Settings**.  
Make your changes to:  
**My device visibility** - Choose to be **Visible** or **Hidden**.  
**My device name** - Enter a name for your LG KF700.

**Supported services** - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 59 or **Using a Bluetooth headset** below.

**Remote SIM mode** - Choose **On** or **Off**.

**My address** - Check your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your KF700 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Paired Devices** then **New**.
- 3 Your KF700 will search for devices. When the search is completed **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with, touch **Add** and enter the passcode then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 You passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Yes** to **Connect now**.

**TIP!** See page 22 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

# Accessories

These accessories were supplied with the KF700.

## Charger



## Data cable and CD

Connect and synchronise your KF700 and PC.



## Battery



## User Guide

Learn more about your KF700.



## Stereo headset



### Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KF700

System : GSM 900 / DCS 1800 /  
PCS 1900 / W-CDMA

### Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C



# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

# CE0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1  
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1  
ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2  
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,  
ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji/ Director

Issued Date

22.Feb. 2008

LG Electronics Inc. Amsterdam Office  
Veluwezoom15, 1327 AE Almere, The Netherlands  
Tel : +31 -36-547 -8940, e-mail : seokim@lge.com

  
Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF700 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.36 W/kg (10g) and when worn on the body is 1.18 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance



### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and maybe dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



# LG MOBILE PHONE WARRANTY

## Middle East & Africa



[www.lgservice.com](http://www.lgservice.com)  
[www.lgmobile.com](http://www.lgmobile.com)





## Terms & Conditions

Your LG mobile phone and all accessories included in this package are under LG warranty across the countries mentioned in the back of this card for a period of 12 months from purchase date (pls. refer to list of coverage at the back), and (6 months for battery). Warranty support at LG Authorized Service Centers will be provided upon presentation of this warranty card. Warranty covers only those models that are sold in that particular market.

**This Warranty is not applicable if this telephone has:**

1. Been mishandled, misused, willfully damaged, neglected, improperly tested, liquid damaged, repaired, altered or defaced in any way.
2. A defect arising as a result of any failure to follow instructions either in the manual or product specification.
3. A defect which has risen from the use of non LG approved accessories or ancillary items attached or in connection with the telephone.



# Warranty Card

Kindly fill in all details below at the time of purchase

REFERENCE NO.: .....

Customer's Name: .....

Product/ Model: .....

Serial No.: .....

IMEI No.: .....

Dealer's Name: .....

Date of Purchase: .....

Invoice/ Cash memo Details: .....

Operator/ Distributor's Stamp



## Authorized Service Centers

*CIC No. 0861-545454 (LGLGLG)*

*Tel.No. 27-11-571-6700, Fax No. 27-11-822-5751,*

### Regional

#### Middle East

UAE	800 54
KSA	+96612112345
	+96638343000
Qatar	+9744315865
Oman	+96824502866/8
Bahrain	+97317403304
Yemen	+96771503240
Iran	+982188302922
Egypt	19960
Syria	+963113347720/1
Jordan	+96265510137

#### Africa

Morocco	081005454
Tunisia	+21670838424
Libya	+218213405695
Algeria	+21321917494
Kenya	+25420252240/1
Nigeria	+23418935454
South Africa	0861545454

#### Others

Turkey	+902165450404
Pakistan	+92214388271/74



# Customer Registration Form

Kindly fill in all details below and fax/ email to your Local Customer Care.

REFERENCE NO: .....  
Date of Purchase: .....  
Customer's Name: .....  
Tel: ..... Fax: .....  
Email: .....  
Address: .....  
Product/ Model: .....  
Serial No.: .....  
IMEI No.: .....  
Date of Purchase: .....  
Distributor's Name: .....  
Dealer's Name: .....




Stamp

To,

LG Electronics S.A (Pty) Ltd.

181, Barbara Road, Elandsfontein, Johannesburg,

P.O.Box 473, Isando 1600, South Africa.



# XPERIENCE

## WINNING CELLULAR SERVICE

@ MONTECASINO

Thank you for buying a LG Mobile phone



Visit our LG Mobile Care Lounge

where you and your mobile phone receive five star

Service

Quality

Value

Advice



Visit the LG Xperience Store for the latest in mobile technology, content and accessories. Qualified and experienced staff are on call for all your mobile needs.

Find us at Monte Casino, opposite Nu Metro, Johannesburg  
Call: 011 511 0184







## **LG Mobile Phone Service Centers in Middle East & Africa**



## **Service for LG Mobile Phone is available in the following countries**

(List includes Only the Main Service Centers. Other area's customers can contact the Head-quarter of their countries for further information)

### **Middle East Countries**

#### **13 Countries**

UAE  
Saudi Arabia  
Qatar  
Oman  
Kuwait  
Bahrain  
Yemen  
Iran  
Iraq  
Lebanon  
Egypt  
Syria  
Jordan

### **Africa Countries**

#### **7 Countries**

Morocco  
Tunisia  
Libya  
Algeria  
Kenya  
Nigeria  
South Africa

### **Other Countries**

#### **2 Countries**

Turkey  
Pakistan

## Middle East Countries

UAE

Saudi Arabia

Qatar

Oman

Kuwait

Bahrain

Yemen

Iran

Iraq

Lebanon

Egypt

Syria


Jordan

# UAE

## Headquarter

- ❑ Agent Name : Jumbo Electronics Co. Ltd.
- ❑ Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
- ❑ Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97143340821
- ❑ Web Site : <http://www.jumbocorp.com>
- ❑ Email : [Roby.George@jumbo.ae](mailto:Roby.George@jumbo.ae)

## Service Centers



Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Al Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sharjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Fujairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
Ras Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881

# UAE

## Headquarter

- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
- ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
- ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97142669964
- ❑ Web Site : [www.alsa-g.com](http://www.alsa-g.com)
- ❑ Email : [helpdesk@alsa-g.com](mailto:helpdesk@alsa-g.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

# UAE

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P. O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [atcc@axiomtelecom.com](mailto:atcc@axiomtelecom.com)

## Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

# Saudi Arabia

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No. : 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [ksasupport@axiomtelecom.com](mailto:ksasupport@axiomtelecom.com)

## Service Centers in KSA

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575

# Saudi Arabia

## Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

## Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+966121112345	+96612112311



# Saudi Arabia

## Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : ashraf.hassan@itsalat.com, headoffice@itsalat.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055


# QATAR

## Headquarter

- ❑ Agent Name : Video Home & Electronics Center
- ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
- ❑ Telephone No. : +9744315865
- ❑ Fax No. : +9744437876
- ❑ Web Site : <http://www.jumboqatar.com>
- ❑ Email : alexjacob@jumboqatar.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876

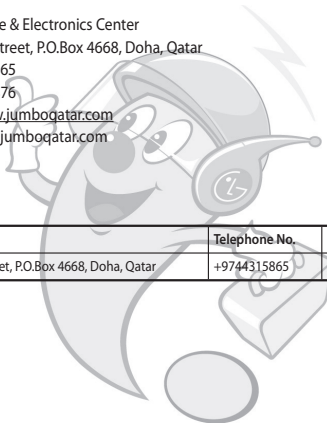


# OMAN

## Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : [sudhirk@otegroup.com](mailto:sudhirk@otegroup.com)

## Service Centers

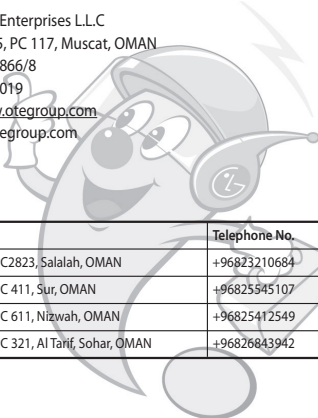

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942


# OMAN

## Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234

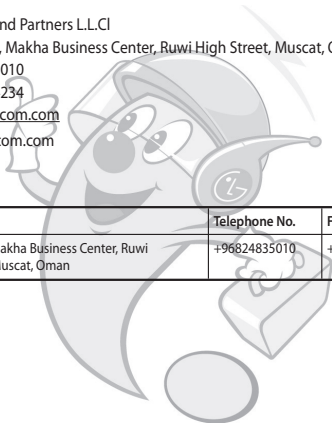


# KUWAIT

## Headquarter

- ❑ Agent Name : Cellucom Kuwait WLL
- ❑ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ❑ Telephone No. : +9655710801
- ❑ Fax No. : +9655710803
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

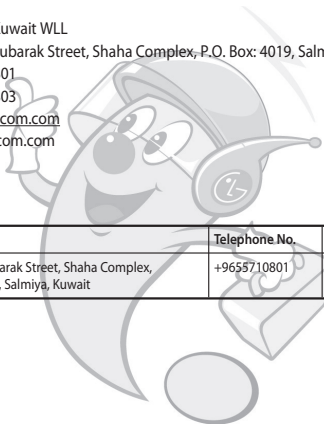

# KUWAIT

## Headquarter

- ❑ Agent Name : Al Ghanim Sons Group.
- ❑ Address : First Floor,Gharabally Building, Dhajeej Area, South Farwaniya, SAFAT-13097, Kuwait.
- ❑ Telephone No. : + 965 4331709
- ❑ Fax No. : + 965 4344790
- ❑ Email : snair@alghanim-sons.com

## Service Centers

Area	Address	Telephone No.	Fax No.
South Farwaniya	First Floor,Gharabally Building,Dhajeej Area,South Farwaniya , SAFAT-13097,Kuwait	+ 965 4331709	+ 965 4344790


# BAHRAIN

## Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046

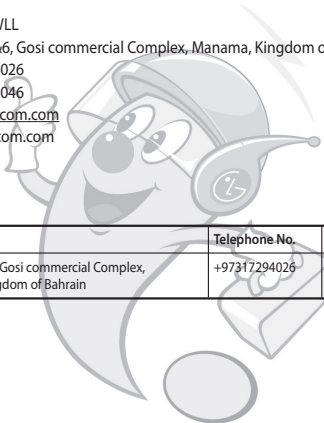

# BAHRAIN

## Headquarter

- ❑ Agent Name : Fono
- ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
- ❑ Telephone No. : 00973 17312001
- ❑ Fax No. : 00973 17310884
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [fcc@almoayyedintl.com.bh](mailto:fcc@almoayyedintl.com.bh)

## Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973 17312001	00973 17310884


# YEMEN

## Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st. Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

## Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

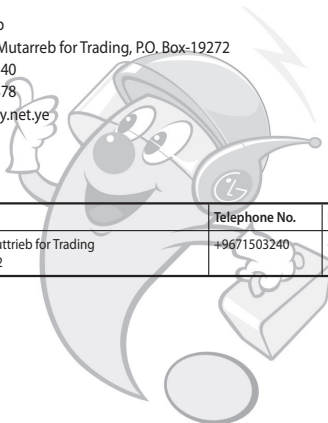

# IRAN

## Headquarter

- ❑ Agent Name : Persian Telecom (Al Raheel General Trading Co., L.L.C.)
- ❑ Address : First florr, No.140, Ghaem Magham St., Tehran, IRAN
- ❑ Telephone No. : +982188302922/+982188827100
- ❑ Fax No. : +982188302921
- ❑ Web Site : <http://www.persiantelecomclub.com>
- ❑ Email : [bahrami@persiantelecom.ir](mailto:bahrami@persiantelecom.ir)

## Service Centers

Area	Address	Telephone No.	Fax No.
Tehran	First florr, No.140, Ghaem Magham St., Tehran, IRAN	+982188302922 +982188827100	+982188302921
Tehran	No.69&70, Ground Floor, Aladdin Trade complex, Jomhori Ave, Tehran, IRAN	+982166722675 +982166724173	+982166724173

# IRAQ

## Headquarter

- ❑ Agent Name : Al-Seera Communication Company
- ❑ Address : 14th Ramadan Road, Al-Mansour Street, Baghdad, Iraq
- ❑ Telephone No. : +9647901393615
- ❑ Fax No. : +96415427798
- ❑ Web Site : <http://www.alseera.com>
- ❑ Email : seeracom@hotmail.com, mohammed\_d\_r@hotmail.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	14th Ramadan Road, Al Mansour Street	+9647901393615	+96415427798


# LEBANON

## Headquarter

- ❑ Agent Name : Digital technologies
- ❑ Address : Jdeidet El Metn, Beirut Lebanon
- ❑ Telephone No. : +961 01-236110
- ❑ Fax No. : +961-1-236110
- ❑ Email : [digitaltechnologies@idm.net.lb](mailto:digitaltechnologies@idm.net.lb)

## Service Centers

Area	Address	Telephone No.	Fax No.
Beirut	Jdeidet El Metn, near Gallery Khabbaz	+961 01-236110	+961-1-236110

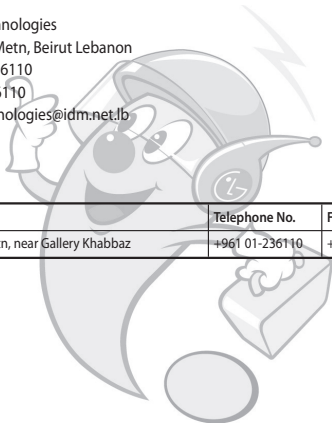


# EGYPT

## Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : [salahezz@delta-group.org](mailto:salahezz@delta-group.org)

## Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

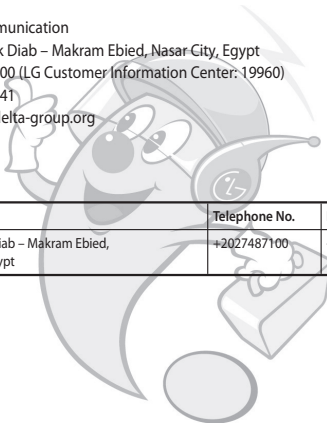

# EGYPT

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [menon@axiomtelecom.com](mailto:menon@axiomtelecom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXANDRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	


# SYRIA

## Headquarter

- ❑ Agent Name : ECC (Engineering Commerce Co.)
- ❑ Address : Abo Romaneh Shakib Arslan str.
- ❑ Telephone No. : +963113347720/1/3/4/5/6, +963113347465
- ❑ Fax No. : +963113333825
- ❑ Email : ecc@net.sy

## Service Centers

Area	Address	Telephone No.	Fax No.
Damascus	Kaboon – facing the bus Pullman station	+963119345	+963114537010
Aleppo	Jameilia beside Alseddeik Mosque	+963212284002	+963212122367

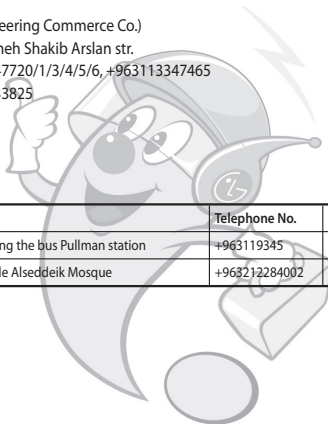


# JORDAN

## Headquarter

- ❑ Agent Name : 7 Global For Communication Equipments
- ❑ Address : Jordan - Amman
- ❑ Telephone No. : 00962 6 5563008
- ❑ Fax No. : 962-6-5563009
- ❑ Web Site/Email : [www.7global.mobi](http://www.7global.mobi) / [Info@7global.info](mailto:Info@7global.info)

## Service Centers

Area	Address	Telephone No.	Fax No.
Jordan	Jordan - Amman	00962 6 5518883	00962 6 5563008

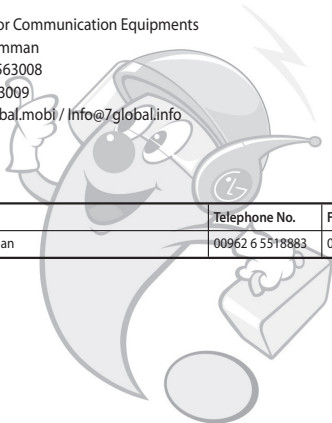

Life's  
Good



## Africa Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa


# MOROCCO

## Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L.)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+2123776506	+21237671040

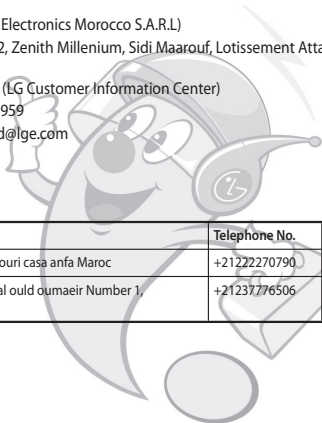


# TUNISIA

## Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Charguia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

## Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Charguia, Tunis, Tunisia	+21670838424	+21670838422

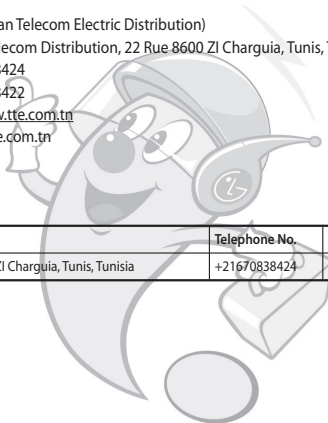


# LIBYA

## Headquarter

- ❑ Agent Name : AL MASAR the Import of Electronic Devices
- ❑ Address : Cedy Elmasri, Almadar Street Tripoli Libya
- ❑ Telephone No. : 00218-21-3600167
- ❑ Fax No. : 00218-21-3600167
- ❑ Web Site/Email : [www.massar.com.ly](http://www.massar.com.ly) / [Info@massar.com.ly](mailto:Info@massar.com.ly)

## Service Centers

Area	Address	Telephone No.	Fax No.
Tripol	Cedy Elmasri, Almadar Street Tripoli Libya	00218-21-3600167	00218-21-3600167

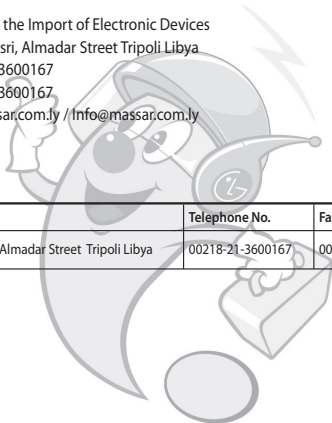

# ALGERIA

## Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : [garantie@algerie-k.com](mailto:garantie@algerie-k.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505




# KENYA

## Headquarter

- ❑ Agent Name : Skytel Limited
- ❑ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ❑ Telephone No. : +25420252240/1
- ❑ Fax No. : +25420252240
- ❑ Email : alex.kabuagi@xcom.co.ke

## Service Centers

Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240

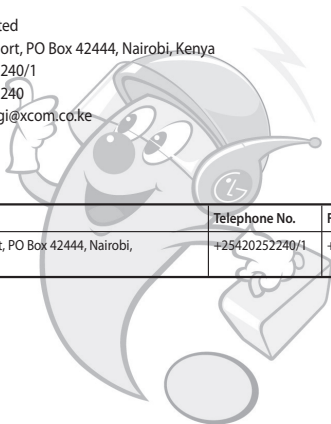

# NIGERIA

## Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos. Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : [cland@lge.com](mailto:cland@lge.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos. Nigeria	+23418927777	+23417936510



# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley,Midrand,SA.
- ❑ Telephone No. : +27115464039 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27115464331
- ❑ Web Site : <http://www.cellucity.co.za>
- ❑ Email : [craig.gower@vodacom.co.za](mailto:craig.gower@vodacom.co.za)

## Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley Midrand, SA	+27115464039	+27115464331

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : Combase
- ❑ Address : 44 Old Pretoria Road, Midrand, SA.
- ❑ Telephone No. : +27116558000 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +2711315 8387
- ❑ Email : [deanw@combase.co.za](mailto:deanw@combase.co.za)

## Service Centers

Area	Address	Telephone No.	Fax No.
Capetown	64-70 Edward Street, Belville, Capetown..	+27219102940	+27219103011
Durban	379 Umbilo Road, Durban	+27312060877	+27312057655
Port Elizabeth	Shop 1, Salgar House, 18 Newton Street, Newton Park.	+27413632989	+27413631787
Nelspruit	Shop G14, Nelcity Building, Cnr Paul Kruger & Louis Trichard Rds, Nelspruit	+27137554185	+27137554183
Bloemfontein	Shop 16, College Square, Nelson Mandela Road, Bloemfontein, 9300	+27514441688	+27514441922
Midrand	44 Old Pretoria Road, Midrand, SA	+27116558000	+27113158387

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : IXIA Trading 348 PTY Ltd
- ❑ Address : Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa
- ❑ Telephone No. : +27118057863 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27866339459
- ❑ Email : david@ixia.co.za

## Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa	+27118057863	+27866339459

Life's  
Good



## Other Countries

- Turkey
- Pakistan

LG

# TURKEY

## Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul
- ❑ Telephone No. : +902165450404
- ❑ Fax No. : +902165445656
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : [sinan.kus@teleservice.com](mailto:sinan.kus@teleservice.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul	+902165450404	+902165445656
Ankara	Mithatpasa cad. No:31 A TR-06420 Kızılay/Ankara	+903124301222	+903124353365
Diyarbakır	İnönü Cad. 4/C Büyük Hotel Altı Da_kapı TR-21090 Diyarbakır	+904122287785	+904122288088
Izmi	Gazi Bulvari No:90/B TR-35230 Çankaya/Izmir	+902324458600	+902324457775
Teleservice			
KVK			
SNG			
Vadox			

# PAKISTAN

## Headquarter

- ❑ Agent Name : New Allied Mobile Communication
- ❑ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
- ❑ Telephone No. : +92214388271/74
- ❑ Fax No. : +92214388278
- ❑ Email : zpalg@yahoo.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234



**Visit us on**

**<http://www.lgservice.com>**

**<http://www.lgmobile.com>**







