

**General Inquiries**

<LG Customer Information Center>

**0844-847-5847**

\* Make sure the number is correct before making a call.

KC910 User Guide



LG ELECTRONICS INC.

KC910 User Guide

ENGLISH

CE 0168 ⓘ

P/N : MMBB0307104 (1.1) G



Bluetooth QD ID B014448





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## KC910 User Guide

Congratulations on your purchase of the advanced and compact KC910 phone by LG, designed to operate with the latest digital mobile communication technology.



#### **Disposal of your old appliance**

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Set up	01
Your home screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08

# Contents

## Guidelines

Guidelines for safe and efficient use . 8

## Set up

Getting to know your phone ..... 14

Open view ..... 16

Installing the SIM and battery ..... 17

Memory card..... 20

Menu map..... 22

## Your home screen

Touch screen tips..... 24

## The basics

Calls ..... 28

Making a call or video call..... 28

Making a call from your contacts ..... 28

Answering and rejecting a call ..... 29

In-call options ..... 30

Adjusting the call volume ..... 31

Speed dialling ..... 31

Making a second call..... 31

Turning off DTMF..... 32

Viewing your call logs..... 32

Using call divert ..... 33

Using call barring ..... 33

Changing the common call settings 34

Changing your video call settings..... 35

Contacts..... 36

Searching for a contact ..... 36

Adding a new contact ..... 36

Contact options ..... 37

Creating a group..... 38

Changing your contact settings..... 39

Viewing information ..... 40

MyFaves ..... 40

Adding MyFaves Contacts..... 41

Using MyFaves Contacts..... 41

To Hide and Unhide MyFaves..... 42

Messaging ..... 43

Sending a message..... 43

Entering text..... 44

T9 predictive ..... 44

Abc manual ..... 45

Keyboard ..... 45

Handwriting recognition ..... 46

Setting up your email ..... 49

Retrieving your email..... 51

Sending an email using your new

account ..... 51

Changing your email settings..... 51

Message folders ..... 52

Managing your messages ..... 53

Using templates..... 54

Using emoticons..... 54

Changing your text message

settings.....	54	Using the inner video camera.....	73
Changing your multimedia message settings.....	55	Watching your saved videos .....	74
Changing your other settings.....	56	Watching your videos on your TV .....	74
<b>Get creative</b>		Your photos and videos .....	75
<b>Camera</b> .....	57	Viewing your photos and videos.....	75
Taking a quick photo .....	57	Using zoom when viewing a photo..	76
After you've taken your photo.....	58	Adjusting the volume when viewing a video .....	76
Getting to know the viewfinder.....	59	Capturing an image from a video .....	76
Using the flash.....	60	Viewing your photos as a slide show.....	77
Choosing a shot type .....	60	Setting a photo as wallpaper .....	78
Taking a continuous shot .....	61	Editing your photos .....	78
Taking a panoramic shot .....	62	Adding text to a photo.....	80
Adjusting the exposure.....	62	Adding an effect to a photo .....	80
Using the advanced settings.....	62	Crop a photo .....	81
Changing the image size .....	65	Morphing a photo.....	82
Choosing a colour effect.....	65	Adding a colour accent to a photo...	82
Using the inner camera .....	66	Swapping the colours in a photo .....	83
Viewing your saved photos .....	66	Editing your videos.....	83
<b>Video camera</b> .....	67	Trimming the length of your video...	83
Shooting a quick video .....	67	Merging two videos together.....	84
After you've shot your video .....	68	Merging a photo with a video .....	84
Getting to know the viewfinder.....	69	Adding text to a video .....	85
Adjusting the Exposure.....	70	Overlaying a photo .....	85
Using the advanced settings.....	70	Adding a voice recording .....	86
Changing the video image size.....	72	Adding a soundtrack to your video ..	87
Choosing a colour tone.....	73	Changing the speed of your video ..	87



Using your calculator .....	107
Converting a unit.....	107
Adding a city to your world time....	108
Using the stopwatch .....	108
Jogging Buddy .....	109
PC Sync.....	110
Installing LG PC Suite on your computer .....	110
Connecting your phone and PC.....	110
Backing up and restoring your phone's information.....	111
Viewing your phone files on your PC .....	111
Synchronising your contacts.....	111
Synchronising your messages .....	112
Using your phone as a mass storage device .....	112
DivX Converter .....	113

## The web

web'n'walk .....	114
Mobile TV .....	114
T-Mobile Jukebox .....	114
Using your phone as a modem .....	115

## Settings

Personalising your profiles.....	116
Changing your screen settings.....	116
Changing your phone settings.....	117
Changing your touch settings .....	118
Changing your connectivity settings .....	118
Using memory manager.....	120
Using flight mode.....	121
Sending and receiving your files using Bluetooth.....	121
Pairing with another Bluetooth device .....	123
Using a Bluetooth headset.....	123
Wifi .....	124

## Accessories .....

## Network service .....

## Technical data.....

## Trouble Shooting.....

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model KC910 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.590 W/kg (10g) and when worn on the body is 0.492 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

## Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Guidelines for safe and efficient use

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

## Getting to know your phone

**Inner camera lens**

**Proximity Sensor**

**End/Power key**

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to  
the home screen.

**Multitasking key**

**Call key**

Dials a phone number and  
answers incoming calls.



**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



### Charger, Cable, Handsfree connector

**TIP:** To connect the USB cable, wait until the phone has powered up and has registered to the network.

### Micro SD memory card socket



### Side keys

- **When the screen is idle:** volume of key tone and ring tone.
- **During a call:** volume of the earpiece.
- **When playing MP3 music tracks in background:** controls volume continuously.

### Lock/ Unlock key (image stabilization key in camera)

### Capture button

01

02

03

04

 
05

06

07

08

## Open view

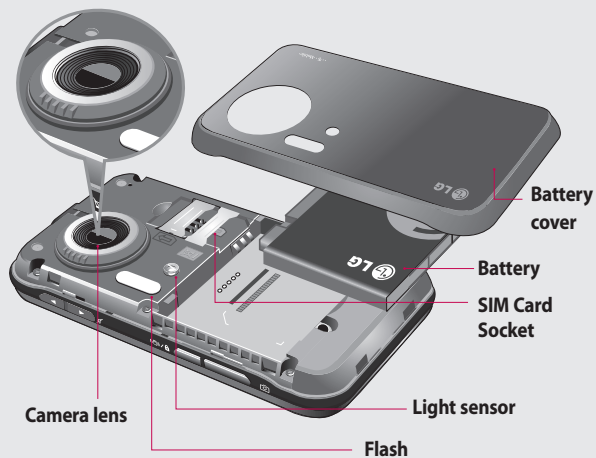

# Installing the SIM and battery

## 1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.



**⚠ WARNING:** Do not use your fingernail when removing the battery.

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 2 Remove the battery

Hold the bottom edge of the battery and lift it from the battery compartment.



01

02

03

04

05

06

 
07

08

## Installing the SIM and battery

### 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

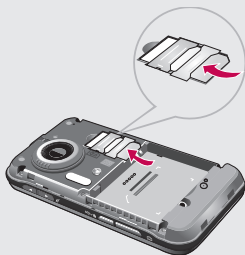


### 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down on the bottom edge of the battery until it clips into place.



## 5 Charging your phone

 Slide back the cover of the charger socket on the side of your KC910. Insert the charger and plug into a mains electricity socket. Your KC910 will need to be charged until a message reading "Battery full" appears on screen.

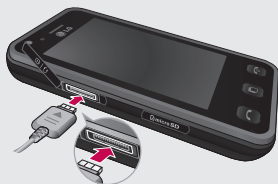

01

02

03

04

05

06

07

08


## Memory card
 
### Installing a memory card

You can expand the memory space available on your phone using a memory card. The KC910 will support up to a 8GB Micro SD memory card.

**NOTE:** Micro SD card is an optional accessory.


- 1 Open the memory card cover.
- 2 Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

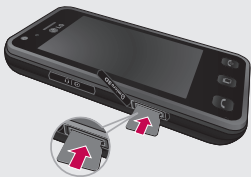

- 3 Close the memory card cover.

### Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen select  then touch **Settings** and choose **Phone settings**.
- 2 Touch **Memory manager** then chose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

**TIP!** To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

**NOTE:** If your memory card has existing content on, it will automatically be filed in the correct folder, for example, videos will be stored in the Videos folder.

## Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the Call & message tab, select **Contacts** and choose **Contact settings**.
- 2 Touch **Copy**.
- 3 Choose **Handset to SIM**, then choose **Select all** or choose names one by one and touch **Done**.

01

02

03

04


05

06









07

08









## Menu map


Touch  in the home screen to open a **Top menu**. From here you can access further menus: **Call & message**, **Entertainment**, **Utilities** and **Settings**.

### **Call & message**

-  Dialling
-  Make video call
-  Speed dials
-  Contacts
-  Call log
-  New message
-  New Email
-  Messaging

### **Entertainment**

-  web'n'walk
-  T-Mobile Jukebox
-  Mobile TV
-  My stuff
-  Camera
-  Music
-  FM radio
-  Games & apps

Touch  in the home screen to open a **Top menu**. From here you can access further menus: **Call & message**, **Entertainment**, **Utilities** and **Settings**.



## Utilities



Internet



Maps



Organiser



Alarms



Calendar



Voice recorder



Tools



Interactive



## Settings



Profiles



Display settings



Phone settings



Call settings



Touch settings



Bluetooth



Software update

01

02

03

04

05

06

07

08

## Your home screen

Whenever your KC910 is not in use it will return to your home screen. From here you can access all menu options, make a quick call and view the status of your phone - as well as many other things.


### Touch screen tips

 
The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your KC910 will vibrate slightly when it recognises you've touched an option.


To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.

- When the screen light is off and the phone is locked, touch and hold  on the left hand side of the screen.
- Don't cover the phone with a case or cover as the touchscreen will not work with any material covering it.

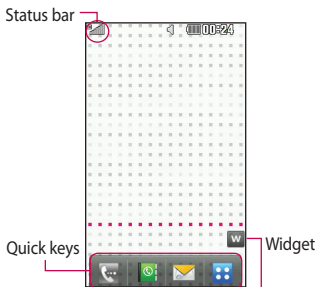


### Widget tips


When you touch , the mobile widget shows up. You can drag and click what you need right away.

## The quick keys

The quick keys on your home screen provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.

To initiate a video call with the number, press  after inputting the number and choose **Make Video call**. See page 28 for details.



Touch to access the Messaging options menu. From here you can create a new SMS or email, or view your message folder. See page 43 for details.



Touch to open your contacts. To search for the number you want to call, enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones. See page 36 for details.



Touch to open the full Top menu which is separated into four sub-menus : Call & message, Entertainment, Utilities, and Settings. Touch the vertical tabs to view further options.

01

02

03

04

05

06

07


08















# Your home screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.


Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set

Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	Memory card in use
	Wifi on
	GPS on (Geo-tagging, Jogging buddy)
	BGM play
	BGM pause

## Changing your status from the status bar

Touch the current status icon that represents your current setting in the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3, Bluetooth and Wifi status. You can set Profile type, play/pause MP3 and activate/deactivate Bluetooth and Wifi.

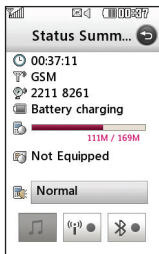 

## Using the Multitasking function

Press the multitasking hard key to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch. From any application, press the Multitasking key and select Home screen to return to the Home screen without exiting or closing the application.

When you have an application running in the background (e.g. a game or the FM radio), will appear in the status bar.

When you press this key from the home screen, you can view a short cut menu to some commonly used functions, including **web'n'walk**, and **Alarms**.

01

02

03

04

05




06

07


08


## Calls


### Making a call or video call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the C icon.
- 3 Touch the  hard key to initiate the call.
- 4 To end the call press the  hard key.


**TIP!** To enter + for making an international call, touch \* twice quickly.


**TIP!** Touch and hold  on the left hand side of the handset to lock the touchscreen to prevent calls being made by mistake.



**TIP!** To bring up the keypad during a call, touch the  key.

**TIP!** When dialling a number, you can **Make video call**, **Send message**, **Save number** or **Search contacts** by tapping .


### Making a call from your contacts


- 1 From the home screen touch  to open your contacts.
- 2 Touch **Name** and enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch **Call**.


**TIP!** Press  and you can choose from **Add contact, Message, Delete, Speed dials My business card, Search by group, Sort by, Send all contacts via...** and **Delete all.**

**TIP!** You can search your contacts from the call screen. Touch  and touch  in right lower column of screen. Scroll through your contacts or enter the first few letters of a name to filter the list.

## Answering and rejecting a call

When your phone rings press the  hard key to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key to reject an incoming call.

01

02

03

04

05

 
06


07


08

# Calls


## In-call options

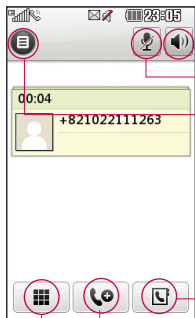



**Speaker** - Touch  to turn on the speaker phone.

**Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

**Options** - Choose from a list of further in-call options, including Create new memo. Go to messages and go to calendar, so you can check your messages and add contacts during a call and go to schedule directly. You can also end the call from here by touching End call. And you can use the menu DTMF off.

 - Choose to search your contacts during a call.

 - Choose to add another person to the call.

 - Touch to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.

**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.



**TIP!** To access these options during a call, touch **Press unlock key**.


## Adjusting the call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.





## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

To call a speed dial number, touch  from the home screen then press and hold the assigned number until the contact appears on screen. The call will initiate automatically, there's no need to press **Call**.

## Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts (see **Making a call** on page 28 for details).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**

**TIP!** You can combine your calls by touching **Join**. Check that T-Mobile supports conference calling.

**NOTE:** You will be charged for each call you make.

01

02

03

04

05

06


07

08

## Calls


### Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select DTMF off.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

### Viewing your call logs

Touch  and select **Call & message** and tap **Call logs**.


Choose to view:

**All calls** - View a complete list of all dialled, received and missed calls.

**Missed calls** - View a list of all the calls you have missed.


**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

## Using call divert

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call divert** and choose **Video calls** and/or **Voice calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact T-Mobile for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call barring** and choose **Video calls** and/or **Voice calls**.
- 3 Choose any or all of the five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls**
  - All incoming**
  - Incoming when abroad**
- 4 Enter the call barring password. Please check with T-Mobile for this service.

**TIP!** Select **Fixed dial number**, in **Call Settings**, to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05


06

07

08

# Calls

## Changing the common call settings

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Common setting**. From here you can amend the settings for:

**Call reject** - Slide the switch left to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left to automatically redial the same number if it does not connect the first time you try.

**Answer mode** - Choose whether to answer the phone using the send key or any key.


**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

## Changing your video call settings

- 1 Touch , select **Settings** and choose **Video call settings**.
- 2 Choose the settings for your video calling. Determine whether to Use private picture and select an image, and/or switch on the mirror to see yourself on screen when making a video call.

01

02

03

04

05

06

07



08


# Contacts

## Searching for a contact


There are two ways to search for a contact:

### From the home screen

- 1 From the home screen touch  to open **Contacts**. Touch **Name** and enter the name of the contact using the key pad.
- 2 Touch the name of the contact then touch **Call** or the  hard key to initiate the call.

**TIP!** You can search by group by touching  and selecting Search by group. This will bring up a list of all your groups.


### From the main menu


- 1 Touch  select **Call & message**.
- 2 Touch **Contacts** then **Search**.

**TIP!** The alphabetical keypad is displayed once you tap Name.

**TIP!** To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

## Adding a new contact

- 1 From the home screen touch  then **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.


**TIP!** Once you have typed in a name, press  to edit the rest of the information for your contact.

- 4 Enter up to five different numbers and assign a type for each by touching the icon next to **Number**. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 7 You can also add a **Ringtone, Birthday, Anniversary, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

**TIP!** You can create customised groups for your contacts, see **Creating a group** on page 38.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 36.
- 2 You can call or send a message directly from here.
- 3 Press  to open the list of options. From here you can:

**Make a video call** - Video call the contact.

**Edit** - Change any of the contact's details.

**Delete** - Delete the contact. Touch **Yes** if you are sure.

**Copy or Move to SIM/Handset** - Choose to move or copy to the SIM card or handset (depending on where you originally saved the contact).

01

02

03

04

05

06

07


08

# Contacts

**Send business card to via** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia msg**, **Email** or via **Bluetooth**.


**TIP! Message** - Send a message to the contact. Choose to send a **Message** or a **Postcard** to the contact. See page 43 for details on how to send messages.

## Creating a group

- 1 From the home screen touch  and select the **Call & message** tab. Touch **Contacts** and select **Groups**.
- 2 Touch **Add group**.

- 3 Enter a name for your new group.
- 4 Touch **Save**. If you want to know how to add a contact to group, please refer to page of 37.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.


**TIP!** You can edit an existing group by highlighting it and touching . Choose to Add contacts, Rename the group, Delete a group, Add members or assign a Group ringtone.

## Changing your contact settings

You can adapt your contact settings so that the Contacts set up suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the **Call & message** tab touch **Contacts** and select **Contact settings**:
- 2 From here you can adjust the following settings:  
**Contact list settings** - Choose whether to view contacts saved to both your **Handset & SIM**, **Handset** only or **SIM** only.  
You can also choose to show the first name or last name of a contact first. You can display with quick command key among Make voice call, Make video call

or Send a message. In contact list touch  to call directly. You can change this setting. (Make voice call/ Make video call/ Send message/ Do not display)

**Synchronise** - Connect to your server to synchronise your contacts.

**Copy** - Copy your contacts from your SIM to your handset or from your handset to your SIM. Select the tick box to copy one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. So, if you move a contact from the SIM to the handset it will be deleted from the SIM memory.

01

02

03

04

05

06

07

08

## Contacts

### Send all contacts via Bluetooth

- Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup contacts** - See **Backing up and restoring your phone's information** on page 111.

**Restore contacts** - See **Backing up and restoring your phone's information** on page 111.

**Clear contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your contacts. Choose from **Handset** or **SIM**.

**TIP!** If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

### MyFaves

**MyFaves** is a service offered by T-Mobile to ease communication with your favourite contacts and to grant you special tariffs. Using **MyFaves** makes calling, messaging, and mailing much more convenient from the idle screen. And by using Network Address Book you can always keep your contacts current, either by using your mobile phone or a PC connected to the Internet. For more information please contact T-Mobile.

**NOTE:** Availability of MyFaves depends on your price plan and activation on SIM card.

### Viewing information

- 1 From the **Call & message** tab touch **Contacts** then **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

## Adding MyFaves Contacts

You can define up to five contacts to be in your MyFaves group. Not assigned MyFaves contacts can be identified from the text “Press to add” underneath the empty icon frame. After you select an empty entry you can either create a new MyFaves contact or select an existing entry from your phonebook.

## Using MyFaves Contacts

To select a MyFaves contact you touch the person icon in centre on idle screen short. You will then see several options available on the communication screen: call, send message, send email, and activity log. If you touch the person icon from idle screen long, a voice call will be made straightaway.

From the communication screen you also do have access to options by touching the list icon in the

upper left screen corner. Here you can either edit the contact profile for adding details such as email address or birthday reminders, but you can also assign a photo to your MyFaves contact or change the order of your MyFaves appearing on the idle screen. MyFaves contacts can also be replaced by using the options menu when within this screen.

If you want to select another MyFaves contact, touch an icon on the second or third layer to the left or right of the default icon, hold it touched and then move your finger gently towards the middle of the display to scroll.

01

02

03

04

05

06

07

08

# Contacts

## To Hide and Unhide MyFaves

There are two ways to hide MyFaves. By the first one being accessible through the MyFaves settings in phone settings menu, you can toggle between MyFaves permanently visible or permanently hidden. Note that when MyFaves display is set to off, your MyFaves contacts in phonebook are also invisible.



If you want to hide MyFaves temporarily, you can touch the display between the MyFaves icons and shortcut bar at the screen bottom so that the pair of arrows appears. If you then sweep either to right or left, MyFaves will be hidden. To unhide, you just need to press and sweep to either direction again.

# Messaging

## Messaging

Your KC910 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways open a new blank message:


- 1 Touch  from the home screen.
- 2 Touch  from the home screen, then select **Call & message** and choose **New message**.


## Sending a message

- 1 Touch  to open a blank message. Select option **Create New Message**.
- 2 From here you can send an SMS or MMS. To send an SMS, choose **Message**. To send an email, choose **Email**. See page 51 for details.
- 3 Touch **Insert**, to add an Image, Video, Sound, Template, Emoticon, Name & Number, New slide, Subject, More (Business

card, Schedule, Memo, To do or My business card)

- 4 Touch **Recipient** to enter the recipient's number, or touch the search icon to open your contacts. You can add multiple contacts. When you are finished, touch **Send**.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to. You can choose to send long messages as **Multiple SMS** or as **MMS**.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

01

02

03

04

05

06

07

08


# Messaging


**TIP!** Quick reply - Send a reply promptly to the selected message using a template.

 
## Entering text


There are five ways to enter text: Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

Tap the screen once, then the keypad shows up.

 Touch to turn on T9 predictive text. Button turns green when turned on.


 You can change the writing languages.

 Tap to change between the numbers, symbols and texts keypads.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

To enter a space touch .

## T9 predictive

 
In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.


If the word you want doesn't appear, touch **Spell**. If you touch **Spell** you can then enter the word using Abc manual mode and your word or name will be added to the dictionary.

**TIP!** Simply touch each letter to write your message and press:

 to switch to upper case

 to add a space

## Abc manual

 In Abc mode you will see  .

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

## Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

**TIP!** If you turn the phone to landscape in messaging mode, the phone will automatically bring up the keypad.

**TIP!** Keyboard mode predicts and shows what it thinks you will type next. These words are predicted based on the sentences you have typed in so far. If you do not wish to use the suggested words, keep typing in new words. If you wish to use the suggested words, press the space bar to confirm them.

01

02

03

04

05


06

07

08

# Messaging


## Handwriting recognition

You can input a letter by Handwriting in the Message, Memo menu etc. Touch  and choose input method. In Handwriting mode you simply write on the screen and your KC910 will convert your handwriting into your message. Select Handwriting-Screen, Handwriting-Box or Handwriting Double Box depending on your preferred view.

Handwriting-Screen enables you to input letters continuously on the full screen.

Handwriting-Box enables you to input a letter at a time. There are separate areas to input symbols, numbers or letters.

Handwriting-Double Box has 2 boxes to input letters alternately, this allows you to input letters continuously.

 **WARNING:** You may find it easier to use a stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

**Note:** Most letters can be written using different stroke styles. See the tables below. The arrow selects whether the letter is upper or lower case, not the style of writing.





## Alphabet

If you select capital letter mode **ABC**, letters you type will be inserted as capital letters even if you write in small letters, and vice versa.

Letter	Strokes
A	A A' a a'
B	B B' b b'
C	C C'
D	D D' d d'
E	E E' e e'
F	F F' f f'
G	G G' g g'
H	H H' h h'
I	I I' i i'
J	J J' j j'
K	K K' k k'
L	L L' l l'
M	M M' m m'
N	N N' n n'
O	O O' o o'
P	P P' p p'
Q	Q Q' q q'
R	R R' r r'
S	S S'
T	T T' t t'
U	U U' u u'
V	V V' v v'

Letter	Strokes
W	W W' w w'
X	X X' x x'
Y	Y Y' y y'
Z	Z Z' z z'
ß	ß

## Accented characters

Accent	Strokes
Space	
Backspace	
Enter	
Switching the text mode	

01

02

03

04

05

06

07

08

 
# Messaging

## Punctuation marks

Mark	Strokes
Full stop .	•
At @	@

**Note:** Start each stroke at the dot.








 





 
## Numbers

Touch  to switch from text entry to number entry.

Number	Strokes
0	0 0
1	1 1 1 1 1
2	2 2 2
3	3 3
4	4 4 4 4
5	5 5 5 5
6	6
7	7 7 7 7
8	8 8 8 8
9	9 9 9 9

## Accented letters



Write the character then write the accent above the entered letter. Other such characters, for example, ö and ü, follow the same principle.

grave		
acute		
circumflex		
tilde		
ring		
dieresis		
cedilla		

## Setting up your email

You can stay in touch on the move using email on your KC910. It's quick and simple to set up a POP3 or IMAP4 email account.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  from the home screen, and touch  within **Messaging**.
- 2 Select **Messaging settings** and then select **Email**.
- 3 Select **Email accounts**.
- 4 You can now choose how your account works:  
(To change your email settings refer to on page 51.)

**Title** - Enter a name for this account.

**My name** - Enter your name.

**Username** - Enter the account's username.

**Password** - Enter the account's password.

**Email address** - Enter the account email address.

**Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the outgoing email server address

**Incoming mail server** - Enter the incoming email server address

**Maximum receive size** - Choose the size limit of your emails, the maximum is 2MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

01

02

03

04

05

06

07

08

## Messaging

**Save sent mail into** - If the mailbox type is set to IMAP4, you have the option to save sent emails to either the Handset or the Server. When the mailbox type is set to POP3, sent emails are always saved into the handset.

**Retrieve only new** - Choose whether to discard emails already downloaded previously.

**Access point** - Choose your Internet access point.

**Email to retrieve** - Choose the way to download emails. Choose from Header only or All for POP3. Choose from Header only, Header + Body or All for IMAP4.

**Auto retrieve** - Choose whether to retrieve your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**SMTP port number** - Normally, this will be 25.

**SMTP TLS/SSL** - Choose whether to use TLS/SSL for outgoing server.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**Incoming TLS/SSL** - Choose whether to use TLS/SSL for incoming server.

**SMTP authentication** - Choose the security settings for the outgoing mail server

**SMTP Username** - Enter the SMTP username.

**SMTP Password** - Enter the SMTP password.

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.



Now your account is set up, it will appear in the list of accounts in your Email folder.

**TIP!** During an active WiFi connection, emails are sent and received via WiFi.

## Retrieving your email

You can automatically or manually check your account for new emails.

To check manually:

- 1 Touch  then **Call & message**, then **Messaging**.
- 2 Select **Email**.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your KC910 will connect to your email account and retrieve your new messages.

## Sending an email using your new account

- 1 Touch  in the **Call & message** menu.

- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

**TIP!** You can upload Word, Excel, PowerPoint and PDF documents to your KC910 so you can review them on the move.

## Changing your email settings

You can change your email settings according to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Select **Call & Message** and choose **Messaging**.
- 2 Select **Messaging settings** then **Email**.

01

02

03

04

05

06

07

08

## Messaging

**3** You can adapt the following settings:

**Email accounts** - Manage your email accounts.

**Allow reply Email** - Choose to allow the sending of read confirmation messages.

**Request reply Email** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your KC910 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at one time.

**Include message in Fwd & Reply**  
Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto retrieval in Roaming** - Choose whether to retrieve your

messages automatically when abroad (roaming).

**New email notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

**Mail sending size** - Choose the size of email you send.

### Message folders

Select **Call & Message** and choose **Messaging**.

You'll recognise the folder structure used on your KC910, it is fairly self-explanatory.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and more, see **Managing your messages** on page 53 for details.

**Email** - This is a storage folder of messages via your Email accounts.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here. You can find the message saved automatically in this folder.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - Messages you send are placed in this folder.

**My Folders** - Create folders to store your messages.

**Templates** - Use a list of commonly used text and multimedia message templates.



**Emoticons** - Add and insert emoticons for your messages.

**Message settings** - Change the settings for your text and multimedia messages.

## Managing your messages

You can use your Inbox to manage your messages.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:

**Delete** - Delete marked messages.

**Create new message** - Open a new blank message or email.

**Move to My folders** - Move the marked messages to My folders.

**Search** - Search the messages using a date and /or a phone number.

**Filter** - View your message by type. This will group SMS separately from MMS. The options are All, Text Message, Multimedia msg., MMS Notification.

01

02

03

04

05

06

07

08

## Messaging



**Delete all** - Delete all of the messages.

If you see the message **No space for SIM messages** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.



### Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add template**, **Delete** or **Delete all** templates. To edit a message just select it, make your changes and touch **Save**.

### Using emoticons

Live up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons**.
- 2 Touch **Add new** , or touch  to **Delete** or **Delete all** emoticons.

### Changing your text message settings

Your KC910 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Messaging**

**settings** and **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.


**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges. The options are **Auto, Default alphabet** and **Unicode**.

**Send long text as** - Choose to send long messages as **Multiple SMS** or as **MMS**.

## Changing your multimedia message settings

Your KC910 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch  then choose **Messaging settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming network**. By choosing **Manual**, you will only receive notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

01

02

03

04

05

06

07

08

## Messaging

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.


**Delivery time** - Choose how long before a message is delivered.


**Multi msg centre** - Enter the details of your message centre.


**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info service** - Choose your cell broadcast, channels and language settings.

### Changing your other settings

Touch , choose **Messaging settings** then:



**Videomail** - Touch **Add new** or  to add a new Videomail service. Contact T-Mobile for more information on the service they provide.

**Voicemail** - Touch **Add new** or  to add a new Voicemail service. Contact T-Mobile for more information on the service they provide.

## Camera

### Taking a quick photo

**TIP!** The camera lens has its own cover. Twist the cover open to use the camera and quickly open the viewfinder.

- 1 Press the  key on the right side of the phone.
- 2 You will be prompted to open the lens cover. The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Slightly press the capture button , a focus box will appear in the centre of the viewfinder screen.
- 5 Position the phone so you can see the subject of your photo in the focus box.

6 When the focus box turns green, the camera has focused on your subject.

7 Press the capture button fully.

#### **TIP! Touch Shot**

You can take a photo by touching screen also. After selecting an object with touch, you can see the subject in the focus box. When the focus box turns green you can take a photo simply by removing their finger from the screen.

#### **TIP! Face Tracking**

Automatically detects and focuses on human faces to help you to take clearer pictures.

01

02

03

04

05

06

07


08


## Camera


### After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.




 Touch to set the picture you have taken as Wallpaper.

 
 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to view a gallery of saved photos.

 Touch to send the photo as a **Message, Email** or **Bluetooth**. See page 43 for **Sending a message**, and page 121 for **Sending and receiving your files using Bluetooth**.

## Getting to know the viewfinder

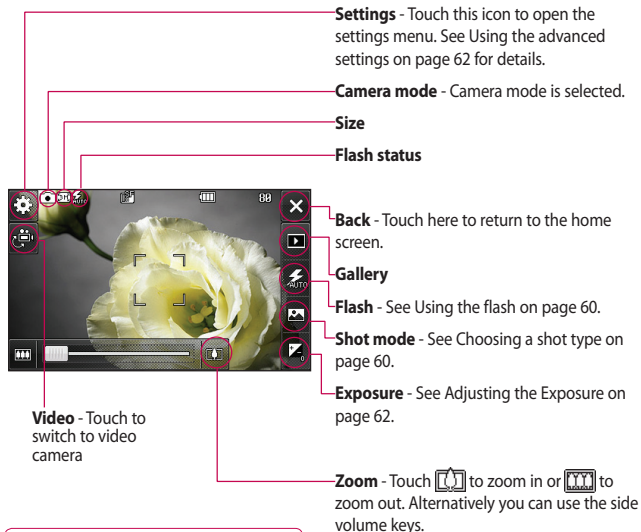

**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

01

02

03

04

05

06


07

08



## Camera

### Using the flash

The flash is set to auto as default, but there are other options.

- 1 Select  from the right side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
  - Auto** - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.
  - Red-eye reduction** - The camera will flash twice in order to reduce red eye.
  - Always off** - The camera will never flash. This is useful if you want to save battery power.
- 3 When you touch the option you want to use the flash menu will automatically close, ready for you to take your picture.
- 4 The flash status icon in the viewfinder will change according to your new flash mode.

 
### Choosing a shot type

- 1 Touch  to open the available shot types.
- 2 Choose from seven options:
  - Normal shot** - This is the default shot type, the photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 57.
  - Smile shot** - This shot type is great for taking a photo of people. Focus on the subject and press  then the photo will be taken automatically when it smiles.
  - Beauty shot** - This enables you to take a photo of person's face clearly and brightly. Especially useful when you are close up.
  - Art Shot** - Choose different picture effects. (Warm, Original, Cold, Black & White)



**Continuous shot** - This enables you to take seven shots automatically in very quick succession.

**Panorama** - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** on page 62 for more details.

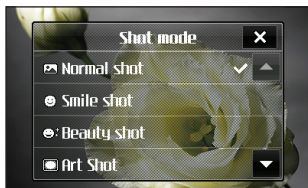**Frame shot** - Choose from one of the fun frames to transform your friend or just decorate their surroundings.



## Taking a continuous shot

- 1 Touch  to open the available shot types and select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take seven shots in quick succession and display the first with seven thumbnails shown on the left side of the screen.
- 4 Once you have highlighted the image you want to keep, touch . You will be given a chance to save more than one of the images.

01

02

03

04

05

06

07


08



## Camera

### Taking a panoramic shot


Capture life as it appears using a panoramic shot. The camera will let you take three photos, all aligned, and combine them into one wide angle image.

- 1 Touch  to open the available shot types and select **Panorama**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photo, line the ghost of the previous image up with the image in the viewfinder.
- 4 In the photo gallery, the photos will be saved as three separate images and one panoramic image.


**NOTE:** Due to the image size the panoramic photo will appear slightly distorted in the Gallery view. Touch it twice to view it properly.

 
### Adjusting the exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, hazier image or towards  for a higher exposure, sharper image.

### Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

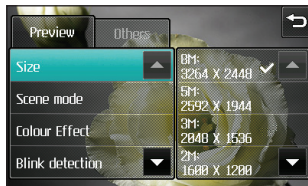

## Preview settings

**Size** - Change the size of the photo to save on memory space or take a picture preset to the correct size for contact. See **Changing the image size** on page 65.

**Scene mode** - Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Night, Beach** and **Sport**.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour effect** on page 65.

**Blink detection** - This enables the camera to stop taking a photo when it detects the blink of an eye.

**White balance** - Choose from **Auto, Incandescent, Sunny, Flourescent** or **Cloudy**.

**Macro** - Switch on to take close up shots.

**Self-timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds, 5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

**ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto, ISO 1600, ISO 800, ISO 400, ISO 200**, or **ISO 100**.

**Quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

**Back light compensation** - when you take a photo with a bright background, the subject is able to be dark. Choose this function **ON** to

01

02

03

04

05

06

07

08

## Camera

compensate this. The photo will be brighter.

**Inner/Outer Camera** - For self portraits, switch to the LG KC910's inner camera. See **Using the inner camera** on page 66 for details.

### Other settings

**Memory** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.

**Geo-Tagging** - Choose to switch on the EXIF information for the photo to write GPS information.

**Zoom** - Choose zoom from **4X**, **8X** or **16X**.

**Image stabilization** - Enables you to take a photo without camera instability or shake.

**Focus** - Select the way the camera will focus. Choose from **Auto**, **Manual** or **Face tracking**.

**Shutter sound** - Select one of the three shutter sounds or No sound.

**Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.


**Reset settings** - Reset all the camera settings.

**TIP!** When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone and ISO. Check them before you shoot your next photo.



**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements you'll be able to see the image change.

## Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Size** from the Preview menu.
- 3 Select a pixel value from the six numerical options (**8M: 3264 X 2448, 5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset:  
**Contacts** - This sets the camera to take a photo the perfect size to be added to a phone contact.

## Choosing a colour effect

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Black & White, Negative, Sepia** or **Posterize**.
- 4 When you've made your selection the colour tone menu can be closed by selecting the , ready for you to take your picture.

**TIP!** You can change a photo taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

01

02

03

04

05

06


07


08


## Camera

### Using the inner camera


Your LG KC910 has a 640x480 inner camera, not just for video calling but for taking pictures too.

- 1 To switch to the inner camera touch  then select **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.

**TIP!** The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, scene mode, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.


- 3 After you've taken the photo you'll be offered all the same options available for an image taken with the main camera.
- 4 To return to the main camera touch  and then select **Outer Camera** from the Preview menu.

### Viewing your saved photos

You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

## Video camera



### Shooting a quick video


- 1 Press and hold the camera key on the right side of the phone.
- 2 Alternatively, touch  in the view finder in camera mode to switch to video mode.

**TIP!** Quickly open the video camera by pressing and holding the camera key.

- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.

6 **REC** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.

7 To pause the video touch  and resume by selecting .

8 Touch  on the screen or press the capture button a second time to stop recording.

01

02

03

04

05

06

07


08


## Video camera


### After you've shot your video


A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with six icons down the right side .





 Touch to shoot another video straight away. Your current video will be saved.

 Touch to play the video.

 
 Touch to send the video as a **Message**, by **Email** or by **Bluetooth**. See page 43 for **Sending messages**, or page 121 for **Sending and receiving your files using Bluetooth**.

 Touch to upload videos onto Internet.

 Touch to view a gallery of saved videos and pictures.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

## Getting to know the viewfinder

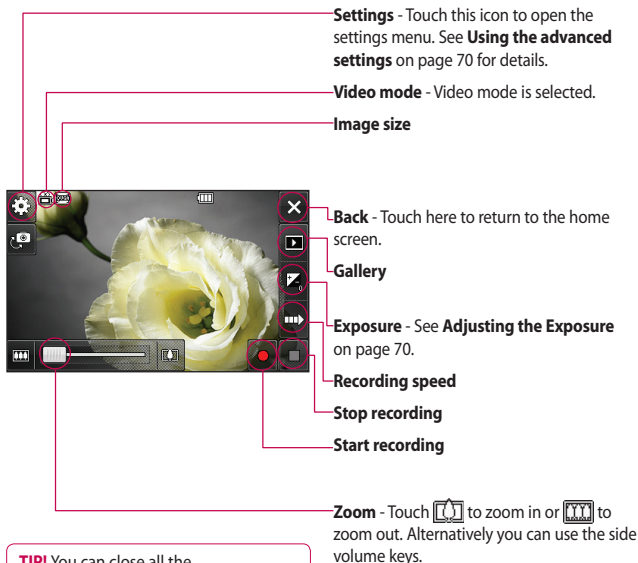

**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

01

02

03

04

05

06




07

08

## Video camera

### Adjusting the Exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, towards  for a lower exposure, hazier image, or towards  for a higher contrast, sharper image.

### Using the advanced settings

From the viewfinder touch **Settings** to open all the advanced settings options.



### Preview settings

**Video size** - Change the size of the video to save on memory space. See **Changing the video image size** on page 72.

**Scene mode** - Choose from **Auto** or **Night**.

**Colour Effect** - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 73.

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

**Quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a video will be. The file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

**Duration** - Set a duration limit for your video. Choose from **Normal**, or **MMS** to limit the size to be able to send the video as an MMS.

**TIP!** If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

**Inner/Outer camera** - Switch to your LG KC910's inner camera to record a video of yourself. See **Using the inner video camera** on page 73 for details.

### Other settings

**Memory** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

**Voice** - Choose **Mute** to record a video without sound.

**Noise-free Microphone** - Switch on for a high sound quality.

**Zoom** - Choose zoom from **4X, 8X** or **16X**.

**Reset settings** - Reset all the video camera settings.

01

02

03

04

05

06


07


08


## Video camera

### Changing the video image size


The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.


- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the five options:

 **640x384(W)** - The highest quality widescreen option.


 **400x240(W)** - This is also widescreen, but of a lower resolution.

 **640x480** - Standard sized VGA.

 **320x240** - Smaller image size, therefore smaller file size. Great for saving on memory space.


 **176x144** - Smallest image size and therefore smallest file size.

- 4 Touch the back icon to return to the viewfinder.

 **WARNING:** The great editing software on your LG KC910 is compatible with all video types except 640X384 and 640x480. Don't record in this format if you plan to edit your video.

**TIP!** For video format conversion software, see the CD you received with your KC910.


## Choosing a colour tone

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options, **Off** (colour), **Black & White**, **Negative**, **Sepia**, **Posterize**.
- 4 Touch the colour tone you'd like to use.

**TIP!** You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

## Using the inner video camera

Your LG KC910 has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select **Inner Camera** from the Preview menu.

- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press a second time to stop recording.
- 3 After you've shot the video you'll be offered all the same options available for a video shot using the main camera.
- 4 To return to the main camera touch  and then **Outer Camera**.

**TIP!** You can still alter the video size, scene mode, colour effect, white balance quality and duration by touching **Settings** in the same way as when using the main camera.

01

02

03

04

05



06

07

08

## Video camera


### Watching your saved videos

- 1 In the viewfinder touch  .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery. Touch  for the video to play.

### Watching your videos on your TV



Connect your KC910 to your TV using the TV output cable.


**NOTE:** The TV output cable is available for purchase separately.

 **WARNING:** All formats except 320x240 and 176x144 are compatible with watching on TV.

## Your photos and videos

### Viewing your photos and videos

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo to open it fully.
- 4 Press play for video to start. To pause playback touch the screen to bring up the options and select .

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.

01

02

03

04

05

06

07

08



**TIP!** Flick left or right to view other photos or videos.

## Your photos and videos



### Using zoom when viewing a photo


To zoom in press **+** repeatedly. To zoom out press **-**. Use the thumbnail in the bottom right corner to move the focus area.

### Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bar on the left side of the screen. Alternatively, use the volume keys on the side of the phone.


### Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch **||** to pause the video on the frame you'd like to convert to an image select  from the right side of the screen.
- 3 Select **Save**.
- 4 The image will appear on screen, with its assigned image name.
- 5 Touch the image then  to return to the gallery.
- 6 The image will be saved in **My folders** and appear in the gallery. You need to exit the gallery and then re-open it for this to appear.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.


## Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.


- 1 Touch the photo you would like to begin the slideshow to open it.
- 2 Select .
- 3 The slideshow will begin.




There are options within slideshows:

 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.

 Touch to skip photos.

 Touch to increase or decrease the speed of the slideshow.

01

02

03

04

05



06

07

08


## Your photos and videos

 
### Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch .
- 4 The screen will switch to portrait mode. You can zoom in and out on the picture and move the cropped section using a thumbnail at the bottom of the screen.
- 5 When you are happy with the picture touch .

### Editing your photos


There are loads of great things you can do to your photos to change them, add to them or liven them up a little.


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to adapt your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area. More details on Page 79


 Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like use.


**T** Put writing on the picture. See **Adding text to a photo** on page 80.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.


 Erase the editing you have added to the picture. You can choose the size of eraser that you use.

 Touch to return to the gallery.

 Save the changes you have made to the photo. Select to save the changes over the **Update**, or as a **New file**. If you select **New file** enter a file name.

 Undo the last **Effect** or edit you made to the photo.

 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Morphing a photo, Adding a colour accent** and **Swapping the colours in a photo** on page 82 and 83.

 **Adjustment** see **Adding an effect to a photo** on page 80.



01

02

03

04

05

06

07


08

## Your photos and videos

### Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

### Adding an effect to a photo

- 1 From the editing screen, touch .
- 2 Choose to apply any of the eighteen options to the photo:
  - Face Beautify** - Automatically detect a face in the image and brighten it up.
  - Tunnel Effect** - The middle is bright and side is dark effect.
  - Colour negative** - Colour negative effect.
  - Black and white** - Black and white colour effect.
  - Sepia** - Sepia effect.
  - Blur** - Apply a blurred effect.
  - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select the **OK** icon to apply the changes or choose  to cancel.

**Mosaic blur** - Touch to apply a blurred pixelated effect to the photo.

**Oil painting** - Oil painting effect.

**Sketch** - Apply an effect to make the picture look like a sketch.

**Emboss** - Emboss effect.

**Solarize** - Change the effect of exposure to the light.

**Vivid** - An effect of clearness and brilliance.

**Moonlight** - Change the light to look like moonlight.

**Antique** - An old photo effect.

**Glow** - A light beam effect.

**Cartoon** - A cartoon effect.

**Water colour** - Make the picture look like a water colour painting.

**3** To undo an effect simply touch



**TIP!** You can add more than one effect to a photo.

## Crop a photo

**1** From the editing screen touch



**2** Choose the shape you would like to use to crop the picture.

**3** Drag the box over the area you would like to crop.

**4** When you are happy with your selection, touch

01

02

03

04

05

06


07

08


## Your photos and videos

### Morphing a photo




Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen touch .
- 2 Choose **Morphing** and four crosses will appear on the photo.
- 3 Move the crosses around the photo so they are on the parts you'd like to morph. For example, if you are morphing a face, place a cross on the outside corner of each eye and one each side of the lips.



- 4 Select a face to represent how you'd like to morph the photo.
- 5 Select  to save the changes.

### Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Alter the intensity of the accenting by touching  and then sliding the marker up or down the intensity bar.
- 5 Touch **OK**.
- 6 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 7 Select  to save the changes.

## Swapping the colours in a photo






- 1 From the editing screen, touch .
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Touch  and select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select  to save the changes.

## Editing your videos

The editing features are available for all video types except 640X384 and 640x480.

Don't record in these formats if you plan to edit your video.

## Trimming the length of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Trim**.
- 3 Touch  and mark the new start and end points using .
- 4 Touch  to ensure you are happy with the new cut.
- 5 Touch  or, alternatively, touch  to return to the gallery and discard the changes.

01

02

03

04

05




06

07


08

## Your photos and videos

### Merging two videos together

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Video merge**.
- 3 The Videos folder will open. Choose the video you would like to merge.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch  to choose how the videos merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamond**.
- 6 Press **Save** followed by **Yes** to save the new merged video. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more videos.

### Merging a photo with a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Image merge**.
- 3 The Pictures folder will open. Choose the photo you would like to merge into your video.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch  to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamond**.
- 6 Press  followed by **Yes**. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

## Adding text to a video

- 1 Open the video you'd like to edit, select and touch the screen to bring up the options.
- 2 Select and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Save**.
- 4 Touch and mark when you'd like the text to appear using .
- 5 Touch the area of the screen you'd like the text to appear in.



- 6 Touch to mark when you'd like the text to disappear.
- 7 Touch to ensure you are happy with the text overlay.

- 8 Touch followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more text.

## Overlaying a photo

- 1 Open the video you'd like to edit, select and touch the screen to bring up the options.
- 2 Select and choose **Image overlay**.
- 3 The Pictures folder will open. Choose the photo you would like to overlay your video.
- 4 Touch and mark when you'd like the photo to appear using .
- 5 Touch the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.

01

02

03

04




05

06

 



 


07


08

## Your photos and videos

 - 6 Touch  to mark when you'd like the photo to disappear.
- 7 Touch  to ensure you are happy with the photo overlay.
- 8 Touch  followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more photos.

### Adding a voice recording

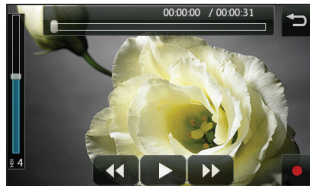

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Voice recording**.
- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.
- 4 Touch  to view your video. When you get to the part you'd like to record your voice over, press .
- 5 Press  to stop recording and playback.
- 6 Touch  to ensure you are happy with the voice recording.
- 7 Touch  followed by **Yes** to save. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more voice recordings to the video.





## Adding a soundtrack to your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Audio dubbing**.
- 3 The Sounds folder will open. Choose the track you would like to add to your video.
- 4 The original audio of your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

## Changing the speed of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Choose to save over the original file or as a new file.

## Adding a dimming effect

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Dimming effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

01

02

03

04

05

06

07

08

## Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **Entertainment**. Touch **My stuff** to open a list of folders storing all of your multimedia files.

### My images


**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

### My images option menus

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **File info**, and **Print** options are available for default images.

**TIP!** When looking at a picture, turn the phone to landscape to bring up further options on the right side of the screen. Choose from **send**, **upload**, **set as homescreen**, **edit** and **delete**.

When viewing the image you can immediately access two options:  
**Send** - Send the image to a friend.  
**Edit** - Edit the image

Touch  to access the following options:

**Use as** - Choose from **Main screen theme** or **Contacts image**.

**Rename** - Rename an image.

**Edit** - Edit the image.


**Smart Light** - Change the lighting of your picture to improve it automatically.

**Print** - Print the selected image using a printer supported by **Bluetooth** or **Pictbridge**.

**Slide show** - View your images as a slide show.

**File info.** - View the file information.


## Sending a photo

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select the picture you want to send, and touch **Send**. Choose from **Message**, **Email** or **Bluetooth**.

- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.  
**Note:** An additional cost is incurred when connecting to this service. Check your data charges with T-Mobile.

## Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:  
**Main screen theme** - Set a wallpaper for the home screen.

01

02

03

04

05

06

07

08

## Multimedia

**Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.



**TIP!** You can to print via Bluetooth or by connecting to a PictBridge printer.

### Marking up your images

A low-light photo can be adjusted without lowering the quality of the picture.



- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch  then touch **Smart light**.
- 4 The light will automatically be changed, and you will have an option to save the new image.

### Printing an image

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

### Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.

### Creating a slide show

If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then **Entertainment**.

2 Touch **My stuff** then **My images**.

3 Touch  then **Slide show**.

## Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

1 Touch  then **Entertainment**.

2 Touch **My stuff** then **My images**.

3 Touch  then **Memory info**.

4 Choose **Handset memory** or **External memory**.

**NOTE:** If you do not have a memory card inserted, you will not be able to select External memory.

## Sounds

The **Sounds** folder contains the **Downloaded sounds**, **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

## Using a sound

1 Touch  then **Entertainment**.

2 Touch **My stuff** then **My sounds**.

3 Select **Default sounds** or **Voice recordings**.

4 Select a sound and it will begin to play.

5 Touch  and select **Use as**.

6 Choose from **Voice ringtone**, **Video ringtone** or **Message tone**.

## Videos

The **Videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

1 Touch  then **Entertainment**.

2 Touch **My stuff** then **My videos**.

3 Select a video to play.

01

02

03

04

05


06

07

08

## Multimedia

### Using options while video is paused

Touch  while in pause mode and choose from:

**Capture** - Capture the frozen frame as a picture.

**Send** - Send the video in a **Message, Email, via Bluetooth** or via **YouTube**.


**Delete** - Delete the video.

**Use as** - Allows you to use as a voice or video ringtone.

**Edit** - You can edit the file name.

**File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protect and Copyright details.

### Sending a video clip

- 1 Select a video and touch  .
- 2 Touch **Send** and choose from **Message, Email, Bluetooth** or **Internet**.

- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

### Downloading sounds

By selecting **T-Mobile Jukebox** from **Entertainment**, or **More ringtones / More music** from **My Sounds** sub-menu in **My stuff** folder you can go online.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with T-Mobile.

### Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

## Download games

In sub-menu **My games & apps** you can go online to t-zones portal for downloading new games by selecting the **More games** link.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with T-Mobile.

## Playing a game

You can enjoy two default games : **Flying dices, Wheel mania**


You can touch around the game and find the options.

You can view the game information and set the sound and vibration with this option.

When activating a game, you can reset all settings or end a game by touching around the game scene.

- 1 Touch  then **Entertainment**.
- 2 Touch **Games & apps**.
- 3 Choose **M-Toy** and touch a game to launch.

## Using the Games & apps options menu

Choose **Games & apps**, then **My games & apps**, touch  the following options are available:

**Create new folder** – Create a folder within Games.

**Sort by** - Sort the games and applications by **Date, Size** or **Name**.


**Memory manager** - View the memory status.

**File info.** - View the game information.

## Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.

## Viewing an SWF file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file to view.

01

02

03

04

05


06

07

08

## Multimedia

### Using options viewing the SWF file

Touch  and choose from:

**Mute** - Switch the sound off.


**Send** - Send the file as a **Message**, **Email** or via **Bluetooth**.

**File info.** - View the Name, Size, Date, Time, Type and Protection of the file.

### Documents

From **Documents** in **My stuff**, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.

### Viewing a file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **View**.

### Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 110 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others folder**.

### Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the

**Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from Others to Documents:

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, then touch **Move** again.

## Music

Your LG KC910 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then **Entertainment** then **Music**.

By selecting **T-Mobile Jukebox** you can go online for browsing, searching and downloading songs.

**NOTE:** An additional cost is incurred when connecting to this service. Check your data charges with T-Mobile.

**T-Mobile Jukebox (music store) -** (Dependent on network service)

Search and download your favourite songs enroute using Jukebox, a service offered by T-Mobile.

Once you have bought a song via your mobile phone you can also download it to your PC and burn it onto CD with no additional costs if allowed by the digital rights of the downloaded music.

**Recently played** - You can listen all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

01

02

03

04

05

06

07

08

## Multimedia

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - You can listen to the music randomly.

### Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

 
You can also use LG PC Suite, see page 110 for details. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.

- 4 The file should appear in **Music > All tracks**.

### Playing a song

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **My music** and **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

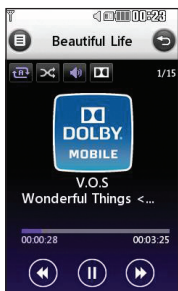

**TIP!** KC910 is the first worldwide handset to apply Dolby Mobile for music, Providing trademark Dolby sound quality to your mobile phone.

## Using options while playing music

Touch  and choose from:

**Minimise** - Make the music player screen disappear so that you can continue using your phone as normal.

**Go to my music** - Return to the Music menu.

**Visualisation** - Select a visual effect.

**Add to playlist** - Add the track to one of your playlists.

**Send** - Send the song as a **Message**, **Email** or via **Bluetooth**.

**Delete** - Delete the song.

**Use as** - Use the song as one of Voice ringtone, Video ringtone or Message tone.

**File info.** - View information including the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

**TIP!** To change the volume while listening to music, touch



## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

1 Touch  then **Entertainment**.

01

02

03

04

05

06


07

08

## Multimedia



- 2 Touch **Music**, then **Playlists**.
- 3 Touch **New playlist**, enter the playlist name and touch **Save**.
- 4 The **All tracks** folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Done**.

Choose which playlist you would like to listen to, and touch the chosen playlist for it to play.

**NOTE:** To add a second playlist, touch  then Add new playlist.

### Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Select the playlist.
- 4 Touch  and select:

**Add new songs** – To add more songs to the playlist. Mark the ones you want and touch **Done**.

**Change list order** - Change the playing order of the playlist.



**Send** – Send a song as a **Message, Email** or via **Bluetooth**.

**Remove from list** – Remove a song from the playlist. Touch **Yes** to confirm.

**Memory info** - View the memory status.

**Remove all** - Remove all tracks from the playlist.

### Deleting a playlist

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

## Using the radio





Your LG KC910 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).


## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.

## To auto tune:

- 1 Touch  then **Entertainment**.
  - 2 Touch **FM radio** then .
  - 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to channel numbers in your phone.
- NOTE:** You can also manually tune into a station by using  and  displayed next to the radio frequency.

## Resetting channels

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

01

02

03

04

05

06

07

 
08

# Multimedia

## Listening to the radio

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

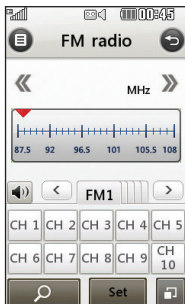


## Utilities

### Adding an event to your calendar

- 1 From the home screen select  go to the Utilities tab, then touch .
- 2 Select the date you would like to add an event to.
- 3 Touch the chosen date again to **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note.

7 Set **Alarm** and **Repeat**.

- 8 Select **Save** and your event will be saved in the calendar. A square colour cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

**TIP!** You can set a holiday in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red.

01

02

03

04

05

06


07

08

## Utilities

### Internet

To use web 'n' walk, please refer to [page 112](#).

 choose **Utilities**, then **Internet** and touch **t-zones**.

- 1 To access the t-zones homepage directly select **Home**.
- 2 Select **Enter address** to enter a new URL.
- 3 Select **Add** to bookmarks to save your favourite websites.
- 4 In order to access a saved page select **View pages**, then **View saved pages**.
- 5 View your browser history by selecting **View pages**, then **History**.
- 6 Select **Settings** to adapt the t-zones settings to your personal requirements.

There is no Profile option within Settings. With **Character encoding** you can choose the character encoding of a web page.

**Cache** and **Cookies** can be activated or deactivated and cleared.

Within **Appearance settings**, Java script can be turned on and off. Touch **Character encoding**, within Appearance settings, to choose the character encoding of a web page.


### Access to Google Maps

You can use Google navigation services from the Utilities menu. Select the Google Maps icon to launch the application.


The GPS position your KC910 is providing will be processed. This service helps you to get around and to find your way by delivering maps onto your display.

Note that additional cost may occur when using this service.



## Changing your default calendar view

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.  
Select **Settings**.
- 2 Touch **Calendar** and choose either **Month view** or **Week view**.
- 3 Set **Week starts on**.
- 4 Press **Save** to confirm your choice.

## Adding an item to your Task list

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

## Sharing a Task

- 1 From the home screen select , then **Utilities** and choose **Organiser**. Select **To do**.
- 2 Select the task you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg.**, **Email** or **Bluetooth**.

**TIP!** You can back up and synchronise your calendar with your computer. See PC Sync on page 111.

01

02

03

04

05


06

07

08

## Utilities

### Adding a memo


- 1 From the home screen select  then touch **Utilities** and choose **Organiser**, then select **Memo**.
- 2 Touch **Add memo**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit and type your changes.


### Using date finder


Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

### Setting your alarm

- 1 From the home screen select  then touch **Utilities** and choose **Alarms**.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to repeat Daily, Mon - Fri, Mon - Sat, Sat - Sun, Except holiday, Choose weekday, or Not repeated. The icons indicate the weekday you select.

- 5 Select **Set alarm type** to select a type for your alarm.
- 6 Touch **Set alarm bell** then select bell. To listen to sounds touch the sound, followed by .
- 7 Add a **Memo** for the alarm.
- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.
- 10 To power off the alarm, you can choose snooze or stop.

**NOTE:** You can set up to 5 alarms.

**TIP!** Touch on/off icon on the right hand side of the alarm.

## Voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder** then  and choose from:

**Duration** – Set the recording duration. Choose from **No limit**, **MMS msg. size**, or **1 min**.

**Quality** – Select the sound quality. Choose from **Super Fine**, **Fine** or **Normal**.

**Go to my sounds** – Open the Voice recordings folder in **Sounds**.

01

02

03

04

05


06

 
07

08

## Utilities


### Recording a sound or voice

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

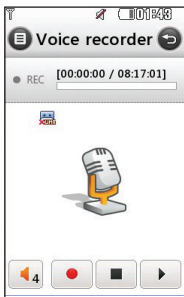



### Sending the voice recording


- 1 Once you have finished recording, touch  .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**NOTE:** After you have finished recording, touch  and choose from these options : **Send**, **Files**, **Delete**, **Use as** (to use the recording as your ringtone), **Duration**, **Quality**, or **Go to my sounds**.

## Using your calculator

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, \*, /), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc..

## Converting a unit

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **Converter**.
- 3 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

01

02

03

04

05

06

07


08

## Utilities

### Adding a city to your world time

 
- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen.
- 4 Touch the city to select it, and it will be added to your **World clock** list.



### Using the stopwatch

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

## Jogging Buddy

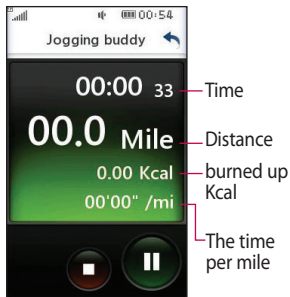Whether walking, running or jogging, KC910 provides up-to-the-second information including distance and time, and keep an exercise log for you by using advanced GPS technology.




- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **Jogging buddy**.
- 3 Touch << >> to set Distance or Time of Jogging.
- 4 You can set Regular beep on or off.
- 5 Once it has connected to the GPS, the start button will turn green. Touch  to start.

 - Reset button

Regular beep - When it is passed the distance or time setting interval, your phone beeps.

 - Start button

 - Pause button

 - Stop button

01

02

03

04

05

06

07

08


## PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

### Always ask mode

If you set the “Always ask mode” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable. If you disable the “Always ask mode”, the connection mode will be the one you have manually set in Menu - Settings - Connectivity - USB Mode and one of the options Internet, Mass Storage or PC Suite.

### Installing LG PC Suite on your computer

- 1 From the home screen touch  and **Settings** then select **Phone settings**.
- 2 Choose **Connectivity**.

- 3 Select **USB connection** mode and click **OK**.
- 4 Insert the supplied CD into your PC. Click on the LG PC Suite Installer which will appear on your screen.
- 5 Select the language you would like the installer to run in and click **OK**.
- 6 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 7 Once installation is complete, the LG PC Suite icon will appear on your desktop.

### Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.

- 4 Click on **Next**, then **Next** again, then **Finish**.  
Your phone and PC are now connected.

## Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose to back up **Contents Data** and/or **Phonebook/ToDo/Memo data**. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

## Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

## Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your SIM card and handset.

01

02

03

04

05

06

07

08

## PC Sync

- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**NOTE:** To backup contacts saved to your SIM card, click on the SIM card folder on the left side of your PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.

Right-click your contacts and select **Copy to contact**. Now click on the **Phone memory** folder on the left of your screen and all your numbers will be displayed. You can also choose to move only selected contacts one at a time.


### Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.

- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

### Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the home screen select , then touch **Settings**.
- 3 Select **Connectivity**, then **USB connection** mode.
- 4 Touch **Mass storage**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

- 6 All of your phone files will be displayed in a temporary folder. You can then move or copy them onto your PC hard drive.

**NOTE:** Your phone must be unplugged from your PC to initiate Mass Storage.

**NOTE:** Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

## DivX Converter

Install the DivX converter which is supplied on the same CD as the PC Sync software. DivX will convert media files on your PC to a format that enables you to upload and view them on your phone.

Once installed select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location of where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is finished a Conversion complete pop up will be displayed.

The converted file can now be transferred to your phone, using the Mass Storage functionality (see page 112 for details) or Upload contents using the PC Sync software (see page 111 for details).

01

02

03

04

05

06

07

08

## The web

### web'n'walk


Going online with your mobile phone has never been this easy. web'n'walk is your internet portal from T-Mobile.

web'n'walk can be easily accessed from **Entertainment** menu tab by touching the web'n'walk icon.

### Mobile TV

With Mobile TV, you never have to worry about missing your favourite shows.

Mobile TV channels include live channels, full episodes and pre-recorded shows.

By selecting  and touch **Entertainment** and then choose **Mobile TV**. You'll be taken through to the Mobile TV electronic programme guide.

Select the channel you wish to watch.

Select the option you want and click 'Accept'

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with T-Mobile.

See page 74 for more details on **watching a video**.

### T-Mobile Jukebox

Download your favourite current song en-route. Once you have bought the song via your mobile phone you can download it to your mobile phone as well as your PC and burn it on to a CD without additional costs. (depending on contents and provider)

From the home screen select **Entertainment** then touch **T-Mobile Jukebox**.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with T-Mobile.

## Using your phone as a modem

Your KC910 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KC910 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KC910.

**NOTE:** For more information on synchronising using the LG PC Suite see page 110.

### Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KC910.
- 2 Pair your PC and KC910 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KC910.

**NOTE:** For more information on Bluetooth see page 122.

01

02

03

04

05

06

07


08

# Settings


## Personalising your profiles

You can quickly change your profile on the home screen. Simply touch the status summary icon on the top and touch the profile tab. Referring to page 27.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose **Settings**.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list, including your **Voice/ Video ringtone** and **Volume, Message alerts** and more.

## Changing your screen settings

- 1 Touch  then choose **Settings**.
- 2 Touch **Display settings** and then choose from:

**Wallpaper** - Choose the theme for your home screen.

**Dialling** - Adjust the number size and colour.

**Font** - Adjust the font size.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Brightness** - Adjust the screen brightness.

**Theme** - Quickly change the whole look of your screen.

**Reset main menu** - To reset the main menu, touch Yes.

**Greeting message** - Choose on or off and fill in the greeting message.

Choose an image for **Incoming Calls** and **Outgoing calls**.

**3** Touch **Save** to save your settings.

## Changing your phone settings

Enjoy the freedom of adapting how your KC910 works to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

**1** Touch  then choose **Settings**.

**2** Touch **Phone settings** then choose from the list below.

**Date & time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

**Power save** - Choose to switch the factory set power saving settings **Auto**, **On** and **Off**.

**Languages** - Change the language of your KC910's display.

**Auto key lock** - Lock the keypad automatically on the home screen.

**Security** - Adjust your security settings, including PIN codes and handset lock.

**Connectivity** - Please refer to the page 118 in detail.

01

02

03

04

05

06

07

08


## Settings

**Memory manager** - See **Using memory manager** on page 121 for more information.


**Reset settings** - Reset all the settings to their factory definitions.

**Information** - View the technical information for your KC910.

### Changing your touch settings

Touch  then **Settings**. Touch **Touch settings**.

To reset the touchpad and make it easier use, select **Touchpad calibration** and touch the crosses. Save the settings when you are happy with them.

Touch  then **Settings**. Choose **Touch settings** and select **Touchscreen effect**. This menu enables you to reset touch **Type**, **Tone**, **Tone Volume**, **Vibration** and **Vibration volume**.

### Changing your connectivity settings

Your connectivity settings have already been set up by T-Mobile, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then **Settings**, **Phone settings**, then **Connectivity**.

**Network settings** - Your KC910 connects automatically to your preferred network. To change these settings use this option.

**Internet profile**- Set the profiles for connecting to the internet.

**Access points** - T-Mobile have already saved this information. You can add new access points using this menu.

**Packet data conn.**- Set the packet data connection.

**GPS type** - Choose either **Assisted GPS** or **Stand alone**.

## GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS (A-GPS) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- Take pictures of where you are and have the pictures tagged with information about your location.

**Note:** GPS service has an error tolerance and it is unable to work in buildings or underground.

## USB connection mode -

Synchronise your KC910 using the LG PC Suite software to copy files from your phone. See page 110 for more information on synchronisation.

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for music content only. If you want to synchronize with external memory, you can use 'External memory' as Primary storage. If you want to synchronise with internal memory, you can use 'Internal memory' as Primary storage.

**TV out** - Choose **PAL** or **NTSC** for connecting your KC910 to a TV.

01

02

03

04

05

06

07

08

# Settings

**NOTE:** The TV output cable is available for purchase separately.

**Streaming settings** - T-Mobile have already saved this information. You may edit it if want to make changes.

## Divx VOD registration


This menu is for generating a DivX VOD registration code.

Please visit <http://vod.divx.com> to register and for technical support.

## Using memory manager

Your KC910 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by **Settings**. Select **Phone settings** then **Memory Manager**.

LG KC910 | User Guide

**Handset common memory** - View the memory available on your KC910 for Pictures, Sounds, Videos, Flash Contents, MMS, Email, Java and others.

**Handset reserved memory** - View the memory available on your handset for Text msg, Contacts, Calendar, To do, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.


**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage settings** - Choose the location you prefer items to be saved to.

**TIP!** See page 20 for information on **inserting a memory card**.

## Using flight mode

Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**.

Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch **Send**, then choose **Bluetooth**.

3 Touch **Yes** to turn Bluetooth on.

4 If you have already paired the Bluetooth device, your KC910 will not automatically search for other Bluetooth devices. If not, your KC910 will search for other Bluetooth enabled devices within range.

5 Choose the device you want to send the file to and touch **Select**.

6 Your file will be sent.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

01

02

03

04

05

06

07



08

# Settings

## To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

## Changing your blueooth settings:

- 1 Touch  and choose **Settings**.
- 2 Choose **Bluetooth** then touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your KC910.

**Supported services** - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 115 or **Using a Bluetooth headset** on page 123.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your KC910 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KC910 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode. You will be asked to **Allow Connection**, options are **Ask Always** or **Allow without ask**.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your KC910 will automatically switch to Headset profile.

**TIP!** See page 34 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

01

02

03

04

05

06

07

08

## Wifi

Touch **Settings** and then **Phone settings** and select **Connectivity**. You can choose Wi-Fi and set Wi-Fi Network.

Wireless Manager allows you to manage Wi-Fi Internet and Bluetooth connections on your device. It allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. You can make Wifi On in the menu of Status Summary referring to page 27.

**NOTE:** KC910 supports WEP, WPA-PSK/2 encryption not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets the encryption for network security, you should fill in the key in the pop-up window. If the encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask for it from your Wi-Fi service provider or network administrator.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

## Accessories

These accessories were supplied with KC910.

### Charger



### Data cable and CD



Connect and synchronise your KC910 and PC.

### Battery



### Stylus and carry strap



### User Guide

Learn more about your KC910.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

01

02

03

04

05

06

07

08

## Network service

The wireless phone described in this guide is approved for use on the GSM and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

### **Divx VOD registration**

Generate a DivX VOD registration code.

Please visit <http://vod.divx.com/> for registration and technical support.

## Technical data

### **General**

Product name : KC910

System : GSM / W-CDMA

### **Ambient Temperatures**

Max : +55°C (discharging),  
+45°C (charging)

Min : -10°C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

**GSM/ W-CDMA Terminal Equipment**

Model Name

KC910

Trade Name

LG



## Applicable Standards Details

**R&TTE Directive 1999/5/EC**  
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

**BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom**  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

**Seung Hyoun, Ji / Director 29.Aug. 2008**

LG Electronics Inc., Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative

## Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Phone loses network	Battery defective	Replace battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

## LIMITED WARRANTY STATEMENT

### **1. WHAT THIS WARRANTY COVERS :**

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.
- (2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.
- (3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.
- (4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, or their designated service agent the consumer must provide information to reasonably prove the date of purchase.
- (6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.
- (7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

### **2. WHAT THIS WARRANTY DOES NOT COVER :**

- (1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number or IMEI number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Suspected defects caused by a failure of the cellular network.

### ***3. CONDITIONS :***

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

LG ELECTRONICS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.









