



## GB220

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Bluetooth QD ID B015474

# GB220 User Guide - English

Congratulations on your purchase of the advanced and compact GB220 phone by LG, designed to operate with the latest digital mobile communication technology.

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

 


## Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



## Getting to know your phone

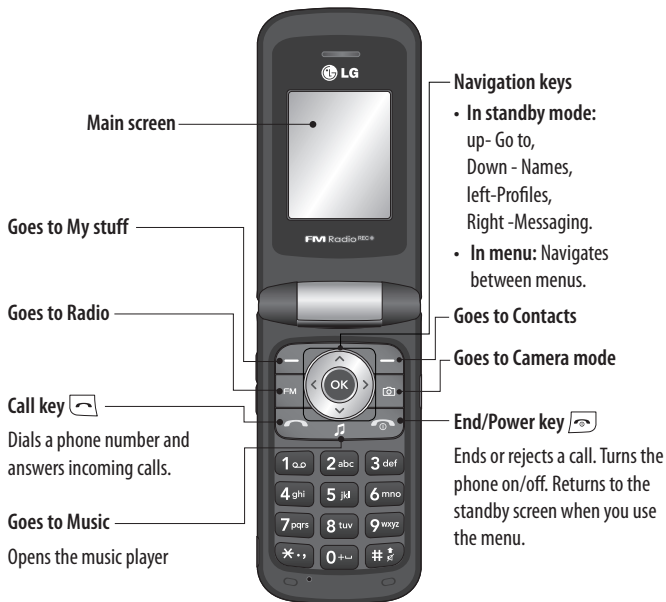

### Volume key / Side keys

- 1) In standby mode ( Opened ) :  
Volume adjustment
- 2) In standby mode (closed): Short press - The sub LCD backlight on.  
Long press ( Down key only ) -Go to Self Camera mode and you can take a photo.
- 3) During a call : Earpiece volume adjustment
- 4) During playing MP3 music: Audio volume



### Charger, cable slot,

### Handsfree connector

### Memory card slot



### Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut.

**Note:** A memory card is an optional accessory.

### Formatting the memory card

Press **menu**, select **settings**.

Choose **Memory manager**, select **External memory** and press **Format**.

The GB220 will support up to a 2GB memory card.

**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

# Installing the SIM Card and Charging the Battery

 
## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

**Important!** > The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

## Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

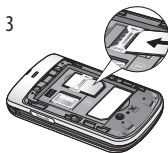

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

# Menu map

## Messaging

1. Create message
2. Inbox
3. My mailbox
4. Drafts
5. Outbox
6. Sent items
7. Saved itmes
8. Emoticons
9. Message settings

## Contacts

1. Names
2. Settings
3. Groups
4. Speed dials
5. Service dial numbers
6. Own number
7. My business card

## Call log

1. Call log
2. Missed calls
3. Received calls
4. Dialed numbers
5. Call duration
6. Packet data counter
7. Call costs

## Settings

1. Profiles
2. Display
3. Date & Time
4. Connectivity
5. Call
6. Phone
7. Network
8. Internet profiles
9. Access points
10. Packet data Conn.
11. Security
12. Memory manager
13. Restore factory settings

## Gallery

1. My memory card
2. My images
3. My sounds
4. My videos
5. My games & apps
6. Others

## Media

1. Camera
2. Video
3. Music
4. FM radio
5. Voice recorder

## Organiser

1. Alarm clock
2. Calendar
3. To-do list
4. Notes
5. Secret notes
6. Calculator
7. Stopwatch
8. Date finder
9. Converter
10. World time
11. Go to
12. SIM Service
13. Settings

## Applications


1. My games & apps
2. Settings

## Web

1. Home
2. Bookmarks
3. Last web address
4. Settings
5. Go to address
6. Saved pages


# Calls

## Making a call


- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press **OK** to initiate the call.
- 3 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.

## Making a call from your contacts

- 1 Select **Names** from Contacts.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press 6 three times to select the first character, “O”
- 3 Select **Call** or press  to initiate the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

You can control the volume by pressing the side keys.

Press  or select **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings**, and choose Call. Select Answer mode and choose from Press **send key**, Open flip and Press **any key**.

## Speed dialling

You can assign a speed dial number to a contact you call frequently.

## Viewing your Call history

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

## Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

- **Call divert** - Choose whether to divert your calls.
- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PUK2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

- **Call waiting** - Be alerted when you have a call waiting. (Depends on your network provider.)
- **Call reject** - Set the rejected call list.
- **Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)
- **Auto redial** - Choose **On** or **Off**.
- **Answer mode** - Choose whether to answer the phone using any key or send key only or Open flip
- **Free call timer** - Choose whether it shows or not.
- **Minute minder** - Select **On** to hear a tone every minute during a call.
- **BT answer mode** - Set **Hands-free** or **Handset**.
- **Save new number** - Choose **Yes** or **No**.

## Contacts

### Searching for a contact

- 1 Select **Names** from **Contacts**.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts use the up and down arrows.

### Adding a new contact

- 1 Press **Contacts** and choose **Names**. Then press **Options-Add new contact**.
- 2 Enter all the information you have in the fields provided and select **Options-Done**.

### Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups **Family, Friends, Colleagues, School, VIP** on the phone.

## Messaging

Your GB220 includes functions to send text messages and multimedia messages and **Email**, as well as the network's service messages.

## Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message - Message**.
- 2 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text messages.
- 3 Enter your message.
- 4 Choose **Options-Insert** to add an **Image**, **Video clip**, **Sound clip**, **Schedule**, **Business card**, **Note**, **Text field**, **To do**, or a **Text template**.
- 5 Press **Options - Send key**.

## Setting up your email

You can stay in touch on the move using email on your GB220. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **Email** then **Email accounts**.
- 3 Press **Options-Add new** then set the **Email** account.

## Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject.
- 4 Enter your message.
- 5 Press options, select **Insert** to add an **Image**, **Video Clip**, **Sound Clip**, **Business card**, **Schedule** or a **Note**.
- 6 Press **Send** to and enter the recipient's address or press **Options** and select **Insert-Contact**. to open your contacts list.
- 7 Press **Send** and your email will be sent.

## Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

## T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

## ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

## 123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

## Message folders

Press **Menu**, select **Messaging**. The folder structure used on your GB220 is fairly selfexplanatory.

- **Create message** - Allows you to create new messages.
- **Inbox** - All the messages you receive are placed into your Inbox.

- **My mailbox** - Contains all your email messages.
- **Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.
- **Outbox** - This is a temporary storage folder while messages are being sent or stores the messages that are failed to sent.
- **Sent items** - All the messages you send are placed into your **Sent folder**.
- **Saved items** - A list of useful messages, already written for a quick reply.
- **Emoticons** - Liven up your messages using emoticons.

## Music

Your GB220 has a built-in **Music** player so you can play all your favourite music.


### Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play.
- 3 Select **⏸** to pause the song.
- 4 Select **⏭** to skip to the next song.
- 5 Select **⏮** to skip to the previous song.

- 6 Select **Back** to stop the music and return to the Music player menu.


## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Press **Menu** and select **Media**.
- 2 Choose Music, then select **playlist**.
- 3 Press **Add** enter the playlist name and press **Save**.
- 4 The **All tracks** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Done** to store the playlist.


## Camera

### Taking a quick photo

- 1 Select Menu Select **Media-Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press **Centre**  key to take a photo.

## Video camera

### Shooting a quick video

- 1 In standby screen, select **Menu** and select **Media**.
- 2 Choose **Video**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press  to start recording.
- 5 Rec will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 Select stop to stop recording.

## FM radio


### Using the FM radio

Your LG GB220 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

### Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

## Recording the Radio




- 1 Press center key during listening to the **FM Radio**.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press the **Centre**  **key**. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.
- 3 When the recording is done, select **Option** and then choose from **Play, Delete, Sound edit File** or **Send via**.

**Note:** If you stay in an area with bad radio reception, you may find difficulty in listening to the **Radio**.

So, we recommend you insert Ear-mic into Handsfree connector in order to listen to the **Radio** and keep the good radio reception.

## Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

- 1 Select Menu and Select **Media**.
- 2 Select Voice recorder.
- 3 Press  to record a voice mail or other sounds.
- 4 Use Pause or Resume key if necessary.
- 5 Press  to stop the record and and press  again to save the file.

## Gallery

You can store any **Media files** into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

### My images

Images contains a folder of default images on your phone, images downloaded by you, and images taken on your phone's camera.

### My sounds

The **Sounds folder** contains the Default sounds, your voice recordings, and sound files downloaded by you. From here you can manage, send, or set sounds as ringtones.

### My videos

The **Videos folder** shows the list of downloaded videos and videos you have recorded on your phone.

## Others

From the **Others menu**, you can view the files that are not saved in the **Images**, **Sounds** or **Videos folder**.

## Games and Apps

Your GB220 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

## My memory card

If you've inserted a memory card, it will be displayed as a folder within My stuff.

## Organiser

### Using the calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date.

You can move the cursor to another date using the navigation keys.

### Adding an item to your to do list

You can view, edit and add tasks to do.

## Adding a Note

You can add , View and Edit Notes and Secret notes

## Setting your alarm

You can set up to 5 alarm clocks to go off at a specified time.

## Using your calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

## Using the stopwatch

This option allows you to use the function of a stopwatch.

## Converting a unit

This converts many measurements into a unit you want.

## Adding a city to your world time

You can add a required city to the list of world clock.

## Go to

It helps you to go directly to what you search for. You can set the item as Go to.

## SIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

## Web

### Accessing the Web

You can launch the wap browser and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **web**.
- 2 To access the Web homepage directly, select **Home**. Alternately, select **Go to address** and type in your desired URL.

## Phone Software update

### LG Mobile Phone Software upgrade in web site

For more information and using this function, Please visit <http://au.lgmobile.com> site.

path: <http://au.lgmobile.com> – Products menu - Manual & software menu

This Feature allows you to upgrade your software to the latest version and conveniently on the internet without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage you mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

## Connectivity

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

- **Bluetooth** - Setup your GB220 for Bluetooth® use. You can adapt your visibility to other devices or search through devices your phone is paired with.
- **USB connection** - Choose **Data service** and synchronise your GB220 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the GB220 removable device folder.

**Note:** To use the USB mass storage function, you will need to insert an external memory card in your phone.

### Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** - **Connectivity**. Choose **Bluetooth**.
- 2 Choose **Settings**. Make changes to your :
  - **My phone's visibility** - Choose whether to Show or Hide your device to others.
  - **My phone's name** - Enter a name for your LG GB220.
  - **Supported services** - Shows what it supports.
  - **My address** - View your Bluetooth address.

### Pairing with another Bluetooth device

By pairing your GB220 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu, by selecting **My phone's visibility**, then **Visible**.
- 2 Select **Active device** from the **Bluetooth** menu.
- 3 Your GB220 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter the passcode then choose OK key.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

### Installing LG PC Suite on your computer

- 1 Go to [www.lgmobile.com](http://www.lgmobile.com) and choose Asia & Pacific first and then your country.
- 2 Choose Products menu, select Manual & Software and click Go to Manual & S/W

download section. Click Yes and LG PC Suite installer will then appear. (Windows XP, Windows Media Player and more).

- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Settings

### Changing your date & time

You can set functions relating to the date and time.

### Changing the Profiles

You can personalise each profile setting.

- 1 Choose the profile you want and Select Edit from Options.

### Using flight mode

Use this function to switch the flight mode On or Off. You will not be able to make calls, connect to the internet or send messages when Flight mode is switched On.

### Changing your display settings

You can change the settings for the phone display.

### Changing your shortcuts settings

You can change the shortcuts of 4 navigation keys.

### Changing your security settings

Change your security settings to keep your GB220 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Handset lock** - Choose a security code to lock your phone **When switching on, If SIM changed, Immediate or None.**
- **Change codes** - Change your Security code, PIN2 code.

**Note:**The Security code is **0000**

### Resetting your phone

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function.

## Viewing memory status

You can use the memory manager to determine how each memory is used and see how much space is available: **Common**, **Reserved**, **SIM card**, and **External memory**.

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Guidelines for safe and efficient use

### Exposure to radio frequency energy Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GB220 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.14 W/kg(10g) and when worn on the body is 0.757 W/kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

### Product care and maintenance

#### WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
  - Keep away from electrical appliances such as TVs, radios, and personal computers.
  - The unit should be kept away from heat sources such as radiators or cookers.
  - Do not drop.

## Guidelines for safe and efficient use (Continued)

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

### Efficient phone operation

#### Electronics devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

#### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

## Guidelines for safe and efficient use (Continued)

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

### Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

### Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children.

It includes small parts which may cause a choking hazard if detached.

## Guidelines for safe and efficient use (Continued)

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Guidelines for safe and efficient use (Continued)

### Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your wireless phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
  - Australia Dial (0-0-0)
  - New Zealand Dial (1-1-1)
  - International Dial (1-1-2)
  - other local emergency number.Remember, it is a free call on your wireless phone for emergency services.
- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- Use your wireless phone to help others in emergencies, if you see an auto

## Guidelines for safe and efficient use (Continued)

accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

- Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special nonemergency wireless number.

## Trouble shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Solutions</b>
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery flat	Charge battery. Check the charging indicator on the display.
	Battery contacts dirty	Clean the contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger/Battery defective	Only use original LG accessories. Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

## Accessories

There are various accessories for your mobile phone. These are detailed below.



 
Charger



Battery



Stereo headset



User Guide

Learn more about your GB220.

### NOTE

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further inquiries.

# Technical data

## General

Product name : GB220

System : GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900

## Ambient Temperatures

Max : +55°C (discharging)  
+45°C (charging)

Min : -10°C

**Bluetooth QD ID B015474**

# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

### Model Name

GB220

### Trade Name

LG

**C E 0168**

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.2.1  
EN 301 511 V9.0.2  
EN 50360:2001, EN62209-1:2006  
EN 60950-1:2001  
EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 29 JULY, 2009

Signature of representative

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

# MANUFACTURER'S WARRANTY

## Australia & New Zealand

### 1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer.

LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.

- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

# MANUFACTURER'S WARRANTY

## Australia & New Zealand

### **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

# MANUFACTURER'S WARRANTY

## Australia & New Zealand

- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

### 3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

### 4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

#### AUSTRALIA:

LG Electronics Australia Pty Ltd  
2 Wonderland Drive  
Eastern Creek NSW 2766  
PO Box 212  
HORSLEY PARK NSW 2175  
Tel: 1300 LG CARE  
(1300 54 2273) Australia  
Fax: 02-8805-4201

#### NEW ZEALAND:

LG Electronics Australia Pty Ltd  
Unit A, 38 Highbrook Drive  
East Tamaki 2013  
PO Box 58195 Greenmount  
Auckland 2141  
Tel: 0800 LG CARE  
(0800 54 2273) New Zealand  
Fax: 09-914-2441



**LG Electronics Australia Pty Ltd.**



