



ENGLISH



User Guide
GT540



CE0168 

P/N : MFL67008338 (1.0) 

www.lg.com

Bluetooth QD ID B016480



GT540 User Guide

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Google Mail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact GT540 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use.....	7
---	----------

Important notice	13
-------------------------------	-----------

1. Phone memory	13
2. Optimising your battery's life	13
3. Installing an open source OS	14
4. Using unlock pattern.....	15
5. Using safe mode and hard reset.....	15
6. Connecting to Wi-Fi networks	16
7. Using a microSD card.....	17
8. Opening and switching applications	17
9. LG PC SUITE.....	18
10. To transfer files using USB devices.....	19
11. Unlock screen when using data connection	20
12. When screen freezes	20

Getting to know your phone...21	
--	--

Installing the SIM card and battery	23
Charging your phone.....	24
Installing the memory card ...	25
Formatting the memory card...	26

Your Home screen	27
-------------------------------	-----------

Touch-screen tips	27
Touch calibration.....	27
Lock and unlock screen.....	28
Using your home screen.....	28
Select your default home screen	28
Adding widgets to your home screen	29
Getting back to a recently used application.....	30
Onscreen keyboard	32
Using the keypad & Entering text	32
XT9 predictive mode	33
123 Mode	33

Menu map.....	34
----------------------	-----------

Google Account Set-up	36
------------------------------------	-----------

Creating your Google account ...	36
Signing in your Google account..	36

Calls.....	38
-------------------	-----------

Making a call	38
Calling your contacts	38
Answering and rejecting a call..	38
Adjusting call volume	38
Making a second call	39

Contents

Viewing your call logs.....	39
Call settings.....	39
Contacts.....	42
Searching for a contact	42
Adding a new contact.....	42
Speed dialling	42
Favourite contacts.....	43
Messaging/E-mail.....	44
Messaging.....	44
Sending a message.....	44
Changing your message settings	45
Setting up your email	46
Sending an email using your new account.....	47
Retrieving your email.....	47
Changing your email account's settings.....	47
Social Networking	48
Adding your account to your phone	48
Viewing and updating your status	48
Removing accounts on your phone	49
Camera	50
Getting to know the viewfinder..	50
Using the focus mode.....	51
Taking a quick photo	51
Once you've taken the photo...	52
Using the advanced settings ..	52
Viewing your saved photos ...	54
Video camera.....	55
Getting to know the viewfinder..	55
Shooting a quick video	56
After shooting a video.....	56
Using the advanced settings ..	56
Watching your saved videos..	57
Your photos and videos	58
Viewing your photos and videos.....	58
Adjusting the volume when viewing a video	58
Setting a photo as wallpaper ..	58
Editing your photos	58
Rotating your photo.....	59
Adding text to a photo	59
Adding an effect to a photo...	60
Cropping a photo	60
Tuning your photo	60
Adding frames	60
Adding clipart	60

Using the drawpad	61	Music.....	68
Adding stamps.....	61	Playing a song	69
Resizing	61	Using the radio	69
Editing your videos.....	61	Searching for stations	70
Trimming the length of the video	61	Resetting channels.....	70
Selecting transition style.....	61	Listening to the radio.....	70
Adding subtitles	62	Google applications	71
Adding edit effects	62	Google Maps	71
Grabbing a frame.....	62	Android Market	71
Adding dubbing to your video..	63	Google Mail	72
Multimedia.....	64	Google Talk.....	72
Timeline view.....	64	Additional Applications	73
My images options menu.....	64	LG app advisor.....	73
Sending a photo.....	64	Taskiller.....	73
Sending a video	65	PicSay.....	74
Using an image.....	65	Foursquare	74
Creating a slideshow.....	65	OI file Manager	75
Checking your photo	65	Layar.....	75
Media Player	66	Wapedia.....	75
Video editor	66	Wikitude	76
Storyboard.....	66	Shop Savvy.....	76
Music movie	67	QiK.....	76
Auto cut	67	Shazam.....	77
Playing a game	67	Ndrive	77
Transferring files using		Dictionary	78
USB mass storage devices....	68	CardioTrainer	78
		Movie Finder	78

Contents

Utilities.....	79	Search	89
Setting your alarm.....	79	Language & keyboard	89
Using your calculator.....	79	Accessibility.....	89
Adding an event to your calendar	79	Text-to-speech.....	90
Changing your calendar view ..	80	Date & time	90
Quickoffice	80	About phone	90
Voice recorder	81	Wi-Fi	91
Recording a sound or voice...81		1. How to set up Wi-Fi	91
Sending the voice recording..81		2. Wi-Fi network profile support..91	
The Web	82	3. How to obtain the MAC address	92
Browser.....	82	Software update	93
Accessing the web	82	Phone Software update	93
Using options.....	82	DivX Mobile	93
Adding and accessing bookmarks	83	Accessories	94
Changing the web browser settings	83	Technical data.....	95
Settings	84	Troubleshooting	96
Wireless & networks.....	84		
Sound & display.....	84		
Location & security	86		
Applications.....	87		
Accounts & sync	88		
Privacy	88		
SD card & phone storage.....	89		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GT540 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.39 W/kg (10 g).

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers, and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances, such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources, such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Turn off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material, as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner, or alcohol).
- Do not charge the phone when it is on soft furnishings.
- Charge the phone in a well-ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object, as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic devices

- All mobile phones may experience interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones while driving in the area.

- Do not use a hand-held phone while driving.
- Pay full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.

Guidelines for safe and efficient use

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while on the go, please make sure the volume is at a reasonable level so you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off while close to your ear. We also recommend that music and call volumes are set to reasonable levels.

NOTE! Excessive sound pressure from earphones can cause hearing loss.

Glass parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until an authorised service provider replaces the glass.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off, or activate flight mode before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts that may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available in all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

Guidelines for safe and efficient use

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of in household waste.
- If you must replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption by the charger.
- Actual battery life depends on network configuration, product settings, usage patterns, battery, and environmental conditions.

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone can not receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application

1. On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
2. When all applications appear, scroll and select the application you want to uninstall.
3. Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising your battery's life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, calendar, contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

Important notice

To check the battery charge level


1. On the home screen, touch **Applications** tab and select **Settings > About phone > Status**.
2. The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


To monitor and control what uses the battery

1. On the home screen, touch **Applications** tab and select **Settings > About phone > Battery use**.
2. The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an open source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.



WARNING

Precautions to take when using the Pattern Lock

It is very important that you remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. After attempting the unlock pattern 5 times, you can touch the Forget Pattern Option and use your Google account information to unlock your phone.

If you do not have Google account, you don't create the Google account on the phone, or you forget it, you can use **Hard Reset**.

5. Using safe mode and hard reset

Using safe mode

*** To recover from malfunction state of your phone**

1. Turn off your phone and reboot. While your phone is powering back on, press and hold the **Home** key during Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in lower left corner.
2. Select **Settings>Applications>Manage applications**, and choose the application then select an **Uninstall** icon.
3. After uninstalling the application, turn off and reboot your phone.

*** Using Hard Reset (Factory Reset)**

If it does not restore to the original condition, use **Hard Reset** to initialise your phone.

Important notice

When your phone turns on and the lock screen displays, press and hold the **Volume up + Home + Search** keys all at the same time (for five seconds).

When the pop up screen is shown, choose OK to reset your phone.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.



WARNING:

If you perform **Hard Reset**, all user applications and user data will be deleted. Please remember to back up any important data before performing **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network

1. On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
2. Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
 - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.

3. Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
4. The status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with music and video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a microSD memory card to your phone first.

Without inserting a memory card, you will not be able to save pictures and video you had taken.

NOTE: Applications can only be saved to the phone's internal memory.

WARNING:

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Applications > Settings > SD Card & phone storage > Unmount SD card**.

8. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages

Important notice




each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.


To stop the application you use

1. On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
2. Scroll to the desire application and touch **Force stop** to stop using it.

9. LG PC SUITE

NOTE: Install LG PC Suite from your memory card

1.  Install your microSD memory card on your phone.
2.  Connect your phone through USB data cable to your System.
3. 
 1. In the status bar, drag the USB icon.
 2. Choose USB Connected and Mount.
 3. You can view the mass storage content on your PC and transfer the files.

4. 
 1. Copy the folder name 'LGPCSuiteIV' on your PC.
 2. Run 'LGInstaller.exe' file on your PC and follow the instructions.

Note*

Please do not remove or delete other program file install on your memory card. This may cause to damage your pre-installed application on the phone. To install the pre-bundled application on your SD card, select OI File manager from main menu and select the respective applications, then install them on your phone.

LG PC SUITE

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently

- Synchronise data from a PC & phone (contacts, calendar/task, Memo)
- Transfer multimedia files (photo, video, music) conveniently with a simple drag & drop between a PC and phone
- Transfer the messages from a phone to a PC
- Use your phone as a Modem
- S/W update without losing your data

GT540 does not support:

- PC connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- E-mail
- Java Application

User's guide for PC Suite IV is in Help menu after install PC Suite IV.

10. To transfer files using USB devices

1. Install your microSD card on your phone. (It may already be inserted on your phone.)
2. Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)
3. Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
4. Open the notification drawer and touch **USB connected**.
5. Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

Important notice

When the phone is connected as USB storage, you receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

TIP! To use a microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as camera, gallery and music functions.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing

information on the card.

1. Safely disconnect the USB device on your computer.
2. Open the notification drawer and touch **Turn off USB storage**.
3. Touch **Turn off** in the dialog that opens.

11. Unlock screen when using data connection

 
Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.


12. When screen freezes

If the phone does not respond to user input or the screen freezes: remove the battery, insert it again and power on the phone. If it still does not work, please contact the service centre.

Getting to know your phone

To turn on the phone, press and hold the **Power** key for 3 seconds.
To turn off the phone, press the **Power** key for 3 seconds and touch **Power Off**.

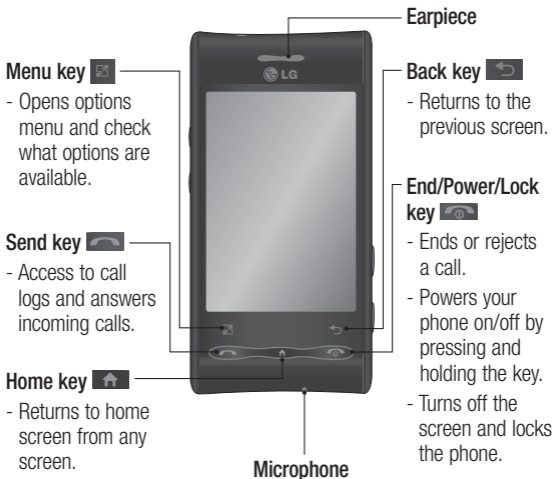

TIP! Touch the **Menu key**  whenever you tap an application to check what options are available.

TIP! If your phone has errors when you use it or you can not turn it on, remove battery, install it again and turn it on after 5 seconds.

Getting to know your phone

Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume.



Charger, micro USB cable connector

Search key

- Search the web and contents in your phone.



Camera key

- Go to the camera menu directly by pressing and holding the key.



Stereo earphone connector

Camera lens

microSD memory card slot

Charger, micro USB cable connector

 
Search key

Back cover

Battery

SIM card slot

Camera key

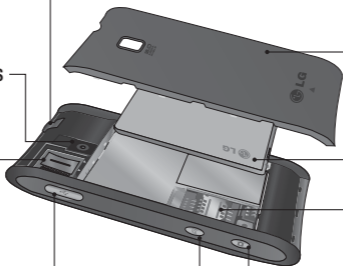


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 With the back of the phone facing you, remove the back cover. To remove the back cover, firmly press your thumbs on either side of the back cover, and slide the cover below the camera lens.




 - 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

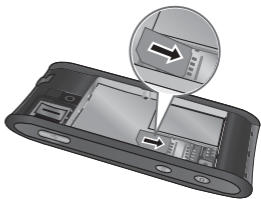

Getting to know your phone

 
- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery, then gently press the battery until it snaps into space.

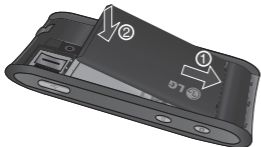

- 4 Replace the back cover of the phone and slide it down into place until the latch clicks.



Charging your phone

Slide back the cover of the charger connector on the side of your GT540. Insert the charger, and plug it into an electrical outlet. Your GT540 must be charged until you can see .

NOTE: The battery must be fully charged initially to improve battery lifetime.



NOTE: The GT540 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

 
Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.



To insert a memory card:

NOTE: The GT540 supports up to a 32GB memory card.


- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.

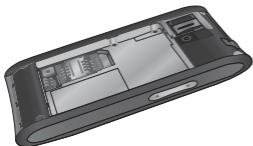

  - 2 Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

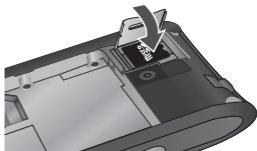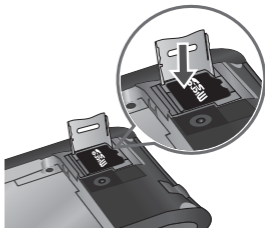

- 3 Close the slot protection.

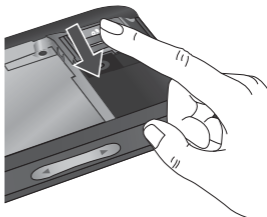 

Getting to know your phone

WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Touch **Unmount SD Card**.
- 5 Touch **Format SD card**, then confirm your choice.

- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

TIP!

If your memory card is already Unmount, you can use the following step to format it.

Touch **Applications > Settings > SD card & phone storage > Format SD Card**.

Your Home screen

Touch-screen tips

Here are some tips on how to navigate around your phone.

Touch - To choose a menu/option or open an application, touch it.

Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.

Drag - To scroll through a list or move slowly, drag across the touch screen.

Flick - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Touch calibration

Calibrating the device screen involves tapping the centre of a cross as it moves around the screen. This process ensures that when you tap the screen, the tapped item is activated.

If your phone does not accurately respond to screen taps, follow these steps to re-calibrate.

1. Tap **Applications > Settings > Sound & display**, and scroll to the **Touch settings**.
2. Touch **Touch calibration**, and follow the instructions on the screen.
3. After calibration is completed, choose between **Check calibration** and **Save without check**, then complete calibration.


Your Home screen

Lock and unlock screen

Whenever your GT540 is not in use, it will return to the lock screen. If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen when the screen blacks out, to conserve the battery.

To wake up your phone, press the **Send, Home**, or **Power** key.

The lock screen will appear.

Touch the unlock icon  and drag your finger to the right to unlock your home screen. The last screen you were working on opens.

NOTE: If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g., phone call, web access and data communications)

TIP! Setting unlock pattern

You can draw your own unlock pattern by connecting four or more dots. If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

Using your home screen

Simply swipe your finger to the left or right to view them. You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.


Select your default home screen


The user interface is based on two types of home screens: **LG Home** and **Android Home**.


You can set your favourite home screen as the default.


If you want to change the default home settings, choose **Home selector** from the applications menu.


- In your LG home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch-dialling pad to make a call.

 Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. Just touch to scroll through your applications.


- In your Android home screen, touch the **Applications** icon  to open the applications menu. Just touch and slide up

or down the screen to scroll through your applications. When you open and view the applications menu, you can touch **Home** icon  to return to the home screen.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience using your phone, add your favourite widgets on the home screen.

NOTE: **LG Home** and **Android Home** provide this function. To add an desired icon to your home screen:



- 1 On the home screen, touch the **Menu** key  and select **Add**.
- 2 On the **Add to Home screen** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.

Your Home screen


- 4 Select **Contacts with phone numbers** from the list and tap it.
- 5 You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.

TIP! To add an application icon to home screen, touch and hold an application you want to add to home screen.


To remove an application icon from the home screen:

- 1 Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon  .
- 2 Drag and drop an application icon to the **Trash** icon .


Getting back to a recently used application

- 1 Touch and hold the **Home** key  . The screen will show you a pop up with icons of

applications that you've used recently.

- 2 Touch an icon to open its application. Or, touch **Back** key  to return to the current application.

Notification drawer

The notification drawer runs across the top of your screen. Touch and hold, then slide the notification drawer down with your finger. Or, on the home screen, touch the **Menu** key  and select **Notifications**. Here, you can check Wi-Fi, Bluetooth, GPS status as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.



[Status bar]

Icon	Description
	No SIM card
	No signal
	Connected to a Wi-Fi network
	Wired headset
	Call forward
	Call hold
	Speakerphone is on
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning

Icon	Description
	Alarm is set
	New voicemail
	Airplane mode
	Ringer is silenced
	Vibrate mode
	No microSD card
	Battery fully charged
	Battery is charging
	Data in
	Data out
	Data in and out
	Phone is connected with PC via USB cable
	Downloading data
	Uploading data
	GPS is on

Your Home screen

Icon	Description
	Receiving location data from GPS
	2 more notifications not displayed
	Call in progress
	Data is syncing
	Download finished
	New Google Mail
	New Google talk message
	New message
	Song is playing
	Upcoming event

Onscreen keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & Entering text



Tap to swap between lowercase and uppercase. Tap to enter an uppercase letter. The next letter you type will be uppercase. Tap twice to turn on caps lock. The coloured circle on the button tells you if uppercase is locked on (green) or if it is just on for one character (orange).



Tap to enter a space.



Tap to turn on or off XT9 predictive mode.



Tap to view the settings menu. Choose from **Editor settings, Keypad types, Handwriting settings, Writing language, User dictionary** and **Input method**.



Tap to hide or show the onscreen keyboard.



Tap to delete the previous character.



Tap to switch to the numeric and symbol keyboard.



Tap to create a new line in the message field.

XT9 predictive mode




The onscreen keyboard has predictive text to help you type quickly and accurately. XT9 predictive mode uses a built-in dictionary to recognise words based on the key number sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.









123 Mode






This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Menu map

Icon	Description
	Touch to access the alarm clock menu directly.
	Touch to access browser.
	Touch to perform basic arithmetic calculations such as addition, subtraction, multiplication and division.
	To keep track of your appointments and creates meeting requests.
	Touch to open your camera viewfinder.
	Touch to open your contacts. You can also create new contacts and edit existing ones.
	Touch to bring up the touch dialling pad, which lets you make a call.
	Touch to access the dictionary menu.
	Touch to access the Email menu. You can check your received email and create new email.
	Touch to listen to the radio.

Icon	Description
	It helps you find the new ways to explore your city.
	To collect, organise and sort picture and video files of a memory card.
	Use Google's web-based email service on your phone.
	Use Googles' IM program and communicate with other people.
	Touch to choose your default Home setting.
	Touch to view a Java game and application you downloaded from Market.
	Layar Reality Browser, a beautiful fun augmented reality app that shows the things app that shows you the thing you can't see.
	Touch to access Google maps, you can search locations and directions.

Icon	Description
	Touch to access Android Market. You can access applications, games, search and my downloads folder.
	Touch to open media player.
	Touch to access the message menu. From here you can create a new SMS or MMS.
	Touch to enter the music menu directly.
	Allows you to browse your SD card, create directories, rename, copy, move, and delete files. It also acts as an extension to others application to display open and save dialogs.
	Touch to access Quickoffice.
	It checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.
	Touch to adjust general settings of your phone.

Icon	Description
	It is a tool to kill application running's.
	Touch to edit your video files.
	Touch to record voice memos or other audio files.
	It is the fastest way to access the 3 million articles of wikipedia and many other wikis on your phone.
	Use online video streaming service that allows you to review videos uploaded by others.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

Creating your Google account

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Tap **Googel Mail** and tap **Next > Create** to start the Google Mail set up wizard.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When you entering the text, you can move to the next text field by touching **Next** on the keyboard.

- 4 When you're finished to input name and username, tap **Next**. Your phone is communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing in your Google account

- 1 Enter your e-mail address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Google Mail and take advantages of Google services on your phone.

3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (It depends on your synchronisation settings.)

After sign in, you can use Google Mail, Google Calendar, Android Market and Google Map; download applications from Android Market; back up your settings to Google servers; and take advantage of other Google services on your phone.

IMPORTANT






- Some applications, such as Google Calendar, work only with the first Google account you add. If you plan to use more than one Google account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Google Mail, calendar events, and other information

 
from these applications and services on the web are synchronised with your phone. If you don't sign into a Google account during setup, you will be prompted to sign in or to create a Google account the first time you start an application that requires one, such as Google Mail or Android Market.

- If you want to use the backup feature to restore your settings to this phone from another phone that was running Android OS or later, you must sign into your Google account now, during setup. If you wait until after setup is complete, your settings will not be restored.
- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign into that account.

Calls

Making a call

- 1 On the home screen, press the **Send** key  and touch the **Phone** icon  to open the keyboard.
- 2 Enter the number on the keyboard. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch **End** or press the **End** key .



TIP! To enter “+” to make international calls, touch and hold down .


Calling your contacts


- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Contacts** to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.

- 3 In the list, touch the contact you want to call, then select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, press the **Send** key  to answer. You can also drag the **Answer** icon  to the right.




Press the **End** key  to reject an incoming call.


TIP! When the phone rings, touch and slide the **Silent** icon  to the left if you want to switch to silent mode.



Adjusting call volume

To adjust the volume during a call, use volume up & down key on the left side of the phone.

Making a second call


- 1 During your initial call, touch .
- 2 Dial the number, or search your contacts to select the number you want to call.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch  to toggle between calls.

NOTE: You can touch  to make a conference call.

- 6 To end active call, Press **End** . To end all calls at the same time, touch the **Menu** key  and select **End all calls**.


NOTE: You will be charged for each call you make.

Viewing your call logs

On the home screen, press the **Send** key  to view **Call log**.

View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, time, and duration of the call.

TIP! Touch the **Menu** key , then touch **Clear call log** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings**, and choose options that you want to adjust.

Calls

< Fixed Dialling Numbers >

Select **Fixed Dialling Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Set up your voicemail number.

Voicemail service – Allows you to select your carrier's voicemail service or another service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Excuse Messages – When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Call forwarding – You can configure how your calls are forwarded when you're on the phone, when you don't answer, and so on. Choose from **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**. Then enter the number to forward to.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

Call duration – View the duration of all calls including all, dialed, received calls and the last call.

Additional settings – This lets you change the following settings:

Caller ID : Choose whether to display your number on an outgoing call.

Call waiting : If call waiting is activated, the handset will notify you of an incoming call while you are on a call. (Depends on your network provider.)

Select line : Allows to select line.


Contacts


You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Contacts** to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.


Adding a new contact

- 1 On the home screen, press the **Send** key  and touch **Phone**  to open the keypad. Enter the new contact's number, then touch the **Menu** key , touch **Add to contacts** and then **Create new contact**.

- 2 If you want to add a picture to the new contact, touch . You can use a saved picture or take a new one.
- 3 Select the contact type and choose from **Phone**, **SIM** and your Google account.
- 4 Touch a text field to open the touch keyboard, and enter a new contact's name.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **Done** to save the contact.

Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 On the list of your contact, touch the **Menu** key  and select **More > Speed Dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

- 3 Your contacts will open. Select the contact you want to assign to that number by touching their phone number once.
- NOTE:** To remove the speed dial contact from the list, touch and hold the assigned contact. When the pop up screen is shown, tap **Remove** then select **OK**.


Favourite contacts

You can classify frequently called contacts as favourites.

To add a contact to your favourites

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

To remove a contact from your favourites list

- 1 On the home screen, touch  to open your contacts.

- 2 Touch the **Favorites** tab and choose a contact to view its details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.


Messaging/E-mail


Messaging


Your GT540 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Messaging** and touch **New message** to open a blank message.
- 2 Enter a contact name in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient or continue entering the contact name. You can add multiple contacts.
NOTE: You will be charged for a text message for every person you send the message to.
- 3 Touch **Type to compose** to start entering your message.


- 4 Touch the **Menu** key  to open the options menu. Choose from **Add subject**, **Attach**, **Send**, **Insert smiley**, **Discard**, and **All threads**.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

Changing your message settings

Your GT540 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen, then touch the **Menu** key . Tap **Settings**.

< Storage settings >

Delete old messages – Touch to place a checkmark and allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia message limit** is reached.

Uncheck to keep all messages.

Text message limit – Touch to set the number of messages to save per thread of text messages.

Multimedia message limit – Touch to set the number of messages to save per thread of multimedia messages.

<Text message (SMS) settings>

Delivery reports – Activate to receive confirmation that your messages have been delivered.

Manage SIM card messages – Manage the messages stored on your SIM card.

Validity period – Choose how long your messages are stored in the message centre.

Text message centre – Enter the details of your message centre.

<Multimedia message (MMS) settings>

Delivery report – Choose to request a delivery report.

Delivery report allow – Choose to allow the sending of delivery confirmation message.

Read reports – Choose to request a read report for each message you send.

Read report allow – Choose to allow the sending of read confirmation message.

Auto-retrieve – Activate to retrieve messages automatically.

Messaging/E-mail

Roaming auto-retrieve –

Activate to retrieve messages while roaming.

Set priority – Choose the priority level of your MMS.

Validity period – Choose how long your message is stored in the message centre.

Creation mode

Restricted: In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.

Warning: In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

Free: In this mode, the MMS Client allows the user to add any content to the message.

Receive advertisement – Allows receiving advertisement messages.

< Service message >

Choose whether to receive or block service messages.

< Notification settings >

Activate to display message notifications in the status bar. Also select a ringtone and activate vibrate to alert you of new messages.

< Info. Service settings >

Choose whether to receive, block, or view or edit channels to receive information service messages (cell broadcast messages). Also choose the languages of information service messages.

Setting up your email

Keep in touch while on the move by using your GT540 to send emails. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 On the home screen, touch **Applications** tab and tap **Email** to view the mail boxes

for each email account. Or, you can also touch **Email** on the home screen to access directly.

- 2 If the email account is not set up, start the email setup wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

Sending an email using your new account

- 1 Touch **Email** icon on the home screen, and then touch **Compose** icon to open a new blank message.
- 2 Enter the recipient's address, then write your message. You can also attach images, videos, audio files, and various document file formats.
- 3 Touch **Send** icon to send your email.

TIP! During an active Wi-Fi connection, emails are sent and received using Wi-Fi.

Retrieving your email


You can automatically or manually check your account for new email.

To check manually:

- 1 Touch **Email** icon on the home screen.
- 2 Then touch the account you want to use.
- 3 Choose **Refresh** and your GT540 will then connect to your email account and retrieve your new messages.

Changing your email account's settings

You can change your email settings based on your own preferences.

- 1 Touch **Email** icon on the home screen, and tap the desired account.
- 2 Touch the **Menu** key  to open the options menu, and tap **Settings**.
- 3 You can adjust the following options: **Account Setup**, **General Settings**, **Download Options**, and **Spam message**.

Social Networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status and view your friends' status updates real-time.

If you don't have an account, you can visit their sites to set it up.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Choose any SNS application you want to use.
- 3 Enter your e-mail address and password that you set up on your community, then tap **Log in**.
- 4 Wait while your details are checked with your community.

- 5 If you tap your community, you can see the current status of your social community.

TIP! If you add a social networking widget on your home screen, the widget will show your status when your phone updates from the network.

You can also access the social community directly by touching up the widget.

Viewing and updating your status

- 1 Choose a community you want to access.
- 2 You can see the current status of your social community.
- 3 You can update your current status with comments or uploading photos.

NOTE: This is dependent on network services.

TIP! You can use information about friends only in SNS or sync all data to Contacts.

Removing accounts on your phone

- 1 Choose **Applications > Settings > Accounts & sync.**
- 2 Choose an account you want to delete, then touch **Remove account.**

Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.



Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Taking a photo

Video mode – Slide down this icon to switch to video mode.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Image size – Touch to set the size (in pixels) of the picture you take. Select a pixel value from the numerical options: 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240).

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to save the picture you had taken.

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select the focus mode as following options;

AF (Auto Focus) – Set the camera to focus automatically.

Macro – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

Face tracking – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

NOTE: Zoom is not supported in Face tracking mode.

MF (Manual Focus) – Set the camera to focus manually.

Taking a quick photo

- 1 Press and hold the camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Press the capture button lightly, and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button and hold it down.

Camera

Once you've taken the photo

Your captured photo will appear on the screen.


Share Touch to share your photo as **Bluetooth**, **Email**, **Facebook for LG**, **Google Mail**, **Messaging**, **Picasa** or **Twitter for LG**.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Set as Touch to use the image as **Contact icon** or **Wallpaper**.


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.


 Touch to view a gallery of your saved photos.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to return to the previous menu.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.


You can change the camera setting by scrolling the wheel. After selecting the option, touch the **Back** key .

Image quality – Choose from **Super Fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

White balance – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.


Shot mode – Choose from **Normal**, **Continuous shot**, **Beauty shot**, **Frame shot**, **Panorama shot**, **Art shot**, and **Smile shot**.

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

ISO – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **100**, **200**, and **400**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

Color effect – Choose a colour tone for your new photo.

Once you've made your selection, use the **Back** key  to close the colour tone menu. You are then ready to take a picture.

NOTE: You can change a colour picture to black and white or sepia, but you cannot change a black-and-white or sepia picture to colour.

Captured image – Choose from **Hold**, **On**, and **Off**. If you select **Hold**, after taken picture screen is shown for 1 second, and it goes to the preview right away.

Grid screen – Choose from **Off**, **2x2**, or **3x3**.

Shutter sound – Select one of the four shutter sounds.

GEO-Tagging – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.

Camera

Hide icons – Choose the camera setting icons to hide manually or automatically.


Blink detection – Turn this on to display a red box around the face that was blinking in the preview image screen.

Reset – Restore all camera default settings.

TIP! When you exit the camera, all settings will return to their defaults, except image size and image quality. Any nondefault settings must be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

Video camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards “-” for a lower brightness Video, or towards “+” for a higher brightness Video.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys. Before starting record a video, you can use the zoom function. You can not control the zoom function during recording.



Gallery – This enables you to access your saved photos & Videos from within the video camera mode. Simply touch, and your gallery will appear on the screen.

Camera mode – Slide up this icon to switch to camera mode.

Start recording



Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Video size – Touch to set the size (in pixels) of the video you record. Choose your video image size from VGA (640x480), QVGA (320x240) or QCIF (176x144).

Scene mode – Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Sports, Sunset** and **Night**.

Video camera

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Then slide the capture button down position, the icon will change to .
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 7 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.


Share Touch to share your video as **Bluetooth**, **Email**, **Google Mail**, **Messaging** or **YouTube**.


NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Play Touch to play the video.


Rename Touch to edit the name of the selected video.

Edit Touch to enter editing mode on this video.


 Touch to access the media player and view the saved videos.


 Touch to delete the video you just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video right away. Your current video will be saved.

 Touch to return to the previous menu.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera setting

by scrolling the wheel. After selecting the option, touch the **Back** key .

Color effect – Choose a colour tone to use for your new view.

White balance – The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Duration – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

TIP! When choosing MMS duration, the video quality will be set as QCIF and you can shoot longer videos.

Audio recording – Choose **Mute** to record a video without sound.


Hide icons – Select whether to hide the icons in the video camera menu automatically or manually.

Recorded video – Choose from **Hold**, **On**, and **Off**. If you select **Hold**, after recorded video screen is shown for 1 second, and it goes to the preview right away.

Reset – Reset all the video camera settings.


TIP! You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

Your photos and videos

Viewing your photos and videos


- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.


Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the **Menu** key .
- 3 Tap on more>set as>then select wallpaper>select the region in the photo which you

want to set>>then press “√” mark below the image to set as wallpaper.

Editing your photos

You can do lots of great things to your photos to change them, add to them, or liven them up.

- 1 Open the photo you want to edit, then touch the **Menu** key .
- 2 Touch **Edit** to change your photo:



Rotate & Flip – Rotate or flip your photo for fun or a better view.



Crop – Crop your photo. Choose a square or circular crop area, then move your finger across the screen to select the area.



Tuning – This helps you adjust a picture using automatic colour, brightness, and so on.



Effect – Touch to apply the effect options to a photo.



Frame – Add frames to the photo.



Text – Add text to a picture.



Clipart – Add clipart to a photo.



Drawpad – Draw on your photo, freehand. Select the line thickness from the four options, then choose the colour you want.



Stamp – Decorate your photo with stamps. Choose from the different stamps, then touch your photo where you want to place them.



Resize – Resize your photo.








Save the changes you made to the photos.




Delete your photo edits.

Rotating your photo



- 1 On the editing screen, touch .
- 2  Rotate 90° counterclockwise
- 3  Rotate 90° clockwise
- 3  Flip vertically
- 4  Flip horizontally

Adding text to a photo


- 1 On the editing screen, touch .
- 2 Select the colour of the text, then choose one of the bubble shapes.
- 3 Enter your text using the keypad, then touch **OK**.
- 4 Move the text by touching it and sliding it to where you want it.

Your photos and videos


Adding an effect to a photo









- 1 On the editing screen, touch .
- 2 You can apply any of the various options to the photo.
- 3 To undo an effect, simply touch .

Cropping a photo





- 1 On the editing screen, touch .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop. Move the selected area by dragging.
- 4 When you are finished with your selection, touch Done icon in the right bottom of the image.

Tuning your photo

- 1 On the editing screen, touch . Use the tuning toolbar to adjust your photo's tuning as you like.




- 2  Choose to adjust the tuning settings automatically.
- 3  Choose to compare before and after tuning.
- 4  Adjust the brightness and contrast of the photo.
- 5  Adjust highlights and shadows.
- 6  Balance your photo's colour.
- 7  Adjust the saturation of your photo.
- 8  Adjust your photo's sharpness.
- 9  Denoise.

Adding frames




- 1 On the editing screen, touch .
- 2 Touch  or  to choose a frame.
- 3 Touch  to check the whole frame.

Adding clipart




- 1 Touch  on the editing screen.

- 2 Touch , then select clipart.
- 3 Adjust the size of the clipart.
- 4 Rotate clipart using  and .


Using the drawpad

- 1 Touch  on the editing screen.
- 2 Touch  to select the shape.
- 3 Also, set the colour and thickness.
- 4 You can delete the drawing you added using .

Adding stamps

- 1 Touch  on the editing screen.
- 2 Touch  to see which stamps are available and to select the stamp.
- 3 Touch the screen where you want to add the stamp to the photo.
- 4 Adjust the colour using .




Resizing

- 1 Touch  on the editing screen.
- 2 Scroll the bar to resize the photo.



Editing your videos

The video editing features are available for the MPEG-4 format.

Trimming the length of the video

- 1 Select **Edit**, then choose .
- 2 Touch . Then set the new start and end points. Touch **OK** and select **Next Icon**.
- 3 Touch  to return to the gallery and discard the changes.



Selecting transition style

- 1 Select a transition style, then touch  to preview it.
- 2 Touch , then drag the bar to adjust the duration time

Your photos and videos


- 3 Touch **OK** to save the transition. Touch **Apply** to apply the currently selected transition. Choose **Apply To All** to apply the currently selected transition to all video files in the storyboard.

Adding subtitles

- 1 Open the video you want to edit.
- 2 Select **Edit**, then select  to add subtitles to the video.
- 3 Touch , then pause playback to set the start point for text appearance.
- 4 Touch **Start**, then choose the text style. Enter your text using the keypad, then select **Done**.
- 5 Touch the area of the screen where you want the text to appear, then touch **OK**.
- 6 Select right arrow icon then save. This file will be saved as new file.



- 7 Repeat these steps to add more text.

Adding edit effects

- 1 Open the video you want to edit.
- 2 Select **Edit**, then select .
- 3 Select an effect to add to the photo.

Grabbing a frame

Capture a picture from the video.

- 1 Open the video you want to edit.
- 2 Select **Edit**, then and select .
- 3 Play the video, then touch  to capture the screen you want while the video is playing.
- 4 The frame is saved to the phone as a still image file.

Adding dubbing to your video

- 1 Open the video you want to edit.
- 2 Select **Edit**, then choose .
- 3 Touch . The **My Sounds** folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be deleted.
- 5 select right arrow icon then save. This file will be saved as new file.
- 6 Or you can record a new file and insert live dubbing by touching .
- 7 Touch OK to save the current dubbing.

Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Applications** tab, then select **Gallery**. You can open a list of catalogue bars that store all your multimedia files.

NOTE: Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos.

There are six catalogue bars as shown below.

All  : Displays all your pictures and videos.

Favorite  : If you touch and hold a photo or video, the option screen will appear allowing you to tag the photo as a favourite. This **Favorite** bar will show your favourite photos and videos.

Camera  : Displays all your photos.

Image  : Displays all your images.

Video  : Displays all your videos.

Tag  : Like the **Favorite** bar, you can tag photos. This bar displays your tagged photos and videos.

Timeline view

The GT540 **Gallery** provides a timeline view of your photos and videos. On the left side of the screen, the date you took your photos will be displayed, from oldest to newest. If you select a specific date, all the photos you took on that day will be grouped over a white background.

My images options menu

Select a photo, then touch and hold to see the available options.

Sending a photo

- 1 To send a photo, touch and hold the photo you want.

- 2 Select **Share**. Choose from **Bluetooth, Email, Facebook for LG, Google Mail, Messaging, Picasa** or **Twitter for LG**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your photo will be attached to a message, then you write and send the message normally.

TIP! If you have a SNS account and set it up on your phone, you can share your photo to SNS community.

Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Select **Share**. Choose from **Bluetooth, Email, Google Mail, Messaging**, or **YouTube**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your video will be attached to a message, then you write and send the message normally.

Using an image

Choose images to use as wallpaper or identify callers.

- 1 Touch and hold a photo, then select **Set as**.
- 2 Choose from **Contact icon** or **Wallpaper**.

Creating a slideshow

If you want to view all the images on your phone, you can create a slideshow so you don't have to open and close each image.

- 1 Touch and hold a photo, then select **Slideshow**.

Checking your photo

You can view a photo's detailed information, such as **Name, Date, Time, Resolution, Size, Type**, and **Tag**.

- 1 Touch and hold a photo, then select **Detail**.

Multimedia

Media Player

The **Media Player** folder displays a list of videos you downloaded to or recorded on your phone.

Watching a video

- 1 Select **Media Player** on the **Applications** tab.
- 2 Touch **Video** and select a video to play.







TIP! The GT540 supports DivX video playback to ensure greater content availability.

Touch **Music** and select a music to play.


Video editor


- 1 On the home screen, touch **Applications** tab and select **Video editor** .

Storyboard


- 1  **Import Files** – Add media files to the storyboard. You can add up to 32 media files.
- 2  **Set BGM** – Add background music to the storyboard, or change the sound.
- 3  **Preview** – Preview the video file you created.
- 4  **Save** – Save the video file you created.
- 5  **Add Text** – Add a text frame into storyboard.
- 6  **Clip Manager** – Manage the added media files. If no media files were added, the button is disabled.

You must touch  first to edit the video.

 – Touch to select all the files, but the maximum is 32 files.


 – Touch to deselect all the files.


25/32 – This shows the selected file number.

 Touch to go to the next step.


Music movie


1 Flip left and right to check the various styles. For **Music movie**, you can select only photos.



 – Return to the **Video editor** screen.

 – Display the style name and description.

 – Preview the style.

 – Touch to select photos.

2 After you select photos, touch  to proceed to the next step.

3 Touch  to select all the photos, then touch .

4 Select the music, then set it as the background music.


5 Add movie title using the keypad, then save it.


6 Touch  to play the complete video file.

7 Touch  to save the video file you created.

Auto cut

There are three style templates: **Portrait**, **Landscape**, and **Motion object**.

1 Touch , then select a video. Go to the next step.

2 Touch  to preview the video file.

3 Touch  to save the file.

Playing a game

1 You can download a range of games from the Android Market.

2 To Launch tap on the a game or an application.

NOTE: Additional charges may apply when using this service to download games or applications that are not free.

Multimedia

NOTE: Java game and application installation are only possible through the Web.

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the GT540 to a PC using a USB cable.
- 2 If you didn't install LG Android Platform Driver on your PC, you need to change settings manually. Choose **Settings > SD card & phone storage > activate Mass storage only**.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage contents on your PC and transfer the files.

NOTE: You need to install your microSD card first. Without an microSD card, you cannot use USB mass storage.

NOTE: If you installed LG Android Platform Driver, you will see pop up with 'Turn on USB storage' immediately.

NOTE: After using USB mass storage function, if you want to synchronise your phone with your PC using the LG PC suite, you need to touch **Settings > SD card & phone storage**, then touch the checkmark to turn off **Mass storage only** mode.

Music

Your GT540 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Music**.





Artists – Browse your music collection by artist.

Albums – Browse your music collection by album.

Songs – Contains all the songs you have on your phone.

Playlists – Contains the playlists you created.

Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  two times to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Delete**, and **Search** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Using the radio

Your GT540 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: You must attach your headphones to listen to the radio. Insert them into the headphone jack.


Multimedia

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning in.

You can store up to 48 channels on your phone.

To tune in automatically

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the **Menu** key .
- 3 Touch **Auto scan**, then touch **OK**.

NOTE: You can also manually tune in to a station using the wheel displayed next to the radio frequency.

Resetting channels

- 1 On the home screen, touch **Applications** tab and select **FM radio**.

- 2 Choose **Reset channel** to reset the current channel, or choose **Reset all channels** to reset all the channels.

Listening to the radio

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.

TIP! To improve radio reception, extend the headset cord, which functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronise with your GT540.



Google Maps


Check your current location and traffic and receive directions to your destination. The GT540 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.


Touch **Menu**  key to use options:

Search  – Enter the place you are looking for.


Directions  – This will let you find out the route of your entered place. Touch  to input the data. Choose from Contacts or Point on Map or My current location.

Layers  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude then you will see the location of your contacts from Google account.

My Location  – Point your current location on the map.

Join Latitude  – Share your location with friends you choose and Google.

More  – Clear map or find Starred items and more.

NOTE: While viewing **Street View** for a location, touch the **Menu** key  then touch **Compass Mode** to turn compass mode on.




Android Market

Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the GT540 menu. You can check downloaded application by tapping Downloads tab.


Google applications


You can check other's comment regarding an application or you can post your comments.

- 1 Select a category from Apps and Games to browse its contents. It will show you Top paid, Top free and Just in.
- 2 Choose an application to install.

NOTE: When you want to finish the game, use the **Home**  or **Back** key . You will return to the home screen. Or use the **Menu** key  of the game.

Google Mail

Google Mail is configured when you first set up your phone. Depending on your synchronisation settings, Google Mail on your phone is automatically synchronised with your Google Mail account on the web. The inbox conversations list is your default Google Mail view. Touch the **Menu** key , then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google Mail account on the web. With


Menu key , you can compose an email, **Add account**, **Go to labels**, **Search** and **More**.


Google Talk


Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.


Press the **Menu** key  and check available options.


 **All friends** – Join all friends to communicate.

 **Add friend** – Send invitation to chat.

 **Search** – It search any chat that contains your entered word or sentences.

Sign Out – If you want to sign out from chat then select menu key  then tap on more and select signout.

 **Settings** – Adjust indicator or notification. etc.

 **More** – From here, you can find options like close all chats, change settings, sign out and terms and policy.

Additional Applications

 
NOTE: Some of the contents may not apply to your phone depending on your phone's software or your service provider. Some of the Applications are available in memory card . Please Install those Applications from memory card for use.

LG app advisor

- This application allows you to view lists of android application which are recommended to you by LG, LG regularly updates these applications that are specially selected for you they are use full worth while and fun to use, you can also browse old list of recommended applications as well as for the different countries.

• How to Connect

1. Click On App Advisor.
2. Select the application to download.

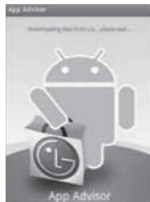

Note: Listed application are based on LG recommendations and best suited for phone.

Taskiller

- It is a tool to kill application running's.
 - Click to select the application to kill
 - Long press to activate pop-up menu
 - Widget support
- **How to Connect**
 1. Click on Taskiller.
 2. Select the application to kill.

 


Additional Applications

Note: Some application need to be run at background will appears with every launch of Taskiller.

PicSay

- This application provides power full photo editing, where pictures and words balloons, titles, stickers and with a good set of effects etc can be altered or added to the image selected which is fun intuitive and easy to use interface.



• How to Connect

1. Click on PicSay.
2. Select the image which you want to Add/Change effects.
3. Select Settings and choose relevant option you want to apply.

Foursquare

- Foursquare helps you find the new ways to explore your city. See where your friends are and learn about the places they frequent and unlock rewards as you travel.

 


• How to Connect

1. Select the Foursquare application.
2. Surf the places and know where are your friends and there frequent places.

OI file Manager

- File manager allows you to browse your SD card, Create directories, Rename, copy, move, and delete files. It also acts as an extension to others application to display Open and save dialogs.

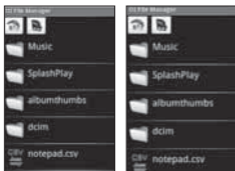

• How to Connect

1. Select the OI file manager application.
2. Start Exploring the SD card Stuff.

Layar

- Layar Reality Browser, a beautiful fun augmented reality app that shows the things app that shows you the thing you can't see. It augments digital objects on top of reality, as can

be seen through the mobile phone camera. When opening the app, you'll be immediately presented with a list of spots nearby, have a go and experience your self.



• How to Connect

1. Select the Layar application.
2. Start Exploring the Near by places.

Wapedia

- Wapedia is the fastest way to access the 3 million articles of wikipedia and many other wikis on your phone.
- **Feature includes**
 - Very fast, even on 2G networks
 - Featured Wikipedia content such as news
 - Alternative wikis

Additional Applications

- Search widgets
- 150 wikipedia languages

• How to Connect

1. Select the Wapedia application.
2. Start Exploring the Information.

Wikitude

- Wikitude World browser shows real-time information in augmented reality displayed on an improved user interface and enrich with an enhanced search engine.

 


• How to Connect

1. Select the Wapedia application.
2. Start exploring the near by places and information.

Shop Savvy

- The original barcode scanner on Android. Aim the camera at any barcode. Wait for the beep and shopsavvy will provide you with a list of online and local prices.

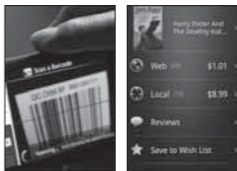


• How to Connect

1. Select the ShopSavvy application.
2. Scan the barcode.
3. Search the product online.

Qik

 - Qik lets you recording a video and sharing with your friends, family, favorite list, social networks and world- LIVE!
- This include video messaging, where you can send video shots with the phone native camera.



qik



• How to Connect

1. Select the QIK application.
2. Create or Login to your account.
3. Start shooting the videos and share it with your friends.

Shazam

- Create music moments. With shazam you can identify music tracks, Store them and buy them plus you can learn more about the artist and connect to

their Myspace page. Start your music Journey now.



• How to Connect

1. Select the Shazam application.
2. Select Tag Now and place your phone near the Music Source.
3. Shazam will find the song for you and you can buy the song from web.

Ndrive

- N Drive is a turn by turn navigation software that converts your android phone in to a full on board GPS solution with Spoken voice instructions.
- Info Lanes, Sign Post
- Store: voice, maps alerts and upgrades

Additional Applications

- Find new poi Online
- Onboard maps

 


Dictionary

- Search a word for:
 - Definitions
 - Related words
 - Example sentences
- Phrases Includes:
 - Search history in settings

CardioTrainer

Cardio Trainer is an application, that let's you track and record all of your fitness activity. It tracks steps taken, miles traveled, pace, and calories burned.

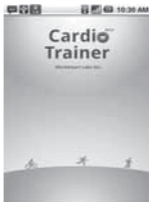



Movie Finder


Movie Finder Provides the movie running near your location along with the show time and trailer of the movie.




Utilities

Setting your alarm

- 1 On the home screen, touch **Applications** tab and select **Clock**. The clock application opens with the date and time displayed on your home screen.
- 2 If you want to add a new alarm, touch the alarm icon  at the bottom of the **Clock** screen.
Touch an existing alarm to change its time and other attributes or touch **Add alarm** to add a new one.
- 3 Touch  to turn on the alarm, and set the time you want the alarm to sound. After you set the time, the GT540 will let you know how much time is left before the alarm sounds.
- 4 Set **Repeat**, **Ringtone** or **Vibrate** and add **Label** to name the alarm. Touch **Done**.

NOTE: To change alarm settings, on the **Clock** screen, touch the **Menu** key , and touch **Settings**.

Using your calculator

- 1 On the home screen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.
- 4 For more complex calculations, touch the **Menu** key , touch the **Advanced panel**, then choose **sin**, **cos**, **tan**, **log**, and so on.


Adding an event to your calendar

- 1 On the home screen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a Google account to use Calendar.

Utilities

- 3 Select the date you want to add an event to.
- 4 Touch the **Menu** key , then touch **New event**.
- 5 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin. Enter the time and date the event finishes in the lower date and time boxes.
- 6 Also, touch **Where**, then enter the location.
- 7 If you would like to add a note to your event, touch **Description** and enter the details.
- 8 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 9 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.


Changing your calendar view

- 1 On the home screen, touch **Applications** tab and select **Calendar**. Touch the **Menu** key .
- 2 Select the calendar view for a particular day, week, or month.

Quickoffice

Quickoffice allows you to read documents, but the edit function is not available. PDF, Text, Microsoft Word/Excel/PowerPoint files are supported.



- 1 On the home screen, touch **Applications** tab and select **Quickoffice**.
- 2 Choose **Memory card**. You can see the files and folder list. If you choose **Recent documents**, files you recently viewed will be displayed.

- 3 Choose a file, then touch the **Menu** key  to view the available options.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 On the home screen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch the **Menu** key  and select **Set as** to set as the **Phone ringtone** or **Notification ringtone**.

NOTE: Touch **Go to list** to access your album. You can listen to the saved recording.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching the **Menu** key  and **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Google Mail** and **Messaging**. When you select **Email**, **Google Mail** and **Messaging**, the voice recording will be added to the message that you write and send it normally.

The Web

Browser


Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.



Accessing the web

- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 You will move to the website.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options

Touch the **Menu** key  to view options.

-  **New window** – Open a new window.
-  **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.

 **Window** – Show all your open windows.


 **Refresh** – Touch to refresh the web page.

 **More**

- **Add bookmark** – Set the current web page as a bookmark.
- **Find on page** – Marks all the letters you enter.
- **Select text** – Touch and select the lines you want to copy. You can paste it to any input box.
- **Page info** – Show page information.
- **Share page** – Send page by email, messaging or you social network community.
- **Downloads** – Show download history.
- **Setting** – Set browser settings.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 Touch the **Menu** key  then select **More > Bookmarks**.
A list of your bookmarks will appear on the screen.
- 3 Select **Add Bookmarks**, then enter a name for the bookmark followed by its URL.
- 4 Touch **OK**. Your bookmark will now appear in the bookmark list.
- 5 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

Changing the web browser settings

Touch the **Menu** key  then select **More > Settings**.

You can change the page layout (e.g., text size, text encoding), change the home page, manage cache, cookie, and security settings, and so on.

Settings


On the home screen, touch **Applications** tab then scroll and touch **Settings**.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Wi-Fi – Touch to checkmark: Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key  and touch **Advanced**.

Bluetooth – Touch to checkmark: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable, scan for other devices. Or, check a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

Mobile network – Turn on mobile network.

Mobile network settings – Set options for data roaming, network mode & operators, access point names (APNs), and so on.

Sound & display

< **Sound settings** >

Silent mode – Allows you to silence all sounds (including call and notification ringtones) except the audio from music, videos, and any alarms you have set. (You must silence media and alarms in their own applications.)

Ringer volume – Allows you to set the incoming call and notification volume. If you uncheck the option to use the same volume for both calls and notifications, you can set both volumes separately.

Media volume – Allows you to set the volume for music and videos.

Phone ringtone – Allows you to set your default incoming call ringtone.

Phone vibrate – Allows you to set your phone to vibrate when you receive an incoming call, independent of your ringtone or volume settings.

Notification ringtone – Allows you to set your default notification ringtone.

Audible touch tones – Allows you to set the phone to play tones when using the dial keypad to dial numbers.

Audible selection – Allows you to set your phone to play a sound when you touch buttons, icons, and other onscreen items that react to your touch.

Haptic feedback – Allows you to set your phone to vibrate briefly when you touch the **Menu** key, **Back** key, and perform other actions.

SD card notifications – Allows you to set your phone to play a sound when you receive microSD card notifications.

< Display settings >

Orientation – Allows you to set the orientation to automatically switch to landscape mode or portrait mode when you turn the phone sideways or upright.

Animation – Allows you to set animated transitions when navigating from screen to screen.

Brightness – Adjust the brightness of the screen.

Screen timeout – Allows you to adjust the delay time before the screen automatically turns off. For the best battery performance, use the shortest convenient timeout.

Settings

< Touch settings >

Touch calibration – Reset your screen for ease of use.

Location & security

< My Location >

Use wireless networks – If you check **Use wireless networks**, your phone will determine your approximate location by using Wi-Fi and mobile networks.

Use GPS Satellites – If you check **Use GPS satellites**, your phone will determine your location to street-level accuracy.

< Screen unlock pattern >

Set unlock pattern – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set PIN or Password instead of Pattern or leave it as None.

Require pattern – Uncheck to stop requiring an unlock pattern to unlock your screen. You must draw your current pattern when you uncheck this option.

Use visible pattern— Allows you to set the pattern to be visible when unlocking your phone.

Use tactile feedback – Allows you to set your phone to vibrate briefly as you touch each dot when you draw an unlock pattern.

To lock your screen by using the Pattern Lock

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You're prompted to draw and redraw your own pattern.
The next time you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

< SIM card lock >

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

< Passwords >

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

< Credential storage >

Use secure credentials – Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

Install from SD card – Allows you to install encrypted certificates from a microSD card.

Set password – Allows you to set or change the password for your secure credential storage. Your password must have at least 8 characters.

Clear storage – Deletes all secure certificates and related credentials and erases the secure storage's own password.

Applications

Unknown sources – Permits installation of applications that you obtain from websites, email, or other locations other than Android Market.

WARNING

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it is using.

Development – Allows you to set options for application development, such as **USB debugging**, **Stay awake**, and **Allow mock locations**.

Settings

Accounts & sync

< General sync settings >

Background data – Permits applications to synchronise data in the background, whether or not you are actively working in them. Unchecking this setting can save battery power and lowers (but does not eliminate) data use.

Auto-sync – Permits applications to synchronise, send, and receive data on their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to the phone.

If you touch an account in this screen, its account screen opens.

Privacy

< Location >

Use My Location – Allows you to include your position when using Google search and other Google services. When you checkmark this option, you're asked whether you consent to allowing Google to use your location when providing these services.

< Personal data >

Factory data reset – Erases all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application data and settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to reenter the same kind of information as when you first started Android.

SD card & phone storage

< **USB connection mode** >

Mass storage only – Your phone can be used as a mass storage device if you have a memory card inserted. You can set the **Mass storage only** as a default setting of USB connection mode.

< **SD Card** >

Check total space and available space. Touch **Unmount SD card** for safe removal. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you can format it.

< **Internal phone storage** >

Check the **Available space**. Lists the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

Search

You use the **Search** settings to configure Google search, Quick search box, and the data on the phone that you want to include in searches.

Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

Accessibility

You use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

Settings

Text-to-speech

You use the Text-to-speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

NOTE: If you don't have speech synthesiser data installed, only the **Install voice data** setting is available.

Date & time

Use **Date & time** settings to set your references for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About phone

View legal information, and check phone status and software version.

Wi-Fi

With Wi-Fi, you can use highspeed Internet access within the coverage of the wireless access point (AP).

You can enjoy wireless Internet with Wi-Fi, without extra charges.

NOTE:

- If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.
- If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)
- The GT540 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You

can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.
- 2 AP (Access Point) Search
 - Searches for which AP it can connect to.
- 3 AP Connect
 - Connects to the desired AP from the AP search list.
 - If the AP is security type WEP or WPA/WPA2-PSK, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently used AP or hidden AP)
 - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.

Wi-Fi

- 2) Saving a frequently used AP as a profile makes it easier to enter the security key when connecting to an AP with that security type.
 - 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2 Description of each field in the Wi-Fi profile.
- 1) Network Name: SSID (ID)
 - 2) Security Type: WEP and WPA/WPA2-PSK support.
 - 3) Security Key: Saves the security key.
 - 4) IP/DNS Setting: This allows you to set to Automatic or Static, depending on whether the AP supports DHCP.
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.

- 3 How to save the Wi-Fi profile
 - 1) Select the Add Wi-Fi Network menu at the bottom of Wi-Fi Networks, then enter the SSID and Security Type.
 - 2) After connecting to an AP with this security type, the profile will be saved automatically.

3. How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your GT540 into the router.

You can find the MAC address in the following user interface:

Touch **Application > Settings > Wireless & networks > Wi-Fi settings**, and touch the **Menu** key then select **Advanced > MAC Address**.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

DivX Certified to play DivX® video up to 320 x 240

Accessories

These accessories are available for use with the GT540.
(Items described below may be optional.)

Charger



Data cable

Connect your GT540 and PC.



Battery



User Guide

Learn more about your GT540.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



LG Electronics

Supplier Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GT540

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2006

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Heung Lee / Director

30. Aug. 2010

LG Electronics Logistics and Service B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Message	Possible causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid Charge limit reached	Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
Wrong charger	Only use original LG accessories.	
Battery defective	Replace battery.	

Troubleshooting

Message	Possible causes	Possible Corrective Measures
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via WEB site.

LG Mobile



WARRANTY CARD

This LG handset and charger comes with a 12-month warranty from date of purchase or 15 months from manufacturing date of corresponding IMEI No. Of the unit whichever is earlier, against defect in material or workmanship. In case of a defect, LG Electronics India Pvt. Ltd. undertakes to get the set repaired free of charge through its authorised service centre (ASC) or service dealer subject to following conditions:

Terms and Conditions

1. This warranty is applicable to the first purchase and in no case it can be transferred or extended.
2. Repair of this product will be carried out on a carry in basis to the nearest ASC.
3. While the company will make every effort to carry out repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised ASC/ service dealer reserves the right to retain any parts of the component/s replaced at its discretion. In the event of a defect being noticed in the equipment during the warranty period.
5. This warranty entitles the purchaser to free of cost repairs of the unit within warranty period and does not entitle for replacement or refund of entire unit. Claims, if any, to this warranty shall in no case exceed the purchase price of the unit.
6. In case of any software upgradation of the phone, no warranty is provided on phone memory or phone book.
7. The warranty is void in case the serial no./ IMEI no. is tampered / disfigured or details in the warranty card are not properly filled up at the time of purchase.
8. This warranty is not valid for damages resulting due to negligence, mishandling, improper use, tampering, breakage, soaking, fire, unauthorised repair and failure due to network upgrades.
9. Batteries are covered under warranty for a period of 6 months from date of purchase or 9 months from date of corresponding IMEI no. of the unit whichever is earlier
10. Warranty does not cover accessories external to the equipment supplied by the dealer.
11. The Delhi / New Delhi courts shall have the jurisdiction to try any dispute and /or suits related to or arising out of this agreement.

Customer Information Center/ Call Center Number

For any query related to the after sales service and customer support please contact us at the numbers listed below.



BRANCH ADDRESSES

S. No.	Branch	Branch Office Address	STD Code	Phone No.
1	Ahmedabad	LGEIL, 233-234, Platinum Plaza, Judges Bungalow Road, Bodakdev Road, Ahmedabad - 51	079	40040013 / 14
2	Asansol	LGEIL, Block-E, 1st Floor, P C Chatterjee Market, Rambandhu Tala, GT Road (E) Asansol - 713303	0341	3292009 / 3292010
3	Aurangabad	LGEIL, 302 CIDCO No 3, Opp Hotel Ramgiri, Jalna Road, Aurangabad - 431003	0240	2474055 / 32095436 / 32095437 / 32095438
4	Bangalore	LGEIL, No. 94, 2nd Floor, Sri Venkateswara Complex, Opp. IBP Petrol Bunk, 80th Road, 6th Block, Koramangala - Bangalore - 560095	080	41145145 / 41144750 / 41144751 / 30810754 / 30810753
5	Bhopal	13 A Vignes Warehousing Corporation, Sector-G Govindpura Industrial Area J K Road Bhopal	0755	4062900 / 3092938 / 3959804
6	Bhubaneswar	LGEIL, Plot No. 02, 1st Flr., Bapuji Nagar, Bhubaneswar - 751009	0674	2531430 / 2534280 / 3966525 / 3966526
7	Chandigarh	LGEIL, SCO No. 142-143, 3rd Floor, Sector-34A Chandigarh. - 160002	0172	5087389 / 90 / 5089107 / 3256001 / 3256003
8	Chennai	LGEIL, AA11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai - 600040	044	65510501 - 04
9	Cochin	LGEIL, 40/1270, Vasudeva Buildings, T.D. Road, Ernakulam Cochin - 682011	0484	2369743 / 2370744 / 2370484 / 4027444 / 4027555
10	Coimbatore	LGEIL, 250a, Sangarun Main Road, Kannappa Nagar, Coimbatore - 641027	0422	2332197 / 2332195 / 2332506 / 3094613 / 3094573
11	Dehradun	LGEIL, M - 22, Mobbewala, Tata Commercial Compound, Dehradun Saharanpur Road, Dehradun	0135	2644212 / 283
12	Delhi	LGEIL, A-27, Mohan Co-operative, Industrial Estate, New Delhi	011	26991411 / 12 / 13
13	Ghaziabad	LGEIL, J-10, RDC Rajnagar Ghaziabad - 201001	0120	9811354152 / 3 / 64 / 65
14	Goa	LGEIL, Plot No-D-3&D-4, Rego Baug, Alto Santacruz, Bambolim, Goa - 403	0832	3294955 / 3294956 / 3294759
15	Gurgaon	LGEIL, II nd Flr. A Block, Centre Point Bldg, Sushant Lok., PH-I, Gurgaon - 122001	0124	4047461 / 62 / 63 / 4272867 / 4047460
16	Guwahati	LGEIL, Shantinagar Bhawan, C K Aggarwal Path, Chenikurthi, Guwahati - 781003	0361	2663895 / 2666958 / 2665983 / 2668984
17	Hubli	LGEIL, 603/1B, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli - 580030	0836	4250251 / 52 / 2337251 / 52
18	Hyderabad	LGEIL, 1st Floor, Survey No. 54, Pulla Reddy Building, Vikarampuri Main Road Kharkhara, Secunderabad - 500004	040	27811732 / 33 / 34
19	Indore	LGEIL, 3rd flr., 304 Bansri Trade Centre, 581/5 M. G. Road, Indore - 452003	0731	4065523 / 24 / 40822157
20	Jaipur	LGEIL, B-71, Sahakar Marg, Lal Kothi Scheme, Jaipur - 302015	0141	5111118 / 5113028 / 5105392
21	Jalandhar	LGEIL, Village Khajuria, Near Hawali Restaurant Jalandhar, Phagwara Highway, G T Road, Jalandhar	01824	502667 / 508025 / 502668
22	Jammu	LGEIL, Plot No.-52, Yard No. 6, Transport Nagar, Narwal, Jammu - 180006	0191	2477420 / 2477419 / 2474396 / 2474384
23	Jodhpur	LGEIL, 22(1-A)/21(2-B)/2, RIICO Heavy Industrial area, Jodhpur - 342003	0291	2742384 / 392
24	Kolkata	LGEIL, 1, Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Kolkata - 700071	033	22883250 / 51 / 52
25	Kundli	LGEIL, Sunshine Enterprises, Sunder Cold Storage, Gt Karnal Road, Kundli - Sonipat	0130	2219201 / 02 / 03
26	Lucknow	LGEIL, B-537, Hari Kunj, Keshav Nagar, Sitapur Road Lucknow - 226020	0522	2757538 / 39 / 2759121
27	Ludhiana	LGEIL, Village Jhande, Near Badawal Railway Station, Opp ferrozpur Road Ludhiana.	0161	2804413 / 19
28	Mumbai	LGEIL, Trade Star, 4th Floor, A Wing, J B Nagar, Andheri Kurla Road, Andheri (E) Mumbai - 400059	022	28352882 - 2887
29	Nagpur	LGEIL, 5a, Road No.13, Behind Mstrc Workshop, MIDC Hinga, Nagpur - 440016	07104	235120 / 235122
30	Patna	LGEIL, 2nd Floor, Ankit Chandra Deep Complex, Bander Bageecha, Near Samrat Hotel, Patna - 800001.	0612	3299156
31	Pune	LGEIL, 105/106, Premium Point, GM Road, Opp Modern High School, Ilird Floor, Shivaji Marg, Pune - 411005	020	66030100 / 732
32	Raipur	LGEIL, Nathani Compound, Shyam Nagar, Katora Talab, Raipur (C.G)	0771	4035171 / 4037470 / 4048745
33	Ranchi	LGEIL, 402, Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	0651	3294026 / 2331815 / 3090426
34	Surat	LGEIL, 1001-1004, Ascon Plaza, IInd Flr, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat - 395009	0261	2730982 / 83 / 84
35	Thane	LGEIL, Gal Shop No- 206, 207, 2nd Floor, Sai Plaza, Above Vijay Sales Opp. Cine Wonder Mall, Ghodbunder Road, Thane(West)- 400607	022	25472633 / 2637
36	Varanasi	LGEIL, Pama Complex, DLW, Lahartara Road, Shivdaspur, Manduadih, Varanasi UP - 221002	0542	2373432 / 36 / 37
37	Vijaywada	LGEIL, Door No 32-2/1-7, Ratnamamba Street, Prajasakti Nagar, Vijaywada - 520010, Andhra Pradesh	0866	2497283 / 87
38	Warangal	LGEIL, HOUSE No. 1-8-598/1 FIRST FLOOR, BESIDE HDFC BANK NAKKALGUTTA, HANAMAKONDA-506001 (WARANGAL)	0870	2551453

Dealer name with Stamp Dealer address
 IMEI No. Date of sale Serial no.

LG Electronics India Pvt. Ltd., Plot No. 51, Udyog Vihar Surajpur Kasna Road, Greater Noida, U.P.

CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
2nd Floor, 9B, DLF Cyber City, Phase-III,
Gurgaon - 122002

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,
Phase-III, Gurgaon - 122002.
Haryana

Dear Sir,

RE: Loss of mobile phone no.:
MAKEMODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES NO

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
 - (i) Original Invoice & Cash Memo.
 - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
 - (iii) Translation of vernacular documents in English/Hindi.
 - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details



24 x 7 CALL CENTER OPERATIONS



CALL

1800-180-9999

(Toll Free)



SMS

5757554

(Send SMS)



CLICK

www.lgindia.com

lgservice@lgindia.com

