



简体中文  
ENGLISH

用户手册  
GX500



CE 0168 !

P/NO : MMBB0371103 (1.0) W

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016312



视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



## GX500 用户手册

恭喜您购买此款功能先进、外观小巧的 LG GX500 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

# 目录

关于安全有效使用手机的 准则 .....	6	联系人.....	25
开始了解您的手机.....	10	正在搜索联系人.....	25
打开视图.....	12	添加新联系人.....	25
安装 SIM 卡和电池.....	13	创建群组 .....	26
存储卡 .....	15	更改电话本设置.....	26
菜单地图.....	16	查看资料 .....	27
待机屏幕.....	17	信息.....	28
触摸屏提示 .....	17	信息.....	28
快速键.....	18	发送信息 .....	28
从状态栏更改状态.....	20	输入文本 .....	28
使用多任务功能.....	20	T9 预测 .....	29
通话 .....	21	Abc 手动 .....	29
拨打电话 .....	21	键盘.....	29
从电话本拨打电话.....	21	手写识别 .....	29
接听和拒接来电.....	21	设置电子邮件 .....	30
快速拨号 .....	21	检索电子邮件 .....	30
拨打第二个电话.....	22	更改电子邮件设置.....	30
查看通话记录.....	22	信息文件夹 .....	31
使用呼叫转接.....	23	更改文本信息设置.....	32
使用呼叫限制 .....	23	更改多媒体信息设置 .....	32
更改常用通话设置.....	24	更改其它设置.....	33
		相机.....	34
		快速拍照 .....	34
		拍照后.....	34
		使用高级设置.....	34
		查看保存的照片 .....	35

# 目录

<b>摄像机</b> .....	36	查看文件 .....	42
快速摄像 .....	36	其它 .....	43
拍摄视频后 .....	36	音乐.....	43
调节曝光 .....	37	将音乐传输到手机.....	44
使用高级设置.....	37	播放歌曲 .....	44
观看保存的视频.....	37	创建播放列表.....	44
		使用收音机 .....	45
<b>照片和视频</b> .....	38	搜索电台 .....	45
查看照片和视频.....	38	重置频道 .....	45
查看照片时使用缩放 .....	38		
观看视频时调节音量 .....	38	<b>管理器</b> .....	46
将照片设为墙纸.....	38	录制声音或语音 .....	46
编辑照片 .....	39	使用计算器 .....	46
		换算单位 .....	46
<b>多媒体</b> .....	40	向世界时间添加城市 .....	46
图片 .....	40	使用秒表 .....	46
发送照片 .....	40		
打印图像 .....	40	<b>PC 套件</b> .....	47
移动或复制图像.....	41	在电脑上安装 LG PC	
声音 .....	41	套件.....	47
视频 .....	41	连接手机和电脑.....	47
观看视频 .....	41	备份和恢复手机信息 .....	47
发送视频剪辑.....	41	在电脑上查看手机文件 .....	48
我的游戏和应用程序 .....	41	同步电话本 .....	48
通过本地安装安装游戏/ 应用程序 .....	42	同步信息 .....	48
玩游戏.....	42	音乐同步 .....	48
文档.....	42	使用 Windows Media Player 传输音乐.....	49
将文件传输到手机.....	42	DivX Converter.....	49

<b>网络</b> .....	51	<b>配件</b> .....	60
浏览器 .....	51	<b>网络服务</b> .....	61
访问网页 .....	51	<b>技术参数</b> .....	61
添加并访问书签 .....	51	<b>故障诊断</b> .....	63
使用 RSS 阅读器 .....	51		
保存页面 .....	52		
访问保存的网页 .....	52		
查看浏览器历史记录 .....	52		
更改网络浏览器设置 .....	52		
将手机用作调制解调器 .....	53		
<b>设置</b> .....	54		
使用 SIM 双卡菜单 .....	54		
个性化情景模式 .....	54		
更改显示设置 .....	54		
更改手机设置 .....	55		
更改连接设置 .....	56		
网络设定 .....	56		
连接设置 .....	56		
使用内存管理器 .....	57		
使用蓝牙发送和接收 文件 .....	57		
与其它蓝牙设备配对 .....	58		
使用蓝牙耳机 .....	59		
Wi-Fi .....	59		
软件升级 .....	59		

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

## 暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。

此款 GX500 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.45 W/kg (10 克)，戴在身体上时，其值为 0.841 W/kg (10 克)。

- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

## 产品保养和维护

**⚠警告：**仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

### 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。

# 关于安全有效使用手机的准则

- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

## 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。

- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

# 开始了解您的手机

## 结束/电源键

挂断或拒接来电。  
开机/关机。  
按一次返回待机屏幕。

## 多任务键

## 通话键

拨打电话号码并接听来电。



**⚠警告：**在手机上放置重物或将手机卧放在口袋中可能会损坏手机的 LCD 屏幕及触摸屏的功能。

 


### 侧键

- 屏幕处于待机模式时：按键音量。
- 通话时：耳机音量。
- 播放 BGM 曲目时  
- 短按：控制音量。



# 打开视图

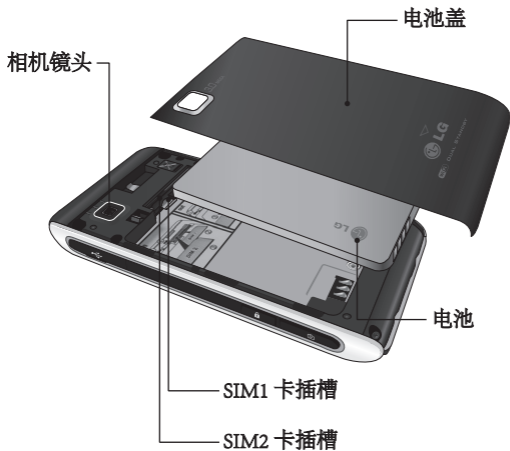

# 安装 SIM 卡和电池

## 1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。



## 2 取出电池

使用顶部的突出块，将电池从电池盒中取出。

 


**警告：** 不要使用指甲取出电池。


**警告：** 手机开机时，不要取出电池，这可能会损坏手机。

## 3 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿反方向轻推。

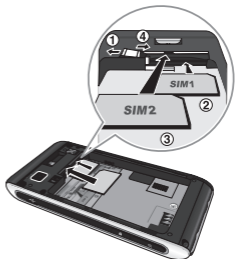

### 警告

 

在将 SIM 卡插入到弹夹之前，请确保 SIM 卡的切角边干净整洁。

# 安装 SIM 卡和电池

## 4 安装电池

先将电池后端插入电池室底部。请确保电池触点与手机端子对齐。向上推电池底端，直至电池卡入到位。



## 5 充电

掀开并旋转 GX500 侧面的充电器插槽盖。插入充电器并插入电流插座。当屏幕上出现“电量已满”时，GX500 才充电完毕。



 
# 存储卡

## 安装存储卡

使用 MicroSD 存储卡，可以扩展手机的可用存储空间。



**备注：**存储卡是可选配件。

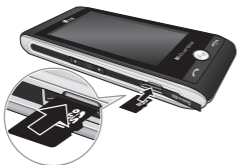- 1 打开手机右侧边缘的存储卡插槽盖。
- 2 将存储卡滑入插槽顶部，直到卡入到位。
- 3 装好插槽盖。




## 格式化存储卡

如果已格式化存储卡，您可以开始使用。如果您的存储卡尚未格式化，那么在开始使用之前，请先格式化。

- 1 从待机屏幕选择 ，然后点触 ，选择**手机设置**。
- 2 点触**存储器资料**，然后选择**外部存储器**。
- 3 点触**格式化**，然后确认选择。
- 4 输入密码（如果已设置）以格式化存储卡，现在，您可以使用该存储卡了。

**备注：**如果存储卡中已有内容，它将自动保存在正确的文件夹中，例如，视频将保存到“我的视频”文件夹中。

# 菜单地图

点触待机屏幕中的  以打开**顶层菜单**。在此，您可以访问更多菜单：**通讯**、**娱乐**、**实用工具**和**设置**。

## 通讯

- 电话簿
- 近期记录
- 信息
- 电子邮件
- 拨号
- 社交网络
- 快速拨号
- 写信息

## 娱乐

- 相机
- 图片库
- 音乐
- 我的文档
- 游戏和应用程序
- 口袋应用程序
- FM 收音机
- 录像机

## 实用工具

- 浏览器
- 谷歌收索
- 闹钟
- 管理器
- 备忘录
- 录音机
- 工具
- 绘图面板

## 设置

- 双 SIM 卡设置
- 情景模式
- 显示设置
- 手机设定
- 通话设置
- 蓝牙
- 连接
- Wi-Fi

# 待机屏幕

从待机屏幕，您可以访问所有菜单选项、快速拨打电话、查看手机状态以及进行其它一些操作。

## 触摸屏提示

您也可以在主屏上熟悉使用触摸屏。

要选择项目，请准确点触图标。当 GX500 识别您点触的选项时，会轻微振动。

要在列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。



- 无需大力按，触摸屏非常敏感，仅需点触即可。

- 使用指尖点触所需选项。请注意不要触碰到旁边的其它选项。

- 屏幕背景灯关时，按右手边的解锁/锁定键可以返回主屏。

- 不要使用手机套。使用金属套可能导致触摸屏不可用。

- 有两种类型的待机屏幕。向左或向右轻弹以更改待机屏幕类型。


- 1 小工具待机屏 - 点触  时，将出现手机小工具面板。
- 2 快速拨号待机屏 - 点触  时，将出现快速拨号列表。在两种待机类型下，您都可以拖动并单击所需内容。

# 待机屏幕

## 快速键

快速键使您可以一键式轻松访问常用功能。



点触可打开触摸拨号键盘，以拨打电话。按使用普通键盘的方式输入号码，然后点触**呼叫**或按  硬键。



点触以打开电话本。要搜索您要呼叫的号码，请使用触式键盘在屏幕顶部输入联系人的姓名。您也可以创建新的联系人以及编辑现有联系人。



点触可以进入“信息”选项菜单。在此，您可以创建新短信或彩信，或查看信息文件夹。



点触可以打开完整顶层菜单，该菜单被划分为四个垂直子菜单。点触每个子菜单的选项卡以查看更多选项。

## 状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。

下表说明了您最可能在状态栏中看到的不同图标的涵义。

图标	描述
	多任务
	网络信号强度（指示栏数不同）
	无网络信号
	剩余电量
	电池电量空
	新文本信息
	新语音信息
	收件箱已满
	信息发送失败
	多媒体信息发送失败
	闹钟已设置


图标	描述
	正在使用自定义情景模式
	正在使用“标准”情景模式
	正在使用“户外”情景模式
	正在使用“静音”情景模式
	正在使用“耳机”情景模式
	呼叫被转接
	正在使用 EDGE
	正在漫游
	飞行模式开
	蓝牙已启动
	播放 BGM
	暂停 BGM
	允许使用存储卡
	Wi-Fi


# 待机屏幕

## 从状态栏更改状态

点触状态栏打开“状态摘要”。它显示当前时间，网络，电池，手机内存，外部存储器，情景模式，MP3及蓝牙状态。您可以在这里设置情景模式类型，播放/暂停MP3及启动/关闭蓝牙。




## 使用多任务功能


按多任务硬键  打开“多任务”菜单。在此，您可以查看正在运行的所有应用程序，并通过一个点触操作进入该应用程序。

如果背景中正在运行某个应用程序(如, 游戏或FM收音机), 状态栏中将显示 。



# 通话

## 拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘键入号码。要删除一个数字，请点触清除键。
- 3 按  硬键或点触“通话”开始通话。
- 4 要结束通话，请按  硬键。


**提示!** 要输入+以拨打国际电话，请长按 。



## 从电话本拨打电话

- 1 从待机屏幕点触  以打开电话本。
- 2 输入您要呼叫的联系人的前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人，如果保存了多个号码，请选择您要使用的那个。
- 4 点触 。

## 接听和拒接来电



电话铃响起时，按  硬键或点触  接听电话。

轻触  以静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。

按  硬键或点触  拒接来电。





## 快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 从主屏点触  以打开电话本。
- 2 点触 ，选择快速拨号。
- 3 语音邮件已设为快速拨号1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开您的电话簿。点触要指定到该号码的联系人的电话号码一次，以选择该联系人。要查找联系人，请点触搜索字段框，输入所需联系人姓名的第一个字母。

# 通话


## 拨打第二个电话

- 1 在初始呼叫中，点触  并选择您要呼叫的号码。
- 2 拨号或在电话本中搜索。
- 3 按  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 要在通话间更改，请点触 ，然后选择**切换通话**或按保持的通话的号码。
- 6 要结束一个呼叫或同时结束两个呼叫，请按 ，选择**全部**、**已保留**或**启动**，然后选择**结束**。

**提示！** 您可以通过选择接受和**加入**连接通话。查看您的网络提供商是否支持多方通话。

**备注：**您需要为每个通话各自付费。

## 查看通话记录


点触 ，选择**通讯**，然后点触**近期记录**。选择以查看：

**全部** - 查看所有拨电、已接来电和未接来电的完整列表。



**拨电** - 查看所有已拨打的电话的列表。

**已接来电** - 查看打给您的所有电话的列表。

**未接来电** - 查看您没接到的所有电话的列表。

**提示！** 从通话记录中点触  及**全部删除**以删除所有录制的项目。



## 使用呼叫转接

- 1 点触 ，选择 。
- 2 点触**呼叫转移**。
- 3 选择转接电话的情况：  
转接所有语音来电，忙碌时转接，无人接听时转接，或无网络或关机时转接。
- 4 输入您要转接的号码。
- 5 点触**请求**以激活。

**备注：**转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

**提示！** 要关闭所有通话转接，请从**呼叫转接**菜单中选择**关闭全部**。

## 使用呼叫限制



- 1 点触 ，选择 。
- 2 点触**呼叫限制**。
- 3 选择以下五个选项中的一  
项或所有项：  
**所有拨电**  
**国际拨电**  
**国际漫游时拨打电话**  
**所有来电**  
**国际漫游时来电**  
**全部停用**

- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**提示！** 选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

# 通话

## 更改常用通话设置

- 1 点触 ，选择 。
- 2 点触**共同设置**。在此，您可以修改以下设置：  
**拒接来电** - 将开关滑动到**开**以突出显示拒绝列表。您可以点触文本框，从所有通话、特定联系人或未知号码（不在电话本中的号码）中进行选择。点触**保存**以更改设置。

**发送本机号码** - 选择当您呼叫对方时是否显示您的号码。

**自动重拨** - 向左滑动开关为**开**，向右滑动开关为**关**。

**接听模式** - 选择是使用发送键还是任意键接听电话。

**分钟提示** - 向左滑动开关为**开**，在通话过程中每隔一分钟将听到提示音。

**蓝牙接听模式** - 选择**免提**可使用蓝牙耳机接听来电，或选择**手机**按手机任意键接听来电。




**保存新号码** - 选择**是**以保存新号码。

# 联系人


## 正在搜索联系人

有两种方式可搜索联系人：

### 从待机屏幕


- 1 从待机屏幕点触  以打开电话本。从列表中选择您要呼叫的联系人。
- 2 点触  或按  硬键激活通话。

### 从主菜单

- 1 点触 。
- 2 点触 **电话簿** 和 **搜索**。
- 3 您将看到一个联系人列表，键入联系人姓名的首字母会使菜单跳转到该字母区域。

**提示！** 当您点触空白方框时，将显示字母键盘。



## 添加新联系人

- 1 从待机屏幕点触 ，然后点触 **添加联系人**。
- 2 选择是将联系人保存到手机还是 SIM 卡 (SIM 1/ SIM 2)。

- 3 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 4 对同一个联系人，您最多可以输入 5 个不同的号码。每个条目下的类型包括：**手机、家庭、办公室、传呼机、传真和普通**。完成后，请点触 **关闭**。
- 5 添加电子邮件地址。
- 6 将联系人分配到一个或多个群组。从以下选项选择：**无群组、家人、朋友、同事、学校或重要人士**。
- 7 您还可以添加 **铃声、生日、周年纪念、主页、家庭地址、公司名称、职位、公司地址和备忘录**。
- 8 点触 **保存** 以保存联系人。

# 联系人

## 创建群组


- 1 点触 。
- 2 点触**电话簿**，然后点触**群组**。
- 3 点触 。
- 4 选择**添加群组**。
- 5 输入新群组的名称。您也可以为群组指定铃声。
- 6 点触**保存**。

**备注：**如果您删除一个群组，分配至该群组的联系人不会被删除。他们仍将保留在电话本中。

## 更改电话本设置

您可以调整您的电话本设置，使电话本符合您的需要。

**提示！** 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 从待机屏幕点触 。
- 2 点触**电话簿**，然后点触**设置**。
- 3 在此，您可以调整以下设置：

**联系人列表设置** - 选择查看保存在手机、SIM1 卡和 SIM2 卡上的电话本，或单独查看手机、SIM1 卡和 SIM2 卡上的电话本。

您还可以选择是先显示联系人的姓还是名。

**复制** - 在 SIM 卡（SIM1 或 SIM2）和手机之间复制联系人。请选择是一次复制一个还是全部复制。如果选择一次复制一个，您需要逐个选择每个联系人以进行复制。

**移动** - 其操作与“复制”相同，但联系人仅保存在移动目标位置。因此，如果将联系人从 SIM 卡移动到手机，其将从 SIM 存储卡中删除。

**通过蓝牙发送所有联系人** - 使用蓝牙，将所有联系人发送到其它设备或计算机。如果选择此选项，您会收到打开蓝牙的提示。


**备份电话簿** - 请参阅“电脑同步”部分的“备份和恢复手机信息”。

**恢复电话簿** - 请参阅“电脑同步”部分的“备份和恢复手机信息”。

**清空电话簿** - 删除所有联系人。如果确定要清空地址簿，请点触**是**。

**提示!** 如果您为自己添加了名片，选择**我的名片**并输入所有您可能为其他联系人输入的详细信息。点触**保存**完成。

## 查看资料




- 1 从待机屏幕点触 。
- 2 点触**电话簿**，然后点触**资料**。
- 3 在此，您可以查看**服务拨号号码**，**本机号码**，**存储器资料**（剩余内存空间）和**我的商务名片**。

# 信息


## 信息

GX500 将短信、多媒体信息和电子邮件结合到一个直观易使用的菜单中。


有两种方式进入信息中心：


- 1 从待机屏幕点触 。
- 2 从待机屏幕点触 ，然后选择 。

## 发送信息


- 1 点触**写信息**打开空白信息。
- 2 在此，您可以发送短信或彩信。要发送电子邮件，从待机屏幕点触 ，然后选择电子邮件。
- 3 点触**插入**添加图像、视频、声音或模板。
- 4 点触屏幕顶部的**收件人**输入收件人号码，或点触搜索图标打开电话本。您可以添加多个联系人。就绪后，请点触**发送**。

**备注：**您可以一次将短信发送给多个用户。单击联系人搜索图标，从用户可以标记/取消标记联系人以发送短信的选项中选择多个。要将短信发送给特定联系人群组，只需在写完短信后，单击联系人搜索图标，然后选择“按群组搜索”即可。

 **警告：**您将按每个收件人每 1 页文本信息付费。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

## 输入文本

有五种方式可输入文本：手机键盘，电脑键盘，手写屏幕，手写箱，手写双屏。通过点触  并点触**输入**法，您可以选择输入方法。点触屏幕一次，将出现键盘。

**T9** 点触可以打开 T9 预测文本。

**地球仪** 您可以选择编写语言。

**123** 点触以更改号码、符号和文本键盘。

在每种文本输入模式中，使用 **↑** 在不同键盘类型之间滚动（例如，大写字母或小写字母）。

## T9 预测

T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。只需点触与您要输入的字母关联的数字键即可，随着您的键入内容，字典将预测您想要使用的单词。

例如，依次按 8、3、5、3、7、4、6、6、3 输入“telephone”。

## Abc 手动

在 Abc 模式中，要输入字母，您必须重复点触按键。例如，要写入“hello”，需要点触两次 4、两次 3、三次 5，再点触三次 5，最后点触三次 6。

## 键盘

在键盘模式中，屏幕横向展开，屏幕上显示完整的标准键盘。

点触每个字母即可写入您的信息，然后按：

**↑** 切换到大写。

## 手写识别

在手写模式中，您只需在屏幕上书写内容，GX500 即可将您的手写内容转换为信息。根据首选视图选择**手写屏幕**或**手写箱**。



**提示！** 您可能会发现，在此模式中使用手写笔会非常轻松，请记住，轻触屏幕以保护屏幕不受损坏。

手写识别会将手写笔操作内容转化为字母、数字或其它字符，然后以文本方式显示这些字符。只有在可输入文本的位置，才会激活手写识别。

# 信息

## 设置电子邮件




使用 GX500 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

- 1 点触 。
- 2 选择 ，然后将菜单滚动到**设置**。
- 3 点触**电子邮件**，然后点触**电子邮件帐户**。
- 4 点触**添加帐户**。
- 5 设置向导将帮助您设置电子邮件设置。
- 6 通过选择列表中的帐户，您可以检查并编辑设置。您还可以检查当您创建帐户时自动填写的其它设置。
- 7 通过点触激活，您可以更改默认电子邮件帐户。

## 检索电子邮件



您可以自动或手动查看帐户的新电子邮件。

手动查看：

- 1 点触 ，然后选择 。
- 2 点触电子邮箱。
- 3 点触您要使用的帐户，然后点触 。
- 4 选择**读取**，GX500将连接到您的电子邮件帐户并检索新邮件。

## 更改电子邮件设置

您可以更改电子邮件设置以满足您的个人需要。

- 1 点触 ，然后选择 。
- 2 点触**设置**和**电子邮件**，然后，您可以调整以下设置：

**允许回复电子邮件** - 选择是否允许发送读取确认邮件。

**要求回复电子邮件** - 选择是否要请求读取确认邮件。

**读取间隔时间** - 选择 GX500 检查新电子邮件信息的频率。

**读取数量** - 选择一次要检索的电子邮件数目。

**在转发和回复中包含信息** - 选择在回复时是否要包括原始邮件。

**包含附件** - 选择在回复中是否包含原始附件。

**漫游时自动读取** - 选择是否自动检索邮件。

**新电子邮件通知** - 选择在收到新电子邮件时是否需要提示。

**签名** - 创建电子邮件签名并打开此功能。

**优先级** - 选择电子邮件信息的优先级级别。

## 信息文件夹

您可以识别 GX500 中的文件夹结构，完全无需进行说明。

**写信息** - 打开新的空白信息。

**收件箱** - 您接收到的所有信息将放置在收件箱。在此，您可以查看、删除及执行其它操作，有关详细信息，请参阅**管理信息**。

**草稿箱** - 如果您来不及写完一条信息，您可以将已写信息保存在此。

**发件箱** - 这是发送信息时的临时储存文件夹。

**已发送项目** - 您发送的所有信息将放置在此文件夹。

**我的文件夹** - 创建文件夹以存储信息。

**模板** - 使用常用文本和多媒体信息模板列表。

**情绪符** - 为您的信息添加和插入情绪符。


**设置** - 更改文本和多媒体信息设置。

# 信息

## 更改文本信息设置

GX500 已预定义信息设置，因此，您可以立即发送信息。可以根据您的个人需要更改这些设置。

**提示!** 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

点触 ，然后选择下列选项上的**设置**。选择**文本信息**。您可以更改：

**文本信息中心** - 输入信息中心的详细信息。

**发送报告** - 向左滑动开关，在对方收到您发送的信息时接收确认。

**有效期** - 选择信息在信息中心中的最长保存时间。



**信息类型** - 将文本转换为**文本**、**语音**、**传真**、**X.400** 或**电子邮件**。

**字符编码** - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

**将长文本另发送为** - 选择是以多条短信还是一条彩信发送长信息。

## 更改多媒体信息设置

GX500 已预定义信息设置，因此，您可以立即发送信息。可以根据您的个人需要更改这些设置。

点触 ，选择 。选择**设置**和**多媒体信息**。您可以更改：

**检索模式** - 选择是**主国**还是**漫游**网络。如果选择手动，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

**发送报告** - 选择是否允许请求状态报告。

**已读报告** - 选择是否允许和/或请求阅读报告。

**优先级** - 选择多媒体信息的优先级级别。

**有效期** - 选择信息在信息中心中的最常保存时间。

**幻灯片持续时间** - 选择幻灯片在屏幕上显示多长时间。


**创建模式** - 选择信息模式。

**发送时间** - 选择信息发送前的时间。

**多媒体信息中心** - 输入信息中心的详细信息。

## 更改其它设置

点触 ，然后选择摄制。


**语音邮件** - 点触  添加新的语音邮件服务。有关其提供的服务的详细资料，请联系您的网络运营商。

**服务信息** - 选择是接收还是阻止服务信息。您也可以创建可信和不可信发件人列表来设置信息安全性。

**小区广播** - 选择接收状态、语言和其它设置。


# 相机

## 快速拍照


- 1 短按手机右侧的相机热键。
- 2 屏幕上将显示取景器。
- 3 水平放置相机，将镜头对准要拍摄的物体。
- 4 使用相机定位，以便在预览屏中看到要拍摄的物品。
- 5 当相机对好焦后，按相机侧面的  或屏幕右下角的红色框拍照。


## 拍照后


拍好的照片将显示在屏幕上。


-  点触可以**信息、电子邮件或蓝牙方式发送照片**。请参阅“发送信息”和“使用蓝牙发送和接收文件”。

**备注：**漫游时，如果下载彩信将产生一定费用。


-  点触以编辑选定图片的名称。


-  点触以将图像用作墙纸。

-  点触各种工具以编辑图像。


-  点触以返回上一个菜单。

-  点触可以删除图像。

-  点触可以立即拍摄其它照片。

-  点触可以查看保存的图像库。

## 使用高级设置

从取景器中点触  以打开所有高级设置选项。

**色彩效果** - 选择适用于您所拍摄的照片的色调。

**白平衡** - 从以下选项中选择：自动、白炽灯、日光、荧光灯或阴天。

**定时器** - 使用自拍器，您可以设置拍照前按下拍摄按钮后的延迟。从**关**、**3 秒**、**5 秒**或**10 秒**中选择。如果照片中要包括您自己，自拍器非常有用。

**隐藏图标** - 选择手动还是自动隐藏相机设置图标。


**质量** - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片将越清晰，同时，文件更大。这意味着存储器中保存的照片将越少。

**快门声音** - 从三种快门声音中选择一种。

**网格屏幕** - 从**关**、**简单十字**或**三等分**中选择

**恢复初始设置** - 重设所有相机设置。

## 查看保存的照片

- 1 您可以在相机模式下访问保存的照片。轻触 ，此时屏幕上将显示图片库。








# 摄像机

## 快速摄像

- 1 长按手机右侧的相机键。
- 2 或者，在相机模式下点触取景器中的  切换到视频模式。
- 3 屏幕上将显示摄像机的取景器。
- 4 水平放置相机，将镜头对准要拍摄的物体。
- 5 按拍摄按钮一次，开始录制。
- 6 取景器顶部将出现 **Rec**，底部计时器显示视频长度。
- 7 要暂停视频，请点触 ，要恢复录制，请选择 。
- 8 点触屏幕上的  或再按一次拍摄按钮停止录制。


## 拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频名称在屏幕底部显示，屏幕右侧将显示六个图标。


-  点触以播放视频。
-  点触可以将视频作为**信息或电子邮件**，或通过**蓝牙**发送。
-  点触可以编辑视频。
-  点触以返回上一个菜单。
-  点触可以删除您刚拍摄的视频，点触**是**确认。此时将出现取景器。
-  点触立即拍摄其它视频。将保存您的当前视频。
-  点触以查看保存的视频和图像库。

## 调节曝光

曝光定义视频的深浅（对比度）差别。

- 1 点触 。
- 2 沿滚动条滑动曝光指示器，向左对应曝光度更低、更模糊的视频，向右对应曝光度更高、更清晰的视频。

## 使用高级设置

从取景器中点触  以打开所有高级设置选项。

**色彩效果** - 选择适用于您所拍摄的视频的色调。

**白平衡** - 白平衡确保视频中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。

**质量** - 在**超精细**、**精细**和**标准**之间选择。

**设置时间** - 设置视频的长度限制。


**提示!** 如果长度选择“彩信”，请尝试选择较低的图像质量以拍摄更长视频。

**选择存储位置** - 选择是将照片保存到**手机内存**还是**外部存储器**。

**语音** - 选择“静音”，录制视频而不录制声音。


**恢复初始设置** - 重设所有摄像机设置。

## 观看保存的视频


- 1 从取景器中点触 。
- 2 屏幕上将显示您的图片库。
- 3 点触您要查看的视频一次，将其调到图片屏幕的前方。
- 4 再次点触该视频，完全打开。

# 照片和视频

## 查看照片和视频

- 1 点触相机预览屏幕上的 。
- 2 屏幕上将显示您的图像库。
- 3 点触视频或照片可以完全打开。

**提示!** 向左或向右轻弹以查看其它照片或视频。

**提示!** 要删除照片或视频，请打开它，然后选择 。点触是确认。

## 查看照片时使用缩放

查看照片时，您可以放大或缩小。

## 观看视频时调节音量

要在视频播放过程中调节音量，请按扬声器符号，然后点触屏幕底部的音量栏。或者，使用手机侧面的音量键。


## 将照片设为墙纸


- 1 点触您要设为墙纸的照片两次，以打开它。
- 2 点触屏幕可以打开选项菜单。
- 3 点触主屏菜单。
- 4 您可以使用屏幕底部的缩略图放大及缩小图片，以及移动剪切部分。


## 编辑照片


您可以对照片执行多项操作以更改、添加或修饰。


- 1 打开您要编辑的照片，点触以显示选项。
- 2 点触图标以调整照片：
  -  裁切照片。选择方形或圆形裁切区域，使用手指移过选定区域。
  -  徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。
  -  在图片上添加书写内容。请参阅**为照片添加文本**。
  -  使用标记修饰照片。从不同标记中选择，点触照片中您要放置标记的位置。


 擦除您对图片所做的编辑。您可以选择要使用的橡皮擦大小。


 点触可以返回图片库。

 保存您对照片所做的更改。选择保存所做更改的方式：**原文件**或**新文件**。如果选择**新文件**，请输入文件名。

 擦除您对照片所做的编辑。



 点触可以打开更多效果选项，包括**旋转**。此外还有一些高级编辑选项。请参阅**添加点彩**和**交换照片中的颜色**。

 点触以对照片应用效果选项。

 此时将使用自动色彩、亮度等对所拍图片进行调整。


# 多媒体

您可以将任意多媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

要访问“多媒体”菜单，请点触 ，然后点触  以打开文件夹表，该列表保存您所有的多媒体文件。

## 图片

**我的图像**包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。




点触  将视图从缩略图视图更改为列表视图。

## 发送照片

- 1 点触 .
- 2 点触 ，然后选择**我的图像**。

- 3 点触**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 4 如果选择**信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，将自动打开蓝牙，手机将搜索设备以发送图片。




## 打印图像

- 1 点触 .
- 2 点触 ，然后点触**我的图像**。
- 3 选择图像并点触 .
- 4 点触**打印**，然后再**蓝牙**和**图片打印器**之间选择。

**提示！** 您可以通过蓝牙或连接到图片打印器兼容的打印机打印。

## 移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 点触 。
- 2 点触 ，然后点触**我的图像**。
- 3 点触 ，然后选择**移动**或**复制**。
- 4 您可以依次点触图像以标记/取消标记。标记您要移动或复制的图像，然后点触**复制/移动**。



## 声音

**我的声音**文件夹包含“下载的声音”，**预设声音和录音**。在此，您可以管理，发送或将声音设为铃音。


## 视频

**我的视频**文件夹显示已下载的视频以及手机中录制的视频列表。

## 观看视频

- 1 点触 。
- 2 点触 ，然后点触**我的视频**。
- 3 选择要播放的视频

## 发送视频剪辑



- 1 选择视频，然后点触 。
- 2 点触**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 3 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，蓝牙将自动打开，您的手机将搜索要将视频发送到的设备。

## 我的游戏和应用程序

您可以在手机中安装新游戏和应用程序，它们将在闲暇时为您带来乐趣。



# 多媒体

## 通过本地安装安装游戏/应用程序

- 1 点触 。
- 2 点触 ，然后点触**其它**或**我的存储卡**（如果插入了外部存储器）。
- 3 选择您要安装的文件（\*.jad 或 \*.jar），然后按**安装**命令。应用程序即被安装。

**备注：**jad 文件应包含自己的 jar 文件。

## 玩游戏

- 1 点触 。
- 2 点触 ，然后**我的游戏和应用程序**。
- 3 打开“游戏”文件夹，选择并点触要启动的游戏。

## 文档

从文档菜单中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

## 将文件传输到手机

蓝牙可能是将文件从计算机传输到手机最简便的方法。您也可以通过同步数据线使用 LG PC 套件。

使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须通过点触**是**在您的手机上接受它。
- 4 文件应出现在**文档**或其它文件夹中。


## 查看文件

- 1 点触 。
- 2 点触 ，然后点触**文档**。
- 3 选择文档，然后点触**查看**。



## 其它

**其它**文件夹用于存储非图片、声音、视频、游戏或应用程序文件。其使用方式与**文档**文件夹相同。当您从计算机传输文件到手机时，您可能发现文件保存在**其它**而不是**文档**文件夹中。如果这样，您可以移动文件。

将文件从**其它**文件夹移到**文档**：

- 1 点触 。
- 2 点触 ，然后点触**其它**。
- 3 选择文件，然后点触 。
- 4 点触**移动**，然后点触箭头图标从列表中选择目标文件夹。传输完成后，屏幕上将显示**已移动**。

## 音乐

LG GX500 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要进入音乐播放器，请依次点触 、。您可以在此访问多个文件夹：

**近期播放** - 查看您最近播放的所有歌曲。

**所有曲目** - 包含手机中的所有歌曲。

**歌手** - 按艺术家浏览音乐集合。

**专辑** - 按专辑浏览音乐集合。

**流派** - 按流派浏览音乐集合。

**播放列表** - 包含您创建的所有播放列表。


**随机播放曲目** - 以随机顺序播放您的曲目。

# 多媒体



## 将音乐传输到手机





将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。

您也可以使用 LG PC 套件。使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙，对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件准备就绪可以发送后，您应点触是在手机上接受。
- 4 文件应显示在**音乐 > 所有曲目**中。



## 播放歌曲

- 1 点触.
- 2 点触，然后点触**所有曲目**。
- 3 选择您要播放的歌曲。

- 4 点触 暂停歌曲。
- 5 点触 跳到下一首歌曲。
- 6 点触 跳到上一首歌曲。
- 7 点触，返回到**音乐**菜单。

## 创建播放列表

您可以从**所有曲目**文件夹中进行选择，以创建自己的播放列表。

- 1 点触.
- 2 点触，然后点触**播放列表**。
- 3 点触**添加新的播放列表**，输入播放列表名称，然后点触**保存**。
- 4 **所有曲目**文件夹将显示手机中的所有歌曲。点触所有要包含在播放列表中的歌曲；这些曲目名称旁边将显示一个勾号。
- 5 点触**保存**。

## 使用收音机



LG GX500 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

**备注：**要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。



## 搜索电台

您可以手动或自动微调电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 48 个频道。您必须首先将耳机插入手机以将其用作天线。

## 自动微调：





- 1 点触 。
- 2 点触 **FM 收音机**，然后点触 。
- 3 点触**自动扫描**。随后，将自动查找电台并分配给手机中的频道。

## 重置频道



- 1 点触 。
- 2 点触 **FM 收音机**，然后点触 。
- 3 选择**重设**以重设当前频道，或选择**全部重设**以重设所有频道。每个频道的开始频率将返回为 87.5 Mhz。

# 管理器


## 录制声音或语音

- 1 点触 .
- 2 点触 **录音机**。
- 3 点触  开始录音。
- 4 点触  结束录音。
- 5 点触  以收听录音。

## 使用计算器

- 1 从待机屏幕选择 , 然后选择 **工具**。
- 2 选择 **计算器**。
- 3 点触数字键以输入数字。
- 4 对于简单计算, 点触您所需的函数 (+, -, ×, ÷), 然后点触 =。
- 5 对于较复杂的计算, 请点触  并从 **sin**、**cos**、**tan**、**log**、**ln**、**exp**、**sqrt**、**deg** 或 **rad** 等中选择。



## 换算单位

- 1 从待机屏幕选择 , 然后选择 **工具**。
- 2 选择 **单位换算器**。
- 3 选择要换算的内容:  
**币种**、**面积**、**长度**、

**重量**、**温度**、**体积/容量** 或 **速度**。

- 4 随后, 您可以选择单位, 输入要换算的初始值, 然后选择要换算的目标单位。

## 向世界时间添加城市

- 1 从待机屏幕选择 , 然后选择 **工具**。
- 2 选择 **世界时钟**。
- 3 点触 , 然后选择 **新建城市**。开始键入所需城市的名称时, 屏幕顶部即显示该城市。

## 使用秒表


- 1 从待机屏幕选择 , 然后选择 **工具**。
- 2 选择 **秒表**。
- 3 点触 **开始** 启动计时器。
- 4 如果您要记录时间, 请点触 **记录**。
- 5 点触 **停止** 结束计时器。
- 6 点触 **恢复** 从您停滞的时间重新开始秒表, 或点触 **重置** 重新开始计时。

# PC 套件

您可以同步电脑与手机。同步有助于确保所有重要信息和日期匹配，同时做好备份。

**提示！** 您需要安装 CD-ROM 上提供的应用程序 PC 套件，该程序也可从 <http://update.lgmobile.com> 下载。（[www.lgmobile.com](http://www.lgmobile.com) 产品 > 手册和软件 > 转到手册和软件下载部分）

## 在电脑上安装 LG PC 套件

- 1 从主屏点触 ，然后点击**连接**。
- 2 选择 **USB 连接**，然后点触 **PC 套件**。
- 3 通过 USB 数据线连接手机和电脑，等待片刻。
- 4 此时将显示安装指南信息。

**警告！** 如果电脑上没有显示安装指南信息，请在 Windows 上查看 CD-ROM 设置。

- 5 插入随附的 CD-ROM 或单击下载按钮直接从互联网下载 LG PC 套件程序。
- 6 单击显示在屏幕上的 LG PC 套件安装程序。

## 连接手机和电脑

- 1 在“连接”菜单中选择 PC 套件模式，然后将 USB 数据线连接到手机和电脑。
- 2 此时将在您的电脑上自动激活 LG PC 套件。
- 3 现在，手机与 PC 已连接。

## 备份和恢复手机信息

- 1 如上所述，将手机连接到电脑。
- 2 单击**备份**图标，选择**备份**或**恢复**。
- 3 选择是否要备份**内容数据**和/或**电话本/日程表/任务/备忘录数据**。选择信息的备份目标位置或恢复初始位置。单击**确定**。
- 4 您的信息将备份。

# PC 套件

## 在电脑上查看手机文件

- 1 如上所述，将手机连接到电脑。
- 2 单击管理照片、视频或音乐图标。
- 3 您在手机上保存的图像、音频和视频文件将显示在“LG 手机”文件夹屏幕中。

**提示!** 在电脑中查看手机内容有助于您管理不再需要的文件。

## 同步电话本

- 1 将手机连接到电脑。
- 2 单击**电话本**图标。
- 3 单击**同步电话本**按钮，您的电脑现在将导入并显示手机上保存的所有联系人。
- 4 单击**菜单**，然后选择**导出**。现在，您可以选择要保存电话本的位置。

## 同步信息

- 1 将手机连接到电脑。
- 2 单击信息图标。
- 3 所有手机信息将显示在屏幕上的文件夹中。
- 4 使用屏幕顶部的工具栏编辑和排列信息。

## 音乐同步


此菜单可用于将音乐添加到 GX500。开始从电脑向手机传输音乐之前，请确保电脑已完成以下设置并准备好以下配件：

- Microsoft Windows XP 或 Vista
- Windows Media Player 10 或更高版本
- USB 数据线
- microSD 卡（如果要将外部存储器用作音乐存储位置。）

**警告:** 传输过程中，不要断开手机连接。文件会损坏。

## 使用 Windows Media Player 传输音乐

- 1 从主屏选择 ，然后滚动到**设置**选项卡下的**连接**。
- 2 选择 **USB 连接模式**，然后选择**音乐同步**。
- 3 使用兼容的 USB 数据线连接手机和电脑。
- 4 尝试将手机连接到电脑时，手机显示“音乐同步...”，然后显示已连接。
- 5 电脑将提示您启动首选音乐管理软件。
- 6 选择 Window Media Player。
- 7 转到“同步”选项卡，然后将要传输的音乐拖动到手机中的**同步列表**面板中。
- 8 单击**开始同步**按钮。此时将开始传输流程。

 **警告:** 传输过程中，不要断开手机连接。文件会损坏。

## DivX Converter

安装作为 PC 套件软件、在同一 CD-ROM 中提供的 DivX Converter。DivX 将电脑中的媒体文件转换为您可以上传到手机并可在手机中查看的文件格式。

安装后，请从电脑的程序文件中选择 **DivX**，然后，依次选择 **DivX Converter** 和 **Converter**。

使用应用程序中的箭头将转换格式更改为“手机”。如果右键单击应用程序框，选择**首选项**，您可以更改保存转换文件的位置。

将文件拖动到应用程序中以进行初始分析。然后，选择**转换**以开始转换流程。此流程完成后，将显示“转换完成”弹出信息。

# PC 套件

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*



**Pat. 7,295,673**

# 网络

## 浏览器

**浏览器**为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。



## 访问网页

- 1 从待机屏幕选择 ，然后选择 。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入地址**并键入所需的URL，然后选择**连接**。

**备注：**连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

## 添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕选择 ，然后选择 。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加新书签，请选择 ，然后点触**添加书签**。输入书签名称和URL。
- 4 点触**保存**。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，点触书签后点触“连接”即可。您将连接到书签。

## 使用 RSS 阅读器


RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。

# 网络

RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。



用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

## 保存页面



- 1 如上所述，访问所需网页。
- 2 点触  并选择**保存此页面**。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 点触**保存**。

**提示！** 此菜单还允许您编辑已保存页面的标题、保护或取消保护屏幕备忘录，以及删除已保存页面。



## 访问保存的网页

- 1 从待机屏幕选择 ，然后选择 。
- 2 选择**保存的页面**。
- 3 选择所需页面，随即将打开该页面。

## 查看浏览器历史记录

- 1 从待机屏幕选择 ，然后选择 。选择**历史记录**。
- 2 此时将显示一个您最近访问过网页的标题列表。要访问其中一个页面，只需选择所需页面即可。

## 更改网络浏览器设置

- 1 从待机屏幕选择 ，然后选择 。选择**设置**。
- 2 您可以选择编辑**情景模式**，**外观设置**，**缓存**，**Cookie**，**安全性**。

## 将手机用作调制解调器

GX500 可以用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

### 使用 USB 数据线：

- 1 确保 PC 上已经安装了 LG PC 套件。
- 2 用 USB 电缆连接 GX500 和您的电脑并启动 LG PC 套件软件。
- 3 单击电脑上的 **Internet Kit**。随后，单击**新建**按钮并选择**调制解调器**。
- 4 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 5 写入可连接到互联网的**配置**，然后保存值。
- 6 您创建的配置将显示在电脑屏幕上。选择并单击**连接**。电脑将通过 GX500 连接。

### 使用蓝牙：

- 1 确保已**打开**蓝牙并在电脑和 GX500 上均**可见**。
- 2 配对电脑和 GX500，此时需要通行码才能建立连接。
- 3 使用 LG PC 套件上的**连接向导**创建一个活动的蓝牙连接。
- 4 单击电脑上的 **Internet Kit**。然后，单击**新建**按钮。
- 5 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 6 写入可连接到互联网的**配置**，然后保存值。
- 7 您创建的配置将显示在电脑屏幕上。选择并单击**连接**。电脑将通过 GX500 连接。

# 设置

使用此文件夹，您可以调整设置以使 GX500 更具个性化。

## 使用 SIM 双卡菜单


要选择或更改 SIM 卡，按  然后选择 。

将电话本从 SIM1、SIM2 卡复制到手机或者从手机复制到 SIM1、SIM2 卡，或者从 SIM1 卡复制到 SIM2 卡，或者从 SIM2 卡复制到 SIM1 卡。


## 个性化情景模式

您可以在待机屏幕上快速更改情景模式。点触顶部的状态摘要栏及情景模式标签即可。

使用设置菜单，您可以个性化每个情景模式设置。

- 1 按 。
- 2 点触**情景模式**，然后选择您要编辑的情景模式。
- 3 随后，您可以更改列表中可用的所有声音和提示选项。

## 更改显示设置

- 1 点触。
- 2 点触 ，然后从以下选项中选择：
  - 墙纸** - 为待机屏幕选择主题。
  - 主功能表** - 选择功能表样式。
  - 拨号** - 调整数字大小和颜色。
  - 字体** - 调整字体大小。
  - 备注：**背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。
  - 亮度** - 调整屏幕亮度。
  - 问候语信息** - 选择开或关，然后填写问候语信息。
  - 开机/关机** - 选择开机/关机屏幕的图像。
- 3 点触**保存**以保存设置。

## 更改手机设置

您可以根据自己的需要，随心所欲地对 GX500 进行调节。

**提示!** 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 点触 .
- 2 点触 ，然后从以下列表中选择。

**日期和时间** - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

**省电** - 选择**开**或**关**以开启或关闭初始的省电设置。

**语言** - 更改 GX500 的显示语言。

**自动键盘锁** - 在待机屏幕下自动锁定键盘。

**安全性** - 调整您的安全设置，包括 PIN 码、手机锁，更改密码和手机防盗跟踪器。

**存储器资料** - 您可以使用内存管理器确定已用内存。

**恢复初始设定** - 将所有设置重置到其出厂设置。

**资料** - 查看 GX500 的技术信息。

### 提示! 手机防盗跟踪器 (ATMT)

- 点触**安全性**和 **ATMT**。一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。用户需要配置 ATMT 设置，包括所有者姓名、备选号码 (1)、备选号码 (2) 等。默认手机防盗追踪器码为“000000”
- ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置和所用的号码。

# 设置

## 更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

点触 ，然后选择 。

## 网络设定

**选择网络** - 如果设置为“自动”，GX500 将自动搜索网络并向网络注册手机。为了得到最佳的服务和质量，建议选择此设置。

如果选择**手动**，所有当前可用网络都会显示，您可以从中选择一个进行注册。如果网络注册失败，则屏幕上会重新列出网络列表，您可以选择另外一个进行注册。

**备注：**在手动模式下，如果手机失去网络，待机屏幕上会弹出一条信息，其中显示所有可供选择的网络。

**首选列表** - 如果自动搜索网络，您可以添加要连接的首选网络。

## 连接设置

**互联网配置文件** - 此菜单显示互联网网络设定。您可以使用“选项”菜单新建、删除或编辑网络设定。但是根据国家/地区不同，您可能无法删除或编辑默认配置。

**存取点** - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

**分组数据连接** - 选择设备何时连接到网络以传输分组数据。

**USB 连接模式** - 选择数据服务并使用 LG PC 套件软件同步 GX500 以复制手机中的文件。如果通过 Windows Media Player 使用音乐同步，请在此菜单中选择音乐同步。音乐同步仅可用于音乐内容。

## 使用内存管理器

GX500 有三种可用存储器：手机、SIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

点触 ，选择 ，然后选择**存储器资料**。

**手机公用内存** - 查看 GX500 中针对以下各项的可用内存：图片、声音、视频、Flash、彩信、电子邮件、Java 应用程序、其它。

**手机剩余内存** - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

**SIM(SIM1/SIM2) 卡内存** - 查看 SIM 卡的可用内存。

**外部存储器** - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

**主存储器设置** - 选择项目的首选保存位置。

## 使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

### 发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择**发送**。选择**蓝牙**。
- 3 如果已配对蓝牙设备，GX500 将不会自动搜索以配对其它蓝牙设备。否则，GX500 将搜索范围内其它启用了蓝牙的设备。
- 4 选择您要向其发送文件的设备，然后点触**选择**。
- 5 您的文件将被发送。

**提示！** 注意进度栏，确保文件已发送。

# 设置

## 接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅右侧的“更改蓝牙设置”。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触**是**以接收文件。
- 3 您可以查看文件的保存位置，可以选择**查看文件**或**用作墙纸**。文件通常保存在“媒体相册”中的相应文件夹。

## 更改蓝牙设置：

- 1 点触 。
- 2 选择 ，然后点触  并选择**设置**。

进行更改：

**我的设备可见性** - 选择**可见**、**隐藏**或**可见1分钟**。

**我的设备名称** - 为您的GX500输入一个名称。

**支持的服务** - 选择在其它关联服务中如何使用蓝牙。

**我的地址** - 显示您的蓝牙地址。

## 与其它蓝牙设备配对

将您的GX500与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且可见**。您可以在**设置**菜单中更改可见性。
- 2 点触**搜索**。
- 3 GX500 将搜索设备。搜索完成时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

## 使用蓝牙耳机

- 1 查看蓝牙是否为**开且可见**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 点触**连接前询问**或**始终连接**，然后点触**是**立即连接。GX500 将自动切换到“耳机”情景模式。

## Wi-Fi

无线管理器允许您通过设备上的 Wi-Fi (无线局域网) 管理互联网连接。

它能允许手机连接本地无线网络，或者无线访问互联网。Wi-Fi 比蓝牙无线技术速度更快且连接范围更广，可用于快速收发电子邮件和浏览互联网。

备注：GX500 支持 WEP 和 WPA-PSK/2 加密，但不支持 EAP 或 WPS 加密。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。

如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

## 软件升级

### LG 手机软件升级计划

有关安装和使用此计划的详细信息，请访问

<http://WWW.lgmobile.com>

使用此功能，无需访问服务中心，您即可快速方便地将软件升级到 Internet 上的最新版本。由于手机软件升级计划要求用户注意升级过程的持续时间，因此，在继续执行操作之前，请留意每一个步骤中出现的任何说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于升级过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您事先记录下任何重要信息。

# 配件

这些配件随 GX500 提供。

充电器



数据线和 CD



电池



用户手册



立体声耳机



## 备注:

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

**警告:** 如果触摸屏上贴了保护膜，触摸屏的敏感度将降低。

## 网络服务

本指南中描述的无线手机适用于 GSM 850、E-GSM 900、DCS 1800 和 PCS 1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

## 技术参数

### 标准

**产品名称:** GX500

**系统:** GSM 850 /  
E-GSM 900 /  
DCS 1800 / PCS 1900

### 外部环境

**最高温度:** +55 °C (放电)、  
+45 °C (充电)

**最低温度:** -10 °C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

**CE 0168**

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2  
EN 301 511 V9.0.2  
EN 50360:2001 EN62209-1:2006  
EN 60950-1:2001  
EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

12. Feb. 2010

Signature of representative

# 故障诊断

本章列出了您在使用手机过程中可能遇到的一些问题。对于某些问题，您可能需要致电服务提供商，但是大部分问题，您都可以执行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中无 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 不在 GSM 网络中	移到靠近窗户或空旷地区的较高位置。检查服务提供商覆盖图。
代码不匹配	更改安全码时，您需要在输入后再确认一次新的安全码。两次输入的代码不匹配。	请与服务提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。

# 故障诊断

信息	可能原因	可行解决措施
手机无法打开	按开/关键时间过短	请按开/关键至少两秒钟。
	电池电量空	为电池充电。检查显示屏上的充电指示灯。
	电池触点脏	清洁触点。
充电错误	电池电量空	为电池充电。
	温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
	触点问题	检查电源，连接到手机。检查电池触点，如果需要，请清洁。
	无电源电压	插入其它插口，或检查电压。
	充电器故障	如果充电器不发热，请替换。
手机无网络	错误充电器	请仅使用原装 LG 配件。
	电池故障	替换电池。
手机无网络	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# GX500 User Guide

Congratulations on your purchase of the advanced and compact GX500 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

<b>Guidelines for safe and efficient use</b> .....	<b>6</b>
<b>Getting to know your phone</b> .....	<b>10</b>
<b>Open view</b> .....	<b>12</b>
<b>Installing the SIM and battery</b> ....	<b>13</b>
<b>Memory card</b> .....	<b>15</b>
<b>Menu map</b> .....	<b>16</b>
<b>Your standby screen</b> .....	<b>17</b>
Touch screen tips .....	17
The quick keys .....	18
Changing your Status from the status bar .....	20
Using the Multitasking function..	20
<b>Calls</b> .....	<b>21</b>
Making a call.....	21
Making a call from your contacts.....	21
Answering and rejecting a call...	21
Speed dialling .....	21
Making a second call .....	22
Viewing your call logs.....	22
Using call divert.....	23
Using call barring.....	23
Changing the common call setting .....	24
<b>Contacts</b> .....	<b>25</b>
Searching for a contact .....	25
Adding a new contact .....	25
Creating a group.....	26
Changing your contact settings..	26
Viewing information .....	27
<b>Messaging</b> .....	<b>28</b>
Messaging .....	28
Sending a message .....	28
Entering text.....	29
T9 predictive .....	29
Abc manual.....	29
Keyboard.....	30
Handwriting recognition.....	30
Setting up your email .....	30
Retrieving your email .....	31
Changing your email settings....	31
Message folders .....	32
Changing your text message settings.....	32
Changing your multimedia message settings .....	33
Changing your other settings....	34
<b>Camera</b> .....	<b>35</b>
Taking a quick photo .....	35
After you've taken your photo ....	35
Using the advanced settings.....	35
Viewing your saved photos .....	36

# Contents

<b>Video camera.....</b>	<b>37</b>	Playing a game.....	44
Shooting a quick video .....	37	Documents.....	44
After you've shot your video .....	37	Transferring a file to your	
Adjusting the Exposure.....	38	phone .....	44
Using the advanced settings .....	38	Viewing a file.....	45
Watching your saved videos .....	39	Others.....	45
		Music .....	46
<b>Your photos and videos .....</b>	<b>40</b>	Transferring music onto your	
Viewing your photos and		phone .....	46
videos .....	40	Playing a song.....	47
Using zoom when viewing		Creating a playlist .....	47
a photo .....	40	Using the radio .....	47
Adjusting the volume when		Searching for stations .....	48
viewing a video.....	40	Resetting channels .....	48
Setting a photo as wallpaper ....	40		
Editing your photos .....	41	<b>Utilities.....</b>	<b>49</b>
		Recording a sound or voice .....	49
<b>Multimedia.....</b>	<b>42</b>	Using your calculator.....	49
Pictures .....	42	Converting a unit .....	49
Sending a photo .....	42	Adding a city to your world	
Printing an image .....	42	time.....	49
Moving or copying an image.....	43	Using the stopwatch .....	50
Sounds .....	43	Adding an item to your	
Videos .....	43	calendar.....	50
Watching a video .....	43	Adding an item to your task	
Sending a video clip.....	43	list .....	51
Games and Applications .....	44	Date finder .....	51
Installing a game/application		Settings .....	51
via local install.....	44		

<b>PC Suite</b> .....	<b>52</b>	<b>Settings</b> .....	<b>61</b>
Installing the LG PC Suite on your computer .....	52	Using Dual SIM-card menu.....	61
Connecting your phone and PC .....	52	Personalising your profiles.....	61
Backing up and restoring your phone's information .....	53	Changing your screen settings...	61
Viewing phone files on your PC..	53	Changing your phone settings ...	62
Synchronising your contacts .....	54	Changing your connectivity settings.....	63
Synchronising the messages .....	54	Network settings .....	63
Music Sync .....	54	Connectivity Settings.....	64
Transferring music using Windows Media Player .....	55	Using memory manager .....	64
DivX Converter.....	55	Sending and receiving your files using Bluetooth.....	65
<b>The web</b> .....	<b>57</b>	Pairing with another Bluetooth device .....	66
Browser .....	57	Using a Bluetooth headset.....	66
Opera Mini .....	57	Wi-Fi.....	67
Accessing the web.....	57	Software Upgrade .....	67
Adding and accessing your bookmarks .....	58	<b>Accessories</b> .....	<b>68</b>
Using RSS reader.....	58	<b>Network service</b> .....	<b>69</b>
Saving a page .....	59	<b>Technical data</b> .....	<b>69</b>
Accessing a saved page.....	59	<b>Trouble Shooting</b> .....	<b>71</b>
Viewing your browser history .....	59		
Changing the web browser settings.....	59		
Using your phone as a modem ..	60		

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy


Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model GX500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.45 W/kg (10g) and when worn on the body is 0.841 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

# Guidelines for safe and efficient use

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Getting to know your phone

### End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to the standby screen.

 
 
### Multitasking key

### Call key


Dials a phone number and answers incoming calls.



**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

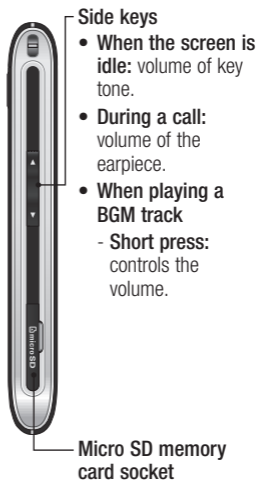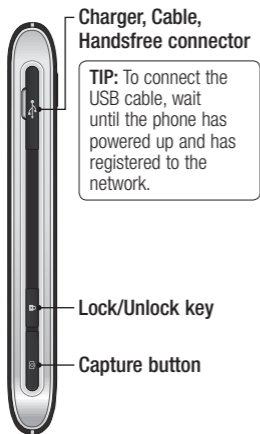

# Open view

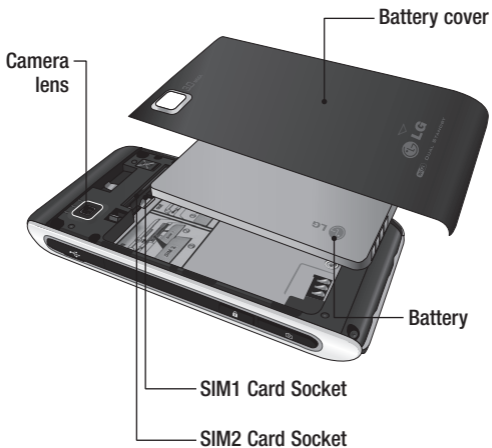 

# Installing the SIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



## 2 Remove the battery

Using the cut-out at the top and lift it from the battery compartment.



**WARNING:** Do not use your fingernail when removing the battery.

 
**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.



**WARNING**



Make sure that your SIM card has a neat and clean cut before you insert it into the holder.

# Installing the SIM and battery

## 4 Install the battery

Insert the bottom of the battery first into the bottom edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the top of the battery until it clicks into place.



## 5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

## 6 Charging your phone

Lift and twist the charger socket cover on the side of your GX500. Insert the charger and plug it into a mains electricity socket. Your GX500 needs to be charged until "Battery full" appears on screen.



 
# Memory card

## Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.


**NOTE:** A memory card is an optional accessory.

- 1 Open the memory card slot cover on the right hand edge of the phone.
- 2 Slide the memory card into the slot until it clicks into place.
- 3 Replace the cover.

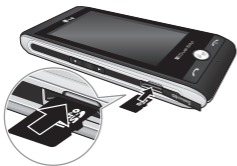

## Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the standby screen select , then scroll through **SETTINGS** Tab and choose **Phone settings**.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will then be formatted and ready to use.

**NOTE:** If your memory card has an existing content. It will automatically be filled in the correct folder; for example, videos will be stored in the My Videos folder.

# Menu map

Touch  in the standby screen to open the **Top menu**. From here you can access further menus: **COMMUNICATION**, **ENTERTAINMENT**, **UTILITIES** and **SETTINGS**.

## COMMUNICATION

- Contacts
- Recent history
- Messaging
- E-mail
- Dialling
- Social networking
- Speed dials
- New message

## ENTERTAINMENT

- Camera
- Gallery
- Music
- My stuff
- Games & Apps
- Pocket Apps
- FM radio
- Video camera

## UTILITIES

- Browser
- Google
- Alarms
- Organiser
- Memo
- Voice recorder
- Tools
- Drawing Panel

## SETTINGS

- Dual SIM settings
- Profiles
- Screen settings
- Phone settings
- Call settings
- Bluetooth
- Connectivity
- Wi-Fi

# Your standby screen

From your standby screen you can access all the menu options, make a quick call and view the status of your phone as well as many other things.



## Touch screen tips

The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your GX500 will vibrate slightly when it recognises you've touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light, yet firm, touch.


- Use the tip of your finger to touch the option you want. Be careful not to touch any other options around it.
- When the screen back light is off, press the Unlock/Lock key on the right hand side to bring back the home screen.
- Don't use any case or cover on the phone. The touchscreen won't work with any material covering it.
- There are two types of idle screen. Flick left or right to change your idle screen types on the standby screen.
  - 1 Widget idle - When you touch , the mobile widget panel appears.
  - 2 Speed dial idle - When you touch , the speed dial list appears. You can drag and click what you need right away in both idle types.

# Your standby screen

## The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.



Touch to open your address book. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the Messaging options menu. From here you can create a new SMS or MMS, or view your message folder.




























Touch to open the full Top menu which is divided into four vertical sub-menus. Touch each sub-menu's tab to view further options.

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed

Icon	Description
	An alarm is set
	Customised Profile in use
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use
	Wi-Fi


# Your standby screen


## Changing your Status from the status bar

Touch the status bar to open the Status Summary. It shows the current Time, Network, Battery, Handset memory, External Memory, Profile, MP3, SIM property set (SIM1 / SIM2), Wi-Fi and Bluetooth status. Here you can set Profile type, play/pause MP3 and activate/deactivate Bluetooth.

**TIP!** You can see the network signals highlighted by selected colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.




## Using the Multitasking function

 
Press the multitasking hard key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.



# Calls

## Making a call



- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press the  hard key or touch **Call** to initiate the call.
- 4 To end the call press the  hard key.


**TIP!** To enter + for making an international call, press and hold .

## Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 Enter the first few letters of the contact you would like to call at the top of the screen using the touchpad.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch .

## Answering and rejecting a call



When your phone rings press the  hard key or touch  to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key or touch  to reject an incoming call.

## Speed dialling





You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and choose **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it with a speed dial contact.

# Calls

- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once. To find a contact tap the Name field box and enter the first letter of the name of the contact required.


## Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

**TIP!** You can combine your calls by selecting **Join calls**. Check that your network provider supports conference calling.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs


Touch  and choose **Recent history** in the COMMUNICATION tab. Choose to view:

**All** - View a complete list of all dialled, received and missed calls.


**Dialled** - View a list of all the numbers you have called.

**Received** - View a list of all the numbers that have called you.

**Missed** - View a list of all the calls you have missed.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.


## Using call divert

- 1 Touch  and choose **Call settings** in the SETTINGS tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch  and choose **Call settings** in the SETTINGS tab.
- 2 Touch **Call barring**.

- 3 Choose any or all of the six options:

**All outgoing**

**Outgoing international**

**Outgoing international calls except home country**

**All incoming**

**Incoming when abroad**


**Deactivate all**

- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial numbers** from the **Call settings** option to turn on and compile numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

# Calls

## Changing the common call setting

1 Touch  and choose **Call settings** in the SETTINGS tab.

2 Touch **Common setting**.  
From here you can amend the settings for:

**Call reject** - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **On** or right for **Off**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.

**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.




**Save new number** - Select **Yes** to save a new number.

# Contacts


## Searching for a contact

There are two ways to search for a contact:

### From the standby screen


- 1 From the standby screen touch  to open the address book. Select the contact from the list that you want to make a call.
- 2 Touch  or press the  hard key to initiate the call.

### From the main menu

- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

**TIP!** The alphabetical keypad is displayed once you tap the Name field.



## Adding a new contact

- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your Handset or SIM (SIM 1/SIM 2).
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile, Home, Office, Pager,** and **Fax**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.

# Contacts

- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

## Creating a group


- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Groups**.
- 3 Touch .
- 4 Select **Add group**.
- 5 Enter a name for your new group. You can also assign a ringtone to the group.
- 6 Touch **Save**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

## Changing your contact settings

You can adapt your contact settings so that your address book suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Settings**.
- 3 From here you can adjust the following settings:  
**Contact list settings** - Choose to adjust the **Name display** and **Quick command key** settings.

**Copy** - Copy your contacts between your SIM cards(SIM1 or SIM2) and your handset. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the SIM to the handset it will be deleted from the SIM memory.


**Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup contacts** - Performs and backup your contacts on to the external memory. This option requires external memory.

**Restore contacts** - Restores your contacts from the external memory. This option requires external memory.

**Clear contacts** - Delete all your contacts. Choose between Handset and SIM and touch Yes if you are sure you want to wipe your contacts.

## Viewing information

- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.



**TIP!** If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

# Messaging


## Messaging

Your GX500 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:


- 1 Touch  from the standby screen.
- 2 Touch  and choose **Messaging** in the COMMUNICATION tab.


## Sending a message

- 1 Touch **New message**, then select Message to open a blank message field box.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen. Then select Communication tab and **E-mail**.
- 3 Touch **Insert**, to add an image, video, sound or template.

- 4 Touch **To** at the top of the screen to enter the recipient's number, or touch the search icon to open your address book. You can add multiple contacts. Touch **Send** when ready.

**NOTE:** You can send SMS to many users at a time. Click on contact search icon and Select multiple from Options where in user can mark/unmark contacts for sending message. To send the SMS to a particular group of contacts click on contacts search icon and select search by Group after composing the SMS.

 **WARNING:** You will be charged per 1 page text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to SMS it will be automatically converted to MMS and you will be charged accordingly.

 
## Entering text


There are five ways to enter text:


**Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.**


You can choose your input method by tapping  and **Input method**.

Tap the screen once, the keyboard appears.

 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and text keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

## T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.


## Abc manual

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

# Messaging

## Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen. Simply touch each letter to write your message and press:

 to switch to upper case.

## Handwriting recognition


In Handwriting mode you simply write on the screen and your GX500 will convert your handwriting into your message. Select **Handwriting-Screen**, **Handwriting-Box** or **Handwriting-Double Box** depending on your preferred view.

**TIP!** You may find it easier to use the stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other characters, and displays these characters as text. Handwriting recognition is only active where text can be entered.

## Setting up your email



You can stay in touch on the move using email on your GX500. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  and choose **Messaging** in the **COMMUNICATION** tab.
- 2 Touch **Settings**.
- 3 Touch **E-mail** and choose **E-mail accounts**.
- 4 Touch **Add account**.
- 5 Setup Wizard will help you set up your email settings.
- 6 You can check and edit settings by selecting the account in the list. You can also check the additional settings that were filled in automatically when you created the account.
- 7 You can change your default email account by touching **Activate**.

## Retrieving your email

You can automatically or manually check your account for new emails.

To check manually:

- 1 Touch  and choose **Messaging** in the COMMUNICATION tab.
- 2 Touch **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose Folder synchronisation and your GX500 will connect to your email account and retrieve your new messages.

## Changing your email settings

You can change your email settings according to your own preferences.

- 1 Touch  and choose **Messaging** in the COMMUNICATION tab.

- 2 Touch **Settings** and **E-mail** and then you can adapt the following settings:

**Allow reply e-mail** - Choose to allow the sending of 'read, confirmation' messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GX500 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd. & Reply** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto Retrieval in roaming** - Choose whether to retrieve your messages automatically or not.

**New email notification** - Choose whether to be alerted to new emails.

# Messaging

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Message folders

You'll recognise the folder structure used on your GX500, which is fairly self-explanatory.

**New message** - Open a new blank message.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and do more. (See **Managing your messages** below for details.)

**Mailbox** - All the mails you receive are placed into your Mailbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - Messages you send are placed in this folder.

**My Folders** - Create folders to store your messages.

**Templates** - Use a list of commonly used text and multimedia message templates.


**Emoticons** - Add and insert emoticons for your messages.

**Settings** - Change the settings for your text and multimedia messages.

## Changing your text message settings

Your GX500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings**. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your message into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as Multiple SMS or as MMS.

## Changing your multimedia message settings

Your GX500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch , select .

Choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home network** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request delivery reports.

**Read reply** - Choose to allow and/or request reply reports.

# Messaging

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your messages are stored at the message centre.


**Slide duration** - Choose how long your slides appear on screen by default.


**Creation mode** - Choose mode to create multimedia messages restrictive, warning, free.

**Delivery time** - Choose how long before messages are delivered.

**Multi msg centre** - Enter the details of your message centre.

## Changing your other settings

Touch  and choose **Settings** then:


**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

**Info. service** - Choose your reception status, language and other settings.


# Camera

## Taking a quick photo



- 1 Long press the camera hot key on the right side of the phone.
- 2 The view finder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 Press the  on the side of the phone firmly to take the photo.

## After you've taken your photo


Your captured photo will appear on screen.

-  Touch to send the photo as a **Message**, **E-mail** or **Bluetooth**. See Sending a message and Sending and receiving your files using Bluetooth.

**NOTE:** Additional cost may occur when MMS are downloaded when roaming.

-  Touch to edit the name of the selected picture.
-  Touch to use the image as wallpaper.
-  Touch to edit the image using various tools.
-  Touch to return to the previous menu.
-  Touch to delete the image.
-  Touch to take another photo immediately.
-  Touch to view a gallery of your saved photos.

## Using the advanced settings

From the view finder touch  to open all the advanced settings options.

**Colour effect** - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

**White balance** - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

# Camera

**Night mode** - Useful in dark places.

**Self-timer** - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be a part of.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

**View Mode** - To select the size for preview image.

**Select storage** - Defines the location where the pictures are stored.

**Show captured image** - Choose to view the picture with options after taking a photo.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.


**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.

**Noise reduction** - This function could reduce noise and refine a picture after taken.








**Reset settings** - Reset all the camera settings.

## Viewing your saved photos

- 1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

# Video camera









## Shooting a quick video

- 1 Press and hold the camera key  on the right side of the phone.
- 2 Alternatively, drag down  in the viewfinder in camera mode to switch to video mode.
- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the camera key  once to start recording.
- 6 **Rec** will appear at the bottom of viewfinder and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on the screen or press the camera key  a second time to stop recording.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

## After you've shot your video


A still image representing your captured video will appear on screen. The name of the video is displayed at the bottom of the screen together with **eight** icons down the right side.

-  Touch to play the video.
-  Touch to send the video as a **Message or E-mail** or by **Bluetooth**.
-  Touch to edit the video.
-  Touch to edit the name of the selected video.
-  Touch to return to the previous menu.
-  Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video immediately. Your current video will be saved.
-  Touch to view the saved videos and pictures gallery.


# Video camera

## Adjusting the Exposure

Exposure defines the difference between light and dark (contrast) in an video.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure, hazier video, or right for a higher contrast, sharper video.

## Using the advanced settings

From the view finder touch  to open all the advanced settings options.

**Colour effect** - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

**Quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

**Set time** - Set a duration limit for your video.

**TIP!** If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.



**Select storage** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

**Voice** - Choose Mute to record a video without sound.

**Hide Icons** - Choose the camera settings icons to be hidden manually or automatically.


**Reset settings** - Reset all the video camera settings.

## Watching your saved videos


- 1 In the view finder touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch  on the video.

# Your photos and videos

## Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.


## Using zoom when viewing a photo

When viewing photos, you can zoom in and out.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen. Top after pressing the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.

## Setting a photo as wallpaper


- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch .
- 4 You can zoom in and out and move the cropped section of the picture using a thumbnail at the bottom of the screen.
- 5 When you are happy with the picture touch **Set**.
- 6 Choose from the options what you want to change:  
**All, Widget, Speed dial.**


## Editing your photos


You can do lots of great things to your photos to change them, add to them or liven them up.

1 Open the photo you want to edit and touch  to show the options.


2 Touch the icons to alter your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.


 Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.


 Adding writing on a picture. See **Adding text to a photo**.


 Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.


 Erase the editing you have done to the picture. You can choose the size of eraser you use.


 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.


 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo**.

 Touch to open the Filter options.

 This helps to adjust a picture taken using automatic colour, brightness etc.

# Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **My stuff** to open a list of folders storing all of your multimedia files.

## Pictures



**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  to change the view from thumbnail view to list view.

## Sending a photo



- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Touch **Send** and choose from **Message**, **E-mail** or **Bluetooth**.
- 4 If you choose **Message** or **E-mail**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth will be turned on automatically and your phone will search for a device to send the picture.

## Printing an image

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Select an image and touch .
- 4 Touch **Print via Bluetooth**.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Touch  and select **Move** or **Copy**.
- 4 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.


## Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

## Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My videos**.
- 3 Select a video to play.

## Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **E-mail** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth turns on automatically and your phone will search for a device to send the video.

# Multimedia

## Games and Applications


You can install new games and applications to your phone to keep you amused when you have time to spare.

### Installing a game/ application via local install

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **Others** or My memory card if external memory is inserted.
- 3 Select the file (\*.jad or \*.jar) to install. An application will be installed.

**NOTE:** The jad should contain its own jar.

## Playing a game

- 1 Touch  and choose **Games & Apps** in the ENTERTAINMENT tab.
- 2 Touch **Games**.
- 3 Select a game to launch.

## Documents

From the **Documents** menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and PDF files.


## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.



### Viewing a file

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **Documents**.
- 3 Select a document and touch to View.

### Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.


To move a file from **Others** to **Documents**:

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **Others**.
- 3 Touch  and select **Move** then choose a file.
- 4 Touch **Move**, choose the destination folder from the list by touching the arrow icon. The screen will display **Moved** when the transfer is complete.

# Multimedia

## Music

Your LG GX500 has a built-in music player so you can play all your favourite tracks. To access the music player, touch .

Scroll through Entertainment to . From here you can access a number of folders:

**Recently played** - View all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:


- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch  and choose **Music** in the ENTERTAINMENT tab.
- 2 Touch **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  and choose **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**.
- 3 Touch **Add new playlist**, enter the playlist name and touch **Save**.

- 4 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick box will show next to the track names.
- 5 Touch **Done**.

## Using the radio

Your LG GX500 has an FM radio feature so you can tune into your favourite stations to listen to while on the move.

**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

# Multimedia

## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 48 channels in your phone. You must first attach the headset to the phone as this acts as the antenna.

### To auto tune:





- 1 Touch  and choose **FM radio** in the ENTERTAINMENT tab.
- 2 Touch .
- 3 Touch **Auto scan**. Then the stations will be automatically found and allocated to a channel in your phone.

## Resetting channels



- 1 Touch  and choose **FM radio** in the ENTERTAINMENT tab.
- 2 Touch .
- 3 Choose **Reset Channel** to reset the current channel or choose **Reset all Channels** to reset all of the channels. Each channel will return to the starting 87.5 MHz frequency.

# Utilities


## Recording a sound or voice

- 1 Touch  and choose **Voice recorder** in the UTILITIES tab.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

## Using your calculator

- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, deg** or **rad** etc.

## Converting a unit


- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **Unit converter**.
- 3 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.

## Adding a city to your world time


- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **World clock**.
- 3 Touch the , followed by **New city**. Start typing the name of the city you require and it will show at the top of the screen.

# Utilities

## Using the stopwatch


- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

## Adding an item to your calendar

- 1 Touch  and choose **Organiser** in the UTILITIES tab.
- 2 Touch **Calendar** then touch **Add event**.
- 3 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.

- 4 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 5 If you would like to add a subject or a note to your event, touch **Note** and type in your note, followed by **Save**.
- 6 Set **Alarm** and **Repeat**.
- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

## Adding an item to your task list

- 1 Touch  and choose **Organiser** in the UTILITIES tab.
- 2 Touch **Tasks** then touch **Add task**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.

## Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## Settings

**Calendar settings** - You can set the configurations to view the calendar.

**Send all organiser data via Bluetooth** - You can send all the data in your calendar and/or Tasks from your phone to other phones by using Bluetooth.

**Memory info.** - You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.


**Clear all** - You can delete all data regarding Calendar, Tasks, Memo and Secret memo.

# PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

**TIP!** You will need to install the application PC Suite provided on the CD-ROM or available for download from [www.lgmobile.com](http://www.lgmobile.com) PRODUCTS > Manual & Software > Go to Manual & S/W Download Section.


## Installing the LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while.
- 4 Installation guide message will be displayed on the computer screen.

**Caution!** If installation guide message is not displayed in your PC, please check your CD-ROM setting on Windows.

- 5 Insert the supplied CD-ROM or the click the Download button to directly download the LG PC Suite program from the internet.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

## Connecting your phone and PC

- 1 From the home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.
- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

## Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contacts/Calender/ToDo/Memo/photo/video**. Select the location you want to back up the information to, or restore it from. Click **OK** button then Back up or Restore Button respectively then press Finish button.
- 4 Your information will be backed up.

## Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the Manage Photos, Videos or Music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to manage files you no longer need.

# PC Suite

## Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button.  
Welcome to LG Air Sync Service will be displayed > Press Start Button > Select Contacts Sub options (Include outlook contacts or call logs are transferred from the phone during sync > Press Next > Do you want to proceed pop up > next > Select Contacts > Press Sync Now).

## Synchronising the messages


- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.

- 4 Use the toolbar at the top of the screen to edit and rearrange messages.


## Music Sync


This menu lets you add music to your GX500. Before you start transferring music from your PC to your phone, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB data cable
- microSD card (If you wish to use external memory as the music storage.)

 **WARNING:** Do not disconnect your phone during the transfer.

## Transferring music using Windows Media Player

- 1 From the home screen select , then scroll through **Connectivity** in the Settings tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and PC using a compatible USB cable.
- 4 When you try to connect the handset to your PC, your handset will read: "Music Sync" followed by Connected.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Window Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer to your handset into the **Sync List** panel.
- 8 Click on the **Start Sync** button. This starts the transfer process.

 **WARNING:** Do not disconnect your phone during the transfer.

## DivX Converter

Install the DivX converter, which is supplied on the same CD-ROM as the PC Suite software. DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

**NOTE:** GX500 doesn't support Divx file format.

## PC Suite

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*

**Pat. 7,295,673**

# The web

## Browser


**Browser** gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

## Opera Mini

GX500 supports Opera Mini 5 browser which is a Java application that can be accessed from the Browser menu or from the Games&Apps menu in your phone. Some of the salient features of this browser are Multiple Windows, Security, Touch zooming, Book Marks, History, Saved Pages, Speed Dial.

**NOTE:** To browse using Opera Mini 5, Data Connection is required.

## Accessing the web


- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

# The web

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add bookmark**. Enter a Title for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch Connect. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text.


RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

## Saving a page


- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.


## Accessing a saved page

- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

## Viewing your browser history

- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **History**. A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page.

## Changing the web browser settings

- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **Settings**.
- 3 You can choose to edit **Profiles, Appearance settings, Cache, Cookies, Security**.

# The web

## Using your phone as a modem

Your GX500 can be used as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GX500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New button** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GX500.

### Using Bluetooth:



By pairing your GX500 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the Settings menu.
- 2 Touch Search.
- 3 Your GX500 will search for devices. When the search is completed, Refresh will appear on screen.
- 4 Choose the device you want to pair with and select **OK**.
- 5 Your phone will then connect to the other device, on which a new default passcode will be create to this connection.
- 6 Your passcode protected Bluetooth connection is now ready.

# Settings

Within this folder you can adapt your settings to make your GX500 personal to you.


## Using Dual SIM-card menu

To select or change the SIM-card, press  and then scroll through SETTINGS Tab, then select .



## Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the status summary bar on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list.

## Changing your screen settings

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch  and then choose from:

**Wallpaper** - Choose the theme for your standby screen.

**Top Menu** - Choose the style of the top menu.

**Lock screen** - Choose the style of the lock screen.

**Dialling** - Adjust the number size.

**Font** - Adjust the font size.

**Brightness** - Adjust the screen brightness.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Greeting message** - Choose on or off and fill in the greeting message.

**Start-up/Shut down** - Choose the image for your start-up/shut down screen.



# Settings

- 3 Touch **Save** to save your settings.

## Changing your phone settings

Enjoy the freedom of adapting how your GX500 works to your own style.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up/right the screen. The list will move up/right so more items are visible.

- 1 Press  and then scroll through **SETTINGS** Tab.
- 2 Touch  then choose from the list below.

**Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

**Power save** - Choose to switch the factory set power saving settings **Off, Night only, Always on.**

**Touch settings** - Change the touchpad value settings.

**Languages** - Change the language of your GX500's display.

**Motion silent** - Make the GX500 go into the mute or snooze settings by flipping it over when it is ringing.

**Auto key lock** - Lock the keypad automatically in standby screen.

**Security** - Adjust your security settings, including PIN code request, handset lock, change codes and Anti theft Mobile tracker.

**Memory info.** - You can use memory manager to determine how each memory is used.

**Reset settings** - Reset all the settings to their factory definitions.


**Information** - View the technical information for your GX500.

### **TIP! Anti-theft Mobile tracker (ATMT)**

- Touch **Security** and **ATMT**. When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with Owner Name, Alternate no (1), Alternate no (2) etc. Default ATMT code is "000000"
- ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

## **Changing your connectivity settings**

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

Touch  and choose **Connectivity** in the **SETTINGS** tab.

## **Network settings**

**Select Network** - If you set to **Automatic**, GX500 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality. If you set to **Manual** all the currently available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are displayed again and you can select any other one for registration.

**NOTE:** When your handset loses the network in manual mode, the popup message to select the available network will be shown on the Idle screen.

**Preferred lists** - If the network is searching automatically, you can add a preferred network to be connected to.

# Settings

## Connectivity Settings

**Internet profiles** - This menu shows the Internet profiles. You can create new profiles, delete or edit them however, you cannot delete or edit default configurations depending on country variant.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Choose when your device should be connected to network for packet data.

**USB connection mode** - Choose Data service and synchronise your GX500 using the LG PC Suite software to copy files from your phone. If you use **Music sync** with Windows Media Player, select **Music sync** in this menu.


**Music sync** is only available for music content.

**Java settings** - Allows you to set profiles for connections made by Java programs and to view certificates.

## Using memory manager

Your GX500 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  and choose **Phone settings** in the SETTINGS tab then **Memory info**.

**Handset common memory** - View the memory available on your GX500 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

**Handset reserved memory** - View the memory available on your handset for Text msg, Contacts, Calendar, Tasks, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM(SIM1/SIM2) memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose the location you prefer items to be saved to between Handset and External memory.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.

- 3 If you have already paired the Bluetooth device, your GX500 will not automatically search for other Bluetooth devices. If not, your GX500 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.



**TIP!** Keep an eye on the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your Media Album.

# Settings

## Changing your bluetooth settings:

- 1 Touch  and choose **Bluetooth** in the SETTINGS tab.
- 2 Touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GX500.

**Supported services** - Choose how to use Bluetooth in association with different services.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GX500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GX500 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.

- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GX500 will automatically switch to Headset profile.

## Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

**NOTE:** The GX500 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

# Accessories

These accessories are supplied with GX500.

**Charger**



**Data cable and CD**



**Battery**



**User Guide**



**Stereo headset**



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

**⚠ WARNING:** When the protection film is attached on the touch window, touch sensitivity might decrease.

## Network service

The wireless phone described in this guide is approved for use on the GSM 850, E-GSM 900, DCS 1800 and PCS 1900 network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

**Product name:** GX500

**System:** GSM 850 / E-GSM 900  
/ DCS 1800 / PCS 1900

### Ambient Temperatures

**Max:** +55°C (discharging),  
+45°C (charging)

**Min:** -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

**CE 0168**

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2  
EN 301 511 V9.0.2  
EN 50360:2001 EN62209-1:2006  
EN 60950-1:2001  
EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

12. Feb. 2010

Signature of representative

# Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

# Trouble Shooting

Message	Possible causes	Possible Corrective measures
Phone cannot be switched on	On/Off key pressed too briefly	Press On/Off key for at least two seconds.
	Battery empty	Charge battery. Check charging indicator in the display.
	Battery contacts dirty	Clean contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
Phone loses network	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.