



中 文
English

用户手册

GS155



CE0168

P/NO : MMBB0376420(1.0)

www.lg.com

GS155 用户手册 - 中文

此指南有助于您了解您的新手机。它将提供关于手机功能的有用说明。
视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。

 


开始了解您的手机



安装存储卡

卸下电池盖，推存储卡插槽，然后掀起插槽。将 microSD 卡放入卡托盘，确保金色接触区域面朝下。要取出 microSD 卡，沿反方向轻推。GS155 最大支持 2 GB 存储卡。

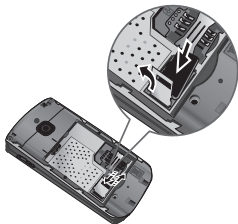

安装 SIM 卡和充电

安装 SIM 卡

当您预定了手机网络后，您将得到一个插入式 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。

 
重要! > 插入式 SIM 卡及其内容很容易因刮擦或弯折而损坏，因此，在处理、插入或移除卡时，请小心谨慎。请将所有 SIM 卡置于儿童无法接触的地方。

> SIM 卡支持：2G [1.8v / 3V]

说明

- 1 打开电池盖
- 2 取出电池
- 3 插入 SIM 卡
- 4 关闭电池盖
- 5 充电

警告：手机开机时，不要取出电池，这可能会损坏手机。

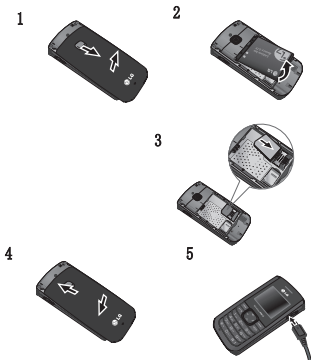

菜单地图

1 信息

- 1 新信息
- 2 收件箱
- 3 草稿箱
- 4 对话框
- 5 发件箱
- 6 已发件箱
- 7 收听语音邮件
- 8 小区广播信息
- 9 模板
- 0 设置

2 电话簿

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 全部复制
- 5 全部删除
- 6 内存状态
- 7 资料

3 通话记录

- 1 所有通话
- 2 未接来电
- 3 拨电
- 4 已接来电
- 5 通话持续时间

4 游戏

- 1 火星滚球

5 我的文档

- 1 图像
- 2 声音
- 3 其它
- 4 外部存储器

6 多媒体

- 1 照相机
- 2 MP3 播放器
- 3 FM 收音机

7 工具

- 1 闪光灯
- 2 伪装呼叫
- 3 计算器
- 4 计时表
- 5 单位对换器
- 6 世界时间
- 7 SIM 卡服务

8 日程表

- 1 闹钟
- 2 日程表
- 3 备忘录

9 设置

- 1 情景模式
- 2 日期和时间
- 3 语言
- 4 屏幕
- 5 呼叫
- 6 自动键盘锁
- 7 保安设置
- 8 省电模式
- 9 USB 连接模式
- 0 网络选择
- * 恢复出厂设置
- # 内存状态

开机和关机


- 1 按住结束键，直到开机。
- 2 按住结束键，直到关机。

拨打电话

- 1 使用键盘输入号码。要删除一个数字，请按清除键。
- 2 按  开始通话。
- 3 要结束通话，请按 。


提示！ 要输入 + 以拨打国际电话，请按住 **0**。

从电话本拨打电话

- 1 按“搜索” 打开地址簿。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。例如，要呼叫 Office，请按 **6** 三次。
- 3 要在联系人及其不同电话号码间滚动，请使用“左右导航键”。
- 4 按  开始通话。

提示！ 您可以更改手机上的设置以不同方式接听来电。按功能包，选择设置，然后选择 呼叫。选择接听模式，从任何键或仅发送键中选择。

接听和拒接来电

电话响后，按**接听**或  应答来电。电话响后，选择**静音**可静音。如果您在开会时忘记将情景模式更改为**静音**，这非常有帮助。

按  或**拒绝**拒接来电。

提示！ 您可以更改手机上的设置以不同方式接听来电。按功能包，选择设置，然后选择 呼叫。选择接听模式，从任何键或仅发送键中选择。

更改呼叫设置

您可以设置与呼叫相关的菜单。按功能包，选择设置，然后选择保安设置。

- **呼叫限制** - 选择何时限制呼叫。
- **固定拨号** - 选择可从此手机拨出的号码列表。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话簿中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：T9 预测模式、ABC 手动模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

T9 预测模式

T9 预测模式使用内置字典，根据您按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

ABC 手动模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。


123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

信息 菜单 1

GS155 包括与 SMS（短信服务）相关的功能。



发送信息

- 1 按功能包，选择信息，然后选择新信息。
- 2 选择信息以发送短信。
- 3 此时将打开新信息编辑器。信息编辑器将短信组合到一个直观的菜单中。信息编辑器的默认设置为短信模式。
- 4 使用 T9 预测模式或 Abc 手动模式输入信息。您可以通过按  切换文本输入模式。
- 5 按选项，然后选择插入符号、模板、联系人和名片。
- 6 按**发送至**。
- 7 输入手机号码或按选项，然后选择电话簿或近期号码以打开联系人列表。您可以添加多个联系人。
- 8 按**发送**。

电话簿 菜单 2

正在搜索联系人

您可以搜索电话簿中的联系人。

- 1 按电话簿并选择搜索，然后从功能包屏幕中选择电话簿。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。例如，要呼叫 Office，请按 **6** 三次。
- 3 要在联系人及其不同电话号码间滚动，请使用  和 .

通话记录 菜单 3

- **所有通话：**您可以查看所有拨电和来电列表。
- **未接来电：**您可以查看未接来电。
- **拨电：**您可以查看拨出电话（已拨出的或尝试拨出的）
- **已接来电：**您可以查看已接来电。
- **通话时间：**用于查看来电和去电的通话持续时间。您也可以重置通话计时器。

游戏 菜单 4

GS155 中预安装了多款游戏，供您在闲暇时娱乐。

我的文档 菜单 5

您可以将多媒体文件存储到手机内存中。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。所有多媒体文件保存在我的文档中。按功能包，然后选择我的文档打开文件夹列表。

GS155 支持 JPEG 图像、MP3 和 MIDI 声音文件。

多媒体 菜单 6

照相机

快速拍照

使用手机内置的相机模式，您可以拍摄人物照片。此外，您可以选择将照片用作墙纸。

- 1 按功能包并选择多媒体，然后选择照相机或者按向下导航键通过快捷键直接转到照相机。
- 2 水平握住手机，将镜头对准要拍摄的物体。
- 3 按拍摄键拍照。

MP3 播放机

LG GS155 拥有内置的 MP3 播放机，因此，您可以播放所有喜爱的音乐。

播放歌曲

- 1 按“功能包”，选择“多媒体”，然后选择“MP3 播放机”。
- 2 选择所有歌曲，然后选择要播放的歌曲，转到“选项”，并按“播放”。
- 3 音乐播放过程中，请转到“选项”->“暂停”以暂停歌曲。
- 4 按向右导航键以跳到下一首歌曲。
- 5 按向左导航键以跳到上一首歌曲。
- 6 音乐播放过程中，按“返回”键停止音乐并返回到 MP3 播放机功能包。

在菜单中，您可以按最近播放的歌曲、播放列表、录像册、艺术家和流派查看并播放歌曲。

播放歌曲过程中，

- 1 长按向右导航键至 FF
- 2 长按向左导航键至 REV。
- 3 如果歌曲播放的时间已超过 3 秒钟，而您按向左导航键，则将从头开始播放同一首歌曲，然后将播放上一首歌曲。

FM 收音机

找不到 FM 频道或频道不够清晰时，请使用耳机。

LG GS155 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要更清晰地收听收音机，您需要插入耳机。将插头插入耳机插槽（与插入充电器的插槽相同）。

收听收音机

- 1 按功能包，选择多媒体，然后选择 FM 收音机。
- 2 选择您要收听的电台的频道编号。

备注：您可以通过内置扬声器收听收音机。按选项，选择收听方式，然后选择扬声器。GS155 支持无线 FM。正常情况下，用户无需插入耳机即可收听 FM。在 FM 收音机信号较弱地区，无线模式下的灵敏度会有所降低。因此，要想获得更好的收音效果，请插入耳机。

工具/日程表 菜单 7 和 8

使用日历 (功能包 > 日程表 > 日程表)

当进入此菜单时，屏幕上出现日历。当前日期上有一方形光标。您可以使用导航键将光标移到另一日期。

添加备忘录 (功能包 > 日程表 > 备忘录)

您可以在此注册个人备忘录。

设置闹钟 (功能包 > 日程表 > 闹钟)

您最多可以将 3 个闹钟设置为在指定时间停止响铃。

使用计算器 (功能包 > 工具 > 计算器)

计算器提供基本的数学运算功能：加、减、乘、除。

使用计时表 (功能包 > 工具 > 计时表)

使用此选项可使用计时表功能。

换算单位 (功能包 > 工具 > 单位对换器)

此功能用于将任一度量值转换成所需的单位。

世界时间 (功能包 > 工具 > 世界时间)

可以查看格林威治标准时间 (GMT) 和世界各地主要城市的时间。

SIM 卡服务 (功能包 > 工具 > SIM 卡服务)

此功能视 SIM 卡和网络服务而定。如果 SIM 卡支持 SAT (即, SIM 卡应用程序套件) 服务, 则此菜单将是 SIM 卡上储存的运营商特定服务的名称。

设置 菜单 9

更改情景模式 (功能包 > 设置 > 情景模式)

您可以更改情景模式通用、静音、仅振动、户外、飞行模式和耳机。

更改日期和时间 (功能包 > 设置 > 日期和时间)

您可以设置与日期和时间相关的功能。

更改语言 (功能包 > 设置 > 语言)

您可以更改手机中显示文本的语言。此更改还将影响语言输入模式。

更改屏幕设置 (功能包 > 设置 > 屏幕)

您可以更改手机屏幕的设置。

更改保安设置 (功能包 > 设置 > 保安设置)

更改保安设置以保护 GS155 及重要信息。

- **PIN 码要求** - 选择开机时要请求的 PIN 码。
- **自动键盘锁** - 如果激活此功能，待机模式下，无需请求任何操作，按键即自动锁定。
- **手机锁** - 为以下选项选择安全码以锁定手机：**开机时**、更换 SIM 卡时或立即。
- **防盗手机跟踪器** - 一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。用户需要配置 ATMT 设置，包括名称、主电话号码、次电话号码。要激活 ATMT 功能，用户需要将 ATMT 设为开。默认 ATMT 码为“0000”。ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置和所用的号码
- **更改密码** - 更改**安全码**、**PIN2 码**或 PIN 码，输入旧密码，然后输入新密码。

使用飞行模式

- 1 按“功能包”>“设置”>“情景模式”>“飞行模式”。
- 2 使用此功能，将飞行模式设为打开或关闭。飞行模式为打开时，您将无法拨打电话或发送信息。

省电模式（功能包 > 设置 > 省电模式）

如果设置为始终打开，可以在不使用手机时节省用电。选择省电设置：始终打开、仅限晚间或关。

重设手机（功能包 > 设置 > 恢复出厂设置）

使用**重设**将所有设置重置到其出厂设置。要启动此功能，您需要安全密码。默认号码为“0000”。

更改 USB 连接

- 1 按“功能包”>“设置”>“USB 连接模式”。
- 2 更改“数据存储”、“PC 附件”或“始终询问”。（默认情况下选中“始终询问”）。

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

警告

- 在飞机上请务必关闭手机。
- 驾驶时请勿手握手机。
- 请勿在加油站、加油点、化工厂或爆破区附近使用手机。
- 为了您的安全，请仅使用指定的原装电池和充电器。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。

警告

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。
- 仅使用原装配件，以免损坏您的手机。
- 所有的无线电发射器都有对近距离内的电子干扰的危险。微弱的干扰可能会影响电视、收音机、个人计算机等。
- 应按照相关条例处置电池。
- 请勿拆卸手机或电池。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息。

此款 GS155 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十 (10) 克薄纸。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.03 W/kg (10 克)，戴在身体上时，其值为 0.440 W/kg (10 克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或灶灶之类的热源。

- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触按天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。 请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要置于诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

技术参数

标准

产品名称: GS155

系统: GSM 900 / DCB 1800

外部环境

最高: +55° C (放电)

+45° C (充电)

最低温度: -10° C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yuseok-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCB 1800 Dual band Terminal Equipment

Model Name

GS155

Trade Name

LG

CE 0168

Applicable Standards Details

RATTE Directive 1999/5/EC

EN 301 488-01 V1.8.1, EN 301 488-07 V1.3.1
EN 301 511 V8.0.2
EN 60950-2001, EN62209-1:2006
EN 60950-1:2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Furyley House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD, United Kingdom

Notified Body Identification Number : 0108

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyeon, Jr / Director

Issued Date

05.Feb. 2010

LG Electronics Logistics and Services B.V.
Volkensloot 16, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 947 88940, e-mail : jacob@lgs.com


Signature of representative

 
GS155 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.




Getting to know your phone

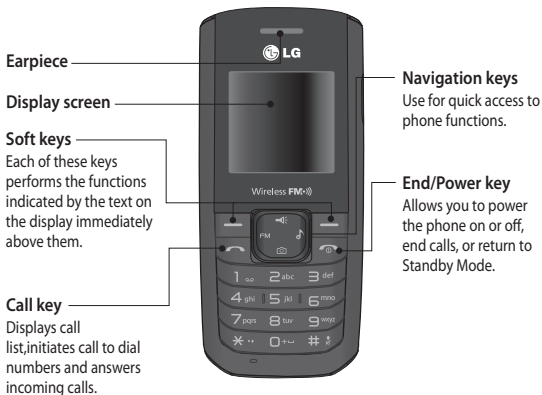

Installing a memory card

 Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction. The GS155 will support a memory card of up to 2 GB.

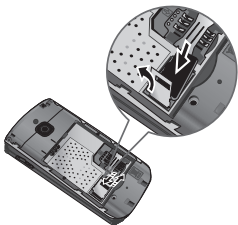

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

 
Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

› SIM card support: 2G [1.8v / 3V]

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

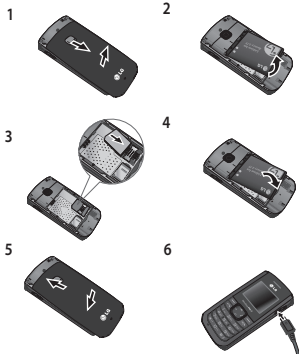

Menu map

1 Messaging

- 1 New message
- 2 Inbox
- 3 Drafts
- 4 Chat box
- 5 Outbox
- 6 Sent
- 7 Listen to voice mail
- 8 Info messages
- 9 Templates
- 0 Settings

2 Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Copy all
- 5 Delete all
- 6 Memory status
- 7 Information

3 Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration

4 Games

- 1 Space ball

5 My stuff

- 1 My images
- 2 My sounds
- 3 Others

6 Media

- 1 Camera
- 2 MP3 player
- 3 FM radio

7 Tools

- 1 Torch
- 2 Fake call
- 3 Calculator
- 4 Stopwatch
- 5 Unit converter
- 6 World clock
- 7 SIM services

8 Organiser

- 1 Alarm
- 2 Calendar
- 3 Memo



9 Settings

- 1 Profiles
- 2 Date & Time
- 3 Languages
- 4 Display
- 5 Call
- 6 Auto keylock
- 7 Security
- 8 Power save
- 9 USB connection
- 0 Network selection
- * Reset settings
- # Memory status

Turning Your Phone On and Off



- 1 Press and hold the End key until the power comes on.
- 2 Press and hold the End key until the power goes off.

Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear key.
- 2 Press  to initiate the call.
- 3 To end the call, press .


TIP! To enter + when making an international call, press and hold 0.


Making a call from your contacts

- 1 Press  contacts from idle screen and select "Search" to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".
- 4 Press  to initiate the call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press Menu, select Settings, choose Call. Select **Answer mode** and choose from **Any key** or **Send key only**.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Security**.


- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating schedule events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mod.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. You can use the  key to cycle through possible words matching the keys you pressed.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.


123 mode

Type numbers using one keystroke per number. You can also add numbers while remain in letter modes by pressing and holding the desired key.

Messaging Menu 1

Your GS155 includes functions related to SMS (Short Message Service).

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 A new message editor will open. Message editor combines SMS into one intuitive. The default setting of the message editor is SMS mode.
- 3 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing .
- 4 Press **Options** and choose **Insert** to add an **Symbol, template, contact** and **business card**.
- 5 Press options and select **Send to**.
- 6 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 7 Press options and select **Send**.

Contacts Menu 2

Searching for a contact

You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".

Call history Menu 3

- **All calls:** You can view all lists of outgoing or incoming calls.
- **Missed calls:** You can view the unanswered calls.
- **Dialled calls:** You can view the outgoing calls (called or attempted).
- **Received calls:** You can view the Received calls.
- **Call duration:** Allows you to view the duration of your incoming and outgoing calls.

Games Menu 4

Your GS155 comes with preloaded games to keep you amused when you have time to spare.

My stuff Menu 5

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Your GS155 supports JPEG images, MP3 & MIDI sound files.

Media Menu 6

Camera

Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.


- 1 Press **Menu** and select **Media**, select **Camera** or go directly to camera through short cut key by pressing down navigation key.
- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press the Capture key to take a photo.

MP3 Player

Your LG GS155 has a built-in MP3 player so you can play all your favourite music.

Playing a song

- 1 Press menu and select Media and then choose MP3 Player.
- 2 Choose all songs then select the song you want to play, Go To Options and then Press Play.
- 3 While music is playing, go to Options->Pause to pause the song.
- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press "Back" key to stop the music and return to the MP3 player menu.

You can view and play songs, add songs to Play list, remove, set any song as ringtone from  options.

When you're playing a song,

- 1 Long press right navigation key to FF
- 2 Long press left navigation key to REV.
- 3 If song is played for more than 3 seconds and if we press left navigation key then it will play the same song from the beginning else it will play the previous song.

FM radio

When phone can't find FM channel or low channel clarity is happening, use ear-mic .

Your LG GS155 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen FM Radio more clear. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via built-in speaker. Press **Options**, select **Listen via Speaker**.

GS155 supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

Tools / Organiser Menu 7,8

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding a memo (Menu > Organiser > Memo)

You can register your own memos here.

Setting your alarm (Menu > Organiser > Alarm)

You can set up to 3 alarm clocks to go off at a specified time.

Using your calculator (Menu > Tools > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the stopwatch (Menu > Tools > Stopwatch)

This option allows you to use the function of a stopwatch.

Converting a unit (Menu > Tools > Unit converter)

This converts many measurements into a unit you want.

World clock (Menu > Tools > World clock)

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world.

SIM services (Menu > Tools > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Settings Menu 9

Changing your profiles (Menu > Settings > Profiles)

You can change your profile **General, Silent, Vibrate only, Outdoor, Flight Mode** and **Headset**.

Using Flight mode

- 1 Press Menu > Settings > Profiles > Flight mode
- 2 Use this function to switch the flight mode On or Off. You will not be able to make calls, send message when the Flight mode is On.

Changing your date & time (Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing the language (Menu > Settings > Language)

You can change the language for the display texts in your phone. This change will also affect the language input mode.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Call (Menu > Settings > Call) - You can set the menu relevant to a call.

Auto keylock - You can make the key pad locked automatically after some time.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your GS155 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Phone lock** - Choose a security code to lock your phone, **When power on, When SIM changed** or **Immediately**.

- **Call barring**
- **Fixed dial number**
- **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.
- **Change codes** – Changing your **security code** or **PIN1 code** or PIN2 code, ATMT code, enter the old code followed by the new code.

Power save (Menu > Settings > Power save)

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

Changing your USB connection

- 1 Press Menu > Settings >USB connection.
- 2 Make your change to Mass storage, PC suite or Always ask. (Default Always ask will be selected)

Network selection - You can also select a network manually and set a network.

Resetting your phone (Menu > Settings > Reset settings)

Use Reset settings to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

Memory status - You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.



WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or serious damage to your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.

- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GS155 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.03 W/Kg (10g) and when worn on the body is 0.440 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission.
Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Technical data

General

Product name : GS155

System : GSM 900 / DCS 1800

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeondeu-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GS155

Trade Name

LG

CE 0168

Applicable Standards Details

RAYE Directive 1999/5/EC

EN 301 488-01 V1.8.1, EN 301 488-07 V1.3.1

EN 301 511 V8.0.2

EN 60950-2001, EN62209-1:2006

EN 60950-1:2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Furze House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD, United Kingdom

Notified Body Identification Number : 0100

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyeon, JI / Director

Issued Date

05.Feb. 2010

LG Electronics Logistics and Services B.V.
Vakuumstraat 16, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 88940, e-mail : jacob@lgs.com

Signature of representative

