



ENGLISH

User Guide

GD880



CE 0168 Ⓢ

P/N : MMBB0374255 (1.0) H

www.lg.com

Bluetooth QD ID B016192



Some of the contents in this manual may differ from your phone depending on the phone software or your service provider.



GD880 User Guide

Congratulations on your purchase of the advanced and compact GD880 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use.....	7	Changing the common call setting.....	23
Getting to know your phone	12	Changing the Video call settings ...	24
Open view	13	Call costs	24
Installing the SIM and battery	14	Call durations	24
Charging your phone.....	15	Data volume	24
Memory card.....	16	Contacts.....	25
Using your touch screen.....	17	Searching for a contact.....	25
Touch screen tips	17	Adding a new contact.....	25
Control the touch screen	17	Creating a group	25
Your home screen	18	Changing your contact settings.....	26
You can add favourite menus to the main menu.....	18	Viewing information.....	27
Quick keys.....	19	Messaging.....	28
Calls	20	Messaging	28
Making a call.....	20	Sending a message	28
Making a call from your contacts...	20	Entering text.....	28
Answering and rejecting a call.....	20	T9 mode	28
In-call options	21	Using templates	28
Speed dialling	22	Using emoticons	28
Making a second call	22	Using signatures.....	29
Viewing your call logs	22	Changing your text message settings.....	29
Using call divert.....	22		
Using call barring.....	23		
Using Excuse message	23		

Contents

Changing your multimedia message settings	29	Setting a photo as wallpaper.....	40
Changing your other settings	30	Editing your photos	41
Setting up your e-mail	30	Multimedia.....	42
Microsoft Exchange e-mail account.....	31	Pictures	42
Retrieving your e-mails.....	32	Sending a photo.....	42
Sending an e-mail using your new account.....	32	Using an image.....	42
Changing your e-mail settings.....	32	Printing an image	42
Camera	33	Moving or copying an image	42
Getting to know the viewfinder	33	Sounds	43
Taking a quick photo	34	Using a sound	43
After taking a photo.....	34	Sending a sound file	43
Using the advanced settings.....	35	Videos	43
Video camera	37	Watching a video	43
Getting to know the viewfinder	37	Sending a video clip	43
Making a quick video	38	Flash contents.....	43
After making a video	38	Documents.....	43
Using the advanced settings.....	39	Other content.....	44
Your photos and videos	40	Games	44
Viewing your photos and videos ...	40	Playing a game	44
Capturing an image from a video..	40	Transferring a file to your phone....	44
Viewing your photos as a slide show	40	Music	44
		Transferring music onto your phone.....	45
		Playing a song.....	45
		FM Radio	45
		Searching for stations.....	46

SNS.....	47	Synchronising your messages	52
Facebook.....	47	Using your phone as a Music Sync	
Twitter.....	47	device	52
Settings.....	47	DivX Converter.....	52
Organiser	48	OSP (On Screen Phone).....	54
Adding an event to your calendar.	48	Installing OSP on your computer... 54	
Adding an item to your to do list... 48		Starting OSP.....	54
Adding a memo.....	48	Connecting your phone and PC.... 54	
Setting your alarm.....	48	Disconnecting your phone from	
Recording a sound or voice.....	49	your PC	54
Using your calculator.....	49	Controlling your phone.....	55
Converting a unit.....	49	Transferring file between your	
Adding a city to your World clock.. 50		phone and PC.....	55
Using the stopwatch	50	Editing file of your phone	55
LG Air sync.....	50	Using OSP Notification.....	55
PC Sync.....	51	The web	56
Installing LG PC Suite on your		Accessing the web.....	56
computer	51	Adding and accessing your	
Connecting your phone and PC..... 51		bookmarks	56
Backing up and restoring the		Using RSS reader	56
information on your phone	51	Saving a page	57
Viewing phone files on your PC..... 51		Accessing a saved page	57
Synchronising your contacts	52	Viewing your Mobile history..... 57	
		Using your phone as a modem..... 57	

Contents

Settings	59
Personalising your profiles	59
Changing your Display settings	59
Changing your Device settings	59
Changing your touch settings	60
Changing your Connectivity settings	60
Using memory manager	62
Sending and receiving your files using Bluetooth	62
Changing your Bluetooth settings	63
Pairing with another Bluetooth device	63
Using a Bluetooth headset	63
Wi-Fi	64
Software Upgrade	64
Accessories	65
Technical data	66

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.10 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

Guidelines for safe and efficient use

- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls



Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.


- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

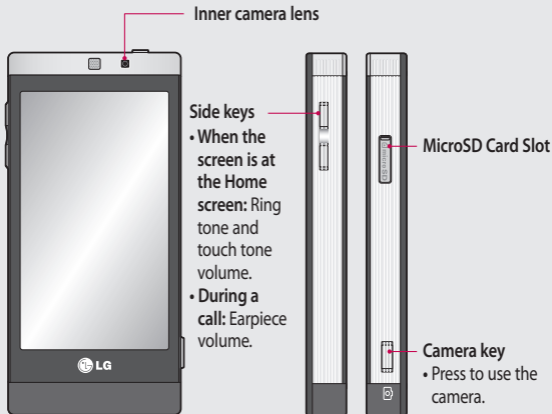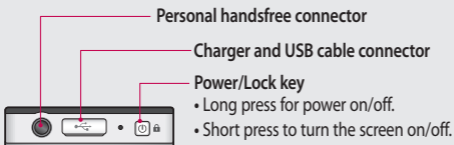

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view

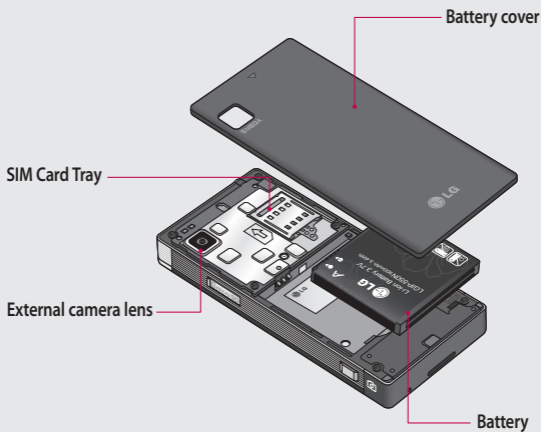

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and pull it away.



2 Install the SIM card


Slide the SIM card into the SIM card holder, making sure that the gold contact area on the card is facing down. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it out gently.

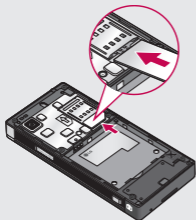

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the battery


Insert the right side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the left side of the battery down until it clicks into place.

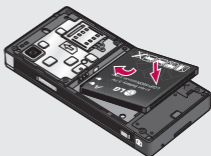

Charging your phone

Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable to the phone and plug it into a power socket. Your GD880 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery life. Disregard the first "Battery full" message and keep the phone on charge overnight.

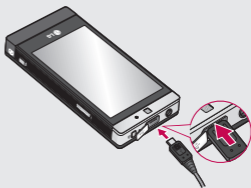

Memory card

Installing a memory card

You can expand your phone's memory by using a MicroSD memory card.


NOTE: A memory card is an optional accessory.



- 1 Slide the slot cover down.
- 2 Put the microSD card into the slot. Make sure the gold contact area is facing down
- 3 Slide the slot cover up.

The GD880 will support up to an 32GB memory card.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can use it.

- 1 From the Home screen select , then **Device settings**.
- 2 Touch **Memory info** and scroll down to choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

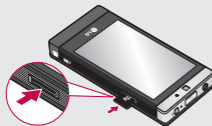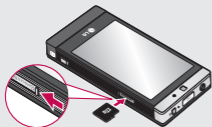

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD880 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GD880 touch screen change dynamically depending on the task.

Opening Applications

To open any application, simply touch its icon.



Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.

Your home screen


From here you can access all the menu options, make a quick call, view the status of your phone and much more.

You can add favourite menus to the main menu

- 1 Touch  from the home screen.
- 2 If you want to remove a favourite menu, touch  on the upper right of the icon. If you want to add favourite menus to the main menu, touch **Add** on the bottom right of the screen.



- 3 Once you touch **Add**, you can choose between **Widget**, **Bookmarks** or **Shortcut** (If you do not want to add, touch **Cancel**).
- 4 Select a menu you want to add by touching the Star mark on the right side of the menu. The menu will appear on the screen when you return to the previous screen.
- 5 When you are finished, touch **OK**.

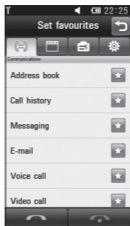

Your home screen

Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact into the Search field at the top of the screen using the touchpad. You can also create new contacts, edit existing ones, etc.




Touch to access the **Messaging** menu. From here you can create a new SMS or MMS or view your message folder.






Touch to open the full **Top menu**.

 
Multi-tasking function

While you are running an application, touch  to open the Multitasking menu. From here you can view some applications that are running and access them with one touch.

Calls


Making a call

- 1 Touch  from the home screen to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call, but if you want to initiate a Video call, touch  then select **Make video call**.
- 4 To end the call, press End call on the bottom of the screen.

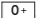TIP! To enter + for making an international call, press and hold .

TIP! Press the power key to lock the touchscreen to prevent making calls by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open your **Contacts**.
- 2 Tap the Search field box on the top of the screen and use the keypad to enter the first few letters of the contact you want to call.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or you can touch the contact name and select the number to use if there is more than one for that contact.


Answering and rejecting a call

When your phone rings, touch **Answer** to answer the call.

To mute the ringing, touch **Silent**.

This is useful if you have forgotten to change your profile to **Silent** for a meeting. Touch **Reject** to reject an incoming call.


In-call options

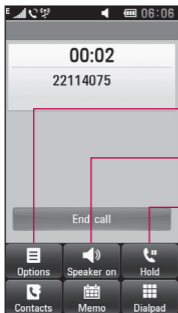



Options - Touch  to bring up a list of further in-call options.

Speaker - Touch  to turn the speaker phone on.

Hold - Touch  to put a call on hold.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

Touch  to add memo during a call.



Touch  to search your contacts during a call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

Calls



Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Phonebook** and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 3 Your **Contact** will open. Select the contact you want to assign to that number by touching the contact's phone number once. To find a contact, tap the **Search** field box and enter the first letter of the contact's name.
- 4 To call a speed dial number, touch  on the home screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without touching Voice call.


Making a second call

- 1 During your initial call, touch **Dialpad** and type the number you want to call.
- 2 Touch **Voice call** to connect the call.

- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls, press  and select **End**.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch **Logs** in the **Main menu** or touch  from your home screen and select any of the options like All logs, missed calls only, calls only, messages only, video calls only, **Favourites**

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Call divert**.
- 3 Choose between **Voice calls** and **Video calls**. You can choose to divert all calls, calls when the line

is busy, when there is no answer or when you cannot be reached.

- 4 Touch **Activate**.
- 5 Choose **To voicemail centre** or **To other number** to enter the new divert number.
- 6 Touch **OK** when you have finished entering the number.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Call barring**.
- 3 Choose **Voice calls** or **Video calls**. You can turn off all call barring by touching **Deactivate all** from the **Call barring** menu.
- 4 Choose any of the five options:
All outgoing calls
Outgoing international
Outgoing international calls

except home country

All incoming

Incoming when abroad.

Touch **Activate**.

- 5 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers Main menu** to turn on and compile a list of numbers that can be called from your phone.


Using Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

Changing the common call setting

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Common settings**. From here you can adjust the settings for:
Call reject - Slide the switch to the left to highlight the **Reject list**. You

Calls

can touch the text box to choose all calls, calls from specific contacts or groups, calls from unregistered numbers (those not in your contacts) or calls with no caller ID. Touch  to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Show SNS events - Choose whether SNS events will be displayed or not.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset or select **Handset** to answer a call by pressing a key on the handset.

Save new number - Choose whether the **Save new number** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

Voice clarity - Choose whether the **Voice clarity** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

Changing the Video call settings

1 Touch **Call settings**.

2 Touch **Video call settings**.

From here you can adjust the settings for:

Use private image - Choose whether to use a private image for video calls.

Private image - Choose an image for video calls.

Mirror - Choose whether to use Mirror.

Call costs

View the charges applied to your dialled numbers (this service is network-dependent and some operators cannot support it).

Call durations

View the duration of all your dialled or received calls or both.



Data volume

View the amount in kilobytes of all received or sent data or both.

Contacts

Searching for a contact


There are two ways to search for a contact:

- 1 Touch  from the home screen and then touch **Phonebook** or touch  from the home screen.
- 2 You see a list of contacts. Typing the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.



TIP! The alphabetical keypad is displayed once you tap the Name field.

Adding a new contact

- 1 Touch **Phonebook** and touch **New**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to 5 different numbers per contact. Each entry is preset for **Mobile**, **Home**, **Office**, **Pager**, and **Fax**.
- 5 Add an email address.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Colleagues**, **School** and **VIP**.
- 7 You can also add a **Ringtone**, **Vibration**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Birthday**, **Anniversary** and **Memo**.
- 8 Touch  to save the contact.
favorite - You can set this contact as favourite by touching the Star mark on the right side of the option.

Creating a group


- 1 Touch **Phonebook**. Touch the down arrow beside **Contacts** and then select **Groups**.
- 2 Touch **New group** or touch  and select **New group**.
- 3 Enter a name for your new group in Group name field. You can also assign a ringtone, vibration and a group image to the group.
- 4 Touch  to save the group.

Contacts

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your **Phonebook**.

Changing your contact settings

You can adapt your contact settings to suit your own preferences.

- 1 Touch **Phonebook**, touch , scroll down and select **Contact settings**.
- 2 From here, you can adjust the following settings:
 - Show keypad** - Choose whether the Keypad is displayed.
 - Display name** - Choose the display order of the name.
 - Synchronise contact** - Connect to your server to synchronise your contacts.
 - Copy all** - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time or all at once.

Move all - This works the same way as Copy, but the contacts will only be saved to the location you've moved them to.

Restore contacts - Restores your contacts from the external memory. This option requires external memory.


Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to erase your contacts.

Memory info - View information about available memory regarding **Handset**, **USIM** and **USIM e-mail**.


Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Backup your contacts to the external memory. This option requires external memory.

Viewing information

- 1 Touch **Phonebook**, touch , scroll down and select **Information**.

From here you can view your **Service dial numbers**, your **Own numbers**, your **Memory info** (showing your memory usage) and **My profile**.




TIP! To add your own business card, select **My profile** and enter your details as you would for any contact. Touch  to finish.


Messaging

Messaging

Your GD880 combines SMS and MMS into one intuitive and easy-to-use menu.


Sending a message


- 1 Touch  from the home screen and then touch **Messaging** or touch  from the home screen.
- 2 Touch **Write message**,  and select **Insert** to add an image, video, sound, emoticon, etc.
- 3 Touch **To** to enter the recipient's number or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 4 After entering the text, you can send the message by touching **Send SMS/Send MMS** at the top of the message.

 **WARNING:** If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

Touch  to turn on T9 mode.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Function keys enable you to change between capital and lowercase input or write a message in a full screen on the keypad, etc.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.


Using emoticons

Liven up your messages using emoticons. There are some commonly used emoticons already on your phone. You can add a new emoticon by touching **New emoticon**.

Using signatures

Create signatures for the SMS and MMS messages you send most often. When writing a new message, you can enter Signature from Insert->More in option menu.

Changing your text message settings

Touch **Messaging**, touch  and select **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages were delivered.


Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore the data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or **MMS**.

Changing your multimedia message settings

Touch **Messaging**. Touch  and select **Settings**, then select **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual**, you will receive only notifications of MMS and you can decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS (**Low priority, Normal priority, High priority**).

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.


Creation mode - Choose your message mode (**Restricted, Warning, Free**).

Messaging

Delivery time - Choose how long to wait before a message is delivered.

Multimedia message centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging**. Touch  and select **Settings**.

Videomail/Voicemail - Touch **New profile** to add a new Videomail/Voicemail service. Contact your network operator for more information about the service they provide.


Service message - Choose to receive or block service messages. You can also set your message security by creating lists of trusted and non-trusted senders in the **Service security** option.

Save sent message - Choose whether to save sent messages.


Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Signatures - Create, edit or delete **Signatures**.

Setting up your e-mail

Touch  from the home screen, scroll to the right and then touch **E-mail**.

If the email account is not set up, touch **Microsoft Exchange, etc.**

If the email account is set up in your phone and you want to add a new email account, touch  and select **New e-mail account**.

E-mail address - Enter the email address.

Password - Enter the account password

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Mailbox type - Enter mailbox type POP3 or IMAP4.

Save to server - Choose whether to save your emails on the server.

Copies are always saved for IMAP4 accounts.

Save sent mail into - Select where to save sent emails for IMAP4 mailboxes. For POP3 mailboxes sent mails are always saved to the handset.

Download option - Choose the way to download emails. Choose between Header only or All for POP3, and header only, header + body, or all for IMAP4.

Access point - Choose your Internet access point.

Auto retrieve - Choose whether to retrieve your new emails automatically.

Retrieve only new - Choose whether to discard emails already downloaded previously.

SMTP TLS/SSL - Choose whether to use TLS/SSL for outgoing server.

Incoming TLS/SSL - Choose whether to use TLS/SSL for incoming server.

Retrieve amount - Choose retrieve amount

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

SMTP authentication - Choose the security settings for the outgoing mail server

SMTP Username - Enter the SMTP username.

SMTP Password - Enter the SMTP password.

Microsoft Exchange e-mail account

E-mail address - Enter the account email address.

Server address - Enter the email server address.

Domain - Enter the account domain.

User name - Enter the account user name.

Password - Enter the account password.

Sync items - Choose whether to use Sync items (**Contacts, Schedules, Tasks**).

Messaging

Retrieving your e-mails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail**.
- 2 Touch the account you want to use.
- 3 Choose **Retrieve new**.

Sending an e-mail using your new account

- 1 Touch **Write e-mail** and a new email will open.
- 2 Enter the recipient's address and write your message. You can also attach images, videos, audio files and other file types.
- 3 Touch **Send email** to send your email.

Changing your e-mail settings

- 1 Touch **E-mail** from the main menu.
- 2 Touch  and select **E-mail settings**, then you can change the following settings:

E-mail account - Select an email account

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Include message in fwd & reply - Select whether to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval while... - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Create an email signature.

Priority - Choose the priority level of your email messages.

Maximum receive size - Select the maximum receive size: **100KB, 200KB, 300KB, 500KB, 1MB, 2MB, 2.2MB**.

Camera

Getting to know the viewfinder

Zoom - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.

Exposure - A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.



Back

Camera mode

Video mode - Slide down this icon to switch to video mode.



Gallery - This enables you to access your saved photos from within the camera mode. Simply touch and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Macro - Switch on take a close up shot

Camera


Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera is focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the Camera key on the side of the phone firmly.


TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


After taking a photo


Your captured photo will appear on the screen. The image name is shown on the bottom of the screen with four icons on the right side.

 Touch to send the photo as a Message, E-mail, Bluetooth, Facebook, Blog this.


NOTE: Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as Home screen, Lock screen, Contact, Start-up, Shut down, Outgoing call or Incoming call screens.

 Touch to edit the image using various tools.

 Touch to return to the viewfinder.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the seven numerical options: **5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, **home screen**, **VGA(640x480)**, **QVGA(320x240)**.

Scene mode - Set the camera to adjust to the environment. Choose from **Auto**, **Night**, **Landscape**, **Portrait** or **Sport**.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **ISO 800**, **ISO 400**, **ISO 200** or **ISO 100**.

White balance - Choose from **Auto**, **Incandescent**, **Fluorescent**, **Sunny** or **Cloudy**.

Colour Effect - Choose a colour tone to apply to the photo you're taking.

There are six colour tone options: **Off**, **Sepia**, **Monochrome**, **Negative**, **Solarize** and **Blue**.

Focus - Select the way the camera will focus. Choose from **Auto focus**, **Manual focus** or **Face tracking**.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**.

Shot mode - Choose the shot mode from 9 options.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be, but the file size will increase.

Show captured image - Choose to view the picture with options after taking a photo.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Geo-Tagging - Choose whether to switch on the EXIF information for the photo to write GPS information.

Camera


Reset settings - Restore all camera settings.

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Swap cam - Choose whether to use the inner camera or the outer camera.

Video camera

Getting to know the viewfinder

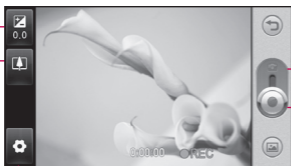

Back

Camera mode - Touch this icon to switch to camera mode.

Start recording

Gallery

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Zoom - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.





Exposure - A low contrast video will appear foggy, whereas a high contrast video will appear much sharper.

Video camera

Making a quick video

- 1 Press the camera key on the right side of the phone.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens toward the subject of the video.
- 3 Press the camera key on the phone once to start recording. Or touch the red dot  on the screen.
- 4 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the camera key on the phone again to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen



Touch to send the video as a Message or E-mail or by Bluetooth, Youtube.



Touch to use the video as a voice or video ringtone




Touch to play the video.



Touch to return to the viewfinder.



Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.


Touch  to shoot another video right away.



Touch to view a gallery of saved videos and images.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Refer to the advanced settings for the Camera.

Video size - Select Video size: **VGA(640x480)**, **QVGA(320x240)**, **QCIF(176X144)**.


Recording mode - Set a duration limit for your video: **Normal**, **MMS**.

Audio - Choose whether to mute (record a video without sound) or to unmute to include the sound.

Show recorded video - Choose to view the video with options after taking a video.




Your photos and videos


Viewing your photos and videos


- 1 Scroll and touch **Gallery** in the **Main menu** or touch  on your camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video



- 1 Select the video you would like to capture an image from.
- 2 Touch the centre of the screen to bring up the play options, then touch  to pause the video on the frame you'd like to convert to an image and touch the upper left of the screen to open the  menu.
- 3 Touch  on the upper left of the screen and select **Capture**.
- 4 The image will appear on the screen, with its image name.

- 5 Touch  on the upper right of the screen to return to the video.
- 6 The image will be saved in your **Media album** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.


Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.


- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.
- 3 You can open menus such as Duration, Transition, etc. by tapping  during the slide show.

Setting a photo as wallpaper

- 1 Touch **Gallery** in the **Main menu**.
- 2 Touch the photo you would like to set as wallpaper.


- 3 Touch  to open the menu.
- 4 Touch **Set as**, then **Home screen image**.
- 5 Select **ok**


Editing your photos


- 1 From the Gallery menu, choose the photo you'd like to edit, touch  on the upper left of the screen to open the menu and select **Edit**.
- 2 Touch the icons to alter your photo:


 Select area.


 Select a tool:


 Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.

 Adding texts to a picture. You can choose the text box and the colours of the box and text.

 Decorate your photo with stamps.

 Erase the drawings you made on the picture. You can choose the size of eraser to use.

 Touch to open further effect options including **Rotate**.

 Touch to apply the effect options to a photo.

Adjustment This helps to adjust a picture taken using Brightness or Contrast.

 Touch to return to the gallery.

Save Save the changes you made to your phone. You can save the edited photo with another name.

Undo Erase the editing you did on the photo.

Send via Select to send the edited pictures as **Message**, **E-mail** or **Bluetooth**.





Multimedia

You can store any multimedia files on your phone's memory to have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory. select My Stuff from the main menu. You can open a list of the folders that store all your multimedia files.

Pictures


Images contains a list of pictures including default images preloaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo


- 1 Touch  from the home screen, touch **My stuff** and select **Images**. Select the picture you want and touch .
- 2 Touch **Send Via** and choose **Message, E-mail, Bluetooth**.

Using an image

You can choose images to use as wallpaper, for the lock screen and to identify callers.

- 1 Touch **My stuff** in the **Main menu** and select **Images**. Select the picture you want and touch .
- 2 Touch **Set as** and choose from: **Homescreen image, Lockscreen image, Contact image, Start up image, Shutdown image, Outgoing call image, Incoming call image**


Printing an image

- 1 Touch **My stuff** and select **Image**. Select the picture you want and touch .
- 2 Touch **Print** then choose between **PictBridge** and **Bluetooth**.

TIP! You can print via Bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to free some space in one of the memory banks or to preserve your images.

- 1 Touch **My stuff** from the main menu. select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark an image by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.


Sounds

Sounds contains a list of sounds including downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as ringtones.

Using a sound

- 1 Touch **My stuff** in the **Main menu** and select **Sounds**.
- 2 Select a sound you want. It will begin to play.
- 3 Touch and select set as.
- 4 Choose from Ringtone, Video ringtone, Message tone.

Sending a sound file

- 1 Select a sound.
- 2 Touch  and then touch **Send via**. Choose from Message, E-mail or Bluetooth


Videos

Videos shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the **Main menu** and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  and then touch **Send via**. Choose from **Message**, **E-mail** or **Bluetooth**.

Flash contents

The **Flash contents** folder contains all downloaded SWF and SVG files.

- 1 Touch **My stuff** in the **Main menu** and select **Flash contents**.
- 2 Select the file you want to view.

Documents

From the **Documents** folder in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Multimedia

Other content

Other content contains a list of files that are not pictures, sounds, videos, documents, games or applications.

Games

You can install new games on your phone to enjoy when you have spare time.

You can also access this using the **Games & Apps** menu in the **Main** menu.

Playing a game

- 1 Touch **Games & Apps** from the main menu.
- 2 Select Games, then choose a game to launch.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one

another.

- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your Image folder if it is an image file and in the Sound folder if it is a music file.

Music

Your LG GD880 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music**. From here, you can access a number of folders located at the top of the screen:

NOTE: The copyright of music files is protected by international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

All tracks - Contains all the songs you have on your phone except the preloaded default music.

Favourite - Contains the songs you saved as Favourites.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlist - Contains all the playlists you have created.

Transferring music to your phone

The easiest way to transfer music to your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent, you should accept it on your phone by touching **Yes**.

- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music**.
- 2 Select the song you want to play. The confirmation message appears when in **Silent** mode.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

FM Radio

Your LG GD880 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

- 1 Scroll and touch **FM radio** in the **Main menu**.
- 2 Tune in to a station or adjust the volume if desired.


NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket next to the charger connector.

Multimedia

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the antenna.

To tune automatically:

Touch  and touch **Auto-scan**.

A confirmation message appears.

Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


NOTE: You can also manually tune to a station by using the wheel displayed next to the radio frequency.

SNS

A social network service focuses on building and reflecting a social network or social relationship among people who share interests and/or activities.


Facebook

Facebook is a social networking website.


- 1 Touch  from the home screen and then touch **Facebook**.

Twitter

Twitter is a free social networking and micro-blogging service.

- 1 Touch  from the home screen and then touch **Twitter**.

Settings



- 1 Touch  from the home screen and then touch **SNS settings**.
- 2 Turn on Social networking. If you have an account related to social networking, the account is displayed. Touch the account, then touch **Import friends** to add your friend contact to your phone.

- 3 If you have no account, touch **New account**, then create your account.




NOTE: You will incur an extra cost by connecting to this service. Check the data charges with your network provider.

Organiser



Adding an event to your calendar

- 1 Touch  from the home screen and then touch Organiser.
- 2 Select the date you would like to add an event to.
- 3 Touch  and touch New schedule or simply touch New schedule at the bottom of the screen.
- 4 Touch Category then choose from Appointment, Anniversary or Birthday.
- 5 Enter Subject.
- 6 Check and enter the date and the time you would like your event to begin. For Appointment and Anniversary enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an Appointment.
- 7 Set Alarm and Repeat.
- 8 Select Save and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


Adding an item to your to do list

- 1 Touch  from the home screen and then touch **Tasks** in the **Main menu**.
- 2 Touch  and touch **New task** or simply touch **New task** at the top of the screen.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Normal** or **Low**.
- 4 Save your task by touching .


Adding a memo

- 1 Touch  from the home screen and then touch **Memo** in the **Main menu**.
- 2 Touch  and then **New memo**. Or simply touch **New memo** at the top of the screen.
- 3 Type your memo and then touch **Save**.
- 4 Your memo will then appear on the screen in the memo application.

Setting your alarm

- 1 Touch  from the home screen and then touch **Alarms**. **Widget alarm** should appear in the list







as the default and you cannot delete it.

- 2 Touch  and then **New alarm**. Or simply touch **New alarm** at the top of the screen.



NOTE: You can set up to 11 alarms including **Widget alarm**.

TIP! Slide the alarm switch left to set it.


Recording a sound or voice

- 1 Touch  from the home screen and then touch **Voice recorder** in the **Main menu**.
- 2 Choose where to save the recording: **Internal** or **External**.
- 3 Choose a recording mode: **Normal** or **MMS**.
- 4 Touch  to begin recording.
- 5 Touch  to pause recording.
- 6 Touch  to end recording.
- 7 Touch  to listen to your recording.
- 8 Touch  to adjust the volume.

Using your calculator

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg**, **rad** etc.

Converting a unit

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Unit converter**.
- 3 At the top of the screen, choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Organiser

Adding a city to your World clock

- 1 Touch from the home screen and then touch Other tools in the Main menu.
- 2 Select World clock.
- 3 Touch and then New city. Or simply touch New city at the top of the screen.
- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the icon in the upper left hand side of the screen and type the name of the city you require in the search field box.
- 6 Touch on any city from the map/list

Using the stopwatch

- 1 Touch from the home screen and then touch Other tools in the Main menu.
- 2 Select Stopwatch.
- 3 Touch Start to begin timing.
- 4 Touch Lap if you want to record a lap time.
- 5 Touch Stop to end the timer.

- 6 Touch Resume to restart the stopwatch from the time you stopped it, or touch Reset to start the time again.

LG Air Sync


Using this menu, you can synchronise your PIM data or other contents of your phone with your LG Air Sync account.

- 1 Touch LG Air Sync in the **Main menu**.
- 2 If you have no LG Air Sync account, please visit www.lgairsync.com to create your account. If you have an account, key in your ID and Password.
- 3 If you want to synchronise your PIM data, touch PIM Sync. If you want to synchronise your contents, touch Link Air.
- 4 Using PIM Sync, You can synchronise contacts,Calendar,tasks,memo . To synchronise with the server select the items you want to synchronise, then touch Sync now.
- 5 Using Link Air, You can sync Pc history,wallpaper,images,memos and text files .To synchronise with the server ,select the items you want to synchronise, then touch Sync now.


PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait a few moments. An installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait a few moments. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as described above.
- 2 Click on the **Backup** icon and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to or restore information from. Click the **Start** icon.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as described above.
- 2 Click on the Manage Photos, Videos or music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

PC Sync

TIP! Viewing the contents of your phone on your PC helps you to arrange files you no longer need.

Synchronising your contacts


- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click Sync Contacts button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select the target where you want to save your contacts.
Right-click your contacts and then **Select All**.

Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the home screen, touch  and touch **Connectivity**.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

DivX Converter

Install the DivX converter, which is supplied on the same CD as the PC Sync software DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format

to Mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

OSP (On Screen Phone)

Using the OSP feature, you can see your phone screen from your PC. You can control your phone from the PC Monitor just as you would on the phone.

Installing OSP on your computer

When you install LG PC Suite on your computer, OSP is installed automatically

Starting OSP

Click  on your computer or start > program > LG OSP

Connecting your phone and PC

By USB cable

- 1 Click 'Connection Wizard'.
- 2 Select 'Cable connection', then click Next.
- 3 Connect the handset and PC via USB cable.
- 4 Select Next.
- 5 Enter your phone password into the PC (default value is "0000")

By Bluetooth

- 1 Ensure that Bluetooth is switched On and Visible for both your PC and your phone.

- 2 Select Bluetooth connection, then click Next
- 3 Select your phone among the searched phones, then click Next
- 4 Enter the PIN code into the PC, then click Next.
- 5 Click 'Yes' in the confirmation message.
- 6 Enter the PIN code into your phone, then click OK.
- 7 Enter your phone password into the PC, then click OK.

Disconnecting your phone from your PC

If you want to disconnect your phone from your PC, click 



Controlling your phone

You can control your phone using OSP. If you mouse-click a menu in the OSP main screen, the menu runs in your phone as if you had selected the menu on your phone.

For example, if you want to send a message using OSP, click Messaging from OSP main menu, then click Write message.

You can enter characters by mouse-clicking or using your PC keyboard.

If you want to use the mouse to key in characters, click the characters you want to enter.

If you want to use the keyboard, type in the characters on your keyboard.

Click Send SMS when you have finished writing the message.

Transferring a file between your phone and PC

Transfer a file from PC to Phone

- 1 Select the file you want to transfer from your PC, then drag and drop the file to the OSP Screen.

Transfer a file from Phone to PC


- 1 Select the file you want to transfer from **Media album** from OSP screen, then click the right mouse button and select **Save to PC**.

Editing a file on your phone

- 1 Select the file you want to edit from the **Media album** from OSP screen, then click the right mouse button and select **Edit**.
- 2 You can edit the file using associated applications.
- 3 When you finish editing your file, it will be transmitted back to your phone.

Using OSP Notification

The OSP feature gives you Popup messages with information about your phone events: **Alarm, Message, Incoming Call**, etc.

- 1 Select  in the OSP Screen
- 2 Select "Alerts me with Popup"

NOTE: When you use the OSP feature, your phone's reaction may be slow.

The web

Accessing the web


- 1 Touch **Browser** in the **Main menu**.
- 2 To go straight to the browser homepage, select **Browser**. Or select **Enter URL** and type in the URL, followed by **OK** in the upper left of the screen.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check with your network provider for data charges.

Adding and accessing your bookmarks

For easy and fast access to your favourite web sites, you can add bookmarks and save web pages.


- 1 Touch **Browser** in the **Main menu**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **New bookmark**. Enter a name for your bookmark, followed by the URL in the corresponding field box.

- 4 Touch  on the upper left of the screen. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark, simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Go**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

Accessing a saved page

Touch **Browser** and select **Saved pages**. You can view the saved pages here.

Viewing your Mobile history

Touch **Browser** and select **Mobile history**.

Using your phone as a modem

Your GD880 can double as a modem for your PC, giving you email and internet access even when you can't connect by wire. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure that you have the LG PC Suite installed on your PC.
- 2 Connect your GD880 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New button** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write a profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD880.

Using Bluetooth:

- 1 Ensure that Bluetooth is switched **On** and **Visible** for both your PC and GD880.
- 2 Pair your PC and GD880 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New button**.


The web

- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write a profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GD880.


Settings

Personalising your profiles

You can Personalise each profile setting using the settings menu.

- 1 Touch  from the home screen and then touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone, Volume, Message tone** settings and more.


Changing your Display settings

Touch  from the home screen and then touch **Display settings**. Choose the screen setting you want to edit.

NOTE: The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

Changing your Device settings

Enjoy the freedom of adapting the operation of your GD880 to your own style.

Touch  from the home screen, touch **Device settings** and then choose from the list below.

Settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Slide the switch left to set the power saving settings on/off or Night only.

Languages - Change the language of your GD880's display.

Auto lock - Lock the keypad automatically in the home screen. You can choose the time for the auto lock.

Security - Adjust your security settings, including PIN code request, handset lock, Change codes and ATMT. Anti Theft Mobile Tracker - When the handset is stolen, handset sends the SMS to the numbers configured by

Settings

real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT code is "0000."

Memory info - See **Using memory manager** for more information.

Primary storage settings - Choose the location you prefer items to be saved between Handset memory and External memory.

Reset settings - Restores all settings to their factory defaults.

Device information - Shows the device information. You can upgrade your software via the Web using this menu.


Device guide - show how to use each functions (Homescreen, Widget download, Indicator, Menu, Contacts, SNS, Browser, Lock screen gesture)

Changing your touch settings

You can activate sound or vibration for your touch tone.

Changing your Connectivity settings

Your Connectivity settings have already been set up by your network operator so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch  from the home screen and then touch **Connectivity**.

Network selection

Select network - If you select **Automatic**, the GD880 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality. If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Network mode - You can set a type of network to search for when networks are searched in the **Select network** menu.

Preferred lists - You can add a preferred network to connect to. If the network is searched automatically, simply choose one from the network list. If not, you can add a new network manually.

Internet profiles - This menu shows the **Internet profiles**. You cannot delete or edit the default configurations for your country. However, you can add a new profile using this menu.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Back-up -You can send your information to an operator server or receive information s from an operator server.

NOTE: This service is not available in all countries. Please contact your service provider for further information.

Home network -You can choose and share contents by **Home network**. Be careful about disclosing personal information.

GPS type - Select GPS type: **Assisted GPS, Stand alone**.

DivX VOD registration - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

USB connection mode - Choose a data service from the options and synchronise your GD880 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use **Music sync** with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Packet data conn. - Choose when your device should be connected to the network for packet data.

Browser settings - Set the values related to the browser (**Profiles, Appearance settings, Cache/Cookies, Security, Reset settings**).

Streaming settings - Your network operator has already saved this information. You can add a new profile using this menu.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Data roaming - offers you to manage data reception of Multimedia/Widget/ Email/PIM/Link Air in roaming area. Using Data roaming function, you can block data application service to not pay data application fee in roaming area.

Settings

The default settings is off and the use of data application will be blocked out. When you activate Data roaming function, you can download or synchronize data.

Using memory manager

Your GD880 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is being used and how much space is available.

Touch **Device settings**, then **Memory info**.

Internal common memory - View the memory available on internal common memory.

Internal multimedia memory - View the memory available on internal multimedia memory.

Internal reserved memory - View the memory available on your handset for **SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items**.

USIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory

card (you may need to purchase the memory card separately).

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD880 will not automatically search for other **Bluetooth** devices. If not, your GD880 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sending.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.

- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Go to My stuff**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings

Touch **Bluetooth** and select .

Make your changes to:

My device information - View your device information regarding Bluetooth.

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - View your device name.


My Bluetooth address - View your Bluetooth address.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode on/off - Turn on or off.

Pairing with another Bluetooth device

By pairing your GD880 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility by touching .
- 2 Touch **New device**.
- 3 Your GD880 will search for devices. When the search is completed, the **Refresh** icon will appear on the upper left side of the screen.
- 4 Choose the device you want to pair with and click 'Yes' in the confirmation message. You may need to enter the passcode if the passkey does not match with the device you are trying to pair.
- 5 Touch **Always ask** or **Always allow**, then the device is paired.

Using a Bluetooth headset

- 1 Check that your Bluetooth is **ON** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

Settings

- 3 Touch **Always ask** or **Always allow**. Your GD880 will automatically switch to Headset profile.

Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The GD880 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://www.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are supplied with the GD880.

Charger



**Data cable
and CD**



Battery



**Stereo
headset**



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name: GD880

System: GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900 / WCDMA

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD880

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

09.Feb. 2010

Signature of representative

LG Mobile



WARRANTY CARD

This LG handset and charger comes with a 12-month warranty from date of purchase or 15 months from manufacturing date of corresponding IMEI No. Of the unit whichever is earlier, against defect in material or workmanship. In case of a defect, LG Electronics India Pvt. Ltd. undertakes to get the set repaired free of charge through its authorised service centre (ASC) or service dealer subject to following conditions:

Terms and Conditions

1. This warranty is applicable to the first purchase and in no case it can be transferred or extended.
2. Repair of this product will be carried out on a carry in basis to the nearest ASC.
3. While the company will make every effort to carry out repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised ASC/ service dealer reserves the right to retain any parts of the component/s replaced at its discretion. In the event of a defect being noticed in the equipment during the warranty period.
5. This warranty entitles the purchaser to free of cost repairs of the unit within warranty period and does not entitle for replacement or refund of entire unit. Claims, if any, to this warranty shall in no case exceed the purchase price of the unit.
6. In case of any software upgradation of the phone, no warranty is provided on phone memory or phone book.
7. The warranty is void in case the serial no./ IMEI no. is tampered / disfigured or details in the warranty card are not properly filled up at the time of purchase.
8. This warranty is not valid for damages resulting due to negligence, mishandling, improper use, tampering, breakage, soaking, fire, unauthorised repair and failure due to network upgrades.
9. Batteries are covered under warranty for a period of 6 months from date of purchase or 9 months from date of corresponding IMEI no. of the unit whichever is earlier
10. Warranty does not cover accessories external to the equipment supplied by the dealer.
11. The Delhi / New Delhi courts shall have the jurisdiction to try any dispute and /or suits related to or arising out of this agreement.

Customer Information Center/ Call Center Number

For any query related to the after sales service and customer support please contact us at the numbers listed below.

	24 x 7	CALL CENTER OPERATIONS	
	1800-180-9999 (Toll Free)		5757554 (Send SMS)
www.lgindia.com lgservice@lgindia.com			

BRANCH ADDRESSES

S. No.	Branch	Branch Office Address	STD Code	Phone No.
1	Ahmedabad	LGEIL, 233-234, Platinum Plaza, Judges Bungalow Road, Bodakdev Road, Ahmedabad - 51	079	40040013 / 14
2	Asansol	LGEIL, Block-E, 1st Floor, P.C. Chattarjee Market, Rambandhu Tala, GT Road (E) Asansol - 713303	0341	3292009 / 3292010
3	Aurangabad	LGEIL, 302 CIDCO No 3, Opp Hotel Ramgini, Jaina Road, Aurangabad - 431003	0240	2474055 / 32095436 / 32095437 / 32095438
4	Bangalore	LGEIL, No. 914, 2nd Floor, Sri Venkateshwar Complex, Opp. IBP Petrol Bunk, 80ft Road, 6th Block, Koramangala - Bangalore - 560095	080	41146145 / 41144750 / 41144751 / 30910754 / 30910753
5	Bhopal	13A Vignes Warehousing Corporation, Sector-G Govindpura Industrial Area J K Road Bhopal	0795	4062900 / 3092938 / 3959804
6	Bhubaneswar	LGEIL, Plot No. 02, 1st Flr., Bapuji Nagar, Bhubaneswar - 751009	0674	2531430 / 2534280 / 3966525 / 3966526
7	Chandigarh	LGEIL, SCO No. 142-143, 3rd Floor, Sector-34A Chandigarh. - 160002	0172	5087389 / 90 / 5089110 / 3256001 / 3256003
8	Chennai	LGEIL, AA 11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai - 600040	044	65510501 - 04
9	Cochin	LGEIL, 40/1270, Vasudeva Buildings, T.D. Road, Ernakulam Cochin - 682011	0484	2368743 / 2370744 / 2370484 / 4027444 / 4027555
10	Coimbatore	LGEIL, 250a, Sangarur Main Road, Kannappa Nagar, Coimbatore - 641027	0422	2332197 / 2332195 / 2332506 / 3094613 / 3094573
11	Dehradun	LGEIL, M - 22, Mobbewala, Tata Commercial Compound, Dehradun Saharanpur Road, Dehradun	0135	2644213 / 283
12	Delhi	LGEIL, A-27, Mohan Co-operative, Industrial Estate, New Delhi	011	26991411 / 12 / 13
13	Ghaziabad	LGEIL, J-10, RDC Rajnagar Ghaziabad - 201001	0120	9811354152 / 3 / 6A / 05
14	Goa	LGEIL, Plot No-D-36-D-4, Rego Baug, Alto Santacruz, Bambolim, Goa - 403	0832	3239455 / 3294956 / 3294759
15	Gurgaon	LGEIL, 11nd Flr, A Block, Centre Point Bldg, Sushant Lk, PH-1, Gurgaon - 122001	0124	4047461 / 62 / 63 / 4272867 / 4047460
16	Guwahati	LGEIL, Shantiner Bhawan, C.K Aggarwal Path, Chenikurthi, Guwahati - 781003	0361	2663895 / 2666958 / 2665983 / 2668984
17	Hubli	LGEIL, 603/1B, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli - 580030	0836	4250251 / 52 / 2337251 / 52
18	Hyderabad	LGEIL, 1st Floor, Survey No 54, Pulla Reddy Building, Vikarampuri Main Road Kharkhana, Secunderabad - 500004	040	27811732 / 33 / 34
19	Indore	LGEIL, 3rdflr., 304 Bansi Trade Centre, 581/5 M.G. Road, Indore - 452003	0731	4065523 / 24 / 40822157
20	Jaipur	LGEIL, B-71, Sahakar Marg, Lal Kothi Scheme, Jaipur - 302015	0141	5111118 / 5113028 / 5105392
21	Jalandhar	LGEIL, Village Khajuria, Near Hawall Resturant Jalandhar, Phagwara Highway, G T Road, Jalandhar	01824	502667 / 508025 / 502668
22	Jammu	LGEIL, Plot No - 52, Yard No. 6, Transport Nagar, Narwal, Jammu - 180006	0191	2477420 / 2477419 / 2474396 / 2474384
23	Jodhpur	LGEIL, 22(1-A)/21(2-B)/2, RIICO Heavy Industrial area, Jodhpur - 342003	0291	2742384 / 392
24	Kolkata	LGEIL, 1, Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Kolkata - 700071	033	22883250 / 51 / 52
25	Kundli	LGEIL, Sunshine Enterprises, Sunder Cold Storage, Gt Karnal Road, Kundli - Sonapat	0130	2219201 / 02 / 03
26	Lucknow	LGEIL, B-537, Hari Kunj, Keshav Nagar, Sitapur Road Lucknow - 226200	0522	2757538 / 39 / 2759121
27	Ludhiana	LGEIL, Village Jhande, Near Badowal Railway Station, Opp ferozpur Road Ludhiana.	0161	2804413 / 19
28	Mumbai	LGEIL, Trade Star, 4th Floor, A Wing, J B Nagar, Andheri Kurla Road, Andheri (E) Mumbai - 400059	022	28352882 - 2887
29	Nagpur	LGEIL, 5a, Road No.13, Behind Mstrc Workshop, MIDC Hinga, Nagpur - 440016	07104	235120 / 235122
30	Patna	LGEIL, 2nd Floor, Ankit Chandra Deep Complex, Bander Bageecha, Near Samrat Hotel, Patna - 800001.	0612	3299156
31	Pune	LGEIL, 105/106, Premium Point, GM Road, Opp Modern High School, 11th Floor, Shivaji Marg, Pune - 411005	020	66203100 / 732
32	Rajpur	LGEIL, Nathani Compound, Shyam Nagar, Katora Talab, Rajpur (C.G.)	0771	4053171 / 4037470 / 4048745
33	Ranchi	LGEIL, 402, Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	0651	3294026 / 2311815 / 3090426
34	Surat	LGEIL, 1001-1004, Ascen Plaza, 11nd Flr, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat - 395009	0261	2730982 / 83 / 84
35	Thane	LGEIL, Gal Shop No- 206.207, 2nd Floor, Sai Plaza, Above Vijay Sales Opp. Cine Wonder Mall, Ghodbunder Road, Thane(West) - 400607	022	25472633 / 2637
36	Varanasi	LGEIL, Pama Complex, DLW, Lahartara Road, Shivdaspur Manduadih, Varanasi UP - 221002	0542	2375432 / 36 / 37
37	Vijaywada	LGEIL, Door No 32-211-7, Ratnamamba Street, Prakashaji Nagar, Vijaywada - 520010, Andhra Pradesh	0866	2497283 / 87
38	Warangal	LGEIL, HOUSE No. 1-8-598/1 FIRST FLOOR, BESIDE HDFC BANK NAKKAL GUTTA, HANAMAKONDA-506001 (WARANGAL)	0870	2551453

Dealer name with Stamp Dealer address
 IMEI No. Date of sale Serial no.

LG Electronics India Pvt. Ltd., Plot No. 51, Udyog Vihar Surajpur Kasna Road, Greater Noida, U.P.

CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
2nd Floor, 9B, DLF Cyber City, Phase-III,
Gurgaon - 122002

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,
Phase-III, Gurgaon - 122002.
Haryana

Dear Sir,

RE: Loss of mobile phone no.:

MAKEMODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES NO

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
- (i) Original Invoice & Cash Memo.
- (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
- (iii) Translation of vernacular documents in English/Hindi.
- (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details



LG

24 x 7 CALL CENTER OPERATIONS



1800-180-9999

(Toll Free)



5757554

(Send SMS)



www.lgindia.com

lgservice@lgindia.com

