



ENGLISH

User Guide

GD880



CE 0168 !

P/N : MMBB0374270 (1.0) W

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016192



Some of the contents in this manual may differ from your phone depending on the phone software or your service provider.

This handset is not recommended for blind disability person due to touch screen keypad.



## GD880 User Guide

Congratulations on your purchase of the advanced and compact GD880 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

Guidelines for safe and efficient use.....	7	Changing the common call setting.....	25
Getting to know your phone .....	14	Changing the Video call settings ...	26
Open view .....	15	Call durations .....	26
Installing the SIM and battery ....	16	Data volume .....	26
Charging your phone.....	17	<b>Contacts.....</b>	<b>27</b>
Memory card.....	18	Searching for a contact.....	27
Using your touch screen.....	19	Adding a new contact.....	27
Touch screen tips .....	19	Creating a group .....	27
Control the touch screen .....	19	Changing your contact settings.....	28
<b>Your home screen .....</b>	<b>20</b>	Viewing information.....	28
You can add favourite menus to the main menu.....	20	Importing friends from Social network.....	29
Quick keys.....	21	<b>Messaging.....</b>	<b>30</b>
<b>Calls .....</b>	<b>22</b>	Messaging .....	30
Making a call.....	22	Sending a message .....	30
Making a call from your contacts... ..	22	Entering text .....	30
Answering and rejecting a call.....	22	T9 mode .....	30
In-call options .....	23	Using templates .....	30
Speed dialling .....	24	Using emoticons .....	30
Making a second call .....	24	Using signatures.....	31
Viewing your call logs .....	24	Changing your text message settings.....	31
Using call divert.....	24	Changing your multimedia message settings.....	31
Using call barring.....	25		
Using Excuse message .....	25		

# Contents

Changing your other settings .....	32	Setting a photo as wallpaper.....	42
Setting up your e-mail .....	32	Editing your photos .....	43
Microsoft Exchange e-mail account.....	33	<b>Multimedia.....</b>	<b>44</b>
Retrieving your e-mails.....	33	Pictures .....	44
Sending an e-mail using your new account.....	33	Sending a photo.....	44
Changing your e-mail settings.....	33	Using an image.....	44
<b>Camera .....</b>	<b>35</b>	Printing an image .....	44
Getting to know the viewfinder .....	35	Moving or copying an image .....	44
Taking a quick photo .....	36	Sounds .....	45
After taking a photo.....	36	Using a sound .....	45
Using the advanced settings.....	37	Videos .....	45
<b>Video camera .....</b>	<b>39</b>	Watching a video .....	45
Getting to know the viewfinder .....	39	Sending a video clip .....	45
Making a quick video .....	40	Flash contents.....	45
After making a video .....	40	Documents.....	45
Using the advanced settings.....	41	Other content.....	45
<b>Your photos and videos .....</b>	<b>42</b>	Games .....	46
Viewing your photos and videos ...	42	Playing a game .....	46
Capturing an image from a video..	42	Transferring a file to your phone....	46
Viewing your photos as a slide show .....	42	Music .....	46
		Transferring music to your phone .	47
		Playing a song.....	47
		FM Radio .....	47

<b>Organiser</b> .....	48	DivX Converter.....	53
SNS.....	48	<b>OSP (On Screen Phone)</b> .....	54
Facebook.....	48	Installing OSP on your computer... 54	
Twitter.....	48	Starting OSP.....	54
Settings.....	48	Connecting your phone and PC.....	54
Adding an event to your calendar. 48		Disconnecting your phone from your PC .....	55
Adding an item to your to do list... 48		Controlling your phone.....	55
Adding a memo.....	49	Transferring file between your phone and PC.....	55
Setting your alarm.....	49	Editing a file on your phone.....	55
Recording a sound or voice.....	49	Using OSP Notification.....	56
Using your calculator.....	49	<b>The web</b> .....	57
Converting a unit.....	50	Accessing the web.....	57
Adding a city to your World clock.. 50		Adding and accessing your bookmarks .....	57
Using the stopwatch .....	50	Using RSS reader .....	57
LG Air Sync.....	50	Saving a page .....	58
<b>PC Sync</b> .....	51	Accessing a saved page .....	58
Installing LG PC Suite on your computer .....	51	Viewing your Mobile history.....	58
Connecting your phone and PC.....	51	Using your phone as a modem.....	58
Backing up and restoring the information on your phone .....	51	<b>Settings</b> .....	60
Viewing phone files on your PC.....	52	Personalising your profiles .....	60
Synchronising your contacts .....	52	Changing your Display settings ....	60
Synchronising your messages .....	52	Changing your Device settings ....	60
Using your phone as a Music Sync device .....	52	Changing your touch settings .....	61

# Contents

Changing your Connectivity settings .....	61
Using memory manager .....	63
Sending and receiving your files using Bluetooth .....	63
Changing your Bluetooth settings	64
Pairing with another Bluetooth device .....	64
Using a Bluetooth headset .....	64
Wi-Fi .....	65
Software Upgrade .....	65
<b>Accessories .....</b>	<b>66</b>
<b>Technical data .....</b>	<b>67</b>
<b>Troubleshooting .....</b>	<b>69</b>

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.10 W/kg(10 g).
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

## Guidelines for safe and efficient use

- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock which could cause injury or damage your phone
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Your mobile phone may cause interference with some hearing aids.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit.
- Pull off the road and park before making or answering a call if driving conditions allow you to do so.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

### Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. Therefore we recommend not to turn the phone on or off while holding the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

# Guidelines for safe and efficient use

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a petrol station.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.

Use your mobile phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;

- Australia Dial (0-0-0)
- New Zealand Dial (1-1-1)
- International Dial (1-1-2)
- other local emergency number.

Remember, it is a free call when dialling emergency services from your mobile phone in Australia.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike older batteries, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- Replacing with an incorrect battery increases the chance of explosion.
- Dispose of used batteries in accordance with your local council regulations. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to prevent unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Guidelines for safe and efficient use



## Driver Safety Tips

Your mobile telephone gives you the powerful ability to communicate almost anywhere, anytime. But an important responsibility accompanies the benefits of mobile phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your mobile phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device to add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Typing up a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your mobile phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
  - Australia Dial (0-0-0)
  - New Zealand Dial (1-1-1)
  - International Dial (1-1-2)
  - other local emergency number.Remember, it is a free call when dialling emergency services from your mobile phone in Australia.
- Use your mobile phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

- If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance, local traffic authority or police station.

# Getting to know your phone

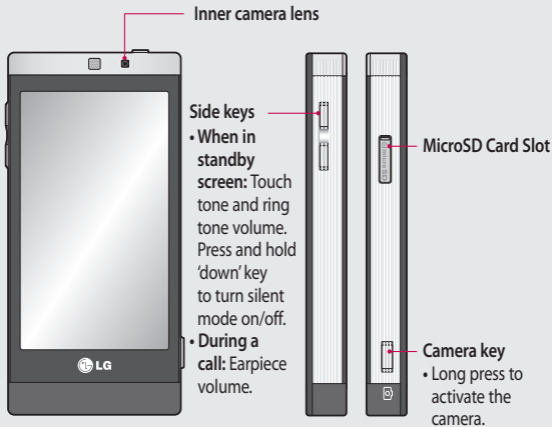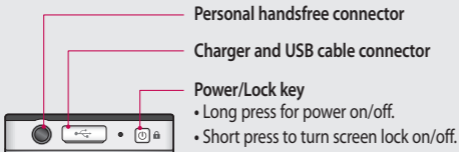

**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



# Installing the SIM and battery


## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and pull it away.



## 2 Install the SIM card


Slide the SIM card into the SIM card holder, making sure that the gold contact area on the card is facing down. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it out gently.

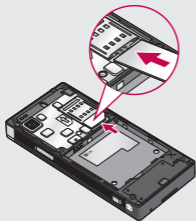

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the battery


Insert the right side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the left side of the battery down until it clicks into place.

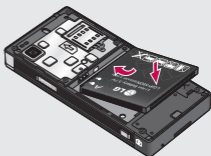

## Charging your phone

Connect the travel adapter (charger) and the USB cable. Connect the USB cable to the phone and plug it into a power socket. Your GD880 must be charged until the “Battery full” message appears on the screen.

**NOTE:** The battery must be fully charged initially to improve battery life. Disregard the first “Battery full” message and keep the phone on charge overnight.

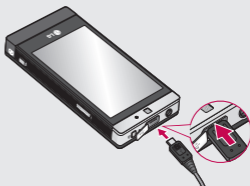

# Memory card



## Installing a memory card

You can expand your phone's memory by using a MicroSD memory card.

**NOTE:** A memory card is an optional accessory.


- 1 Slide the slot cover down.
- 2 Put the microSD card into the slot. Make sure the gold contact area is facing down
- 3 Slide the slot cover up.

The GD880 will support up to an 32GB memory card.

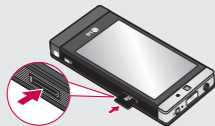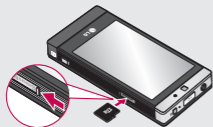

## Formatting the memory card

Your memory card may already be formatted. If it isn't, it is recommended to format it before using it with your mobile phone.

- 1 From the Home screen select , then **Device settings**.
- 2 Touch **Memory info** and scroll down to choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

# Using your touch screen

## Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light touch.
- Use the tip of your finger to touch the option you require.
- After the GD880 has not been used for sometime it will automatically lock the screen. Auto lock duration can be changed under **Device settings**.

## Control the touch screen

The controls on the GD880 touch screen change dynamically depending on the task.

### Opening Applications

To open any application, simply touch its icon.



### Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.


# Your home screen

From here you can access all the menu options, make a quick call, view the status of your phone and much more.

## You can add favourite menus to the main menu

- 1 Touch  from the home screen.
- 2 If you want to remove a favourite menu, touch  on the upper right of the icon. If you want to add favourite menus to the main menu, touch **Add** on the bottom right of the screen.



- 3 Once you touch **Add**, you can choose between **Widget**, **Bookmarks** or **Shortcut** (If you do not want to add, touch **Cancel**).
- 4 Select a menu you want to add by touching the Star mark on the right side of the menu. The menu will appear on the screen when you return to the previous screen.
- 5 When you are finished, touch .



# Your home screen

## Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact into the search field at the top of the screen using the touchpad. You can also create new contacts, edit existing ones, etc.






Touch to access the **Messaging** menu. From here you can create a new SMS or MMS or view your message folder.

 


Touch to open the full **Top menu**.

# Calls


## Making a call

- 1 Touch  from the home screen to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call, but if you want to initiate a video call, touch  then select **Make video call**.
- 4 To end the call, press **End call** on the bottom of the screen.

**TIP!** To enter + for making an international call, press and hold .

**TIP!** Press the power key to lock the touchscreen to prevent making calls by mistake.

## Making a call from your contacts

- 1 From the home screen touch  to open your **Contacts**.
- 2 Tap the search field box on the top of the screen and use the keypad to enter the first few letters of the contact you want to call.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The phone will use the default number if there is more than one number linked to that contact.
- 4 To call a number other than the default touch the contact name then select the number to dial.


## Answering and rejecting a call

When your phone rings, touch **Answer** to answer the call.

Touch **Reject** to reject the call.

To mute the ringing tone touch **Silent**. This is useful if you have forgotten to change the profile to silent for a meeting.


## In-call options

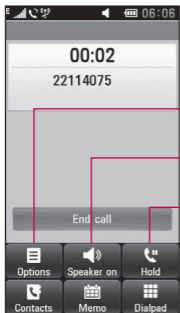



**Options** - Touch  to bring up a list of further in-call options.

**Speaker** - Touch  to turn the speaker phone on.

**Hold** - Touch  to put a call on hold.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

Touch  to add memo during a call.


Touch  to search your contacts during a call.

**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

# Calls



## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Phonebook** and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 3 Your **Contact** will open. Select the contact you want to assign to that number by touching the contact's phone number once. To find a contact, tap the **Search** field box and enter the first few letters of the contact's name.

## Making a second call

- 1 During your initial call, touch **Dialpad** and type the number you want to call. Alternatively touch **Contacts** and select the number you wish to dial.
- 2 Touch **Voice call** to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.

- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls, press  and select **End**.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs

Touch **Logs** in the **Main menu**.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

## Using call divert

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Call divert**.
- 3 Choose between **Voice calls** and **Video calls**. You can choose to divert all calls, calls when the line is busy, when there is no answer or when you cannot be reached.
- 4 Touch **Activate**.
- 5 Choose **To voicemail centre** or **To other number** to enter the new divert number.
- 6 Touch **OK** when you have finished entering the number.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

## Using call barring


- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Call barring**.
- 3 Choose **Voice calls** or **Video calls**. You can turn off all call barring by touching **Deactivate all** from the **Call barring** menu.
- 4 Choose any of the five options:
  - All outgoing calls**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**Touch **Activate**.
- 5 Enter the call barring password. Please check with your network operator about this service.

## Using Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

## Changing the common call setting

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Common settings**. From here you can adjust the settings for:

**Call reject** - Slide the switch to the left to highlight the **Reject list**. You can touch the text box to choose all calls, calls from specific contacts or groups, calls from unregistered numbers (those not in your contacts) or calls with no caller ID. Touch  to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Show SNS events** - Choose whether SNS events will be displayed or not.

**Auto redial** - Slide the switch left for **ON** or right for **OFF**.

# Calls

**Minute minder** - Slide the switch left to **ON** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset or select **Handset** to answer a call by pressing a key on the handset.

**Save new number** - Choose whether the **Save new number** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

**Voice clarity** - Choose whether the **Voice clarity** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

## Changing the Video call settings

1 Touch **Call settings**.

2 Touch **Video call settings**.

From here you can adjust the settings for:

**Use private image** - Choose whether to use a private image for video calls.

**Private image** - Choose an image for video calls.

**Mirror** - Choose whether to use Mirror.

## Call durations

View the duration of the last call, all calls as well as dialled and received calls.



## Data volume

View the amount of data used in kilobytes for received data, sent data and all data.

# Contacts

## Searching for a contact


There are two ways to search for a contact:

- 1 Touch  from the home screen and then touch **Phonebook** or touch  from the home screen.
- 2 You see a list of contacts. Typing the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.



**TIP!** The alphabetical keypad is displayed once you tap the Name field.

## Adding a new contact

- 1 Touch **Phonebook** and touch **New**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to 5 different numbers per contact. Each entry is preset for **Mobile**, **Home**, **Office**, **Pager**, and **Fax**.
- 5 Add an email address.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Colleagues**, **School** and **VIP**.
- 7 You can also add a **Ringtone**, **Vibration**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Birthday**, **Anniversary** and **Memo**.
- 8 Touch  to save the contact.

## Creating a group


- 1 Touch **Phonebook**. Touch the down arrow beside **Contacts** and then select **Groups**.
- 2 Touch **New group** or touch  and select **New group**.
- 3 Enter a name for your new group in **Group name** field. You can also assign a ringtone to the group.
- 4 Touch .

**NOTE:** If you delete a group, the contacts assigned to that group will not be lost. They will remain in your **Phonebook**.

# Contacts

## Changing your contact settings

You can adapt your contact settings to suit your own preferences.

- 1 Touch **Phonebook**, touch  then scroll down and select **Contact settings**.
- 2 From here, you can adjust the following settings:

**Show keypad** - Choose whether the keypad is displayed.

**Display name** - Choose the display order of the name.

**Copy all** - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time or all at once.

**Move all** - This works the same way as copy but the contacts will only be saved to the location you've moved them to.

**Restore contacts** - Restore contacts to the Memory Card.


**Clear contacts** - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to erase your contacts.

**Memory info** - View information about available memory regarding **Handset**, **USIM** and **USIM e-mail**.


**Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. If Bluetooth is turned off you will be prompted to turn it on.

**Backup contacts** - Backup contacts to the Memory Card.

## Viewing information

- 1 Touch **Phonebook**, touch  then scroll down and select **Information**.



From here you can view your **Service dial numbers**, your **Own numbers**, your **Memory info** (showing your memory usage) and **My profile**.

**TIP!** To add your own business card, select **My profile** and enter your details as you would for any contact. Touch  to finish.

## Importing friends from social networks

You can add your friend contact from your social network (Twitter or Facebook) to your phone using this menu.

**Note:** SNS must be enabled prior to importing contacts.




- 1 Touch **Phonebook**, then touch  and select **Import friends from**.
- 2 Select **Twitter** or **Facebook**.
- 3 Enter your E-mail and Password and click **OK**.
- 4 Select the contact you want to add.
- 5 Select .


# Messaging

## Messaging

Your GD880 combines SMS and MMS into one intuitive and easy to use menu.


### Sending a message


- 1 Touch  from the home screen and then touch **Messaging** or touch  from the home screen.
- 2 Touch **Write message**,  and select **Insert** to add an image, video, sound, emoticon, etc.
- 3 Touch **To** to enter the recipient's number or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 4 After entering the text, you can send the message by touching **Send SMS/Send MMS** at the top of the message.

 **WARNING:** If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

## Entering text

Touch  to turn on T9 mode.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Function keys enable you to change between capital and lowercase input.

## T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

## Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

## Using emoticons


Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

You can add a new emoticon by touching **New emoticon**.

## Using signatures

Create signatures for the SMS and MMS messages you send most often. To create a new signature touch the options menu followed by **Insert** then **More**. Finally select **Signature** then **New Signature**.

## Changing your text message settings

Touch **Messaging**, touch  and select **Settings**. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages were delivered.


**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore the data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or **MMS**.

## Changing your multimedia message settings

Touch **Messaging**. Touch  and select **Settings**, then select **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose between **Manual** and **Automatic** for both **Home Network** and **Roaming Network**. If you then choose **Manual**, you will receive only notifications of MMS and you can decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read reply** - Choose to request and/or allow a read reply.

**Priority** - Choose the priority level of your MMS (**Low priority**, **Normal priority**, **High priority**).

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.


**Creation mode** - Choose your message mode (**Restricted**, **Warning**, **Free**).

# Messaging

**Delivery time** - Choose how long to wait before a message is delivered.

**Multimedia message centre** - Choose one from the list or add a new message centre.

## Changing your other settings

Touch **Messaging**. Touch  and select **Settings**.

**Videomail/Voicemail** - Touch **New profile** to add a new Videomail/Voicemail service. Contact your network operator for more information about the service they provide.


**Service message** - Choose to receive or block service messages. You can also set your message security by creating lists of trusted and non-trusted senders in the **Service security** option.

**Save sent message** - Choose whether to save sent messages.


**Info. service** - Choose whether to turn Cell broadcast on/off and select your channels and languages.

**Signatures** - Create, edit or delete **Signatures**.

## Setting up your e-mail

Touch  from the home screen, and then touch **E-mail**.

If the email account is not set up, touch **Microsoft Exchange, etc.**

If the email account is set up in your phone and you want to add a new email account, touch  and select **New e-mail account**.

**E-mail address** - Enter the email address.

**Password** - Enter the account password

**Mailbox type** - Enter the mailbox type: **IMAP4**, **POP3** or **PUSH**. These types depend on the service provider.

**User name** - Enter the account user name.

**Incoming server** - Enter the incoming email server address.

**Outgoing server** - Enter the outgoing email server address.

**SMTP authentication** - Choose security settings for the outgoing mail server.

**Account name** - How the account will appear in the list of accounts in your E-mail folder.

Once the account is set up, it will appear in the accounts list in your Email folder.

## Microsoft Exchange e-mail account

**E-mail address** – Enter the account email address.

**Server address** – Enter the email server address.

**Domain** – Enter the account domain.

**User name** - Enter the account user name.

**Password** - Enter the account password.

**Sync items** - Choose which exchange items to synchronise (**Contacts, Schedules, Tasks**).

## Retrieving your e-mails

You can automatically or manually check your account for new emails. To check manually:


- 1 Touch **E-mail**.
- 2 Touch the account you want to use.

- 3 Choose **Retrieve new**.

## Sending an e-mail using your new account

- 1 Touch **Write e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send e-mail** and your email will be sent.

## Changing your e-mail settings

- 1 Touch **E-mail** in the top menu.
- 2 Touch  and select **E-mail settings**, then you can change the following settings:

**E-mail account** - Select an email account

**Allow reply e-mail** - Choose to allow the sending of read confirmation messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Include original message** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

# Messaging

## **Auto retrieval while roaming.**

- Choose whether to retrieve your messages automatically when abroad (roaming).

**New e-mail notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature.

**Priority** - Choose the priority level of your email messages.

**Maximum receive size** - Select the maximum receive size: **100KB, 200KB, 300KB, 500KB, 1MB, 2MB, 2.2MB.**

# Camera

## Getting to know the viewfinder

**Zoom** - zoom in or zoom out. You can also zoom in or out by pressing the side keys of the phone.

**Exposure** - A low contrast image will appear darker, whereas a high contrast image will appear much brighter.



**Back**

**Camera mode**

**Video mode** - Slide down this icon to switch to video mode.



**Gallery** - This enables you to access your saved photos from within the camera mode. Simply touch and your gallery will appear on the screen.

**Settings** - Touch this icon to open the settings menu. See **Using the advanced settings**.

**Macro** - Switch on take a close up shot

# Camera

## Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera is focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the camera key on the side of the phone firmly.


**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

 
## After taking a photo


Your captured photo will appear on the screen. The image name is shown on the bottom of the screen with four icons on the right side.

 Touch to send the photo as a **Message, E-mail, Bluetooth**.


**NOTE:** Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as **Wallpaper, Lock screen, Contact, Start-up, Shut down, Outgoing call or Incoming call** screens.

 Touch to edit the image using various tools.

 Touch to return to the viewfinder.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.



## Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

**Size** - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the seven numerical options: **5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, **Homescreen**, **VGA(640x480)**, **QVGA(320x240)**.

**Scene mode** - Set the camera to adjust to the environment. Choose from **Auto**, **Night**, **Landscape**, **Portrait** or **Sport**.

**ISO** - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **ISO 800**, **ISO 400**, **ISO 200** or **ISO 100**.

**White balance** - Choose from **Auto**, **Incandescent**, **Fluorescent**, **Sunny** or **Cloudy**.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking.

There are six colour tone options: **Off**, **Sepia**, **Monochrome**, **Negative**, **Solarize** and **Blue**.

**Focus** - Select the way the camera will focus. Choose from **Auto focus**, **Manual focus** or **Face tracking**.

**Self-timer** - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**.

**Shot mode** - Choose the shot mode from 9 options.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be, but the file size will increase.

**Show captured image** - Choose to view the picture with options after taking a photo.

**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.

**Geo-Tagging** - Choose whether to switch on the EXIF information for the photo to write GPS information.

# Camera


**Reset settings** - Restore all camera settings.

**Memory** - Choose whether to save your photos to the Handset memory or to the External memory.

**Swap cam** - Choose whether to use the inner camera or the outer camera.

# Video camera

## Getting to know the viewfinder

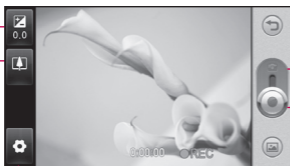

Back

Camera mode - Slide the button up to switch to camera mode.

Start recording

Gallery

**Settings** - Touch this icon to open the settings menu. See **Using the advanced settings**.

**Zoom** - zoom in or zoom out. You can also zoom in or out by pressing the side keys of the phone.





**Exposure** - A low contrast video will appear darker, whereas a high contrast image will appear much brighter.

# Video camera

## Making a quick video

- 1 Press the camera key on the right side of the phone.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens toward the subject of the video.
- 3 Press the camera key on the phone once to start recording. Or touch the red dot  on the screen.
- 4 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the camera key on the phone again to stop recording.

## After making a video

A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen



Touch to send the video as a **Message or E-mail** or by **Bluetooth**.



Touch to use the video as a voice or video ringtone




Touch to play the video.



Touch to return to the viewfinder.



Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.


Touch  to shoot another video right away.



Touch to view a gallery of saved videos and images.



## Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Refer to the advanced settings for the Camera.

**Video size** - Select video size: **VGA(640x480)**, **QVGA(320x240)**, **QCIF(176X144)**.


**Recording mode** - Set a duration limit for your video: **Normal**, **MMS**.

**Audio** - Choose whether to mute (record a video without sound) or to unmute to include the sound.

**Show recorded video** - Choose to view the video with options after taking a video.





# Your photos and videos

## Viewing your photos and videos


- 1 Scroll and touch **Gallery** in the **Main menu** or touch  on your camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

## Capturing an image from a video



- 1 Select the video you would like to capture an image from.
- 2 Touch the centre of the screen to bring up the play options, then touch  to pause the video on the frame you'd like to convert to an image and touch the upper left of the screen to open the  menu.
- 3 Touch  on the upper left of the screen and select **Capture**.
- 4 The image will appear on the screen, with its image name.
- 5 Touch  on the upper right of the screen to return to the video.

- 6 The image will be saved in your **Media album** folder and appear in the gallery.


 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

## Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.
- 3 You can open menus such as **Duration**, **Transition**, etc. by tapping  during the slide show.

## Setting a photo as wallpaper

- 1 Touch **Gallery** in the **Main menu**.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch  to open the menu.
- 4 Touch **Set as**, then **Home screen image**.

## Editing your photos

1 From the gallery menu, choose the photo you'd like to edit, touch  on the upper left of the screen to open the menu and select **Edit**.

2 Touch the icons to alter your photo:



Select area.



Select a tool:



Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.



Adding texts to a picture. You can choose the text box and the colours of the box and text.



Decorate your photo with stamps.



Erase the drawings you made on the picture. You can choose the size of eraser to use.



Touch to open further effect options including **Rotate**.



Touch to apply the effect options to a photo.

**Adjustment** This helps to adjust a picture taken using **Brightness**, **Contrast**, **RGB colour**, **Saturation** or **White Balance**.



Touch to return to the gallery.



**Save** Save the changes you made to your phone. You can save the edited photo with another name.



**Undo** Erase the editing you did on the photo.



**Send** Select to send the edited pictures as **Message**, **E-mail** or **Bluetooth**.





# Multimedia

You can store any multimedia files on your phone's memory to have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. You can find these files in the **My stuff** menu in the **Main menu**.

## Pictures


**Images** contains a list of pictures including default images preloaded onto your phone, images downloaded by you and images taken on your phone's camera.

## Sending a photo


- 1 Touch  from the home screen, touch **My stuff** and select **Images**. Select the picture you want and touch .
- 2 Touch **Send Via** and choose **Message**, **E-mail** or **Bluetooth**.

## Using an image

You can choose images to use as wallpaper, for the lock screen and to identify callers.

- 1 Touch **My stuff** in the **Main menu** and select **Images**. Select the picture you want and touch .
- 2 Touch **Set as** and choose from: **Homescreen image**, **Lockscreen image**, **Contact image**, **Start up image**, **Shutdown image**, **Outgoing call image**, **Incoming call image**

## Printing an image

- 1 Touch **My stuff** and select **Image**. Select the picture you want and touch .
- 2 Touch **Print** then choose between **PictBridge** and **Bluetooth**.

**TIP!** You can print via Bluetooth or by connecting to a PictBridge compatible printer.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to free some space in one of the memory banks or to preserve your images.

- 1 Touch **My stuff**, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark an image by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.
- 4 Select destination folder by touching **Select** or create a new folder by touching options then **New folder**.

## Sounds

**Sounds** contains a list of sounds including downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as ringtones.

## Using a sound

- 1 Touch **My stuff** in the **Main menu** and select **Sounds**.
- 2 Select a sound you want. It will begin to play.


## Videos

**Videos** shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch **My stuff** in the **Main menu** and select **Videos**.
- 2 Select a video to play.

## Sending a video clip

- 1 Select a video.
- 2 Touch  and then touch **Send via**. Choose from **Message**, **E-mail** or **Bluetooth**.

## Flash contents

The **Flash contents** folder contains all downloaded SWF and SVG files.

- 1 Touch **My stuff** in the **Main menu** and select **Flash contents**.
- 2 Select the file you want to view.

## Documents

From the **Documents** menu, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

## Other content

**Other content** contains a list of files that are not pictures, sounds, videos, documents, games or applications.

# Multimedia

## Games

You can install new games on your phone to enjoy when you have spare time.

You can also access this using the **Games & Apps** menu in the **Main menu**.

## Playing a game

- 1 Touch **Games & Apps** in the **Entertainment** tab.
- 2 Choose a game to launch.

## Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your USB cable.

### To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.

- 4 The file should appear in your Image folder if it is an image file and in the sound folder if it is a music file.

## Music

Your LG GD880 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music**. From here, you can access a number of folders located at the top of the screen:

**NOTE:** The copyright of music files is protected by international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music.

**All tracks** - Contains all the songs you have on your phone except the preloaded default music.

**Favourite** - Contains the songs you saved as Favourites.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlist** - Contains all the playlists you have created.




## Transferring music to your phone


The easiest way to transfer music to your phone is via Bluetooth or your USB cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent, you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch **Music**.
- 2 Select the song you want to play. The confirmation message appears when in **Silent** mode.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.

- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

## FM Radio

Your LG GD880 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

- 1 Scroll and touch **FM radio** in the **Main menu**.
- 2 Tune in to a station or adjust the volume if desired.

**NOTE:** You will need to attach your headphones to listen to the radio. Insert them into the headphone socket next to the charger connector.

# Organiser

## SNS

A social network service focuses on building and reflecting a social network or social relationship among people who share interests and/or activities.

## Facebook

Facebook is a social networking website.


- 1 Touch  from the home screen and then touch **Facebook**.

## Twitter

Twitter is a social networking and micro-blogging service.

- 1 Touch  from the home screen and then touch **Twitter**.



## Settings

- 1 Touch  from the home screen and then touch **SNS settings**.
- 2 Turn on Social networking. If you have an account related to social networking, the account is displayed. Touch the account, then touch **Import friends** to add your friend contact to your phone.



- 3 If you have no account, touch **New account**, then create your account.


**NOTE:** You will incur an extra cost by connecting to this service. Check the data charges with your network provider.

## Adding an event to your calendar



- 1 Touch  from the home screen and then touch **Organiser**.
- 2 Select the date you would like to add an event to.
- 3 Touch  and touch **New schedule** or simply touch **New schedule** at the bottom of the screen.

## Adding an item to your to do list



- 1 Touch  from the home screen and then touch **Tasks** in the **Main menu**.
- 2 Touch  and touch **New task** or simply touch **New task** at the top of the screen.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Normal** or **Low**.

- 4 Save your task by touching .

## Adding a memo

- 1 Touch  from the home screen and then touch **Memo** in the **Main menu**.
- 2 Touch  and then **New memo**. Or simply touch **New memo** at the top of the screen.
- 3 Type your memo and then touch **Save**.
- 4 Your memo will then appear on the screen in the memo application.

## Setting your alarm

- 1 Touch  from the home screen and then touch **Alarms**. **Widget alarm** should appear in the list as the default and you cannot delete it.
- 2 Touch  and then **New alarm**. Or simply touch **New alarm** at the top of the screen.


**NOTE:** You can set up to 11 alarms including **Widget alarm**.

**TIP!** Slide the alarm switch left to set it.


## Recording a sound or voice

- 1 Touch  from the home screen and then touch **Voice recorder** in the **Main menu**.
- 2 Choose where to save the recording: **Internal** or **External**.
- 3 Choose a recording mode: **Normal** or **MMS**.
- 4 Touch  to begin recording.
- 5 Touch  to pause recording.
- 6 Touch  to end recording.
- 7 Touch  to listen to your recording.
- 8 Touch  to adjust the volume.


## Using your calculator

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.



# Organiser

- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg**, **rad** etc.


## Converting a unit

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Unit converter**.
- 3 At the top of the screen, choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

## Adding a city to your World clock

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **World clock**.
- 3 Touch  and then **New city**. Or simply touch **New city** at the top of the screen.

## Using the stopwatch

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** at the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.

## LG Air Sync


Using this menu, you can synchronise your PIM data or other contents of your phone with your LG Air Sync account.

- 1 Touch **LG Air Sync** in the **Main menu**.
- 2 If you have no LG Air Sync account, please visit [www.lgairsync.com](http://www.lgairsync.com) to create your account. If you have an account, key in your ID and Password.
- 3 If you want to synchronise your PIM data, touch **PIM Sync**. If you want to synchronise your contents, touch **Link Air**.
- 4 Then select **Sync now**.


# PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease. Please note that the Email feature of PC Sync is not supported by the LG GD880.

## Installing LG PC Suite on your computer

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait a few moments. An installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.
- 4 Connect the handset and PC via USB cable and wait a few moments. PC Suite runs automatically.

## Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as described above.
- 2 Click on the **Phone Backup and Restore** icon in the lower right corner of the screen and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to or restore information from. Click the **Start** icon.
- 4 Your information will be backed up or restored.

# PC Sync

## Viewing phone files on your PC

- 1 Connect your phone to your PC as described above.
- 2 Click on the Manage **Photos**, **Videos** or **Music** icon.
- 3 Images, audio files or videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files you no longer need.

## Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select the target where you want to save your contacts.  
Right-click your contacts and then **Select All**.


## Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.

## Using your phone as a Music Sync device

Your phone can be used as a Music Sync device.

Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the home screen, touch  and touch **Connectivity**.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

## DivX Converter

DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by **Converter**.

Use the arrows in the application to change the conversion format to mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a conversion complete pop up will be displayed.

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*

Pat. 7,295,673


# OSP (On Screen Phone)

Using the OSP feature, you can see your phone screen from your PC. You can control your phone from the PC screen just as you would on the phone.

## Installing OSP on your computer

When you install LG PC Suite on your computer, when prompted select the check box to install OSP.

## Starting OSP

Click  on your computer or select **LG On Screen Phone** from the start menu.

## Connecting your phone and PC

### By USB cable

- 1 Click **Connection Wizard**.
- 2 Select **Cable connection**, then click **Next**.
- 3 Connect the handset and PC using the USB cable.
- 4 Select **Next**.
- 5 Enter your phone password into the PC (default value is "0000").

### By Bluetooth

- 1 Ensure that Bluetooth is switched on and visible for both your PC and your phone.
- 2 Select **Bluetooth connection**, then click **Next**.
- 3 Select your phone from the discovered phones, then click **Next**.
- 4 Enter the PIN code into the PC, then click **Next**.
- 5 Click **Yes** in the confirmation message.
- 6 Enter the PIN code into your phone, then click **OK**.
- 7 Enter your phone password into the PC, then click **OK**.

**NOTE:** On Screen Phone (OSP) cannot run while PC suite is running, and vice versa.

## Disconnecting your phone from your PC

If you want to disconnect your phone from your PC, click 



## Controlling your phone

You can control your phone using OSP. If you click a menu in the OSP main screen, the menu runs in your phone as if you had selected the menu on your phone.

For example, if you want to send a message using OSP, click **Messaging** in the OSP main menu, then click **Write message**.

You can enter characters by clicking the keypad on the OSP display or using your PC keyboard.

Click Send SMS when you have finished writing the message.

## Transferring a file between your phone and PC

### Transfer a file from PC to Phone

- 1 Select the file you want to transfer from your PC, then drag and drop the file to the OSP screen.

### Transfer a file from Phone to PC

- 1 Select the file you want to transfer from **Media album** in the OSP screen, then click the right mouse button and select **Save to PC**.

## Editing a file on your phone

- 1 Select the file you want to edit from the Media album the OSP screen, then click the right mouse button and select **Edit**.
- 2 You can edit the file using associated PC applications.
- 3 When you finish editing your file, it will be transferred back to your phone.

# OSP (On Screen Phone)

## Using OSP Notification

The OSP feature gives you pop-up messages with information about your phone events: **Alarm, Message, Incoming Call**, etc.

1 Select  in the OSP Screen

2 Select "Alerts me with Popup"

**NOTE:** When you use the OSP feature, your phone's reaction may be slow.

# The web

## Accessing the web


- 1 Touch **Browser** in the **Main menu**.
- 2 To go straight to the browser homepage, select **Browser**. Alternatively select **Enter URL** and type in the URL followed by **OK** in the upper left of the screen.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check with your network provider for data charges.

## Adding and accessing your bookmarks

For easy and fast access to your favourite web sites, you can add bookmarks and save web pages.

- 1 Touch **Browser** in the **Main menu**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **New bookmark**. Enter a name for your bookmark, followed by the URL in the corresponding field box.


- 4 Touch  on the upper left of the screen. Your bookmarks will now appear in the list of bookmarks.
- 5 To access the bookmark, simply touch the connect icon next to the bookmark or touch the bookmark title and then touch **Go**. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

# The web

## Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

## Accessing a saved page

Touch **Browser** and select **Saved pages**. You can view the saved pages here.

## Viewing your Mobile history

Touch **Browser** and select **Mobile history**.

## Using your phone as a modem

Your GD880 can double as a modem for your PC, giving you email and internet access on the go. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure that you have the LG PC Suite installed on your PC.
- 2 Connect your GD880 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **Internet Connection using your phone** icon on your PC. Then click **New button** and select **Modem**.
- 4 Choose **LGE Virtual Modem** and select **OK**. It will now appear on screen.
- 5 Select your country and service provider and select **Save**. Alternatively select the manual box and enter your connection details manually.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD880.

### Using Bluetooth:

- 1 Ensure that Bluetooth is switched **On** and **Visible** for both your PC and GD880.
- 2 Pair your PC and GD880 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an


active Bluetooth connection.

- 4 Click **Internet Connection using your phone** icon on your PC. Then click the **Add button**.
- 5 Choose **Bluetooth Modem** and select **OK**. It will now appear on screen.
- 6 Write a profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.  
Your PC will connect through your GD880.


# Settings

## Personalising your profiles

You can Personalise each profile setting using the settings menu.

- 1 Touch  from the home screen and then touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone, Volume, Message tone** settings and more.


## Changing your Display settings

Touch  from the home screen and then touch **Display settings**. Choose the screen setting you want to edit.

**NOTE:** The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

## Changing your Device settings

Enjoy the freedom of adapting the operation of your GD880 to your own style.

Touch  from the home screen, touch **Device settings** and then choose from the list below.

### Settings

**Date & Time** - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

**Power save** - Slide the switch left to set the power saving settings on/off or night only.

**Languages** - Change the language of your GD880's display.

**Auto lock** - Lock the keypad automatically in the home screen. You can choose the time for the auto lock.

**Security** - Adjust your security settings including PIN codes and handset lock. Please note the phones default security code is 0000.

**Memory info** - See **Using memory manager** for more information.

**Primary storage settings** - Choose the location you prefer items to be saved between **Handset memory** or **External memory**.

**Reset settings** - Restores all settings to their factory defaults.

**Device information** - Shows the device information. You can upgrade your software via the Internet using this menu.


**Device guide** - show how to use each functions ( Homescreen, Widget download, Indicator, Menu, Contacts, SNS, Browser, Lock screen gesture)

## Changing your touch settings

You can activate sound or vibration for your touch tone.

## Changing your Connectivity settings

Your Connectivity settings have already been set up by your network operator so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch  from the home screen and then touch **Connectivity**.

## Network selection

**Select network** - If you select **Automatic**, the GD880 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

**Network mode** - You can set a type of network to search for when networks are searched in the **Select network** menu.

**Preferred lists** - You can add a preferred network to connect to. If the network is searched automatically, simply choose one from the network list. If not, you can add a new network manually.

**Internet profiles** - This menu shows the **Internet profiles**. You cannot delete or edit the default configurations for your country. However, you can add a new profile using this menu.

# Settings

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Back-up** -You can send your information to an operator server or receive information s from an operator server.

**NOTE:** This service is not available in all countries. Please contact your service provider for further information.

**Home network** -You can choose and share contents by **Home network**. Be careful about disclosing personal information.

**GPS type** - Select GPS type: **Assisted GPS, Stand alone**.

**DivX VOD registration** - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

**USB connection mode** - Choose a data service from the options and synchronise your GD880 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use **Music sync** with Windows Media

Player, select **Music sync** in this menu. **Music sync** is only available for music content.

**Packet data conn.** - Choose when your device should be connected to the network for packet data.

**Browser settings** - Set the values related to the browser (**Profiles, Appearance settings, Cache/Cookies, Security, Reset settings**).

**Streaming settings** - Your network operator has already saved this information. You can add a new profile using this menu.

**Java settings** - Allows you to set profiles for connections made by Java programs and to view certificates.

**Data roaming** - Offers you to manage data reception of Multimedia/Widget/Email/PIM/Link Air in roaming area.

Using data roaming function, you can block data application service to not pay data application fee in roaming area.

The default settings is off and the use of data application will be blocked out. When you activate data roaming function, you can download or synchronise data.

## Using memory manager

Your GD880 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is being used and how much space is available.

Touch **Device settings**, then **Memory info**.

**Internal common memory** - View the memory available on internal common memory.

**Internal multimedia memory** - View the memory available on internal multimedia memory.

**Internal reserved memory** - View the memory available on your handset for **SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items**.

**USIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

## Sending and receiving your files using Bluetooth

**To send a file:**

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD880 will not automatically search for other **Bluetooth** devices. If not, your GD880 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

**TIP!** Check the progress bar to make sure your file is sending.

**To receive a file:**


- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender.

# Settings

Touch **Yes** to receive the file.

- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Go to My stuff**. Files will be saved to the appropriate folder in **My stuff**.

## Changing your Bluetooth settings

Touch **Bluetooth** and select .

**Make your changes to:**

**My device information** - View your device information regarding Bluetooth.

**My device visibility** - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

**My device name** - View your device name.


**My Bluetooth address** - View your Bluetooth address.

**Supported services** - Select how to use Bluetooth in association with different services.

**Remote SIM Mode on/off** - Turn on or off.

## Pairing with another Bluetooth device

By pairing your GD880 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility by touching .
- 2 Touch **New device**.
- 3 Your GD880 will search for devices. When the search is completed, the **Refresh** icon will appear on the upper left side of the screen.
- 4 Choose the device you want to pair with and click **Yes** in the confirmation message. You may need to enter the passcode if the passkey does not match with the device you are trying to pair.
- 5 Touch **Always ask** or **Always allow**, then the device is paired.

## Using a Bluetooth headset

- 1 Check that your Bluetooth is **ON** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

- 3 Touch **Always ask** or **Always allow**. Your GD880 will automatically switch to Headset profile.

## Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

**NOTE:** The GD880 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://www.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB cable or battery during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to backup any important information in advance for safekeeping.

# Accessories

These accessories are available for use with the GD880.

## Charger



## Data cable and CD



## Battery



## Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.

# Technical data

## General

Product name: GD880

System: GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 / WCDMA

## Ambient Temperatures

Max: +55°C (discharging),  
+45°C (charging)

Min: -10°C

# Declaration of Conformity



## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

### Model Name

GD880

### Trade Name

LG

CE 0168 !

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

09.Feb. 2010

Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible solutions
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the Network Operator coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service centre.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

# Troubleshooting

Message	Possible causes	Possible solutions
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Battery defective	Replace battery.	
Number not permitted	The Fixed dial number function is on.	Check settings.

# MANUFACTURER'S WARRANTY

## Australia & New Zealand

### 1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer.  
LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

# MANUFACTURER'S WARRANTY

## Australia & New Zealand

### **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

## MANUFACTURER'S WARRANTY

### Australia & New Zealand

- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

#### 3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

#### 4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

AUSTRALIA:  
LG Electronics Australia Pty Ltd  
2 Wonderland Drive  
Eastern Creek NSW 2766  
PO Box 212  
HORSLEY PARK NSW 2175  
Tel: 1300 LG CARE  
(1300 54 2273) Australia  
Fax: 02-8805-4201

NEW ZEALAND:  
LG Electronics Australia Pty Ltd  
Unit A, 38 Highbrook Drive  
East Tamaki 2013  
PO Box 58195 Greenmount  
Auckland 2141  
Tel: 0800 LG CARE  
(0800 54 2273) New Zealand  
Fax: 09-914-2441



**LG Electronics Australia Pty Ltd.**













