



# U8100

## User Guide

# Table of Contents

<b>Emergency Services and Safety</b>	
<b>Precautions</b> .....	<b>8</b>
<b>Getting Started</b> .....	<b>12</b>
<b>Using the Battery,Charger and</b>	
<b>USIM Card</b> .....	<b>12</b>
Installing the Battery .....	12
Removing the Battery .....	13
Charging the Battery .....	14
Disconnecting the Charger .....	15
Battery Information and Care .....	16
Installing the USIM card .....	16
<b>Getting to know your LG U8100 ..</b>	<b>18</b>
<b>Familiarise yourself with</b>	
<b>its features</b> .....	<b>18</b>
<b>Your handset's home screen</b> .....	<b>20</b>
<b>Display Information</b> .....	<b>21</b>
<b>Function of keys when</b>	
<b>phone is idle</b> .....	<b>22</b>
<b>General Functions</b> .....	<b>24</b>
<b>Turning your handset on</b> .....	<b>24</b>
<b>Turning your handset off</b> .....	<b>24</b>
<b>Access Codes</b> .....	<b>24</b>
PIN code (4 to 8 digits).....	24
PIN2 code (4 to 8 digits).....	24
PUK code (4 to 8 digits).....	25
PUK2 code (4 to 8 digits).....	25
Security code (4 to 8 digits).....	25
<b>Barring Password</b> .....	<b>25</b>
<b>Making and Answering calls</b> .....	<b>26</b>
Making and Answering a video call ....	26
Making a voice/video call.....	26
Making a voice/	
video call from Contacts .....	27
Making International Calls .....	27
Adjusting the Volume.....	27
Answering a Call .....	27
Signal Strength .....	28
Entering Text .....	28
Changing the Text Input Mode.....	28
Using the T9 Mode .....	29
Using the ABC Mode .....	30
Using the 123 (Number) Mode.....	30
Using the Symbol Mode.....	30
Character chart.....	31
<b>Menu tree</b> .....	<b>32</b>
<b>Messages</b> .....	<b>35</b>
New message.....	35
Inbox .....	39
Outbox .....	40
Drafts .....	40
Mailbox .....	41
Templates .....	41
Emoticons .....	42
Settings.....	42
<b>Calling</b> .....	<b>45</b>
<b>Video calls</b> .....	<b>45</b>
My picture size .....	45

My picture position.....	45	<b>Settings</b> .....	51
Hide my picture .....	45	Call waiting .....	51
Block my picture .....	45	Send my number.....	51
<b>Call history</b> .....	<b>45</b>	Call reject.....	51
Missed calls .....	46	Auto redial .....	51
Received calls.....	46	Answer mode.....	52
Dialled calls .....	46	Minute minder .....	52
All calls.....	46	Select line .....	52
<b>Call divert</b> .....	<b>47</b>	<b>Multimedia</b> .....	<b>53</b>
Voice calls .....	47	<b>Camera</b> .....	<b>53</b>
Video calls .....	47	<b>Video camera</b> .....	<b>53</b>
All fax calls.....	47	<b>Image viewer</b> .....	<b>54</b>
<b>Call duration</b> .....	<b>48</b>	<b>Audio player</b> .....	<b>55</b>
Last call.....	48	<b>Video player</b> .....	<b>56</b>
Received calls .....	48	<b>VOD/AOD</b> .....	<b>58</b>
Dialled calls .....	48	<b>Browser</b> .....	<b>59</b>
All calls.....	48	<b>Home</b> .....	<b>59</b>
<b>Call costs</b> .....	<b>48</b>	<b>Bookmarks</b> .....	<b>60</b>
Last call.....	48	<b>Saved pages</b> .....	<b>60</b>
All calls.....	48	<b>Go to URL</b> .....	<b>60</b>
Cost settings.....	49	<b>Security certificates</b> .....	<b>60</b>
<b>Fixed dial numbers</b> .....	<b>49</b>	<b>Settings</b> .....	<b>61</b>
<b>Call barring</b> .....	<b>49</b>	<b>Organiser</b> .....	<b>62</b>
Voice calls .....	49	<b>Contacts</b> .....	<b>62</b>
Video calls .....	50	<b>Calendar</b> .....	<b>65</b>
Deactivate all .....	50	<b>To do</b> .....	<b>66</b>
		<b>Memo</b> .....	<b>67</b>
		<b>Secret memo</b> .....	<b>69</b>

<b>Profiles</b> .....	<b>70</b>	<b>Network</b> .....	<b>83</b>
<b>Tools</b> .....	<b>72</b>	Network selection .....	83
<b>Quick menu</b> .....	<b>72</b>	Preferred list .....	83
<b>Alarm clock</b> .....	<b>72</b>	<b>Access points</b> .....	<b>83</b>
<b>Calculator</b> .....	<b>73</b>	<b>Security</b> .....	<b>84</b>
<b>World time</b> .....	<b>73</b>	PIN code request.....	84
<b>Unit Converter</b> .....	<b>73</b>	Change codes .....	84
<b>Timers</b> .....	<b>76</b>	Handset lock .....	85
<b>Voice recorder</b> .....	<b>77</b>	<b>Connectivity</b> .....	<b>85</b>
<b>Server sync</b> .....	<b>77</b>	<b>Memory status</b> .....	<b>85</b>
<b>Settings</b> .....	<b>79</b>	Common memory .....	85
<b>Handset</b> .....	<b>79</b>	Reserved memory .....	86
Time.....	79	USIM memory .....	86
Date.....	79	<b>Language</b> .....	<b>86</b>
Auto update date/time.....	79	<b>Reset settings</b> .....	<b>86</b>
Daylight saving.....	80	<b>Applications</b> .....	<b>87</b>
Handset information .....	80	<b>My applications</b> .....	<b>87</b>
<b>Screen</b> .....	<b>80</b>	<b>Connect</b> .....	<b>87</b>
Backlight.....	80	<b>Settings</b> .....	<b>88</b>
Contrast.....	81	<b>Troubleshooting</b> .....	<b>89</b>
Colour scheme .....	81	<b>Accessories</b> .....	<b>91</b>
Dialling font.....	81	<b>Glossary</b> .....	<b>93</b>
Clock display .....	81		
Menu style .....	81		
Screen theme.....	82		
Front screen colour .....	82		
Greeting message.....	82		

# Emergency Services and Safety

## Precautions

- Do not allow battery to come into direct contact with an electric outlet or car cigarette lighter socket
- Do not pierce battery with sharp objects
- Do not drop or subject the phone to physical shock
- When the battery has reached the end of its life, dispose of it in accordance with environmental regulations. Do not dispose of your battery in household rubbish.
- Do not immerse in water
- Do not disassemble or modify the battery
- Stop using the battery if abnormal heat, odour, discolouration, deformation, or abnormal conditions are detected during use, charge, or storage
- Do not use damaged or deformed batteries. In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin.
- If the leakage does come into contact with the eyes or skin, please wash thoroughly in clean water and consult with a doctor
- The earpiece may become warm during normal use. The handset itself may become warm while the battery is being charged
- Use a damp or anti-static cloth to clean the handset. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone
- Retain the cardboard packing supplied with this handset. It should be used if the phone has to be returned for service. This packaging can be recycled when no longer required
- Remember to make backup copies of all important data on your handset

### Aircraft safety

---

In accordance with CAA regulations, you must switch off your phone on aircraft. Mobile phone signals can interfere with aircraft equipment. Follow the instructions given by airline staff at all times

### Hospital safety

---

Switch off your phone in areas where the use of handsets is prohibited. Follow the instructions given by the respective medical facility regarding the use of handsets on their premises

### General safety

---

- Observe 'Turn off 2-way radio' signs, such as those near petrol stations, chemicals or explosives, and turn off your handset
- Do not allow children to play with the handset, charger or batteries
- Do not use the handset where blasting is in progress
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any warning signs and the manufacturer's recommendations

### Road safety

---

- You **MUST** exercise the proper control of your vehicle at all times. Give your full attention to driving
- Observe all laws in respect to the use of mobile phones when driving
- Pull off the road and park before making or answering a call where it is safe to do so. Singapore Law prohibits the use of hand held mobile phones when driving
- You **MUST NOT** stop on the hard shoulder of a motorway to answer or make a call, except in an emergency
- Switch off your handset at refueling points and petrol stations, even if you are not refueling your own car
- Do not store or carry flammable or explosive materials near your handset
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions
- The manufacturers of such equipment can advise if it is adequately shielded from radio transmissions. Consult your dealer and do not switch on the handset until it has been checked by qualified installers

### **Vehicles equipped with an air bag**

---

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result

### **Third party equipment**

---

The use of third party equipment, cables or accessories, not made or authorized by LG, may invalidate the warranty of your handset and also adversely affect the handset's safety or operation

### **Service**

---

The handset, batteries and charger contain no user-serviceable parts. LG recommend that your LG U8100 handset is serviced or repaired by an LG authorized service centre

### **Efficient use**

---

The handset has an antenna. For optimum performance with minimum power consumption, please do not cover the antenna area with your hand. Covering the antenna affects call quality and may cause the handset to operate at a higher power level than required. This decreases talk and standby times

### **Radio frequency energy**

---

Your handset is a low-power radio transmitter and receiver. When it is turned on, it receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call (the network) controls the power level at which the handset transmits.

- Further detailed information is given in this manual.

## Exposure to radio frequency energy

---

### Radio wave exposure and Specific Absorption Rate (SAR) information

- This handset model U8100 has been designed to comply with safety, requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using a standardized method with the phone transmitting at its highest certified power level in all used frequency bands
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), is 2W/kg averaged over ten (10) gramme of tissue
- The highest SAR value for this model phone tested by DASY3 for use at the ear is 1.110 W/kg (10g)
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gramme of tissue (for example USA, Canada, Australia and Taiwan).



# Getting Started

## Using the Battery, Charger and USIM Card

---

### Installing the Battery

 
To install the battery, insert the bottom of the battery into the opening on the back of the phone. Then push the battery down until the latch clicks and then install battery cover.



## Removing the Battery

Turn the power off. (If power is left on, there is a chance you could lose the stored telephone numbers and messages.)

Press the latches ① and open the battery cover ② . Then remove the battery.

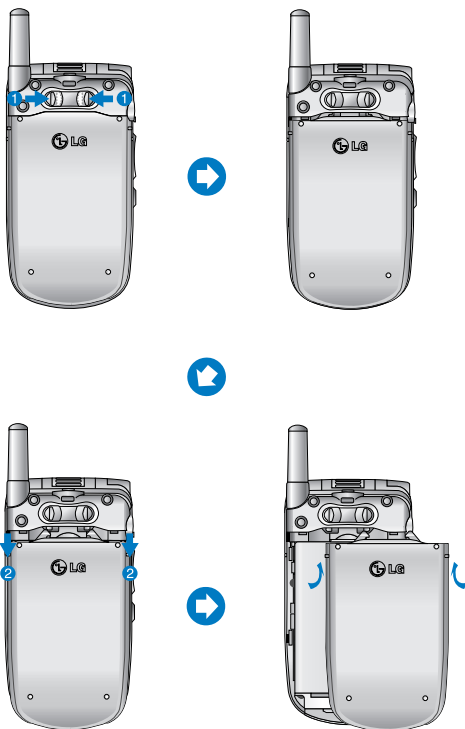

## Getting Started

If the backlight of sub-display is red when you connect charger:

The battery is fully discharged and it will take sometime(under 30 minutes) to charge the battery to minimum operating level. When the red light is on, the handset can not be powered on. The red light will be turned off if the battery is charged to minimum operating level.

### **!** Warning

 
You can make video call with charger connected.

But if the battery capacity is under 10% the battery can be discharged when you use video call even though the charger is connected.

## Charging the Battery

To use the charger provided with your phone:

1. With the battery in position on the phone, connect the lead from the charger to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the charger to a standard AC wall outlet. Only use the charger that comes included with the package.

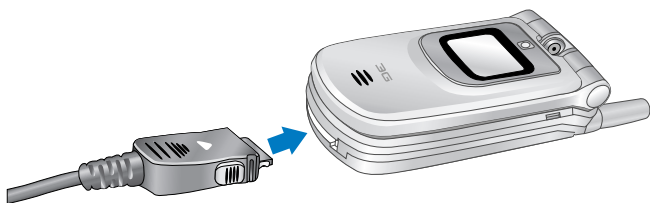

### **!** Warning

Do not force the connector as this may damage the phone and/or the charger.

## Disconnecting the Charger

When charging is finished, disconnect the charger from the power outlet and from the phone by pressing on the gray tabs on both sides of the connector while pulling the connector out.



### **!** Notice

The battery delivered with your phone has to be fully charged before using it. Do not remove the battery or the USIM card while charging.

If your phone is being charged, the display will show the charging status.



### **If the battery fails to charge completely:**

After turning the phone on and off, please attempt to recharge the battery.

After detaching and reattaching the battery, please attempt to recharge the battery.

### Battery Information and Care

 
1. Never use an unapproved battery since this could damage the phone and / or battery and could cause the battery to explode.
2. The battery does not need to be fully discharged before recharging.
3. Use only LG approved chargers specific to your phone model since they are designed to maximize battery life.
4. Do not disassemble or short-circuit the battery.
5. Keep the battery's metal contacts clean.
6. Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
7. Recharge the battery after long periods of non-use to maximize battery life.
8. Do not expose the battery charger to direct sunlight or use it in areas of high humidity such as a bathroom.
9. Battery life will decrease if exposed to extreme hot or cold temperatures.
10. Battery life will vary due to usage patterns and environmental conditions.
11. The use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.

### Installing the USIM card


Your USIM card contains your phone number, service details and contacts and must be inserted into your handset.

If your USIM card is removed then your handset becomes unusable until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card.

Your USIM card may only be used in handsets which are enabled for 3 services. Any attempt to use the USIM card in other handsets may result in serious damage to the handset and may prevent you from being able to use it, including the making of emergency calls.

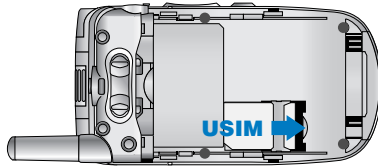**! Notice**

 When you need to remove the USIM card, slide it towards the top of the phone and take it out of the holder.

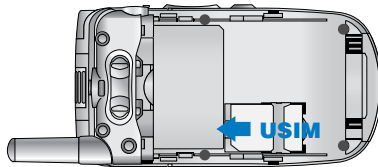
**! Notice**

Before installing always make sure that the phone is switched off and remove the battery. The metal contact of the USIM card can be easily damaged by scratches. Pay special attention to the USIM card while handling and installing. Follow the instructions supplied with the USIM card.

# Getting to know your LG U8100
 
## Familiarise yourself with its features



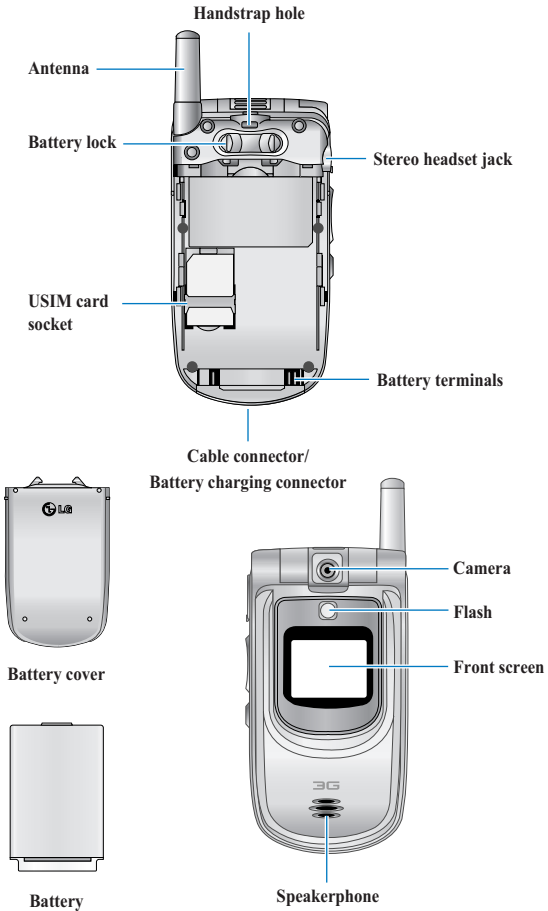




## Your handset's home screen

---

 Your handset's home screen is divided into three basic displays: the icon indicator bar; a central window that includes the home screen; and the prompt bar. Each of these is described below:

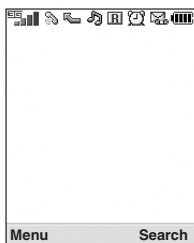

### The icon indicator bar

The icon indicator bar shows what operations are taking place and reminds you of battery and signal strength. This appears through all activities. The table below gives a brief explanation of the icons and their function.

### The home screen

The central window of your start screen displays an image of your choice, when in use, this screen will display all of your functions and services.


















### The prompt bar

The prompt bar displays in the soft boxes. These are activated by pressing the appropriate soft key under each one.

## Display Information

The table below describes various display indicators or icons that appear on the phone's display screen.

 
### On-Screen Icons

 
Icon	Description
	Battery level - indicates the amount of power in your battery. The greater the amount of solid colour the greater the power.
	Call diverting - indicates call divert option has been selected.
	Voice message - indicates when you have a new voice message.
	Text - indicates when you have a new new text message.
	Multimedia - indicates when you have a new Multimedia message.
	3G network - indicates whether you are in the video service area. When you leave the video service area, your handset roams onto the voice & picture network or when abroad onto another network (2G/3G)
	GPRS network - indicates that GPRS service is available.
	GSM network - indicates the strength of your handset's connection with a GSM network.
	No-service area - indicates you are in the no-service area.
	Roaming service - indicates that you are using a roaming service.
	ExpressLink message - indicates that there is new ExpressLink content.
	Alarm - indicates an Alarm.
	Normal - indicates the General profile is activated
	Silent - indicates the silent menu in Profile.
	Vibrate only - indicates whether the vibrate function is on or off.
	Headset - indicates the headset menu in Profile.
	Outdoor - indicates the loud profile is activated.

## Function of keys when phone is idle

---

### Side of handset Keys

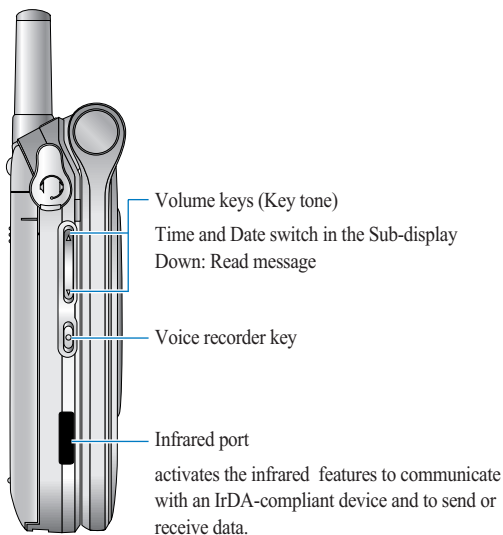

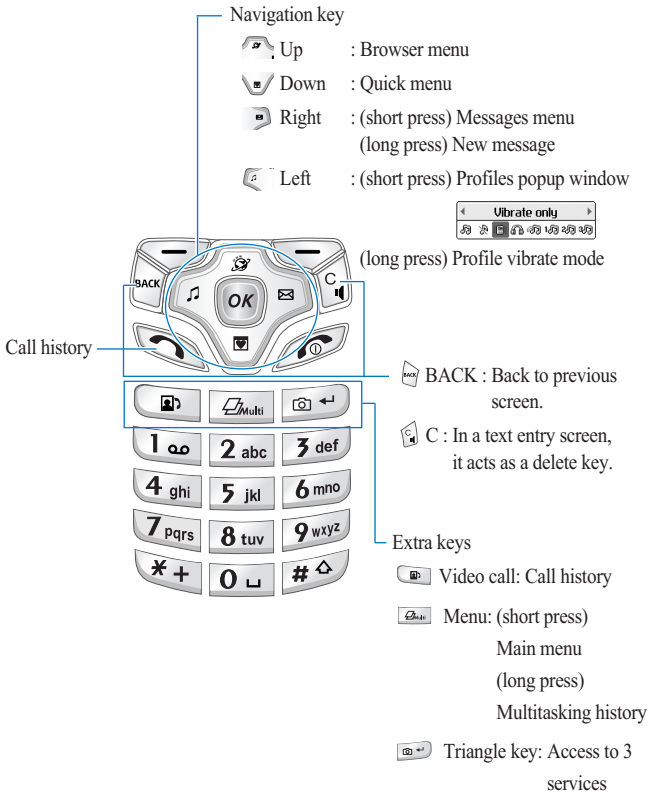

# General Functions

## Turning your handset on

---

Ensure that your USIM card is in your handset and the battery is charged.

Press and hold the  key until power is on.

Enter the USIM PIN code that was supplied with your USIM card if PIN code setting is on.

After a few seconds you will be registered on the network.

## Turning your handset off

---

Press and hold the  key until power is off.

There may be some delay while the handset powers down.

Do not re-power the handset during this time.

## Access Codes

---

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 8.5.2].

### **PIN code (4 to 8 digits)**

The PIN (Personal Identification Number) code protects your USIM card against unauthorized use. The PIN code is usually supplied with the USIM card. When the PIN Code Request is set to Enable, your phone will request the PIN code every time it is switched on. When the PIN Code Request is set to Disable, your phone connects to the network directly without the PIN code.

### **PIN2 code (4 to 8 digits)**

The PIN2 code, supplied with some USIM cards, is required to access functions such as Fixed Dial Number. These functions are only available if supported by your USIM card.

### **PUK code (4 to 8 digits)**

The PUK (PIN Unblocking Key) code is required to unlock a blocked PIN code. The PUK code may be supplied with the USIM card. If not, contact Customer Services for the code.

If you lose the code, contact Customer Services.

### **PUK2 code (4 to 8 digits)**

The PUK2 code, supplied with some USIM cards, is required to unlock a blocked PIN2 code. If you lose the code, contact Customer Services.

### **Security code (4 to 8 digits)**

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to factory setting.

### **Barring Password**

---

The barring password is required when you use the call barring function. The password is obtained from the Customer Services when you subscribe to this function.

### Making and Answering calls

---

Ensure you tell the other party before recording a voice call.



### Making and Answering a video call

You can make/answer a video call to a 3G video phone the other party must have a 3G video phone and be in a video service area.

To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.

#### **Note**

To correct mistakes, press the  key briefly to delete the last number, or press and hold the  key to delete all numbers.

2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press the left soft key [Options].



#### **Note**



The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own images; after the other party has answered, their image will be displayed on screen.

4. Adjust the camera position if necessary.
5. Press the end key to finish the call, or close the handset.


### Making a voice/video call

1. Make sure your handset is powered on.
2. Enter the number including the full area code.

- ▶ To delete a digit press the  key.  
To delete all digits press and hold the  key.

3. Press the  key to make a voice call.
4. Press the  key to finish the call, or close the handset.



**Note**

To activate the speakerphone during a call, you have to press and hold the  key for at least 2 secs.

**Making a voice/video call from Contacts**



It is easy to call anyone whose number you have stored in your Contacts.

Press the down navigation key to access contact list.

Scroll to your chosen contact and press the  key. To make a voice call press the  key.

To make a video call press the  key. Press the  key to finish the call.

**Making International Calls**




1. Press and hold the  key for the international prefix. The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

**Adjusting the Volume**

During a call, if you want to adjust the earpiece volume, use the side keys of the handset. In idle mode with the flip cover open, you can adjust the key volume using the side keys.



**Answering a Call**

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

1. Open the flip and press the  key to answer an incoming call.  
If the **Press any key** menu option has been set to  key, **Press any key** will answer a call except for the  key.



### Notice


- ▶ To reject an incoming call, press and hold down the side key on the left side twice of the handset without opening the flip (See page 52). If the flip is open, press the  key or the right soft key twice.
- ▶ If the **Open flip** menu option ((Menu 2.8.5) is simply by opening) is on , you can answer the call simply by opening the flip.

2. End the call by closing the handset or pressing the  key.

### Notice

You can answer a call while using the Contacts or other menu features.

## Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator, see the strength () on your handset's display screen.







## Entering Text

 
You can enter alphanumeric characters using the keypad.

For example, storing names in the Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

Following text input methods are available in the handset.

## Changing the Text Input Mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. Short pressing the key  cycles between , ,  and . A long press changes mode to .

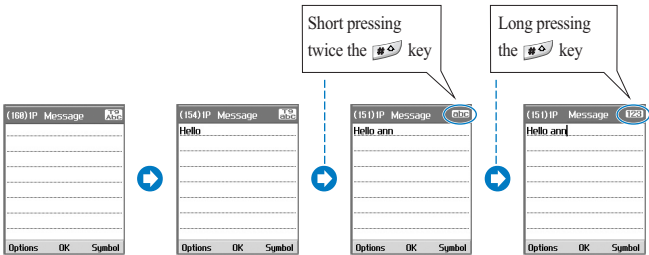

Press 4, 3, 5, 5,  
6, to type Hello

Press 0(space), 2, 6, 6 to type ann

**Note**

Please refer to the Using the ABC Mode on page 30.

3. Short pressing the key cycles between , and .

## Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys to . Press one key per letter.

- ▶ The word changes as letters are typed - ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the key once or more to cycle through the other word options.

**Example**

Press to type Good.

Press the key to get Home

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.

## General Functions

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the [O] key.

To delete letters, press the [C] key.

Press and hold down the [C] key to erase entire words.

### Using the ABC Mode

Use the keys [2 abc] to [9 wxyz] enter your text.

1. Press the key labeled with the required letter:

- ▶ Once for the first letter
- ▶ Twice for the second letter
- ▶ And so on

2. To insert a space, press the [O] key once. To delete letters, press the [C] key. Press and hold down the [C] key to clear the display.

### Using the 123 (Number) Mode

 
 
 
The 123 Mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

### Using the Symbol Mode

The symbol mode enables you to enter various symbols or special characters.

To enter a symbol, press the right soft key [Symbol]. Use the navigation and numeric

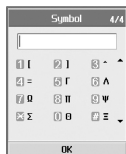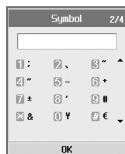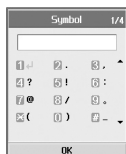

keys to select the desired symbol and press the **OK** key.

## Character chart

General text entry rules for use with the abc mode.

Use the keypad to enter letters, numbers, symbols, and other characters with the abc mode. Press the same key repeatedly to cycle through available characters.



If you do not press a key for 2 seconds, the character in the block cursor is accepted, and the cursor moves to the next position.

### Notice

 
Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Display	
	Lower case	Upper case
<b>1</b>	.,?!:@1/()_ ; \	.,?!:@1/()_ ; \
<b>2</b>	abc2àáâãäåæç	ABC2ÀÁÂÃÄÅÆÇ
<b>3</b>	def3èéêë	DEF3ÈÉÊË
<b>4</b>	ghi4ìíîï	GHI4ÌÍÎÏ
<b>5</b>	jkl5£	JKL5£
<b>6</b>	mno6ñòóôõöø	MNO6ÑÒÓÔÕÖØ
<b>7</b>	pqr7B\$	PQRS7B\$
<b>8</b>	tuv8ùúûü	TUV8ÙÚÛÜ
<b>9</b>	wxyz9	WXYZ9
<b>0</b>	space 0	space 0

# Menu tree

Your handset offers a set of functions that allow you to use and customise the handset. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked left soft key  and right soft key .

Each menu and sub-menu allows you to view and alter the settings of a particular function. The roles of the soft keys vary according to the applications and services; the label on the bottom line of the display just above each key indicates its current role.

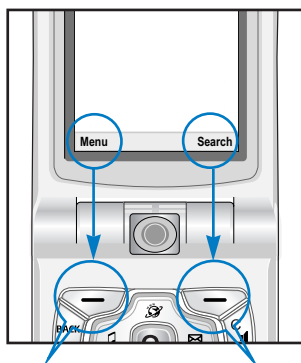

Press the left soft key to access the available Media.

Press the right soft key to access the available Contacts.

## **1. Messages (see page 35)**

### **1.1 New message**

- 1.1.1 Text message
- 1.1.2 Multimedia message
- 1.1.3 Email

### **1.2 Inbox**

### **1.3 Outbox**

### **1.4 Drafts**

### **1.5 Mailbox**

### **1.6 Templates**

### **1.7 Emoticons**

### **1.8 Settings**

- 1.8.1 Text message
- 1.8.2 Multimedia message
- 1.8.3 Email
- 1.8.4 Voicemail
- 1.8.5 ExpressLink
- 1.8.6 Info. Service

## **2. Calling (see page 45)**

### **2.1 Video calls**

- 2.1.1 My picture size
- 2.1.2 My picture position
- 2.1.3 Hide my picture
- 2.1.4 Block my picture

### **2.2 Call history**

### **2.3 Call divert**

### **2.4 Call duration**

### **2.5 Call costs**

### **2.6 Fixed dial numbers**

### **2.7 Call barring**

## **2.8 Settings**

- 2.8.1 Call waiting
- 2.8.2 Send my number
- 2.8.3 Call reject
- 2.8.4 Auto redial
- 2.8.5 Answer mode
- 2.8.6 Minute minder
- 2.8.7 Select line

## **3. Multimedia (see page 53)**

### **3.1 Camera**

### **3.2 Video camera**

### **3.3 Image viewer**

### **3.4 Audio player**

### **3.5 Video player**

### **3.6 VOD/AOD**

## **4. Browser (see page 59)**

### **4.1 Home**

### **4.2 Bookmarks**

### **4.3 Saved pages**

### **4.4 Go to URL**

### **4.5 Security certificates**

### **4.6 Settings**

- 4.6.1 Profiles
- 4.6.2 Clear Cache
- 4.6.3 Character encoding
- 4.6.4 Scroll speed

**5. Organiser (see page 62)**

5.1 Contacts

5.2 Calendar

5.3 To do

5.4 Memo

5.5 Secret memo

**6. Profiles (see page 70)****7. Tools (see page 72)**

7.1 Quick menu

7.2 Alarm clock

7.3 Calculator

7.4 World time

7.5 Unit converter

7.5.1 Currency

7.5.2 Surface

7.5.3 Length

7.5.4 Weight

7.5.5 Temperature

7.5.6 Volume

7.5.7 Velocity

7.6 Timers

7.7 Voice recorder

7.8 Server sync

**8. Settings (see page 79)**

8.1 Handset

8.2 Screen

8.3 Network

8.4 Access points

8.5 Security

8.6 Connectivity

8.7 Memory status

8.8 Language

8.9 Reset settings

**9. Applications (see page 87)**

9.1 My applications

9.2 Connect

9.3 Settings

# Messages

## New message

Menu 1.1

### Text message

Press the Message shortcut key to display Messages menu, select **New message** and then select **Text message**.

You can write and edit a single text message up to 160 characters. You can write and edit up to 10 concatenated messages.

1. Press the left soft key [Options]/ [Search contacts] to specify the recipient from the Sent Message List or Contacts.
2. When you input content, a new window allowing you to input content appears. By using the left soft key [Options], you can input emoticons, templates, and phone numbers through the Contacts. By using the right soft key on the bottom, you can input various symbols.
3. When the message has been sent, it will be saved in the Outbox automatically. If the message has not been sent, you can determine whether to save the message in the Drafts or not.


### Multimedia message

#### Creating a Multimedia message

Select Messages from the top menu or pressing the Message shortcut key displays the message menu. In the menu, select Write message, and then select Multimedia to create a Multimedia message.

You can simply send picture with a Multimedia message attaching the picture from your album or directly from the multimedia menu.

#### Multimedia message

1. You can create a Multimedia message.
2. Select **Multimedia message** from the **New message** menu and then press the  key.
3. You can edit a Multimedia message field using the Down navigation Key.



4. Move the highlight to the **To** field, and input the recipient of the message. You can specify the recipient by either phone number or Email address. You can search the Contacts by pressing the left soft key [Options].  
When a recipient has been specified, another field where you can specify another recipient appears.
5. Move the highlight to the title field, and write a title. You can select and input a template or emoticon by pressing the left soft key [Options].
6. You can add, delete, or edit by moving the highlight to the desired slide item.
7. You can save the message in the Drafts by using the left soft key [Options] while creating a message.
8. You can preview the message by using the left soft key [Options] while creating a message.
9. When you have completed creating a message, press the **OK** key. You can send the message by selecting Send now and Send later from the popup list, and you can save the message by selecting Save to drafts. You can preview the message by selecting Preview from the popup list.

### Creating a Multimedia message slide

1. Press the right soft key [Edit] in the slide item while creating a Multimedia message.
2. You can change the slide duration in the Slide Duration field. If you do not change it, the default value is used.
3. You can attach your desired image, audio, or video file by moving the highlight to the desired file to attach, and selecting Attach. If there is an attached image or audio file, you cannot attach a video file. If there is an attached video file, you cannot attach an image or audio file. You can cancel the attached file by using the left soft key [Options]
4. You can insert your desired content into a slide by moving the highlight to the message. You can insert templates or emoticons into the content input window by using the left soft key [Options]. You can insert the name, or phone number saved in the Contacts into the content input window by using the left soft key [Options].
5. You can add, or delete slides by using the left soft key [Options] while creating a slide.

## Multimedia message send menu

### Send now

Sends the created Multimedia message immediately.

### Send later

Sends the created Multimedia message at the specified time.

### Save as draft

Saves the created Multimedia message to Drafts.

### Preview

Shows the created Multimedia message before sending it.


## Viewing Multimedia messages in the Preview and Drafts

1. You can preview a created Multimedia message.
2. If the message is too long to be displayed on screen, you can scroll the contents of the message by using the up and down navigation key.
3. Press the **OK** key to pause playback of the message, and press the **OK** key to resume playing the message.
4. If an audio or video file is attached to a Multimedia message, press the right soft key [Unmute] to cancel the mute function.
5. Press the left soft key [Info] to stop playback, and then you can see detailed information about the Multimedia message.


## Viewing Multimedia messages in the Inbox and Outbox

1. Select a Multimedia message to view its contents.
2. If the message is too long to be displayed on a screen, you can scroll the contents of the message by using the up and down direction key.
3. Press the **OK** key to pause playback of the message, and press the **OK** key to resume playing the message.

4. If an audio or video file is attached to a Multimedia message, press the right soft key [Mute] to activate the mute function. Press the right soft key [Unmute] to cancel the mute function.

When the multimedia message includes URL, you can try to connect the site. If you want to stop connecting, press  key, up or down navigation key.

At this time, the screen shows “Use link” on right soft key. When you press this key, you can connect the site or view the streaming file.

5. Move to a desired message by using the left and right navigation keys.
6. Press the left soft key [Info] to stop playback, and then you can see detailed information about the Multimedia message.
7. Press the  key to play the message.
8. You can select the following functions using the left soft key [Options].

- ▶ **Reply with:** Creates reply to the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Play again:** Plays attached files.
- ▶ **Save address:** Saves the telephone numeric in the Contacts.
- ▶ **Use number:** Extracts the phone number included in the text of the message.
- ▶ **Use email address:** Shows Email addresses up to 10 in the received message containing text. You can send a message or save as a contact by selected number.
- ▶ **Use link:** Shows URL up to 10 in the received message containing text. You can browser web or save as bookmark by selected number.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Mute:** Use this menu only when the message includes audio media file.
- ▶ **View attachment:** Shows the attachment file list.
- ▶ **Message info.:** Displays information about the selected message.

## Email


To send the email, you should set up the email account. Refer to Email at page 50 first.

### Message edit

1. Select Email from the Write Message menu.
2. Input the desired Email address(es) in the To, Cc and Bcc fields. You can input up to 4 addresses in each field.


#### Tip

To input @, select the right soft key [Symbol], and then press 9 numeric key pad to input or press video call key.

3. Input the title of the mail to be sent in the Subject field.
4. Input the content of the mail to be sent in the Message field.
5. Specify up to 4 files to attach in the Attach field.
6. When you have finished writing a message, press the  key. You can send the message by selecting **Send now** from the popup list and you can save the message by selecting **Save as draft**.

## Inbox

### *Menu 1.2*

1. You can view saved messages. Select a message and then press the  key to view the message.
2. You can view the previous or next message by using the left and right soft keys.
3. To view a Multimedia message, select **Retrieve** in the message view screen. Then the file is transmitted, and you can view the file when the message is received.
4. You can use the following functions by using the left soft key [Options].
  - ▶ **Reply with:** You can create a reply to the selected message.
  - ▶ **Forward:** You can forward a selected message.
  - ▶ **Save address:** You can save the address of the senders.
  - ▶ **Use number:** Allows you to use the selected number.
  - ▶ **Use email address:** Allows you to use the selected email address.

- ▶ **Use link:** Allows you to use link.
- ▶ **Delete:** You can delete a selected message.
- ▶ **Message info.:** You can view the information on a selected message.

## Outbox

*Menu 1.3*

1. You can view sent messages. Select a message and then press the **OK** key to view the message.
2. You can view the previous or next message by using the left and right soft keys.
3. You can use the following functions by using the left soft key [Options].
  - ▶ **New message:** You can write a new message.
  - ▶ **Forward:** You can forward a selected message.
  - ▶ **Edit:** You can edit a selected message.
  - ▶ **Delete:** You can delete a selected message.
  - ▶ **Multiple delete:** You can delete multiply selected messages.
  - ▶ **Delete all:** You can delete all messages.
  - ▶ **Message Info.:** You can view the information on a selected message.
  - ▶ **Memory info.:** You can see how much free memory you have.

## Drafts

*Menu 1.4*

1. You can view saved messages. Select a message and then press the **OK** key to view the message.
2. You can view the previous or next message by using the navigation key.
3. You can use the following functions by using the left soft key [Options].
  - ▶ **New message:** You can write a new message.
  - ▶ **Send:** You can send a selected message.
  - ▶ **Edit:** You can edit a selected message.
  - ▶ **Delete:** You can delete a selected message.
  - ▶ **Multiple delete:** You can delete multiply selected messages.

- ▶ **Delete all:** You can delete all messages.
- ▶ **Message info.:** You can view the information on a selected message.
- ▶ **Memory info.:** You can see how much free memory you have.

## Mailbox

*Menu 1.5*

1. Select Mailbox.
2. Select the desired Mail Server to retrieve messages from the Server List.
3. To retrieve new messages in the Mail Header screen, select Retrieve to retrieve the new Mail Header List.
4. Select your desired message from the retrieved mail headers to retrieve the mail contents from the server.
5. If the server is an IMAP4 server, you can specify whether or not to retrieve attached files only after reading the contents first.

You can use the following functions by using the left soft key [Options].

- ▶ **New message:** You can write a new message.
- ▶ **Reply with:** You can reply a selected message.
- ▶ **Retrieve:** You can retrieve a selected message.
- ▶ **Delete:** You can delete a selected message.
- ▶ **Multiple delete:** You can delete multiple selected messages.
- ▶ **Delete all:** You can delete all messages.
- ▶ **Message info.:** You can view the information on a selected message.
- ▶ **Memory info.:** You can see how much free memory you have.

## Templates

*Menu 1.6*

You can add, edit, and delete frequently-used useful phrases.

You can save frequently-used phrases in the input window in advance.

### Emoticons

*Menu 1.7*

You can add, edit, and delete frequently used emoticons.

You can save emoticons that are frequently used in the input window in advance.

### Settings

*Menu 1.8*

#### Text message

##### ▶ Delivery report

Allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

##### ▶ Message types

The default message type should be Text.

##### ▶ Validity period

Allows you to set the length of time for which your text messages will be stored at the Text message center while attempts are made to deliver them to the recipient.

##### ▶ Text message centre

The number of the Text message gateway is pre-loaded in your 3 handset and you should not change this. If you delete or change this by mistake contact Customer Services for support.

#### Multimedia message

Select Multimedia message from the Settings menu to configure Multimedia message related options.

##### ▶ Delivery report

This menu allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending delivery confirmation mail to a sender.

**Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.

**Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.

▶ **Read reply**

This menu allows you to request reply or to allow reply to a sender.

▶ **Auto retrieve**

This menu allows you to determine whether to automatically download a Multimedia message when a Multimedia message notification message arrives.

▶ **Validity period**

This menu allows you to configure the term of validity for a message when transmitting a Multimedia message. The message would be saved in the Multimedia server only for the configured term.

▶ **Slide duration**

This menu allows you to configure the duration of each page when writing the message.

▶ **Message size**

This menu allows you to configure the maximum size of a Multimedia message when writing the message.


▶ **Multi. msg centre**

The details for the Multimedia gateway are pre-loaded onto your handset and should not be changed. If you change or delete these by mistake, contact Customer Services for support.

## **Email (To set up an account)**

This menu allows you to edit, delete and add an Email account.

To set up an Email account, do the follows.

1. Select Messages/Settings/Email after pressing the  key in the idle screen.
2. Enter details **Title**, **Username** (your phone number with Country code), **Password**, **Email address**, **Reply email address**, **Outgoing mail server**, **Incoming mail server**, **Maximum receive size [300KB]**, **Mailbox type**, **Save to server** and




**Access point** of the other email account as required (information is provided by your email/ internet service provider).

3. You can authenticate by pressing the left soft key [Authen.].

Once you have set up details of your other accounts, you can collect mail from those accounts by selecting Check for new mail from the Mail home page.

To retrieve an email, do the following:

1. Select the mail server you want to retrieve in the Mailbox.
2. Choose the email by using the navigation key.
3. Press the right soft key [Retrieve].
4. Press the  key.

## Voice mail

This menu allows you to get the voice mail if this feature is supported by the network service provider. Please check with your network service provider for details of their service in order to configure the handset accordingly.

## ExpressLink

You can order ExpressLink from WAP service providers.

ExpressLink is notifications of, for example, news headlines and it may contain a text message or address of a WAP service. For availability and subscription, contact your WAP service provider.

## Info. Service

Info. service messages are text messages sent by the network to 3G phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the service provider. When you receive an info service message, a popup message will indicate a new message receipt or the info. service message will be displayed directly.

## Video calls

*Menu 2.1*

### My picture size

This menu allows you to configure your own picture size to either Large, Medium or Small.

### My picture position

This menu allows you to configure your screen alignment to Bottom right or Bottom left.

### Hide my picture



This menu allows you to hide your picture.

### Block my picture

This menu allows you to block transmission of your picture.

## Call history

*Menu 2.2*

You can access the call register by pressing the  key or the  key. Different icons show you the type of the recent calls registered in the list (see following page for icon description).

- ▶ You can view missed, received, dialled and entire call records. Each call record menu provides the following functions.
- ▶ You can make a voice or video call to the number in the call record.
- ▶ You can save the number in the call record to the Contacts.
- ▶ You can send a message to the number in the call record.
- ▶ You can view detailed information about the call records such as the date, time and call duration.
- ▶ You can clear call records.

### Missed calls

Allows you to view missed call records, make a call, send a message and save the number in the Contacts.

### Received calls

Allows you to view received call records, make a call, send a message and save the number in the Contacts.

### Dialled calls

Allows you to view dialled call records, make a call, send a message and save the number.

### All calls

This menu allows you to view all of the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in the Contacts.



Received video call



Received voice call



Dialled video call



Dialled voice call



Missed video call




Missed voice call

## Call divert

*Menu 2.3*

This menu allows you to configure the call divert service which diverts incoming calls to a user-specified number.

1. Press the  key in the idle screen.
2. Press the navigation key down to display Calling and press Call divert.

### Voice calls

▶ **All voice calls**

Diverts all incoming voice calls unconditionally.

▶ **If busy**

Diverts incoming voice calls when the line is busy.

▶ **If no answer**

Diverts incoming voice calls when there is no answer.

▶ **If unreachable**

Diverts incoming voice calls when the handset is turned off or the handset is out of the network service coverage

### Video calls

You can divert video calls to other 3 handsets that support video calling.

▶ **All video calls**

Diverts all incoming video calls unconditionally.

▶ **If busy**

Diverts incoming video calls when the line is busy.

▶ **If no answer**

Diverts incoming video calls when there is no answer.

▶ **If unreachable**

Diverts incoming video calls when the handset is turned off or the handset is out of the network service coverage.

### All fax calls

Diverts fax calls unconditionally.

## **Call duration**

*Menu 2.4*

---

Shows call duration time by type. Press the right soft key [Reset] to reset. A security code will be requested.

### **Last call**

Displays the duration of the last call made in hours/minutes/seconds.

### **Received calls**

Displays received call duration.

### **Dialled calls**

Displays dialled call duration.

### **All calls**

Displays overall call duration.

## **Call costs**

*Menu 2.5*

---

This network service enables you to check the cost of the last call made and of all calls made to date. You must enter your PIN 2 code to access this menu.

### **Last call**

In this menu, you can reset the last call cost. You have to input your PIN 2 code to reset.

### **All calls**

In this menu, you can reset the overall call cost. You have to input your PIN 2 code to reset.

## Cost settings

This menu enables the call cost display conditions to be specified. You must enter your PIN code for configuration.

- ▶ **Set call cost:** This menu enables you to configure the call cost in home units or a specific currency.
- ▶ **Set limit:** This menu allows you to limit the call cost to the specified amount.

## Fixed dial numbers

*Menu 2.6*

You can fix dialling to specified phone numbers only. This information is saved on the USIM card. You must enter your PIN2 code for authentication.

- ▶ **On:** Enables Fixed Dial Numbers.
- ▶ **Off:** Disables Fixed Dial Numbers.
- ▶ **FDN list:** You can view and edit the Fixed Dial Number list.

## Call barring

*Menu 2.7*

Call barring allows you to restrict from making and receiving calls with your handset. For this function, you need the barring password, which you can obtain from Customer Service.

## Voice calls

The following options are available:

- ▶ **All outgoing:** Calls cannot be made.
- ▶ **Outgoing international:** International calls cannot be made.
- ▶ **Outgoing international calls except home country:** When abroad, calls can be made only to numbers within the current country and to your home country, which is where your home network provider is located.
- ▶ **All incoming:** Calls cannot be received.
- ▶ **Incoming when abroad:** Calls cannot be received when you are using your handset outside your home service area.

### Video calls

The following options are available:

- ▶ **All outgoing:** Calls cannot be made.
- ▶ **Outgoing international:** International calls cannot be made.
- ▶ **Outgoing international calls except home country:** When abroad, calls can be made only to numbers within the current country and to your home country, which is where your home network provider is located.
- ▶ **All incoming:** Calls cannot be received.
- ▶ **Incoming when abroad:** Calls cannot be received when you are using your handset outside your home service area.

### Deactivate all

All call barring settings are deactivated; calls can be made and received normally.

## Settings

*Menu 2.8*

### Call waiting

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Deactivate** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

### Send my number

This network service allows you to set your phone number to be displayed (**On**) or hidden (**Off**) from the person whom you are calling. Select **Set by network** to reset the handset to the setting that you have agreed upon with Customer Service.

### Call reject

This menu allows you to enable or disable call reject for all numbers or a specific number.

▶ **Off**

▶ **Reject on list**

Configures conditional call reject mode. Press the right soft key [Setup] to add the phone number to be rejected. When you add a number to the list, you can select either **Silent** or **End call** as a reject method. When you add a number to the list, you can add the number by entering it directly or by searching for the number in the **Contacts** by selecting **Search**.

▶ **Reject all calls**



### Auto redial

The menu enables you to configure the auto redial function when a call attempt has failed.



### Answer mode

Allows you to determine when to answer the handset.

- ▶ **Press send key:** You can answer an incoming call by only pressing the  key.
- ▶ **Open flip:** This option allows you to answer a call simply by opening the flip.
- ▶ **Press any key:** You can answer an incoming call by pressing any key, except the  key, soft keys and side keys.

### Minute minder

This function sounds an alert notification every 1 minute after call connection.

### Select line

If your USIM card has two phone lines, you can switch between Line1 and Line2.

## Camera

*Menu 3.1*

This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent by Multimedia message or Email.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Size:** Determines the size of an image.
- ▶ **Quality:** Determines the quality of an image.
- ▶ **Flash:** Determines the flash operation.
- ▶ **Multishot:** Determines whether to enable multi-shot photography.
- ▶ **Zoom:** Determines the zoom rate.
- ▶ **Brightness:** Determines the brightness.
- ▶ **Delay timer:** Determines the delay time.
- ▶ **Camera effect:** Determines the special effect to the picture.
- ▶ **Shutter sound:** Determines the sound when the shutter is pressed.
- ▶ **Image viewer:** Shows the still images taken.

## Video camera

*Menu 3.2*

This application enables you to record a video clip. You can play and watch a saved video file while using this function. Once recorded, a video clip can be sent by Multimedia message or Email.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Flash:** Determines the flash operation.
- ▶ **Zoom:** Determines the zoom rate.
- ▶ **Quality:** Determines the quality of a video clip.
- ▶ **Brightness:** Determines the brightness.
- ▶ **Camera effect:** Determines the special effect to the video clip.
- ▶ **Duration:** Determines the recording time.
- ▶ **Sound:** Determines the mute function.
- ▶ **Video player:** Shows the video clips recorded.

### Image viewer

Menu 3.3

This application enables you to view still images. The image files saved in the handset are represented by thumbnails. Select the desired image to view the enlarged image.

#### ! Notice

Features within the Edit Image might not work due to large image size or lack of internal phone resource. For example, Rotate will not work for images greater than 640x480.

Press the left soft key [Options] to display the following popup menu items (in 1. Default images).

- ▶ **Send as message:** Enables the selected image to be attached to a message and the message sent.
- ▶ **Screen theme:** You can set an image as the screen theme (wallpaper, start-up, shut-down and calling animation).
- ▶ **Slide show:** You can start the slide show.
- ▶ **File info.:** Shows information about the selected image file.
- ▶ **Memory info.:** Shows the current memory usage.

Press the left soft key [Options] to display the following popup menu items (in 2. My images).

- ▶ **Go to camera:** Moves to the camera application taking still image photographs.
- ▶ **Send as message:** Enables the selected image to be attached to a message and the message sent.
- ▶ **Animated image:** In this menu, you have options such as Create animated image, Select all, Unselect all.
- ▶ **Rename:** Enables the image to be renamed.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Multiple delete:** Deletes the multiply deleted images.
- ▶ **Delete all:** Deletes all the images.
- ▶ **Screen theme:** You can set an image as the screen theme (Home screen, Incoming call, Outgoing call, Sending message and Switch on).
- ▶ **Sort:** Classifies the images by name, date and file format.

- ▶ **Slide show:** You can start the slide show.
- ▶ **File info.:** Shows information about the selected image file.
- ▶ **Memory info.:** Shows information about the memory status.

## Audio player

*Menu 3.4*

This application plays MP3, MIDI and AAC files so that you can listen to them. Select your desired audio file in the list mode showing audio files.

The following options are provided by the My sounds in the Audio Player.

There are two scenarios: 1) Unmute status and  
2) Mute status.

Press the left soft key [Options] to display the following popup menu items (when 1. Unmute status).

- ▶ **Delete:** Deletes all audio files.
- ▶ **Mute:** Mutes the sound temporarily.
- ▶ **Set repeat:** Repeats the audio file.
- ▶ **Next file:** Plays the next audio file.
- ▶ **Previous file:** Plays the previous audio file.
- ▶ **View file list:** Shows a list of audio files.
- ▶ **File info.:** Shows information about the selected audio file.

Press the left soft key [Options] to display the following popup menu items (when 2. Mute status).

- ▶ **Delete:** Deletes all audio files.
- ▶ **Unmute:** Cancels the Mute function so that you can hear the sound again.
- ▶ **Set repeat:** Repeats the audio file.
- ▶ **Next file:** Plays the next audio file.
- ▶ **Previous file:** Plays the previous audio file.
- ▶ **View file list:** Shows a list of audio files.
- ▶ **File info.:** Shows information about the selected audio file.

Press the left soft key [Options] to display the following popup menu items

- ▶ **Send as message:** You can attach the selected audio file to a message and send the message.
- ▶ **Rename:** You can rename the selected audio file(Available in 2. My sounds).
- ▶ **Delete:** Deletes the selected audio file(Available in 2. My sounds).
- ▶ **Multiple delete:** Deletes multiple audio files at a time(Available in 2. My sounds).
- ▶ **Delete all:** Deletes all audio files(Available in 2. My sounds).
- ▶ **Sound theme:** You can set an audio file as the sound theme (ringtone, start-up sound, close-down sound).
- ▶ **Sort:** Sorts audio files.
- ▶ **File info.:** Shows information about the selected audio file.
- ▶ **Memory info.:** Shows the current memory usage.

## Video player

*Menu 3.5*

This application plays recorded video (.3gp or MPEG4 files). Select a desired video.

The following options are provided by the Video Player.

There are two scenarios; 1) Mute/Unmute status and  
2) Pause status

Press the left soft key [Options] to display the following popup menu items (when 1. Unmute/Mute status).

- ▶ **Delete:** Deletes the selected video file.
- ▶ **Mute/Unmute:** Mutes/Unmutes the sound temporarily.
- ▶ **Contrast:** Adjust the contrast.
- ▶ **Next file:** Plays the next video file.
- ▶ **Previous file:** Plays the previous video file.
- ▶ **View file list:** Shows a list of video files.
- ▶ **File info.:** Shows information about the selected video file.

Press the left soft key [Options] to display the following popup menu items (when 2. Pause status).

- ▶ **Delete:** Deletes the selected video file.
- ▶ **Capture:** Captures an image from the video file.
- ▶ **Contrast:** Adjusts the contrast.
- ▶ **Next file:** Plays the next video file.
- ▶ **Previous file:** Plays the previous video file.
- ▶ **View file list:** Shows a list of video files.
- ▶ **File info.:** Shows information about the selected video file.

Press the left soft key [Options] to display the following popup menu items

- ▶ **Send as message:** You can attach the selected video file to a message and send the message if not content protected.
- ▶ **Rename:** You can rename the selected video file.
- ▶ **Delete:** Deletes the selected video file.
- ▶ **Multiple delete:** Deletes multiple video files at a time.
- ▶ **Delete all:** Deletes all video files.
- ▶ **Sort:** Sorts video files.
- ▶ **File info.:** Shows information about the selected video file.
- ▶ **Memory info.:** Shows the current memory usage.

## **VOD/AOD**

*Menu 3.6*

Using the VOD or AOD service enables you to play a desired audio file in real-time. In addition, you can download and save a desired audio file using this service.

- ▶ **Connecting:** Connects to the AOD service so that you can play an audio file in real-time or download audio files.
- ▶ **Settings:** You can configure the VOD or AOD server to connect.

# Browser

3G brings you a whole world of communications, information and entertainment services.

You can ask for directions within major cities, get the latest news, keep up to date with Premier League action and much, much more.

This section is your guided tour of that world. The browser is available in the 3G coverage area.

To launch the browser in standby mode, press the  key.







## Home

*Menu 4.1*


Select Home in the Internet Menu and then press the  key.

If you want to reload current page, press the right soft key [Reload].

The following options are available. Press the left soft key [Options].

- ▶  **Home:** Moves to the initial homepage.
- ▶  **Reload:** Loads the current page again.
- ▶  **Bookmarks:** You can add the current page to the Bookmarks or view the list saved under Bookmarks.
- ▶  **Settings:** You can set the Browser related things such as Clear cache, Session info., Clear cookies, etc.
- ▶  **Back:** Moves to the previous page.
- ▶  **Forward:** Moves to the previous page.

The following example shows the functionality of browser menu 'Forward'.

1. Navigation Page A ' Page B ' Page C ' Page D
  2. On Page D, select a menu 'Back', it will place a user in Page C.
  3. On Page C, if select a menu 'Back', move to Page B. Else if select a menu 'Forward', move to Page D again.
- ▶  **Enter URL:** Connect to the specific URL after editing.



## **Bookmarks**

*Menu 4.2*

This function allows you to store and edit frequently accessed sites.

- ▶ **Send as message:** Selected bookmark URL can be sent via text message or multimedia message.
- ▶ **Add new:** Adds a new site to the bookmarks list.
- ▶ **Edit:** You can edit and save the name and address of the selected bookmark.
- ▶ **Delete:** Deletes the selected bookmark.
- ▶ **Delete all:** Deletes all of the currently saved bookmarks.

## **Saved pages**

*Menu 4.3*

Saves the page on display as an off-line file.

A maximum of 20 pages can be saved.

## **Go to URL**

*Menu 4.4*

Connects to the specific URL after editing.

## **Security certificates**

*Menu 4.5*

A list of the available certificates is shown. Also, you can make session clear.

## Settings

*Menu 4.6*

---

### Profiles

Select the profiles by press **OK** key to launch browser.

### Clear cache

Deletes the data saved in the cache memory.

### Character encoding

Select the character set one of the following list

: Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8), Chinese(BIG5)

### Scroll speed

Allows you to determines the scroll speed and select from **1 Line**, **2 Lines** and **3 Lines**.

## Contacts

*Menu 5.1*

This menu allows you to save and manage contact address information. The Contacts functions provides functions to add a new address or search saved contact addresses by name, phone number and group information.

### Add new contact

This menu allows you to add a new contact address. You can input contact address information including name, phone numbers, email addresses, group information items, memo, homepage address, ringtones, and avatar or image (photograph).

You have to select Handset or USIM card memory using the left and right navigation keys.

### Search

This menu allows you to search your contact addresses. Generally the search operation is performed by name. In the search window, the current search function and results for the search condition are displayed.

On the screen, a saved image or avatar is displayed for the selected contact address. You can change the configuration in the [Options] menu so that no image or avatar is displayed. You can also make a phone call or send a message to the selected phone number.


### Group

This menu allows you to manage group information. By default, there are 4 groups: family, friends, colleagues and school. You can edit and delete a group. You can also configure ringtone for a group so that the group ringtone sounds when a call from a specific contact address within that group arrives and there is no ringtone configured for the contact address.

## Speed dials

This menu allows you to configure speed dial numbers. You can select a number as a speed dial between 2 and 9. You can configure speed dial numbers for any of the 5 numbers for a specific contact address so that a contact address may have multiple speed dial numbers.

## Service numbers

This menu allows you to make a call to one of the numbers provided by Customer Service by moving the highlight to the desired number and pressing the  key.

## Clear Contacts

This menu deletes contact address information. You can delete contact addresses saved in the handset memory and you can delete the numbers saved on the USIM card.

## Copy all

This menu allows you to copy all information from your USIM card, e.g. name, handset number, etc., to your handset. If a name is duplicated during the copying operation, the information is duplicated.

- ▶ **Handset to USIM:** You can copy the entry from the handset memory to the USIM card (not all the data will be copied).
- ▶ **USIM to handset:** You can copy the entry from the USIM card to phone memory.

The following options are available:

**All together:** You can copy all your contacts at a time.

**One by one:** You can copy selected contacts one by one.

### Move all

This menu allows you to move all the information from your USIM card, e.g. name, handset number etc., to your handset. This differs from the Copy all operation in that the target information is saved only in the destination location.

- ▶ **Handset to USIM:** You can move the entry from the phone memory to the USIM card.
- ▶ **USIM to handset:** You can move the entry from the USIM card to phone memory.

The following options are available:

**All together:** You can move all your contacts at a time.

**One by one:** You can move selected contacts one by one.

### Own number

Allows you to display your phone number in the USIM card. You may change or add to the information.

### Settings

Allows you to set the display way as for the following items.

Display data: Handset & USIM / Handset / USIM

Show image/avatar: On / Off

## Calendar

### Menu 5.2

#### Monthly Schedule Management

1. Select the Organiser from the top menu.
2. Select Calendar and press the **OK** key.
3. The monthly view is displayed.
4. Initially, the cursor appears on today's date according to your handset settings.
5. You can move the date cursor to the desired location using the up, down, left and right navigation keys.
6. On a date where a schedule item, anniversary or birthday is saved, corresponding icons and the number of saved schedule items are displayed on the bottom left of the screen.

#### Adding a New Schedule Item

1. Select the left soft key [Options] in the Monthly schedule management screen, select the Add new from the popup menu and then press the **OK** key. Alternatively, select the right soft key [Add] in the Monthly schedule management screen.
2. Input the desired date using the numeric keys.
3. Input the desired time using the numeric keys.
4. Input the subject.
5. Select the schedule item type using the left and right navigation keys.
6. Select the repeat type using the left and right navigation keys.
7. Select the alarm type using the left and right navigation keys.
8. Press the **OK** key. to save the new schedule item.

#### Set holiday

1. Select the left soft key [Options] in the Monthly schedule management screen, select Set holiday and then press the **OK** key to display the Holiday configuration popup window.

## Organiser

2. Supported holiday types include On the day, Weekly, Monthly, Annually and Multiple setting.
3. Select the holiday configuration type and press the **OK** key to configure the holiday.
4. The date corresponding to the configured holiday is represented in green in the Monthly schedule management screen.

### Go to date

1. Select the left soft key [Options] in the Monthly schedule management screen, select Go to date and then press the **OK** key to display Go to date window.
2. Input the desired date to move to and press the **OK** key.
3. The date cursor of the Monthly schedule management screen will then move to the specified date.

### Go to today

1. Select the left soft key [Options] in the Monthly schedule management screen, select Go to today and then press the **OK** key.
2. The date cursor of the Monthly schedule management screen will then move to today's date.

### Memory info.

Shows the current memory usage.

## To do

*Menu 5.3*

### To do Enquiry

1. Select the Organiser from the top menu.
2. Select the To do item and press the **OK** key.
3. The saved To do list is displayed.

### Adding To do Items

1. To add a new To do item, select Add new using the left soft key [Options] in the To do enquiry screen or select the right soft key [Add].
2. Input To do, Date and notes when you add an item.
3. Press the **OK** key to save the To do item.

### To do Delete/Delete All

1. Select the desired item to delete from the To do list and press the Delete using the left soft key [Options] to delete the To do item.
2. Select the Delete all using the left soft key [Options] to delete all the saved To do items.

### To do Done/Not yet done

1. If you wish to mark an item in the saved To do list as done, select the item from the To do list.
2. Select the Done using the left soft key [Options] to draw a line over the schedule item to mark it as done.
3. To cancel Done, select the Not yet done.

### To do Detailed View

To view detailed information, select the desired item from the To do list and press the **OK** key to display the detailed view screen about the item.

## Memo


*Menu 5.4*

### Saved Memos

1. Select the Organiser from the top menu.
2. Select the Memo item and press the **OK** key.
3. The saved memo list is displayed.



### Memo Add

1. To add a new memo, select Add new using the left soft key [Options] in the General memo screen or select the right soft key [Add].
2. Input the contents of the memo to be saved.
3. Press the  key to save the memo.

### Memo Lock/Unlock

1. Select the desired item to lock from the saved memos list. The locked memo is converted to a secret memo.
2. Select Move to secret memo using the [Options] key to lock the memo item. If an item is locked, a lock icon is displayed. At this time, you are asked to enter security code.
3. To release the lock again, select Move to Normal memo in the Secret memo item.

### Memo Delete/Delete All

1. Select the desired item to delete from the Memo list and select Delete using the left soft key [Options] to delete the memo.
2. Select Delete all using the left soft key [Options] to delete all the saved memos.
3. If the memo to delete is locked, a popup window will appear requesting the password.
4. In this case, you must input the correct password in order to delete the item.

### Change background

You can change the background image using the navigation key in the memo item.

### File info.

You can view the title, size and created date of the memo item you select.


### Memory info.

You can view the memory status: In Use and Free.

## Secret memo

*Menu 5.5*

---

1. Select the Organiser from the top menu.
2. Select the **Secret memo** item and press the  key.
3. To view or delete the memo set up as a secret memo, you have to input the password configured in the phone.

# Profiles

You can configure Voice/Vibration ringtone, key tone, flip tone, sound effects, switch on, switch off, and volume. The ringtone type supports MP3, .3gp, AAC, MIDI, WAV and AMR.

Supported profiles are Normal, Silent, Vibrate only, Headset, Outdoor, Customised 1, Customised 2 and Customised 3 profile. Select a desired profile, and press the **OK** key to activate the profile. The Normal, Silent, Vibrate only, Headset and Outdoor profiles do not provide an option menu. When the cursor is moved to a profile, the corresponding menu appears on the soft bar. If you select View/Edit menu, you can view the settings of the profile, or can edit settings of the profile.

Profiles menus have the submenus as shown below.

## ▶ Alert by

This option determines the incoming call notification mode. You can select from Ring, Vibration, Ring & Vibration, Ring after vibration and Silent.

## ▶ Voice ringtone

This option determines the Voice ringtone for incoming call notification.

## ▶ Video ringtone

This option determines the Video ringtone for incoming call notification.

## ▶ Volume

This option determines the ringtone volume for incoming call notification.

## ▶ Message alert

This option determines the message alert that sounds when a message has arrived. You can select one of None, Once, Every 1 minute, Every 2 minutes, Every 5 minutes, and Every 10 minutes mode.

## ▶ Message tone

This option determines the message tone that sounds when a new message has arrived.

## ▶ Confirmation tone

This option determines if warning alerts are on or off.

▶ **Key tone**

This option determines the key tone that is sounded when a key is pressed.

▶ **Key tone volume**

This option determines the volume of the key tone.

▶ **Flip tone**

This menu option allows you to select a melody that the phone sounds when it is flip open and closed.

▶ **Switch on sound**

This option determines the switch on effect that is sounded when the handset is turned on.

▶ **Switch off sound**

This option determines the switch off effect that is sounded when the handset is turned off.

## Quick menu

*Menu 7.1*

Quick menu allows you to add your own favourites to the list already provided. Once you create your own menu, you can access the desired function quickly in the idle screen by pressing the up navigation key. To move to your desired menu directly, select your desired menu from the Favourites menu and press the up and down navigation keys.

- ▶ **Add new:** In the [Empty] list, press the right soft key [Add]. Select the item from the menu and save the desired menu item.
- ▶ **Edit:** In the added menu items list, press the right soft key [Edit] or the left soft key [Options]. Select Edit from the menu to edit a saved menu item.
- ▶ **Delete:** In the added menu items list, press the left soft key [Options]. Select Delete from the menu to delete a saved menu item.
- ▶ **Delete all:** In the added menu items, press the left soft key [Options]. Select Delete all from the menu to delete Quick menu items 1 to 0.
- ▶ **View info.:** In the added menu item list, press the left soft key [Options].


Select View info. from the menu to view the information about the actual location of the added menu item.

## Alarm clock

*Menu 7.2*

The alarm function allows you to set up multiple separate alarms. You can also set the time, repetition interval and alarm sound.

- ▶ Select your desired alarm to configure in the alarm list. If there is no alarm, press the right soft key [Add] to add a new alarm.
- ▶ **Set/Cancel alarm:** On or Off the alarm using the navigation key.
- ▶ **Input alarm time:** Input your desired alarm time by specifying hour and minute. If the time format is 12 hours-based format, you have to select either 'am' or 'pm' using the right soft key
- ▶ **Select repeat mode:** Select desired repeat mode using the navigation key.
- ▶ **Select bell:** Select the bell to use for the alarm using the navigation key.
- ▶ **Input memo:** Input alarm name.

When you have completed configuration, press the  key to save the changed alarm configuration.

### Note

The alarm function does not work if the handset is turned off.

## Calculator

*Menu 7.3*

The calculator function allows you to add, subtract, multiply and divide. You can input numbers using the number keys, and operators using the up, down, left, and right navigation key.

You can input a decimal point by pressing the  key.

Whenever you press the  key, characters are sequentially deleted in reverse direction.

## World time

*Menu 7.4*

The World time function provides time information on major cities worldwide.

1. You can view the time of desired country or city using the navigation or right soft key [List].
2. You can select a desired city as a base using the left soft key [set].


## Unit Converter

*Menu 7.5*


This function converts any measurement into a unit you want.


There are 7 types of units that can be converted: Currency, Surface, Length, Weight, Temperature, Volume, and Velocity.

### Currency



1. Select the Currency menu.
2. Users can set a currency exchange rate using the right soft key [Rate].
3. Input standard unit in Domestic and then press the  key.  
Then you can view converted value in Foreign.
4. You can view the value in home country currency unit in Domestic by inputting

## Tools



standard unit in Foreign, and then press the  key.

5. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
6. To exit currency conversion function, press the  key.



## Surface

1. Select Surface menu.
2. Select desired unit to convert using the right soft key [Unit].
3. Input standard unit and then press the  key to view converted value.
4. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
5. To exit area conversion function, press the  key.



## Length

1. Select Length menu.
2. Select the desired unit to convert using the right soft key [Unit].
3. Input the standard unit and then press the  key to view your converted value.
4. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
5. To exit length conversion function, press the  key.



## Weight

1. Select Weight menu.
2. Select desired unit to convert using the right soft key [Unit].
3. Input standard unit and then press the  key to view converted value.
4. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
5. To exit weight conversion function, press the  key.



## Temperature

1. Select Temperature menu.
2. Input standard unit and then press the  key to view converted value.
3. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
4. To exit temperature conversion function, press the  key.

## Volume

1. Select Volume menu.
2. Select desired unit to convert using the right soft key [Unit].
3. Input standard unit and then press the  key to view converted value.
4. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
5. To exit volume conversion function, press the  key.

## Velocity

1. Select Velocity menu.
2. Select desired unit to convert using the right soft key [Unit].
3. Input standard unit and then press the  key to view converted value.
4. Press the left soft key [Reset] to clear the current input field, and locate the cursor in the input field.
5. To exit velocity conversion function, press the  key.



## Timers

*Menu 7.6*

### Date finder

The Date finder shows the number of remaining days until the specified day of event.

### Dateulator

1. Select the Dateulator menu.
2. Select the desired item in the list to view Title, target date on days remaining.
3. Press the **OK** key to view the list.
4. Press the right soft key [Add] to input title and new date.  
Then press the **OK** key to add the item in the list.

### Stopwatch

A Stopwatch function is provided.

1. Select Stopwatch menu.
2. Press the **OK** key to start the stopwatch.
3. Press the **OK** key to stop the stopwatch and view the measured duration of time.
4. Press the **OK** key to resume the stopwatch.
5. Press the left soft key [Lap] during operation to record the duration of time at the moment, and continue the stopwatch.
6. You can save up to 6 time records by pressing the left soft key [Lap]. If the number of recorded time exceeds 6, the oldest one is deleted.

Press the right soft key [Reset] to reset the stopwatch.

## Voice recorder

*Menu 7.7*

This function allows you to record a voice memo. You can record voice messages with each message up to 60 seconds.

## Server sync

*Menu 7.8*

The Server sync function synchronises the data in a phone and the data on a server such as contact address information, schedule items, etc. via a wireless network.

### Connect

Select Server sync from the Tools menu and then press the **OK** key.

Select the Connect item and then press the **OK** key.

Connect to the server with the selected server profile and the synchronization animation is displayed while the synchronization is performed.

### Log

Select a Server sync item in the Tools menu and then press the **OK** key. Select Log item and then press the **OK** key to view the log for the last synchronisation operation performed.

### Settings

This menu allows you to configure the profile for a Sync Server.

#### ► Adding a new profile

1. Input and choose the Profile name, Host address, Username, Password, Contacts, Contact name, Calendar, Calendar name, To do, To do name and Access point.
2. Press the **OK** key to save the new profile.
3. In the Settings screen, press the left soft key [Options] key and select Add new to add a new profile.


### ▶ **Editing a profile**

1. Select a profile to edit.
2. Press the left soft key [Options], select Edit, and edit the selected profile.

### ▶ **Deleting profiles**

1. Press the left soft key [Options] and select Delete.
2. Select Yes to delete the selected profile.

### ▶ **Viewing the server**

Select a desired server profile to synchronise in the Settings screen and then press the  key.

## Handset

Menu 8.1

You can change the format of the time and date display as well as the actual time and date using the Time settings menu.

### Time

1. Select the Time item from the handset settings list and then press the **OK** key.
2. Select the time format using the left and right navigation keys.
3. Input the current time using the numeric keys.
4. Press the **OK** key to save the time.

#### **Note**

To change AM/PM, you have to press the right soft key [am/pm].

### Date

1. Select the Date item from the handset settings list, and then press the **OK** key.
2. Select the date format using the left and right navigation keys.
3. Input the date using the numeric keys.
4. Press the **OK** key to save the date.

#### **Note**

Please make sure that you set the exact date and time to ensure that all 3 services operate correctly.

### Auto update date/time

When Auto Update is configured to On, the time and date are automatically updated according to the current time zone. If **Confirm first** is selected, time and date update are confirmed before the automatic update.

### Daylight saving

This function enables Summer time. Configuring Daylight saving to On immediately applies summer time (For example, if the current time is 04:53, summer time is then 05:53).

### Handset information

This menu is used to view software version information.

### Screen

*Menu 8.2*

In this menu, you can configure screen display options including Screen settings and themes.

### Backlight

Use this to select whether or not the phone uses the backlight.

Item	Default Value
Main screen duration	Off 5 seconds <b>10 seconds</b> 15 seconds 20 seconds On
Main screen level	<b>Normal</b> Bright
Front screen duration	Off 5 seconds <b>10 seconds</b> 15 seconds 20 seconds

Item	Default Value
Keypad duration	Off 5 seconds <b>10 seconds</b> 15 seconds 20 seconds On

## Contrast

You can adjust the brightness of the main screen by using the left and right navigation keys.

## Colour scheme

You can change the colour of the menu, soft key area, title bar area, and cursor by changing the menu colour.

You can select the menu colour from **Blue**, **Violet**, **Orange**, and **Green**.

## Dialling font

You can configure the font size and colour of the numbers which appear in the home screen when you make a call.

## Clock display

You can configure the font size and color of the clock displayed on the main screen.

You can configure size to **Do not show**, **Small**, or **Large**. If Small or Large is selected, you can set the colour using the colour chart.

## Menu style

You can configure the menu style to **Icon style**, **Arc style** or **List style**.

### Screen theme

You can configure the background by themes.

#### ▶ Home screen

You can select a wallpaper (animated or static) to display in idle mode.

#### ▶ Incoming call

You can select an image to display when an incoming call arrives.  
The configuration is applied to both voice and video calls.

#### ▶ Outgoing call

You can select an image to display when dialling a call.  
The configuration is applied to both voice and video calls.

#### ▶ Sending message

You can select an image to display when sending a message.

#### ▶ Switch on

You can select an image to display when turning on the handset.

#### ▶ Switch Off

You can select an image to display when turning off the handset.

### Front screen colour

You can configure the backlight colour of the front screen.

### Greeting message

Set a message that is displayed when the handset is turned on.

## Network

*Menu 8.3*

### Network selection

▶ **Automatic**

This function automatically searches for the network and registers the handset to the network.

▶ **Manual**

This function enables you to search the network list and specify which network to attempt registration with.

### Preferred list

You can select preferred lists to display it saved in the current USIM card and can edit the current preferred list.

## Access points

*Menu 8.4*

This menu shows the Access Point List. Select the right soft key [Edit]. Access Point has the following items.

- ▶ **Connection title:** Profile Name
- ▶ **Bearer:** UMTS/CSD/GPRS
- ▶ **Username:** User name
- ▶ **Password:** Password
- ▶ **APN:** APN information of the service provider

To modify these settings please call Customer Service.



# Security

Menu 8.5

You can set a PIN code. When it is activated, a window asking you to enter the PIN code appears when you turn on the handset so as to prevent unauthorized use of the handset.

## PIN code request

You can activate a PIN (Personal Identification Number).

You can check the current status of configuration from the status bar.

1. Select PIN code request from the security menu and press the **OK** key.
2. Configure this item to On or Off. If it is On, a PIN code will be required whenever the handset is turned on.
3. Input the current PIN code and press the **OK** key.
4. Entering an incorrect PIN code 3 times in the PIN code input window invalidates the PIN code. In this case, the PUK code must be entered in order to reset the PIN code.
5. The maximum number of attempts at PUK code input permitted is 10. Entering an incorrect PUK code 10 times will restrict use of the handset. In this case, ask Customer Service to unlock your handset.

Press the Back key in the PIN code input window to return to the previous step.

## Change codes

You can change PIN, PIN2, the security code and the call barring password.

### **Note**

If you change the code and then forget it you will need to contact your place of purchase to unlock it or solve this problem.

### **PIN/PIN 2 code**

This menu allows you to change the PIN or PIN2 code.

1. Select Change codes from the Security Settings List and press the **OK** key.
2. Select PIN or PIN2 Code and press the **OK** key.

3. Input the current PIN or PIN2 code, and then a new PIN or PIN2 code. Entering an incorrect PIN code 3 times invalidates the PIN code. In this case, you will need to enter the PUK or PUK2 code in order to reset the PIN code.
4. Entering an incorrect PUK code 10 times will restrict use of the handset. In this case, ask Customer Service to unlock your phone.

#### ▶ Security code

This menu allows you to change the handset password. The maximum allowed numeric of attempts of security code input is not limited like PIN and PIN2.

#### ▶ Barring password

This menu allows you to change the call barring password.

## Handset lock

You can use security code to avoid unauthorized use of your handset.

When you switch on your handset, your handset will request security code always if you set phone lock to “Power on”.

You can select the menu from **When switching on**, **If USIM changed**, **Immediate**, and **None**.

## Connectivity

*Menu 8.6*

This function shows the status of the connection between other devices and this handset. You can select USB or IrDA.

## Memory status

*Menu 8.7*

This menu is used to view the memory usage of the phone and USIM card. You can obtain information about the amount of memory used by the contacts, the calendar, to do, memos, secret memos and text messages and multimedia messages.

## Common memory

This function shows the status of the user memory of the handset.

### **Reserved memory**

This function shows the available memory for the user.

### **USIM memory**

This function shows the status of the USIM card user memory.

### **Language**

*Menu 8.8*

---

This function allows you to set the language used in the handset.

### **Reset settings**

*Menu 8.9*

---

This function allows you to restore factory settings.

Undertaking a reset will not remove any user content.

# Applications

This Handset supports Java™ so that you can download games and other applications from 3 Services, and run them on your handset.

## **My applications**

*Menu 9.1*

This menu is used to locate and run downloaded applications, e.g. games. Select Download to view the list of applications that have been downloaded to the handset.

## **Connect**

*Menu 9.2*

This menu is used to go directly to the game download page, so that users can browse and select the games to download. This is possible because the Internet browser is launching with the game portal URL setting. This URL is specified in the Settings menu - Java Portal URL.

By default, the setting is on the game page of the Operator's portal (or, it can be left blank if the Operator does not specify the URL). If users want to change the default setting, the game portal URL can be modified in the Settings menu.


### Settings

*Menu 9.3*

This menu is used to configure the Java Internet portal site to connect to in order to download applications.

If this menu is selected, the list of currently saved Java Internet portal sites and the configured is displayed.

The first Settings screen: Shows the item list if there are saved items.

1. Select an item using the up or down navigation keys.
2. Press the  key to activate the selected item service.
3. Press the left soft key [Options] to display the popup menu. Select [Edit] from the popup menu to edit the contents of the selected item.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Add new:** New profile is added.
- ▶ **Edit:** You can edit the selected item.
- ▶ **Delete:** Deletes the selected item.
- ▶ **View:** Shows the contents of the selected item.

#### **Note**

Select “Applications ’ Settings”. In the “Settings”, add a list item that specifies the URL of Java game site. and turn the list item “ON”. launching WAP browser by selecting “Applications ’ Download applications”.

WAP browser will show you the URL page from the list item activated in the “Applications ’ Settings” menu.

Selecting a Java game link while browsing the page will lead to downloading the java game. Just follow the user message to download java games.

All the java applications downloaded are listed in the “Applications ’ My applications” menu.

# Troubleshooting

Please check to see if any problems you have encountered with the phone are described in this section before calling Customer Service.

**Q** How do I view the list of outgoing calls, incoming calls and missed calls?

**A** Press the  key.

**Q** How do I view all numbers stored in memory?

**A** Press right soft key[Contacts] and then  or press the down navigation key.

**Q** Why is the connection inconsistent or not audible in certain areas?

**A** When frequency environment is unstable in a certain area, connection may be inconsistent and not audible. Relocate to another area and try again.

**Q** Why does the display not turn on?

**A** Remove and insert the battery, then attempt to power-on. If there is no change, fully charge the battery and try again.

**Q** Why is there an echo when a connection is made with certain telephones in a certain area?

**A** This is called the 'Echo Phenomenon', where it occurs if connection volume is too high or caused by special properties (semi electronic telephone exchange) of the equipment on the other end.

**Q** Why does the handset heat up?

**A** The phone may get hot when there is a very long call duration or when games are played or when using the browser. This has no effect upon the life of the product or performance.

## Troubleshooting

**Q** Why is there no ringtone, but only a blinking LCD screen?

**A** Phone may be set to 'Vibrate only' or in 'Silent' mode. In the Profiles menu, please select 'Normal' or 'Outdoor.'

**Q** Why does the battery life get shorter in standby mode?

**A** The battery is worn out. As time passes, the battery life gradually becomes shorter. If the battery lasts about half the amount of time as when first purchased, it's time to purchase a new battery.


**Q** Why does the battery run out so quickly during normal use?

**A** It is due to the user environment or a large number of calls or weak signal.

**Q** Why is no number dialed when you recall a Contacts entry?

**A** Check that the number has been stored correctly by using the Contacts feature. Restore them, if necessary.

**Q** Incoming calls do-not reach me.

**A** Is your phone switched on (  pressed for more than three seconds)? Are you accessing the right cellular network? Or, you may have set an incoming call barring option.

**Q** I cannot find the lock, PIN, or PUK code. What is my PIN?

**A** The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact Customer Services.

**Q** What happens to the handset if it is dropped?

**A** The handset could power off or reset, but this does not necessarily imply any permanent damage.

# Accessories

## Charger

This adapter allows you to charge the battery. It supports standard Europe/Australia/U.K. and Hongkong (100-240 Volt 50/60Hz outlets).

\* Singapore (220 Volt 50Hz)

It takes 3.5 hours to charge a completely discharged battery.



**Europe**



**Australia**



 
**U.K and Hongkong**



## Accessories


### Headset

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer/termination button.

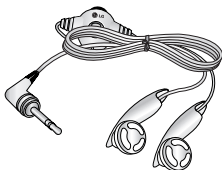

### USB cable

 Connects your phone to a PC.



### Hand strap



### Battery



# Glossary

## **2G**

Second Generation wireless communication system. 2G system supports low quality voice and low-rate packet-data service. 2G refers to GSM in European countries, and CDMA in America.

## **3G**

Third Generation wireless communication system. 3G means next generation wireless communication system developed based on the second generation wireless communication systems. 3G system supports real-time communication service and high-rate packet-data service. 3G refers to UMTS developed based on GSM in European countries,

## **Access point**

Access point refers to a point through which users can connect to the network so that the users can use the network services.

## **AMR**

Adaptive Multirate codec. A voice codec developed by ETSI for GSM. AMR supports 8 coding rates (from 4.75 to 12.2Kbps) so as to adaptively provide the quality of voice service in various radio channel conditions.

## **Download**

Download means transmitting files from one computer system to another. Downloading usually means transmitting files from a big system to a small system.

## **IrDA (Infrared Data Association)**

A standard defined by the IrDA consortium. It specifies a way to wirelessly transfer data via infrared radiation.

The IrDA specifications include standards for both the physical devices and the protocols they use to communicate with each other.

### **Java™**

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

### **Line Identification Services (Caller ID)**

Service allowing subscribers to view or block the telephone numbers of callers.

### **MIDI**

Musical Instrument Digital Interface. A file format to save digitized musical instrumental data. The original meaning of MIDI, or Music Instrument Digital Interface is a protocol to exchange data between a computer and electric instruments.

### **MMS (Multimedia Message Service)**

A message service for the handset environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediatedelivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can also be sent by email. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and later also video clips and presentation information.

### **MP3**

Moving Picture Experts Group Layer-3 Audio. A file format to provide high-quality audio whose quality is equal to that of CD. MP3 is a digital audio standard developed by MPEG, or Moving Picture Experts Group and is widely used for digital audio files.

**MPEG4**

Motion Picture Experts Group 4. A digital video standard developed by MPEG, or Moving Picture Experts Group. MPEG4 compresses video data so that a large video file can be transmitted, and saved more easily. MPEG4 is suitable especially for mobile environment.

**Multimedia**

Multimedia means media that include various media data such as voice, character string, image, and video data. Currently, the meaning of multimedia includes services provided through multimedia.

**Multiparty Calls**

Ability to establish a conference call involving up to five additional parties.

**Roaming**

Use of your phone when you are outside your home area (when traveling for example).

**SDN (Service Dial Number)**

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

**SMTP**

Simple Mail Transfer Protocol. A protocol to transfer e-mails between computers over the Internet. SMTP defines the format of control messages between computers, and interaction procedures between them to send e-mails.

**Quick play**

Quick play means a new type of service that enables users to listen to an audio or watch video without downloading complete audio or video file so that contents providers can provide audio or video data such as movie or news over the network in real-time on users' demand.

### **Sync**

Sync means synchronizing PIM (Personal Information Management) data such as contact information, schedule, to-do, and memo with a PC or an external server.

### **UMTS**

Universal Mobile Telephony System. UMTS refers to asynchronous 3G wireless technology of WCDMA that is developed based on GSM, the 2G wireless technology.

### **USB**

Universal Serial Bus. A bus type interface that provides fast and flexible connection between devices and a computer.

### **USIM**

Universal Subscriber Identity Module. An IC card used for UMTS the shape of which is the same as that of the SIM card of GSM. USIM is provided by network operator, and carries the authentication and service grade data for the network operator as well as user-specific data.

### **Video call**

A communications service that enables users to talk watching each other over a 64Kbps data channel. Real-time video call service is a new type of service provided by WCDMA wireless communication system that is developed based on GSM+GPRS technology.

### **Voice mail**

Computerised answering service that automatically answers your calls when you are not available, plays a greeting and records a message.

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Kang-nam Tower  
679, Yoksam-dong, Kangnam-gu, Seoul, Korea

## Product Details

Product Name

E-GSM 900 / GSM 1800 Dual-Band and W-CDMA Terminal Equipment

Model Name

U8100

Trade Name

LG

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-7 : 2002

EN 60950-1 : 2001

EN 50360 : 2001

3GPP TS 51.010-1, V5.6.0 : 2003

Selection according to GCF-CC, V3.14.0 including requirements of EN 301 511

## Supplementary Information

The conformity to above standards is verified by BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK. Identification mark: 0168 (BABT Notified Body number) and GSM test report (no.61.290.4.158.01), EMC test report(no.00431-4521-F4275C), Safety test report(no.ITYA0157694) and SAR test report(no.TCMA0855864).

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


Name

Issued Date

Jin Seog, Kim / Director

March 13, 2004

LG Electronics Inc, Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative



# U8100 用户手册

# 目录

紧急服务和安全预防措施 .....	8	拨打国际电话.....	27
使用入门 .....	12	调节音量.....	27
使用电池、充电器和 USIM 卡 .....	12	应答电话.....	27
安装电池 .....	12	信号强度.....	28
拆卸电池 .....	13	切换文本输入法.....	28
为电池充电.....	14	如何使用 T9 输入法 .....	28
断开充电器.....	15	使用 T9 输入法输入单词 .....	28
电池使用及保养.....	16	T9 输入.....	29
安装 USIM 卡.....	16		
		<b>菜单树 .....</b>	<b>32</b>
<b>开始了解 LG U8100 .....</b>	<b>18</b>	<b>信息 .....</b>	<b>35</b>
熟悉功能.....	18	写信息.....	35
手机主屏幕.....	20	收件箱.....	39
显示屏信息.....	21	发件箱.....	40
电话待机时各键的功能.....	22	草稿箱.....	40
		邮箱 .....	41
<b>常规功能 .....</b>	<b>24</b>	模板 .....	41
开机.....	24	图释 .....	41
关机.....	24	设置 .....	42
访问密码.....	24		
PIN 码 (4 至 8 位数字).....	24	<b>呼叫 .....</b>	<b>45</b>
PIN2 码 (4 至 8 位数字).....	24	可视电话 .....	45
PUK 码 (4 至 8 位数字).....	25	我的影像尺寸 .....	45
PUK2 码 (4 至 8 位数字).....	25	我的影像位置.....	45
安全密码 (4 至 8 位数字).....	25	隐藏我的影像.....	45
		固定我的影像.....	45
限制密码.....	25		
拨打和应答电话 .....	26	<b>通话记录 .....</b>	<b>45</b>
拨打和应答视频电话 .....	26	未接来电.....	45
拨打语音电话.....	26	已接来电.....	46
从电话簿拨打语音 / 视频电话 .....	27	拨出电话.....	46



所有通话.....	46	选择线路.....	51
<b>呼叫转接.....</b>	<b>47</b>	<b>多媒体.....</b>	<b>52</b>
语音来电.....	47	照相机.....	52
可视电话.....	47	摄像机.....	52
转接所有传真来电.....	47	图像浏览器.....	53
<b>通话时间.....</b>	<b>48</b>	音频播放器.....	54
最后通话.....	48	视频播放器.....	55
已接来电.....	48	VOD/AOD.....	56
拔出电话.....	48	<b>浏览器.....</b>	<b>57</b>
所有通话.....	48	主页.....	57
<b>通话费用.....</b>	<b>48</b>	书签.....	58
最后通话.....	48	已保存页面.....	58
全部电话.....	48	转至 URL.....	58
费用设置.....	49	安全证书.....	58
<b>固定拨号.....</b>	<b>49</b>	设置.....	59
<b>呼叫限制.....</b>	<b>49</b>	<b>管理器.....</b>	<b>60</b>
语音来电.....	49	电话簿.....	60
可视电话.....	50	日程表.....	63
关闭所有来电.....	50	任务.....	65
<b>设置.....</b>	<b>50</b>	备忘录.....	66
呼叫等待.....	50	私人备忘录.....	67
发送我的号码.....	50	<b>模式.....</b>	<b>68</b>
拒接来电.....	51	<b>工具.....</b>	<b>70</b>
自动重拨.....	51	快速菜单.....	70
接听模式.....	51	闹钟.....	70
分钟提示音.....	51	计算器.....	71
		世界时间.....	71

单位换算器.....	71	更改密码.....	82
计时器.....	74	手机锁.....	83
录音机.....	75		
服务器同步.....	75	连接.....	83
		内存状态.....	83
<b>设置</b> .....	<b>77</b>	共用内存.....	83
电话.....	77	预留内存.....	83
时间.....	77	USIM 卡内存.....	84
日期.....	77		
自动更新日期 / 时间.....	77	语言.....	84
夏令时.....	78	恢复初始设置.....	84
手机信息.....	78		
		<b>应用程序</b> .....	<b>85</b>
显示.....	78	我的应用程序.....	85
背光.....	78	连接.....	85
对比度.....	79	设置.....	86
颜色方案.....	79		
拨号时使用的字体.....	79	<b>其它</b> .....	<b>87</b>
闲置时钟字体.....	79	<b>配件</b> .....	<b>89</b>
菜单类型.....	79	<b>词汇表</b> .....	<b>91</b>
屏幕主题.....	80		
子屏颜色.....	80		
问候短信.....	80		
<b>网络</b> .....	<b>81</b>		
网络选择.....	81		
首选列表.....	81		
<b>接入点</b> .....	<b>81</b>		
<b>安全性</b> .....	<b>82</b>		
PIN 码请求.....	82		

# 紧急服务和安全预防措施

- 电池不得直接与电源插座或汽车点烟器插座接触
- 不可使用尖锐物体刺穿电池
- 不要让手机摔落或受到物理撞击
- 当电池寿命到期时，请根据环保条例要求来处理电池。不要将电池与家庭废物一起处理。
- 手机部件不得浸入水中
- 不要拆解或改装电池
- 当在使用、充电或存储期间检测到异常热度、气味、变色、变形或其它异常情况时，应停止使用电池
- 不要使用已损坏或变形的电池。万一电池发生泄漏，注意不要让流出物接触眼睛或皮肤。
- 如果流出物触及眼睛或皮肤，用清水彻底冲洗并咨询医生
- 听筒在正常使用期间可能会变热。此外，手机自身在电池充电期间也可能会变热
- 使用湿润或防静电的软布清理手机。不要使用干布或带静电的布。不要使用化学或研磨清洗剂，因为它们可能会损伤手机
- 妥善保管手机随附的纸板包装盒。当手机需要运回以进行维修时，应使用此包装盒。此包装盒不再需要时，可以回收利用
- 注意备份手机中的所有重要数据

## 飞机安全信息

---

为了符合CAA 管制条例，您必须在飞机上关闭您的手机。移动电话信号可能会对飞机设备造成干扰。请严格按照飞机乘务人员的要求使用手机

## 医院安全信息

---

在禁止使用手机的区域应关闭手机。遵守相应医疗机构就手机使用作出的规定

## 常规安全信息

- 遵守加油站、化学药品或爆炸物附近的“Turn off 2-way radio”（关闭双路无线电设备）标志的警示，关闭手机
- 不要让儿童玩耍手机、充电器或电池
- 不要在正进行爆破的地区使用手机
- 在某些医疗电子设备附近使用手机时，它们的操作可能会受到影响。请遵守任何警告标志和厂商建议。

## 行车安全信息

- 您必须始终正确地控制车辆。应将全部注意力集中在驾驶上
- 遵守所有有关在行车期间使用移动电话的法律
- 如果满足安全要求，请在拨打或应答电话之前将车辆驶离道路并在安全处停车。新加坡法律禁止在行车期间使用手持式移动电话。
- 除非情况紧急，不得将车停在高速公路的硬路肩处
- 在加油点和汽油站处应关闭手机，即使您没有在为自己的车辆加油
- 不要让手机靠近存放或运输的易燃易爆材料
- 正常情况下，电子车辆系统（如ABS系统、速度控制系统和燃油喷射系统等）不会受无线电传输的影响
- 如果此类设备会受到无线电传输的严重屏蔽，则制造商会提供相应的建议。请咨询经销商，并在具备安装资质人员检查合格之后打开手机

## 配备气囊的车辆

气囊膨胀时产生强大的作用力。切勿在气囊上方或气囊应用区域放置任何物品，包括安装的或便携式的无线设备。如果车载无线设备的安装位置不正确，则在气囊膨胀时，可能导致严重的伤害

## 第三方设备

---

使用非 LG 制造或许可的第三方设备、电缆或附件可能导致您的手机保修失效，同时还可能对手机的安全或操作造成负面影响

## 维修

---

用户不可自行维修手机、电池和充电器中包含的部件。LG 公司推荐您的 U810 0 手机在 LG 指定的维修站维护或修理

## 高效使用

---

手机配有天线。为了在耗电最低的情况下获得最佳的性能，请不要用手遮挡天线区域。遮挡天线会影响通话质量，并可能导致手机耗用更多的电能。这将缩短通话和待机时间

## 射频能量

---

您的手机是一种低耗能的无线电发射器和接收器。开机时，它可以接收和发射射频 (RF) 能量（无线电波）。处理通话的系统（网络）决定手机的发射能量级别。

- 本手册中给出了进一步的详细信息。

## 暴露在射频能量之下

---

### 无线电波暴露和“特定吸收率”(SAR)信息

- 此款 U8100 型手机符合有关无线电波暴露的安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全余量
- 无线电波暴露准则采用一种称为“特定吸收率”或SAR的测量单位。SAR 测试采用标准化方法，在所有用到的频带中，均以手机的最高认可发射功率进行测试
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每10克重的人体组织吸收的能量平均值不超过 2W/kg
- 经 DASy3 测试，该型号手机在人耳处使用时最高 SAR 值为 1.110 W/kg（1000 克）。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为：每1 克重的人体组织吸收的能量平均值不超过 16W/kg（例如美国、加拿大、澳大利亚和台湾）。

# 使用入门

## 使用电池、充电器和 USIM 卡

 
### 安装电池

要安装电池，请将电池的底部插入手机背面的开口处。向下推动电池，直到闩锁卡入到位，然后安装电池盖。



## 拆卸电池

关机。(如果保持开机，则可能会丢失保存的电话号码和信息。) 按压闩锁(1)，打开电池盖(2)。然后，卸下电池。

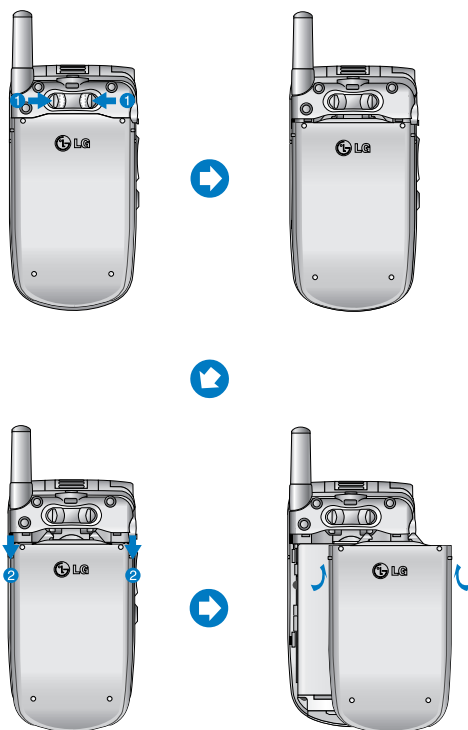



## 使用入门

如果外屏的背景灯在您连接充电器时呈红色表示电池已完全放电，可能需要充电一段时间（不多于30分钟）才能达到最低的操作水平。

当充电器红灯亮起时，手机不能开机。当电池充电到最低操作水平时，红灯会熄灭。

 
### 警告

您可以在手机与充电器相连时拨打可视电话。但是，如果电池电量低于10%，则在您使用可视电话时，电池的电量会减少（放电），即使此时连接了充电器。

## 为电池充电

要使用手机随附的充电器：

1. 在电池正确装入手机后，将充电器的导线连接到手机底部。确保导线接头上的箭头朝向手机正面。
2. 将充电器连接到标准AC插座。请仅使用包装盒随附的充电器。

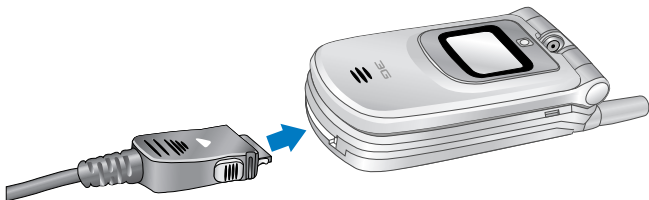


### 警告

不要强行插拔接头，这可能会损坏手机和（或）充电器。

## 断开充电器

 充电结束时，断开充电器与电源插座的连接，然后按以下方法断开与手机的连接：按压接头两侧的灰色卡舌，同时拔出接头。

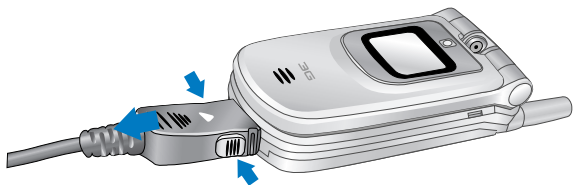

### ! 注意

使用之前，应为手机随附的电池充满电。不要在充电期间取出电池或 USIM 卡。当手机正在充电时，显示屏会显示充电状态。



### 如果电池未能完全充电:

在打开和关闭手机后，请再次尝试对电池进行充电。在取出和重新装入电池之后，请尝试再次对电池进行充电。

### 电池使用及保养

 
1. 切勿使用未经认可的电池，因为这可能会损坏手机和（或）电池，并且可能导致电池爆炸。
2. 再次充电之前，电池不必完全放电。
3. 仅使用适合您手机型号的专用 LG 认可充电器，因为它们可以最大限度地延长电池寿命。
4. 不要拆解电池或将其短路。
5. 保持电池的金属触点清洁。
6. 当电池不再提供合乎要求的性能时，请更换电池。更换之前，电池可反复充电数百次。
7. 电池在长期未用之后应重新充电，以最大限度地延长电池寿命。
8. 不要让电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
9. 如果暴露在极热或极冷环境中，电池寿命会缩短。
10. 电池寿命因使用方式和环境条件而有所不同。
11. 长期使用背景灯、浏览器和数据连接套件会影响电池寿命和通话/待机时间。

### 安装 USIM 卡


USIM 卡包含手机号码、服务详细资料和联系信息，因此必须插入手机。

取出 USIM 卡之后，手机将无法使用，直到插入一个有效的 USIM 卡。插入或取出 USIM 卡之前，请始终断开手机与充电器和其它附件的连接。

您的 USIM 卡可能只能用于那些已启用 3G 服务的手机中。在其它手机中使用此 USIM 卡可能会对手机造成严重的损坏，并且可能导致您无法再次使用此卡，包括无法拨打紧急电话。

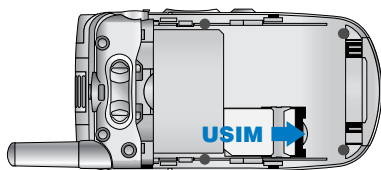**注意**

 需要取出 USIM 卡时，请将其朝手机的顶部滑动，然后在金属夹中取出。

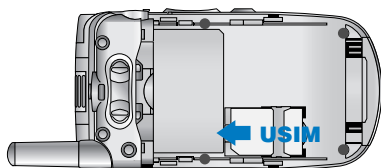**注意**


安装 USIM 之前，请务必确保已关闭手机并取出电池。

USIM 卡的金属触点很容易因刮擦而损坏。操作和安装 USIM 卡时，应多加小心。遵守随 USIM 卡提供的说明。

# 开始了解 LG U8100
 
## 熟悉功能



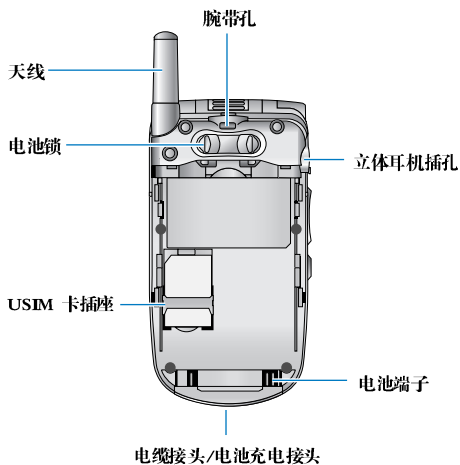

电池盖




电池



## 手机主屏幕

 手机的主屏幕分成三个基本显示区：图标指示符栏；包括主屏幕的中心窗口；提示栏。下面分别对其作介绍：

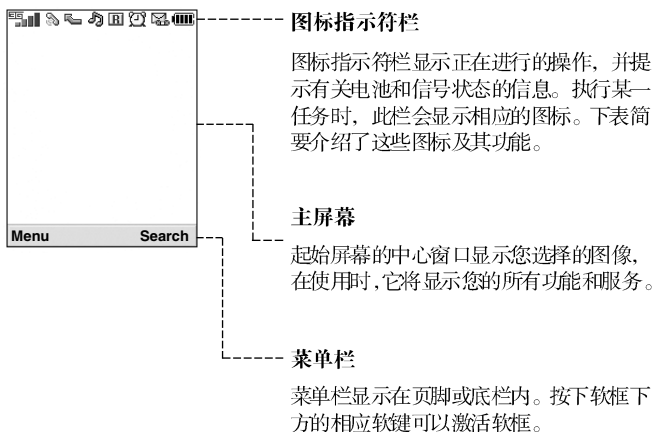

## 显示屏信息

下表说明出现在手机显示屏上的各种指示符或图标。

### 屏幕图标

 
图标	说明
	电池电量 - 指示电池的电量使用情况。 实心彩柱越长, 剩余电量越高。
	呼叫转接 - 指示已选择呼叫转接选项。
	语音信息 - 指示收到新的语音信息。
	文本 - 指示收到新的文本信息。
	多媒体 - 指示收到新的多媒体信息。
	3G 网络 - 指示是否处于视频服务区域。当您离开视频服务区域时, 手机会漫游到语音与图像网络或另一网络 (2G/3G)
	GPRS 网络 - 指示已开通 GPRS 服务。
	GSM 网络 - 指示手机与 GSM 网络连接的信号强度。
	无服务信号区域 - 指示您处于无服务信号区域。
	漫游服务 - 指示您正在使用漫游服务。
	浏览器信息 - 指示收到新的浏览器内容。
	约会或闹钟 - 指示约会或闹钟。
	普通 - 指示已激活“个人情景模式”。
	静音 - 指示情景模式中的静音菜单。
	振动 - 指示是否已打开振动功能。
	耳机 - 指示情景模式中的耳机菜单。
	户外 - 指示已激活“响亮”情景模式。

 


## 电话待机时各键的功能

---

### 手机侧键

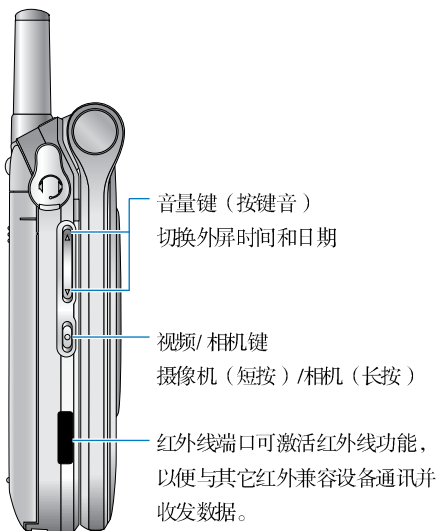

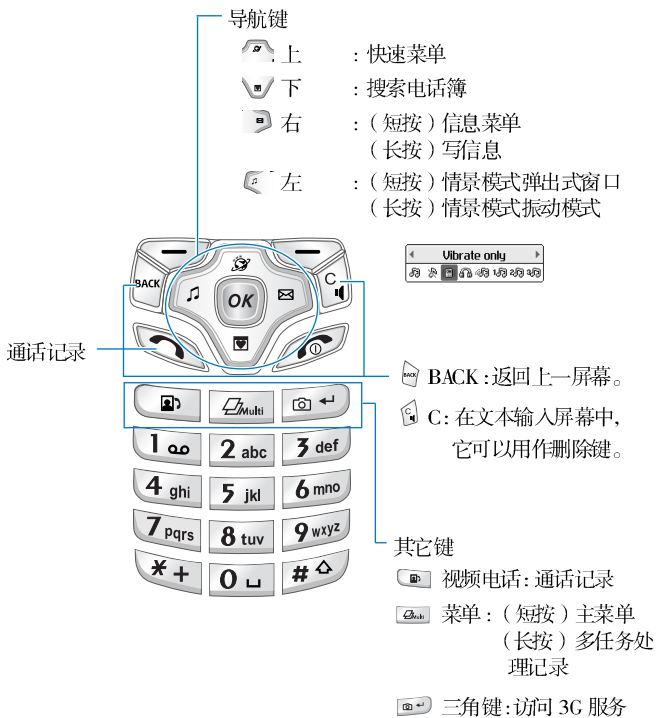


# 常规功能

## 开机

---

确保在手机中插入USIM卡并装入已充电的电池。


按住  键，直到电源打开。

如果开启了PIN码设置，请输入随USIM卡提供的USIM PIN码。

数秒钟后，手机便可完成网络注册。

## 关机

---

按住  键，直到电源关闭。

关机时可能会出现延迟。此时请勿重新开机。

## 访问密码

---

您可以使用本节所述的访问密码来防止他人未经允许使用您的手机。可以使用更改密码功能[菜单 9.6.2]来更改访问密码（除PUK和PUK2码）。

### PIN码（4至8位数字）

PIN（个人身份号码）码可防止他人未经允许使用您的USIM卡。PIN码通常随USIM卡提供。当PIN码请求设置为开时，每次开机时手机都会要求输入PIN码。当PIN码请求设置为关时，手机将直接连接到网络，而无需输入PIN码。

### PIN2码（4至8位数字）

某些USIM卡会提供PIN2码，固定拨号之类的功能时要求输入PIN2码。仅当您的USIM卡支持此类功能时，才可以使用这些功能。

## PUK 码（4 至 8 位数字）

取消锁定 PIN 码时需要输入 PUK（PIN 解锁密码）码。USIM 卡可能会提供 PUK 码。如未提供，请联系客户服务中心以获得该密码。如果丢失了该密码，请联系客户服务中心。

## PUK2 码（4 至 8 位数字）

某些 USIM 卡会提供 PUK2 码，取消锁定 PIN2 码时需要输入 PUK2 码。如果丢失了该密码，请联系客户服务中心。

## 安全密码（4 至 8 位数字）

安全密码可防止他人未经允许使用您的手机。默认的安全密码设置为‘0000’，删除所有电话记录及恢复手机出厂设定时需要输入安全密码。

## 限制密码

---

在使用呼叫限制功能时需要输入限制密码。如果预订了此功能，您将从客户服务中心处获得此密码。

## 拨打和应答电话

请务必在录制语音呼叫之前通知对方。



### 拨打和应答视频电话

您可以对 3G 视频手机拨打/应答视频电话，对方必须使用 3G 视频手机并已开通视频服务。

要拨打/应答视频电话，请执行以下操作。

1. 使用键盘输入电话号码，或者从呼入/呼出列表选择电话号码。

#### ! 备注

要更正错误，请按  键删除输入的最后一个数字，或者长按  键删除所有数字。

2. 若不想使用扬声器，请确保将耳机插入。

3. 要启动视频功能，请按左软键选项]。

#### ! 备注

视频电话可能需要一定时间进行连接。请耐心等待。连接时间也取决于对方应答呼叫的速度。在视频电话连接过程中，您会看到自己的图像；在对方应答后，屏幕将显示其图像。



4. 请根据需要调整相机位置。


5. 要结束呼叫，请按结束键或闭合翻盖。


### 拨打语音电话

1. 确保手机已开机。


2. 输入电话号码，包括完整区号。

▶ 要删除一个数字，请按  键。  
要删除所有数字，请长按  键。

3. 按  键拨打电话。

4. 要结束呼叫，请按  键或闭合翻盖。

**! 备注**


要在通话中启用扬声器，您必须按住  键至少 2 秒。

**从电话簿拨打语音/视频电话**

拨打在电话簿中存有号码的联系人的电话非常方便。



按向下导航键访问联系人列表。

滚动到所选的联系人。

要拨打语音电话，请按  键。

要拨打视频电话，请按  键。按  键结束通话。

**拨打国际电话**

1. 持续按住  键以输入国际前缀。‘+’ 字符可替换为国际接入码。
2. 输入国家代码、地区代码和电话号码。
3. 按  键。


**调节音量**



在通话中，如果要调节听筒音量，请使用手机侧键。

在待机状态下打开手机翻盖，您可以使用侧键调节按键音量。


**应答电话**

当接收到电话时，手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者，则会显示该致电者的电话号码（或保存在电话簿中的姓名）。


1. 打开翻盖，然后按  键应答来电。


如果将按任意键菜单选项设置为  ，“按任意键接听”。但  键除外。

**! 注意**

- ▶ 要拒绝来电，请在不打开翻盖的情况下按两次手机左侧的侧键（请参阅第 51 页）。如果已打开翻盖，请按  键或按两次右软键。

## 常规功能


- ▶ 如果打开翻盖时菜单选项（（菜单 2.8.5）为翻盖应答）已开启 ，则只需打开翻盖即可接听电话。

2. 要结束呼叫，请闭合翻盖或按  键。

### 注意

在使用电话簿或其它菜单功能时，您也可以应答电话。

## 信号强度

如果是在建筑物内部，移到窗口附近可以改进信号接收质量。您可以通过手机显示屏上的信号指示符 () 查看信号强度。

## 切换文本输入法

 
您可以用键盘输入字母、数字和字符。例如，在电话簿中存储姓名、写短信、创建个人问候语或者在日历中安排事件等，都需要输入文本。

## 如何使用T9 输入法


使用T9输入法，您只需按相应字符的按键一次即可。这种输入法是基于手机中内置的字典实现的，并且您还可以增加新的单词。



### 使用 T9 输入法输入单词

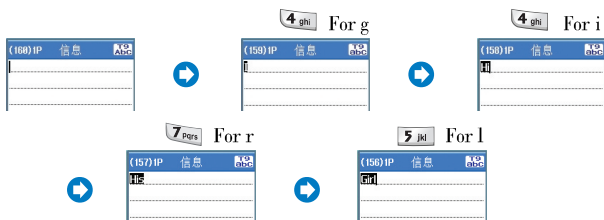1. 使用按键  到  开始输入单词。输入一个字符只需按一次按键。比如要快速输入单词“Girl”依次按 , , , , 输入的字符会显示为方块状。


 
 




每次按键后单词会改变，因此您不用过于注意屏幕上显示的单词，只需按完所有正确的键即可。


您可使用  键删除一个字符，直到屏幕的最左侧为止。

您可以长按  号键插入数字。可以长按  号键更换语言类型。

(您也可以使用选项完成)

本电话支持三种输入模式：预想式英文输入(, , ), 英文输入(, ), 数字输入。

可以使用  号键更改模式。


**提示:** 使用  键选择符号，选取所需的字符后按确定键。


2. 您可在输入完单词后检查拼写是否正确。

**如果正确:** 按  键继续写单词。

**如果不正确:** 用  键搜索正确的单词。

(返回和下一个单词)。


**提示:** 如果没有您所需的单词，您可以加入自己的单词。在联想编辑模式下按  [选项]，选择添加至自订字库，这句话无下文。






 

3. 要插入符号，请按  符号键，再按适当数字键插入所需的符号。然后再按确认键。

## T9 输入

您可通过选择功能表开启T9输入法，也可选择关闭T9输入法。

(缺省状态为开启)

注: 如想在简体中文显示输入繁体中文，可按  及选取笔画或注音输入法，如想输入简体中文可选取笔划或拼音输入法。

1) **笔划(ST):** 如何使用笔画来选择中文字符。在您依次输入中文笔画时，屏幕上将显示相关的中文字符。使用  和  键来查看符合条件的其它字符，按  按钮选定字符。同样，使用 , ,  和  键也可以查看更多类型的字符。



## 常规功能

例如) 要输入“什么”请依次按数字 **3 def**、**2 abc**、**3 def**，随后，您便可以看到第一个字符，“什”。请按 **OK**，然后再按 **1 aop** 按钮选定“么”。

按键	笔划	按键	笔划
<b>1 aop</b>	一	<b>6 mno</b>	? (通配符号)
<b>2 abc</b>	丨	<b>7 pqrs</b>	
<b>3 def</b>	丿	<b>8 tuv</b>	
<b>4 ghi</b>	丶	<b>9 wxyz</b>	
<b>5 jkl</b>	→	<b>OK</b>	选择键

<汉字笔划表>

2) 拼音(PY): “拼音”输入是通过中文字符的发音来查找中文字符。

**拼音:** 当输入发音的第一个字母时，您便可以直接查找字符。

例如) 要输入“国家”请依次按数字 **4 ghi**、**8 tuv** 和 **6 mno**，此时在子编辑屏幕上会显示‘guo’，‘huo’，‘hun’，‘gun’ 钻发音，如果选择‘guo’ 则所有与之发音相同的字符均将列出以供您选择。然后，您便可以从中选择字符。






 



按键	英文字母	按键	英文字母
<b>1 aop</b>		<b>6 mno</b>	<b>mno</b>
<b>2 abc</b>	<b>abc</b>	<b>7 pqrs</b>	<b>pqrs</b>
<b>3 def</b>	<b>def</b>	<b>8 tuv</b>	<b>tuv</b>
<b>4 ghi</b>	<b>ghi</b>	<b>9 wxyz</b>	<b>wxyz</b>
<b>5 jkl</b>	<b>jkl</b>	<b>OK</b>	选择键

<汉字拼音表>

3) 注音( Bopomofo): Bopomofo 是根据40个特殊音标(注音)(T9 输入法使用了其中的37个音标)来查找字符。请参考以下表格。

**例如)** 要输入“百貨”，请依次按下数字和，此时在子编辑屏幕上将出现‘ㄅㄅ’及‘ㄆㄆ’字样。屏幕上将列出与此发音相同的方法输入“家”。(按 和 。) 相同的字符以供选择。之后，您可以从中选择完“百”後，屏幕上将再次显示多个字符。

您可以按相同的方法输入“貨”。(OK 按)


按键	注音	按键	注音
	ㄅㄅ		ㄉㄉ ㄊㄊ
	ㄆㄆ		ㄋㄋ ㄌㄌ
	ㄉㄉ ㄊㄊ ㄋㄋ		ㄍㄍ ㄎㄎ
	ㄍㄍ ㄎㄎ		ㄐㄐ ㄑㄑ
	ㄏㄏ ㄏㄏ		ㄒㄒ ㄓㄓ
			ㄔㄔ ㄕㄕ

<汉字注音表>

# 菜单树

 本款手机提供一系列可供您使用和自定义手机的功能。这些功能位于菜单和子菜单中，可以通过标记为左软键  和右软键  的两个软键来访问。

每个菜单和子菜单允许您查看和更改特定功能的设置。根据当前的操作环境，软键发挥的作用也不同；每个按键上方、屏幕底部一行的文字指示其当前的作用。

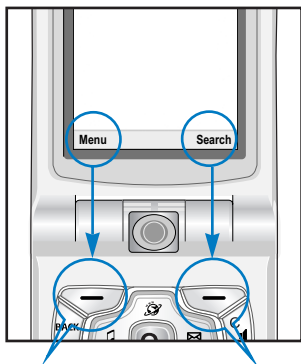

按左软键访问可  
用的媒体。

按右软键访问可  
用的电话簿。

## 1. 信息 (请参阅第35页)

### 1.1 写信息

- 1.1.1 文本信息
- 1.1.2 多媒体信息
- 1.1.3 电子邮件

### 1.2 收件箱

### 1.3 发件箱

### 1.4 草稿箱

### 1.5 邮箱

### 1.6 模板

### 1.7 图释

### 1.8 设置

- 18.1 文本信息 (SMS)
- 18.2 多媒体信息 (MMS)
- 18.3 电子邮件
- 18.4 语音信箱中心
- 18.5 推入信息
- 18.6 信息服务

## 2. 呼叫 (请参阅第45页)

### 2.1 可视电话

- 2.1.1 我的影像尺寸
- 2.1.2 我的影像位置
- 2.1.3 隐藏我的影像
- 2.1.4 固定我的影像

### 2.2 通话记录

### 2.3 呼叫转接

### 2.4 通话时间

### 2.5 通话费用

### 2.6 固定拨号

### 2.7 呼叫限制

## 2.8 设置

- 28.1 呼叫等待
- 28.2 发送我的号码
- 28.3 拒接来电
- 28.4 自动重拨
- 28.5 接听模式
- 28.6 分钟提示音
- 28.7 选择线路

## 3. 多媒体 (请参阅第52页)

### 3.1 照相机

### 3.2 摄像机

### 3.3 图像浏览器

### 3.4 音频播放器

### 3.5 视频播放器

### 3.6 VOD/AOD

## 4. 浏览器 (请参阅第57页)

### 4.1 主页

### 4.2 书签

### 4.3 已保存页面

### 4.4 转至URL

### 4.5 安全证书

### 4.6 设置

- 4.6.1 模式
- 4.6.2 清空缓存
- 4.6.3 字符编码
- 4.6.4 滚动速度

### 5. 管理器 (请参阅第60页)

- 5.1 电话簿
- 5.2 日程表
- 5.3 任务
- 5.4 备忘录
- 5.5 私人备忘录

### 6. 模式 (请参阅第68页)

### 7. 工具 (请参阅第70页)

- 7.1 快速菜单
- 7.2 闹钟
- 7.3 计算器
- 7.4 世界时间
- 7.5 单位换算器
  - 75.1 币种
  - 75.2 面积
  - 75.3 长度
  - 75.4 重量
  - 75.5 温度
  - 75.6 体积
  - 75.7 速率
- 7.6 计时器
- 7.7 录音机
- 7.8 服务器同步

### 8. 设置 (请参阅第77页)

- 8.1 电话
- 8.2 显示
- 8.3 网络
- 8.4 接入点
- 8.5 安全性
- 8.6 连接
- 8.7 内存状态
- 8.8 语言
- 8.9 恢复初始设置

### 9. 应用程序 (请参阅第85页)

- 9.1 我的应用程序
- 9.2 连接
- 9.3 设置

### SMS

目前手机中是“SMS”，如最终版本为SMS，需替换所有“文本信息”为“SMS”

每条信息最多可包含700个汉字。

可以同时发送给20位接收者。

1. 按左软键 [选项] [搜索电话簿]，从“发送信息列表”或“联系人”中指定收件人。
2. 当您输入内容时，会出现一个允许您输入内容的新窗口。使用左软键 [选项]，您可以插入声音、图片、动画、模板、图释和电话号码，以及通过设置块来对文字实现复制、剪贴、全选和改变字体等功能。使用底部的右软键，您可以输入不同的符号。
3. 发送信息后，信息将会自动保存到发件箱中。在发送信息前，您可以决定是否将信息保存到草稿箱中。

### MMS

目前手机中是“MMS”，如最终版本为MMS，需替换所有“多媒体信息”为“MMS”

#### 创建多媒体信息

从顶层菜单选择信息或按“信息”快捷键显示信息菜单。在菜单中，选择“写邮件”，然后选择“多媒体”以创建多媒体信息。您可以简单地从相册或直接从多媒体菜单中将图片附加到多媒体信息中，以作为附件发送。

#### 多媒体信息

1. 您可以创建多媒体信息。
2. 从“写信息”菜单中选择**多媒体信息**，然后按 **OK** 键。
3. 您可以使用向下导航键进入编辑多媒体信息字段。

4. 将突出显示区移到**收件人**字段，然后输入信息收件人。您可以通过电话号码或电子邮件地址来指定收件人。您可以通过按左软键[选项]来搜索电话簿。当指定一个收件人后，将会出现另一个“收件人”输入框，您可以从中指定其它收件人。
5. 将突出显示区移到标题字段并写入标题。您可以通过按左软键[选项]来选择并输入模板或图释。
6. 您可以将突出显示区移到相应的幻灯片项目来进行添加、删除或编辑。
7. 在创建信息时，您可以使用左软键[选项]来将信息保存到草稿箱中。
8. 在创建信息时，您可以使用左软键[选项]来预览信息。
9. 创建信息完成后，请按 **OK** 键。您可以从弹出列表中选择“现在发送”或“稍后发送”来发送信息，也可以选择“保存至草稿箱”来保存。您可以从弹出列表中选择“预览”来预览信息。

### 创建多媒体信息幻灯片

1. 在创建多媒体信息时，按幻灯片项目中的右软键[编辑]。
2. 您可以在“幻灯片持续时间”字段中更改幻灯片的播放时间。如果您不进行更改，则会使用默认值。
3. 您可以通过将突出显示区移到要附加的文件，选择“附加”来加入相应的图像、音频或视频文件。如果附加了图像或音频文件，则不能附加视频文件。如果附加了视频文件，则不能附加图像或音频文件。您可以使用左软键[选项]来撤消附加的文件。
4. 您可以通过将突出显示区移到信息中，插入所需的内容。您可以使用左软键[选项]来将模板或图释插入到内容输入窗口中。您可以使用左软键[选项]来将保存在“电话簿”中的姓名、电话号码插入到内容输入窗口中。
5. 您可以在创建幻灯片时使用左软键[选项]来添加或删除幻灯片。

### 多媒体信息发送菜单

#### 现在发送

立即发送创建好的多媒体信息。

## 稍后发送

在特定的时间发送创建好的多媒体信息。

## 保存至草稿箱

将创建好的多媒体信息保存到草稿箱。

## 预览

在发送前显示创建好的多媒体信息。

### 在预览模式和草稿箱中查看多媒体信息

1. 您可以预览创建好的多媒体信息。
2. 如果信息过长以至于无法在屏幕上显示，则可以用向上和向下导航键来滚动查看信息的内容。
3. 按 **OK** 键暂停播放信息，按 **OK** 键重新播放信息。
4. 如果多媒体信息中附加了音频或视频文件，请按右软键[取消静音]取消静音功能。
5. 按左软键 [信息] 停止播放，随后即可见到有关多媒体信息的详细信息。

### 查看收件箱和发件箱中的多媒体信息

1. 选择一条多媒体信息查看其内容。
2. 如果信息过长以至于无法在屏幕上显示，则可以用向上和向下方向键来滚动查看信息的内容。
3. 按 **OK** 键暂停播放信息，按 **OK** 键重新播放信息。
4. 如果多媒体信息中附加了音频或视频文件，请按右软键[静音]启动静音功能。按右软键[取消静音]取消静音功能。如果多媒体信息含有URL，则可以尝试连接站点。如果您要停止连接，请按 **OK** 键、向上/向下导航键。此时，屏幕在右软键上显示“读取”。按下此键后，您就可以连接站点或查看流媒体文件。
5. 使用向左和向右导航键移到所需的信息。
6. 按左软键 [信息] 停止播放，随后即可见到有关多媒体信息的详细信息。



- 按 **OK** 键播放信息。
- 您可以使用左软键[选项]选择以下功能。
  - ▶ **回复**：为选定的信息创建回复内容。
  - ▶ **转发**：转发选定的信息。
  - ▶ **重新播放**：播放附加的文件。
  - ▶ **保存地址**：在电话簿中保存电话号码。
  - ▶ **提取号码**：提取包含在信息文本中的电话号码。
  - ▶ **使用电子邮件地址**：在接收到的包含正文的信息中查看多达10个电子邮件地址，您可以按选定的号码发送邮件或将其另存为一个联系人。
  - ▶ **使用链接**：在接收到的包含正文的邮件中查看多达10个链接。您可以按选定的号码浏览网页或将其另存为书签。
  - ▶ **删除**：删除所选信息
  - ▶ **静音**：只在信息包含音频媒体文件时使用此菜单。
  - ▶ **查看附件**：显示附件文件列表。
  - ▶ **信息**：显示有关选定信息的详情。

## 电子邮件

要发送电子邮件，您应先设置电子邮件帐号。请参阅第 49 页上的“电子邮件”。

### 编辑信息

1. 从“写信息”菜单中选择**电子邮件**。
2. 在收件人、抄送和密件抄送字段中输入所需的电子邮件地址。您可以在每个字段中输入多达 4 个地址。

#### ! 提示

要输入 @，请选择右软键[符号]，然后按数字按键 9 或者按可视电话键进行输入。

3. 在“主题”字段中输入要发送邮件的标题。
4. 在“信息”字段中输入要发送邮件的内容。
5. 在“附加”字段可指定多达 4 个要附加的文件。
6. 创建信息完成后，请按 **OK** 键。您可以从弹出列表中选择“**现在发送**”发送信息，也可以选择“**保存至草稿箱**”来保存信息。您也可以从弹出列表中选择“**预览**”来预览信息。

## 收件箱

菜单 1.2

1. 您可以查看保存过的信息。选择一条信息，然后按 **OK** 键查看信息。
2. 您可以使用左右软键查看上一条和下一条信息。
3. 要查看多媒体信息，请在信息视图屏幕中选择**检索**。这样文件即会被传送，您可以在收到信息时查看文件。
4. 使用左软键 [选项]，您可以使用以下功能。
  - ▶ **回复**：您可以为选定的信息创建一条回复信息。
  - ▶ **转发**：您可以转发选定的信息。
  - ▶ **保存地址**：您可以保存发送人的地址。
  - ▶ **保存号码**：允许使用所选的电话号码。
  - ▶ **收电子邮件**：允许使用所选的电子邮件地址。

- ▶ **使用链接:** 允许使用链接。
- ▶ **删除:** 您可以删除选定的信息。
- ▶ **信息:** 您可以查看选定信息的详情。

## 发件箱

菜单 1.3

1. 您可以查看已发送的信息。选择一条信息，然后按 **OK** 键查看信息。
2. 您可以使用左右软键查看上一条和下一条信息。
3. 使用左软键[选项]，您可以使用以下功能。
  - ▶ **写信息:** 您可以撰写新信息。
  - ▶ **转发:** 您可以转发选定的信息。
  - ▶ **编辑:** 您可以编辑选定的信息。
  - ▶ **删除:** 您可以删除选定的信息。
  - ▶ **删除多个:** 您可以删除多个选定的信息。
  - ▶ **全部删除:** 您可以删除全部信息。
  - ▶ **信息:** 您可以查看选定信息的详情。
  - ▶ **内存信息:** 您可以查看可用的内存容量。

## 草稿箱

菜单 1.4

1. 您可以查看保存过的信息。选择一条信息，然后按 **OK** 键查看信息。
2. 您可以使用导航键查看上一条或下一条信息。
3. 使用左软键[选项]，您可以使用以下功能。
  - ▶ **写信息:** 您可以撰写新信息。
  - ▶ **发送:** 您可以发送选定的信息。
  - ▶ **编辑:** 您可以编辑选定的信息。
  - ▶ **删除:** 您可以删除选定的信息。
  - ▶ **删除多个:** 您可以删除多个选定的信息。

- ▶ **全部删除**：您可以删除全部信息。
- ▶ **消息信息**：您可以删除所有信息。
- ▶ **内存信息**：您可以查看可用的内存容量。

## 邮箱

菜单 1.5

1. 选择邮箱。
2. 选择所需的邮件服务器，从“服务器列表”中检索邮件。
3. 要在“邮件标题”屏幕中检索新的信息，请选择“检索”，检索新的“邮件标题列表”。
4. 从检索到的邮件标题中选择所需的邮件，以便从服务器中检索邮件内容。
5. 如果服务器为 IMAP4 服务器，您可以先指定在读取内容后是否只检索附加的文件。使用左软键[选项]，您可以使用以下功能。
  - ▶ **写信息**：您可以撰写新信息
  - ▶ **回复**：您可以回复选定的信息。
  - ▶ **检索**：您可以检索选定的信息。
  - ▶ **删除**：您可以删除选定的信息。
  - ▶ **删除多个**：您可以删除多个选定的信息。
  - ▶ **全部删除**：您可以删除全部信息。
  - ▶ **信息**：您可以查看选定信息的详情。
  - ▶ **内存信息**：您可以查看可用的内存容量。

## 模板

菜单 1.6

您可以添加、编辑和删除常用短语。  
您可以事先在输入窗口中保存常用短语。

## 图释

菜单 1.7

您可以添加、编辑和删除常用图释。  
您可以事先在输入窗口中保存常用图释。

## 文本信息 (SMS)

### ▶ 发送报告

使您能够启动或禁用报告功能。启用此功能时，网络将通知您信息是否已发送。

### ▶ 信息类型

默认的信息类型应为“文本信息”。

### ▶ 有效期

使您能够设置在您尝试将其发送给收件人之前，您的文本信息在文本信息中心保存的时间长度。

### ▶ 文本信息中心 (因为与菜单图片不符)

您的 3G 手机预先加载了文本信息网关号码，您不应对其进行更改。如果不小心将其删除或更改，请联系客户服务中心以获得支持。

## 多媒体信息 (MMS)

从“设置”菜单中选择多媒体信息，配置多媒体信息的相关选项。

### ▶ 发送报告

此菜单使您能够确定是否向收件人请求发送确认邮件，以及是否允许向发件人发送送达确认邮件。

**请求报告：**确定是否为多媒体信息请求发送确认邮件。

**允许报告：**确定是否允许为发送确认邮件请求发送送达确认邮件。

### ▶ 阅读回复

此菜单允许您请求回复或回复发送人。

### ▶ 自动读取

此菜单使您能够确定是否在收到多媒体信息通知时自动下载多媒体信息。

### ▶ 有效期

此菜单使您能够在发送多媒体信息时配置信息的有效期。此信息只在配置好的有效期内保存在多媒体服务器中。

### ▶ 幻灯片持续时间

此菜单使您能够在创建信息时配置每个页面的持续时间。

### ▶ 信息大小

此菜单使您能够在创建信息时配置多媒体信息的最大容量。


### ▶ 多媒体信息中心

您的手机已预先加载多媒体网关的详情，不应进行更改。如果不小心将其更改或删除，请联系客户服务中心以获得支持。


## 电子邮件（设置帐户）

此菜单使您能够编辑、删除和添加电子邮件帐户。

要设置电子邮件帐户，请执行以下操作。

1. 在待机屏幕中按下  键，然后选择信息/设置/电子邮件。
2. 根据需要输入详细的 **标题、用户名（带国家/地区代码的电话号码）、密码、电子邮件地址、回复电子邮件地址、发送邮件服务器、接收邮件服务器接收邮件服务器**、其它电子邮件帐户的接入点（信息由电子邮件/因特网服务提供商提供）。
3. 您可以通过按左软键 [验证] 进行验证。在设置其它帐户的详情之后，您即可通过选择“邮件”主页上的“检查新邮件”，从这些帐户中收邮件。

要检索电子邮件，请执行以下操作：

1. 从邮箱中选择要检索的邮件服务器。
2. 使用导航键选择电子邮件。
3. 按右软键 [检索]。
4. 按  键。

### 语音信箱中心

如果网络服务提供商支持此功能，此菜单使您能够接收语音邮件。请与您的网络服务提供商联系，了解有关其服务的详细信息，以便对您的手机进行相应配置。

### 推入信息

您可以从 WAP 服务提供商处定制浏览器。

浏览器是新闻头条之类的通知，可以包含文本信息或 WAP 服务的地址。有关该服务的提供和预订情况，请联系您的 WAP 服务提供商。

### 信息服务

小区广播信息是网络向 3G 电话用户发送的文本信息。它们提供诸如天气报告、交通新闻、出租车、药店和股票行情之类的一般信息。每种类型的信息均有相关的服务号码，这可以从服务提供商处获得。当您收到小区广播信息时，将出现说明收到新短信的弹出信息或者直接显示小区广播信息。

## 可视电话

菜单 2.1

### 我的影像尺寸

此菜单使您能够将自己的图片大小配置为大、中或小。

### 我的影像位置

此菜单使您能够配置屏幕左下对齐或右下对齐。

### 隐藏我的影像



此菜单使您能够隐藏自己的图片。

### 固定我的影像

此菜单使您能够阻止发送图片。

## 通话记录

菜单 2.2

您可以通过按  键或  键来访问通话记录。列表中登记的最近通话类型会以不同的图标显示（有关图标说明，请见下页）。

- ▶ 您可以查看未接来电、已接来电、拨出电话和全部通话记录。每个通话记录菜单提供以下功能。后面的句号应该为冒号，且前面不应该有条目符号
- ▶ 您可以在通话记录中直接拨打语音来电和可视电话号码。
- ▶ 您可以将通话记录中的号码保存到电话簿中。
- ▶ 您可以发送信息到通话记录中的号码。
- ▶ 您可以查看有关通话记录的详细信息，如日期、时间和通话时间等。
- ▶ 您可以清除通话记录

### 未接来电

使您能够查看未接来电的记录、拨打电话、发送信息以及将号码保存到电话簿中。



### 已接来电

使您能够查看已接来电的记录、拨打电话、发送信息以及将号码保存到电话簿中。

### 拨出电话

使您能够查看拨出电话的记录、拨打电话、发送信息以及将号码保存到电话簿中。

### 所有通话

此菜单允许您查看所有未接来电、已接来电、和拨出电话记录。您可以向从通话记录中选定的号码拨打电话或发送信息。您也可以将号码保存到电话簿中。



已接听的可视电话



已接听的语音来电



已拨打的可视电话



拨打的语音来电



未接听的可视电话




未接听的语音来电

## 呼叫转接

### 菜单 2.3

此菜单使您能够配置来电转接服务，从而将来电转接到用户指定的号码

1. 在待机屏幕中按  键。
2. 按向下导航键显示“通话”，然后按“来电转接”。

### 语音来电

- ▶ **全部语音来电**  
无条件地转接所有语音来电。
- ▶ **正在通话时**  
在线路忙时转接语音来电。
- ▶ **无人接听时**  
在无人应答时转接语音来电。
- ▶ **无法接通时**  
当手机关机或不在网络服务区时转接语音来电。

### 可视电话

您可以把可视电话转接到其它支持可视电话的 3G 手机中。

- ▶ **所有可视电话**  
无条件地转接所有可视电话。
- ▶ **正在通话时**  
在线路忙时转接可视电话。
- ▶ **无人接听时**  
在无人应答时转接可视电话。
- ▶ **无法接通时**  
当手机关机或不在网络服务区时转接可视电话。

### 转接所有传真来电

无条件地转接传真来电。

## 通话时间

菜单 2.4

按类型显示通话时间长度。按右软键[重设]进行重新设置。  
请求安全密码。

### 最后通话

以时/分/秒的格式显示最后通话的时间长度。

### 已接来电

显示已接听电话的时间长度。

### 拨出电话

显示拨出电话的时间长度。

### 所有通话

显示全部通话时间长度。

## 通话费用

菜单 2.5

此网络服务让您可以查询最后通话或当前所有通话的费用。您必须输入 PIN 2 码才能访问此菜单。

### 最后通话

在此菜单中，您可以重设最后通话费用。您必须输入 PIN 2 码才能进行重设。

### 全部电话

在此菜单中，您可以重设所有通话费用。您必须输入 PIN 2 码才能进行重设。

## 费用设置

此菜单允许指定通话费用显示条件。您必须输入PIN 码以进行配置。

- ▶ **设置通话费用：**此菜单允许您以本国货币或特定币种配置通话费用。
- ▶ **设置限制：**此菜单允许您将通话费用限定在指定金额范围内。

## 固定拨号

菜单 2.6

您可以将手机限于仅拨打指定的号码。此信息 保存在 USIM 卡上。

必须输入 PIN2 码进行验证。

- ▶ **打开：**启用固定拨号。
- ▶ **关闭：**禁用固定拨号。
- ▶ **号码列表：**您可以查看并编辑固定拨号号码列表。

## 呼叫限制

菜单 2.7

呼叫限制使您能够对用您的手机拨打和接听电话进行限制。

此功能要求提供呼叫限制密码，您可以从 客户服务中心处获得此密码。

## 语音来电

可以使用以下选项：

- ▶ **所有拨出通话：**不能拨打任何电话。
- ▶ **拨出的国际电话：**不能拨打国际电话。
- ▶ **拨出的国际通话除本地：**在国外时，只能向您目前所在的国家及您本国（网络提供商所在的国家）国内的号码拨打电话。
- ▶ **限制所有来电：**不能接听任何来电。
- ▶ **限制所有漫游时来电：**当在本国服务区以外的国家使用手机时，不能接听电话。

### 可视电话

可以使用以下选项：

- ▶ **所有拨出通话：**不能拨打任何电话。
- ▶ **拨出的国际电话：**不能拨打国际电话。
- ▶ **拨出的国际通话除本地：**在国外时，只能向您目前所在的国家及您本国（网络提供商所在的国家）国内的号码拨打电话。
- ▶ **限制所有来电：**不能接听任何来电。
- ▶ **限制所有漫游时来电：**当在本国服务区以外的国家使用手机时，不能接听电话。

### 关闭所有来电

停用所有呼叫限制设置，恢复正常接听和拨打电话。

## 设置

菜单 28

### 呼叫等待

当正在通话中时，网络将通知您有新增来电。

选择启动以要求网络激活呼叫等待功能，选择关闭以要求网络停用呼叫等待功能，或选择查询状态以检查该功能是否已激活。

### 发送我的号码

此网络服务使您能够设置向被呼叫人显示（**打开**）或隐藏（**关闭**）您的电话号码。选择“**通过网络设置**”，将手机重新设定为您已与客户服务中心达成协议的设置。

## 拒接来电

此菜单使您能够对所有号码或某一指定号码启用或禁用拒接来电功能。

### ▶ 关

### ▶ 拒接来电列表

配置有条件的来电拒接模式。按右软键[设置]可添加要拒接的电话号码。将号码添加到列表后，您可以选择“无声”或“结束通话”作为拒接模式。在将号码添加到列表时，您可以直接输入，或选择“搜索”，在“电话簿”中搜索号码，以此添加新的号码。



### ▶ 拒接所有来电

## 自动重拨

此菜单使您能够配置呼叫尝试失败时的自动重拨功能。

## 接听模式

使您能够确定何时应答电话。

- ▶ **仅发送键：**您可以通过直接按键应答  来电。
- ▶ **打开翻盖：**此选项使您能够在打开翻盖时应答来电。
- ▶ **按任意键：**您可以按任意除  键、软键和侧键以外的任意键接听来电。

## 分钟提示音

此功能会在接通电话后每隔一分钟响起一次提示音。

## 选择线路

如果您的 USIM 卡有两条电话线路，则可以在线路 1 和线路 2 之间进行切换。

## 照相机

菜单 3.1

此应用程序使您能够拍摄静止照片。您可以拍摄所需尺寸的照片，并将它用作联系人相片、主屏幕及其它更一般的用途。

拍摄后，静止图像可以通过多媒体信息和电子邮件发送。

按左软键[选项]显示以下弹出菜单项。

- ▶ **尺寸**：确定图像的尺寸。
- ▶ **质量**：确定图像的质量。
- ▶ **闪光灯**：确定闪光灯操作。
- ▶ **连续快照**：确定是否启用连拍。
- ▶ **缩放**：确定缩放率。
- ▶ **亮度**：确定亮度。
- ▶ **延迟计时器**：确定延迟时间。
- ▶ **相机效果**：确定照片的特殊效果。
- ▶ **快门声音**：确定按快门时的声音。
- ▶ **图像浏览器**：显示拍摄的静止图像。

## 摄像机

菜单 3.2

此应用程序使您能够录制视频剪辑。您可以在使用此功能的同时播放和观看视频文件。

录制后，视频剪辑可以通过多媒体信息或电子邮件进行发送。

按左软键[选项]显示以下弹出菜单项。

- ▶ **闪光灯**：确定闪光灯操作。
- ▶ **缩放**：确定缩放率。
- ▶ **质量**：确定视频剪辑的质量。
- ▶ **亮度**：确定亮度。
- ▶ **相机效果**：确定视频剪辑的特殊效果。
- ▶ **录制时间**：确定录制时间。
- ▶ **声音**：确定静音功能。
- ▶ **视频播放器**：显示录制的视频剪辑。

## 图像浏览器

### 菜单 3.3

此应用程序使您能够查看静态图像。

保存在手机中图像文件按缩略图显示。选择所需的图像可查看放大的图像。

#### ❗ 注意

由于图像尺寸过大或手机内存资源不足，“编辑图像”中的功能可能不起作用。例如，旋转不适用于超过 640x480 的图像。

按左软键 [选项] 显示以下弹出菜单项（在“1. 默认图像”中）。

- ▶ **发送信息**：使所选图像能够附在信息上并发送信息。
- ▶ **屏幕主题**：您可以将某幅图像设置为屏幕主题（墙纸、启动画面、关机画面和呼叫动画）。
- ▶ **幻灯片显示**：您可以开始显示幻灯片。
- ▶ **文件信息**：显示关于所选图像文件的信息。
- ▶ **内存信息**：显示当前内存用量。

按左软键 [选项] 显示以下弹出菜单项（在“2. 我的图像”中）。

- ▶ **转至照相机**：移动到照相机应用程序以便拍摄静止图像照片。
- ▶ **发送信息**：使所选图像能够附在信息上并发送信息。
- ▶ **GIF 动画**：使图像能够成为动画。
- ▶ **重命名**：使图像能够重命名。
- ▶ **删除**：删除所选图像。
- ▶ **删除多个**：一次删除多个图像文件。
- ▶ **全部删除**：删除全部图像。
- ▶ **屏幕主题**：您可以将某幅图像设置为屏幕主题（墙纸、启动画面、关机画面和呼叫动画）。
- ▶ **分类**：将图像排序。
- ▶ **幻灯片显示**：您可以开始显示幻灯片。
- ▶ **文件信息**：显示关于所选图像文件的信息。
- ▶ **内存信息**：显示当前内存用量。



## 音频播放器

菜单 3.4

此应用程序可以播放 MP3、MIDI 和 AAC 文件，使您能够收听它们。

在显示音频文件的列表模式中选择所需的音频文件。

以下选项由音频播放器中的“我的声音”提供。

共有两种情境：1)取消静音状态  
2)静音状态

按左软键[选项]显示以下弹出菜单项。(当1.取消静音状态时)

- ▶ **删除**：删除所有音频文件。
- ▶ **无声**：暂时将声音屏蔽。
- ▶ **设置重复**：重复播放音频文件。
- ▶ **下一个文件**：播放下一个音频文件。
- ▶ **上一个文件**：播放上一个音频文件。
- ▶ **查看列表**：显示音频文件的列表。
- ▶ **文件信息**：显示关于所选音频文件的信息。

按左软键[选项]显示以下弹出菜单项。(当2.静音状态时)

- ▶ **删除**：删除所有音频文件。
- ▶ **取消静音**：取消静音功能，使您能够重新听到声音。
- ▶ **设置重复**：重复播放音频文件。
- ▶ **下一个文件**：播放下一个音频文件。
- ▶ **上一个文件**：播放上一个音频文件。
- ▶ **查看列表**：显示音频文件的列表。
- ▶ **文件信息**：显示关于所选音频文件的信息。

显示文件列表时按左软键[选项]显示以下弹出菜单项。

- ▶ **写信息**：您可以将选定的音频文件附加到信息中并将其发送。
- ▶ **重命名**：您可以重命名选定的音频文件。
- ▶ **删除**：删除选定的音频文件。

- ▶ **删除多个**：一次删除多个音频文件。
- ▶ **全部删除**：删除全部音频文件。
- ▶ **音效主题**：您可以将音频文件设置为声音主题（铃声、开机声音和关机声音）。
- ▶ **分类**：将音频文件排序。
- ▶ **文件信息**：显示关于所选音频文件的信息。
- ▶ **内存信息**：显示当前内存用量。

## 视频播放器

菜单 3.5

此应用程序用于播放所录制的视频（.3gp或MPEG4文件）。

在显示视频文件的列表模式中选择所需的视频文件启动视频播放器。

以下选项由视频播放器提供。

共有两种情境：1) 静音/取消静音状态和  
2) 暂停状态

按左软键 [选项] 显示以下弹出菜单项。（处于 1. 取消静音/ 静音状态时）

- ▶ **删除**：删除选定的视频文件。
- ▶ **取消静音**：暂时将声音屏蔽/ 取消屏蔽。
- ▶ **对比度**：调整对比度。
- ▶ **下一个文件**：播放下一个视频文件。
- ▶ **上一个文件**：播放上一个视频文件。
- ▶ **查看列表**：显示视频文件的列表。
- ▶ **文件信息**：显示关于所选视频文件的信息。

按左软键 [选项] 显示以下弹出菜单项。（处于 2. 暂停状态时）

- ▶ **删除**：删除选定的视频文件。
- ▶ **捕获**：从视频文件截取图像。
- ▶ **对比度**：调整对比度。
- ▶ **下一个文件**：播放下一个视频文件。

- ▶ **上一个文件:** 播放上一个视频文件。
- ▶ **查看列表:** 显示视频文件的列表。
- ▶ **文件信息:** 显示关于所选视频文件的信息。

显示文件列表时按左软键[选项] 显示以下弹出菜单项。

- ▶ **写信息:** 如果内容未写保护, 您就可以将选定的视频文件附加到信息中并将其发送。
- ▶ **重命名:** 您可以重命名选定的视频文件。
- ▶ **删除:** 删除选定的视频文件。
- ▶ **删除多个:** 一次删除多个视频文件。
- ▶ **全部删除:** 删除全部视频文件。
- ▶ **分类:** 将视频文件分类。
- ▶ **文件信息:** 显示关于所选视频文件的信息。
- ▶ **内存信息:** 显示当前内存用量。


## VOD/AOD

### 菜单 3.6

使用 VOD 或 AOD 服务, 您可以实时播放所需的音频文件。此外, 您还可以使用此服务下载和保存所需的音频文件。


- ▶ **正在连接:** 连接到 AOD 服务后, 您可以实时播放音频文件或下载音频文件。
- ▶ **设置:** 您可以配置要连接的 VOD 或 AOD 服务器。







# 浏览器

3G 为您提供精彩的通讯、信息和娱乐服务。您可以找到主要城市的交通图，获取最新消息，紧跟“大联盟”行动的步伐，服务项目应有尽有。这部分带您周游这个精彩的世界。该浏览器适用于 3G 覆盖区。要在待机模式下启动浏览器，请按  键。


## 主页

## 菜单 4.1

在“浏览器”菜单中选择“主页”，然后按  键。如果要重新加载当前页面，请按右软键重新加载。可以使用以下选项。按左软键选项]。

- ▶  **主页**：移动到初始主页。
- ▶  **重新加载**：重新加载当前页面
- ▶  **书签**：您可以将当前页面添加到“书签”或查看“书签”中保存的列表。
- ▶  **设置**：您可以设置浏览器相关事项，如“清除缓存”、“通话信息”、“清除 cookie”等。
- ▶  **返回**：移动到上一页。
- ▶  **向前**：移动到下一页。

以下示例显示浏览器菜单“向前”的功能。

1. 导航：页面 A → 页面 B → 页面 C → 页面 D
  2. 在页面 D 上，选择菜单“返回”，将显示页面 C。
  3. 在页面 C 上，如果选择菜单“返回”，将移动到页面 B。  
另外如果选择菜单“向前”，又将移动到页面 D。
- ▶  **URL**：编辑后连接至特定的 URL。

### 书签

菜单 4.2

此功能使您能够存储和编辑经常访问的站点。

- ▶ **发送信息：**所选书签 URL 可以通过文本信息或多媒体信息发送。
- ▶ **新增：**将新站点添加至书签列表。
- ▶ **编辑：**您可以编辑和保存所选书签的名称和地址。
- ▶ **删除：**删除所选书签。
- ▶ **全部删除：**删除当前保存的全部书签。

### 已保存页面

菜单 4.3

将屏上显示的页面另存为脱机文件。

最多可以保存 20 页。

### 转至 URL

菜单 4.4

编辑后连接至特定的 URL。

### 安全证书

菜单 4.5

显示可用证书的列表。

## 设置

菜单 4.6

### 模式

按 **OK** 键启动浏览器，选择模式。

### 清空缓存

删除缓存中保存的数据。

### 字符编码

选择以下列表中的字符集之一

:自动, 英文, (ASCII), 英文 (ISO), 英文 (LATIN), UNICODE(UCS2 BE),  
UNICODE(UCS2 LE), UNICODE(UCS2 AUTO), UNICODE(UTF-16 BE),  
UNICODE(UTF-16 LE), UNICODE(UTF-16AUTO), UNICODE(UTF-8),  
中文 (大五码)

### 滚动速度

允许您选择不同的滚动速度，可选择滚动速

# 管理器

此菜单使您能够保存和管理联系人通讯信息。  
电话簿功能提供添加新的通讯信息或按姓名、  
电话号码和群组信息搜索保存的联系人通讯信息的功能。

## 电话簿

菜单 5.1

此菜单使您能够添加新的联系人通讯信息。您可以输入包括姓名、电话号码、电子邮件地址、群组信息项、备忘录、主页地址、铃声以及卡通形象或图像（相片）在内的联系人通讯信息。

您必须使用左右导航键选择存储方式为“手机”或“USIM卡”。

### 添加新名称

此菜单使您能够添加新的联系人通讯信息。您可以输入包括姓名、电话号码、电子邮件地址、群组信息项、备忘录、主页地址、铃声以及 Avata r 或图像（相片）在内的联系人通讯信息。

您必须使用左右导航键选择“手机”或“USIM卡”。

### 搜索

此菜单使您能够搜索联系人通讯信息。通常按姓名进行搜索。

在搜索窗口中，显示按当前设定的搜索功能及搜索条件所搜索的结果。

在屏幕上，显示对应于所选联系人的保存图像或卡通形象。

您可以在[选项]菜单中更改配置，以便不显示图像或卡通形象。

您还可以向所选电话号码打电话或发送信息。

### 群组

此菜单使您能够管理群组信息。默认情况下，有 4 个群组：家人、朋友、同事和同学。您可以编辑和删除群组。


您还可以为群组配置铃声，以便在该群组中的某个联系人的呼叫到达但没有为该联系人配置铃声时发出群组铃声。

## 快速拨号

此菜单使您能够配置快速拨号键。

您可以选择 2 与 9 之间的一个数字作为快速拨号键。您可以为某个联系人配置任意 5 个数字作为快速拨号键，使一个联系人对应多个快速拨号键。

## 服务号码

此菜单使您能够向 客户服务中心提供的某个号码发出呼叫，方法是将突出显示区移动到所需号码并按  键。（例如，客户服务中心、邮件、3G 客户理财等。）

## 清空电话簿

此菜单用于删除联系人通讯信息。

您可以删除手机内存中保存的联系人通讯信息，并且可以删除 USIM 卡上保存的号码。

## 全部复制

此菜单使您能够将所有信息（例如姓名、手机号码等）从 USIM 卡复制到手机。如果复制时某个姓名重复，该信息将重复。

- ▶ **从手机到 USIM 卡：**您可以将条目从手机内存复制到 USIM 卡（并非复制所有数据）。
- ▶ **从 USIM 卡到手机：**您可以将条目从 USIM 卡复制到手机内存。

可以使用以下选项：

**全部：**您可以一次复制全部联系人。

**逐个：**您可以逐个复制所选联系人。



### 全部移动

此菜单使您能够将所有信息（例如姓名、手机号码等）从USIM卡移动到手机。

此操作与“全部复制”操作的不同之处在于仅在目标位置保存信息。

- ▶ **从手机到USIM卡：**您可以将条目从手机内存移动到USIM卡。
- ▶ **从USIM卡到手机：**您可以将条目从USIM卡移动到手机内存。

可以使用以下选项：

- 全部：**您可以一次移动全部联系人。
- 逐个：**您可以逐个移动所选联系人。

### 本机号码

使您能够显示USIM卡中您的电话号码。  
您可以更改或添加信息。

### 设置

使您能够设置以下各项的显示方式。

**显示数据：**手机+ USIM卡 / 电话 / USIM卡

**显示图像/个人形象：**开 / 关

## 日程表

## 菜单 5.2

### 每月日程表管理

1. 从顶层菜单中选择“管理器”。
2. 选择“日程表”，然后按 **OK** 键。
3. 屏幕上会显示每月视图。
4. 最初，光标依据您的手机设置显示在当前日期上。
5. 您可以使用上、下、左、右导航键将光标移到所需的位置。
6. 当移到已保存日程表项目、周年纪念或生日的日期时，屏幕左下方会显示相应的图标以及所保存日程表项目的数目。

### 添加新日程表项目

1. 在“每月日程表管理”屏幕中，选择左软键[选项]，从弹出菜单中选择“新增”，然后按 **OK** 键。  
此外，也可以在“每月日程表管理”屏幕中选择右软键[添加]。
2. 使用数字键输入所需的日期。
3. 使用数字键输入所需的时间。
4. 输入主题。
5. 使用向左/向右导航键选择所需的日程表项目类型。
6. 使用向左/向右导航键选择所需的重复类型。
7. 使用向左/向右导航键选择所需的闹钟类型。
8. 按 **OK** 键保存新日程表项目。

### 设置假期

1. 在“每月日程表管理”屏幕中，选择左软键[选项]，选择“设置假期”，然后按 **OK** 键显示“假期设置”弹出窗口。
2. 支持的假期类型包括“在当天”、“每周”、“每月”、“每年”和“多个设置”。
3. 选择假期设置类型，按 **OK** 键设置假期。
4. 在“每月日程表管理”屏幕中，所设置假期对应的日期将会呈绿色显示。

### 移到特定日期

1. 在“每月日程表管理”屏幕中，选择左软键[选项]，选择“跳至日期”，然后按 **OK** 键显示“移至日期”窗口。
2. 输入希望移至的日期，然后按 **OK** 键。
3. “每月日程表管理”屏幕中的日期光标随后会移至指定的日期。

### 当日

1. 在“每月日程表管理”屏幕中，选择左软键[选项]，选择“当日”，然后按 **OK** 键。
2. “每月日程表管理”屏幕中的日期光标随后会移至当前日期。

### 内存信息

显示当前内存使用情况。

## 任务

菜单 5.3

### 任务查询

1. 从顶层菜单中选择“管理器”。
2. 选择任务项目，然后按 **OK** 键。
3. 屏幕上会显示已保存的任务列表。

### 添加任务项目

1. 在屏幕中选择“新增”，或者选择右软键[添加]。
2. 添加项目时，输入要做的作业、日期和注释。
3. 按 **OK** 键保存任务项目。

### 删除/全部删除任务

1. 选择要从“任务”列表中删除的项目，使用左软键[选项]选择“删除”，以删除此任务项目。
2. 使用左软键[选项]选择“全部删除”，以删除所有已保存的任务项目。

### 任务已完成/未完成

1. 如果您希望将已保存“任务”列表中的项目标记为“完成”，请从“任务”列表中选择该项目。
2. 使用左软键[选项]选择“完成”，以在该日程表项目上画一条线，将其标记为“完成”。
3. 要取消“完成”标记，请选择“未完成”。

### 任务详细视图

要查看任务的详细信息，请从“任务”列表中选择所需的项目，按 **OK** 键显示有关该项目的详细视图屏幕。

## 备忘录

菜单 5.4

### 已存储备忘录

1. 从顶层菜单中选择“管理器”。
2. 选择备忘录项目，然后按 **OK** 键。
3. 屏幕上会显示已保存备忘录的列表。

### 添加备忘录

1. 要添加新的备忘录，请使用左软键 [选项] 在“普通备忘录”屏幕中选择“新增”，或者选择右软键 [添加]。
2. 输入要保存的备忘录的内容。
3. 按 **OK** 键保存备忘录。

### 锁定/取消锁定备忘录

1. 从已保存的备忘录列表中选择需要锁定的项目。  
锁定的备忘录会转换成私人备忘录。
2. 使用 [选项] 键选择“移至私人备忘录”，以锁定备忘录项目。  
如果项目已锁定，则会出现一个锁定图标。  
此时，您需要输入安全密码。
3. 要重新取消锁定，请在“私人备忘录项目”中选择“移至普通备忘录”。

### 删除/全部删除备忘录

1. 选择要从“备忘录”列表中删除的适当项目，使用左软键 [选项] 选择“删除”，以删除此备忘录项目。
2. 使用左软键 [选项] 选择“全部删除”，以删除所有已保存的备忘录项目。
3. 如果要删除的备忘录项目已被锁定，则会出现一个弹出窗口，  
要求输入密码。
4. 此时，必须输入正确的密码才能删除该项目。

## 更改背景

您可在备忘录项目中使用导航键来更改背景图像。

## 文件信息

您可以查看所选备忘录的标题、大小和创建日期。

## 内存信息

您可查看内存状态：“使用中”和“可使用”。

## 私人备忘录

菜单 5.5

1. 从顶层菜单中选择“管理器”。
2. 选择**私人备忘录**项目，然后按 **OK** 键。
3. 要查看或删除已设置为私人备忘录的备忘录，您需要输入先前在手机中配置的密码。

# 模式

您可以设置语音/振动铃声、按键音、翻盖音、声音效果、开启音、关闭音和音量。铃声类型支持MP3、.3gp、AAC、MIDI、WAV和AMR。

所支持的情景模式包括标准、静音、振动、耳机、户外、自定义1、自定义2和自定义3。选择所需的情景模式，然后按 **OK** 键启动模式。

“标准，静音，仅振动，耳机，户外”都没有提供选项菜单。当光标移至某一情景模式时，对应的菜单会显示在软框内。如果您选择“查看/编辑”菜单，则可以查看或编辑情景模式的设置。

下面列出了“情景模式”菜单的子菜单。

## ▶ 提示方式

此选项用于确定来电通知方式。您可以选择响铃、振动、振动并响铃、振动后响铃、响铃一次、铃声一次和振动一次。

## ▶ 语音铃声

此选项用于确定来电通知的语音铃声。

## ▶ VT 铃声

此选项用于确定可视电话呼入时的铃声。

## ▶ 音量

此选项用于确定来电通知的铃声音量。

## ▶ 信息提示

此选项用于确定手机在信息到达时发出的信息提示。您可以选择下列一种模式：无声、响铃一次、每隔1分钟、每隔2分钟、每隔5分钟和每隔10分钟。

## ▶ 信息提示音

此选项用于确定手机在新信息到达时发出的信息提示音。

## ▶ 警告提示音

此选项用于确定是否打开警告提示音。

## ▶ 按键音效果

此选项用于确定在按键时所发出的按键音

▶ **按键音量**

此选项用于确定按键音的音量。

▶ **翻盖音效果**

此菜单选项允许您选择手机在开启和关闭翻盖时发出的声音。

▶ **开机音效果**

此选项用于确定手机在开启时发出的开启音。

▶ **关机音效果**

此选项用于确定手机在关闭时发出的关闭音。



## 快速菜单

菜单 7.1

快速菜单允许您将自己喜欢的项目添加至已提供的列表中。创建自己的菜单后，您可通过按向上导航键从待机屏幕中快速访问所需的功能。要直接进入所需的菜单，请按向上和向下导航键，从“快速菜单”中选择所需的菜单。

- ▶ **新增：**在 [空] 列表中，按右软键[添加]。从菜单中选择项目，然后保存所需的菜单项目。
- ▶ **编辑：**在已添加菜单项目的列表中，按右软键[编辑] 或左软键 [选项]。从菜单中选择“编辑”，编辑已保存的菜单项目。
- ▶ **删除：**在已添加菜单项目的列表中，按左软键[选项]。从菜单中选择“删除”，删除已保存的菜单项目。
- ▶ **全部删除：**在已添加菜单项目的列表中，按左软键[选项]。从菜单中选择“全部删除”，删除快速菜单项目6到0。(另本页后面“查看信息”项不該分段)
- ▶ **查看信息：**在已添加菜单项目的列表中，按左软键[选项]。

从菜单中选择“查看信息”，查看有关已添加菜单项目的实际位置信息。

## 闹钟

菜单 7.2

闹钟功能允许您设置多个不同的闹钟。

此外，您还可以设置时间、重复间隔和铃声。

- ▶ 在闹钟列表中选择要配置的闹钟。如果没有闹钟，请按右软键[添加]，添加新的闹钟。
- ▶ **设置/取消闹钟：**使用导航键开启或关闭闹钟。
- ▶ **输入闹钟时间：**通过指定小时和分钟值来输入所需的闹钟时间。如果时间为12小时制格式，则需用右软键选择“AM”或“PM”。
- ▶ **选择重复模式：**使用导航键选择所需的重复模式。
- ▶ **选择铃声：**使用导航键选择要用于闹钟的铃声。
- ▶ **输入备忘录：**输入闹钟名称。

完成配置后，按 **OK** 键保存已更改的闹铃设置。

### ! 备注

手机关机后，闹钟功能将不起作用。

## 计算器

菜单 7.3

计算器功能允许您进行加法、减法、乘法和除法运算。您可使用数字键输入数字，并使用上、下、左、右导航键输入运算符。

您可以按 **#.** 键输入小数点。

当您按 **C** 键时，字符将会按相反的方向依次删除。

## 世界时间

菜单 7.4

世界时间功能提供世界各地主要城市的时间信息。

1. 您可以使用导航键或右软键 [列表] 查看所需国家/地区或城市的时间。
2. 您可以使用左软键 [设置] 选择所需的城市作为基准。

## 单位换算器

菜单 7.5



此功能用于将任一度量值换算成所需的单位。

共有 7 种单位可以换算：币种、面积、长度、重量、温度、体积和速率。



### 币种

1. 选择“币种”菜单。
2. 用户可用右软键 [比率] 来设置币种汇率。
3. 输入国内货币的标准单位，然后按 **OK** 键。  
之后，您可以查看换算成国外货币的数值。
4. 此外，通过输入国外货币的标准单位并按 **OK** 键，  
您可以查看换算成国内货币的数值。
5. 按左软键 [重设] 可以清空当前输入区域并将光标定位在输入区域中。
6. 要退出货币换算功能，请按 **BACK** 键。



### 面积

1. 选择“面积”菜单。
2. 使用右软键[单位] 选择需要换算的单位。
3. 输入标准单位，然后按  键查看换算值。
4. 按左软键 [重设]可以清空当前输入区域并将光标定位在输入区域中。
5. 要退出面积换算功能，请按  键。



### 长度

1. 选择“长度”菜单。
2. 使用右软键[单位] 选择需要换算的单位。
3. 输入标准单位，然后按  键查看换算值。
4. 按左软键 [重设]可以清空当前输入区域并将光标定位在输入区域中。
5. 要退出长度换算功能，请按  键。



### 重量

1. 选择“重量”菜单。
2. 使用右软键[单位] 选择需要换算的单位。
3. 输入标准单位，然后按  键查看换算值。
4. 按左软键 [重设]可以清空当前输入区域并将光标定位在输入区域中。
5. 要退出重量换算功能，请按  键。



### 温度

1. 选择“温度”菜单。
2. 输入标准单位，然后按  键查看换算值。
3. 按左软键 [重设]可以清空当前输入区域并将光标定位在输入区域中。
4. 要退出温度换算功能，请按  键。

## 体积

1. 选择“体积”菜单。
2. 使用右软键 [单位] 选择需要换算的单位。
3. 输入标准单位，然后按  键查看换算值。
4. 按左软键 [重设] 可以清空当前输入区域并将光标定位在输入区域中。
5. 要退出体积换算功能，请按  键。

## 速率

1. 选择“速率”菜单。
2. 使用右软键 [单位] 选择需要换算的单位。
3. 输入标准单位，然后按  键查看换算值。
4. 按左软键 [重设] 可以清空当前输入区域并将光标定位在输入区域中。
5. 要退出速度换算功能，请按  键。


 
## 计时器

菜单 7.6

### 天数搜索器




天数搜索器用于显示到指定事件日所剩余的天数。

### 天数计算器

1. 选择“天数计算器”菜单。
2. 从列表中选择所需的项目以查看标题，距离预定日期的天数。
3. 按  键查看列表。
4. 按右软键 [添加] 输入标题和新日期。  
然后按  键，将项目添加至列表中。

### 秒表

手机提供了秒表功能。

1. 选择“秒表”菜单。
2. 按  键可以启动秒表。
3. 按  键可以停止秒表并查看测量的时长。
4. 按  键可以重新启动秒表。
5. 在计时期间，按左软键 [重叠] 可以记录到当前时刻的时长，  
然后继续运行秒表。
6. 通过按左软键 [重叠]，您最多可以保存 6 条时间记录。  
如果时间记录数超过 6 条，则会删除最初的记录。  
按右软键 [重设] 可以重设秒表。

## 录音机

菜单 7.7

此功能允许您录制语音备忘录。您可以记录多条语音信息，每条不超过60秒。

## 服务器同步

菜单 7.8

服务器同步功能可以通过无线网络使手机中的数据与服务器上的数据同步，如联系人地址信息和日程表项目等。

### 连接

从“工具”菜单中选择“服务器同步”，然后按 **OK** 键。

选择“连接”项目，然后按 **OK** 键。

使用所选的服务器模式连接至服务器。

当执行同步时，屏幕上会显示同步动画。

### 记录

从“工具”菜单中选择“服务器同步”项目，然后按 **OK** 键。选择“记录”项目，然后按 **OK** 键查看上一次执行的同步操作的记录。

### 设置

此菜单允许您设置同步服务器的配置。

#### ▶ 新增配置

1. 输入及选择配置名称、主机地址、用户名、密码、联系人、联系人姓名、日历、日历名称、任务、任务名称和接入点。
2. 按 **OK** 键保存新配置。
3. 在“设置”屏幕中，按左软键 [选项]，然后选择“新增”添加新的配置。


### ▶ 编辑配置

- 1.选择要编辑的配置。
- 2.按左软键[选项], 选择“编辑”, 然后编辑所选的配置。

### ▶ 删除配置

- 1.按左软键[选项], 然后选择“删除”。
- 2.选择“是”删除所选的配置。

### ▶ 查看配置

在“设置”屏幕中选择要同步的适当查看配置, 然后按  键。

## 电话

## 菜单 8.1

您可以使用“时间设置”菜单更改时间和日期的显示格式以及实际的时间和日期。

### 时间

1. 从手机设置列表中选择“时间”项目，然后按 **OK** 键。
2. 使用向左和向右导航键选择所需的时间格式。
3. 使用数字键输入当前时间。
4. 按 **OK** 键保存时间。

#### ! 备注

要更改 AM/PM，您需要按右软键 [am/pm]。

### 日期

1. 从手机设置列表中选择“日期”项目，然后按 **OK** 键。
2. 使用向左和向右导航键选择所需的日期格式。
3. 使用数字键输入所需的日期。
4. 按 **OK** 键保存日期。

#### ! 备注

请确保输入正确的日期和时间，以保证所有 3G 服务正常运行。

### 自动更新日期/时间

当“自动更新”设为“打开”时，手机会根据当前时区自动更新时间和日期。如果首先选择了“确认”选项，则需在自动更新之前确认是否更新时间和日期。



### 夏令时

此功能用于启用夏令时间。将“夏令时”设为“打开”会立即启用夏令时间（例如，如果当前时间为04:53，则夏令时为05:53）。

### 手机信息

此菜单用于查看软件版本信息。

### 显示

菜单 8.2

在此菜单中，您可以设置屏幕显示选项，其中包括屏幕设置和主题。

### 背光

使用此功能选择手机是否使用背景灯。

项目	默认值
主屏待机时间	关闭 5 秒 <b>10 秒</b> 15 秒 20 秒 打开
主屏亮度	正常 亮
外屏待机时间	关闭 5 秒 <b>10 秒</b> 15 秒 20 秒

项目	默认值
按键持续时间	关闭 5 秒 <b>10 秒</b> 15 秒 20 秒 打开

## 对比度

您可以使用向左和向右导航键调节主屏的亮度。

## 颜色方案

您可以通过更改菜单颜色来更改菜单、软键区域、标题栏区域和光标的颜色。您可以选择下列一种菜

单颜色：**蓝色**、**紫色**、**橙色** 和 **绿色**。

## 拨号时使用的字体

您可以设置在拨打电话时主屏上所显示数字的字体大小和颜色。

## 闲置时钟字体

您可配置主屏上显示的时钟的字体大小和颜色。

字体大小可以设为 **隐藏**、**小** 或 **大**。

如果选择了“小”或“大”，则可用颜色表来设置颜色。

## 菜单类型

您可以将菜单样式设为**图标类型**、**旋转类型**或**列表类型**。

### 屏幕主题

您可以按主题配置背景。

#### ▶ 桌面

您可以选择要在待机模式下显示的墙纸（动态或静态）。

#### ▶ 来电

您可以选择在手机收到来电时所显示的图像。  
此设置既适用于语音电话，也适用于可视电话。

#### ▶ 拨出电话

您可以选择在拨打电话时所显示的图像。此设置既适用于语音电话，也适用于可视电话。

#### ▶ 正在发送信息

您可以选择在发送信息时所显示的图像。

#### ▶ 开启

您可以选择在开机时所显示的图像。

#### ▶ 关闭

您可以选择在关机时所显示的图像。

### 子屏颜色

您可以设置外屏的背景灯颜色。

### 问候短信

设置在开机时所显示的信息。

## 网络

菜单 8.3

### 网络选择

#### ▶ 自动

此功能可自动搜索网络并向网络注册手机。

#### ▶ 手动

此功能使您能够搜索网络列表并指定要注册的网络。

### 首选列表

您可以选择要显示的当前存储在USIM 卡中的首选列表。并可以对首选列表进行编辑。

## 接入点

菜单 8.4

此菜单显示接入点列表。选择右软键[编辑]。接入点具有以下项目。

▶ **连接标题:** 情景模式名称

▶ **连接方式:** UMTSCSD/GPRS

▶ **用户名:** 用户姓名

▶ **密码:** 密码

▶ **APN:** 服务提供商的APN 信息,要修改这些设置,请致电 客户服务中心。

# 安全性

菜单 8.5

您可以设置PIN码。设置PIN码之后，手机会在开机时显示一个窗口，要求输入PIN码，以防他人擅自使用手机。

## PIN码请求

您可以启动PIN（个人识别码）。

您可以从状态栏中检查PIN设置的当前状态。

1. 从“安全性”菜单中选择“PIN码请求”，然后按 **OK** 键。
  2. 将此项目设为“开启”或“关闭”。如果设为“开启”，则在每次开机时均需输入PIN码。
  3. 输入当前PIN码，然后按 **OK** 键。
  4. 如果在PIN码输入窗口中输错3次PIN码，则会导致PIN码失效。
  5. 最多允许您尝试输入10次PUK码。如果10次输入的PUK码均不正确，则禁止使用手机。此情况下，请咨询客户服务中心以解除对手机的锁定。
- 要返回上一步骤，请在PIN码输入窗口中按返回键。

## 更改密码

您可以更改PIN、PIN2、安全密码以及呼叫限制密码。

### ! 备注

如果您在更改密码之后忘记了密码，则需与销售商联系，以解除锁定或解决此问题。

### ▶ PIN/PIN 2

此菜单允许您更改PIN或PIN2码。

1. 从“安全性设置列表”中选择“更改密码”，然后按 **OK** 键。
2. 选择“PIN码”或“PIN2码”，然后按 **OK** 键。
3. 输入当前的PIN码或PIN2码，然后输入新的PIN码或PIN2码。输错3次PIN码会导致PIN码失效。此情况下，您需要输入PUK码或PUK2码才能重设PIN码。

4. 如果10次输入的PUK 码均不正确，则禁止使用手机。此情况下，请咨询 客户服务中心以解除对手机的锁定。

#### ▶ 安全密码

此菜单允许您更改手机密码。与PIN 码和PIN 2 码不同，尝试输入安全密码的次数不受限制。

#### ▶ 限制密码

此菜单允许您更改呼叫限制密码。

## 手机锁

您可以使用安全密码来防止他人擅自使用手机。

如果将手机锁设为“打开电源”，则每次开机时，均会要求您输入安全密码。

您可以从菜单中选择以下一项：**打开电源**、**如果已更换USIM卡**、**立即卡**、**无**。

## 连接

菜单 8.6

此功能显示本手机与其它设备之间的连接状态。

您可以选择USB或红外线。

## 内存状态

菜单 8.7

此菜单用于查看手机和USIM 卡的内存使用情况。

您可以了解已由电话簿、日程表、任务、备忘录、私人备忘录、文本信息和多媒体信息占用的内存量的有关信息。

## 共用内存

此功能显示手机中用户内存的状态。

## 预留内存

此功能显示用户的可用内存。

## USIM 卡内存

此功能显示USIM 卡用户内存的状态。

## 语言

菜单 8.8

此功能允许您设置手机中使用的语言。

## 恢复初始设置

菜单 8.9

此功能允许您恢复出厂设定。执行此操作不会删除任何用户资料。

# 应用程序

这款手机支持 Java™ 以便您可以从 3G 服务中心下载游戏及其它应用程序，并在手机上运行这些应用程序。

## 我的应用程序

菜单 9.1

此菜单用于查找和运行下载的应用程序，例如游戏。选择“我的应用程序”查看下载到手机上的应用程序的列表。

## 连接

菜单 9.2

此菜单用于直接转到游戏下载页面，以使用户浏览和选择要下载的游戏。这是因为互联网浏览器启动了游戏门户 URL 设置。此 URL 可在“设置”菜单中指定 - 即 Java 门户 URL。

默认情况下，此设置位于运营商门户的游戏页面（或者，如果运营商未指定 URL，则可将其留空）。如果用户要更改默认设置，则可在“设置”菜单中修改游戏门户 URL。



### 设置

### 菜单 9.3

此菜单用于配置为下载应用程序而要连接的Java Internet 门户网站。如果选择此菜单，将显示当前保存的 Java Internet 门户站点的列表以及当前配置的项目。

第一个设置屏幕：显示项目列表（如果存在已保存的项目）。

1. 使用上下导航键选择项目。
2. 按 **OK** 键激活所选项目服务。
3. 按左软键 [选项] 显示弹出菜单。从弹出菜单中选择 [编辑]，编辑所选项目的内容。

按左软键 [选项] 显示以下弹出菜单项。

- ▶ **新增**：添加新的情景模式。
- ▶ **编辑**：您可以编辑所选项目。
- ▶ **删除**：删除所选项目。
- ▶ **查看**：显示所选项目的内容。

#### ! 备注

选择“应用程序 ??设置”。在“设置”中，添加指定 Java 游戏站点 URL 的列表项，然后将该列表项设置为“开”。通过选择“应用程序 ??下载应用程序”启动 WAP 浏览器。

WAP 浏览器将显示在“应用程序 ??设置”菜单中激活的列表项的 URL 页面。

在浏览该页面时选择 Java 游戏链接则将下载 Java 游戏。只需按照用户提示信息下载 Java 游戏。下载的所有 Java 应用程序均在“应用程序 ??我的应用程序”菜单中列出。

# 其它

客户服务中心之前，请检查本节是否已介绍了您遇到的问题。

**问** 如何查看已拨电话、已接电话和未接电话的列表？

**答** 按  键。

**问** 如何查看手机中保存的所有号码？

**答** 按向下导航键或先按右软键 [电话簿]，然后按 **2 abc**。

**问** 为何在某些区域内连接质量不佳或听不见通话声音？

**答** 当某些区域的频率环境不稳定时，连接质量可能不佳或听不见通话声音。请移至另一区域并重试。

**问** 为何显示屏不亮？

**答** 取出并重新插入电池，然后尝试开机。如果问题仍然存在，请为电池充满电并重试。

**问** 当与某些区域内的电话建立连接时，为何听到回声？

**答** 这称为“回声现象”。如果音量过高会发生这种现象，或者由对方一端机器的特殊属性（半电子电话交换机）而导致。

**问** 为何手机会变热？

**答** 当进行非常长的通话、玩游戏或使用浏览器时，手机会变热。这对于手机的使用寿命或性能没有影响。

**问** 为何没有铃声而只存在闪烁的LCD屏幕？

**答** 手机可能已设为“振动”或“静音”模式。在“情景模式”菜单中，选择“标准”或“户外”。

**问** 正常使用情况下，电池的使用寿命为何会缩短？

**答** 电池的蓄电能力会随着使用时间下降。随着时间的推移，电池的使用寿命会逐渐缩短。如果电池的使用寿命约等于新电池的一半，则表示需要购买新的电池。


**问** 在正常使用中，为何电池的电量会很快耗尽？

**答** 这取决于用户环境、进行了大量的通话或信号太弱。

**问** 当使用电话簿条目拨打电话时，为何未拨出任何号码？

**答** 使用电话簿功能检查是否正确保存了号码。如果需要，请重新保存。

**问** 为何收不到来电？

**答** 手机是否开机（按住  三秒以上）？是否接入了正确的蜂窝网络？或者，是否已设置来电限制选项？

**问** 我找不到锁密码，PIN 或 PUK 码。我的 PIN 码是多少？

**答** 默认锁定密码为“0000”。如果遗忘或丢失了锁定密码，请联系您的手机经销商。如果遗忘或丢失了 PIN 或 PUK 码，或者未收到此类密码，请联系您的客户服务中心。

**问** 手机摔落会有什么后果？

**答** 手机可能会关机或重置，但这不表示一定会造成永久性损坏。

# 配件

## 充电器

此适配器用于为电池充电。它支持欧洲/澳洲/英国及香港地区的 100-240V，50/60Hz 标准电源插座。(新加坡 220V 50Hz) 对于完全放电的电池，需要充电 35 小时。



欧洲



澳洲

 


英国和香港

## 配件


### 耳机

耳机连接至手机之后，可以进行免提操作。包括听筒、麦克风和集成的电话接听/结束按钮。

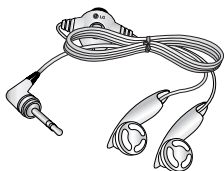

### USB 电缆

 用于将手机连接到PC的电缆。



### 腕带



### 电池



# 词汇表

## 2G

第二代无线通信系统。2G 系统支持低质量的语音服务和低速率的分组数据包服务。2G 是指欧洲国家/地区的 GSM 和美洲的 CDMA。

## 3G

第三代无线通信系统。3G 意指下一代无线通信系统，是在第二代无线通信系统的基础上发展而来的。3G 系统支持实时通信服务和高速率的分组数据服务。3G 是指在欧洲国家/地区的 GSM 的基础上发展而来的 UMTS。

## 接入点

接入点是指用户用以接入网络以便使用网络服务的点。

## AMR

Adaptive Multirate codec（自适应多码率编解码器）的缩写。它是 ETSI 为 GSM 开发的一种语音编解码器。

AMR 支持 8 个编码速率（4.75 到 12.2Kbps），因此可以自动在多种无线频道条件下提供高质量的语音服务。

## 下载

下载是指将文件从一个计算机系统传输至另一个计算机系统。下载通常表示将文件从较大的系统传输至较小的系统。

## IrDA (红外数据协会)

IrDA 协会定义的一种标准。它指定了一种通过红外线辐射来进行无线数据传输的方法。

IrDA 规范不仅包括物理设备标准，而且还包括物理设备之间相互通信的协议的标准。

## Java™

一种编程语言，其生成的应用程序无需任何修改便可运行于包括所有的大、中、小型硬件平台。它已被广泛应用于公共 Web 站点和 Intranet（企业内部网）的网络。Java 程序在 Web 页上运行时，称为 Java applet。当在移动电话或寻呼机中运行时，它称为 MIDlet。

### 线路识别服务 (致电者ID)

一种服务，它可以允许用户查看或限制致电者的电话号码。

### MIDI

Music al Instrument Dgital Interface（音乐设备数字接口）的缩写。一种保存数字化音乐设备数据的文件格式。MIDI 或音乐设备数字接口的原意是指计算机和电子设备之间交换数据的协议。

### MMS (多媒体信息服务)

一种用于手机环境的信息服务，由 WAP Forum 和 3rd Generation Partnership Program (3GPP) 进行了标准化。对于电话用户，MMS 类似于短信服务 (SMS) - 它可以自动即时地将用户创建的内容在电话之间传输。所用的信息寻址方法主要是电话号码，因此能够在电话之间传输信息。此外，MMS 还支持电子邮件寻址方法，因此信息还可以通过电子邮件发送。除 SMS 的文本内容之外，MMS 信息还可包括图像、语音或音频剪辑，并且以后还可包括视频剪辑和演示信息。

### MP3

Moving Picture Experts Group Layer-3 Audio（动画专家组第3层音频）的缩写。一种提供高质量音频的文件格式，其质量与 CD 相当。MP3 是由 MPEG（动画专家组）开发的一种数字音频标准，广泛用于数字音频文件。

### MPEG4

Motion Picture Experts Group 4（动画专家组4）的缩写。由 MPEG（动画专家组）开发的一种数字视频标准。MPEG4 可以压缩视频数据，因此可以方便地传输和保存大型视频文件。MPEG4 非常适用于移动环境。

### 多媒体

多媒体意指包括多种媒体数据（如语音、字符串、图像和视频数据等）的媒体。当前，多媒体的含义包括通过多媒体提供的服务。

## 多方通话

一种能够建立电话会议的能力。  
在电话会议中，一方最多可与其它五方通话。

## 漫游

它是指在当地服务区域之外（例如外出旅游）时使用手机。

## SDN (服务号码)

网络提供商提供给您的电话号码，使您能够获得特殊的服务，例如语音邮件、目录查询、客户支持和紧急服务。

## SMTP

Simple Mail Transfer Protocol（简单邮件传输协议）的缩写。一种通过 Internet 在计算机之间传输电子邮件的协议。SMTP 定义了计算机之间控制信息的格式以及它们之间发送电子邮件的相互作用过程。

## 快速播放

快速播放是指一种新型服务，它使用户不必下载全部音频或视频文件便可聆听音频或观看视频，因此，内容提供商可以按用户的需要实时通过网络为用户提供音频或视频数据，如电影或新闻等。

## 同步

同步意指手机与 PC 或外部服务器同步 PIM（个人信息管理）数据，如联系人信息、日程表、任务和备忘录等。

## UMTS

Universal Mobile Telephony System（通用移动技术系统）的缩写。UMTS 是采用 3G WCDMA 无线电技术的系统，基于采用 2G 无线电技术的 GSM 系统发展而来。

## USB

Universal Serial Bus（通用串行总线）的缩写。一种总线类型接口，可以在设备和计算机之间提供快速灵活连接。



### USIM

Universal Subscriber Identity Module（通用用户识别模块）的缩写。用于UMTS的IC卡的形状与GSM的SIM卡相同。USIM由网络营运商提供，包括网络营运商的身份和服务级别数据以及用户特定的数据。

### 可视电话

一种通信服务，允许用户面对面地通过64Kbps数据通道进行交谈。实时可视电话服务是WCDMA无线通信系统（该系统在GSM+GPRS技术的基础上发展而来）提供的新型服务。

### 语音邮件

一种计算机化的应答服务，能够在您繁忙时自动应答您的电话，问候对方和记录信息。



 Memo

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

**MEMO** .....

.....





# Memo

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

MEMO

.....

.....