




KU800 | KORISNIČKI PRIRUČNIK



chocolate KU800

 OVAJ KORISNIČKI PRIRUČNIK MOŽE SE
RAZLIKOVATI OD MODELA TELEFONA
OVISNO O SOFTVERU I DAVATELJU
USLUGA.

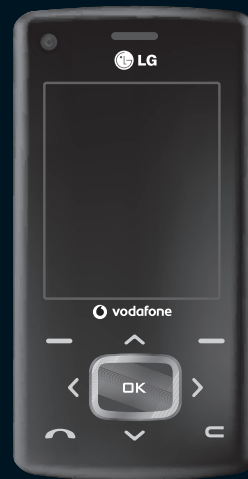

CE 0889

LG Electronics Inc.

P/N : MMBB0222816 (1.0) G

www.lge.com

I KU800 Korisnički priručnik I

- Hrvatski

Ovaj dokument je korisnički priručnik za LG KU800 3G video mobitel. Sva prava na ovaj dokument zadržava LG Electronics. Zabranjeno je kopiranje, mijenjanje i distribuiranje ovog dokumenta bez dozvole LG Electronics-a.



Odlaganje starih aparata

1. Kad nađete ovakav znak s prekriženom kantom za smeće na proizvodu to znači da je proizvod podložan Europskom Pravilniku 2002/96/EC.
2. Svi električni i elektronički aparati moraju se odlagati odvojeno od ostalog komunalnog otpada na za to namijenjena odlagališta koja je odredila vlada ili mjesne vlasti.
3. Pravilno odlaganje starih aparata spriječit će eventualne negativne posljedice za okoliš i ljudsko zdravlje.
4. Za detaljne informacije o odlaganju starih aparata, nazovite gradski ured, centar za odlaganje otpada ili trgovinu u kojoj ste kupili aparat.

Sadržaj

Uvod	5	Unos teksta	28	Vodafone live!	34
Za Vašu sigurnost	6	Mijenjanje načina unosa teksta	29	Naslovnica	
Savjeti za sigurnu i pravilnu uporabu	7	Korištenje T9 načina		Unesite URL	
KU800 Osobine	12	Korištenje ABC načina	30	Unesi adresu	
Dijelovi telefona		Korištenje 123 (brojčanog) načina	31	Nedavne stranice	
Kako koristiti tipke na dodir	16	Korištenje simbola		Linkovi	
Instalacija	18	Pregled funkcija izbornika	32	Spremljene stranice	35
Instaliranje USIM kartice i baterije		Zabava	33	Postavke preglednika	
Punjenje baterije	19	Igre i aplikacije		Profil	
Iskopčavanje punjača	20	Mobilni TV		Sigurnost	
Kako koristiti mikroSD memorijsku karticu	21	Java postavke		Šifriranje znakova	
Uključenje/isključenje mobitela	22			Kontrola pomicanja	
Pristupni kodovi	23			Prikaz slike	36
Podaci na zaslonu	24			Cache	
Standardne funkcije	26			Cookies	
Pozivanje i javljanje				Javascript	
				Reset postavki	
				Glazba	37
				Trenutno svira	
				Sve pjesme	
				Popisi pjesama	
				Glazbena trgovina	

Kamera 38

Kamera

Video kamera 41

Poruke 44

Napravi novo

Poruka

E-mail 45

Ulazne poruke 47

Radne verzije

Odlazno 48

Poslane poruke 49

E-mail

Predlošci 51

Predlošci teksta

Multimedijski predlošci

Postavke poruka

SMS

MMS 52

E-mail 54

Informacije Usluga 56

Servisna poruka

Moje datoteke 57

Slike

Zvukovi 58

Video

Igre i aplikacije 60

Bluetooth podaci

Druge datoteke 61

Vanjska memorija

Rokovnik 62

Alarmi

Kalendar

Zadaci 64

Podsjetnik 65

Kalkulator

Pretvarač 66

Valuta

Površina

Duljina

Masa 67

Temperatura

Volumen

Brzina

Vremenske zone 68

Snimanje glasa

Sadržaj

Imenik 70

Dodaj novo

Popis kontakata

Grupe

Brzo biranja

Servisni brojevi

Vlastiti broj 71

Postavke

Prikaži kontakte od

Prikaz slike/avatara

Sinhroniz. kontakta

Kopiraj sve

Premjesti sve

Izбриši kontakte

Popis poziva 72

Svi pozivi

Odlazni pozivi

Primljeni pozivi

Propušteni pozivi

USIM Tool Kit 73

Video poziv 74

Za vrijeme video poziva

Dolazni video poziv

Postavke 76

Postavke telefona

Profil

Datum i vrijeme 77

Jezik 78

Sigurnost

Ušteda energije 80

Status memorije

Informacije o telefonu

Reset postavki 81

Postavka zaslona

Glavni zaslon

Stil izbornika 82

Font

Pozadinsko svjetlo

Poruka dobrodošlice

Java postavke

Postavke poruka 83

Postavke poziva

Trajanje poziva

Zabrana poziva

Fiksni brojevi za biranje 85

Količina podataka

Troškovi poziva

Preusmjerenja 86

Poziv na čekanju 89

Gov. pošta

Video poziv

Uobičajene postavke

Postavke adresara 90

Povezivanje 91

Bluetooth veza

Sinkronizacija 94

Mreža 96

Pristupne točke 97

Postavke preglednika

Streaming 99


Dial-up mreža

Dodatna oprema 100

Tehnički podaci 101

Kazalo 102

 Čestitamo na kupnji ovog modernog telefona KU800 3G video mobilnog telefona, dizajniranog za rad s najmodernijom digitalnom telekomunikacijskom tehnologijom.

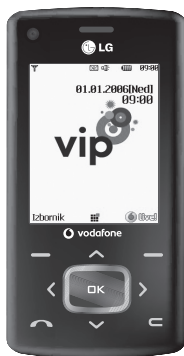

Ovo uputstvo sadrži važne informacije za rad i uporabu ovog telefona. Molimo Vas da pažljivo pročitate uputstvo da postignete optimalne performanse ovog aparata i da ne dođe do štete ili neispravne uporabe telefona. Bilo kakve promjene ili prilagodbe telefona koje nisu izričito naznačene u ovom uputstvu onemogućuju Vam pravo na jamstvo.

Uporaba torbica s magnetnim zaključavanjem kod telefona s kliznim poklopcem pokazala je da se gubi signal i da se telefon gasi.

Za Vašu sigurnost

Pročitajte ove kratke savjete. Ako ih se ne pridržavate, to može biti opasno ili protuzakonito. Detaljne informacije nalaze se u ovom uputstvu.

UPOZORENJE!

- *Isključite svoj mobilni telefon prije ukrcajanja u zrakoplov.*
- *Ne držite telefonsku slušalicu dok vozite.*
- *Ne koristite telefon u blizini punjenja goriva ili kemikalija.*
- *Koristite samo LG baterije i punjače.*
- *Ne smijete dirati telefon mokrim rukama dok se puni. Možete doživjeti strujni udar ili znatno oštetiti telefon.*
- *Držite telefon na sigurnom mjestu van dosega djece. Telefon sadrži male dijelove koji, ako ih se rastavi, mogu predstavljati opasnost od gušenja.*

OPREZ!

- *Ne koristite svoj mobilni telefon u blizini medicinske opreme bez dozvole. Izbjegavajte stavljanje telefona u blizini pacemakera.*
- *Hitni pozivi nisu mogući na svim mobilnim mrežama. Stoga, nikad ne ovisite samo o jednom telefonu za hitne pozive. Provjerite uslugu kod svog lokalnog davatelja usluga.*
- *Koristite samo ORIGINALNU dodatnu opremu da ne biste oštetili telefon.*
- *Svi mobilni telefoni mogu imati smetnje koje utječu na rad. Manje smetnje mogu uzrokovati: televizor, radio, računalo itd.*
- *Baterije treba odlagati na za to odgovarajuća odlagališta.*
- *Ne smijete rastavljati telefon niti bateriju.*

Savjeti za sigurnu i pravilnu uporabu

Pročitajte ove kratke savjete. Ako ih se ne pridržavate, to može biti opasno ili protuzakonito. Detaljne informacije nalaze se u ovom uputstvu.

Certifikat o specifičnoj brzini apsorpcije (SAR)

OVAJ UREĐAJ UDOVOLJAVA MEĐUNARODNIM SMJERNICAMA O IZLOŽENOSTI RADIO VALOVIMA

Vaš mobilni uređaj je radioodašiljač i radioprijamnik. Dizajniran je i proizveden tako da ne prijeđe razinu emitirane energije radiofrekventnog (RF) zračenja koja vrijedi kao međunarodna preporuka (ICNIRP). Ta su ograničenja dio opsežnih smjernica koje utvrđuju dopuštene razine energije RF zračenja za širu populaciju. Smjernice su pripremile neovisne znanstvene organizacije kroz višestruke i iscrpne analize rezultata znanstvenih istraživanja. Smjernice sadrže dovoljno veliku sigurnosnu granicu radi zaštite svih ljudi, neovisno o njihovoj dobi i zdravstvenom stanju. Standard o izloženosti zračenju za

mobilne uređaje koristi mjernu jedinicu poznatu pod nazivom specifična brzina apsorpcije ili SAR. Granica SAR vrijednosti prema međunarodnim smjernicama je 2,0 W/kg*. Ispitivanja specifične brzine apsorpcije provedena su za uobičajene radne položaje pri čemu uređaj emitira s najvešom dopuštenom snagom na svim ispitivanim frekvencijama. Iako je specifična brzina apsorpcije utvrđena uz najvišu razinu potvrđene snage, stvarna specifična brzina apsorpcije pri korištenju uređaja može biti znatno ispod najveće vrijednosti. To je zato što je uređaj dizajniran tako da radi s više razina snage i da za pristup mreži koristi samo onu snagu koja mu je potrebna. Drugim riječima, što ste bliži baznoj stanici, uređaju će biti potrebna manja izlazna snaga. Prije no što model uređaj postane dostupan na tržištu mora se pokazati sukladnost s europskom R&TTE direktivom. Bitan zahtjev koji sadrži ta direktiva je zaštita zdravlja i sigurnost korisnika i svih drugih osoba. Najveća specifična brzina apsorpcije za ovaj uređaj ispitivan u položaju uz uho iznosi 0,418 W/kg. Ovaj uređaj

Savjeti za sigurnu i pravilnu uporabu

udovoljava smjernicama o izloženosti RF zračenju kada se koristi u uobičajenom položaju uz uho ili kada se nalazi minimalno 1,5 cm od tijela. Dodatna oprema koja se koristi za nošenje uređaja uz tijelo - torbica, kopča za remen ili držač telefona - ne bi smjela sadržavati metalne dijelove i trebala bi držati uređaj na minimalnoj udaljenosti od 1,5 cm od tijela. Kako bi slao podatkovne datoteke ili poruke, ovom je uređaju potrebna kvalitetna veza s mrežom. U nekim slučajevima slanje podatkovnih datoteka ili poruka može kasniti sve dok takva veza ne bude dostupna. Do dovršetka slanja obavezno poštujujte gore navedenu udaljenost. Najveća specifična brzina apsorpcije za ovaj uređaj ispitan u položaju uz tijelo iznosi 0,802 W/kg.

* Ograničenje specifične brzine apsorpcije za mobilne uređaje u općoj uporabi iznosi 2,0 W/kg na prosječno deset grama tjelesnog tkiva. Ove smjernice sadrže dovoljno veliku sigurnosnu granicu radi dodatne zaštite ljudi, a uzimaju u obzir i moguće varijacije u mjerenjima. Specifična

brzina apsorpcije može odstupati zbog različitih nacionalnih propisa o sastavljanju izvješća, kao i zbog frekvencije mreže. Pojednosti o specifičnoj brzini apsorpcije u ostalim regijama potražite u informacijama o proizvodu na www.lgmobile.com.

Čuvanje i održavanje proizvoda

Upozorenje!

Koristite samo baterije, punjač i dodatnu opremu dozvoljenu za korištenje s određenim modelom telefona. Korištenje drugih vrsta može osporiti svaku potvrdu i jamstvo ovog telefona, a može biti i opasno.

- ▶ Ne rastavljajte aparat. Odnosite ga ovlaštenom serviseru kad se za to ukaže potreba.
- ▶ Držite ga podalje od električnih uređaja kao što su televizor, radio ili računalo.
- ▶ Ne držite aparat u blizini izvora topline poput radijatora ili peći
- ▶ Ne držite aparat blizu mikrovalne pećnice, baterija može eksplodirati.

- ▶ Ne smije Vam pasti.
- ▶ Nemojte ga tresti i udarati.
- ▶ Površina telefona se može oštetiti ako ga prekrijete ili stavite u omot od vinila.
- ▶ Koristite suhu tkaninu za čišćenje površine proizvoda. (Ne koristite otapala poput benzina, razrjeđivača ili alkohola.)
- ▶ Ne izlažite aparat prekomjernom dimu i prašini.
- ▶ Ne držite telefon u blizini kreditnih kartica ili putnih karata. Mogu se oštetiti podaci na magnetskoj traci.
- ▶ Ne lupkajte po zaslonu oštrim predmetom, jer bi se telefon mogao oštetiti.
- ▶ Ne izlažite telefon tekućinama i vlazi.
- ▶ Oprezno koristite dodatnu opremu i držite se uputa. Ne dirajte nepotrebno antenu.
- ▶ Molimo Vas da izvadite USB kabel prije uključanja uređaja.

Učinkoviti rad telefona

Za najbolji rad uz minimalnu potrošnju energije.

- ▶ Nemojte držati antenu dok razgovarate. Ako ju držite to može utjecati na kvalitetu razgovora, a može značiti i da telefon radi većom snagom nego što je potrebno i skraćuje vrijeme trajanja baterije.

Elektronski uređaji

Svi mobilni telefoni mogu imati smetnje koje utječu na rad.

- ▶ Ne koristite svoj mobilni telefon u blizini medicinske opreme bez dozvole. Izbjegavajte stavljanje telefona u blizini pacemakera (u gornji džep odijela ili košulje).
- ▶ Neka pomagala za sluh mogu također imati smetnje zbog mobilnog telefona.
- ▶ Manje smetnje mogu uzrokovati: televizor, radio, računalo itd.

Savjeti za sigurnu i pravilnu uporabu

Sigurnost u vožnji

Provjerite zakone i pravila korištenja mobilnog telefona u područjima gdje se vozite.

- ▶ Ne držite telefonsku slušalicu dok vozite.
- ▶ Svu pozornost posvetite vožnji.
- ▶ Koristite handsfree opremu, ako je imate.
- ▶ Stanite uz cestu i parkirajte se prije odgovaranja ili upućivanja poziva ako uvjeti vožnje to zahtijevaju.
- ▶ RF energija može utjecati na elektronske sustave u vašem vozilu, primjerice, na radio, sigurnosnu opremu.
- ▶ Ako je Vaše vozilo opremljeno zračnim jastucima, pazite da ih ne zakrčite instaliranom ili prenosivom opremom. Možete uzrokovati ozbiljne ozljede zbog nepravilnog rada.

Ako slušate glazbu dok ste vani, pazite da ne bude preglasna tako da ne čujete što se događa oko Vas. To je naročito važno kad prelazite ulicu.

Kako izbjeći oštećenje sluha

Oštećenje sluha se može dogoditi ako duže vrijeme slušate jako glasne zvukove. Preporuča se da ne palite i gasite telefon uz uho. Preporuča se da glasnoća glazbe i poziva bude na razumnoj mjeri.

Područja miniranja

Nemojte koristiti telefon gdje je miniranje u tijeku. Pratite ograničenja i držite se pravila i zakona.

Moguća eksplozivna područja

- ▶ Ne koristite telefon u blizini punjenja goriva ili kemikalija.
- ▶ Ne prevozite ili ne držite zapaljivi plin, tekućinu ili eksplozive u dijelu vozila u kojem držite svoj mobilni telefon ili dodatnu opremu.

U zrakoplovu

Bežični uređaji mogu uzrokovati smetnje u zrakoplovu.

- ▶ Isključite svoj mobilni telefon prije ukrcajanja u zrakoplov.
- ▶ Na zemlji, pratite upute zrakoplovne tvrtke u vezi korištenja mobilnog telefona.

Djeca

Držite telefon na sigurnom mjestu van doseg djece. Telefon sadrži male dijelove koji, ako ih se rastavi, mogu predstavljati opasnost od gušenja.

Hitni pozivi

Hitni pozivi nisu mogući na svim mobilnim mrežama. Stoga, nikad ne ovisite samo o jednom telefonu za hitne pozive. Provjerite uslugu kod svog lokalnog davatelja usluga.

Informacije i rukovanje baterijom

- ▶ Ne trebate u potpunosti isprazniti bateriju da biste ju ponovo napunili. Za

razliku od drugih baterija, nema utjecaja na memoriju koji bi mogao dovesti u pitanje rad baterije.

- ▶ Koristite samo LG baterije i punjače. LG punjači izrađeni su da produže trajanje baterije
- ▶ Ne rastavljajte bateriju i pazite da ne uzrokuje kratki spoj.
- ▶ Pazite da su metalni kontakti na bateriji čisti.
- ▶ Zamijenite bateriju kada posve oslabi i ne pruža optimalni rad.
- ▶ Napunite bateriju ako ju se dugo nije koristilo kako bi se povećala iskoristivost.
- ▶ Ne izlažite punjač baterije direktnom svjetlu, i nemojte ga koristiti u područjima velike vlage, poput kupaonice.
- ▶ Ne držite bateriju u hladnim ili vrućim prostorijama, jer postoji mogućnost smanjenja učinkovitosti baterije.

KU800 Osobine

Dijelovi telefona Otvoreni poklopac

Zvučnik

Leća unutarnje kamere

LCD zaslon

 
- ▶ **Gore:** Ikone za jačinu signala, jačinu baterije i raznih drugih funkcija
- ▶ **Dolje:** Oznake za Soft tipku

Navigacijske tipke

- ▶ **U stanju čekanja:**
 - ▶ Lista profil
 - ▶ Popis kontakata
 - ▶ Poruke
 - ▶ Kalendar
- ▶ **U izborniku:** Mijenja izbornike.

Tipke za slova i brojeve

- ▶ **U stanju čekanja:** unos brojeva za pozivanje. Držite duže:
 - ▶ **0** - Za međunar. pozive.
 - ▶ **1** - Za govornu poštu.
 - ▶ **2** do **9** - za brzo biranje.
- ▶ **Kod uređivanja:** unos brojeva i slova.

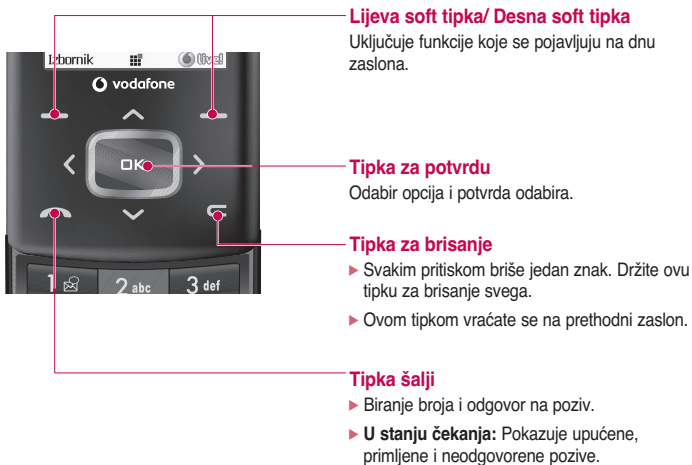

KU800 Osobine

KU800 Osobine

Pogled na lijevu stranu

**Priključak za Slušalicu/
Punjač /Kabel** 

Napomena

- ▶ Prije nego uključujete USB kabel telefon treba biti uključen i ne zauzet nekom funkcijom.

Sa strane



- ▶ **U stanju čekanja (otvoren):** Namještanje glasnoće tipki
- ▶ **U stanju čekanja (zatvoren):** Uključuje LCD svjetlo.
- ▶ **U izborniku:** Gore i dolje.
- ▶ **Tijekom poziva:** Namještanje glasnoće aparata.

Napomena

- ▶ Za zaštitu sluha, kad je otvoren maksimalna glasnoća je 3.

**Otvor za mikro SD
memorijšku karticu**

Pogled na desnu stranu

Kraj



- ▶ Uklj./isklj. (držati)
- ▶ Kraj ili odbijanje poziva.

Izbornik



- ▶ Otvara glavni izbornik.
- ▶ Otvara zadatke (Dugo).

Tipka - glazba



- ▶ Ulaz u glazbeni izbornik. Ide na MP3 player (za vrijeme slušanja glazbe).

Stražnja strana



Kako koristiti tipke na dodir

- ▶ Tipke na poklopcu su dodirne tipke.
- ▶ Obavezno pročitajte "Oprez s tipkama na dodir" prije nego ih koristite.

Oprez s tipkama na dodir

1. Ruke moraju biti čiste i suhe.
 - Obrišite ruke i tipke u vlažnoj okolini.
2. Tipke na dodir se ne trebaju jako pritiskati kako bi normalno radile. Ne



Slika direktnog ulaza

Napomena: Ovu funkciju možete uključiti u izborniku postavki zaslona [izbornik #.2.1.1].

Dodirna tipkovnica

smijete mobitel izlagati jakim udarcima, jer mogu oštetiti njihove senzore.

3. Vrhom prsta dotaknete tipku koju želite, pazite da ne dodirnete tipke za druge funkcije.
4. Kad su ugašena svjetla početnog zaslona i dodirnih tipki, pritisak na ovu tipku neće upaliti svjetlo na početnom zaslonu. Pritisnite **1** i svjetlo početnog zaslona će se upaliti (dodirne tipke ne rade kad su svjetla tih tipki ugašena).
5. Ako je poklopac zatvoren i funkcija zaštite ovih tipki je uključena, za vrijeme poziva automatski se uključuje funkcija zaključavanja touch tipki. (Za detalje, vidi "Status dodirnih tipki kod uporabe mobitela.")
6. Tipke možda neće dobro raditi ako je mobitel u torbici ili su pokrivena plastičnim poklopcem. Isto vrijedi i za slučaj da nosite rukavice.

7. Metal i druge vodiče držite dalje od ovih tipki, jer ako ih dodiru doći će do greške.


Status dodirnih tipki kod korištenja mobitela

Kad je poklopac zatvoren, da ne bi došlo do neželjenih funkcija tipki, za vrijeme korištenja telefona ili razgovora, Funkcija zaštite se automatski uključuje. (U tom slučaju, dodirne tipke neće raditi iako ih pritisnete)

1. Kad je poklopac zatvoren

- Kad je poklopac zatvoren, funkcija zaključavanja se automatski uključuje. (Otvaranje poklopca će to automatski isključiti.)
- Za isključenje zaštite dok je poklopac zatvoren, pritisnite tipku za glasnoću dva puta.
- **Nakon isključenja zaštite**, ako ne pritisnete niti jednu tipku određeno vrijeme (3 sekunde), funkcija zaštite se ponovno uključuje.

2. Tijekom poziva

- Za vrijeme poziva, bez obzira u kojem položaju je poklopac, funkcija zaštite se automatski uključuje.
- Za isključenje zaštite, pritisnite bilo koju tipku osim tipke .
- Nakon što ste isključili zaključavanje tipki, ako ne pritisnete niti jednu tipku određeno vrijeme (3 sekunde), funkcija zaštite se ponovno uključuje.

Napomena

- ▶ Da bi korisniku bilo jednostavnije, slika dodirne tipke s pripadajućim funkcijama prikazan je na početnom zaslonu kad kupite proizvod.

Instalacija

Instalacija USIM kartice i baterije

1. Instalacija USIM kartice.

USIM kartica ima Vaš broj, detalje usluga i kontakata i mora se umetnuti u telefon.

Ako izvadite USIM karticu ne možete koristiti telefon (osim za hitne pozive) dok se važeća kartica ponovno ne stavi .

Uvijek prvo iskopčajte punjač i drugu opremu prije stavljanja i vađenja USIM kartice. Stavite USIM karticu u utor.

Gurnite USIM karticu u njeno ležište.

Provjerite da li je USIM kartica pravilno stavljena i da kontakt zlatne boje na kartici bude okrenut prema dolje. Za vađenje USIM kartice, lagano pritisnite prema dolje i gurnite ju u suprotnom smjeru.



Stavljanje USIM kartice



Vađenje USIM kartice

Napomena

► Metalni kontakti na kartici se mogu lako oštetiti ako se zagrebu. Pažljivo rukujte USIM karticom. Slijedite uputstva koja ste dobili uz USIM karticu.

2. Instalacija baterije

Povucite bateriju prema gore dok ne sjedne na svoje mjesto.



Izvadite bateriju

Isključite telefon (Ako ostane uključen možete izgubiti pohranjene brojeve i poruke.)

Pritisnite ovu tipku da otpustite bateriju, zatim povucite bateriju prema dolje.



Punjenje baterije

Prije nego priključite punjač u telefon, morate umetnuti bateriju.



1. Umetnite utikač punjača sa strelicom prema sebi kako je prikazano na slici u utičnicu na lijevoj strani telefona dok ne sjedne na mjesto.
2. Drugi kraj punjača uključite u utičnicu na zidu.



Napomena

- Koristite samo originalni punjač.

Instalacija

3. Pomični stupci na ikoni baterije prestaju se micati kad je baterija puna.
4. Pazite da baterija bude do kraja puna prije nego koristite telefon po prvi puta.

Oprez!

- *Ne gurajte konektor punjača "na silu", jer to može oštetiti telefon ili punjač.*
- *Ukoliko koristite punjač izvan svoje zemlje, koristite odgovarajuće adaptere kako bi punjenje mobitela bilo ispravno.*
- *Za vrijeme punjenja ne vadite bateriju niti USIM karticu.*

Upozorenje!

- *Izvadite punjač iz izvora napajanja za vrijeme grmljavine da ne dođe do požara ili el. udara.*
- *Pazite da nikakvi oštri predmeti kao što su: zubi životinja, nokti, itd. ne dođu u kontakt s baterijom. Postoji opasnost od požara.*
- *Ne pozivajte i ne odgovarajte na poziv za vrijeme punjenja telefona, jer može doći do kratkog spoja i/ili strujnog udara i požara.*

Iskopčavanje punjača

Iskopčajte punjač iz telefona pritiskom na obje bočne tipke na konektoru kao što je prikazano na slici.



Kako koristiti mikroSD memorijsku karticu



<MikroSD memorijska kartica>

<Kako umetnuti mikroSD memorijsku karticu>

1. Isključite telefon. Stavljanje ili vađenje mikroSD kartice dok je telefon uključen može oštetiti pohranjene podatke u memoriji kartice.
2. Podignite plastični poklopac otvora za mikroSD karticu.



3. Stavite memorijsku karticu u otvor. Zlatni kontakti moraju biti na stražnjoj strani mikroSD kartice. Ne smijete prejako gurati karticu. Ako ne ulazi bez poteškoća, možda ju pokušavate ugurati na krivu stranu ili se u otvoru nešto nalazi.
4. Kad ste ju stavili gurnite dok ne čujete klik što znači da je sjela na mjesto.



5. Zatvorite plastični poklopac.
6. To za vađenje memorijske kartice isključite telefon, otvorite otvor i gurnite mikroSD da ju otključate. Pažljivo izvadite memorijsku karticu.

Važno:

- ▶ Izbjegavajte Flash Memory Card kad je baterija slaba.
- ▶ Kad pišete na karticu, pričekajte da postupak bude završen prije nego izvadite karticu.
- ▶ Kartica je napravljena tako da samo jedna strana može ući .
- ▶ Ne smijete savijati karticu niti ju na sliku gurati u otvor.
- ▶ Ne smijete stavljati nikakve druge kartice osim mikroSD.
- ▶ Ako je microSD kartica bila formatirana koristeći FAT32, tada formatirajte ponovno ali sa FAT16.

Za detalje o mikroSD kartici, pogledajte uputstvo za memorijsku karticu.

Formatiranje memorijske kartice

Prije uporabe potrebno je formatirati karticu. Nakon umetanja kartice, odaberite **Izbornik > Postavke > Postavke telefona > Status memorije > Formatiraj vanjsku memoriju**, pritisnite **OK**. To smijete učiniti

tek nakon što str umetnuli karticu po prvi puta. Bit će kreirane razne mape za različite informacije.

Uključenje/isključenje mobitela

Uključenje

Provjerite da li su USIM kartica u mobitelu i baterija puni. Pritisnite i držite **OK** dok se ne uključi. Unesite USIM PIN, koji ste dobili uz USIM karticu, ako je uključen zahtjev za PIN-om. (Napomena: Vidi str. 79) Za nekoliko sekundi bit ćete registrirani na mreži.

Isključenje mobitela

Pritisnite i držite **OK** dok se ne isključi. Može potrajati nekoliko sekundi dok se telefon ne ugasi. Ne smijete ga ponovno uključivati u tom periodu.

Pristupni kodovi

Možete koristiti PIN kako je opisano da ne bi došlo do neovlaštene uporabe Vašeg telefona. Pristupni PIN (osim PUK i PUK2) se može promijeniti u izborniku Promijeni karakteristike pin-a [Izbornik #.1.4.3].

PIN kod (4 do 8 znamenki)

PIN (Personal Identification Number) štiti USIM karticu od neovlaštene uporabe. PIN dobijete sa USIM karticom. Ako je postavljen zahtjev za PIN-om, telefon će tražiti PIN svaki puta kad ga uključite. Kad se zahtjev za PIN-om isključi, telefon se direktno spaja na mrežu bez PIN-a.

PIN2 kod (4 do 8 znamenke)

PIN2, koji dobijete s nekim USIM karticama, potreban je za funkcije kao što je Fiksni birani broj. Ove funkcije su dostupne ako ih podržava USIM kartica.

PUK (4 do 8 znamenki)

PUK (PIN Unblocking Key) je potreban za zaključavanje i otključavanje PIN-a. PUK možete dobiti s USIM karticom. Ako nije, nazovite operatera da dobijete PIN. Ako ste izgubili PIN, nazovite operatera.

PUK2 (4 do 8 znamenki)


PUK2, koji se dobije s nekim USIM karticama, potreban je za zaključavanje i otključavanje PIN2. Ako ste izgubili PIN, nazovite operatera.

Sigurnosni kod (4 do 8 znamenki)

Spriječava neovlašteno korištenje telefona. Sigurnosna šifra je '0000' i potreban je za brisanje stavki u telefonu i vraćanje na tvorničke postavke.

Podaci na zaslonu


Zaslon kad nema USIM kartice

Početni zaslon kad USIM kartica nije instalirana ili instalirana kartica nije valjan. Na ovom zaslonu možete zvati samo hitne pozive i isključiti telefon. Za isključenje pritisnite i držite  nekoliko sekundi.

Izgled zaslona

Ako USIM kartica nije instalirana, pojavljuje se animacija koja kaže da trebate instalirati USIM karticu. Ako je USIM kartica nevažeća, pojavljuje se animacija da je USIM kartica zaključana.

Funkcija hitnog poziva

Na zaslonu je desna soft tipka prikazan kao "Hitno". Pritisnite desnu soft tipku ili nazovite broj za hitne slučajeve pomoću brojčanih tipki i pritisnite tipku  za hitni poziv.

Početni zaslon

Početni zaslon se pojavi ako USIM kartica nije valjana, a telefon je uključen.


Izgled zaslona

Početni zaslon se sastoji od naziva operatera, indikatora, datuma i sata na pozadini. Pozadinu možete promijeniti u izborniku Postavke zaslona.

Brojčani zaslon

Pojavljuje se ako pritisnete neki broj na početnom zaslonu.


Izgled zaslona

Sastoji se od indikatora, biranog broja i soft izbornika. Indikatori su isti kao i kod početnog zaslona. Veličinu i boju fonta za biranje brojeva možete odrediti u izborniku postavki zaslona. Možete nazvati birani broj koji tipkate pritiskom na tipku .

Soft tipka

Možete ih koristiti za nekoliko funkcija dok birate neki broj. Pomoću lijeve soft tipke, možete zvati video poziv, slati poruku na taj broj, spremite broj u Kontakte.

Zaključani zaslon

Kad je odabran zaključani zaslon, možete zvati samo hitni broj, otključati telefon i isključiti telefon. Telefon možete isključiti ako pritisnete i držite  nekoliko sekundi.


Izgled zaslona

Izgled zaključanog zaslona je isti kao i početni, osim što se pojavljuje poruka da je zaslon zaključan, a ne početni.

Funkcija hitnog poziva

Možete nazvati pomoću desne soft tipke. Možete zvati samo brojeve za hitne slučajeve.

Funkcija otključavanja

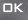Ako pritisnete , pojavljuje se dodatni zaslon koji traži unos sigurnosne šifre za otključavanje telefona. Konfigurira se u **Promijeni kod** (#. Postavke > 1. Postavke

telefona > 4. Zaštita > 3. Promijeni kodove). Ako utipkate pogrešan sigurnosni kod, telefon ostaje zaključan. Ako utipkate ispravan sigurnosni kod, telefon će biti otključan i pojavljuje se početni zaslon. Ako ste telefon isključili u Statusu zaključanja, telefon ostaje zaključan kad ga uključite.





Šifra zabrane

Ova usluga onemogućuje pozive u određenim situacijama. Možete to učiniti preko funkcije **Zabrana poziva** (#. Postavke > 5. Postavke poziva > 2. Zabrana poziva). Potrebna je lozinka zabrane za ovu funkciju. Lozinku dobijete kod svog operatera kad se pretplatite na ovu uslugu. Dok je ova usluga aktivna čuje se poruka da poziv nije spojen zbog zabrane poziva.


Standardne funkcije

Pozivanje i javljanje





Glasovni poziv

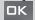1. Unesite broj zajedno s pozivnim brojem.
 - ▶ Za brisanje broja pritisnite .
 - Za brisanje svega pritisnite i držite .
2. Tipka  za pozivanje.
3. Tipka  za završetak poziva, ili poklopite telefon.

Napomena

- ▶ Za uključenje zvučnika, uključite soft tipke i pritisnite .



Pozivanje iz Popisa poziva

1. Pritisnite tipku  i pojavit će se posljednji primljeni, birani i neodgovoreni pozivi.
2. Odaberite broj tipkama  / .
3. Tipka  služi za pozivanje.

Video poziv


Video poziv je moguć u području pokrivenom 3G uslugom. Ako pozvani

korisnik ima 3G video telefon u području pokrivenom 3G uslugom, poziv će biti uspostavljen. Isto tako možete odgovoriti na takav poziv. Učinite sljedeće.

1. Unesite broj pomoću tipkovnice, ili odaberite broj iz popisa biranih/primljenih poziva.
 - ▶ Za ispravljanje grešaka, pritisnite  kratko da izbrisete posljednji broj, ili držite  za brisanje svih brojeva.
2. Ako ne želite koristiti zvučnik, provjerite da li je slušalica priključena.
3. Za uključenje video funkcije, pritisnite lijevu soft tipku [Opcije] i odaberite **Video poziv**.
 - ▶ Bit ćete obaviješteni da morate zatvoriti sve druge aplikacije kako bi ostvarili taj poziv.




Napomena

- ▶ Potrebno je neko vrijeme za spajanje video poziva. Budite strpljivi. Vrijeme spajanja ovisi i o tome koliko treba osobi da se javi. Za vrijeme spajanja, vidjet ćete svoju sliku; kad druga strana odgovori, pojavit će se njegova slika.



4. Popravite položaj kamere ako je potrebno.
5. Tipka  prekida poziv ili spustite poklopac telefona.

Glasovni/video poziv iz Kontakata



Jednostavno je pozvati nekoga koga ste spremili u Kontakte.

1. Tipka  za ulaz u popis kontakata.
2. Označite željeni kontakt.
3. Tipka  za glasovni poziv. Pritisnite lijevu soft tipku i odaberite **Video poziv**.
4. Tipka  za kraj razgovora.

Međunarodni pozivi

1. Držite tipku  za međunarodni pozivni broj. Znak '+'stoji ispred međunarodnog pozivnog broja.
2. Unesite pozivni broj za državu, regiju i telefonski broj.
3. Tipka .

Namještanje glasnoće

Tijekom poziva, ako želite popraviti glasnoću u telefonu, koristite tipku  na lijevoj strani telefona. Dok ne traje poziv, možete odrediti glasnoću tipkom .




Odgovaranje na poziv


Kad imate poziv, telefon zvoni, na zaslonu se pojavljuju treperave ikone. Ako je osoba identificirana, pojavljuje se broj telefona (ili ime koje ste pohranili u Kontaktima).

Standardne funkcije


1. Otvorite poklopac da se javite na poziv.

Napomena


- ▶ Za odbijanje dolaznog poziva, pritisnite tipku  ili dva puta desnu soft tipku.
- ▶ Ako ste odabrali tipku Šalji za odgovaranje (Izbornik #.5.0.4), možete se javiti tipkom  kad otvorite poklopac.
- ▶ Ako ste odabrali Pritisni bilo koju tipku kao način odgovora, možete pritisnuti sve osim .

2. Završite razgovor zatvaranjem poklopca ili tipkom .


Napomena

- ▶ Možete odgovoriti na poziv iako se trenutno nalazite u Kontaktima ili nekom drugom izborniku.
- ▶ Kad je priključena pripadajuća slušalica, možete se javiti i tipkom za slušalicu. Za odbijanje dolaznog poziva pritisnite tipku .
- ▶ Možete utišati zvono poziva ako pritisnete i držite tipku sa stane za glasnoću.

Brzo uključenje vibracije

Samo vibraciju možete uključiti pritiskom i držanjem tipke  kad ste otvorili telefon.

Jačina signala

Jačinu signala možete provjeriti pomoću indikatora signala () na LCD zaslonu. Jačina signala može varirati, naročito u zgradi. Ako se približite prozoru možete poboljšati prijem.

Unos teksta

Slova i brojeve unosite pomoću tipkovnice.

Na primjer, spremanje imena u kontakte, pisanje poruke, kreiranje pozdrava, rasporeda u kalendaru zahtjeva unos teksta. Moguće su sljedeće metode unosa teksta.


T9 način

Ovaj način omogućava da unosite riječi samo jednim stiskom na tipku za jedno slovo. Svaka tipka na tipkovnici sadrži više od jednog slova. T9 automatski uspoređuje vaše stiskanje po tipkama s ugrađenim rječnikom kako bi odredio točnu riječ, time vam omogućava manje stiskanja po tipkama od tradicionalnog ABC unosa. T9 se katkada naziva i predvidivim tekstom.


ABC način

Ovim načinom unosite slova stišćući jednom, dvaput, triput ili četiri put tipku s označenim željenim slovom dok se to slovo ne pojavi.

123 način (Brojčani način)



Unosite brojeve jednim pritiskom na brojčanu tipku. Za prelazak na 123 način iz tekstualnog načina, pritisnite tipku  dok se 123 način ne prikaže.

Mijenjanje načina unosa teksta


1. Kad ste u polju koje dopušta unos slova, primijetit ćete indikator načina unosa u gornjem desnom kutu LCD zaslona.
2. Tipka  služi za izmjenjivanje T9Abc, T9abc, Abc, abc i 123 unosa.

Korištenje T9 načina

T9 predvidivi tekst omogućava Vam da jednostavno unosite riječi s minimalnim brojem tiskanja tipki. Kako pritisnete neku tipku, telefon prikazuje znakove koje misli da Vi upisujete na osnovu ugrađenog rječnika.

1. Kad ste u T9 predvidivom unosu teksta, započnite unos neke riječi pritiskom na tipke od  do . Pritisnite po jednu tipku za slovo.
 - ▶ Riječ se mijenja kako upisujete slova. Zanimarite ono što se vidi na zaslonu dok ne ispišete riječ do kraja.


Standardne funkcije



- ▶ Ako je riječ netočna i nakon što ste ispisali sva slova, još jednom pritisnite tipku  kako biste vidjeli izbor ostalih mogućih riječi.

Primjer

Pritisnite     da napišete riječ **Gone**.

Pritisnite  da napišete riječ **Home**.

- ▶ Ako željene riječi nema u danom izboru riječi, dodajte ju koristeći ABC način.
2. Unesite cijelu riječ prije uređenja ili brisanja nekom tipkom.
 3. Završite ispisivanje riječi razmakom pritiskom na tipku .

Za brisanje slova pritisnite . Pritisnite i držite tipku  za brisanje cijele riječi odjednom.



Korištenje ABC načina

Tipke od  do  služe za unos teksta.

1. Pritisnite tipku na kojoj je označeno željeno slovo:

- ▶ Jednom za prvo slovo.
- ▶ Dva puta za drugo slovo.
- ▶ I tako dalje.

2. Za razmak pritisnite tipku .

Za brisanje slova, pritisnite tipku . Pritisnite i držite tipku  za brisanje svega na zaslonu.

Pogledajte tablicu za više informacija o mogućim znakovima na tipkovnici.

Tipka	Znakovi po redu prikaza	
	Mala slova	Velika slova
1	., ? ! " ' - () @ / : _	., ? ! " ' - () @ / : _
2	abc čć2ááääââçâääæ	ABCČĆ2ÁÁÄÄÂÂÇÁÄÄÆ
3	d đ e f 3 é ê ë è ê	D Đ E F 3 É Ê Ë È Ê
4	g h i 4 í î ï	G H I 4 Í Î Ï
5	j k l 5 £	J K L 5 £
6	m n o 6 ó ô õ ñ ò ó ô ø æ	M N O 6 Ó Ô Õ Ñ Ò Ó Ô Ø Æ
7	p q r s š 7 ß \$	P Q R S Š 7 ß \$
8	t u v 8 ú û ü ù ù	T U V 8 Ú Û Ü Ù ù
9	w x y z ž 9	W X Y Z Ž 9
0	Razmak, 0	Razmak, 0

Napomena

- ▶ Znakovi pridruženi tipkama i njihov redoslijed pojavljivanja ovise o jeziku koji ste odabrali za unos. Tablica prikazuje znakove za engleski jezik.

Korištenje 123 (brojčanog) načina

123 način omogućuje unos brojeva u SMS poruku (na primjer, telefonski broj).

Pritisnite tipke na kojima su željeni brojevi prije ručnog prebacivanja na željeni način unosa.

Korištenje simbola

Možete unosi razne simbole i specijalne znakove. Za nos simbola, odaberite **Opcije >Umetni > Simbol**. Pomoću navigacijskih i brojčanih tipki odaberite željeni simbol i pritisnite tipku .

Pregled funkcija izbornika

Možete ga otvoriti pritiskom na tipku **OK** na početnom zaslonu. Dođite na željenu stavku, tipkom **OK** idete na podizbornik.

Iz glavnog izbornika možete izravno doći u podizbornik ako pritisnete brojčane tipke prikazane niže dolje. Glavni izbornik sastoji se od sljedećih izbornika i podizbornika.

1. Zabava

- 1.1 Igre i aplikacije
- 1.2 Mobilni TV
- 1.3 Java postavke

2. Vodafone live!

- 2.1 Naslovnica
- 2.2 Unesite URL
- 2.3 Linkovi
- 2.4 Spremljene stranice
- 2.5 Postavke preglednika
- *2.6 Mobilni TV
- *2.7 Glazba
- *2.8 Igre
- *2.9 Melodije
- *2.0 Slike
- *2.* Vijesti
- *2.# Sport

3. Glazba

- 3.1 Trenutno svira
- 3.2 Sve pjesme
- 3.3 Popisi pjesama
- 3.4 Glazbena trgovina

4. Kamera

- 4.1 Kamera
- 4.2 Video kamera

5. Poruke

- 5.1 Napravi novo
- 5.2 Ulazne poruke
- 5.3 Radne verzije
- 5.4 Odlazno
- 5.5 Poslane poruke
- 5.6 E-mail
- 5.7 Predlošci
- 5.8 Postavke poruka

6. Moje datoteke

- 6.1 Slike
- 6.2 Zvukovi
- 6.3 Video
- 6.4 Igre i aplikacije
- 6.5 Bluetooth podaci
- 6.6 Druge datoteke
- 6.7 Vanjska memorija

7. Rokovnik

- 7.1 Alarmi
- 7.2 Kalendar
- 7.3 Zadaci
- 7.4 Podsjetnik
- 7.5 Kalkulator
- 7.6 Pretvarač
- 7.7 Vremenske zone
- 7.8 Snimanje glasa

8. Imenik

- 8.1 Dodaj novo
- 8.2 Popis kontakata
- 8.3 Grupe
- 8.4 Brzo biranja
- 8.5 Servisni brojevi
- 8.6 Vlastiti broj
- 8.7 Postavke

9. Popis poziva

- 9.1 Svi pozivi
- 9.2 Odlazni pozivi
- 9.3 Primljeni pozivi
- 9.4 Propušteni pozivi

*. USIM Tool Kit /Alarmi (ako SAT nije podržano u USIM)

0. Video poziv

#. Postavke

- #.1 Postavke telefona
- #.2 Postavke zaslona
- #.3 Java postavke
- #.4 Postavke poruka
- #.5 Postavke poziva
- #.6 Postavke adresara
- #.7 Povezivanje

Zabava [Izbornik 1]

Igre i aplikacije

Izbornik 1.1

Možete jednostavno usnimiti igre i druge aplikacije. Postoje dvije pretpostavljene mape, igre i aplikacije. Svaka mapa ima link za skidanje igri i aplikacija. Za online usluge morat ćete dodatno platiti. Možete kreirati mapu pomoću lijeve soft tipke [Opcije].

Mobilni TV

Izbornik 1.2

Ovim izbornikom možete ući u Mobile TV.

Java postavke

Izbornik 1.3

Uključenje profila

1. Pomaknite kursor na profil koji želite uključiti.
2. Tipka odaberite Uključi u izborniku **Opcije**.

Dodavanje novog profila

1. Odaberite **Dodaj novo** u izborniku **Opcije**. Potrebno je odrediti ove parametre.

Naziv usluge	Unesite naziv računa za profil.
Način spajanja	Odaberite načine spajanja s postojećeg popisa. (Pretpostavljeno je TCP s Proxy)
IP adresa	Unesite WAP Gateway IP adresu koju ste dobili od operatora (npr95. 115. 025. 129)
Ulaz proxy poslužitelja	Detalji priključka dobivenih od operatora ovisno o načinu spajanja.
Pristupna točka	Odaberite ulaz s postojećeg popisa. (Za detalje o dodavanju ili uređivanju novih ulaza, vidi str. 97.)

2. Pritisnite desnu soft tipku [Gotovo] za spremanje eventualnih promjena.

Možete urediti i izbrisati profil ako odaberete **Uredi** ili **Izbr.** u izborniku **Opcije**.

Vodafone live! [Izbornik 2]

Naslovnica

Izbornik 2.1

Možete pokrenuti web pretraživači doći na početnu stranicu usluge koju pruža Vodafone.

- ▶ Možete direktno ući u Vodafone live! Pritiskom na desnu soft tipku na početnom zaslonu.



Unesite URL

Izbornik 2.2

Unesi adresu

(Izbornik 2.2.1)

Možete ručno upisati URL adresu i ući na pripadajuću web stranicu.

- ▶ Za unos simbola, pritisnite  ili desnu soft tipku [Simbol] za prikaz tablice simbola.
- ▶ Za promjenu načina unosa je .

Nedavne stranice

(Izbornik 2.2.2)

Pokazuje stranice koje ste zadnje pretraživali.

Linkovi

Izbornik 2.3

Možete spremiti često posjećivane stranice i URL adrese. **Otvori**, **Pošalji**, **D.novi**, **Uredi**, **Označi/Poništi ozn.** ili **izbriši**.

Su operacije koje možete učiniti s Bilješkama. Nekoliko pretpostavljenih URLadresa je već pohranjeno.

Dodavanje nove bilješke

1. Pritisnite desnu soft tipku [Dodaj].
2. Unesite naslov i pripadajuću URL informaciju.
3. Pritisnite desnu soft tipku [Gotovo] za spremanje.

Spajanje na željenu bilješku

Tipka  ili odaberite **Otvori** u izborniku **Opcije**.

Slanje bilješki drugim osobama

Odaberite šalji u izborniku **Opcije**. Možete ju poslati preko **Poruka** ili **E-mail**.

Brisanje bilješke

Odaberite Izbriši u izborniku **Opcije**. Možete izbrisati nekoliko bilješki s opcijom

Označi/Poništi ozn.

Spremljene stranice

Izbornik 2.4

Telefon može spremiti stranice na zaslon. I to najviše 20 stranica.


Postavke preglednika

Izbornik 2.5

Možete promijeniti postavke zaslona, zaštite i certifikata.

Profil

(Izbornik 2.5.1)

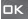Odaberite odgovarajući profil pomoću tipke . To će aktivirati pretraživač.

Sigurnost

(Izbornik 2.5.2)

Potvrde

Ako su spremljeni, ovdje možete naći popis root/ca certifikata potrebnih za WTLS/TLS. Certifikati se mogu vidjeti na popisu.

Sesija izbrisana

Zaštićeni podaci neke posjete (WTLS/TLS) mogu se izbrisati ovom opcijom kako bi se omogućila nova sigurna posjeta.

Šifriranje znakova (Izbornik 2.5.3)

Odaberite jedne od sljedećih pretpostavljenih znakova pretraživača:

Automatski, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

Kontrola pomicanja

(Izbornik 2.5.4)

Odaberite brzinu i broj redova. Odaberite Malo (1 linija), Srednje (2 linije) ili Veliko (3 linije).

Prikaz slike

(Izbornik 2.5.5)

Uključuje i isključuje prikaz slike za vrijeme pretraživanja.

Napomena

Uključenje ove funkcije će odgoditi prikaz slika dok se prijenos ne završi. Isključenje ove funkcije ne dozvoljava usnimavanje slika sa servera, zbog čega je prijenos puno brži.

Cache

(Izbornik 2.5.6)

Uključenje ove funkcije spremanje stranica na kojima ste bili u Vaš telefon. Kad je stranica pohranjena u cache to će uvelike ubrzati brzinu učitavanja kod budućih pretraživanja te iste stranice.

Cookies

(Izbornik 2.5.7)

Uključenje ove funkcije omogućuje spremanje cookies poslanih sa servera. Ako je isključena, cookies ne mogu biti spremljeni u Vaš telefon.

Javascript

(Izbornik 2.5.8)

Odaberite da li želite uključiti ili isključiti ovu funkciju.

Reset postavki

(Izbornik 2.5.9)

Odaberite ovaj izbornik za vraćanje na početne postavke.

Trenutno svira **Izbornik 3.1**

Pojavit će se ako svira neka pjesma.

Sve pjesme **Izbornik 3.2**

Možete vidjeti cijelu glazbenu datoteku telefonske/vanjske memorije.

Popisi pjesama **Izbornik 3.3**

Možete kreirati svoj vlastiti popis u izborniku Sve pjesme.

Glazbena trgovina **Izbornik 3.4**

Spaja se na stranicu Vodafone music download.

Napomena

Kod skidanja glazbe možete imati dodatnih troškova.

Za detalje nazovite svog davatelja usluga.

Kamera [Izbornik 4]


Kamera

Izbornik 4.1

Možete fotografirati. Možete slikati veličinu koju želite i koristiti ju za imenik, početni zaslom i u druge svrhe.

Kad je fotografija snimljena možete ju poslati preko Poruka, Razglednica, E-mail ili Bluetooth veza.

 Prikazuje trenutne postavke kamere.

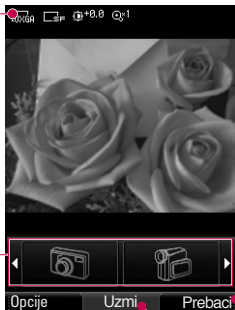

Možete izmjenjivati kameru i video rekorder pomoću tipki **◀ / ▶**.


Možete uključiti unutarnju ili vanjsku kameru pomoću desne soft tipke.

Pritisnite **OK** za slikanje.

1. Pritisnite lijevu soft tipku za ulaz u **Opcije** i odaberite okolinu.

- ▶ Ovim tipkama se mičete između opcija **◀ / ▶**.
- ▶ Odaberite željenu vrijednost s **▲ / ▼** i potvrdite odabir lijevom soft tipkom [Odaberi] ili **OK**.

Idi na	Pojavljuje se mapa postojećih slika u obliku malih sličica. Slike možete vidjeti tipkom  . Odabrane slike možete slati preko. Poruka. Rezglednica, E-mail ili Bluetooth veza.
Veličina	1600x1200 () , 1280x960 () , 640x480 () , 320x240 () , Pozadina () , 176x144 () , Kontakt ()
Kvaliteta	Super fino () , Fino () , Standardno ()
Svjetlo	Isključeno, Uvijek uklj. () , Prilikom govora () ▶ Možete uklj./isklj. Svjetlo kamere pomoću  u pregledu.
Višestruko snimanje	Jedna, Tri () , Šest () , devet () (Napomena: Ova funkcija ovisi o veličini slika.)
Zumiranje	x1 () , x2 () (Napomena: Ova funkcija ovisi o veličini slika.) ▶ Možete ju smanjiti tipkom  / povećati tipkom  u pregledu.
Osvjetljenje	Od -2.0 do 2.0 u intervalima od 0.5 Što je nivo viši, zaslon je svjetliji. ▶ Svjetlo možete namjestiti tipkom  u pregledu .

Nivo bijele boje	Možete namjestiti nijansu pozadine ovisno o vremenu. Autom., Dan, Oblačno, Svjetlo, interijer
Noćno snimanje	Za bolju sliku po noći stavite na uklj..
Snimka kadra	Možete odabrati jedan od 9 okvira dok slikate. (samo kod veličine pozadine)
Mjerač vremena	Možete odgoditi vrijeme okidanja. Ništa, 3 sekundi, 5 sekundi, 10 sekundi *  " se pojavljuje kad je timer uključen.
Efekt	Ništa, Crno-bijelo, Negativ, Sepia
Zvuk	Odaberite zvuk okidača.
Memorija	Odaberite memoriju, telefona ili vanjsku.
Ogledalo	Možete uključiti efekt zrcala ako odaberete uklj..
Prebaci	Možete uključiti unutarnju ili vanjsku kameru.
Stil pregleda	Normalan, Puni ekran

Kamera

2. Nakon biranja svih postavki, pritisnite desnu soft tipku [zatvori].
3. Fokusrirajte kameru na ono nono što želite slikati i pritisnite **OK**.
4. Tipka **OK** služi za spremanje slike. Poshranjena je u Mapu slika u Mojoj datoteci.

Možete direktno slati sliku preko Poruka, Razglednica, Email ili Bluetooth veza pritiskom na desnu soft tipku [Pošalj].

Napomena


Tipka **C** služi za vraćanje na prethodnu funkciju, a slika nije spremljena.

Video kamera

Izbornik 4.2

Možete snimiti video zapis. U ovom izborniku možete gledati ili spremi video datoteku. Kad je video zapis snimljen možete ga poslati preko Poruka, Razglednica, E-mail ili Bluetooth veza.

 Prikazuje trenutne postavke kamere.

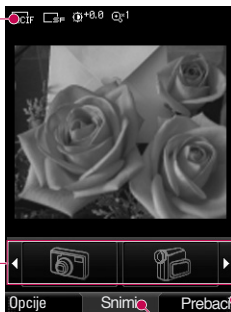

Možete izmjenjivati kameru i video rekorder pomoću tipki **<** / **>**.

Možete uključiti interijer ili eksterijer pomoću desne soft tipke.

Pritisnite **OK** za snimanje video zapisa.

1. Pritisnite lijevu soft tipku za pristup **Opcije** i odredite uvjete okoline.

- ▶ Možete se pomicati između opcija sa **<** / **>**.
- ▶ Odaberite željenu vrijednost **▲** / **▼** i potvrdite odabir lijevom soft tipkom. [Odaberi] ili **OK**.

Kamera

Idi na	Pojavljuje se mapa postojećih video zapisa u obliku malih sličica. Slike možete vidjeti tipkom  . Odabrane video zapise možete slati preko Poruka, Razglednica, E-mail ili Bluetooth veza.
Size	320x240 () , 176x144 () , 128x96 ()
Kvaliteta	Super fino () , Fino () , Standardno ()
Svjetlo	Isključeno, Uvijek uklj. () , Tokom snimanja () ▶ Možete uključiti /isključiti svjetlo kamere tipkom  u pregledu.
Zumiranje	x1 () , x2 () (Napomena: Ova funkcija ovisi o veličini slika.) ▶ Možete ju smanjiti tipkom  / povećati tipkom  u pregledu.
Osvjetljenje	Od -2.0 do 2.0 u intervalima od 0.5 Što je nivo viši, zaslom je svjetliji. ▶ Svjetlo možete namjestiti u pregledu s tipkom  .

Nivo bijele boje	Možete namjestiti nijansu pozadine ovisno o vremenu. Automatski, Dnevna svjetlost, Oblačno, Osvijetli, U zatvorenom prostoru
Noćno snimanje	Za bolju sliku po noći stavite na uklj..
Efekt	Nema, crno bijelo, Negativ, Sepija
Trajanje	Odaberite trajanje snimanja. Poruka, 30 sekundi, 1 minuta, 2 minuta, 5 minuta i 60 minuta
Memorija	Odaberite memoriju, telefona ili vanjsku.
Ogledalo	Možete uključiti efekt zrcala ako odaberete uklj..
Zvuk	Odlučite da li ćete snimati zvuk ili ne.
Prebaci	Možete uključiti interijer ili eksterijer.

2. Nakon odabira svih postavki, pritisnite desnu soft tipku [Zatvori].
3. Fokusirajte kameru i pritisnite tipku **OK** za snimanje.
Pritisnite **OK** za prekid snimanja.
 - ▶ Snimanje možete zaustaviti desnom soft tipkom [Stanka].
4. Tipka **OK** služi za spremanje video zapisa. Pohranjuje se u Video mapu u Mojoj datoteci.
Možete direktno slati video zapis preko Poruka, Razglednica, Email ili Bluetooth pritiskom na desnu soft tipku [Šalj].

Napomena

Tipka **←** služi za vraćanje na prethodnu funkciju, a video neće biti spremljen.

Poruke [Izbornik 5]

Napravi novo Izbornik 5.1

Poruka (Izbornik 5.1.1)

Možete napisati i urediti poruku koja sadrži kombinaciju teksta, slike, video i audio zapisa.

1. Napišite poruku u predviđeno polje.

Mogući izbornici

- ▶ **Umetni:** Možete učiniti sljedeće:

1. **Slike:** Možete umetnuti sliku.

(Jedna slika po slajdu)

2. **Fotografiranje:** Otvara se kamera i možete slikati. Slika je zatim umetnuta u prozor poruke (Jedna slika po slajdu).

3. **Video:** Možete umetnuti video zapis. (Jedan video po slajdu)

4. **Snimanje video:** Video modul se otvara i možete snimati. Snimljeni video zapis je umetnut u poruku. (Jedan video zapis po slajdu)

5. **Zvukovi:** Možete umetnuti zvuk. (Jedan zvuk po slajdu)

6. **Snimanje zvuka:** Otvara se snimanje zvuka i možete snimiti što želite. Snimljeni zvuk je umetnut u poruku. (Jedan zvuk po slajdu)

7. **Pojednosti o kontaktu:** Možete dodati ime i/ili broj spremjen u Kontaktima. Odaberite da li želite poslati Ime, Broj ili Ime i broji pritisnite tipku **OK**. Otvara se popis kontakata i možete odabrati kontakt koji želite umetnuti.

8. **Predlošci:** Možete unijeti tekstualni obrazac spremjen u telefonu. Nakon biranja, pritisnite tipku **OK**. Odabrani obrazac je umetnut u prozor poruke.

9. **Cc:** odaberite za unos osobe za Cc.

0. **Predmet:** odaberite ovu opciju za umetanje predmeta.

- * **Novi slajd:** Odaberite i dodajte novi slajd.

- # **Simbol:** Možete dodati simbole. Nakon unosa pomoću tipki s brojevima, tipka **OK**.

- ▶ **Dodaj primatelja:** Primatelja možete dodati iz kontakata ili direktno napisati broj.

- ▶ **Pošalji:** Za slanje kreirane poruke.
 - ▶ **Spremi u skice:** za spremanje poruke u radni spremnik.
 - ▶ **Metoda unosa:** Odaberite željeni način unosa.
 - ▶ **Dodaj u rječnik:** Možete dodati neku riječ u rječnik.
 - ▶ **Odustani:** Prekid uređivanja.
2. Pritisnite desnu soft[Nastavi]. Možete dodati primatelja iz kontakata ili unijeti broj direktno. (Možete napisati najviše 10 brojeva.)

Mogući izbornici kod Za koga (To:)


- ▶ **Dodavanje primatelja:** Možete dodati primatelja iz kontakata ili unijeti broj direktno.
 - ▶ **Pošalji :** za slanje poruke.
 - ▶ **Spremi u skice:** Sprema poruku.
 - ▶ **Odustani:** Prekid uređivanja.
3. Pritisnite desnu soft tipku [Šalji] za slanje poruke. Poruka će automatski biti spremljena u mapu Poslane poruke. Ako poruka nije poslana ostat će u izlaznom spremniku s oznakom da nije

poslana.

E-mail

(Izbornik 5.1.2)

Za slanje/primanje pošte, potrebno je postaviti email popis. (vidi str. 54-56 za postavke Email računa.)

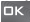1. Upišite email adrese primatelja u kućice Za, Cc, Bcc. Možete pretražiti kontakte pritiskom na tipku .

Napomena

- Unesite podatke za prosljeđivanje email-a u kućicu Cc (Carbon copy).
- Unesite skrivenu adresu za prosljeđivanje email-a bez prosljeđivanja informacija u kućicu Bcc (Blind Carbon Copy).
- Pod primatelj možete staviti samo ispravnu email adresu (To), referentne adrese (Cc) i skrivene referentne adrese (BCC). Kad ste završili s jednom adresom pojavljuje se kućica za novu. Možete upisati 20 primatelja pod glavnom i referentnom adresom, a 10 pod skrivenom adresom.

2. Pomaknite kursor na Predmet i napišite predmet.
3. Počnite pisati poruku kad ste kursor pomaknuli u polje Poruka.

4. Koristite sljedeće funkcije pomoću lijeve soft tipke [Opcije].
 - ▶ **Umetni:** Odaberite za umetanje specijalnih znakova, obrazaca i kontakata. Možete dodati multimedijске datoteke (slike, video i zvukovi).
 - ▶ **Dodavanje primatelja:** Služi za umetanje email adrese spremljene u Kontaktima. (Pojavljuje se u izborniku samo ako je kursor postavljen na kućice To/Cc/Bcc.)
 - ▶ **Pošalji:** Šalje gotov email.
 - ▶ **Spremi u skice:** Poruku spremate u Radni spremnik.
 - ▶ **Pregled:** Možete pogledati email prije nego ga pošaljete.
 - ▶ **Pregled privitka:** Pokazuje dodanu datoteku. (Samo ako pošta ima dodatak.)
 - ▶ **Metoda unosa:** Odaberite način unosa teksta.
 - ▶ **Dodaj u rječnik:** Možete dodati novu riječ u rječnik.
5. Kad ste napisali email, pritisnite desnu soft tipku [Pošalji].
 - ▶ **Postavi prioritet e-pošte:** Možete odabrati prioritetnu poruku.

Ulazne poruke Izbornik 5.2

1. Možete pogledati spremljene poruke. Odaberite poruku i tipkom **OK** pogledajte poruku.
2. Možete pogledati prethodnu i sljedeću poruku pomoću **<** / **>**.
3. Za pregled multimedijske poruke (Obavijest), odaberite **Preuzmi** na zaslonu s izvješćem o poruci. Datoteka se prenos i možete vidjeti kad je prijenos završen.

Koristite sljedeće funkcije pomoću lijeve soft tipke [Opcije] u ulaznom spremniku.

- ▶ **Pregled:** Otvara odabranu poruku.
- ▶ **Odgov.:** Pišete poruku pošiljaocu ili svim primateljima poruke.
- ▶ **Proslji.:** Prosljeđuje odabranu poruku.

Napomena

Ne vrijedi za multimedijske poruke (Obavijest) i WAP push poruke.

- ▶ **Uspostavi video:** Možete uputiti video poziv.
- ▶ **Izbriši:** Briše poruku.

- ▶ **Sastavi novu poruku:** Možete napisati novu poruku ili email.
- ▶ **Označi/Poništi ozn.:** Možete označiti jednu ili više poruka za brisanje.
- ▶ **Filter:** Prikazuje odabrani tip poruka.
- ▶ **Kopiraj:** Kod SMS poruka, možete ju kopirati na telefon ili na USIM karticu.
- ▶ **Premjesti:** Kod SMS poruka, možete ju premjestiti na telefon ili na USIM karticu.
- ▶ **Info o poruci:** Možete provjeriti vrstu poruke, datum, vrijeme i mjesto gdje je pohranjena.

Napomena

Možete provjeriti spremljenu poštu u Email izborniku [Izbornik 5.6].

Radne verzije Izbornik 5.3


Možete vidjeti spremljene poruke. Odaberite poruku. Tipkom **OK** birate da želite urediti poruku. Koristite sljedeće funkcije pomoću lijeve soft tipke [Opcije].

- ▶ **Uredi:** Uredite poruku.
- ▶ **Izбриши:** Briše odabranu poruku.
- ▶ **Sastavi novu poruku:** Možete napisati novu poruku ili Email.
- ▶ **Označi/Poništi ozn.:** Možete odabrati jednu ili više poruka za brisanje.
- ▶ **Filter:** Prikazuje poruke po odabranom ključu.
- ▶ **Info o poruci:** Možete provjeriti vrstu poruke, datum, vrijeme i gdje je pohranjena.

Odlazno

Izbornik 5.4

Izlazni spremnik je mjesto za privremeno pohranjivanje poruka koje čekaju da ih pošaljete. Poruke koje nisu isporučene isto ostaju u Izlaznom spremniku. Na primjer, Email će ostati u Izlaznom spremniku ako Email račun nije ispravno konfiguriran.

1. Odaberite poruku i pritisnite  za pregled poruke.
2. Koristite sljedeće funkcije pomoću lijeve soft tipke [Opcije].

[Za slanje / poruke na čekanju]



- ▶ **Sastavi novu poruku:** Možete napisati novu poruku ili Email.
- ▶ **Odustani:** Možete prekinuti status slanja/ čekanja.
- ▶ **Info o poruci:** Možete provjeriti vrstu poruke, datum, vrijeme i gdje je pohranjena.

[Za slanje neisporučenih poruka]

- ▶ **Pon.poš.:** Ponovno slanje.
- ▶ **Prosljij.:** Prosljeđuje odabranu poruku.
- ▶ **Uredi:** Možete urediti odabranu poruku.
- ▶ **Izбриши:** Briše poruku.
- ▶ **Sastavi novu poruku:** Možete napisati poruku ili Email.
- ▶ **Označi/Poništi ozn.:** Možete odabrati jednu ili više poruka za brisanje.
- ▶ **Info o poruci:** Možete provjeriti vrstu poruke, datum, vrijeme i gdje je pohranjena.

Poslane poruke Izbornik 5.5

Prikazuje poruke koje ste poslali (Poruka/ Razglednica/ Email).

[Opcije]


- ▶ **Pregled:** Otvara odabrane poruke.
- ▶ **Odgov.:** Pisanje odgovora pošiljaocu ili svim primateljima poruke.
- ▶ **Prosljij.:** Prosljeđuje odabranu poruku.
- ▶ **Izbriši:** Briše poruku.
- ▶ **Uredi:** Možete urediti odabranu poruku.
- ▶ **Sastavi novu poruku:** Možete napisati novu poruku.
- ▶ **Spremi broj:** Sprema broj pošiljaoca.
- ▶ **Označi/Poništi Ozn.:** Možete odabrati jednu ili više poruka za brisanje.
- ▶ **Filter:** prikazuje poruke po vrsti kako ste odabrali.
- ▶ **Kopiraj:** Kod SMS poruka, možete ih kopirati u telefon ili na USIM karticu.
- ▶ **Premjesti:** Kod SMS poruka, možete ih premjestiti u telefon ili na USIM karticu.
- ▶ **Info o poruci:** Možete provjeriti vrstu

poruke, datum, vrijeme i gdje je pohranjena.

E-mail



Izbornik 5.6

Pregled popisa pošte

1. Odaberite email račun i pritisnite tipku  da pogledate popis primljene pošte.
2. Desnom soft tipkom [Preuzmi], možete preuzeti novi popis pošte s email servera odabranog broja.
3. Na email popisu možete koristiti sljedeće funkcije pomoću lijeve soft tipke [Opcije].
 - ▶ **Pregled:** Otvara odabrani E-mail.
 - ▶ **Odgov.:** Pisanje odgovora na odabrani E-mail.
 - ▶ **Prosljij.:** Prosljeđuje odabrani E-mail drugim osobama.
 - ▶ **Dohvat:** Preuzima nove E-mail poruke.
 - ▶ **Izbriši:** Briše E-mail.
 - ▶ **Sastavi novu poruku:** Pisanje nove poruke ili pisma.

- ▶ **Spremi adresu:** Sprema adresu pošiljaoca u Kontakte.
- ▶ **Označi/Poništi Ozn.:** Koristite ovu opciju za brisanje jednog ili više pisama.
- ▶ **Postavi kao pročitano /nepročitano:** Odabrani E-mail se može pročitati ili ne.
- ▶ **Info o poruci:** Detalji o poruci: veličina, vrsta, datum i naziv datoteke.

Pregled E-mail poruke

1. Odaberite jedno od primljenih pisama i pritisnite tipku Otvori i primit ćete sadržaj pisma.
2. Sadržaj pisma se automatski pojavljuje na zaslonu.
3. Možete vidjeti sadržaj prethodnih ili sljedećih poruka sa  / .
4. Pod Pregled zaslona, možete odabrati ove funkcije lijevom soft tipkom [Opcije].
 - ▶ **Odgovor:** Pišete odgovor na pismo.
 - ▶ **Odgovori svima:** Odgovor svim primateljima.

- ▶ **Proslijedi:** Prosljeđuje odabranu poruku drugim osobama.
- ▶ **Izbriši:** Briše E-mail.
- ▶ **Spremi adresu:** Sprema adresu pošiljaoca u Kontakte.
- ▶ **Sastavi novu poruku:** Pisanje nove poruke.
- ▶ **Koristi:** izdvaja broj, E-mail adresu ili URL iz E-mail poruke.
- ▶ **Pregled privitka:** Pokazuje dodanu datoteku.
- ▶ **Pregled adrese:** Pokazuje E-mail adrese primatelja i referentne adrese (Cc).
- ▶ **Info o poruci:** Detalji o poruci: veličina, vrsta, datum i naziv datoteke.

Predlošci

Izbornik 5.7

Predlošci teksta (Izbornik 5.7.1)

Možete dodati, urediti i izbrisati korisne fraze koje često koristite lijevom soft tipkom [Opcije].

Napomena

Ovisno o davatelju usluga, korisne fraze se spremaju kao pretpostavljene.

Multimedijski predlošci

(Izbornik 5.7.2)

Možete kreirati, urediti i pregledati dostupne obrasce prilikom kreiranja multimedijskih poruka. Pet vrsta obrazaca (Rođendan, Pozdrav, Praznici, Zahvala, Isprika) je spremljeno kao pretpostavljeni obrasci.

Dostupne su sljedeće opcije.

- ▶ **Dodaj novo:** Možete kreirati novi multimedijski obrazac.
- ▶ **Sastavi MMS poruku:** Kreira multimedijsku poruku s odabranim obrascem.
- ▶ **Pregled:** Prikazuje odabrani obrazac.

- ▶ **Uredi:** Uređuje odabrani obrazac.
- ▶ **Izbriši:** Briše odabrani obrazac. (Nema za pet pretpostavljenih obrazaca)

Postavke poruka Izbornik 5.8

SMS

(Izbornik 5.8.1)

Možete odrediti postavke slanja poruka.

1. **C.za tekst.por.:** Unesite adresu Centra za poruke.
2. **Izvešće o isporuci:** Uključenjem ove funkcije možete dobiti potvrdu da je Vaša poruka isporučena.
3. **Razdoblje valjanosti:** ova usluga mreže omogućuje da odredite koliko dugo će se Vaša SMS poruka čuvati u centru za poruke.
4. **Vrste poruka: Tekst, Glas, Faks, X.400, E-mail.**
 Obično je odabran SMS. Možete promijeniti format poruke. Nazovite svog davatelja usluga i provjerite koje su mogućnosti.

5. Šifriranje znakova: Auto/ Pretpostavljena abeceda/ Unicode.

▶ Automatski (pretpostavljeno):

Uobičajena je poruka jedno slovo jedan bit u pretpostavljenoj abecedi (GSM7). Poruka sa slovima od dva bita se piše kao unicode(UCS2).

▶ **Zadana abeced:** Poruka sa slovima od dva bita bit će zapisana kao jedan bit. Stoga će slova s naglaskom biti napisana bez naglaska kao obična slova.

▶ **Unicode:** Poruka ima slova od dva bita. Može biti dvostruko naplaćena.

6. Sl. dugog teksta kao: odaberite dugačku poruku kao Višestruki SMS ili MMS.

MMS

(Izbornik 5.8.2)

Odaberite opcije vezane uz Multimedijску poruku.

1. Način učitavanja: Možete odrediti preuzimanje u domaćoj mreži ili preko Roaminga, ovisno kako je poslano. Ako odaberete Automatski, automatski ćete

primiti MMS poruku. Ako odaberete Ručno, primiti ćete samo obavijest da imate poruku u ulaznom spremniku i tada ćete odlučiti da li ćete usnimiti poruku ili ne.

2. Izvješće o isporuci: Možete odrediti da li želite potvrdu o isporuci poruke i da li da izvješće o poslanoj pošti bude poslano pošiljaocu.

▶ **Zatraži izvješće:** Određuje da li da zatražite potvrdu o primitku pošte za MMS poruku.

▶ **Dopusti izvješće:** Određuje da li da pošaljete odgovor na zahtjev za potvrdu o primljenoj pošti.

3. Read reply: Određuje da li postoji zahtjev da primatelj potvrdi da je pročitao poruku i da li da omogućiti slanje potvrde pošiljaocu.

▶ **Zatraži odgovor:** Određuje da li želite potvrdu da je MMS poruka pročitana.

▶ **Dopusti odgovor:** Određuje da li da omogućite slanje potvrde da ste pročitali poštu na zahtjev o pročitanoj pošti.

4. **Prioritet:** Možete odabrati važnost prioriteta poruka (Nizak, Normalan i Visok).
5. **Razdoblje valjanosti:** Određuje rok valjanosti MMS poruke. Poruka će biti pohranjena na MMS serveru samo određeno vrijeme.
6. **Trajanje prikaza stranice:** Određuje vrijeme trajanja svake stranice na zaslonu kod pisanja.
7. **Vrijeme isporuke:** Određuje vrijeme isporuke primatelju. Centar za MMS poruke će isporučiti poruku nakon zadanog vremena.
8. **Centar multimed. por.:** Određuje postavke detalja mreže kao što su MMSC i WAP izlaz, za slanje MMS poruke.

Pomoću lijeve soft tipke [Opcije], možete aktivirati, dodati ili izbrisati neki profil. Ime profila odabrano kvačicom je trenutno važeća vrijednost. Možete vidjeti i urediti sadržaj profila ako desnom soft tipkom odaberete [Uredi]. Zaslona za uređivanje se pojavljuje i ako kreirate novi profil u Opcijama. Značenje svake stavke je ovdje objašnjen.

- ▶ **Naslov:** Ime profila.
- ▶ **MMSC URL:** Unesite URL centra za MMS poruke.
- ▶ **MMS Proxy:** Unesite adresu WAP izlaza i broj priključka.
- ▶ **Način spajanja:** Odaberite jedan od načina. (TCP s proxy posluž., TCP bez proxy posluž., UDP)
- ▶ **Pristupne točke:** Odredite ime ulaza. (vidi Postavke WAP spajanja.)

Pritisnite desnu soft tipku [Gotovo] za spremanje izmjena i postavki centra za MMS poruke.


E-mail

(Izbornik 5.8.3)

Možete odrediti postavke za primanje i prijenos E-mail-a.


- 1. Vodafone pošta:** Pristup Vodafone pošti. (Napomena: Ova usluga nije dostupna u svim zemljama. Nazovite svog davatelja usluga za detalje.)
- 2. Dopusti odgovor putem e-pošte:** Određuje da li šaljete potvrdu da je pošta pročitana kao odgovor na takav zahtjev od pošiljaoca.
- 3. Zatraži odgovor na e-poštu:** Određuje da li ćete tražiti potvrdu da je primalac pročitao pismo.
- 4. Automatski dohvat:** Određuje automatsko preuzimanje pošte s ulaznog servera. Kad stigne novo pismo na vrhu zaslona se pojavljuje ikona. Možete odabrati period za preuzimanje pošte: **Isklj., 15 minuta, 30 min ili 1 sat.**
Može se dogoditi da Vam zaračunaju dodatne troškove ako koristite uslugu Automatskog preuzimanja.
- 5. Ključni poruku iz Prosljedi i Odgovori:** Određuje da li da primljena




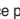


poruka bude sastavni dio pisma kad proslijedujete poruku ili šaljete odgovor.

- 6. Potpis:** Možete odabrati da potpis bude dodan na kraju pisma. Potpis može biti pridodan automatski ili ručno na kraju pisma kojeg šaljete.
- 7. Prioritet:** Možete odabrati prioritete pisama (Nizak, Normalan i Visok).
- 8. Računi e-pošte:** Možete kreirati ili konfigurirati E-mail račun uključujući E-mail server i korisničko ime. Možete urediti E-mail račun pritiskom na desnu soft tipku [Uredi]. Možete odabrati jedan E-mail račun koji ćete koristiti za slanje E-mail-a pritiskom na tipku . Lijevom soft tipkom možete birati među sljedećim funkcijama [Opcije].
 - ▶ **Dodaj novo:** Kreira novi E-mail račun.
 - ▶ **Uredi:** Uređuje odabrani E-mail račun.
 - ▶ **Aktiviraj:** Aktivira odabrani račun za izlaznu poštu.
 - ▶ **Izbr.:** Briše odabrani E-mail račun. Sva pisma uključena u račun bit će izbrisana.

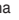Kreiranje novog E-mail računa

1. Odaberite **Dodaj novo** u izborniku E-mail račun.
2. Potrebno je konfigurirati sljedeće stavke.

Naslov	Napišite naziv.
Korisničko ime	Napišite ime korisnika E-mail računa.
Šifra	Napišite lozinku E-mail računa.
Adresa e-pošte	Napišite E-mail adresu za izlaznu poštu.
Adr.e-poš. za odg.	Napišite E-mail adresu za odgovor na Vašu E-mail.
Posluž. odl. poš.	Upišite server izlazne pošte.
Posluž. dol. poš.	Upišite server ulazne pošte.
Broj SMTP ulaza	Unesite broj porta za mail server. Obično je broj za SMTP (Broj priključka servera izlazne pošte) 25.
Dol. ulaz posluž.	Unesite broj porta za server. Obično je broj priključka servera ulazne pošte 110 (POP3) ili 143 (IMAP4).
Maks.vel.prim.	Odredite maksimalnu veličinu E-mail-a sa  . Maksimalna dozvoljena količina ne može biti više od 1MB.

Vrsta spremnika	Odaberite vrstu ulaznog spremnika: POP3 ili IMAP4 tipkom  .
Spr.na poslužitelj	Odredite da li želite ostaviti kopiju poruke na ulaznom serveru ili ne pomoću tipke  . Ako ste odabrali IMAP4 za ulazni spremnik, kopija poruke se uvijek pohranjuje na server.
Spr. posl. poštu u	Odaberite gdje će se spremati poslane poruke (ako je odabran IMAP4). Ako ste odabrali POP3, poslane poruke se uvijek spremaju u telefon.
Pristupne točke	Odaberite ulaz za spajanje na Internet. Možete odabrati konfigurirani ulaz pomoću tipke  .
Automatski dohvat	Odlučite da li će preuzimanje biti automatsko ili ne sa  . Možete odrediti automatsko vrijeme preuzimanja u izborniku Autom. preuzimanje [Izbornik 5.9.3.4]. (vidi str. 54.)
SMTP prov. autent.	Odredite da li da odlazni mail server zahtjeva autorizaciju ili ne pomoću tipke  . Ako stavite SMTP autorizacija na Uklj., možete unijeti SMTP Korisničko ime i SMTP Lozinku za SMTP autorizaciju.
APOP sigurna prij.	Odlučite da li ćete aktivirati APOP zaštićeno logiranje ili ne tipkom  . Kad je preinac pošte IMAP4, APOP zaštićeno logiranje je uvijek na ISKLJ.

3. Pritisnite desnu soft tipku [Gotovo] za završetak konfiguracije E-mail računa.

Uređivanje E-mail računa

1. Odaberite E-mail račun s popisa E-mail računa i pritisnite desnu soft tipku [Uredi].
2. Možete urediti željena polja pomicanjem kursora gore i dolje.
3. Kad ste gotovi, pritisnite desnu soft tipku [Gotovo] za završetak konfiguracije.

Napomena

Kad želite promijeniti model pretinca, sva pošta preuzeta do tada, bit će izbrisana.

Informacije Usluga (Izbornik 5.8.4)

- ▶ **Emitiranje čelija:** Možete odrediti status prijema.
- ▶ **Kanali:** Možete dodati ili promijeniti programe.
- ▶ **Jezici:** Možete odabrati jezik koji želite pritiskom na tipku **OK**. poruke s informacijama će se pojavljivati na jeziku koji ste odabrali.

Servisna poruka (Izbornik 5.8.5)

Možete odrediti opcije usluge primanja poruka.

Moje datoteke [Izbornik 6]

Slike

Izbornik 6.1

Ova mapa se sastoji od već ubilježениh linkova za skidanje slika s Interneta i Pretpostavljenih slika.

Slike koje ste slikali kamerom se pohranjuju u mapu Slike i možete kreirati nove mape za organiziranje tih slika. Odabrane datoteke možete spremiti kao GIF animacije i poslati ih drugima kao višestruke datoteke.

Kad ste odabrali datoteku, pritiskom na lijevu soft tipku imate sljedeće funkcije na raspolaganju [Opcije].

- ▶ **Pregled:** Možete vidjeti odabranu sliku.
- ▶ **Stvori novu mapu:** Možete kreirati novu mapu unutar one u kojoj se nalazite.
- ▶ **Pošaljite:** Možete poslati odabranu sliku preko Poruka, Razglednica, E-mail ili Bluetooth veza opcije.
- ▶ **Datoteka**
 - **Premjesti:** Datoteka se može preseliti u neku drugu mapu.
 - **Kopiraj:** Datoteka se može kopirati u neku drugu mapu.

- **Preimenuj:** Možete dati novo ime datoteci.
- **Uredi:** Uređuje sliku.
- **Napravi GIF animaciju:** Možete kreirati datoteku s GIF animacijom s različitim fotografijama (do 10 datoteka različitosti od 176X220 od maksimalno 2Mbajta za prikaz).
- **Informacije:** Prikazuje podatke o odabranoj datoteci slika.
 - ▶ **Izbriši:** Briše odabranu sliku.
 - ▶ **Označi/Poništi ozn.:** Pomoću ove funkcije možete slati, brisati, premještati i kopirati datoteke.
 - ▶ **Glavni zaslon:** Možete odabrati neku sliku za zaslon (Početni zaslon, Odlazni poziv, Slika kod uključivanja, Slika kod isključenja).
 - ▶ **Prikaz slajdova:** Započinje prikaz.
 - ▶ **Poredaj po:** Datoteke možete sortirati po nazivu, vrsti ili datumu.
 - ▶ **Pregled popisa/ Mrežni pregled:** Možete vidjeti u obliku popisa ili tablice.
 - ▶ **Status memorije:** Vidite status memorije (telefonska ili vanjska memorijska kartica).

Zvukovi

Izbornik 6.2

Mapa zvukova se sastoji od ugrađenih linkova za usnimavanje melodija zvona i glazbe kao i mapa koje sadrže Pretpostavljene zvukove i Snimke glasa. Ovdje možete slati ili postaviti zvukove za zvuk zvona.

Video





Izbornik 6.3

Ovdje možete organizirati ili slati video zapise snimljene ili koje ste sami snimili . Lijevom sof tipkom dolazite na [Opcije] u Video popisu.

- ▶ **Pokreni:** Gledate video.
- ▶ **Stvori novu mapu:** Možete kreirati novu mapu.
- ▶ **Pošalji:** Možete slati odabrani video zapis preko Poruka, E-mail ili Bluetooth veza ako nije zaštićeno s Digitalnim pravima upravljanja (DRM).
- ▶ **Datoteka**
 - **Premjesti:** Prebacuje datoteku u memoriju telefona ili vanjsku memoriju.


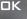
- **Kopiraj:** Kopira datoteku u memoriju telefona ili vanjsku memoriju.
- **Preimenuj:** Novo ime za video zapis.
- **Informacije:** Prikazuje podatke o odabranoj datoteci.

- ▶ **Izbriši:** Briše odabrani video zapis.
- ▶ **Označi/Poništi ozn.:** Pomoću ove funkcije možete slati, brisati, premješati i kopirati datoteke.
- ▶ **Glazbena tema:** Možete postaviti video zapis kao zvuk zvona ili kao video zvuk zvona.
- ▶ **Poredaj po:** Datoteke možete sortirati po nazivu, vrsti ili datumu.
- ▶ **Pregled popisa/Mrežni pregled:** Prikazuje video datoteke kao popis ili tablicu.
- ▶ **Status memorije:** Pokazuje stanje memorije (tel. ili vanjska memorijska kartica).

Možete pogledati video pomoću video player-a. Video datoteke se pokazuju kao popis u obliku kvadrata. Možete odabrati video pomoću tipki  /  /  / .

Odaberite željeni video i odaberite **Reproduciraj** za pregled snimljenog video.

Desnom soft tipkom [Pošalji] odaberite koji video želite pridodati poruci, Email-u ili Bluetooth.

Ako se odabere **1. Reprodukcija**, video zapis će se reproducirati preko Media Player-a. Za zaustavljanje, pritisnite  za vrijeme reprodukcije. Za nastavak, ponovno pritisnite tipku .

Za zaustavljanje slike na zaslonu, pritisnite desnu soft tipku [snimi] kad ste prekinuli reprodukciju.

Za gledanje videa preko cijelog zaslona, pritisnite desnu soft tipku za vrijeme reprodukcije. Za vraćanje na prijašnju veličinu zaslona, ponovno pritisnite desnu soft dok je slika preko cijelog zaslona.

Kad gledate video zapise uz Media Player, dostupne su sljedeće mogućnosti:

- ▶ **Pauza/Pokreni:** Možete gledati ili na trenutak zaustaviti video reprodukciju.
- ▶ **Pošalji:** Možete poslati video preko Poruka, E-mail ili Bluetooth veza ako datoteka nije zaštićena Digitalnim pravima upravljanja (DRM).
- ▶ **Idi na popis:** Vraća se na popis.
- ▶ **Izbr.:** Briše odabrani video.
- ▶ **Glazbena tema:** Možete odabrati video kao zvono telefona ili video zvono.
- ▶ **Široki prikaz:** Možete gledati video na ovaj način.
- ▶ **Zvuk/Bez zv:** Ako je glasnoća na više od 0, aktivirano je utišanje tona, a ako je stavljeno na 0, aktivira se glasno.
- ▶ **Snimka:** Možete spremiti sliku koja je zaustavljena na zaslonu kao slikovnu datoteku (samo za opciju pauza).
- ▶ **Postavi ponavljanje:** Odredite ponavljanje (Nista/Trenutna datoteka/Sve datoteke).

Premjesti u

- **Prethodna datoteka:** Reprodukcija prethodne video datoteke.

Moje datoteke

- **Sljedeća datoteka:** Sljedeća video datoteka.

- ▶ **Info o datoteci:** Možete provjeriti podatke o datoteci koju gledate (Ime, Veličina, Datum, Vrsta, Trajanje, Zaštita).

Igre i aplikacije

Izbornik 6.4

U ovom izborniku možete jednostavno skidati igre i aplikacije. Ima dvije pretpostavljene mape, Igre i aplikacije. Svaka mapa ima link za skidanje igri ili aplikacija. Upamtite da ćete vjerojatno dobiti veći račun ako koristite on line usluge. Lijevom soft tipkom [Opcije] možete kreirati novu mapu.

Bluetooth podaci

Izbornik 6.5

U ovu mapu se spremaju datoteke primljene preko Bluetooth-a. Unutar nje možete kreirati pod mape.

Ne možete kopirati i premješati datoteke koje nisu u Moje datoteke.

Prikazane opcije ovise o tome koju datoteku ste odabrali. Na primjer, kod slike se pojavljuju sljedeće funkcije.

- ▶ Vidi/Uredi/Premjesti/Kopiraj/Izbriši/Preimenuj datoteku(e).
- ▶ Označi/Odznači jednu ili sve datoteke.
- ▶ Šalji datoteku preko Bluetooth-a ako nije zaštićena Digitalnim pravima upravljanja (DRM).

Napomena

Slikovne datoteke čija je razlučivost 640 x 480 ili više možete slati preko Razglednice.

- ▶ Ako je dostupno, možete sliku postaviti kao pozadinu (Početni zaslon, Odlazni poziv, Početna slika, Slika kod isključenja).
- ▶ Ako je moguće započnite ili postavite pregled slika (običan ili puni zaslon, brzina).
- ▶ Ako je moguće kreirajte datoteku GIF animacija različitim slikama.

- ▶ Sortirajte datoteke po nazivu, datumu i vrsti.
- ▶ Detalji memorije(vanjska ili telefonska memorijska kartica).
- ▶ Vidi detalje o memoriji.

Druge datoteke Izbornik 6.6

Druge datoteke osim slika, zvukova, video zapisa, igri i aplikacija pohranjene su u ovoj mapi.

Vanjska memorija



Izbornik 6.7

Ako kupite dodatnu vanjsku mikroSD memorijsku karticu, možete imati više sadržaja. Vidi poglavlje Kako koristiti mikroSD memorijsku karticu na str. 21 i 22 da znate kako treba staviti i izvaditi memorijsku karticu. Sadržajem možete upravljati kao i na svom telefonu.






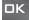
Rokovnik [Izbornik 7]

Alarmi

Izbornik 7.1

Ako postavite alarm,  se pojavljuje na zaslonu. Zadani alarm se oglašava u odabrano vrijeme. Pritisnite tipku  za gašenje alarma, alarm je isključen. Pritisnite desnu soft tipku [Podsjetnik - Snooze] i odaberite vremenski razmak za podsjetnik. Zvuk alarma prestaje i ponovno se javlja nakon odabranog vremenskog intervala. Možete postaviti najviše 5 alarma.

1. Odaberite alarm koji želite postaviti s popisa alarma. Ako nema niti jednog alarma, pritisnite desnu soft tipku [Dodaj] za dodavanje novog alarma.
2. **Postavi/Otkazi alarm:** Postavite ili otkazite alarm pomoću opcija za određivanje da li je alarm uključen tako da odaberete vrijeme alarma.
3. **Unesi vrijeme alarma:** Unesite željeno vrijeme alarma tako da odredite ste i minute odaberite 'AM' ili 'PM' koji se pokazuju ako je vrijeme prikazano kao 12-satni ciklus.

4. **Odaberite ponavljanje:** odaberite učestalost ponavljanja sa  /  ili odaberite s popisa pritiskom na tipku .
5. **Odaberite zvono:** Odaberite zvuk zvona za alarm pomoću  /  ili otvaranjem popisa tipkom .
6. **Unesi bilješku:** Unesite naziv alarma.
7. **Podsjetnik:** Možete odrediti dužinu trajanja.
8. Kad ste postavili alarm, pritisnite desnu soft tipku [Izvršeno].

Napomena








Alarm će biti isključen kada je telefon ugašen.

Kalendar

Izbornik 7.2




Upit za raspored i traženje

1. **Pregled po mjesecima**
Raspored možete vidjeti po mjesecima. Kursor je na točnom datumu, odabrani datum je označen.
Na datumu na koji ste došli kursorom za koji imate upisan raspored označen

je ikonom. Pritiskom na direktnu tipku  pomičete na prethodnu godinu, a tipkom  na sljedeću godinu i s  pomičete se na danas. Pritisnite  za prošli mjesec, pomoću tipke  idete na sljedeći mjesec. Pritiskom na  idete na tjedni kalendar, a tipkom  na mjesečni kalendar.

Možete se pomicati po datumima sa  /  /  / .

2. Pregled po danima

Tipkom  u pregledu po mjesecima idete na pregled po danima gdje možete vidjeti raspored po danima. Možete se koristiti pomičnim tabulatorom sa  / . Kao rezultat pretrage pojavljuju se kratki pregled sadržaja, postavke ponavljanja i alarma. Raspored možete poslati na neki drugi telefon ili ga prebaciti na Internet stranicu preko SMS poruke, MMS poruke ili Email-a ili Bluetooth veze.

3. Detaljan pregled

Možete vidjeti detaljan raspored, tj cijeli sadržaj. Možete poslati taj raspored na neki drugi telefon ili na Internet stranicu

preko SMS poruke, MMS poruke ili Email-a ili Bluetooth veze pomoću lijeve soft tipke [Opcije].

Traženje rasporeda

Možete dodati novi raspored. Možete odrediti datum početka, završetka, početno vrijeme, vrijeme završetka, sadržaj, vrstu rasporeda, ponavljanje, alarm.

- ▶ **Postavi vrstu:** Sastanak, Godišnjica, Rođendan, Ostali
- ▶ **Postavi ponavljanje:** Jednom, Dnevno, Tjedno, Mjesečno, Godišnje, Korisnicka postavka
- ▶ **Postavi alarm:** Bez alarma, Na vrijeme, 15 minuta ranije, 30 minuta ranije, 1 sat ranije, 1 dan ranije, 3 dana ranije, 1 tjedan ranije

Izбриши raspored

1. Izбриши prošle

Možete izbrisati sve što je već prošlo.

2. Izбриши sve

Možete izbrisati sve pohranjene rasporede.

Postavke i brisanje praznika

Možete postaviti ili izbrisati korisničke praznike. Pritisnite lijevu soft tipku [Opcije] i odaberite Postavite praznik. Odabrani datum će se pojaviti u crvenoj boji.

Za brisanje praznika, pritisnite lijevu soft tipku [Opcije] i odaberite Resetiraj praznike.

Obavijest o rasporedu

Ako je korisnik postavio postavke alarma, zazvonit će odabrani zvuk alarma. Ako se obavijest oglasi prije vremena alarma, možete ponovno postaviti alarm.

Zadaci

Izbornik 7.3


Možete vidjeti, urediti i dodati obavezu. Prikazane su po vremenskom slijedu. Zadaci koji su obavljani i oni koji još nisu pokazuju se na različit način.

Dodaj

Za dodavanje obaveze, pritisnite desnu soft tipku [Dodaj] na Popisu obaveza na zaslonu. Zatim upišite datum, opis i prioritet za tu obavezu.

Kad ste unijeli podatke pritisnite desnu soft tipku [Izvršeno] za spremanje.

Detaljni pregled i uređivanje

Za pregled detalja, postavite kursor na željenu stavku na popisu obaveza, zatim pritisnite tipku . Možete urediti ili izbrisati pojedinu obavezu lijevom soft tipkom [Opcije]. Možete izbrisati više ili sve obaveze pomoću opcije

Označi/Odznači.

Postavi status zadatka

One obaveze koje ste već izvršili bit će prekržižene ispod popisa neispunjenih obaveza. Možete postaviti izvršene obaveze kao Neizvršene odabirom **Opcije**.

Podsjetnik



Izbornik 7.4

Pomoću funkcije za upravljanje bilješkama, možete vidjeti i organizirati spremljene bilješke i dodati novu bilješku.

Dodaj bilješku

Za dodavanje nove bilješke, pritisnite desnu soft tipku [Dodaj]. Unesite sadržaj bilješke. Možete spremiti bilješku u popis pritiskom na desnu soft tipku [Izvršeno].

Uredi i izbriši bilješku








Označite željenu bilješku i pritisnite  da vidite njen sadržaj. Možete urediti ili izbrisati sadržaj bilješke pomoću lijeve soft tipke [Opcije]. Možete se vratiti na zaslon za upravljanje bilješkama tipkom . Možete odabrati Više ili sve bilješke pomoću opcije Označi/Odznači i tada izbrisati bilješke pritiskom na desnu soft tipku [Izbriši].

Kalkulator

Izbornik 7.5

Kalkulator vam daje mogućnost korištenja osnovnih aritmetičkih operacija kao što su zbrajanje, oduzimanje, množenje i dijeljenje, kao i neke složenije operacije.

1. Pritisnite lijevu soft tipku [Funkcije].
2. Odaberite računsku operaciju.

Možete unijeti brojeve pomoću brojčanih tipki, a računске operacije pomoću  /  /  / . Možete upisati decimalni zarez tipkom . Svakim pritiskom na , znakovi se brišu obrnutim redosljedom. Svaki puta kad duže držite tipku , svi znakovi se brišu odjednom.

Kad je izračun gotov i rezultat se pojavi na zaslonu, pritiskom na neki broj brišete rezultat i kalkulator čeka novi unos, čak i ako niste pritisnuli desnu soft tipku [AC]. Kad je izračun gotov i rezultat se pojavi na zaslonu, pritiskom na simbol sprema se rezultat u taj simbol i računanje se nastavlja.

Pretvarač

Izbornik 7.6

Ovim izbornikom možete pretvarati valute, površinu, dužinu, težinu, temperaturu, volumen i brzinu.

Valuta

(Izbornik 7.6.1)

1. Odaberite izbornik Valuta.
2. Korisnici mogu odrediti tečajnu listu pomoću [Stopa].
3. Unesite tečaj za najviše 6 valuta prema GBP i pritisnite [Izvršeno]. Sada možete pretvarati valute jedu u drugu.
4. Možete vidjeti vrijednost 6 valuta.
5. Pritisnite [Reset] za brisanje trenutno postojećeg podatka u polju.
6. Za izlazak iz pretvaranja valuta, pritisnite tipku [Natrag].

Površina

(Izbornik 7.6.2)

1. Odaberite izbornik Površina.
2. Odaberite željenu jedinicu za pretvaranje [Jedinica].
3. unesite standardne jedinice i pogledajte pretvorenu vrijednost.
4. Pritisnite [Reset] za brisanje i pomaknite kursor na polje za unos.
5. Za izlazak iz izbornika za pretvaranje Površina, pritisnite tipku [Natrag].

Duljina

(Izbornik 7.6.3)

1. Odaberite izbornik za dužinu.
2. Odaberite željenu jedinicu za pretvaranje pomoću izbornika [Jedinica].
3. Unesite standardnu jedinicu i pogledajte pretvorenu vrijednost.
4. Pritisnite [Reset] za brisanje i pomaknite kursor na polje za unos.
5. Za izlazak iz izbornika dužina, pritisnite tipku [Natrag].

Masa

(Izbornik 7.6.4)

1. Odaberite izbornik Masa.
2. Odaberite željenu jedinicu pomoću izbornika [Jedinica].
3. Unesite standardnu jedinicu i pogledajte pretvorenu vrijednost.
4. Pritisnite [Reset] za brisanje i pomaknite kursor na poje za unos.
5. Za izlazak iz izbornika za težinu pritisnite tipku [Natrag].

Temperatura

(Izbornik 7.6.5)

1. Odaberite izbornik Temperatura.
2. Postavite kursor na željenu jedinicu sa strelicama za gore i dolje.
3. Unesite standardnu jedinicu i pogledajte pretvorenu vrijednost.
4. Pritisnite [Reset] za brisanje i pomaknite kursor na polje za unos.
5. Za izlazak iz izračunavanja temperature, pritisnite tipku [Natrag].
6. Možete upisati negativne vrijednosti ako odaberete [-].

Volumen

(Izbornik 7.6.6)

1. Odaberite izbornik Volumen.
2. Odaberite željenu jedinicu pomoću izbornika [Jedinica].
3. Unesite standardnu jedinicu i pogledajte pretvorenu vrijednost.
4. Pritisnite [Reset] za brisanje i pomaknite kursor na polje za unos.
5. Za izlazak iz pretvaranja volumena, pritisnite tipku [Natrag].

Brzina



(Izbornik 7.6.7)

1. Odaberite izbornik Brzina.
2. Odaberite željenu jedinicu pomoću izbornika [Jedinica].
3. Unesite standardnu jedinicu i pogledajte pretvorenu vrijednost.
4. Pritisnite [Reset] za brisanje i pomaknite kursor na polje za unos.
5. Za izlazak iz preračunavanja brzine, pritisnite tipku [Natrag].

Vremenske zone

Izbornik 7.7

Funkcija Vremenske zone daje podatke o velikim gradovima širom svijeta.



Možete vidjeti točno vrijeme u nekoj zemlji ili gradu pomicanjem strelica  / .

Možete odabrati jedan grad kao osnovni pomoću desne soft tipke [Kuća].

Snimanje glasa

Izbornik 7.8

1. Pritisnite lijevu soft tipku [Opcije] za prikaz dodatnog izbornika prije početka snimanja.


2. Dođite na željeni izbornik pomoću  /  tipka .


► **Kvaliteta:** Možete odabrati kvalitetu snimanja između **Super Fino**, **Fino** i **Uobičajeno**.


► **Trajanje:** Možete odrediti trajanje snimanja: veličina MMS poruke, 30 sek ili 1 min.

► **Novo snimka:** Odaberite za početak snimanja nove datoteke.

► **Moje datoteke:** Otvara mapu Glasovne snimke u Mojim datotekama.

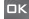


3. Tipkom  započinje snimanje. Kad je snimanje počelo na LCD zaslonu se pojavljuje vrijeme snimanja. Za prekid snimanja pritisnite desnu soft tipku [Otkazi].

4. Kad završite snimanje, pritisnite  za izlazak. Snimljena datoteka se automatski sprema u mapu Glasovne snimke u Mojim datotekama.




5. Kad nema snimanja, novo snimanje počinje s  .
Kad nema snimanja pritisnite desnu soft tipku [Šalji] da pošaljete snimljenu datoteku.

Odaberite Poruku, Email, ili Bluetooth sa  /  zatim .

6. Pritisnite lijevu soft tipku da odaberete razne opcije nakon snimanja glasa.

7. Odaberite izbornik koji želite s  /  pritisnite .

► **Izbriši:** Odaberite ovaj izbornik ako želite izbrisati snimljenu datoteku.

- ▶ **Nova snimka:** Odaberite ovaj izbornik za početak novog snimanja.
 - ▶ **Pošalji:** Za slanje snimljene datoteke. Odaberite Poruku, Email ili Bluetooth sa  /  tipka .
 - ▶ **Glazbena tema:** Snimljenu datoteku možete postaviti kao **Melodija glasovnih poziva, Melodija video poziva, Zvuk za uključenje** ili **Zvuk za isključenje**.
 - ▶ **Moje datoteke:** Otvara mapu Glasovne snimke u Moje datoteke.
8. Pritisnite desnu soft tipku da se zatvori prozor dodatnog izbornika.

Imenik [Izbornik 8]

Dodaj novo

Izbornik 8.1

Možete upisati novu adresu kontakta. Možete upisati ime , različite brojeve telefona i email adresu novog kontakta. Kontakt možete staviti u neku grupu, uključiti sliku ili avatar, pridružiti odabrani ton zvona i čak unijeti bilješku za kontakt. Druga polja uključuju URL početne stranice, kućnu adresu, ime tvrtke, titulu i adresu tvrtke. Možete upisivati i upravljati adresama kontakata ovisno o količini memorije.

Popis kontakata

Izbornik 8.2

Služi za traženje kontakata. Pretpostavljeno traženje je po imenu. Način i rezultat pretrage pojavljuju se u prozoru Traženja. Možete pozvati ili poslati poruku odabranom telefonskom broju. Pretraživanje može biti i po telefonskom broju ili imenu grupe.

Grupe

Izbornik 8.3

Možete organizirati podatke o grupi (one spremljene u telefon i one na USIM kartici). U memoriji telefona postoje 4 pretpostavljene grupe: Obitelj, Prijatelji, Kolege i Škola. Možete dodati, urediti i izbrisati grupe. Ako ton zvona nije preciziran za neki broj, poziv s tog broja ima zvuk pridružen toj grupi.

Brzo biranja


Izbornik 8.4

Možete upravljati brzim biranje. Brzo biranje je između 2-9. Možete upisati brza biranja za određenu kontakt adresu s 5 različitih brojeva, a kontakt adresa može imati više brzih biranja.

Servisni brojevi

Izbornik 8.5

Možete vidjeti popis Brojeva usluga (SDN) koje daje vaš davatelj usluga (ako ih podržava USIM kartica).

To su brojevi za hitne slučajeve, informacije o telefonskom imeniku i brojevi govorne pošte. Nakon odabira broja usluge, sa  nazovite servisni centar.

Vlastiti broj

Izbornik 8.6

Prikaz vašeg telefonskog broja na USIM kartici. Svoje brojeve koje koristite možete zabilježiti na USIM kartici.

Postavke

Izbornik 8.7

Prikaži kontakte od

(Izbornik 8.7.1)

Odaberite koji će se podatak o kontaktu pokazati (iz memorije telefona, iz USIM kartice ili iz obje). Pretpostavljena postavka je Sve.

Prikaz slike/avataara

(Izbornik 8.7.2)

Odaberite da li da se slika/avatar pokaže ili ne.

Sinhroniz. kontakta

(Izbornik 8.7.3)

(Napomena: Ova usluga nije dostupna u svim zemljama. Nazovite svog davatelja usluga za detalje.)

Možete sinkronizirati podatke o kontaktu između telefona i servera.

Kopiraj sve

(Izbornik 8.7.4)

Možete kopirati kontakte iz memorije telefona na USIM karticu ili obrnuto. Možete kopirati sve stavke odjednom ili jedan po jedan.

Premjesti sve

(Izbornik 8.7.5)

Možete premjestiti kontakte iz memorije telefona na USIM karticu ili obrnuto. Možete ih premjestiti sve odjednom ili jedan po jedan.

Izbriši kontakte

(Izbornik 8.7.6)

Briše sve podatke o kontaktu. Možete izbrisati sve kontakte spremljene u memoriju mobitela kao i one na USIM kartici.

Popis poziva [Izbornik 9]

Možete provjeriti popis neodgovorenih, primljenih i biranih poziva ako mreža podržava uslugu Calling Line Identification (CLI) unutar svog područja.

Broj i ime (ako je dostupno) pokazuje se zajedno s datumom i vremenom poziva. Možete pregledati vrijeme kad su poziv bili upućeni.

Svi pozivi Izbornik 9.1

Možete vidjeti podatke o svim neodgovorenim, primljenim i biranim pozivima. Možete nazvati ili poslati poruku na broj koji ste odabrali na popisu. Broj možete i spremići u Kontakte.

Odlazni pozivi Izbornik 9.2

Možete vidjeti popis biranih brojeva, nazvati, poslati poruku i spremići broj u Kontakte.

Primljeni pozivi Izbornik 9.3

Možete vidjeti popis primljenih poziva, nazvati, poslati poruku i spremići broj u Kontakte.

Propušteni pozivi Izbornik 9.4

Možete vidjeti popis neodgovorenih poziva, nazvati, poslati poruku i spremići broj u Kontakte.

USIM Tool Kit [Izbornik *]

Ovisno o tome da li imate SAT podržane usluge ili ne (npr. USIM Application Toolkit) na USIM kartici, pokazuje se izbornik (Izbornik *) koji može biti različit.

Ako USIM kartica podržava SAT usluge, ovaj izbornik će imati ime operatera i njegove specifične usluge na USIM kartici, na primjer “Specijalno”. U tom slučaju provjerite podatke koje ste dobili uz svoju USIM karticu o tome kako koristiti pripadajuće mogućnosti.

Ako USIM kartica ne podržavat SAT usluge, ovaj izbornik će biti **Alarmi**. Za mogućnosti izbornika **Alarma** vidi str. 62.

Video poziv [Izbornik 0]

Pomoću ovog izbornika možete uputiti video poziv.

1. Unesite broj koji želite nazvati.

- ▶ Možete utipkati broj.
- ▶ Možete odabrati broj u Kontaktima lijevom soft tipkom [Kontakti].
- ▶ Možete naći broj u popisu poziva pritiskom na

2. Pritisnite desnu soft tipku [V-poz.] za video poziv.

Za vrijeme video poziva

Kad uputite video poziv, na zaslonu će biti prikazano ime kontakta i trajanje poziva, sliku kontakta, indikator glasnoće, video opcije i Vaša slika.

Imate pristup sljedećim izbornicima pritiskom na lijevu soft tipku [Opcije].

- ▶ Mikrofon uključen/ Mikrofon isključen
- ▶ Zvučnik uključen/ Zvučnik isključen
- ▶ Razgovor putem Bluetootha/ Razgovor putem telefona
- ▶ Privatni način rada/ Javni način rada

- ▶ Zadrži/Nastavi
- ▶ Snimi
- ▶ Pregled broja pošiljatelja
- ▶ Postavke
- ▶ Završi poziv

Dolazni video poziv

Kad primite video poziv, podaci o toj osobi se prikazuju na sljedeći način.


- ▶ **Slika/Animacija:** Prikazuje identifikacijsku sliku, grafičku sliku konfiguriranu u Kontaktima ili pretpostavljenu animaciju koja označava dolazni poziv.
- ▶ **Broj i ime pozivatelja:** Prikazuje broj pozivatelja. Ako je broj spremljen u Kontakte, pojavljuje se ime kontakta.

Postavka identifikacijske slike i animacije koristi se redoslijedom iz Kontakata, video datoteka tona zvona iz grupe i video datoteka iz Profila.

Možete postaviti i zvuk dolaznog video poziva. Postavka zvuka se koristi za Kontakte, Ton zvuka grupe i Profile.

Možete se javiti na dolazni poziv pritiskom na lijevu soft tipku [Prihvati].

Zvono dolaznog poziva može se utišati pritiskom na desnu soft tipku [Tiho].

Možete ga stišati dužim držanjem tipke  na lijevoj strani telefona.

Kad je zvono utišano, pritisnite desnu soft tipku [Odbaci] za odbijanje dolaznog poziva.

Postavke [Izbornik #]


Postavke telefona

Izbornik #.1

Profil

(Izbornik #.1.1)

Možete odabrati ton zvona ili vibraciju za dolazni poziv i odrediti zvuk i glasnoću zvona, ton tipki i zvučni efekt, ovisno o profilu. Dostupni profili uključuju [Uobičajeno], [Tiho], [Samo vibracija], [Vani], [Slušalica], [Prilagođeno 1], [Prilagođeno 2] i [Prilagođeno 3].

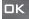Odaberite profil i pritisnite tipku za potvrdu  da se uključi taj profil. Nakon što ste pritisnuli lijevu soft tipku [Opcije], odaberite izbornik Uredi za profil [Uobičajeno], [Vani], [Slušalica], [Prilagođeno 1], [Prilagođeno 2] i [Prilagođeno 3] čiju konfiguraciju želite promijeniti. Različite opcije popisa dostupne za svaki profil koji ste odabrali za uređivanje.

Upozorenje putem

Ova opcija određuje način obavještanja o dolaznim pozivima. Možete odabrati [Zvono], [Vibracija], [Tiho], [Zvono i vibracija], [Zvono nakon vibr.],

[Maksimalna jačina zvona i vibriranja].

Melodija glas. poz.

Možete odabrati zvono za dolazne glasovne pozive.

Melodija video poziva

Možete odabrati zvono za dolazne video pozive.

Glasnoća

Odaberite jačinu zvona.

Obavijest o poruci

Možete odabrati koliko često da Vas telefon obavještava o primljenoj poruci dok ju ne pročitate.

Ton poruke

Možete odabrati datoteku među osobnim datotekama ili pretpostavljenim datotekama koja će se čuti kad primite poruku.

Ton tipki

Možete odrediti zvuk tipke koji će se čuti kad pritisnete neku tipku.

Glasn.zv.tipki

Možete odrediti glasnoću tona koji ste odabrali za tipke, možete birati 7 nivoa.

Zvuk kliznog otvaranja

Odaberite zvuk koji će se čuti kad otvarate i zatvarate telefon.

Ton potvrde

Zvuk koji će se čuti kod potvrde za poduzetu operaciju.

Zvuk za uključenje

Možete odrediti zvučni efekt koji će se čuti kod uključjenja telefona.

Odabir zvuka za uklj.

Možete odabrati koja datoteka će svirati kad uključite telefon.

Zvuk za isključenje

Možete odrediti zvučni efekt koji će se čuti kod isključenja telefona.

Odabir zv.za isklj.

Možete odabrati koja datoteka će svirati kad isključite telefon.

Datum i vrijeme (Izbornik #.1.2)

Iako se točno vrijeme pojavljuje automatski čim se telefon registrira na mrežu, korisnici mogu sami odrediti vrijeme i datum u ovom izborniku. Vrijeme koje odredi korisnik vrijedi samo dok je telefon uključen.

Vrijeme

1. Odaberite stavku **Vrijeme** s popisa Datum i vrijeme, zatim pritisnite **OK**.
2. Dodite na željeno polje, Sat, Minute ili am/pm pomoću strelica. (Ako ste odabrali 12-satni format vremena)
3. Unesite sate i minute pomoću brojčanih tipki.
4. Odaberite format vremena s **◀** / **▶**.
5. Dodite do indikatora odabranog formata tj. isklj., kukavica ili crkveno zvono.
6. Pritisnite desnu soft tipku [Gotovo] da odaberete vrijeme od posebne važnosti.

Datum

1. Odaberite **Datum** na popisu Datum i vrijeme, tada pritisnite **OK**.
2. Odaberite format datuma sa **◀** / **▶**.

3. Unesite **dan, mjesec i godinu** pomoću brojčanih tipki.
4. Pritisnite desnu soft tipku [Gotovo] da odaberete datum od posebne važnosti.

Auto. ažuriraj datum/v

Kad se Automatsko ažuriranje postavi na **Uklj.**, vrijeme i datum se prilagođava vremenskoj zoni. Ako je odabrano Prvo potvrdi, treba prvo potvrditi promjenu.

Ljetno vrijeme

Odaberite da li da se uključi ljetno računanje vremena ili ne. Možete odabrati Razliku ljetnog vremena svog odabranog grada za 1 sat ili 2 sata.

Jezik

(Izbornik #.1.3)

Odaberite jezik na zaslonu. Možete odabrati opciju automatski za promjenu jezika na zaslonu u jezik podržan na USIM kartici.


Sigurnost

(Izbornik #.1.4)

Zahtjev za PIN šifrom

Kad je postavljeno na Uklj., morate unijeti PIN kod svakog uključivanja telefona.

Napomena

- ▶ Tipka  u prozoru unosa PIN koda služi za vraćanje na prethodni korak.
- ▶ Ako 3 puta unesete krivi PIN kod, on više neće biti važeći. Morat ćete unijeti PUK (PIN Unblock Key) kod za ponovno konfiguriranje PIN koda.
- ▶ PUK kod smijete unijeti najviše 10 puta. (Napomena: Ako 10 puta unesete pogrešan PUK kod, USIM kartica će biti blokirana i morat ćete ju zamijeniti.)
- ▶ Ako se zahtjev za PIN kodom ne može isključiti pomoću postavki operatora, nećete moći odabrati tu stavku u izborniku.

Zaključavanje telefona

Telefon možete zaključati. Dostupne su ove 4 funkcije zaključavanja.

Prilikom uključivanja: Zaključava telefon kod svakog uključivanja.

Ako je SIM promjenjena: Zaključava telefon kod promjene USIM kartice.

Odmah: Odmah zaključava telefon.

Ništa: Poništavanje zaključavanja.

Od Vas se traži da unesete sigurnosni kod za potvrdu odabira.

- ▶ Za otključavanje telefona, morate unijeti sigurnosni kod.





Promijeni šifre

Možete promijeniti PIN, PIN2, lozinku mobitela i lozinku zabrane poziva.


PIN šifra

PIN je skraćenica za Personal Identification Number i koristi se za sprječavanje neovlaštene uporabe mobitela.

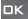Procedura za promjenu PIN koda

1. Odaberite 'PIN kod' na popisu 'Promjena  koda' i pritisnite .
 2. Unesite važeći PIN, tada pritisnite tipku .
 3. Unesite PIN kod, zatim pritisnite tipku .
 4. Još jednom unesite PIN kod i pritisnite tipku .
- ▶ Ako je PIN različit od onog iz 3. koraka, ponovite postupak od 3. koraka.
 - 5. Ako se PIN pravilno promijeni, pojavljuje se poruka Promijenjeno. Ako unesete

neispravan PIN u 2. koraku, postupak treba ponoviti od 2. koraka, a broj pokušaja unosa se povećava za 1.

6. Tipka  u prozoru zahtjeva za PIN kodom služi za povratak na prethodni korak.

Napomena

- ▶ Nakon tri neispravna unosa PIN koda u prozoru za unos PIN koda PIN postaje nevažeći. Tada morate unijeti PUK (PIN Unblock Key) za ponovnim određivanjem PIN koda. Možete najviše 10 puta unijeti PUK kode. (Napomena: Ako unesete neispravan PUK kod 10 puta, USIM kartica će bit blokirana i treba ju zamijeniti.)

PIN2 šifra


PIN2 je skraćenica za Personal Identification Number 2, a koristi se za sprječavanje neovlaštene uporabe pomoću PIN-a. Postupak promjene PIN2 koda je isti kao i onaj za PIN kod. Nakon 3 neispravna unosa PIN2 koda, PIN2 kod postaje nevažeći. U tom slučaju morate unijeti PUK2 kod kako biste ga ponovno

moгли koristiti. Možete najviše 10 puta pokušati unijeti PUK2 kao i PUK1. 10 neispravnih unosa PUK2 koda će poništiti PIN2 kod.

S.šifra

Koristi se za promjenu lozinke mobitela. Maksimalni broj unosa nije ograničen kao kod PIN i PIN2.

Zaklj. tipkovnice

Ako odaberete **Isklj.**, tipkovnica će se aktivirati samo kad je poklopac otvoren. Ako odaberete **Uklj.**, možete aktivirati tipkovnicu pritiskom na  na lijevoj strani telefona.

Ušteda energije (Izbornik #.1.5)

Odaberite da li da se uključi štedljiv način rada ili ne.

Status memorije (Izbornik #.1.6)

Korisnička memorija

Ova funkcija pokazuje korisnikovu memoriju mobilnog telefona. Pošto ova funkcija skenira cjelokupnu datoteku radi statistike, potrebno je nekoliko sekundi.

Rezervirana kor. mem.

Ova funkcija pokazuje status memorije rezervirane za korisnika. Uobičajeni sadržaji su SMS poruke, Kontakti, Kalendar, Zadaci, Bilješke. Daje jasan prikaz količine memorije u usporedbi s ukupnom memorijom za svaku stavku.

USIM memorija

Ova funkcija pokazuje status korisnikove memorije USIM kartice.

Vanjska memorija

Ova funkcija pokazuje status memorije korisnika u vanjskoj memoriji. Ova funkcija pokazuje zauzetu i slobodnu memoriju.

Formatiraj vanjsku memoriju

Odaberite ovu opciju za formatiranje vanjske memorije.

Informacije o telefonu

(Izbornik #.1.7)

Ova funkcija pokazuje tel. broj USIM kartice, naziv modela i verziju softvera mobitela.

Reset postavki (Izbornik #.1.8)

Očisti memoriju

Za brisanje podataka u memoriji. Morate unijeti sigurnosni kod.

- ▶ **Sadržaj telefona:** Briše sve download multimedijске sadržaje.
- ▶ **Osobne informacije o telefonu:** Briše osobne podatke kao što su primljene poruke ili email.

Zadana postavka

Služi za resetiranje telefona na početne konfiguracije. Morate unijeti sigurnosni kod.

Postavka zaslona

Izbornik #.2

Ovaj izbornik omogućuje da promijenite postavke zaslona i cijeli grafički izgled prema svom ukusu.

Glavni zaslon (Izbornik #.2.1)

Možete odabrati što će biti prikazano na glavnom zaslonu.

Početni zaslon

- ▶ **Pozadina:** Možete odabrati sliku koja će biti prikazana na glavnom zaslonu.
- ▶ **Prikaži stavke:** Možete odabrati stavke koje će biti prikazane na zaslonu: Kalendar + Sat, Kalendar, Sat, Dvostruki sat ili Ne pokazuj.
- ▶ **Prikazuje ikone prečaca:** Odlučite se da li će ikone za izravan ulaz biti prikazane ili ne.

Odlazni poziv

Možete odabrati sliku koja će biti na zaslonu za vrijeme biranja broja.

Slika kod uključanja

Možete odabrati sliku koja će biti na zaslonu kad uključite telefon.



Slika kod isključenja

Možete odabrati sliku koja će biti na zaslonu kad isključite telefon.

Stil izbornika (Izbornik #.2.2)

Možete birati između Tablice i Jedan po jedan.

Font (Izbornik #.2.3)

Možete odrediti vrstu fonta, veličinu i boju fonta kod pozivanja pomoću tipki  / .

Pozadinsko svjetlo (Izbornik #.2.4)


Možete odabrati dužinu trajanja svjetla na Glavnom zaslonu i tipkovnici odvojeno.

Poruka dobrodošlice (Izbornik #.2.5)

Kad odaberete Uklj., možete napisati pozdravnu poruku.

Java postavke Izbornik #.3

Uključenje profila

1. Pomaknite kursor na profil koji želite uključiti.
2. Tipka  ili odaberite **Uključi** u izborniku **Opcije**.

Dodavanje novog profila

1. Odaberite **Dodaj novo** u izborniku **Opcije**. Potrebno je odrediti ove parametre.

Naziv usluge	Unesite naziv računa za profil.
Način spajanja	Odaberite načine spajanja s postojećeg popisa. (Pretpostavljeno je TCP s proxy posluž.)
IP adresa	Unesite WAP Gateway IP adresu koju ste dobili od operatora (npr 95. 115. 025. 129)
Ulaz proxy poslužitelja	Detalji priključka dobivenih od operatora ovisno o načinu spajanja.
Pristupna točka	Odaberite ulaz s postojećeg popisa. (Za detalje o dodavanju ili uređivanju novih ulaza, vidi str. 97.)

2. Pritisnite desnu soft tipku [Izvršeno] za spremanje eventualnih promjena.

Možete urediti i izbrisati profil ako odaberete **Uredi** ili **Izбриši** u izborniku **Opcije**.

Postavke poruka Izbornik #.4

Za detaljne informacije, vidi str. 52.

Postavke poziva Izbornik #.5

Trajanje poziva (Izbornik #.5.1)

Možete vidjeti vremena poziva po vrsti . Pritisnite lijevu soft tipku [Opcije] da odaberete parcijalnu ili potpunu inicijalizaciju. Pritisnite desnu soft tipku [Isprazni] za aktiviranje sortiranja po odabranoj dužini trajanja. Potreban je sigurnosni kod.

Dostupne opcije:

- ▶ **Posljednji poziv:** Pokazuje vrijeme trajanja posljednjeg poziva u satima/ minutama/sekundama.

- ▶ **Primljeni pozivi:** Pokazuje vrijeme trajanja primljenog poziva.
- ▶ **Birani brojevi:** Vrijeme odlaznog poziva.
- ▶ **Svi pozivi:** ukupno vrijeme svih poziva.

Zabrana poziva (Izbornik #.5.2)

Postoje izbornici zabrane za Glasovne i Video pozive.

Izbornik se sastoji od **Glasovnih poziva**, **Video poziva** i **Isključi sve**. Izbornici Glasovnih poziva i Video poziva imaju sljedeće podizbornike.

Izbornik Zabrane poziva sastoji se od podizbornika **Svi izlazni**, **Izlazni međunarodni**, **Izlazni međunarodni osim svoje zemlje**, **Svi dolazni** i **Dolazni u inozemstvu**.

Izbornik **Svi izlazni** zabranjuje biranje svih izlaznih poziva, izbornik **Izlazni međunarodni** zabranjuje biranje svih međunarodnih brojeva, a izbornik **Izlazni međunarodni osim svoje zemlje** zabranjuje biranje izlaznih međunarodnih brojeva osim za Home PLMN country. Svi dolazni

odbija sve dolazne pozive, a Dolazni u inozemstvu odbija sve dolazne pozive dok je uključen roaming.

Glasovni pozivi

Video pozivi

Svi odlazni

1. Ako je odabran, prima lozinku zabrane od korisnika i uključuje uslugu zabrane na mreži. Pojavljuje se poruka zahtjeva i animacija. Kad mreža odgovori, pojavljuje se rezultat postupka.
2. Kao je odabran izbornik Opcije, uključuje se izbornik Izlazni pozivi. Odaberite izbornik Opcije u soft izbornicima u najdonjem izborniku. Zatim se pojavljuju izbornici Isključi, Uključi, isključi sve, Vidi status i Promjeni lozinku. Odaberite izbornik Uključi za primanje Lozinke zabrane od korisnika i uključenje usluge zabrane na mreži.
Izbornik Isključi isključuje uslugu zabrane nakon što je unesena lozinka.

Izbornik Isključi sve isključuje sve usluge zabrane konfigurirane na mreži nakon što se unese lozinka zabrane. Izbornik Vidi status omogućuje da korisnik vidi trenutnu postavku mreže. Ako odaberete izbornik Vidi status pojavljuje se Poruka sa zahtjevom s animacijom i rezultatom postupka kad mreža odgovori. Izbornik Promjena lozinke omogućuje korisnicima da promijene postojeću lozinku zabrane.

Odlazni međunarodni

1. Ako se odabere, funkcioniра na is način kao i izbornik **Izlazni pozivi**.
2. Kad odaberete izbornik Opcije, on uključuje i upravlja izbornikom Međunarodni pozivi. Funkcionira na isti način kao i izbornik **Izlazni pozivi**.

Izlazni međunarodni pozivi osim u vlastitu državu

1. Ako se odabere, funkcioniра na isti način kao i izbornik **Izlazni pozivi**.
2. Kad odaberete izbornik Opcije - on uključuje i upravlja izbornikom Međunarodni pozivi osim svoje zemlje.

Funkcionira na isti način kao i izbornik Izlazni pozivi.

Svi dolazni

1. Ako se **OK** odabere, funkcionira na isti način kao i izbornik Izlazni pozivi.
2. Kad odaberete izbornik Opcije, on uključuje i upravlja izbornikom Dolazni pozivi. Funkcionira na isti način kao i izbornik Izlazni pozivi.

Ulazni u inozemstvu

1. Ako se **OK** odabere, funkcionira na isti način kao i izbornik Izlazni pozivi.
2. Kad odaberete izbornik Opcije, on uključuje i upravlja izbornikom Odlazni pozivi. Funkcionira na isti način kao i izbornik Izlazni pozivi.

Fiksni brojevi za biranje

(Izbornik #.5.3)

- ▶ **FDN UKLJ./SKLJ.:** Odaberite da li želite uključiti ovu funkciju ili ne. Potreban je PIN.
- ▶ **FDN Popis:** prikazuje trenutni popis fiksnih brojeva. Možete urediti, dodati ili

izbrisati fiksne brojeve. Potrebna je autorizacija s PIN2 kodom za uređivanje popisa. Promjene se spremaju na USIM karticu. Podaci spremljeni na USIM kartici koriste se za zabrane odlaznih poziva.

Količina podataka (Izbornik #.5.4)

Omogućuje provjeru količine svih poslanih, primljenih i prebačenih podataka. (Količina podataka prebačena preko TE priključka se ne računa.) Pritisnite lijevu soft tipku [Opcije] da odaberete djelomično ili potpuno uključenje. Možete koristiti i desnu soft tipku [Isprazni] inicijalizaciju odabrane vrste podataka. Potreban je sigurnosni kod.

Troškovi poziva (Izbornik #.5.5)

1. Ova funkcija pokazuje troškove poziva za Zadnji poziv i Sve pozive.
2. Za uključenje pritisnite desnu soft tipku [Opcije] i unesite PIN2 kod.
3. Možete odabrati Jedinica ili Valuta pod

Postavi trošak poziva. Ovisno o postavki, trošak se pokazuje za vrijeme razgovora (Ako USIM i mreža podržavaju Advice Of Charge (AOC) (Troškovni savjet)).

4. U konfiguraciji Postavi limit, odaberite **Uklj.** Za određivanje limita. Kad ste odredili limit, a Troškovi su dosegli taj limit, pozivanje neće biti dozvoljeno.

Preusmjerenja (Izbornik #.5.6)

Postoje izbornici skretanja poziva za glasovne i video pozive.

Izbornik se sastoji od Glasovnih poziva, Video poziva i Isključi sve.

Glasovni pozivi

Svi glasovni pozivi

Kad je zauzeto

Nema odgovora

Nedostupno

1. Ako ste odabrali izbornik Isključenje broj za skretanje registriran na mreži se briše. Dok čekate rezultat mreže, pojavljuju se poruka za zahtjevom i


animacija. Kad mreža odgovori na zaslону se pojavljuje rezultat.

2. Ako je odabrano Na broj pojavljuje se prozor u koji treba upisati broj za skretanje. Upišite telefonski broj i pritisnite **OK**. Dok čekate odgovor mreže, pojavljuju se poruka za zahtjevom i animacija. Kad mreža odgovori na zaslону se pojavljuje rezultat.
3. Kad je odabrano Lista zadnjih skretanja provjerava se odabrani broj za skretanje. Odaberite broj i pritisnite tipku **OK**. Pojavljuju se poruka za zahtjevom i animacija. Kad mreža odgovori na zaslону se pojavljuje rezultat.
4. **Izbornik Opcije**
Nakon što ste uključili izbornik Svi glasovni pozivi, odabirom izbornika Opcije na dnu popisa izbornika, pojavljuju se izbornici Isključi, Uključi, Isključi sve, Vidi status i Isprazni listu. Uključi: Dodite na postavke da uključite skretanje poziva.


Vidi status pokazuje postavke mreže. Ako odaberete taj izbornik pojavljuje se zahtjev i animacija. Tada se pojavljuju postavke mreže s podacima s mreže. Ako odaberete Status desnom soft tipkom dobivate isti rezultat. Ako odaberete izbornik Isključi, pozivi za skretanje registrirani na mreži se brišu nakon Vaše potvrde. Ako odaberete izbornik Otkazi sve pojavit će se rezultati nakon što se pokaže poruka i animacija. Izbornik Isprazni listu će izbrisati sve brojeve za skretanje.

Video pozivi

Svi video pozivi

1. Ako ste odabrali izbornik Isključenje broj za skretanje registriran na mreži se briše. Dok čekate rezultat mreže, pojavljuju se poruka za zahtjevom i animacija. Kad mreža odgovori na zaslonu se pojavljuje rezultat..
2. Ako je odabrano Na broj pojavljuje se prozor u koji treba upisati broj za skretanje. Upišite telefonski broj i pritisnite . Dok čekate odgovor

mreže, pojavljuju se poruka za zahtjevom i animacija. Kad mreža odgovori na zaslonu se pojavljuje rezultat.

3. Kad je odabrano Lista zadnjih skretanja provjerava se odabrani broj za skretanje. Odaberite broj i pritisnite tipku . Pojavljuju se poruka za zahtjevom i animacija. Kad mreža odgovori na zaslonu se pojavljuje rezultat.

4. Izbornik Opcije

Nakon što ste uključili izbornik Svi glasovni pozivi, odabirom izbornika Opcije na dnu popisa izbornika, pojavljuju se izbornici Isključi, Uključi, Isključi sve, Vidi status i Isprazni listu. Uključi: Dođite na postavke (gore1~4) da uključite skretanje poziva. Vidi status pokazuje postavke mreže. Ako odaberete taj izbornik pojavljuje se zahtjev i animacija. Tada se pojavljuju postavke mreže s podacima s mreže. Ako odaberete Status desnom soft tipkom dobivate isti rezultat. Ako odaberete izbornik Isključi, pozivi za

skretanje registrirani na mreži se brišu nakon Vaše potvrde. Ako odaberete izbornik Otkazi sve pojavit će se rezultati nakon što se pokaže poruka i animacija. Izbornik Isprazni listu će izbrisati sve brojeve za skretanje.

Kad je zauzeto

1. Ako odaberete izbornik Isključi, on funkcionira na isti način kao i izbornik Svi glasovni pozivi.
2. Ako odaberete izbornik Na broj, on funkcionira na isti način kao i izbornik Svi glasovni pozivi.
3. Ako odaberete izbornik Lista zadnjih skretanja, on funkcionira na isti način kao i izbornik Svi glasovni pozivi.
4. Ako odaberete izbornik Opcije on funkcionira na isti način kao i izbornik Svi glasovni pozivi.

Nema odgovora

1. **Ako odaberete izbornik**
Isključi on funkcionira na isti način kao i izbornik Svi glasovni pozivi.
2. **Ako odaberete izbornik**
Na broj on funkcionira na isti način kao i

izbornik Svi glasovni pozivi.

3. Ako odaberete izbornik

Lista zadnjih skretanja on funkcionira na isti način kao i izbornik Svi glasovni pozivi.

4. Ako odaberete izbornik Opcije

Uključuje i upravlja izbornikom Nema odgovora. Funkcionira na isti način kao i Svi glasovni pozivi, osim što korisnici mogu promijeniti vrijeme odgode u izborniku Postavi vrijeme čekanja do kojeg se dođe preko popisa izbornika.

Nedostupno

1. Ako odaberete izbornik

Isključi on funkcionira na isti način kao i izbornik Svi glasovni pozivi.

2. Ako odaberete izbornik

Na broj on funkcionira na isti način kao i izbornik Svi glasovni pozivi.

3. Ako odaberete izbornik

Lista zadnjih skretanja, on funkcionira na isti način kao i izbornik Svi glasovni pozivi.

4. Ako odaberete izbornik Opcije, on funkcionira na isti način kao i izbornik Svi glasovni pozivi.

Poziv na čekanju (Izbornik #.5.7)

- ▶ **Aktiviraj:** Uključuje uslugu poziv na čekanju. Ako odaberete ovu uslugu, pojavljuje se poruka i animacija zahtjeva. Kad stigne odgovor mreže dobivate prikaz rezultata.
- ▶ **Deaktiviraj:** Isključuje uslugu poziva na čekanju. Ako odaberete ovu uslugu, pojavljuje se poruka i animacija zahtjeva. Kad stigne odgovor mreže dobivate prikaz rezultata.
- ▶ **Pregled statusa:** Prikazuje znak mreže da je uključena usluga poziva na čekanju. Ako odaberete ovu uslugu, pojavljuje se poruka i animacija zahtjeva. Kad stigne odgovor mreže dobivate prikaz rezultata.

Gov. pošta (Izbornik #.5.8)

Možete dodati ili promijeniti centar govorne pošte.

Video poziv (Izbornik #.5.9)

Možete odabrati izgled zaslona prilikom upućivanja/primanja video poziva.

- ▶ **Pokaži privatnu sliku:** određuje da li da se osobna slika pokaže ili ne.
- ▶ **Odaberi fotografiju:** Biranje zaustavljene slike za zaslon.
- ▶ **Ogledalo:** Uključenje ili isključenje efekta zrcala.
 - **Uključeno:** Prikazuje obrnutu sliku.
 - **Isključeno:** Prikazuje sliku kakva jest.
- ▶ **Vel. moje fotogr.:** odaberite veličinu slike.
- ▶ **Pol. moje fotografije:** Odaberite gdje će slika biti prikazana.

Uobičajene postavke

(Izbornik #.5.0)

Odbacivanje poziva

Možete odbiti dolazni poziv ako to želite.

1. Odaberite **Uklj.** U izborniku Odbij za uključenje ove funkcije. Pojavljuje se izbornik Lista odbijenih.
 2. Odaberite željenu opciju u izborniku Lista odbijenih.
- ▶ **Svi pozivi:** Odbija sve pozive.

Postavke

- ▶ **Kontakti:** Odbija pozive prema brojevima spremljenih u Kontaktima.
- ▶ **Grupe:** Možete odrediti odbijanje grupe iz Kontakata.
- ▶ **Neregistrirani:** odbija pozive koji nisu spremljeni u Kontakte.
- ▶ **Nema ID-a poziv.:** Odbija pozive u kojima se ne vidi broj pozivatelja.

Pošalji moj broj

- ▶ **Post. prema mreži:** Vrijede postavke određene u mreži.
- ▶ **Uključeno:** Vaš broj će biti vidljiv kad upućujete izlazni poziv.
- ▶ **Isključeno:** Vaš broj će biti skriven kad upućujete izlazni poziv.

Aut. ponovno biranje

Kad poziv ne uspije automatski se ponavlja.


Način odgovora

Odaberite način odgovora. Možete odabrati: **Prit.tipku slanja**, **Gore** i **Bilo kojom tipkom**.

Podsjetnik minute razgovora

Određuje da li će se nakon svake minute tijekom razgovora čuti zvučni signal.

BT način odgovaranja

- ▶ **Hands-free:** Možete odgovoriti pomoću Bluetooth slušalice, kad je Bluetooth spojen.
- ▶ **Telefon:** Ako pritisnete  na uređaju za odgovaranje na poziv, možete razgovarati na telefon. Ako pritisnete tipku Bluetooth slušalice za odgovor, možete razgovarati preko Bluetooth slušalice.

To je početni izbor načina odgovora. Dok razgovarate može izmjenjivati uređaj i slušalicu.

Postavke adresara

Izbornik #.6

Za detaljne informacije vidi str.71.
(Izbornik 8.7)

Povezivanje

Izbornik #.7

Bluetooth veza

(Izbornik #.7.1)

Bluetooth spajanje

Telefon ima ugrađenu Bluetooth bežičnu tehnologiju koja omogućuje da se bežično spojite na neki drugi Bluetooth uređaj kao što je handsfree, računalo, PDA ili neki drugi telefon.

Možete npr. razgovarati preko bežičnog Bluetooth handsfree uređaja ili pretražiti Internet. Možete razmijeniti posjetnicu, kalendare i slike.

Napomena

- ▶ Preporuča se da svoj mobitel i Bluetooth uređaj s kojim ste spojeni ne budu udaljeniji od 10 metara. Možete poboljšati komunikaciju tako da pazite da između telefona i Bluetooth uređaja nema nekih predmeta.

1. Uključenje

- **Izbornik > #. Postavke > 7. Povezivanje > 1. Bluetooth veza > 1. Sukladni uređaji**

Za korištenje Bluetooth funkcije, prvo morate postaviti Bluetooth na **Uklj.**.

2. Određivanje Bluetooth postavki

- **Izbornik > #. Postavke > 7. Povezivanje > 1. Bluetooth veza > 2. Postavke**
- **Upotreba Bluetooth-a:** a korištenje Bluetooth funkcije, postavite ju na [Uklj.]. U protivnom odaberite [Isklj.].
- **Vidljivost mog telefona:** Postavite [Vidljivost mog uređaja]na [Pokaži svima] tako da drugi uređaji mogu registrirati vaš uređaj kad traže Bluetooth uređaje. Ako odaberete [Skripen], drugi uređaji neće moći registrirati Vaš telefon kad traže Bluetooth uređaje.
- **Naziv mog telefona:** Možete dati ime svom uređaju koje će se pojaviti na drugim uređajima. Naziv telefona će se pojaviti samo ako ste [Vidljivost mog uređaja]stavili na [Pokaži svima].

Napomena

- ▶ Kad korisnik koristi Bluetooth uređaju svom telefonu, sigurnost uređaja je na Vašu odgovornost. Preporuča se da stavite Bluetooth vidljivost na Skriveno nakon konfiguracije ili uparivanja uređaja. Za dolazne datoteke preko Bluetooth veze, neovisno o uparenim uređajima, možete odabrati da li ćete prihvatiti ili odbiti spajanje, nakon što ste provjerili podatke pošiljaoca.

3. Sukladni uređaji

Upareni uređaji (Kompatibilnost s uređajem)
Ako upareni Bluetooth uređaj već postoji.

• Izbornik > #. Postavke >

7. Povezivanje > 1. Bluetooth veza >

1. Sukladni uređaji > Opcije > Dodaj novo

Ako nema uparenog Bluetooth uređaja.

• Izbornik > #. Postavke >

7. Povezivanje > 1. Bluetooth veza >

1. Sukladni uređaji > Dodaj novo

Opcije

- ▶ **Dodaj novo:** Ovim izbornikom možete upariti novi Bluetooth uređaj sa svojim

mobitelom.

- ▶ **Dodijeli skraceni naziv:** Pomoću ovog izbornika možete preimenovati upareni telefon.

▶ Spajanje/Prekini

1. Ako želite otvoriti priključak za odabrani uređaj, odaberite Spoji.
2. Ako želite zatvoriti priključak za odabrani uređaj, odaberite Odspoji.

- ▶ **Izbriši:** Pomoću ovog izbornika možete izbrisati upareni telefon.


- ▶ **Izbriši sve:** Pomoću ovog izbornika možete izbrisati sve uparene telefone.

<Upareni uređaji>

1. Za traženje Bluetooth uređaja za uparivanje, pritisnite **Dodaj** ili **Dodaj novo**.
2. Zaslom pokazuje Traženje uređaja. Bit će pronađeni Bluetooth uređaji u krugu od 10m.
3. Ako su Bluetooth uređaji pronađeni, ti uređaji se pojavljuju na zaslonu. Ako niti jedan Bluetooth uređaj nije pronađen, pitat će vas da li želite

ponoviti traženje.

4. Postupak uparivanja

- Tipka  . Pojavljuje se prozor na zaslonu u koji treba upisati lozinku.
- Nakon kreiranja lozinke (od 1 do 16 znamenki), korisnik drugog uređaja mora unijeti lozinku za uparivanje. Korisnik drugog uređaja mora unaprijed znati lozinku za uparivanje radi autorizacije.

<Brisanje uređaja>


1. Odaberite uređaj za brisanje na zaslonu Upareni uređaji.
2. Možete izbrisati uređaj pritiskom na tipku Izbrisi ili odabirom Opcije > Izbrisi. Za brisanje svih uparenih uređaja odaberite Opcije > Izbrisi sve.

<Prijenos podataka preko Bluetooth veze>

1. Za prijenos podataka s svog telefona na neki Bluetooth uređaj, prvo odaberite aplikaciju gdje su spremljeni podaci. Na primjer, za slanje podataka iz Moje datoteke na neki uređaj, odaberite

Izbornik > 6. Moje datoteke > 1. Slike / 2. Zvukovi / 3. Video/ 5. Bluetooth podaci / 6. Druge datoteke / 7. Vanjska memorija > Odaberi podatke za prijenos > Pošalji > 3./4. Bluetooth veza

2. Prijenos podataka

- 1) Pojavljuje se zadnji pronađeni uređaj. Ako željeni uređaj ne postoji na popisu, odaberite [Više uređaja].
- 2) Odaberite uređaj na koji želite poslati podatke s popisa na zaslonu i pritisnite tipku .
- 3) Ako druga strana odabere [Da] za [Zahtjev za spajanje], počinjite prijenos podataka.

<Primanje podataka preko Bluetooth veze>

Izbornik > #. Postavke > 7. Povezivanje >

1. Bluetooth veza > 1. Sukladni uređaji

Ako druga strana pokuša prijenos podataka, pitanje [Zahtjev za spajanje] će se pojaviti na zaslonu. Ako odaberete [Da], podaci će biti prebačeni na Vaš telefon.

Za vrijeme prijenosa podataka ikona Bluetooth treperi.

<Mapa za spremanje Bluetooth podataka>

Možete provjeriti da li ste primili podatke ako odaberete Izbornik > 6. Moje datoteke > 5. Bluetooth podaci.

4. Uređaj

<Spajanje slušalice>

Izbornik > #. Postavke > 7. Povezivanje > 1. Bluetooth veza

1. Spojite slušalice prema uputama opisanim u poglavlju uparivanje uređaja.
2. Za korištenje slušalice, odaberite slušalicu među registriranim uređajima, pritisnite tipku Opcije i odaberite 3.Spoji.
3. Da biste provjerili da li je spajanje bilo uspješno, pritisnite tipku Opcije. Ako je pravilno spojena, pojavljuje se 3.Odspoji. Ako nije spojena, pojavljuje se 3.Spoji.

<Spajanje handsfree uređaja>

Izbornik > #. Postavke > 7. Povezivanje >

1. Bluetooth veza
 1. Spojite handsfree prema uputama navedenim u poglavlju Uparivanje uređaja.
 2. Za korištenje handsfree opreme, odaberite handsfree među registriranim uređajima, pritisnite tipku Opcije i odaberite 3.Spoji.
 3. Da biste provjerili da li je spajanje bilo uspješno, pritisnite tipku Opcije. Ako je pravilno spojeno, pojavljuje se 3.Odspoji. Ako nije spojeno, pojavljuje se 3.Spoji.

Sinkronizacija (Izbornik #.7.2)

(Napomena: ova usluga nije dostupna u svim zemljama. Nazovite svog davatelja usluga za detaljne informacije.)

Ako je Sync usluga podržana od strane Vašeg mrežnog operatera, ova usluga sinkronizira podatke u Vašem telefonu i na serveru, kao što su Kontakti, Kalendar i Zadaci, preko bežične mreže.

Spajanje

1. Odaberite stavku u kontaktima i pritisnite **OK**.
2. Spojite se na server s odabranim profilom servera i pojavljuje se animacija sinkronizacije za vrijeme dok sinkronizacija traje.

Dnevnici

Odaberite stavku i tada pritisnite tipku **OK** da vidite koji je bio za posljednju provedenu sinkronizaciju.

Centar sinkr. posl.

1. Odaberite stavku u Server sink. centrima i tada pritisnite **OK**.
2. Možete odrediti profil za sinkronizacijski server.
 - ▶ **Naziv profila:** Ime profila: unesite ime za profil.
 - ▶ **Adresa gl. računala:** Nazovite davatelja usluga.
 - ▶ **IP adresa proxy posluž.:** unesite adresu WAP izlaza i broj priključka.
 - ▶ **Korisničko ime:** Unesite svoj ID za

sinkronizacijski server.

- ▶ **Šifra:** Unesite lozinku.
- ▶ **Kontakti:** Odaberite da li želite sinkronizirati Kontakte ili ne.
- ▶ **Ime kontakta:** Unesite podatke za ime kontakta za pristup serveru.
- ▶ **Kalendar:** Odaberite da li želite sinkronizirati Kalendar ili ne.
- ▶ **Naziv kalendara:** Unesite podatke za ime kalendara za pristup serveru.
- ▶ **Zadaci:** Odaberite da li želite sinkronizirati Zadatke ili ne.
- ▶ **Naziv zadatka:** Unesite podatke za ime zadatka za pristup serveru.
- ▶ **Vrste sinkronizacije:** Odaberite jedan od oblika sinkronizacije.
 - Uobičajeno
Potreban je telefon i server za razmjenu promijenjenih podataka.
 - Podrška (Spremanje podataka)
Telefon šalje sve podatke iz baze podataka na na server. Server bi trebao bazu podataka zamijeniti podacima dobivenim iz telefona. To znači da se podaci iz telefona upisuju

preko podataka na serveru.

- Vrati

Server šalje sve podatke iz baze podataka na telefon. Telefon bi trebao bazu podataka zamijeniti podacima dobivenim sa servera. To znači da se podaci iz servera upisuju preko podataka na telefonu.

- ▶ **Pristupna točka:** Odaberite ulaznu točku za spajanje.

Mreža

(Izbornik #.7.3)

Odabir mreže

Odaberite **Automatski** ili **Ručno**.

- ▶ **Automatski:** Automatsko traženje mreže i registriranje uređaja na mrežu. To se preporuča za najbolju uslugu i kvalitetu.
- ▶ **Ručno:** Sve trenutno dostupne 2G(GSM) i 3G(UMTS) mreže se pokazuju i možete odabrati jednu od njih za registriranje. Ako registracija nije bila uspješna, ponovno se pojavljuje popis dostupnih mreža i možete odabrati neku od njih.

Mrežni način rada

Možete odrediti vrstu mreže prilikom traženja u izborniku **Odaberi mrežu**.

- ▶ **Automatski:** Traži sve dostupne mreže.
- ▶ **UMTS:** Traži samo mreže koje podržavaju 3G.
- ▶ **GSM 900/1800:** Traži samo mreže koje podržavaju GSM 900/1800.
- ▶ **GSM 1900:** Traži samo mreže koje podržavaju GSM 1900.

Preferirani popisi

Ako se mreža pretražuje automatski, možete dodati svoju omiljenu mrežu da se spojite na nju. Dostupne su sljedeće opcije.

- ▶ **Dodaj novo:** Možete dodati novu mrežu na sljedeći način.
 - **Traži:** Možete odabrati mrežu s popisa u telefonu.
 - **Unesi novu mrežu:** Možete unijeti pozivni broj za zemlju (MCC) i broj mreže (MNC) koji želite dodati. Nakon toga pritisnite tipku Gotovo.

- ▶ **Izbriši:** Briše odabrane mreže.
- ▶ **Uredi:** Možete promijeniti podatke o mreži.
- ▶ **Pomakni gore:** Odabrana mreža se pomiče gore.
- ▶ **Pomakni dolje:** Odabrana mreža se pomiče dolje.

Pristupne točke (Izbornik #.7.4)

Ovaj izbornik pokazuje popis ulaza. Možete kreirati nove profile, izbrisati ih ili urediti pomoću izbornika Opcije. Međutim, ne možete izbrisati niti urediti pretpostavljene postavke koje ovise o varijantama pojedine zemlje.

Ostale stavke možete urediti ako ih odaberete desnom soft tipkom.

Naziv veze	Ime ulaznog profila.
Nositelj	Odaberite nositelja s popisa. (Pretpostavljeno je UMTS.)
Provjera autent.	Odaberite autorizaciju s popisa. (Pretpostavljeno je is Nema autor.)
Korisničko ime	Informaciju daje davatelj usluga.
Šifra	Informaciju daje davatelj usluga.
APN	APN za pristup mreži. Informaciju daje davatelj usluga.

- ▶ Pritisnite tipku **Gotovo** za spremanje bilo kakvih promjena.

Postavke preglednika

(Izbornik #.7.5)

Profil

Odaberite odgovarajući profil pritiskom na . To će uključiti profil uključenog pretraživača.

Sigurnost

Ako korisnik pritisne Certifikate, pokazuju se podaci o certifikatu. Korisnik može izbrisati podatke o zaštićenoj posjeti pritiskom na Izbriši posjet.

Potvrde

Ako su spremljeni, ovdje možete naći popis root/ca certifikata potrebnih za WTLS/TLS.

Certifikati se mogu vidjeti na popisu.

Sesija izbrisana

Zaštićeni (WTLS/ TLS) podaci se mogu izbrisati pomoću ove opcije. Podaci se trebaju brisati da bi se to moglo ponoviti sljedeći puta.

Šifriranje znakova

Postavlja pretpostavljena slova pretraživača na jedna od sljedećih.

- ▶ Automatski, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

Kontrola pomicanja

Možete odrediti brzinu prelaženja po redovima. Odaberite Malo(1 linija), Srednje(2 linije), Veliko(3 linije).

Prikaz slike

Uključuje i isključuje prikaz slike za vrijeme pretraživanja.

Napomena

- ▶ Uključenje ove funkcije će odgoditi prikaz slika dok se prijenos ne završi. Isključenje ove funkcije ne dozvoljava usnimavanje slika sa servera, zbog čega je prijenos puno brži.

Cache

Uključenje ove funkcije spremanje stranica na kojima ste bili u Vaš telefon. Kad je stranica pohranjena u cache to će uvelike ubrzati brzinu učitavanja kod budućih pretraživanja te iste stranice.

Cookies

Uključenje ove funkcije omogućuje spremanje cookies poslanih sa servera. Ako je isključena cookies ne mogu biti spremljeni u vaš telefon.

Javascript

Odaberite Uklj./Isklj..

Reset postavke

Odaberite ovu opciju za vraćanje na pretpostavljene vrijednosti.

Streaming (Menu #.7.6)

Ako želite postaviti drukčiju postavku mreže za streaming sadržaj, možete postaviti drukčije postavke mreže.

Dial-up mreža (Menu #.7.7)

Telefon možete koristiti s različitim oblicima spajanja na računalo i raznolikim prijenosima podatka. Odaberite USB i Bluetooth koji želite koristiti za spajanje.

Dodatna oprema

Postoji različita oprema za vaš mobilni telefon. Tu opremu možete odabrati, prema vašim osobnim komunikacijskim zahtjevima.

Putni punjač

Ovaj punjač vam omogućuje punjenje baterije, dok ste vi van kuće ili ureda.



Standardna baterija



USB kabel za PC/CD

Možete spojiti Vaš telefon s računalom i međusobno izmijeniti podatke i sadržaje.



Kombinirani upravljač za Hands free slušalicu i player

Stereo slušalice



Upravljač: Tipka

Odgovori i kraj, upravljanje player-om, glasnoćom, tipka za zaključavanje i mikروفon.



Nakon što ste spojili slušalicu i upravljač, Utaknite konektor upravljača u utičnicu za slušalicu na desnoj strani telefona.

Napomena

- ▶ Uvijek koristite originalnu LG opremu.
- ▶ Ne pridržavanje toga može poništiti vaša prava na garanciju.
- ▶ Oprema može biti različita u različitim regijama: molimo vas da provjerite u najbližem servisu.

Tehnički podaci

Općenito

Naziv proizvoda: KU800

Sustav: GSM900/DCS1800/PCS 1900,
WCDMA 2100

Neto težina: 67.5g (Bez baterije)

Radna temperatura

Max: +55°C

Min: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU800

Trade Name

LG

CE 0889

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.5.1, ETSI EN 301 489-07 V1.2.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.2.1
ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-2 V2.2.1
ETSI EN 301 908-1 V2.2.1, ETSI EN 300 328 V1.4.1
EN 50369:2001; EN 50361:2001
EN 60950 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

19.July. 2006

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, e-mail : seockm @ lge.com

Signature of representative

| KU800 User Guide |

- English

This document is the user guide for the LG KU800 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/CE.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents

Introduction	5	General Functions	26	Vodafone live!	34
For Your Safety	6	Making and answering calls		Homepage	
Guidelines for Safe and Efficient Use	7	Entering text	28	Enter URL	
KU800 Features	12	Changing the text input mode	29	Enter address	
Parts of the phone		Using the T9 Modes		Recent pages	
How to Use Touch Keys	16	Using the ABC Mode	30	Bookmarks	
Getting Started	18	Using the 123 (Number) mode	31	Saved pages	35
Installing the USIM card and battery		Using the symbol mode		Browser settings	
Charging the Battery	19	Overview of Menu Functions	32	Profiles	
Disconnecting the charger	20	Entertainment	33	Security	
How to use a microSD memory card	21	Games & Applications		Character encoding	
Turning the handset on/off	22	Mobile TV		Scrolling control	
Access codes	23	Java settings		Show image	36
Display information	24			Cache	
				Cookies	
				JavaScript	
				Reset settings	
				Music	37
				Now playing	
				All tracks	
				Playlists	
				Music store	


Camera	38	My Files	58	Organiser & Tools	63
Camera		Pictures		Alarms	
Video recorder	41	Sounds	59	Calendar	
Messaging	44	Videos		Tasks	65
Create new		Game & Applications	61	Memo	66
Message		Bluetooth data		Calculator	
Email	46	Other files	62	Converter	67
Inbox	47	External memory		Currency	
Drafts	48			Surface	
Outbox				Length	
Sent messages	49			Weight	68
Email				Temperature	
Templates	51			Volume	
Text templates				Velocity	
Multimedia templates				World time	69
Messaging settings				Voice recorder	
SMS	51				
MMS	52				
E-mail	54				
Info service	57				
Service message					

Table of Contents

Contacts	71	Video call	75	Fixed dial numbers	87
Add new		During a video call		Data volume	
Contacts list		Incoming video call		Call costs	
Groups		Settings	77	Diverts	88
Speed dials		Phone settings		Call waiting	91
Service dial numbers		Profile		Voicemail	
Own number	72	Date & time	78	Video call	
Settings		Language	79	Common settings	92
View contacts from		Security		Contact settings	93
Show image/avatar		Power save	81	Connectivity	
Synchronise contact		Memory status		Bluetooth	
Copy all		Handset Information	82	Synchronisation	97
Move all		Reset settings		Network	98
Clear contacts		Display settings	83	Access points	100
Calls	73	Main display		Browser settings	
All calls		Menu style		Streaming	101
Dialled calls		Font		Dial-up network	
Received calls		Backlight		Accessories	102
Missed calls		Welcome message		Technical data	103
USIM Tool Kit	74	Java settings	84	Index	104
		Messaging settings			
		Call settings			
		Call durations			
		Call barring	85		

Introduction

 Congratulations on your purchase of the advanced and compact KU800 3G video mobile phone, designed to operate with the latest digital mobile communication technology.

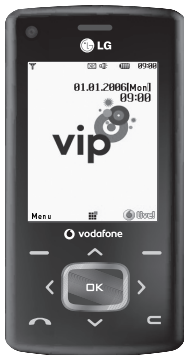

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Use of phone cases with magnetic locks with slide type phones has caused problems such as loss of network signal and phones powering off.

For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

CAUTION!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Certification information (SAR)

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this device when tested for use at the ear is 0.418 W/kg.

Guidelines for Safe and Efficient Use

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 0.802 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

Product care and maintenance

WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.

- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please.

- ▶ Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.

Guidelines for Safe and Efficient Use

- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst outside and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are

exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Battery information and care

 
- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

KU800 Features

Parts of the phone


Open view



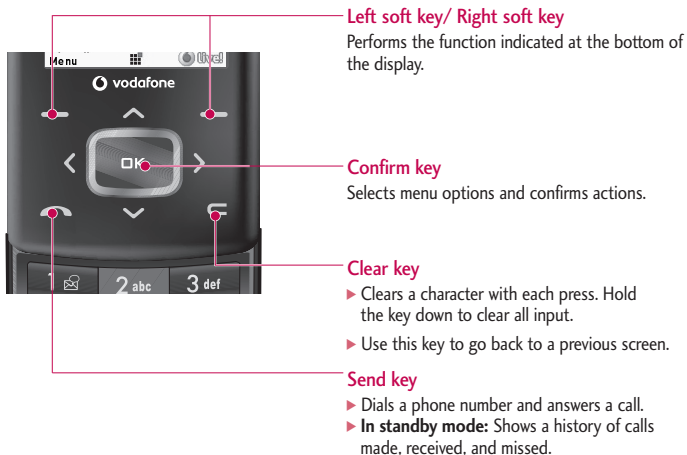


KU800 Features

 Left side view

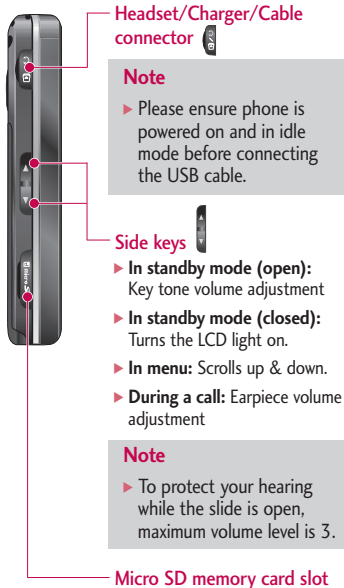

Right side view

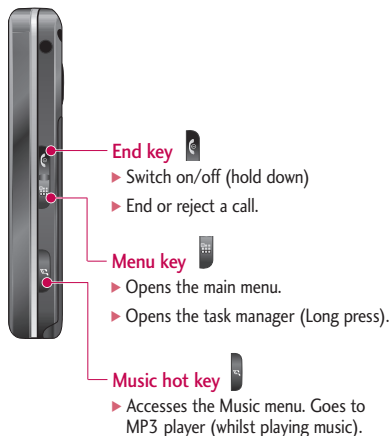 

Rear view



 
How to Use Touch Keys

- ▶ This product's keys on the slide are touch keys.
- ▶ Be sure to read “Cautions for Touch Keys” before using touch keys.

Cautions for Touch Keys

1. Make sure your hands are clean and dry.

- Remove all moisture from the surface of your hands or the touch keys in a humid environment.

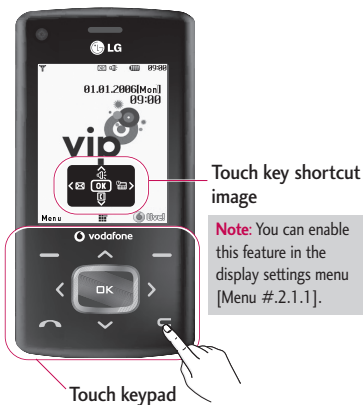

Touch key shortcut image

Note: You can enable this feature in the display settings menu [Menu #.2.1.1].

2. You do not need to press hard on the touch keys to make them work normally.

Do not subject the product to severe impact, as this may damage the touch key sensors.

3. Use the **tip** of your finger to press exactly on the touch key you want, being careful not to touch the keys for other functions.

4. When both the home screen and touch key lights are off, pressing a touch key will not turn on the home screen light. Press and the home screen light will turn back on (touch keys do not work when the touch key lights are off).

5. If the slide is closed and the **Touch Protection function** is on, during calls the **Touch key Lock** function is automatically enabled. (For details, see “Touch Key Status When Using Mobile Phone.”)

6. Touch keys may not work normally if a mobile phone case or plastic cover is covering them. Also, touch keys may not work normally if you are wearing gloves.
7. Keep metal and other conductive materials away from the surface of the touch keys, as contact with them may result in an error.

Touch Key Status When Using Mobile Phone


When the slide is closed, to prevent indiscreet action of the touch keys whilst using the phone or during calls, the **Touch Protection** function is automatically enabled. (In this case, the touch keys will not work even if they are pressed)

1. When slide is closed

- When the slide is closed, the Touch Protection function is automatically enabled. (Opening the slide will automatically disable it.)
- To disable Touch Protection when the slide is closed, press the volume key twice.

- After disabling Touch Protection, if there is no key action for a certain duration (3 seconds), the Touch Protection function is enabled again.

2. During calls

- During calls, regardless of slide status, the Touch Protection function is automatically enabled.
- To disable the Touch Protection, press any key except .
- After disabling the Touch key Lock, if there is no key action for a certain duration (3 seconds), the Touch Protection function is enabled again.

Note

- ▶ For user convenience, the touch key image with the functions of each touch key is shown on the home screen when purchasing products.

Getting Started

Installing the USIM card and battery

1. Installing the USIM card.

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset.

If your USIM card is removed then your handset becomes unusable (except for emergency calls) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.



To insert the USIM card



To remove the USIM card

Note

- ▶ The metal contact of the USIM card can easily be damaged by scratches. Pay special attention to the USIM card while handling. Follow the instructions supplied with the USIM card.

2. Installing the battery.

Slide the battery upwards until it snaps back into place.



To remove the battery.

Turn the power off. (If the power is left on, there is a chance you could lose the stored telephone numbers and messages.)

Press and hold down the battery release button and slide the battery down.



Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the left side of the phone until it clicks into place.
2. Connect the other end of the travel adapter to the mains socket.



Note

► Only use the charger included in the box.

Getting Started

3. The moving bars on the battery icon will stop after charging is complete.
4. Ensure the battery is fully charged before using the phone for the first time.

CAUTION!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the USIM card while charging.

WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery.
This may cause a fire.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.



How to use a microSD memory card



<MicroSD memory card>

<How to insert a microSD memory card>

1. Turn the phone off. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.
2. Lift the plastic cover which protects the microSD slot.



3. Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD. Don't push the microSD too much. If it doesn't go into the slot easily, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.
4. Once inserted, push the memory card until you hear a **Click**, meaning that the microSD has been correctly engaged.



5. Close the plastic slot protection.
6. To remove the memory card, turn the phone off, open the slot protection and push the microSD to unlock it. Carefully extract the memory card.

Getting Started

Attention:

- ▶ Avoid using the Flash Memory Card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than those made by microSD.
- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.

For more information on the microSD, please refer to the memory card instruction manual.

Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu > Settings > Phone settings > Memory status > Format external memory**, then press **OK**. This operation should only be done when you

insert the memory card for the first time. During formatting various folders will be created for different data types.

Turning the handset on/off

Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged. Press and hold **Power** until the power comes on. Enter the USIM PIN code that was supplied with your USIM card if the **PIN code request** is set to **On**. (Note: Please refer to page 79) After a few seconds you will be registered on the network.

Turning your handset off

Press and hold **Power** until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except the PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu #.1.4.3].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your USIM card against unauthorised use. The PIN code is usually supplied with the USIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time it is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some USIM cards, is required to access functions such as **Fixed dial number**. These functions are only available if supported by your USIM card.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unblock a blocked PIN code. The PUK code may be supplied with the USIM card. If not, contact your network operator's customer service department for the code. If you lose the code, contact your network operator's customer service department.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some USIM cards, is required to unblock a blocked PIN2 code. If you lose the code, contact your network operator's customer service department.


Security code (4 to 8 digits)

The security code prevents unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to the factory settings.

Getting Started

Display information


No USIM idle screen

This is the initial screen of the phone that appears when there is no USIM card installed in the phone, or the installed USIM card is invalid. In this screen, users can only make emergency calls, and turn the phone off. To turn the phone off, press and hold down  for a few seconds.

Screen structure

If there is no USIM card installed, an animation telling you to insert a USIM card appears. If the USIM card inserted into the phone is invalid, an animation telling you that the USIM card is locked appears.

Emergency call function

The right soft key is represented by “Emergency” on the screen. Press the right soft key or dial your emergency number using the number keys, and then press  to make an emergency call.

Idle screen

The idle screen appears when you have installed a proper USIM card and turned the phone on.


Screen structure

Idle screen consists of the operator’s name, indicators, date and time on a background image. You can change the wallpaper in the **Display settings** menu.

Numbering screen

The numbering screen appears when a number key is pressed in the idle screen.


Screen structure

The numbering screen consists of status indicators, dialled number and soft menu. Status indicators are the same as those of the idle screen. You can change the size and colour of the dialling font in the **Display settings** menu. You can make a call while dialling a phone number by pressing .

Soft key

You can use the soft keys for several functions while dialling a number. Using the left soft key, you can make a video call, send a message to the number, save the number to Contacts.

Handset lock screen

When the **Handset lock** function is selected, you can only make an emergency call, release the lock, and turn off the phone in this screen. As always, you can turn the phone off by pressing and holding  for a few seconds.


Screen structure

The screen structure of the Handset lock screen is the same as that of the idle screen, except that the lock message appears instead of the idle screen.

Emergency call function

You can make an emergency call using the right soft key. As with the **No USIM idle screen**, only emergency numbers can be dialled.

Unlock function

If you press , a popup screen appears asking you to input the Security code to unlock the phone. The Security code is configured in the **Change codes** (#. Settings > 1. Phone settings > 4. Security > 3. Change codes). If you key in an incorrect Security Code, the phone will remain in **Handset lock** status. If you key in the correct Security code, the phone will be unlocked, and the idle screen will be displayed. If you have turned the phone off in the **Handset lock** status, you will find the phone remains in **Handset lock** status when you turn it on.





Barring password

This service obstructs calling service in some conditions. This condition can be edited using the **Call barring** feature (#. Settings > 5. Call settings > 2. Call barring). The barring password is required when you use the call barring function. The password is obtained from your network operator's customer service when you subscribe to this service. While this service is activated, the caller will hear the information message that the call is not connected because of the call barring.


General Functions

Making and answering calls





Making a voice call

1. Enter the number including the full area code.
 - ▶ To delete a digit press .
 - ▶ To delete all digits press and hold .
2. Press  to make the call.
3. Press  to finish the call, or close the handset.

Note



- ▶ To activate the speakerphone during a call, activate the touch keys and press .

Making a call from the call logs

1. In standby mode, press  and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using  / .
3. Press  to call the number.


Making a video call

You can make a video call in a 3G covered service area. If the called user has a 3G video phone in a 3G covered service area, the call will be established. You can also answer a video call for video incoming call. To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.
 - ▶ To correct mistakes, press  briefly to delete the last number, or press and hold  to delete all numbers.
2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press the left soft key [Options] and select **Make video call**.
 - ▶ You will be notified that you will need to close other applications to make the video call.




Note

▶ The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.



- Adjust the camera position if necessary.
- Press  to finish the call, or close the handset.

Making a voice/video call from Contacts



It is easy to call anyone whose number you have stored in your Contacts.

- Press  to access the contacts list.
- Scroll to the contact to make a call.
- Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- Press  to finish the call.

Making international calls

- Press and hold  for the international prefix. The '+' character prefixes the international access code.
- Enter the country code, area code, and the phone number.
- Press .

Adjusting the volume

During a call, if you want to adjust the earpiece volume, use  on the left side of the phone. In idle mode, you can adjust the key volume using .




Answering a call


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

General Functions


1. Open the slider to answer an incoming call.

Note


- ▶ To reject an incoming call, press  or the right soft key twice.
- ▶ If you set **Answer mode** as **Press send key** (Menu #.5.0.4), you can answer the call by pressing  after opening the slider.
- ▶ If the answer mode is set to Press any key, any key will answer a call except for .

2. End the call by closing the handset or pressing .


Note

- ▶ You can answer a call while using the Contacts or other menu features.
- ▶ When the compatible headset is connected, you can also answer a call using the headset key, as well as using the phone. To reject an incoming call, press .
- ▶ You can mute the ringtone when a call comes in by pressing and holding the volume down side key.

Shortcut to activate vibrate mode

You can activate the vibrate only mode by pressing and holding down  after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving close to a window may improve reception.

Entering text

You can enter alphanumeric characters using the keypad. For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text. The following text input methods are available with the handset.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)



Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  until 123 mode is displayed.

Changing the text input mode


1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.
2. Press  to cycle between T9Abc, T9abc, Abc, abc and 123.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing  to . Press one key per letter.


General Functions

- ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press  once or more to scroll through the other word options.

Example

Press     to type **Hond**.




Press  to get **Good**.

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing .


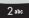





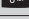
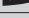

To delete letters, press . Press and hold down  to erase entire words.

Using the ABC Mode

Use  to  to enter your text.

1. Press the key labelled with the required letter:
 - ▶ Once for the first letter.
 - ▶ Twice for the second letter.
 - ▶ And so on.
2. To insert a space, press  once. To delete letters, press . Press and hold down  to clear the display.

Refer to the following table for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Lower case	Upper case
 1	.,?!"1-()@/:_	.,?!"1-()@/:_
 2	abcçç2ääääâçäääæ	ABCÇC2AAAÄÇAAÄÆ
 3	d def3êéèê	D DEF3ÊÉÈÊ
 4	g h i4íííí	G H I4ÍÍÍÍ
 5	j k l5£	J K L5£
 6	m n o6óöôõñðóøœ	MN06ÓÖÔÕÑÒÓØœ
 7	p q r s š7ßš\$	P Q R S Š7ßŠ\$
 8	t u v8ú ü üřúú	T U V8Ú Ü ÜŤÚÚ
 9	w x y z Ž9	W X Y Z Ž9
 0	Space, 0	Space, 0


Note

- ▶ The characters assigned to the keys and their order of appearance depends on the language selected using the option **Input method**. The table above provides the characters set for English language.

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options > Insert > Symbol**. Use the navigation and numeric keys to select the desired symbol and press .

Overview of Menu Functions

You can launch a menu by pressing **OK** in the idle screen. Move to the desired item and press **OK** to go into the sub menu.

From the main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menu and sub menus.

1. Entertainment

- 1.1 Games & Applications
- 1.2 Mobile TV
- 1.3 Java settings

2. Vodafone live!

- 2.1 Homepage
- 2.2 Enter URL
- 2.3 Bookmarks
- 2.4 Saved pages
- 2.5 Browser settings
- *2.6 Mobile TV
- *2.7 Music
- *2.8 Games
- *2.9 Ringtones
- *2.0 Pictures
- *2.* News
- *2.# Sport

3. Music

- 3.1 Now playing
- 3.2 All tracks
- 3.3 Playlists
- 3.4 Music store

4. Camera

- 4.1 Camera
- 4.2 Video recorder

5. Messaging

- 5.1 Create new
- 5.2 Inbox
- 5.3 Drafts
- 5.4 Outbox
- 5.5 Sent messages
- 5.6 E-mail
- 5.7 Templates
- 5.8 Messaging settings

6. My Files

- 6.1 Pictures
- 6.2 Sounds
- 6.3 Videos
- 6.4 Games & Applications
- 6.5 Bluetooth data
- 6.6 Other files
- 6.7 External memory

7. Organiser & Tools

- 7.1 Alarms
- 7.2 Calendar
- 7.3 Tasks
- 7.4 Memo
- 7.5 Calculator
- 7.6 Converter
- 7.7 World time
- 7.8 Voice recorder

8. Contacts

- 8.1 Add new
- 8.2 Contacts list
- 8.3 Groups
- 8.4 Speed dials
- 8.5 Service dial numbers
- 8.6 Own number
- 8.7 Settings

9. Calls

- 9.1 All calls
- 9.2 Dialed calls
- 9.3 Received calls
- 9.4 Missed calls

* USIM Tool Kit / Alarms (if SAT not supported by USIM)

0. Video Call

#. Settings

- #.1 Phone settings
- #.2 Display settings
- #.3 Java settings
- #.4 Messaging settings
- #.5 Call settings
- #.6 Contact settings
- #.7 Connectivity

Entertainment [Menu 1]

Games & Applications

Menu 1.1

You can easily download games and other applications in this menu. It has two folders, **Games** and **Applications**, as default. Each folder has an embedded link for downloading games or applications. Please note that additional costs may be incurred when using online services. You can create a folder using the left soft key [Options].

Mobile TV

Menu 1.2

You can access Mobile TV by selecting this menu.

Java settings

Menu 1.3

Activating a profile

1. Move the cursor to the profile which you would like to activate.
2. Press **OK** or select **Activate** from the **Options** menu.

Adding a new profile

1. Select **Add new** from the **Options** menu.
The following items need to be configured.

Service name	Enter an account name for the profile.
Connection mode	Choose from the given list of connection modes. (Default is TCP with Proxy)
IP address	Enter the WAP Gateway IP address provided by the operator. (e.g. 212 . 091 .099 . 091)
Proxy server port	Port details are provided by the operator, depending upon the Connection mode.
Access point	Choose from the given list of access points. (For more details on adding or editing a new access point, refer to page 100.)

2. Press the right soft key [Done] to save any configuration changes.

You can edit or delete a profile by selecting **Edit** and **Delete** from **Options** menu.

Vodafone live! [Menu 2]

Homepage

Menu 2.1

You can launch the web browser and access the homepage of the web service provided by Vodafone.

- ▶ You can also directly access Vodafone live! by pressing the right soft key in idle mode.



Enter URL

Menu 2.2

Enter address

(Menu 2.2.1)

You can manually enter a URL address and access the associated web page.

- ▶ To enter a symbol, press  or the right soft key [Symbol] to display the Symbol table.
- ▶ To switch input mode, press .

Recent pages

(Menu 2.2.2)

Shows the recently-browsed pages.

Bookmarks


Menu 2.3

You can store frequently accessed or favourite URLs/Pages. **Open**, **Send**, **Add new**, **Edit**, **Mark/Unmark** or **Delete** operations can be performed on **Bookmarks**. Several preconfigured URLs are stored as bookmarks.

Adding a new bookmark

1. Press the right soft key [Add].
2. Enter the title and associated URL information.
3. Press the right soft key [Done] to save.

Connecting to a desired bookmark

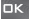Press  or select **Open** from the **Options** menu.

Sending the bookmark to others

Select **Send** from **Options** menu. You can send it via **Message** or **E-mail**.

Deleting a bookmark

Select **Delete** from **Options** menu. You can delete multiple bookmarks using the **Mark/Unmark** option.


Saved pages Menu 2.4

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

Browser settings Menu 2.5

You can change the settings for browser display, security, and certificates.

Profiles (Menu 2.5.1)

Select the appropriate profile by pressing . This will activate the profile to initiate the browser launch.

Security (Menu 2.5.2)

Certificates

If stored, a list of root/ca certificates required for WTLS/TLS can be found here. Certificates can be viewed from the list.

Session clear

Secure (WTLS/TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

Character encoding (Menu 2.5.3)

Sets the browser default character set to one of the following:

Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

Scrolling control (Menu 2.5.4)

Allows you to set the scroll speed by selecting the number of lines to scroll. Select one from Small(1 line), Medium(2 lines), Large(3 lines).

Vodafone live!

Show image

(Menu 2.5.5)

Allows you to enable or disable the image display during browsing.

Note

Enabling this function will delay displaying images until the completion of transmission. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

Cache

(Menu 2.5.6)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in the Cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies

(Menu 2.5.7)

Enabling Cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

JavaScript

(Menu 2.5.8)

Select whether to turn JavaScript **On** or **Off**.

Reset settings

(Menu 2.5.9)

Select this to reset your phone to its default browser configuration.

Music [Menu 3]

Now playing

Menu 3.1

This menu will be activated when there are some tracks currently played.

All tracks

Menu 3.2

You can view the entire music files in the phone/external memory.

Playlists

Menu 3.3

You can create your own playlists by choosing tracks from the All tracks menu list.

Music store

Menu 3.4

Connects to the Vodafone music download site.

Note


Additional charges may be incurred when downloading music.
Contact your service provider for further information.

Camera [Menu 4]

Camera

Menu 4.1

 This application enables you to take a still picture. You can take a picture in the size you want, and use it for the address book photo, home screen and other more general purposes. Once taken, the picture can be sent by Message, Postcard, Email or Bluetooth.

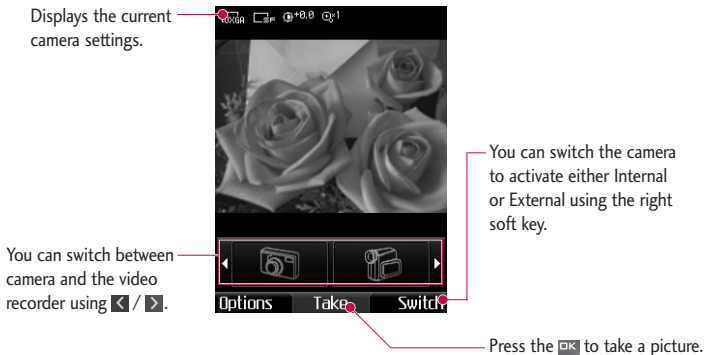

1. Press the left soft key to access **Options** and set the desired environment as follows.
 - ▶ Move between the options menus with **</>**.
 - ▶ Select the desired value with **▲/▼** and confirm the selection with the left soft key [Select] or **OK**.

Go to	The Pictures folder is launched and displays existing pictures as thumbnails. You can view pictures by pressing . You can also send the selected picture to another party via Message, Postcard, Email or Bluetooth.
Size	1600x1200 (), 1280x960 (), 640x480 (), 320x240 (), Wallpaper (), 176x144 (), Contact ()
Quality	Super fine (), Fine (), Standard ()
Light	Off, Always on (), When taking () ▶ You can turn the camera light on/off with in preview mode.
Multishot	One, Three () , Six () , Nine () (Note: Available multishot depends on the size.)
Zoom	x1 () , x2 () (Note: Available zoom level depends on the size.) ▶ You can zoom in with / zoom out with in preview mode.
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen. ▶ You can adjust the brightness using in preview mode.

White balance	You can adjust the tone of the background photo according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors
Night mode	You can take better pictures at night by selecting On .
Frame Shot	You can apply one of 9 frame effects when taking a picture. (available only in case of Wallpaper size)
Timer	You can delay the camera shutter time. None, 3 seconds, 5 seconds, 10 seconds “” is shown when the timer is activated.
Effect	None, Black & White, Negative, Sepia
Sound	Select the desired shutter sound.
Memory	Select the desired memory, either Handset or External .
Mirror	You can activate the mirror effect by selecting On .
Switch	You can switch the camera to activate either the Internal or the External camera.
Preview Style	Normal, Full screen

Camera

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what you want to take and press **OK**.
4. Press **OK** to save the picture. It is saved in the Pictures folder of My Files.

You can directly send the picture via Message, Postcard, Email or Bluetooth by pressing the right soft key [Send].


Note

Press **←** to go back to the preview mode without saving the picture.

Video recorder

Menu 4.2

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent by Message, Email or Bluetooth.

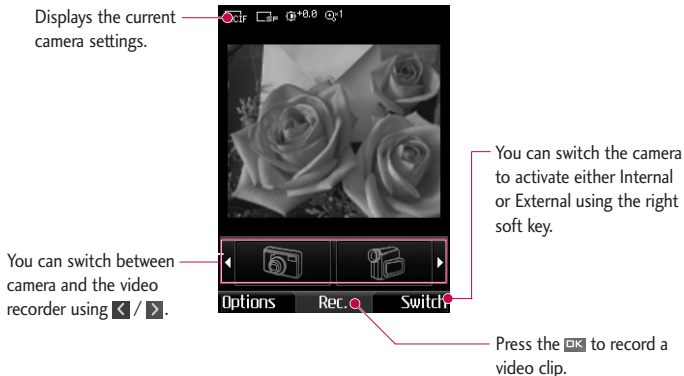




1. Press the left soft key to access **Options** and set the desired environment as follows.
 - ▶ Move between the options menus with **<** / **>**.
 - ▶ Select the desired value with **▲** / **▼** and confirm the selection with the left soft key [Select] or **OK**.

Camera


Go to	The Videos folder is launched and displays existing videos as thumbnails. You can view videos by pressing . You can also send the selected video to another party via Message, Email or Bluetooth.
Size	320x240 (), 176x144 (), 128x96 ()
Quality	Super fine () , Fine () , Standard ()
Light	Off, Always on (). When recording () ▶ You can turn the camera light on/off with in preview mode.
Zoom	x1 () , x2 () (Note: Available zoom level depends on the size.) ▶ You can zoom in with / zoom out with in preview mode.
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen. ▶ You can adjust the brightness using in preview mode.

White balance	You can adjust the tone of the background video according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors
Night mode	You can take better shots at night by selecting On .
Effect	None, Black & White, Negative, Sepia
Duration	Select the desired recording time. Message, 30 seconds, 1 minute, 2 minutes, 5 minutes and 60 minutes
Memory	Select the desired memory, either Handset or External .
Mirror	You can activate the mirror effect by selecting On .
Sound	Decide whether to record the sound or not.
Switch	You can switch the camera to activate either Internal or External .

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what to record and press  to start recording.
And press  to stop recording.
 - ▶ You can pause the recording by pressing the right soft key [Pause].
4. Press  to save the video clip. It is saved in the Videos folder of My Files.

You can directly send the video clip via Message, Email or Bluetooth by pressing the right soft key [Send].

Note

Press  to go back to the preview mode without saving the video clip.

Messaging [Menu 5]

Create new

Menu 5.1

Message

(Menu 5.1.1)

You can write and edit a message containing a combination of text, image, video and audio.

1. Enter your message in the Message field.

Option menus in Message field

- ▶ **Insert:** You can perform the following actions:

1. **Pictures:** You can insert an image. (One image per slide)
2. **Take Picture:** The camera module opens and you can take a picture. The picture is then inserted in the message window. (One picture per slide).
3. **Videos:** You can insert a video clip. (One video clip per slide)
4. **Take Video:** The video recorder module opens and you can record a video. The recorded video is inserted in the message. (One video clip per slide)

5. **Sounds:** You can insert a sound file. (One sound per slide)
6. **Record Sound:** The voice recorder module opens and you can record a sound. The recorded sound is inserted in the message. (One sound per slide)
7. **Contact details:** You can add a name and/or a number stored in the Contacts. Make your selection to send either the Name, Number or Name & Number and press **OK**. The Contacts list opens and you can search the desired contact to be inserted.
8. **Templates:** You can insert a text template saved on the phone. After selecting one, press **OK**. The selected template is inserted into the Message window.
9. **Cc:** Select this to insert Cc.
0. **Subject:** Select this to insert a subject.
- *. **New slide:** Select this to add a new slide.
- #. **Symbol:** You can insert symbols. After entering the corresponding number keys, press **OK**.

- ▶ **Add recipients:** You can add recipients from your Contacts or enter the number directly.
 - ▶ **Send:** Select this to send the created message.
 - ▶ **Save to drafts:** Select this to save the message to drafts.
 - ▶ **Input method:** Select the desired dictionary mode.
 - ▶ **Add to dictionary:** You can add a word to the dictionary.
 - ▶ **Cancel:** Select this to cancel editing.
2. Press the right soft key [Continue]. You can add recipients from Contacts or enter the number directly. (You can enter up to 10 numbers.)

Option menus in To field

- ▶ **Add recipients:** You can add recipients from your Contacts or enter the number directly.
- ▶ **Send:** Select this to send the message.

- ▶ **Save to drafts:** Saves the message to drafts.
 - ▶ **Cancel:** Select this to cancel editing.
3. Press the right soft key [Send] to send the message. The message will automatically be saved in the Sent messages folder. If the message has not been sent, it will remain in the Outbox with a failed status.

Messaging

Email

(Menu 5.1.2)

To send/receive an email, you should set up the email account. (Refer to page 54-56 for how to set up an Email account.)

1. Enter the email addresses of the recipients in the To, Cc, Bcc fields. You can search the Contacts by pressing **OK**.

Note

- Enter the reference email address to forward the email in Cc(Carbon copy) field.
- Enter a hidden reference email address to forward the email without forwarding information in Bcc(Blind Carbon Copy) field.
- Only valid email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (BCC) fields. When an email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To and Cc address fields and 10 recipients for the BCC address field.

2. Move the cursor to the Subject field and key in the subject.
3. You can enter the message contents by moving the cursor to the Message field.
4. Use the following functions by using the left soft key [Options].
 - ▶ **Insert:** Select this menu to insert special characters, templates, and contacts. It is also possible to attach multimedia files (pictures, videos and sounds).
 - ▶ **Add recipients:** Select this menu to insert email addresses saved in Contacts. (Only shown in Option menu when cursor is located in To/Cc/Bcc fields.)
 - ▶ **Send:** Sends the created email.
 - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
 - ▶ **Preview:** You can preview the created email before sending it.
 - ▶ **View attachment:** Shows the attached files. (This item is only available when some files have been attached.)

- ▶ **Input method:** Select the desired dictionary mode.
 - ▶ **Add to dictionary:** You can add a new word to the dictionary.
 - ▶ **Set mail priority:** You can configure the priority of the email you wish to send.
 - ▶ **Cancel:** Exits the email composer.
5. When you have finished writing an email, press the right soft key [Send] to send the email.

Inbox

Menu 5.2

1. You can view saved messages. Select a message and then press **OK** to view the message.
 2. You can view the previous or next message by using **◀** / **▶**.
 3. To view a multimedia message (Notification), select **Retrieve** in the message notification view screen. Then the file is transmitted, and you can view the file when the transmission is complete.
- You can use the following functions by using the left soft key [Options] in the Inbox.
- ▶ **View:** Opens the selected message.
 - ▶ **Reply:** Creates a reply to the sender or all recipients of the selected message.
 - ▶ **Forward:** Forwards the selected message.
- Note**
Not supported for multimedia message (Notification) and WAP push messages.
- ▶ **Make video call:** You can make a video call.
 - ▶ **Delete:** Deletes the current message.
 - ▶ **Create new message:** You can write a new message or an Email.
 - ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
 - ▶ **Filter:** Displays messages by desired message types.
 - ▶ **Copy:** In case of SMS, you can copy the message into handset or USIM.
 - ▶ **Move:** In case of SMS, you can move the message into handset or USIM.

Messaging


- ▶ **Message info.:** You can check the message type, date and time and where it is saved.

Note

You can check the saved Emails in Email [Menu 5.6].

Drafts

Menu 5.3

You can view saved messages. Select a message and then press  to edit the message.


You can use the following functions by using the left soft key [Options].

- ▶ **Edit:** You can edit messages.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

Outbox

Menu 5.4

The Outbox is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox. For example, Emails will be placed in Outbox if the Email account is not correctly configured.

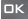1. Select a message and then press  to view the message.
2. You can use the following functions by using the left soft key [Options].

[For sending / waiting messages]

- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Cancel:** You can stop sending/waiting status.
- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

[For sending a failed message]

- ▶ **Resend:** Resends the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Delete:** Deletes the current message.

- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

Sent messages

Menu 5.5

Shows the messages you sent (Message/Postcard/ Email).

[Options]


- ▶ **View:** Opens the selected message.
- ▶ **Reply:** Creates a reply to sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Delete:** Deletes the current message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Create new message:** You can write a new message.
- ▶ **Save number:** Save the sender's number.

- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Copy:** In case of SMS, you can copy the message into handset or USIM.
- ▶ **Move:** In case of SMS, you can move the message into handset or USIM.
- ▶ **Message info.:** You can check the message type, date and time and where it is saved.



Email

Menu 5.6

Viewing email message list

1. Select an email account and then press  to view the received email list.
2. Using the right soft key [Retrieve], you can retrieve a new email list from the email server of the selected account.
3. In email list, you can use the following functions by using the left soft key [Options].

Messaging

- ▶ **View:** Opens selected email.
 - ▶ **Reply:** Creates a reply to the selected email.
 - ▶ **Forward:** Forwards the selected email message to others.
 - ▶ **Retrieve:** Retrieves new email messages.
 - ▶ **Delete:** Deletes the email.
 - ▶ **Create new message:** Creates a new message or Email.
 - ▶ **Save address:** Save sender's address to Contacts.
 - ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
 - ▶ **Set as read/unread:** You can set the selected email to read or unread.
 - ▶ **Message info.:** Brief information on the message including size, type, date, time and filenames.
- Viewing an email message**
1. Select one of the received emails and press the Open key to receive the contents of the email.
 2. The contents of the received email are automatically displayed in the View screen.
 3. You can view the contents of the previous or next email by using  / .
 4. In the email View screen, you can select the following functions by using the left soft key [Options].
 - ▶ **Reply:** Creates a reply to the selected email.
 - ▶ **Forward:** Forwards the selected email message to others.
 - ▶ **Delete:** Deletes the email.
 - ▶ **Save address:** Saves the sender's address to Contacts.
 - ▶ **Create new message:** Creates a new message.
 - ▶ **Use:** Extracts the number, email address or Web address from email message.
 - ▶ **View attachment:** Shows the attached file.
 - ▶ **View to address:** Shows the email addresses of the recipients and reference (Cc).

- ▶ **Message info.:** Brief information on the message including size, type, date, time and filenames.

Templates

Menu 5.7

Text templates

(Menu 5.7.1)

You can add, edit, and delete frequently used useful phrases using the left soft key [Options].

Note

Depending on your service provider, useful phrases are saved as a default.

Multimedia templates

(Menu 5.7.2)

You can create, edit and view available templates when creating multimedia messages. Five types of template (Birthday, Greeting, Holiday, Thanks, Sorry) are saved by default.

The following options are available.

- ▶ **Add new:** You can create a new multimedia template.
- ▶ **Write multimedia message:** Creates a multimedia message with the selected template.
- ▶ **View:** Displays the selected template.
- ▶ **Edit:** Edits the selected template.
- ▶ **Delete:** Deletes the selected template. (Not available for default five templates)

Messaging settings

Menu 5.8

SMS

(Menu 5.8.1)

You can configure text message related options.

1. **Text message centre:** Input the address of the Text message centre.
2. **Delivery report:** By enabling this option, you can verify whether your message has been sent successfully.
3. **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.

Messaging

4. Message types: Text, Voice, Fax, X.400, E-mail

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

5. Character encoding: Auto/ Default alphabet/ Unicode.

- ▶ **Auto(default):** Message with single byte character is normally encoded in Default alphabet(GSM7). Message with double-byte character is automatically encoded in unicode(UCS2).
- ▶ **Default alphabet:** Message with even double byte character is encoded in single byte. Please note that double byte characters with accent may be converted into single byte character without accent.
- ▶ **Unicode:** Message is encoded in double byte. Please note that you may be charged double.

6. Send long text as: Select a long text message as Multiple SMS or MMS.

MMS

(Menu 5.8.2)

You can configure Multimedia message related options.

1. **Retrieval mode:** You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.
2. **Delivery report:** Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending a delivery confirmation mail to a sender.
 - ▶ **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.
 - ▶ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.

3. **Read reply:** Allows you to determine whether to request a read confirmation mail to a recipient, and whether to allow sending a read confirmation mail to a sender.
 - ▶ **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.
 - ▶ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
4. **Priority:** You can select the priority level of the messages (Low, Normal and High).
5. **Validity period:** Allows you to configure the term of validity for a message when transmitting a multimedia message. The message would be saved in the multimedia message server only for the configured term.
6. **Slide duration:** Allows you to configure the duration of each page when writing a message.

7. **Delivery time:** Configures the delivery time of message to the recipient. The Multimedia message centre will deliver the message after the delivery time.

8. **Multimedia msg. centre:** Allows you to configure network information such as the MMSC and the WAP gateway, to send a multimedia message.

Using the left soft key [Options], you can activate, add or delete a profile. A profile name selected by a checkmark is the currently configured value. You can view and edit the contents of the profile in edit mode by pressing the right soft key [Edit]. The edit screen also appears when creating a new profile under Options. The meaning of each item is given below.

- ▶ **Title:** Profile name.
- ▶ **MMSC URL:** Enter the multimedia message centre URL.
- ▶ **MMS Proxy:** Enter the WAP gateway address and port number.

Messaging

- ▶ **Connection mode:** Select one of the connection mode. (TCP with Proxy, TCP without Proxy, UDP)
- ▶ **Access points:** Specify the access point name. (see WAP connection settings.)

Press the right soft key [Done] to save the changes and complete Multimedia msg. centre setting.


E-mail

(Menu 5.8.3)

You can configure settings for receiving and transmitting emails.

- 1. Vodafone Mail:** Access to Vodafone Mail. (Note: This service is not available in all countries. Please contact your service provider for further information.)
- 2. Allow reply email:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
- 3. Request reply email:** Determines whether to request a read confirmation mail.
- 4. Auto retrieve:** You can configure Auto retrieve to retrieve emails automatically from the incoming mail server. When a new email arrives, an icon appears at the top of the screen. You can select the auto receiving time slot to **Off, 15 minutes, 30 minutes** or **1 hour**. Please note that additional charges may be incurred using the **Auto retrieve** feature.
- 5. Include message in Fwd. & Reply:** Determines whether to include the

received message when you forward the message or reply to it.

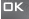6. **Signature:** You can configure a text signature to be attached to the end of an email. The configured signature text is automatically or manually attached to the end of the email when it is sent.
7. **Priority:** You can select the priority level of Emails (Low, Normal and High).
8. **Email accounts:** You can create or configure an email account including the email server and user ID. You can edit a selected email account by pressing the right soft key [Edit]. You can select an email account to be used to send an email using . You can select the following functions using the left soft key [Options].
 - ▶ **Add new:** Create a new email account.
 - ▶ **Edit:** To edit the selected email account.
 - ▶ **Activate:** Activates the selected account for outgoing mail.
 - ▶ **Delete:** Deletes a selected email account. All the emails included in the account will be deleted.

Creating a new email account

1. Select **Add new** from the Email account menu options.
2. The following items need to be configured.

Title	Enter a title.
Username	Enter the user name of the email account.
Password	Enter the email account password.
Email address	Enter the email address for outgoing mail.
Reply email address	Enter the email address to reply to your email.
Outgoing mail server	Enter the outgoing email server.
Incoming mail server	Enter the incoming email server.
SMTP port number	Enter the mail server port number. In general, the SMTP (Outgoing mail server port number) is 25.
Incoming server port	Enter the mail server port number. In general, the incoming mail server port number is 110(POP3) or 143(IMAP4).

Messaging

Maximum receive size	Select the maximum email receive size using [OK] . The permissible maximum receive size is no more than 1 MB.
Mailbox type	Select the email inbox type either POP3 or IMAP4 using [OK] .
Save to server	Determine whether to leave a copy of messages on the incoming server or not using [OK] . When the mailbox type is set to IMAP4, a copy of messages are always saved to the server.
Save sent mail into	Select where to save the sent mails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.
Access points	Select an access point to connect to the Internet. You can select a configured access point using [OK] .
Auto retrieve	Decide whether to activate Auto retrieve or not using [OK] . You can set the auto receiving time slot using the Auto retrieve [Menu 5.9.3.4]. (See page 54.)
SMTP authentication	Decide whether the outgoing mail server to require authentication or not using [OK] . When the SMTP authentication is set to On, you can enter the SMTP Username and SMTP Password for SMTP authentication.

APOP secure login	Decide whether to activate APOP secure login or not using [OK] . When the mailbox type is IMAP4, APOP secure login is always set to OFF.
-------------------	---

3. Press the right soft key [Done] to complete the email account configuration.

Editing an email account

1. Select a desired email account from the email account list and press the right soft key [Edit].
2. You can edit desired fields by moving the cursor up and down.
3. When configuration is complete, press the right soft key [Done] to complete the email account configuration.

Note

When you try to change the mailbox type, all emails downloaded before would be deleted.

Info. service (Menu 5.8.4)

- ▶ **Cell broadcast:** You can set the reception status.
- ▶ **Channels:** You can add or modify the channels.
- ▶ **Languages:** You can select the language you want by pressing **OK**. Then, the info service message will be shown in the language that you have selected.

Service message (Menu 5.8.5)

You can configure the service message receipt option.

My Files [Menu 6]

Pictures

Menu 6.1

The Pictures folder consists of embedded links for downloading pictures through the Internet and Default images.

Pictures taken using the camera are stored in the Pictures folder and you can create new folders to manage them. You can also save selected files as animated Gifs and send multiple files to other people.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **View:** You can view the selected picture.
- ▶ **Create new folder:** You can create a new folder within the folder currently selected.
- ▶ **Send:** You can send the selected image via Message, Postcard, Email or Bluetooth.
- ▶ **File**
 - **Move:** Enables the file to be moved to other folder.
 - **Copy:** Enables the file to be copied to other folder.
 - **Rename:** You can rename the image.

- **Edit:** Enables the image to be edited.
- **Make GIF animation:** You can create an animated GIF file with different photos (up to 10 files of 176X220 resolution with a 2Mbyte file size limit for display).
- **Info.:** Shows information on the selected image file.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **Main display:** You can set an image as the screen theme (Home screen, Outgoing call, Start up image, Power off image).
- ▶ **Slide show:** You can start a slide show.
- ▶ **Sort by:** You can sort the files by name, date, or file type.
- ▶ **List view/Grid view:** You can view the images as a List view or Grid view.
- ▶ **Memory status:** You can view the memory status(handset or external memory card).

Sounds

Menu 6.2

The Sounds folder consists of embedded links for downloading ringtones and music as well as folders containing the Default sounds and Voice recordings. Here you can manage, send or set sounds as ringtones.

Videos





Menu 6.3

Here you can manage or send downloaded or captured videos clips.



The following are available using the left soft key [Options] in the Video list.

- ▶ **Play:** Plays the video.
 - ▶ **Create new folder:** You can create a new folder.
 - ▶ **Send:** You can send the selected video clip via Message, Email or Bluetooth if not protected by Digital Rights Management (DRM).
- ▶ **File**
 - **Move:** Moves the file into handset memory or external memory.
 - **Copy:** Copies the file in handset memory or external memory.
 - **Rename:** You can rename the video.
 - **Info.:** Shows information on the selected video file.
 - ▶ **Delete:** Deletes the selected video.
 - ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
 - ▶ **Sound theme:** You can set a video as the voice ringtone or video ringtone.
 - ▶ **Sort by:** You can sort files by name, date, or file type.
 - ▶ **List view/Grid view:** Displays the video files as a List view or Grid view.
 - ▶ **Memory status:** Displays the memory status(handset or external memory card).

My Files

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the  /  /  / . Select a desired video and select **Play** to view the recorded video.

Select the right soft key [Send] to attach the selected video to a message, Email or Bluetooth.

When option **1. Play** is selected, the video clip will be played with the Media Player. To pause the playback, press  during the playback. To resume the paused playback, press  once again.

To capture the screen shot, press the right soft key [Capture] when the playback is paused.

To view the current playback in full screen, press the right soft key during the playback.

To return to the previous screen size, press the right soft key once again in full screen mode.

When viewing video clips in the Media Player, the following options are available:

- ▶ **Pause/Play:** You can play or pause playing a file for a moment.
- ▶ **Send:** You can send the video via Message, Email or Bluetooth if the file is not protected by Digital Rights Management (DRM).
- ▶ **Go to list:** Goes back to the list.
- ▶ **Delete:** Deletes the selected video.
- ▶ **Sound theme:** You can set a video as the voice ringtone or video ringtone.
- ▶ **Wide view:** You can view the video in wide view mode.
- ▶ **Mute/Unmute:** If the Volume is set to more than 0, Mute mode is activated and if the Volume is set to 0, the Unmute mode is activated.
- ▶ **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- ▶ **Set repeat:** You can set the repeat option (None/Current file/All files).

▶ **Move to**

- **Previous file:** Plays the previous video file.
- **Next file:** Plays the next video file.

- ▶ **File info.:** You can check information on files being played (File name, Size, Date, Type, Duration, Protection).

Games & Applications Menu 6.4

You can easily download games and other applications in this menu. It has two folders, **Games** and **Applications**, as default. Each folder has an embedded link for downloading games or applications. Please note that additional cost may be incurred when using online services. You can create a folder using the left soft key [Options].

Bluetooth data Menu 6.5

The files received using Bluetooth are saved in this folder. You cannot create a sub-folder within the Bluetooth data folder.

You cannot copy or move files that are not managed by My Files.

The options displayed depend on the type of file selected. For instance, in case of an image, the following functions are supported.

- ▶ View/Edit/Move/Copy/Delete/Rename file(s).
- ▶ Mark/Unmark one or all file(s).
- ▶ Send a file via MMS, Email or Bluetooth if not protected by Digital Rights Management (DRM).

Note

For the image files of which resolution is 640x480 or above, you can send them via Postcard.

- ▶ If relevant, you can set an image as the screen theme (Home screen, Outgoing call, Start up image, Power off image).
- ▶ If relevant, start or set (normal or full screen, at what pace) a slide show.
- ▶ If relevant, create an animated GIF file with different pictures.
- ▶ Sort the files by name, date or file type.

- ▶ Memory info(handset or external memory card).
- ▶ View file information.

Other files

Menu 6.6

Other files except pictures, sounds, videos, games & applications are stored in this folder.

External memory



Menu 6.7

If you purchase an optional external microSD memory card, you can manage more content. Refer to the section **How to use a microSD memory card** on page 21 and 22 to learn how to insert and remove the memory card. You can manage content as you do on your phone.


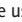




Organiser & Tools [Menu 7]

Alarms

Menu 7.1

If you set the alarm, the  appears on the indicator bar. The specified alarm sounds at the scheduled time. Press  to stop the alarm, and the alarm is released. Press the right soft key [Snooze] and choose the snooze interval. The alarm sound stops and resumes after the selected Snooze duration. You can configure up to 5 alarms.

1. Select your desired alarm to configure in the alarm list. If there is no alarm, press the right soft key [Add] to add a new alarm.
2. **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.
3. **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either 'AM' or 'PM' which is visible if 12 hour format is specified for the phone.

4. **Select repeat mode:** Select the desired repeat mode using  /  or select the desired one from the list by pressing .
5. **Select bell:** Select the bell to ring at the alarm time using  /  or opening the list by pressing .
6. **Input memo:** Input alarm name.
7. **Snooze:** You can set the snooze duration for the alarm.
8. When you have finished setting the alarm, press the right soft key [Done].

Note

The alarm will go off even when the phone is switched off.

Calendar

Menu 7.2

Schedule inquiry and search

1. Reference by Months

You can refer to your schedule by months. The cursor is on the current date, and the registered date is marked. The schedule saved for the date where the cursor is located is represented by an icon.

Organiser & Tools

Pressing the shortcut key **1** moves to the previous year and pressing **2** move to the next year and pressing **5** moves to today. Pressing **7** moves to the previous month, and **9** moves to the next month. Pressing ***** moves to the weekly calendar, and **#** moves to the monthly calendar. You can move the date using **▲** / **▼** / **◀** / **▶**.

2. Reference by Days

Pressing **OK** in the reference by month moves to reference by day where you can refer to your schedule by days. You can refer to the moving date tab using **◀** / **▶**. As a search result, brief schedule contents, repetition set up configuration, and alarm set up configuration are displayed. You can send the schedule to another phone or an Internet site through SMS(Text message) or MMS(Picture message) or Email or Bluetooth.

3. Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by the user. You can send the

schedule to another phone or an Internet site through SMS(Text message) or MMS(Picture message) or Email or Bluetooth using the left soft key [Options].

Search schedule

You can add a schedule. You can configure the start date, end date, start time, end time, contents, type of schedule, repetition, alarm of the schedule.

- ▶ **Set type:** Appointment, Anniversary, Birthday, Others
- ▶ **Set repeat:** Once, Daily, Weekly, Monthly, Annually, User setting
- ▶ **Set alarm:** No alarm, On time, 15 mins before, 30 mins before, 1 hour before, 1 day before, 3 days before, 1 week before

Delete schedule

1. Delete elapsed schedules

You can delete all elapsed schedules using this function.

2. Delete all

You can delete all saved schedule contents

using this function.

Set up and release holiday

You can set up or release user holidays. Press the left soft key [Options] and select **Set holiday**. The selected date will be displayed in red.

To release the holiday, press the left soft key [Options] and select **Reset holiday**.

Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

Tasks

Menu 7.3

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

Add

To add a task, press the right soft key [Add] in the Tasks list management screen. Then input the date, description and priority for the task.

When you have finished entering the data, press the right soft key [Done] to save the new task.

Detailed view and Edit

To view detailed task contents, locate the cursor on the desired item in the Tasks list, and then press **OK**. You can edit and delete a task using the left soft key [Options]. You can also delete multiple or all tasks at once using the **Mark/Unmark** option.

Set job status

Tasks set as finished are displayed as crossed out below the unfinished tasks in the Tasks list. You can set Finished tasks to Not finished by selecting **Option**.

Memo

Menu 7.4

Using the memo management function, you can view and manage saved memo contents, and add new memo.

Add memo

To add a new memo, press the right soft key [Add]. Enter the contents of the memo. You can save the memo to the list by pressing the right soft key [Done].

Edit and delete memo

Highlight the desired memo and press **OK** to view its contents. You can edit or delete the contents of a memo using the left soft key [Options]. You can return to the memo management screen by pressing **☐**. You can select Multiple or All memos using the Mark/Unmark option and then delete a memo by pressing the right soft key [Delete].

Calculator

Menu 7.5

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions.

1. Press the left soft key [Options].
2. Select the appropriate function.

You can enter numbers by using the number keys, and the operators by using **^** / **v**, **<** / **>**. You can enter a decimal point by pressing **⌘**. Whenever you press **☐**, characters are sequentially deleted in reverse order. Whenever you hold **☐** down, all the characters are deleted in reverse order in one go.

When calculation is complete and the result is displayed on the screen, pressing a number clears the previous result and the calculator waits for new input, even if you did not press the right soft key [AC]. When calculation is complete and the result is displayed on the screen, pressing a symbol saves the result into the symbol, and continues calculation.

Converter

Menu 7.6

Using this menu, users can convert Currency, Surface, Length, Weight, Temperature, Volume and Velocity.

Currency

(Menu 7.6.1)

1. Select the Currency menu.
2. Users can set a currency exchange rate using [Rate].
3. Enter currency rates for up to 6 currencies equivalent to GBP and then press [Done]. Then you can convert from one currency to another.
4. You can view the value of up to 6 currency units.
5. Press [Reset] to clear the current input Field.
6. To exit the currency conversion function, press the [Back] key.

Surface

(Menu 7.6.2)

1. Select Surface menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.
5. To exit the Surface conversion function, press [Back] key.

Length

(Menu 7.6.3)

1. Select the length menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view your converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the length conversion function, press the [Back] key.

Organiser & Tools

Weight

(Menu 7.6.4)

1. Select the Weight menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.
5. To exit the Weight conversion function, press the [Back] key.

Temperature

(Menu 7.6.5)

1. Select the Temperature menu.
2. Position the cursor on the desired unit by using the up or down arrow keys.
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the Temperature conversion function, press the [Back] key.

6. You can insert negative values by selecting [-].

Volume

(Menu 7.6.6)

1. Select the Volume menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the volume conversion function, press the [Back] key.

Velocity

(Menu 7.6.7)

1. Select the Velocity menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.

4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the Velocity conversion function, press the [Back] key.

World time

Menu 7.7

The World time function provides time information on major cities worldwide. You can view the time of the desired country or city by navigating using / . You can select a desired city as a base using the right soft key [Home].

Voice recorder

Menu 7.8

1. Press the left soft key [Options] to display the option pop up menu before recording.
2. Move to the desired menu item using / and press .
 - ▶ **Quality:** You can select a recording quality from **Super Fine**, **Fine** and **Normal**.

- ▶ **Duration:** You can set the recording duration to MMS msg. size, 30 secs, or 1 min.
- ▶ **New recording:** Select this menu to start recording to a new file.
- ▶ **My Files:** Opens the Voice recordings folder in My Files.

3. Pressing starts recording. When a recording is started, the recording time appears on the LCD. To cancel the recording, press the right soft key [Cancel].
4. When you finish the recording, press to exit. The recorded file is automatically saved in the Voice recordings folder in My files.
5. When no recording is in progress, pressing starts recording on a new file.

When no recording is in progress, press the right soft key [Send] to send a recorded file.

Select one from Message, Email, or Bluetooth using / and press .

Organiser & Tools

6. Press the left soft key to select the various options after the voice recording.
7. Select the desired menu using  /  and press .
 - ▶ **Delete:** Select this menu to delete a recorded file.
 - ▶ **New recording:** Select this menu to start a new voice recording.
 - ▶ **Send:** To send the recorded file. Select one from Message, Email and Bluetooth using  /  and press .
 - ▶ **Sound theme:** You can set the recorded file as the **Voice Ringtone**, **Video Ringtone**, **Start up sound** or **Power off sound**.
 - ▶ **My Files:** Opens the Voice recordings folder in My Files.
8. Press the right soft key to close the sub-menu popup window.

Contacts [Menu 8]

Add new

Menu 8.1

You can register a new contact address. You can enter the name, different phone numbers and email addresses of a new contact. You can also assign the contact to groups, include an image or avatar, assign a specific ringtone and even enter a memo for the contact. Other available fields include Home page URL, Home address, Company name, Job title and company address. You can enter and manage contact addresses depending on the memory usage.

Contacts list

Menu 8.2

Performs the contact address search function. The search operation is performed based on a name as a default. The current search method and results found are displayed in the Search window. You can make a phone call or send a message to the selected phone number. A Contacts search can be performed based on the phone number or group information.

Groups

Menu 8.3

Using this menu you can manage group information (both stored in the Handset and the USIM). In the handset memory, there are 4 default groups: Family, Friends, Colleagues and School. You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.

Speed dials


Menu 8.4

Using this menu you can manage speed dials. Speed dials are configured between 2-9. You can register speed dials for a specific contact address up to 5 different numbers, and a contact address may have multiple speed dials.

Service dial numbers

Menu 8.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card).

Such numbers include emergency, directory enquiries and voice mail numbers. After selecting a service number, press  to dial the service.

Own number (Menu 8.6)

Allows you to display your phone number in the USIM card. You can save own numbers being used in the USIM card.

Settings (Menu 8.7)

View contacts from (Menu 8.7.1)

Select which contact information shall be displayed (from handset memory, from USIM card or both). **All** is the default setting.

Show image/avatar (Menu 8.7.2)

Select whether to display image/avatar or not.

Synchronise contact (Menu 8.7.3)

(Note: This service is not available in all countries. Please contact your service provider for further information.)

You can synchronise contact information between the phone and a server.

Copy all (Menu 8.7.4)

You can copy contacts from the phone memory to the USIM or from the USIM to the phone memory. You can copy all items or one at a time.

Move all (Menu 8.7.5)

You can move contacts from the phone memory to the USIM or from the USIM to the phone memory. You can move all items or one at a time.

Clear contacts (Menu 8.7.6)

Clears all contact information. You can delete all contacts saved in the mobile phone memory as well as on the USIM card.

Calls [Menu 9]

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

All calls Menu 9.1

Allows you to view the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in Contacts.

Dialled calls Menu 9.2

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

Received calls Menu 9.3

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

Missed calls Menu 9.4

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

USIM Tool Kit [Menu *]

Depending on whether you have SAT support services or not (i.e. USIM Application Toolkit) on the USIM card, this menu (Menu *) may be different.

If the USIM card supports SAT services, this menu will be the operator-specific service name stored on the USIM card, for instance “Special”. Please refer in that case to the information provided with your USIM card for further information on how to use the related options.

If the USIM card does not support SAT services, this menu will be **Alarms**.

For the **Alarms** menu feature, please refer to page 63.

Video call [Menu 0]

You can make a video call using this menu.

1. Enter the number you want to dial.
 - ▶ You can key in the number.
 - ▶ You can select the number from Contact using the left soft key [Contacts].
 - ▶ You can find the number from call logs by pressing **OK** [Calls].
2. Press the right soft key [V-Call] to make a video call.

During a video call

When you are in a video call, the screen will show the contact's name and duration of call, contact's image, volume indicator, video control panel, and your image.

You can access the following option menus by pressing the left soft key [Options].

- ▶ Microphone on/off
- ▶ Speaker on/off
- ▶ Bluetooth/Handset talk (When the Bluetooth headset is connected)

- ▶ Private/Public mode
- ▶ Hold/Resume
- ▶ Capture
- ▶ View sender number
- ▶ Settings
- ▶ End call

Incoming video call

When a video call is received, the caller's information is displayed as following.


- ▶ **Picture/Animation:** Displays picture ID, graphic image configured in Contacts, or default animation indicating the incoming call.
- ▶ **Caller's name and number:** Shows incoming caller's number. If the number is stored in Contacts, displays the name of the contacts.

Picture ID and animation setting is used in the order of Contacts, video file used in Group ringtone, and video file used in Profile.

Video call

Also, sound can be set for the incoming video call. The sound setting is used in the order of Contacts, Group ringtone, and Profile.

You can accept the incoming call by pressing the left soft key [Accept].

The incoming call ringing can be silenced by pressing the right soft key [Silent]. It can be also silenced by long press on  on the left side of the phone.

When ringing is silenced, press the right soft key [Reject] to reject the call.

Settings [Menu #]

Phone settings

Menu #.1

Profile

(Menu #.1.1)

You can select ringtone or vibration for an incoming call and configure the sound and volume of the ringtone, key tone, and sound effect, according to a profile. The profiles provided include [Normal], [Silent], [Vibrate only], [Outdoor], [Headset], [Customised 1], [Customised 2], and [Customised 3]. Select a profile, and press **OK** to activate the profile. After pressing the left soft key [Options], select the Edit menu for the [Normal], [Outdoor], [Headset], [Customised 1], [Customised 2] and [Customised 3] profile to change the configuration. A different list of options is available for each profile that has been selected for editing.

Alert by

This option determines the incoming call notification mode. You can select from [Ring], [Vibration], [Silent], [Ring & vibration], [Ring after vibration], [Max Ring & Vibration].

Voice ringtone

You can select the ringtone for incoming voice calls.

Video ringtone

You can select the ringtone for incoming video calls.

Volume

Set the ringtone volume.

Message alert

You can set how often the phone is to inform you of a received message until it is read.

Message tone

You can select a file from among your own personal files or from the default files, to be played by the phone upon receiving a message.

Key tone

You can set the key tone to be played when pressing the keys.

Settings

Key tone volume

You can set the volume of the chosen key tone, choosing from 7 available levels.

Slide tone

Select the desired tone the phone will emit when you slide up/down the phone.

Confirmation tone

You can set the confirmation tone to be played by the phone to confirm actions.

Start up sound

You can set the effect to be played when the phone is switched on.

Select start up sound

You can select which file will be played when the phone is switched on.

Power off sound

You can set the effect to be played when the phone is switched off.

Select power off sound

You can select which file will be played when the phone is switched off.

Date & time

(Menu #.1.2)

Although the current time is automatically configured when the phone is registered to the network, users can configure the time and date directly using this menu. The time configured by the user is valid only while the phone is turned on.

Time

1. Select the **Time** item from the Date & time list, and then press **OK**.
2. Move to your desired field, **Hour**, **Minute**, or am/pm field using the navigation keys. (When you have selected **12 hour** as **Time format**)
3. Enter **Hour**, and **Minutes** using the number keys.
4. Select the time format using **<** / **>**.
5. Scroll down to select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.

6. Press the right soft key [Done] to set the time with the specified value.

Date

1. Select the **Date** item from the Date & time list, and then press **OK**.
2. Select the date format using **<** / **>**.
3. Enter **Day**, **Month** and **Year** using the number keys.
4. Press the right soft key [Done] to set the date with the specified value.

Auto update date/time

When Auto Update is configured to **On**, the time and date are automatically updated according to the current time zone. If **Confirm first** is selected, the time and date update is confirmed before it is updated automatically.

Daylight saving

Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

Language

(Menu #.1.3)

Select the display language. You can select **Automatic** language option to change display language to the USIM card supported language.

Security

(Menu #.1.4)

PIN code request

When this is set to On, you are requested to enter your PIN each time you switch the phone on.

Note

- ▶ Press **ESC** in the PIN code entry window to return to the previous step.
- ▶ 3 incorrect PIN code entries would invalidate the PIN code. And you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again.
- ▶ The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)
- ▶ If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

Settings

Handset lock

You can lock your phone. The following 4 lock functions are available.

When switching on: Locks the handset whenever the handset is switched on.

If USIM changed: Locks the handset when the phone's USIM card has been changed.

Immediate: Locks the handset immediately.

None: Deactivates the lock function.

You are requested to enter the security code to confirm the selection.

- ▶ To unlock the handset, you need to enter the security code.

Change codes

You can change the PIN, PIN2, the mobile phone password and the call barring password.

PIN code

PIN is the abbreviation for Personal Identification Number, and is used to restrict use by an unauthorised user.

PIN code change procedure

1. Select 'PIN code' from the 'Change codes' list and then press **OK**.
2. Enter the current PIN code, and press **OK**.
3. Enter the new PIN code, and press **OK**.
4. Enter the new PIN code once again, and press **OK**.
- ▶ If the PIN code is different from that of step 3, the procedure is restarted from step 3.
5. When the PIN code is changed properly, a **Changed** message is displayed. If you enter an incorrect PIN code in step 2, the procedure is restarted from step 2, and the number of attempts you have left to enter the number decreased by 1.
6. Press **C** in the PIN code entry window to return to the previous step.

Note

- ▶ Three incorrect PIN code entries in the PIN code entry window would invalidate the PIN code. In this case, you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again. The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)


PIN2 code

PIN2 is the abbreviation for Personal Identification Number 2, and is used to restrict use by unauthorised users as with the PIN. The PIN2 code change procedure is the same as the one for the PIN code. 3 incorrect PIN2 code entries would invalidate the PIN2 code. In this case, you have to enter the PUK2 code in order to use the PIN2 code again. The maximum number of times you may try to enter the PUK2 code is 10, like PUK1. 10 incorrect PUK2 code entries would invalidate the PIN2 code.

Security code

The security code is used to change the mobile phone password. The maximum number of attempts to enter the security code is not limited as it is with PIN and PIN2.

Keypad lock

If you select **Off**, the keypad can be activated only when the slide is open. If you select **On**, you can activate the keypad by pressing  on the left side of the phone.

Power save

(Menu #.1.5)

Decide whether to activate the power save mode or not.

Memory status

(Menu #.1.6)

User memory

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

Settings

User reserved memory

This function shows the status of the User reserved memory. The usual contents are Text messages, Contacts, Calendar, Tasks, Memo. And it gives a clear illustration of the actual amount compared with the total amount for each item.

USIM memory

This function shows the status of the USIM card user memory.

External memory

This function shows the status of the External card user memory. This function displays the In-use and free memory usage statistics.

Format external memory

Select this to format the external memory.

Handset Information (Menu #.1.7)

This functions shows the USIM card telephone number, model name and software version of the mobile phone.

Reset settings (Menu #.1.8)

Clear memory

Select this to clear the memory. You are requested to enter the security code.

- ▶ **Handset contents:** Deletes all the multimedia contents downloaded.
- ▶ **Handset personal info.:** Deletes personal information such as received messages or emails.

Default setting

Select this to reset your phone to its default configuration. You are requested to enter the security code.

Display settings Menu #.2

This menu allows you to personalise the display options of the screens and of the menus entire graphic interface.

Main Display (Menu #.2.1)

You can set the screen theme to be displayed on the main screen.

Home screen

- ▶ **Wallpaper:** You can select an image to be displayed on the main screen.
- ▶ **Display items:** You can select which items to display on the screen: Calendar + Clock, Calendar, Clock, Dual clock or Do not show.
- ▶ **Shows shortcut icons:** Decide whether to display the shortcut icons or not.

Outgoing call

You can select the image to be displayed while dialling a number.

Start up image

You can select the image to be displayed while the phone is being switched on.

Power off image

You can select the image to be displayed while the phone is being switched off.

Menu style (Menu #.2.2)

You can select the desired menu style from Grid style and One by one style.

Font (Menu #.2.3)

You can set the font style, dialling font size, and dialling font colour using ◀ / ▶.

Backlight (Menu #.2.4)

You can set the backlight duration on the Home screen and Keypad individually.

Welcome message (Menu #.2.5)

After selecting On, you can write a welcome message.

Java settings

Menu #.3

Activating a profile

1. Move the cursor to the profile you would like to activate.
2. Press **OK** or select **Activate** from the **Options** menu.

Adding a new profile

1. Select **Add new** from the **Options** menu.
The following items need to be configured.

Service name	Enter an account name for the profile.
Connection mode	Choose from the given list of connection modes. (Default is TCP with Proxy)
IP address	Enter the WAP Gateway IP address provided by the operator. (e.g. 195. 115. 025. 129)
Proxy server port	Port details are provided by the operator, depending upon the Connection mode.
Access point	Choose from the given list of access points. (For more details on adding or editing a new access point, refer to page 100.)

2. Press the right soft key [Done] to save any configuration changes.

You can edit and delete a profile by selecting **Edit** and **Delete** from the **Options** menu.

Messaging settings

Menu #.4

For detailed information, please refer to page 51.

Call settings

Menu #.5

Call durations

(Menu #.5.1)

You can view call time by types. Press the left soft key [Options] to choose either partial initialisation or entire initialisation. Also press right soft key [Clear] to initialise a selected duration type. Initialization will require your Security code.

The following timers are available:

- ▶ **Last call:** Shows the latest call time in units of hours/minutes/seconds.

- ▶ **Received calls:** Shows incoming call time.
- ▶ **Dialled calls:** Shows outgoing call time.
- ▶ **All calls:** Shows total call time.

Call barring (Menu #.5.2)

Call barring menus for Voice and Video calls are provided.

The menu consists of **Voice calls**, **Video calls** and **Deactivate all**. The Voice calls and Video calls menus have the following submenus.

The **Call barring** menu consists of **All outgoing**, **Outgoing international**, **Outgoing international calls except home country**, **All incoming** and **Incoming when abroad** submenus.

The **All outgoing** menu bars dialling all outgoing calls, the **Outgoing international** menu bars dialling outgoing international calls, and the **Outgoing international calls except home country** menu bars dialling outgoing international calls except for the Home PLMN country. **All incoming** rejects all incoming calls and the **Incoming when**

abroad menu rejects incoming calls when roaming.

Voice calls

Video calls

All outgoing

1. When **OK** is selected, it receives the Barring password from user, and activates the barring service on the network. A requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When the Options menu is selected, it activates the Outgoing calls menu. Select the Options menu from the soft menu on the lowest menu. Then **Deactivate**, **Activate**, **Deactivate all**, **View status** and **Change password** menus appear. Select the **Activate** menu to receive the Barring password from the user and activate the barring service on the network. The **Deactivate** menu deactivates the barring service after the user's Barring password is entered. The **Deactivate all**

menu deactivates all barring services configured in the network after the user's Barring password has been entered. The **View status** menu enables users to view the current network configuration. Selecting **View status** menu displays the Requesting message with animation and the result of the operation when the network answers. **Change password** menu enables users to change the current barring password.

Outgoing international

1. When is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the International calls menu. It operates in the same way as the **Outgoing calls** menu.

Outgoing international calls except home country

1. When is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected – It activates and operates the **International except home country** menu. It operates in the same way as the **Outgoing calls** menu.

All incoming

1. When is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the Incoming calls menu. It operates in the same way as the **Outgoing calls** menu.

Incoming when abroad

1. When is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the Incoming calls when abroad menu. It operates in the same way as the **Outgoing calls** menu.

Fixed dial numbers (Menu #.5.3)

- ▶ **On /Off:** Select whether to activate FDN or not. PIN authentication is required.
- ▶ **FDN List:** Displays the current FDN list. You can edit, add, or delete fixed dial numbers. PIN2 authentication is required to edit the list. And the configuration information is saved on the USIM. The information saved on the USIM is used when FDN restricts outgoing calls.

Data volume (Menu #.5.4)

Allows you to check the sent, received and all data volume transferred. (Data volume transferred through TE connection is excluded from counting.)

Press the left soft key [Options] to choose for partial initialization or entire initialization. You can also use the right soft key [Clear] for the initialization of the selected volume type. Initialization will require your Security code.

Call costs (Menu #.5.5)

1. This function displays the call costs of the Last call and All calls.
2. To initialise, press the right soft key [Clear] and enter the PIN2 code.
3. You can select either **Units** or **Currency** in **Set call cost**. According to your setting, the call cost is displayed during a call (If USIM and Network support Advice Of Charge(AOC)).
4. In the **Set limit** configuration, select **On** to configure the cost limit. When a cost limit is configured, and the call costs reach the limit, making a call will not be allowed.

Settings

Diverts

(Menu #.5.6)

Call divert menus for voice and video calls are provided.

The menu consists of Voice calls, Video calls and Deactivate all.

Voice calls

All voice calls

When busy

No answer

Not reachable

1. When the Deactivate menu is selected

Deletes Call Divert Number registered to the network. While waiting for the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

2. When To a number is selected

A dialogue window appears allowing you to enter a phone number to divert to. Input a phone number to divert calls to, and press **OK**. While waiting the result

from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

3. When Recent divert number list is selected

Divert registration is performed with the selected number. Select the number, and press **OK**. While waiting for the result from the network, a Requesting message and animation appears. When the network answers, the result of the operation is displayed.

4. Options menu

After activating All voice calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Activate, Deactivate all, View status and clear list menus.

Activate: Move to Settings menu to activate call divert.

The View status menu shows the settings on the network. If you select this menu, Requesting message and animation appear. Then the network settings are displayed when the information is received

from the network. Selecting Status in the right soft menu gives the same result. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

Video calls

All video calls

1. When the Deactivate menu is selected

Deletes Call Divert Number registered to the network. While waiting for the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

2. When To a number is selected

A dialogue window appears allowing you to enter a phone number to divert to. Input a phone number to divert calls to, and press **OK**. While awaiting the result

from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

3. When Recent divert number list is selected

Divert registration is performed with the selected number. Select the number, and press **OK**. While waiting for the result from the network, a Requesting message and animation appears. When the network answers, the result of the operation is displayed.

4. Options menu

After activating the All video calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Activate, Deactivate all, View status and clear list menus.

Activate: Move to Settings menu (above 1~4) to activate call divert. The View status menu shows the settings on the network. If you select this menu, Requesting Message and animation appear. Then the network settings are displayed when the information is received

from the network. Selecting Status in the right soft menu gives the same result. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

When busy

1. When the Deactivate menu is selected

It operates the same as All voice calls menu.

2. When To a number is selected

It operates the same as All voice calls menu.

3. When Recent divert number list is selected

It operates the same as All voice calls menu.

4. When Options menu is selected

It activates and operates If busy menu. It operates the same as All voice calls menu.

No answer

1. When the Deactivate menu is selected

It operates the same as All voice calls menu.

2. When To a number is selected

It operates the same as All voice calls menu.

3. When Recent divert number list is selected

It operates the same as All voice calls menu.

4. When Options menu is selected

Activates and operates No answer menu. It operates the same as All voice calls menu except that users can configure delay time in the Set waiting time menu in the menu list.

Not reachable

1. When Deactivate menu is selected

It operates the same as All voice calls menu.

2. When To a number is selected

It operates the same as All voice calls menu.

3. When Recent divert number list is selected

It operates the same as All voice calls menu.

4. When Options menu is selected

Activates and operates If out of reach menu.
It operates the same as All voice calls menu.

Call waiting (Menu #.5.7)

- ▶ **Activate:** Activates waiting service. Selecting this item, displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **Deactivate:** Deactivates Call waiting service. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **View status:** Displays activated Call waiting service group item of the network. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.

Voice mail (Menu #.5.8)

You can add or modify voice mail centre.

Video call (Menu #.5.9)

You can set the screen display when making /receiving a video call.

- ▶ **Show private image:** Determine whether to show the private image or not.
- ▶ **Select still image:** Select the still image to be displayed.
- ▶ **Mirror:** Select to activate the mirror effect or not.
 - **On:** Displays the image flipped side to side.
 - **Off:** Displays the image as it is.
- ▶ **My image size:** Select my image size to be displayed.
- ▶ **My image position:** Select the position where your image will be displayed.

Settings

Common settings (Menu #.5.0)

Call reject

You can set whether to reject incoming calls.

1. Select **On** in Reject menu to activate call reject. The Reject list menu appears.
2. Set the desired call reject option in the Reject list menu.
 - ▶ **All calls:** Rejects all calls.
 - ▶ **Contacts:** Rejects the calls from the number stored in Contacts.
 - ▶ **Groups:** You can specify call rejects by group units stored in Contacts.
 - ▶ **Unregistered:** Rejects calls from the number not stored in Contacts.
 - ▶ **No caller ID:** Reject calls which do not have CLI information.

Send my number

- ▶ **Set by network:** Configures with the default settings determined by the service provider.

- ▶ **On:** Configures to send my phone number when making an outgoing call.
- ▶ **Off:** Configures not to send my phone number when making an outgoing call.

Auto redial

Allows you to set the auto redial function when a call attempt has failed.


Answer mode

Allows you to set the answering method. You can choose between **Press send key**, **Slide up** and **Press any key**.

Minute minder

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

BT answer mode

- ▶ **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- ▶ **Handset:** If you press  on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset.

This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

Contact settings Menu #.6

For detailed information, please refer to 72. (Menu 8.7)

Connectivity Menu #.7

Bluetooth (Menu #.7.1)

Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a hands-free, PC, PDA or other phones.

You can, for example, have a conversation via a cordless Bluetooth hands-free or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

Note

- ▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

1. Getting started

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 1. Paired devices**

To use the Bluetooth function, you must first set Bluetooth to **On**.

2. Configuring Bluetooth settings

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 2. Settings**

- **Bluetooth usage:** To use the Bluetooth function, set it to [On]. Otherwise, set it to [Off].

- **My handset's visibility:** Set [My handset's visibility] to [Show to all] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.

- **My handset's name:** You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when [My handset's visibility] is set to [Show to all].

Note

▶ When user uses Bluetooth Device in the handset, the security of the handset is at risk.

Therefore, we recommend that Bluetooth visibility be set to Hidden after configuration or device pairing. For incoming files via Bluetooth regardless of paired devices, you can choose to accept or reject the connection, after checking the sender details.

3. Paired device

Pairing Devices(Pairing with a device)

If a paired Bluetooth device already exists.

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 1. Paired devices > Options > Add**

If there is no paired Bluetooth device.

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 1. Paired devices > Add**

Options

▶ **Add new:** Using this menu, you can pair a new Bluetooth device with your phone.

▶ **Assign short name:** Using this menu, you can rename a paired phone as required.

▶ **Connecting/Disconnecting the device**

1. If you want to open the connection to the selected device, select the Connect.
2. If you want to close the connection to the selected device, select the Disconnect.

▶ **Delete:** Using this menu, you can delete the paired Bluetooth device.

▶ **Delete all:** Using this menu, you can delete all of the paired Bluetooth devices.

<Pairing devices>

1. To search for a Bluetooth device to pair, press **Add** or **Add new**.
2. Screen shows **Searching for devices**. Bluetooth devices within a range of 10m will be found.
3. If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

4. Pairing procedure

- Press **OK**. A window will appear on the screen asking you to enter your password.

- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.

<Deleting devices>

1. Select a device to delete from the Paired devices screen.
2. You can delete a device by pressing the Delete key or by selecting Options > Delete. To delete all paired devices, select Options > Delete All.

<Transmitting data using Bluetooth>

1. To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send data in the My Files to another device, select

Menu > 6. My Files > 1. Pictures /
2. Sounds / 3. Videos/ 5. Bluetooth data
/ 6. Other files / 7. External memory >
Select data to transmit > Send > 3./4.
Bluetooth

2. Transmitting data

- 1) Last device found is displayed. If the desired device does not exist in the list, select [More devices].
- 2) Select the device to which you want to transmit data from the devices on the screen and press **OK**.
- 3) If the other party selects [Yes] for [Connection request], the data is transmitted.

<Receiving data using Bluetooth>

Menu > #. Settings > 7. Connectivity >
1. Bluetooth > 1. Paired devices

If another party attempts to transmit data, the [Connection request] question will appear on the screen. If you select [Yes], the data will be transmitted to your phone.

During data transmission, the Bluetooth icon flashes.

<Bluetooth data storage folder>

You can check the received data by selecting
Menu > 6. My Files > 5. Bluetooth data.

4. Device

<Connecting a headset>

Menu > #. Settings > 7. Connectivity >

1. Bluetooth

1. Connect the headset according to the procedures described in the Pairing Devices section.
2. To use the headset, select the headset from the registered devices, press the Option key and then select 3.Connect.
3. To check that the selected headset has been connected successfully, press the Option key. If it is properly connected, 3.Disconnect will appear. If it is not connected, 3.Connect will appear.

<Connecting a hands-free kit>

1. Menu > #. Settings > 7. Connectivity >
1. Bluetooth

2. Connect the hands-free kit according to the procedures described in the Pairing Devices section.
3. To use the hands-free kit, select the hands-free kit from the registered devices, press the Option key and then select 3.Connect.
4. To check that the selected hands-free kit has been connected successfully, press the Option key. If it is properly connected, 3.Disconnect will appear. If it is not connected, 3.Connect will appear.

Synchronisation (Menu #.7.2)

(Note: This service is not available in all countries. Please contact your service provider for further information.)

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, and Tasks via a wireless network.

Connect

1. Select the Connect item and then press **OK**.
2. Connect to the server with the selected server profile and the synchronization animation is displayed while the synchronization is performed.

Logs

Select the Logs item and then press **OK** to view the log for the last synchronization operation performed.

Server synch. centre

1. Select the Server synch. centre item and then press **OK**.
2. This menu allows you to configure the profile for a synchronization server.
 - ▶ **Profile name:** Input the name for the profile.
 - ▶ **Host address:** Contact your service provider.

Settings

- ▶ **Proxy IP address:** Enter the WAP gateway address and port number.
- ▶ **User name:** Enter your user ID for synchronization server.
- ▶ **Password:** Input your password.
- ▶ **Contacts:** Select whether to synchronise Contacts or not.
- ▶ **Contact name:** Input the contacts database name for server access.
- ▶ **Calendar:** Select whether to synchronise Calendar or not.
- ▶ **Calendar name:** Input the calendar database name for server access.
- ▶ **Tasks:** Select whether to synchronise Tasks or not.
- ▶ **Tasks name:** Input the Tasks database name for server access.
- ▶ **Sync type:** Select the synchronization type below.

- Normal

The phone and the server are required to exchange information about the modified data.

- Backup

The phone sends all the data from a database to the server. The server is expected to replace all data in the target database with the data sent by the phone. This means the phone overwrites all the data in the server database.

- Restore

The server sends all its data from a database to the phone. The phone is expected to replace all data in the target database with the server sent by the server. This means the server overwrites all data in the phone database.

- ▶ **Access point:** Select an access point to use for the data connection.

Network

(Menu #.73)

Network selection

Select between **Automatic** and **Manual**.

- ▶ **Automatic:** Automatically searches for the network and registers the handset to the

network. This is recommended for best service and quality.

- ▶ **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, all the currently available networks are listed again and you can select any other one for registration.

Network mode

You can set a type of network to search for when networks are searched in the **Select network** menu.

- ▶ **Automatic:** Searches all the networks connectable.
- ▶ **UMTS:** Searches only networks supporting 3G.
- ▶ **GSM 900/1800:** Searches only networks supporting GSM 900/1800 band.
- ▶ **GSM 1900:** Searches only networks supporting GSM 1900 band.

Preferred lists

If the network is searching automatically, you can add a preferable network to be connected to. And the following options are available.

- ▶ **Add new:** You can add a new network using the followings.
 - **Search:** You can select one from the network list stored in the phone.
 - **Enter new network:** You can enter the country code (MCC) and the network code (MNC) to add. After setting, press **Done** key.
- ▶ **Edit:** You can modify the information of the selected network.
- ▶ **Delete:** Deletes the selected network.
- ▶ **Move up:** Moves the selected network upward.
- ▶ **Move down:** Moves the selected network downward.

Settings

Access points

(Menu #.7.4)

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

You can edit the following configuration items by selecting the right soft key.

Connection title	Access Point profile name.
Bearer	Choose the bearer from the list. (Default is UMTS.)
Authentication	Choose the authentication from the list. (Default is No auth)
Username	Information provided by service provider.
Password	Information provided by service provider.
APN	APN name to access network. Information provided by service provider.

- ▶ Press **Done** key to save any configuration changes.

Browser settings

(Menu #.7.5)

Profiles

Select the appropriate profile by pressing **OK**. This will activate the profile to initiate browser launch.

Security

If user presses Certificates, certification information is shown.

User can clear secure session information by pressing Session clear.

Certificates

If stored, a list of root/ca certificates required for WTLS/TLS can be found here.

Certificates can be viewed from the list.

Session clear

Secure (WTLS/ TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

Character encoding

Sets the browser default character set to one of the following.

- ▶ Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

Scrolling control

Allows you to set the scroll speed by selecting the number of lines to scroll.

Select from Small(1 line), Medium(2 lines), Large(3 lines).

Show Image

Allows you to enable or disable image display during browsing.

Cache

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies

Enabling Cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on

your phone.

JavaScript

Select On/Off.

Reset settings

Select this to reset your phone to its default configuration.

Streaming

(Menu #.7.6)

If you want to set different network setting to play streaming content, you can set different network settings.

Note

- ▶ Enabling this function will delay displaying of images until transmission is completed. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

Dial-up network

(Menu #.7.7)

You can use your phone with a variety of PC connectivity and data communications applications. Select USB and Bluetooth you want to use for the data connection.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Standard Battery



Data cable/CD

You can connect your phone to PC to exchange the data between them.



Hands free ear-microphone and music player controller combo

Stereo headset



Controller: Answer & End key, music player control, volume control, Hold button and microphone.



After connecting the headset and the controller, plug the end of controller into the headset jack on the right side of the phone.

Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions: please check with our regional service company or agent for further information.

Technical data

General

Product name: KU800

System: GSM900/DCS1800/PCS 1900,
WCDMA 2100

Net weight: 67.5g(Without battery)

Ambient Temperatures

Max: +55°C

Min: -10°C

Index

A

Access codes	23
Access points	100
Add memo	66
Add new	71
Alarms	63
Answer mode	92

B

Backlight	83
Barring password	25
Battery	15
Battery information and care	11
Bluetooth	93
Bluetooth data	61
Browser settings	35, 100

C

Calculator	66
Calendar	63

Call barring	85
Camera	38
Charging the battery	19
Converter	67

D

Data cable	102
Dialled calls	73
Display information	24
Display settings	83
Diverts	88

E

Email	46, 49, 54
Entering text	28
External memory	62, 82

H

Handset Information	82
Handset lock	80

I		Multimedia templates	51
Inbox	47	Music hot key	14
J		N	
JavaScript	36, 101	Network	98
Java settings	33, 84	Network selection	98
K		O	
Key tone	77	Own number	72
L		P	
Language	79	PIN code	23
M		PIN code request	79
Memo	66	PIN2 code	23, 81
Memory card formatting	22	Playlists	37
Memory status	81	Profiles	35, 77
Message alert	77	PUK code	23
Message tone	77	PUK2 code	23
Missed calls	73		
MMS	52		

Index

R

Received calls 73

S

SAR 7

Screen structure 24, 25

Security 35, 79, 100

Security code 23, 81

Signal Strength 28

Speed dials 71

Stereo headset 102

T

Tasks 65

Templates 51

U

USIM memory 82

USIM Tool Kit 74

V

Videos 59

Voice calls 88

Voice mail 91

Voice recorder 69

Volume 68, 77

W

World time 69

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU800

Trade Name

LG

CE 0889

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.5.1, ETSI EN 301 489-07 V1.2.1

ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.2.1

ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2

ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-2 V2.2.1

ETSI EN 301 908-1 V2.2.1, ETSI EN 300 328 V1.4.1

EN 60980:2001; EN 50361:2001

EN 60950 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

19-July, 2006

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 8940, e-mail : seokim@lge.com


Signature of representative