



ENGLISH

Simple Manual

**LG-P350**



**CE 0168** 

P/N : MFL67159985 (1.0) 

[www.lg.com](http://www.lg.com)

**Making an Emergency call when there is no USIM card present in the handset:**

1. Enter emergency number 111 or 112
2. Press **Voice call** to activate Emergency call.

# LG-P350 User Guide



- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google search, Maps, Google Mail, YouTube, Talk and Android Market are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact LG-P350 phone by LG, designed to operate with the latest digital mobile communication technology.

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety

margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale

## Guidelines for safe and efficient use

to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this device when tested for use at the ear is 1.30 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until

such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 1.46 W/kg.

\* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

## FCC SAR information

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada.

These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.06 W/kg and when properly worn on the body is 0.71 W/kg.

Additionally, this device was tested for typical body-worn operations with the back of the phone kept 2cm between the users body and the back of the phone.

To comply with FCC RF exposure requirements, a minimum separation distance of 2cm must be maintained between

the user's body and the back of the phone.

### \* FCC Notice & Caution

#### Notice!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Caution!

Change or Modifications that are not specifically approved by the manufacturer could void the user's authority to operate the equipment

# Guidelines for safe and efficient use

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock which may cause serious injury or damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use

solvents such as benzene, thinner or alcohol).

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

## Efficient phone operation

### Electronic and medical devices

All mobile phones may get interference, which could affect performance.

Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.

Some hearing aids might be disturbed by mobile phones.

Minor interference may affect TVs, radios, PCs, etc.

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not

# Guidelines for safe and efficient use

carry it in a breast pocket.

## Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos

and safety equipment.

- If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly Important when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

**NOTE:** Excessive sound pressure from earphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Blasting area

- Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a Petrol station.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it within the vicinity of any aircraft without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking

# Guidelines for safe and efficient use

hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike older batteries there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- Using an incorrect battery increases the risk of explosion.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for

assistance.

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Driver Safety Tips

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Use your wireless phone to call emergency services for yourself or others. In the case of fire, traffic accident or medical emergencies;
  - Australia Dial (0-0-0)
  - New Zealand Dial (1-1-1)
  - International Dial (1-1-2)
  - other local emergency number.
- Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.

## Guidelines for safe and efficient use

- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

## Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

### 1. Phone memory

When available space on your phone memory is less than 10%, your phone cannot receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

#### To manage the application

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll and select the application you want to uninstall.
- 3 Tap **Uninstall** and touch OK to uninstall the application you desired.

### 2. Optimising Battery Life

You can extend your battery's life by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

#### To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

## Important notice

### To check the battery charge level


- 1 On the home screen, touch **Applications** tab and select **Settings> About phone > Status**.
- 2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


### To monitor and control what uses the battery

- 1 On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
- 2 The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

### 3. Installing an Open Source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market™. If some applications are not properly installed on your phone, your phone may not work correctly or a serious error could occur. You will need to uninstall those applications and all of its data and settings from the phone.

## 4. Using Unlock pattern

Set unlock pattern to secure your phone. This opens a set of screens that guide you through drawing a screen unlock pattern.

On the home screen, touch Applications tab and select **Settings > Location & security > Set up screen lock > Pattern.**

Follow the screens to be guided through drawing a screen unlock pattern. Select Next to continue to next screen.



**WARNING:** Precautions to take when using the Pattern Lock. It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you have used all 5 opportunities, you may attempt again after 30 seconds.

## When you can't recall your unlock Pattern, PIN, or Password:

If you've created a Google account on the phone, tap the Forgot pattern button. Then, you are required to sign in with your Google account to unlock your phone. If you haven't created a Google account on the phone or you forgot it, you need to perform a hard reset.

**Caution:** If you perform a hard reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a hard reset.

## Important notice

### 5. Using Safe Mode and Hard Reset

#### Using Safe mode

##### \* To recover the phone from any malfunction

Turn off your phone and reboot. While your phone is powering back on, press and hold the Send key while the Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in the lower left-hand corner.

##### \* Using Hard Reset (Factory Reset)

If it does not restore to its original state, use **Hard Reset** to initialise your phone.

- 1 Remove and reinsert the battery.
- 2 Press and hold for over 10 seconds: **Power/Lock** key + **Send** key + **Down Volume** key.

- 3 When the power turns on, release these keys.

#### **WARNING**

If you perform a Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a **Hard Reset**.

### 6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

## To turn Wi-Fi on and connect to a Wi-Fi network

- 1 On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
  - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
  - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
  - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4 The Status bar displays icons that indicate Wi-Fi status.

## 7. Using a micro SD card

Pictures, along with Music and Video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first. Without inserting a memory card, you will not be able to save pictures and video you have taken.

### **WARNING:**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Home Screen > Applications > Settings > SD card & phone storage > Unmount SD card**.

## Important notice

### 8. Opening and Switching Applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

#### To stop the application you use

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications > Running**.
- 2 Scroll to the desired application and touch **Force stop** to stop using it.

#### TIP Getting back to recent Apps

- Press and hold Home key, then a screen will display a list of the applications you used recently

### 9. Copy LG PC Suite from SD Card

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

#### Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently.
- Synchronise data between a PC and a phone (Contacts, Calendar, Message(SMS), Bookmark, Call log).

- Transfer multimedia files (photos, videos, music) conveniently with a simple drag & drop between a PC and a phone.
- Transfer the messages from a phone to a PC.
- Use your phone as a Modem.
- S/W update without losing your data.

### Installing LG PC Suite from your micro SD memory card

- 1 Insert your micro SD memory card on your phone. (It may already be inserted on your phone.)
- 2 Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)

- 3 Connect your phone through USB data cable to your PC.
- 4
  - In the status bar, drag the USB icon.
  - Choose USB Connected and Turn On USB storage.
  - You can view the mass storage content on your PC and transfer the files.
- 5
  - Copy the '**LGPCSuiteIV**' folder on your mass storage to your PC.
  - Run 'LGInstaller.exe' file on your PC and follow the instructions.

\* When LG PC Suite IV installation is completed, disable **Mass storage only** mode to run LG PC Suite IV.

**NOTE:** Please do not remove or delete other program files installed on your memory card. This may cause damage to your preinstalled applications on the phone.

## Important notice

### 10. Connecting your phone to a computer via USB

**NOTE:** To synchronise your phone via USB cable with your PC, you need to install the LG PC Suite program on your PC. You can download this program from the LG website ([www.lg.com](http://www.lg.com)). Go to <http://www.lg.com> and select your region, country & language. Visit LG website for more information. As PC Suite is embedded at inboxed SD card, you can simply copy it to your PC.

#### **LG-P350 does not support:**

- PC Connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java Application

User's guide for PC Suite IV is in Help menu after the installation PC Suite IV.

- 1 Use the USB cable with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- 2 Open the Notification drawer and touch USB connected.
- 3 Touch **"Turn On USB storage"** to confirm that you want to transfer files between your phone's micro SD card and the computer.

When the phone is connected as USB storage, you will receive a notification. Your phone's micro SD card is mounted as a drive on your computer. You can now copy files to and from the micro SD card.

### 11. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just

touch it.

**Note:** When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

**Tip!** To use a micro SD card on your phone again, you need to open the Notification drawer and touch "**Turn off USB storage**". During this time, you can't access the micro SD card from your phone, so you can't use applications that rely on the micro SD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

- 1 Safely disconnect the USB device on your computer.
- 2 Open the Notification drawer and touch **Turn off USB storage**.

- 3 Touch **Turn off USB storage** in the dialog that opens.

## 12. Hold phone up right

**Please hold the mobile phone up right as a regular phone.**

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

## 13. When Screen freezes

**If the phone does not respond to user input or the screen freezes:**

Remove the battery, insert it again and turn the phone on. If it still does not work, please contact the service centre.

## 14. Do not connect your phone when turning your PC on/off

Make sure to disconnect your phone and PC via data cable as your PC might have errors.

# Before using the mobile phone, please read first!

## How to save music/video files to the phone

### Connect your phone to the PC using the USB cable.

Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage > Open folder to view files.**

If you didn't install LG Android Platform Driver on your PC, you need to set it manually. On the home screen, touch **Applications** tab and select **Settings > SD card & phone storage > activate Mass storage only.**

### Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.

- If there is a video file with a subtitle file (.smi or .srt file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.
- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

## How to play music/video files to the phone

### Playing music files

From home screen touch **Application** tab > **Music**. Locate the file you want to play from Artist, Albums, Songs, Playlists tabs.

### Playing video files

From home screen touch **Application** tab > **Video player**, locate the file you want in the list and select it to play.

## How to move the contacts from the old phone to the current phone

Export your contacts as a CSV file from your old phone to the PC using a PC sync program.

- 1 Download LG PC Suite IV at [www.lg.com](http://www.lg.com) and install it in the PC. Run the program and connect your phone to the PC using the USB cable.
- 2 Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved in the PC.
- 3 If the fields in the imported CSV file are different from the ones in LG PC Suite IV, you need to map the fields. After mapping the fields, click OK. Then, the contacts are added to the PC.

- 4 If the connection of LG-P350 phone (using the USB cable) is detected by LG PC Suite IV, click "Sync" or "Sync Contacts" to synchronise the contacts saved in the PC to your phone and save them.

## How to send data from your phone via Bluetooth

### Sending data via Bluetooth:

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- \* **Sending pictures:** Run the Gallery application and select **Picture > Menu**. Click **Share** and select **Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.

## Before using the mobile phone, please read first!

\* **Exporting contacts:** Run the Contacts application. Touch the address you want to export to. Press **Menu** and Select **Share > Bluetooth >** Check if Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

\* **Sending multi-selected contacts:** Run the "Contacts" application. To Select more than one contact press **Menu** key and touch **Multiselect**. Select the contacts you want to send or press **Menu** key and touch **Select all**. Select **Share > Bluetooth >** Check if Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

\* **Connecting to FTP (Only the FTP server is supported on this handset):** Select **"Settings" > "Wireless & networks" > "Bluetooth settings"**. Then, select the **"Discoverable"** checkbox and search for other devices. Find the service you want and connect to the FTP server.

**TIP:** The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, go to **"Settings" > "Wireless & networks" > "Bluetooth settings"**.

Then, select the **"Discoverable"** checkbox.

The checkbox is cleared after 120 seconds.

- Supported profiles are HFP, HSP, OPP, PBAP (server), FTP (server), A2DP, AVRCP, and DUN.

# Getting to know your phone

To turn the phone on, press and hold the Power key for 3 seconds.

To turn the phone off, press the Power key for 3 seconds and touch Power Off.

## TIP! When screen is locked

1. Drag your finger from left to right to unlock the screen.
2. To turn the phone off, press the Power key for 3 seconds and touch Power Off.

Earpiece


Home key 

- Returns to the home screen from any screen.

Menu key 

- Check what options are available.

Send key 

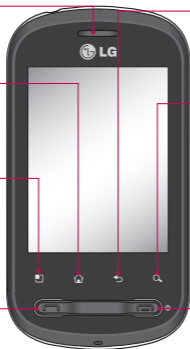

Back key 

- Returns to the previous screen.

Search key 

- Search the web and contents in your phone.

Power/Lock key 

- Powers your phone on/off by pressing and holding the key.  
- Turns the screen off and locks the phone.



**WARNING:** Placing a heavy object on the phone or sitting on it can damage its LCD and touch-screen functionalities.

**Tip!** Press Menu key whenever you tap an application to check what options are available.

 
**Tip!** LG-P350 does not support video call.

**Tip!** If LG-P350 has errors when you use it or you cannot turn it on, remove battery, install it again and turn it on after 5 seconds.

Stereo earphone connector



Charger, micro USB cable connector



Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.

Microphone



Camera lens



Back cover

SIM card slot




Battery

micro SD memory card slot

## Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 To remove the back cover, hold the phone firmly in your hand. With your other hand, firmly press your thumb on the back cover. Lift off the battery cover with your forefinger.

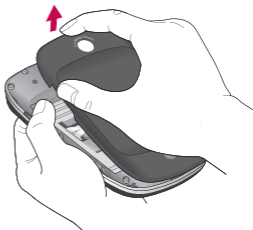

- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.




- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.



- 4 Replace the back cover of the phone.



## Charging your phone

Slide back the cover of the charger connector on the side of your LG-P350. Insert the charger, and plug it into an electrical outlet. Your LG-P350 must be charged until you can see .



**NOTE:** The battery must be initially fully charged to improve battery lifetime.

**NOTE:** The LG-P350 has an internal antenna. Be careful not to scratch or damage this rear area, as this will cause loss of performance.


## Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

**NOTE:** The LG-P350 supports up to a 32GB memory card.

To insert a memory card:

- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.
- 2 Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

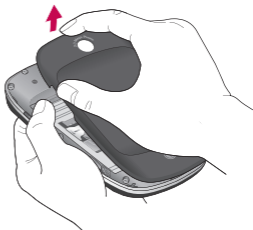

# Your Home screen



## **WARNING!**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

## Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE:** All files on the card are deleted when you format the card.

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Unmount SD card.
- 5 Touch **Format SD card**, then confirm your choice.
- 6 If you set the pattern lock, input the pattern lock and select **Erase everything**. The card will then be formatted and ready to use.

**NOTE:** If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

### Tip!

If your memory card is already Unmounted, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD card**.

## Lock your phone

When you are not using LG-P350, press the Power/Lock key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the home screen or other screen you are viewing is replaced with the lock screen to conserve the battery.

**Note:** If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g. phone call, web access and data communications).

### **Tip! Setting unlock pattern:**

You can draw your own unlock pattern by connecting four or more dots.


If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

**Tip!** When you set an unlock pattern, you need to create your Gmail account first.




**Caution:** The phone will be locked for 30 seconds after 5 incorrect attempts at drawing the unlock pattern.

## Unlock screen

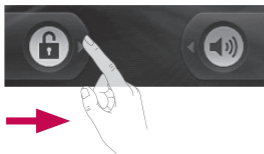Whenever your LG-P350 is not in use, it will return to the lock screen. Drag your finger from left to right to unlock the screen.



## Silent Mode

From Notification drawer, touch  to be  or if you don't use an unlock pattern, simply drag  to the left.



To wake up your phone, press **Send** or **Power/Lock** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock your home screen. The last screen

you were working on opens.



## Home

Simply swipe your finger to the left or right to view them. You can also customise each panel with widgets, shortcuts, which are shortcuts to your favourite applications, folders and wallpapers.

**NOTE:** Some screen images may be different depending on your phone provider.

**Tip!** To add an application icon to the home screen, touch and hold the application you want to add to the home screen.

### Tip!

- Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon .
- Drag and drop an application icon to the **Trash** icon .


**Tip!** You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

## Getting back to a recently used applications

Touch and hold the Home key. The screen will show you a pop up with icons of applications that you've used recently.

## Notification drawer

The notification drawer runs across the top of your screen.

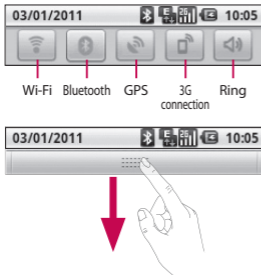


Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can


check and manage Wi-Fi, Bluetooth, GPS status as well as other notifications.


## Onscreen Keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard automatically displays on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

## Qwerty Keypad (Phone Keypad)


 **Shift Key** - Touch once to capitalise the next letter you type. Double tap for all caps.


 **XT9 Key** - Turn XT9 Mode on or off.

 **Setting key**- Tap to view the settings menu. Choose from Editor settings, Keyboard layout, Writing language, User dictionary and Other input method.

### **Number and Symbols Key** -


Touch to change input to number and symbol entry.

 **Enter Key** - Tap to create a new line in the message field.

 **Language Key** - Tap to change the On-screen Keyboard language.

 **Delete Key**

  Go forward or backward between letters.

**Tip!** To switch between Qwerty Keypad and Phone Keypad, touch  from Phone Keypad and choose Keyboard Layout.

## Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.



## IMPORTANT

- Some applications work only with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Google mail messages, Calendar events, and other information from these applications and services on the web are synchronised with your phone.

## Calls

### Answering and rejecting a call

#### When screen is locked/ When screen is unlocked


When your phone rings, drag the **Answer** icon  to the right. Drag **Decline** icon  to the left to reject an incoming call. Drag Excuse msg bar from the bottom


if you want to send one.

Or else When your phone rings press the Answer button(Send key). Press Decline button (Power/Lock key) to reject the incoming call. Touch the Excuse msg bar from the bottom.Touch the Excuse msg bar from the bottom.

## Messaging

Your LG-P350 combines SMS and MMS into one intuitive, easy-to-use menu.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and in what language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

## Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Google Mail. The Email application supports the following account types: POP3, IMAP and Exchange.

## Social Networking

With your phone, you can take advantage of social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friends' status updates in real-time.

You can add your Facebook and Twitter accounts to your phone. If you don't have an account, you can visit their sites to set it up.

**NOTE:** Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

# Camera

## Getting to know the viewfinder

**Brightness** – This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

**Zoom** – Zoom in or zoom out. Alternatively, you can use the side volume keys.



**Video mode** – Slide down this icon to switch to video mode.

**Taking a photo**

**Gallery** – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

**Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.

**Colour effect** – Choose a colour tone for your new photo.

**NOTE:** You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture or save the picture you have taken.

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share your photo as **Bluetooth**, **Email**, **Facebook**, **Gmail**, **Messaging**, **Picasa** or **Twitter**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.

**NOTE:** Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

**Set as** Touch to use the image as **Contact icon** or **Wallpaper**.

**Rename** Touch to edit the name of the selected picture.

# Google applications



## Maps


Check your current location and traffic and receive directions to your destination. The LG-P350 must be connected to Wi-Fi or 3G/GPRS.

**NOTE:** Maps does not cover all cities and countries.

### Press Menu key to use options:

**Search**  – Enter the place you are looking for.

**Directions**  – This will let you find out the route of the place you entered. Touch  to input the data. Choose from Contacts or Point on Map or My current location.

**Layers**  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude, then you will see the location of your contacts from Google Account.

**My Location**  – Point your current location on the map.

**Join Latitude**  – Share your location with friends you choose

and Google.

**More**  – Clear map or find Starred items and more.

## Market™

Android Market™ lets you download useful applications and games.

## Google Mail™

Google Mail™ is configured when you first set up your phone. Depending on your synchronisation settings, Google Mail™ on your phone is automatically synchronised with your Google Mail™ account on the web.

## Talk

Talk is Google's instant messaging program. It lets you communicate with other people who also use Talk.

## ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited editing functions for Microsoft Word, Excel and PowerPoint. However, you cannot edit a PDF file.

- 1 Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.

## The Web

### Browser

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

### Using options


Press the **Menu** key to view options.

-  **New window** – Open a new window.

-  **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.


-  **Windows** – Show all your open windows.


-  **Refresh** – Touch to refresh the web page.

-  **Forward** – Goes to the page you connected to after the current page. This is different from the Back key, which goes to the previous page.


## Wi-Fi

### Turn on Wi-Fi

From Home Screen , open Notification drawer and touch  on.

From Menu, choose Settings > Wireless & network settings > Wi-Fi .

### To connect to Wi-Fi

Choose the Wi-Fi network you want to connect with. If you see  , you need to enter a password to connect.

## TIP!

If you are out of the Wi-Fi area and choose 3G connection, additional charges may be applied.

## USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

**Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering.**

For more information regarding USB tethering, click Help.

## TIP!

To use USB Tethering, you need to install PC Suite onto your PC first.

## Wi-Fi Tethering

Use your LG-P350 as a portable Wi-Fi hotspot.

**Settings > Wireless & network settings > Tethering & portable hotspot > Portable Wi-Fi hotspot.**

## TIP!

If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.

**NOTE:** The LG-P350 supports WEP, WPA/WPA2-PSK and 802.1x EAP security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## LG Mobile Phone Software update via Over-the-Air (OTA)

This feature allows you to update the software of your phone to new version conveniently via OTA without the connecting USB data cable.

First, you can check the software version on your mobile phone:

**Settings > About phone > Software update > Software update check.**

You can also rearrange update schedule in 1 hour, 4 hours, 8 hours or 24 hours before updates.

In this case, the application will notify you to update when the time is up. Also you can rearrange or update by manually.

## Phone Software update LG Mobile Phone Software update from internet

For more information on using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to conveniently update the firmware of your phone to the latest version from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the updating process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

**Notice**

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>  
All referred licence terms, disclaimers and notices are available for download with the source code.

## Accessories

These Accessories are available for use with the LG-P350.  
(Items described below may be optional.)

### Charger



### Data cable

Connect your LG-P350 and PC.



### Battery



### User Guide

Learn more about your LG-P350.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

# Technical data

## Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

## Declaration of Conformity



LG Electronics

### Suppliers Details

#### Name

LG Electronics Inc

#### Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

#### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

#### Model Name

LG-P350

#### Trade Name

LG

CE 0168

### Applicable Standards Details

#### R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1  
/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.4.1  
EN 300 328 v1.7.1  
EN 60950-1:2006+A11:2009  
EN 50360:2001 / EN62209-1:2006 / IEC62209-2:2010  
EN 301 511 v9.0.2  
EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. - EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

#### Name

Doo Haeng Lee/Director

#### Issue Date

26, Jan, 2011

  
Signature of representative

For warranty service, please keep this warranty certificate and your receipt to validate proof of purchase.

## MOBILE PHONE MANUFACTURER'S WARRANTY

Subject to the terms below, LG Electronics Australia Pty Ltd (LG) will for one (1) year from date of purchase for your LG mobile phone (excluding battery and accessories such as power adapter) and six months from date of purchase for LG battery packs and accessories, authorise a free of charge repair, if, in LG's opinion, the phone, battery or accessories needs repair because of a manufacturing or materials defect, appearing and notified to LG in accordance with this warranty, within such period.

This LG manufacturer's warranty only applies to service within Australia (for mobile phones purchased within Australia only) and New Zealand (for mobile phones purchased within New Zealand only). This warranty is not transferable and applies to the original purchaser only. No LG employee, product retailer or Authorised Service Centre has authority to vary the terms of this warranty. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

This LG manufacturer's warranty is limited to the LG product and excludes third party components used in conjunction with the LG product.

Before you deliver your product for warranty service it is your responsibility to keep a separate backup copy of the contents, because the data may be lost during repair of the product. You are responsible for reinstalling all content including software programs, data and passwords. Recovery and reinstallation of software programs and user data are not covered under the terms of this manufacturer's warranty.

### **PLACE OF SERVICE**

Repairs under the terms of this warranty will be conducted at an LG Authorised Service Centre. Transportation costs to and from the Service Centre are not covered by this Warranty. Service Centers are open during normal business hours, Monday to Friday. LG's Authorised Service Centre may charge an additional fee for service outside these hours.

# MOBILE PHONE MANUFACTURER'S WARRANTY

## SERVICES FOR WHICH YOU WILL BE ASKED TO PAY

This LG manufacturer's warranty does not cover:

- Products where the serial number has been removed or made illegible;
- Maintenance, repair or replacement of parts or consumables due to normal wear and tear.
- Repair of cosmetic or physical damage;
- Breakage or damage to antennas unless caused by defect in material or workmanship;
- If the battery short circuits or the seals of the battery are broken or show evidence of tampering or the battery was used in equipment in a manner other than that which has been specified;
- Defects or damage resulting from breakage or tampering with the LCD screen
- Accident, neglect, misuse or Act of God.
- Alterations or repairs made by someone other than an LG Authorised Service Centre.
- Unauthorized modifications or other acts, including spills of food or liquid, or external interference which is not a manufacturing or material fault.
- Use of the product beyond its intended purpose;
- Damage or defects caused by use of or in connection with accessories, software and/or services not manufactured, supplied or authorized by LG.

## OTHER RIGHTS

The benefits given by this LG manufacturer's warranty are additional to other rights and remedies that you may have under law.

Australian customers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

# MOBILE PHONE MANUFACTURER'S WARRANTY

## HOW TO CLAIM

To make a claim against this manufacturer's warranty, you must contact LG within one (1) years of purchase on:

<b>By telephone</b>	<b>By post (Australia Only):</b>
Australia 1300 LG CARE (1300 542 273) 7 Days, 7am-7pm	Warranty Claims LG Electronics Australia
New Zealand 0800 LG CARE (0800 542 273) 7 Days, 9am-9pm	PO Box 212 Horsley Park NSW 2175

When contacting LG for assistance please provide your name and address, model number, serial number, date of purchase, and a complete description of the problem. This information will help LG provide fast assistance.

LG Electronics Australia Pty Ltd (ABN 98 064 531 264)  
2 Wonderland Drive, Eastern Creek NSW 2766  
Australia



