



LCD TV | PLASMA TV OWNER'S MANUAL

LCD TV MODELS PLASMA TV MODELS

37LC2R*

42LC2R*

37LC25R*

42LC25R*

37LC3R*

42LC3R*

32LB2R*

37LB2R*

42LB2R*

47LB2R*

42PC1R*

42PC3R*

50PC1R*

Please read Information Manual included together before reading this manual and operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the back cover and quote this information to your dealer when you require service.

ENGLISH

DEUTSCH

FRAN,
AIS

ITALIANO

ESPA,
OL


PORTUGU&S

NEDERLANDS


Ελληνικά

ACCESSORIES

Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the product.

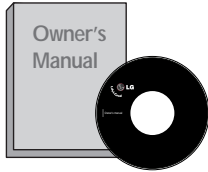

Owner's Manual

 


Batteries



Remote Control



 Power Cord



Polishing Cloth
Polish the screen with the cloth
(Option)

* Slightly wipe stained spot on the exterior only with the cleansing cloths for the product exterior if there is stain or fingerprint on surface of the exterior. Do not wipe roughly when removing stain. Please be cautious of that excessive power may cause scratch or discoloration.

42/50PC1R*, 42PC3R*



2-Wall brackets



2-eye-bolts



2-bolts for stand assembly
(Refer p.12)
This feature is not available
for all models.

37/42LC2R*, 37/42LC25R*, 37/42LC3R*, 32/37/42/47LB2R*



2-TV brackets
2-Wall brackets



Twister Holder
Arrange the wires
with the twister holder.



2-bolts

37/42LC3R*

Cable Management

**37/42LC2R*, 37/42LC25R*,
32/37/42/47LB2R***

Cable Management

CONTENTS

ACCESSORIES 1

INTRODUCTION

Controls / Connection Options 4-9
Remote Control Key Functions/
Installing Batteries 10-11

INSTALLATION

Unfolding The Base Stand 12
Basic Connection / How to Remove the Cable
Management / Swivel Stand 13-14
How to join the product assembly to the wall
to protect the set tumbling 15
Stand Installation 16

CONNECTIONS & SETUP

Antenna Connection 17
VCR Setup 18-19
External Equipment Connections 20
DVD Setup 21-22
STB(SET-TOP BOX) Setup 23-24
PC Setup 25-27
TURNING THE TV ON 28-29

SPECIAL FUNCTIONS

PIP (Picture-In-Picture) / Double Window / POP
Watching PIP/Double Window/POP 30
Programme Selection for Sub Picture 30
Input Source Selection for Sub Picture 30
Sub Picture Size Adjustment (PIP mode only) 30
Moving the Sub Picture (PIP mode only) . . . 31
Adjusting PIP Transparency (PIP mode only) .31
Swapping between main and sub pictures . . .31
POP
(Picture-out-of-Picture: Programme Scan) . . .31
Teletext
Switch on/off 32
SIMPLE Text 32
TOP Text 33
FASTEXT 33
Special Teletext Functions 33

TV MENU

On Screen Menus Selection and Adjustment34

Setting up TV stations

Auto programme tuning 35
Manual programme tuning 36
Fine tuning 37
Assigning a station name 38
Booster (Option) 39
Programme edit 40
Favourite programme 41
Calling the programme table 42

Picture Menu

PSM (Picture Status Memory) 43
Picture Adjustment (PSM-User option) 44
CSM (Colour Status Memory) 45
Manual Colour Temperature Control
(CSM - User option) 46
XD Function 47
Advanced 48
Reset 49

Sound Menu

SSM (Sound Status Memory) 50
Sound Frequency Adjustment
(SSM - User option) 51
AVL (Auto Volume Leveler) 52
Balance Adjustment 52
Speaker 53
Stereo/Dual Reception 54
NICAM Reception 55
Speaker Sound Output Selection 55

Time Menu

Clock Setup 56
On/Off Time 57
Auto Sleep 58
Sleep Timer 59

Special Menu

Child Lock 60
ISM (Image Sticking Minimization)
Method (Option) 61
Low Power (Option) 62
XD Demo 62

TV MENU

Screen Menu

Auto Configure (RGB [PC] mode only)	63
Manual Configure	64
Setting the Picture Format	65-66
Selecting Wide VGA/XGA/UXGA mode	67
Initializing (Reset to original factory settings)	67

APPENDIX

Programming the Remote	68
Programming code	69-70
Troubleshooting Checklist	71-72
Maintenance	73
Product Specifications	74-76


INTRODUCTION

CONTROLS


This is the front panel of models 42/50PC1R* TVs.

- This is a simplified representation of a front panel. Here shown may be somewhat different from your TV.
- If your product has a protection film attached, remove the film and then wipe the product with a polishing cloth.

Front Panel Controls

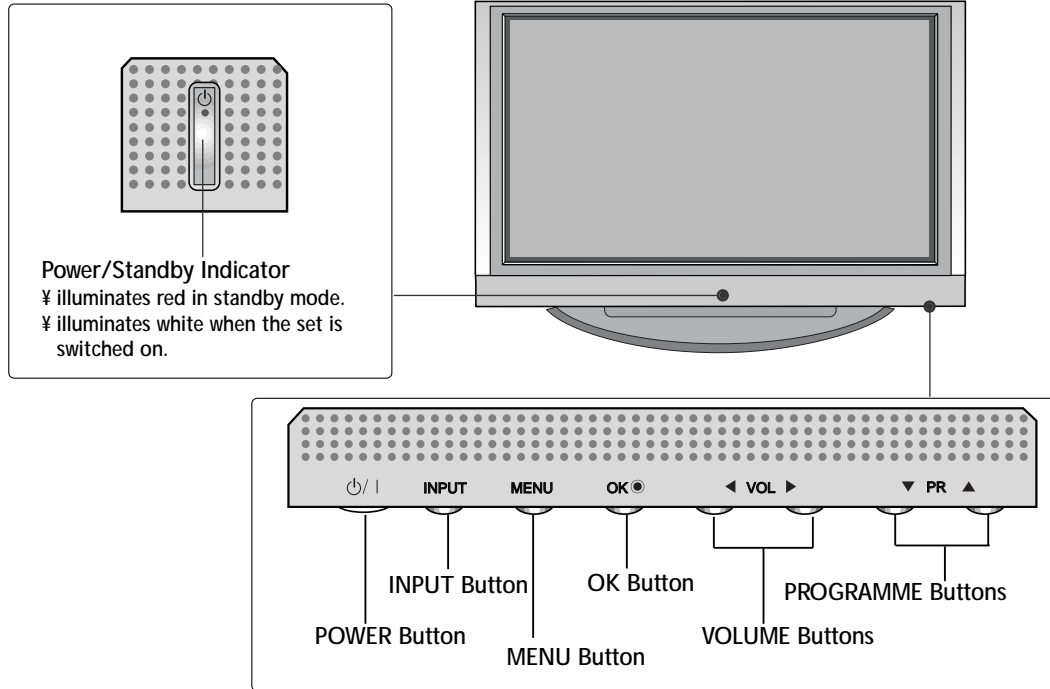


This is the front panel of models 42PC3R* TVs.

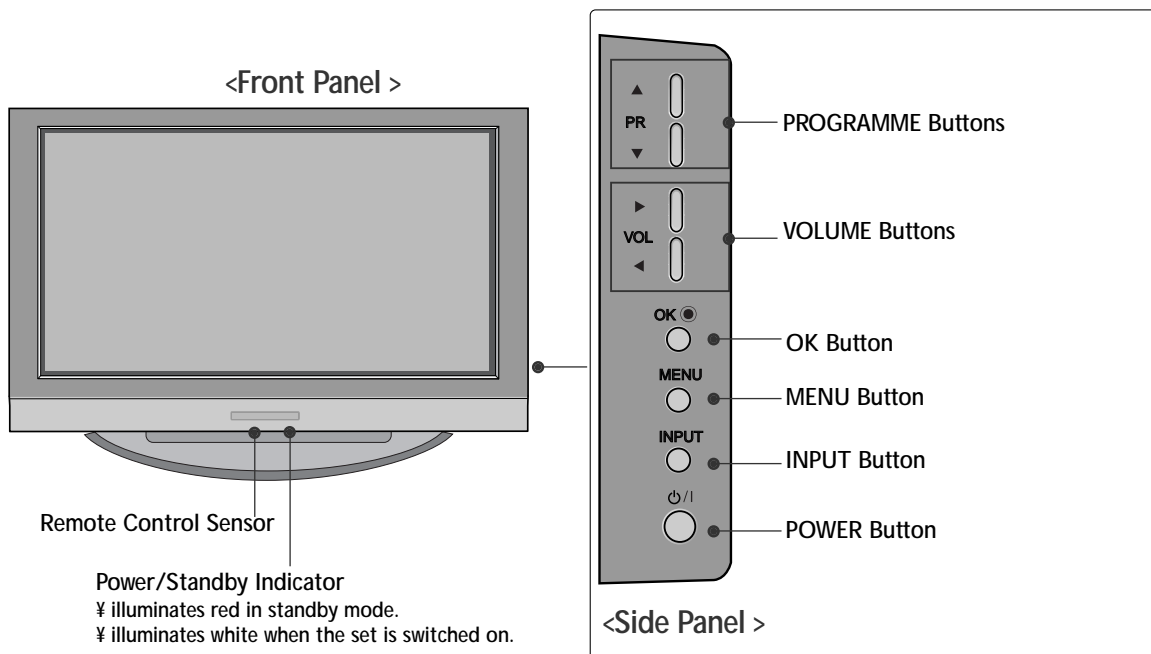

This is the front panel of models 32/37/42/47LB2R* TVs.

- This is a simplified representation of a front panel. Here shown may be somewhat different from your TV.
- If your product has a protection film attached, remove the film and then wipe the product with a polishing cloth.

Front Panel Controls

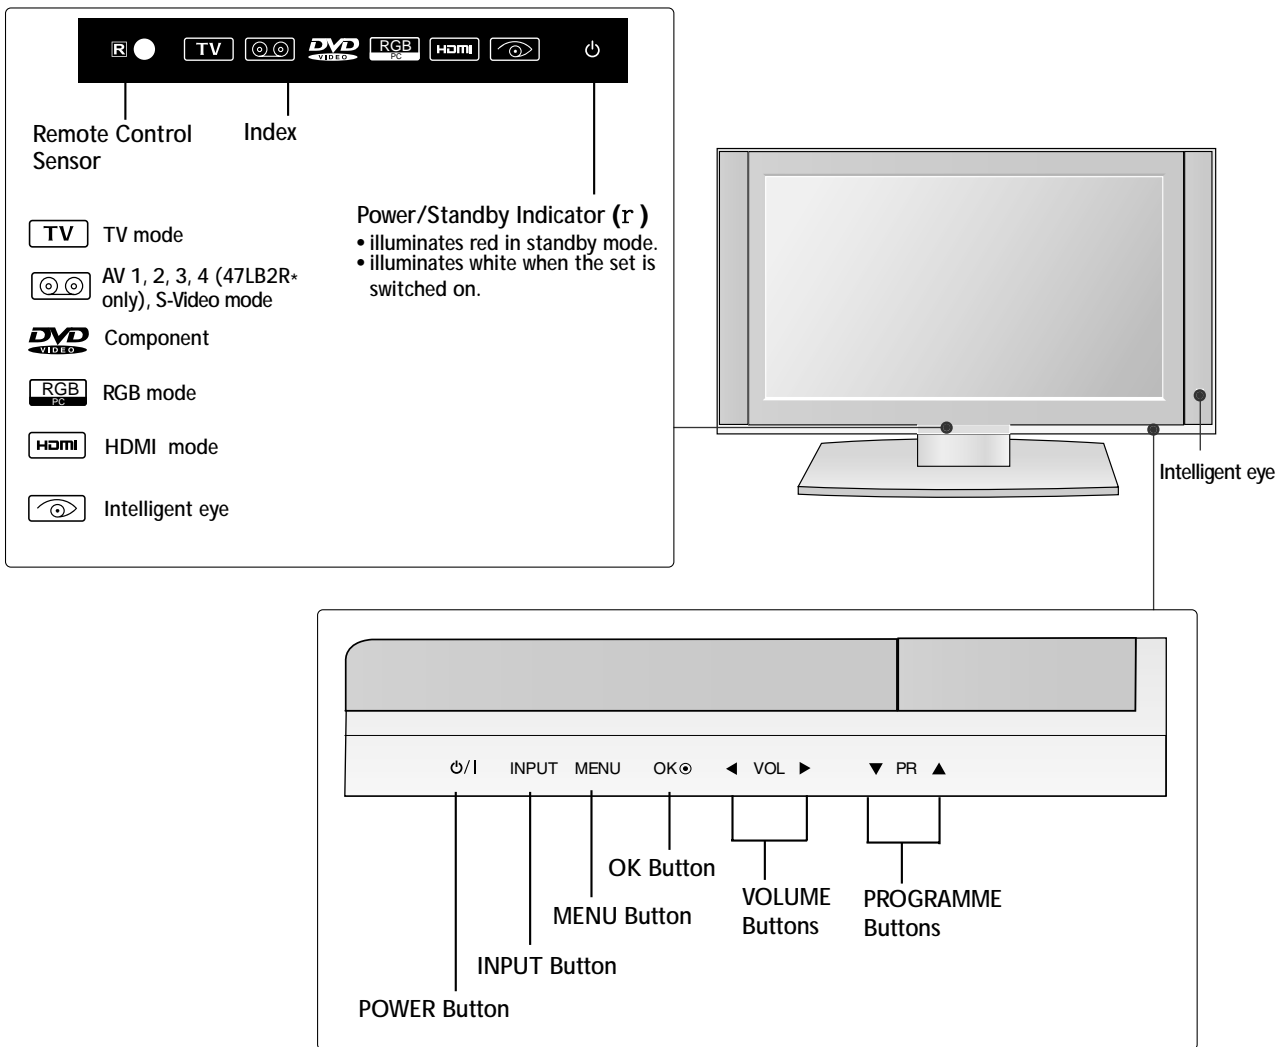


INTRODUCTION

CONNECTION OPTION

This is the back panel of models 42/50PC1R*, 42PC3R* TVs.

Back Connection Panel

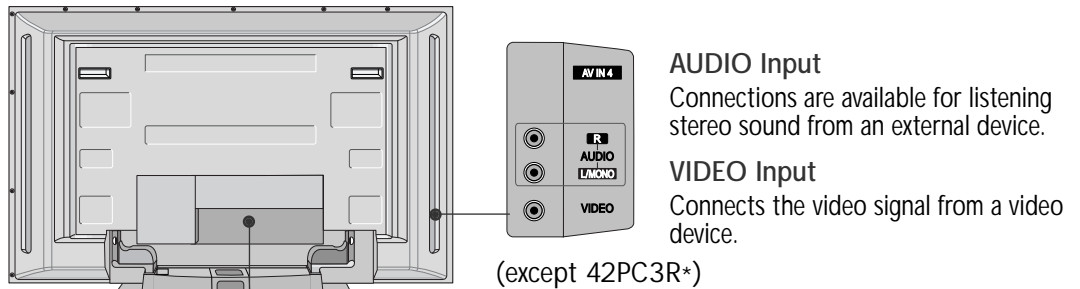


- 1** RGB/Audio Input
Connect the monitor output from a PC/DTV to the appropriate input port.
- 2** Variable Audio Output
Connect an external amplifier or add a sub-woofer to your surround sound system.
- 3** Euro Scart Socket (AV1/AV2)
Connect scart socket input or output from an external device to these jacks.
- 4** Power Cord Socket
This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.
- 5** Remote Control Port
- 6** HDMI Input
Connect a HDMI signal to HDMI IN.
Connect DVI(VIDEO) signal to HDMI/DVI port with DVI to HDMI cable.
- 7** RS-232C Input(CONTROL&SERVICE)Port
Connect the serial port of the control devices to the RS-232C jack.
- 8** S-Video Input
Connect S-Video out from an S-VIDEO device.
- 9** Audio/Video Input
Connect audio/video output from an external device to these jacks.
- 10** Component Input
Connect a component video/audio device to these jacks.
- 11** Antenna Input

CONNECTION OPTION

This is the back panel of models 32/37/42/47LB2R* TVs.

Back Connection Panel

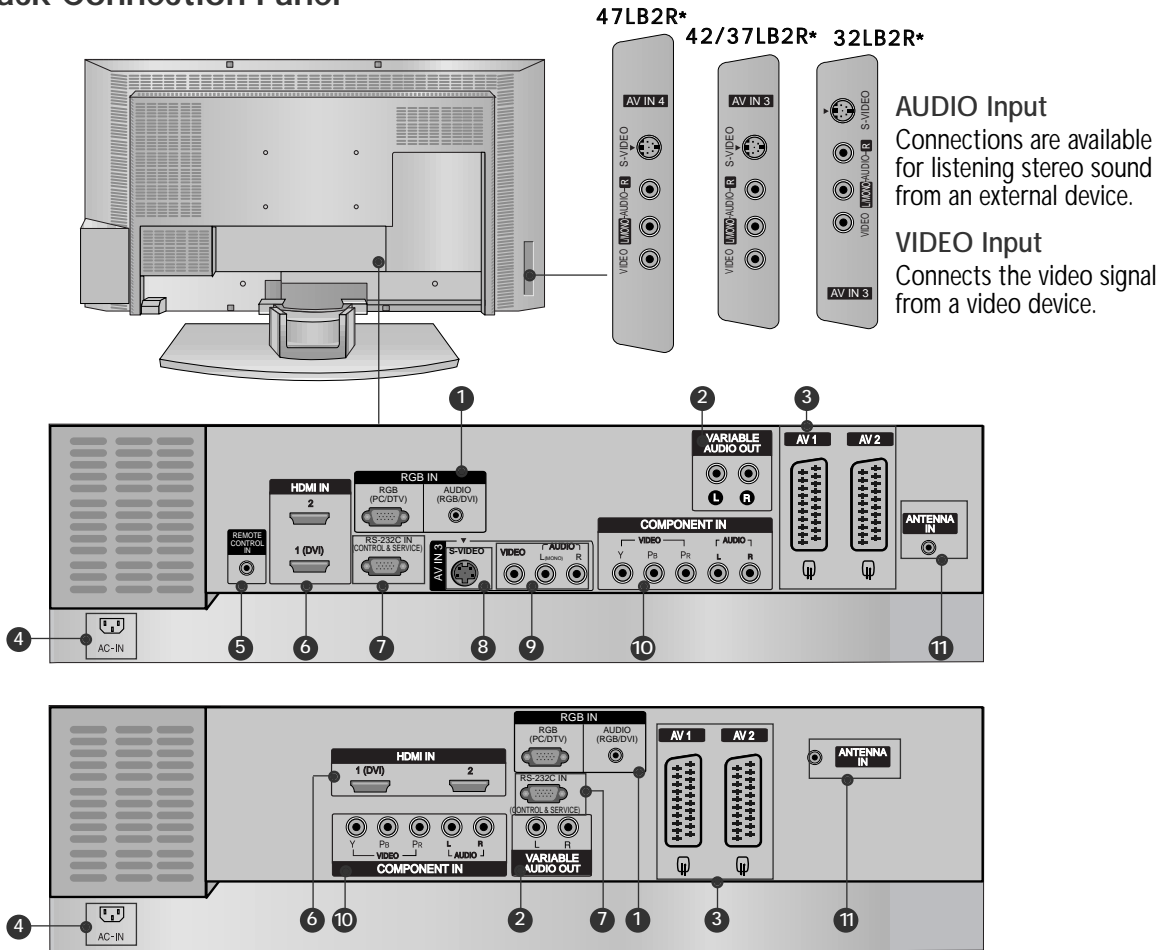

- 1** RGB/Audio Input
Connect the monitor output from a PC/DTV to the appropriate input port.
- 2** Variable Audio Output
Connect an external amplifier or add a subwoofer to your surround sound system.
- 3** Euro Scart Socket (AV1/AV2)
Connect scart socket input or output from an external device to these jacks.
- 4** Power Cord Socket
This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.
- 5** Remote Control Port
- 6** HDMI Input
Connect a HDMI signal to HDMI IN. Connect DVI(VIDEO) signal to HDMI/DVI port with DVI to HDMI cable.
- 7** RS-232C Input(CONTROL&SERVICE)Port
Connect the serial port of the control devices to the RS-232C jack.
- 8** S-Video Input
Connect S-Video out from an S-VIDEO device.
- 9** Audio/Video Input
Connect audio/video output from an external device to these jacks.
- 10** Component Input
Connect a component video/audio device to these jacks.
- 11** Antenna Input

INTRODUCTION

CONTROLS

This is the front panel of models **37/42LC2R***, **37/42LC25R***, **37/42LC3R*** TVs.

- This is a simplified representation of a front panel. Here shown may be somewhat different from your TV.
- If your product has a protection film attached, remove the film and then wipe the product with a polishing cloth.

<Front Panel 37/42LC2R*, 37/42LC25R*>



Remote Control Sensor


Power/Standby Indicator
¥ illuminates red in standby mode.
¥ illuminates white when the set is switched on.

<Front Panel 37/42LC3R*>



Remote Control Sensor


Power/Standby Indicator
¥ illuminates red in standby mode.
¥ illuminates white when the set is switched on.

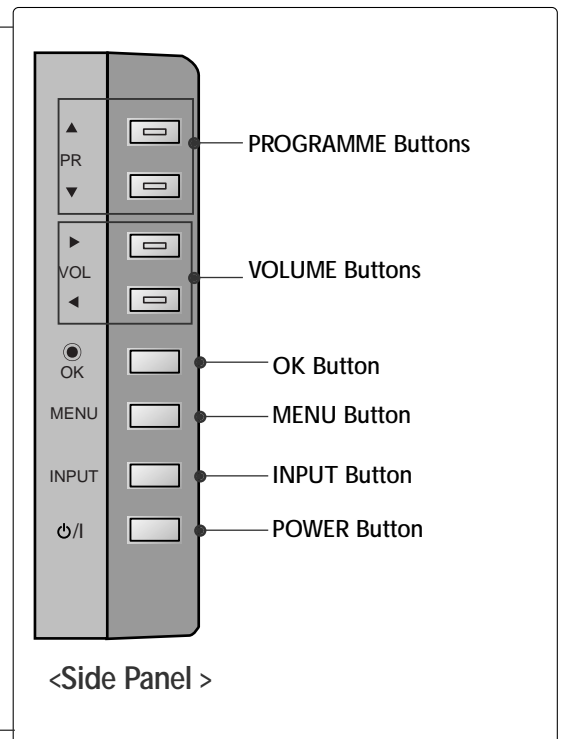

CONNECTION OPTION

This is the back panel of models 37/42LC2R*, 37/42LC25R*, 37/42LC3R* TVs.

Back Connection Panel

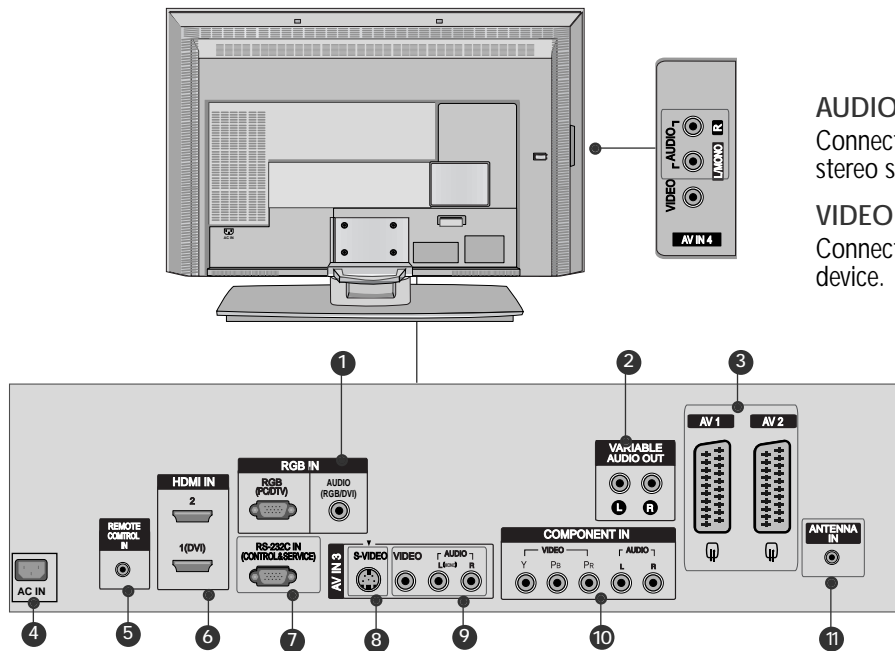

AUDIO Input

Connections are available for listening stereo sound from an external device.

VIDEO Input

Connects the video signal from a video device.

- 1** RGB/Audio Input
Connect the monitor output from a PC/DTV to the appropriate input port.
- 2** Variable Audio Output
Connect an external amplifier or add a subwoofer to your surround sound system.
- 3** Euro Scart Socket (AV1/AV2)
Connect scart socket input or output from an external device to these jacks.
- 4** Power Cord Socket
This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.
- 5** Remote Control Port
- 6** HDMI Input
Connect a HDMI signal to HDMI IN. Connect DVI(VIDEO) signal to HDMI/DVI port with DVI to HDMI cable.
- 7** RS-232C Input(CONTROL&SERVICE)Port
Connect the serial port of the control devices to the RS-232C jack.
- 8** S-Video Input
Connect S-Video out from an S-VIDEO device.
- 9** Audio/Video Input
Connect audio/video output from an external device to these jacks.
- 10** Component Input
Connect a component video/audio device to these jacks.
- 11** Antenna Input

INTRODUCTION

REMOTE CONTROL KEY FUNCTIONS

POWER Switches the set on from standby or off to standby.

TV INPUT Returns from **AV1, AV2, S-Video2** (except 32/37/42LB2R*), **AV3, AV4**(except 42PC3R*, 32/37/42LB2R*), **Component, RGB, HDMI1/DVI** or **HDMI 2** to the TV mode. Switches the set on from standby.

INPUT If you press the button once, the input source OSD will appear on screen as shown. Press the **D / E** button and then **OK** button to select the desired input source (**TV, AV1, AV2, S-Video2**(except 32/37/42LB2R*), **AV3, AV4**(except 42PC3R*, 32/37/42LB2R*), **Component, RGB, HDMI1/DVI** or **HDMI 2**).

ARC Selects your desired picture format.

Brightness adjustment Adjusts screen brightness. It returns to the default settings brightness by changing mode source.

PIP Switches the sub picture PIP, DW, POP(except 47LB2R*) or off mode.

SIZE Adjusts the sub picture size.

POSITION Moves the sub picture.

PIP PR - / + Selects a programme for the sub picture.

SWAP Exchanges the main/sub images in PIP/Double window/POP mode.

PIP INPUT Selects the input source for the sub picture in PIP/Double window mode.

Coloured buttons These buttons are used for teletext (only **TELETEXT** models) or **Programme edit**.

VCR/DVD control buttons Controls some video cassette recorders or DVD players when you have already selected DVD or VCR mode button.

EXIT Clears all on-screen displays and returns to TV viewing from any menu.

LIST Displays the programme table.

MENU Selects a menu.

I/II Selects the sound output.

SLEEP Sets the sleep timer.



- MODE** Selects the remote operating modes.
- 1 TELETEXT BUTTONS** These buttons are used for teletext. For further details, see the **Teletext** section.
- THUMBSTICK (Up/Down/Left Right)** Allows you to navigate the on-screen menus and adjust the system settings to your preference.

OK Accepts your selection or displays the current mode.
- VOLUME UP /DOWN** Adjusts the volume.

Q.VIEW Returns to the previously viewed programme.


MUTE Switches the sound on or off.

Programme UP/DOWN Selects available programmes.


0~9 number button Selects a programme. Selects numbered items in a menu.

FAV Displays the selected favourite programme.

* No function

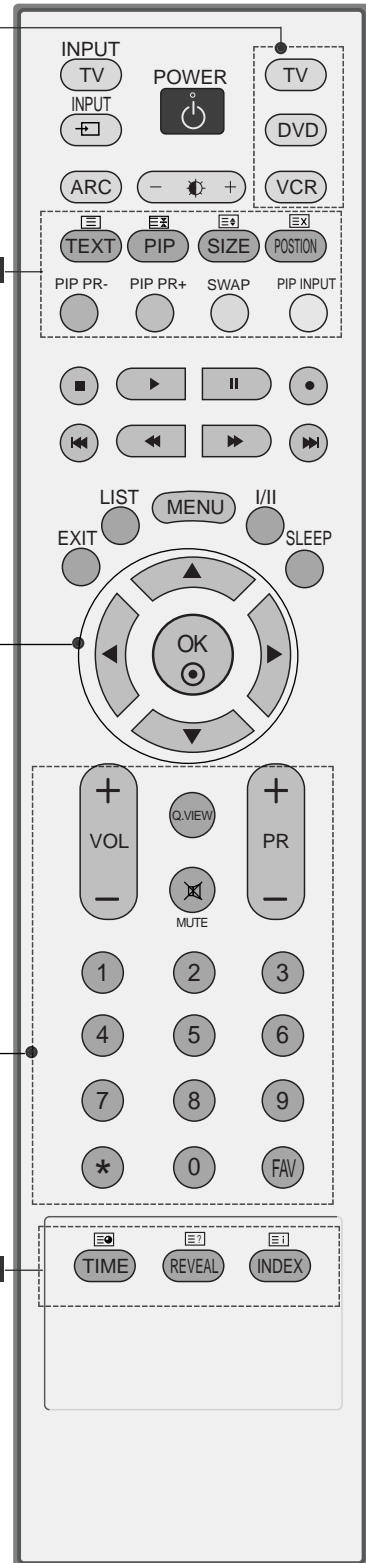

INSTALLING BATTERIES

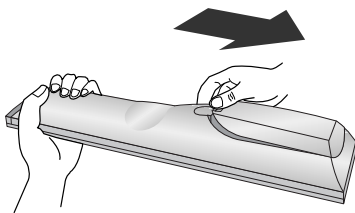


- ¥ Open the battery compartment cover on the back side and insert the batteries with correct polarity.
- ¥ Install two 1.5V alkaline batteries of AA type. Don't mix used batteries with new batteries.

INSTALLATION

UNFOLDING THE BASE STAND (42PC1R*, 42PC3R*)

- This feature is not available for all models.

INSTALLATION

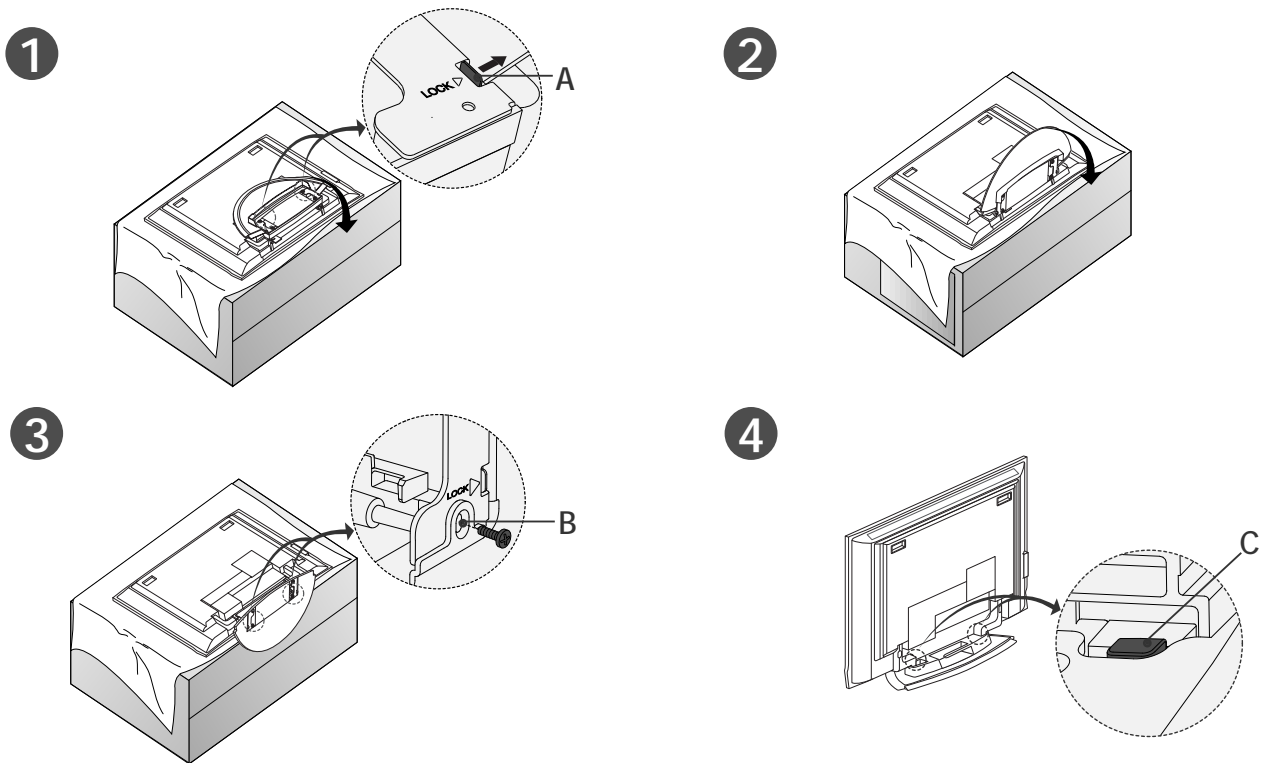

- Place the set with the screen facing down on a cushion or soft cloth as shown in Figure 1. Before unfolding the stand, please make sure two locks (A) on the bottom of the stand push outward.
- Pull the stand out as shown above in Figures 2 ~ 3. After unfolding the stand, please insert and tighten the screws in the holes (B) on the bottom of the stand.
- When connecting cables to the set, do not disengage the lock (C). This may cause the set to fall, causing serious bodily injury and serious damage to the set.


NOTE

Figures shown here may be slightly different from your set.

When closing the stand for storage

First remove the screws in the holes (B) on the bottom of the stand. And then pull two Hooks (D) of the stand bottom and fold the stand into the back of the set.

After folding, push two Locks (A) of the stand bottom outward.

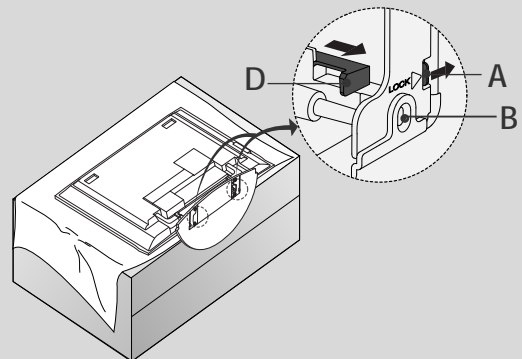


BASIC CONNECTION (PLASMA TV MODELS)

- These models have two cable arrangement methods according to the stand type.


Stand type 1

Arrange the cables as shown picture.

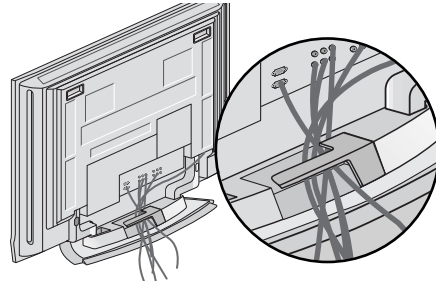


Stand type 2

- 1 Hold the **CABLE MANAGEMENT** with both hands and push it as shown.

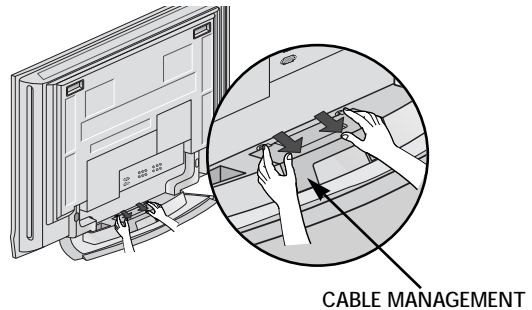

- 2 Connect the cables as necessary.
To connect an additional equipment, see the **External equipment Connections** section.

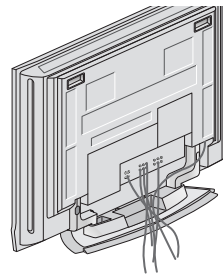

- 3 Reinstall the **CABLE MANAGEMENT** as shown.

