



Owner's Manual

Please read this manual carefully and thoroughly before operating this unit.
Record model name and serial number of the set.
Quote this information to your dealer when you require service.



MODEL : WF-N7069NN
WF-N7069NP
WF-N7039NP



P/No.: MFL60983102

Product Features

Washer doesn't operate while the lid is open. If the lid is open during the wash, rinse or spin cycles, the operation stops for safety.

FUZZY logic control

- A built-in load sensor automatically detects the laundry load and a microprocessor optimizes washing conditions such as ideal WATER LEVEL and washing time.



- Advanced technology is built into the Electronic Control System which ensures the best washing result.

Turbo drum washing

- When "Punch + 3" washing wings turn, the washing tub turns in the opposite direction. This makes the both sides current of water which improve wash-performance by rubbing clothes strongly.

3 Step washing

- 3 step washing makes the best washing performance with low tangling.



NOTE : Be sure to remove the unit from the carton base, otherwise the machine will not be able to operate properly.

Customer Information Center


For any query related to the after sales service you may please contact us on the numbers listed below :



LG Electronics India Pvt. Ltd.
(Regd. Off.) : Plot No. S1, Udyog Vihar, Surajpur-Karna Road, Greater Noida - 201 306 (UP)

LG ELECTRONICS INDIA PVT. LTD. CUSTOMER CARE CENTRE

Identification of Parts

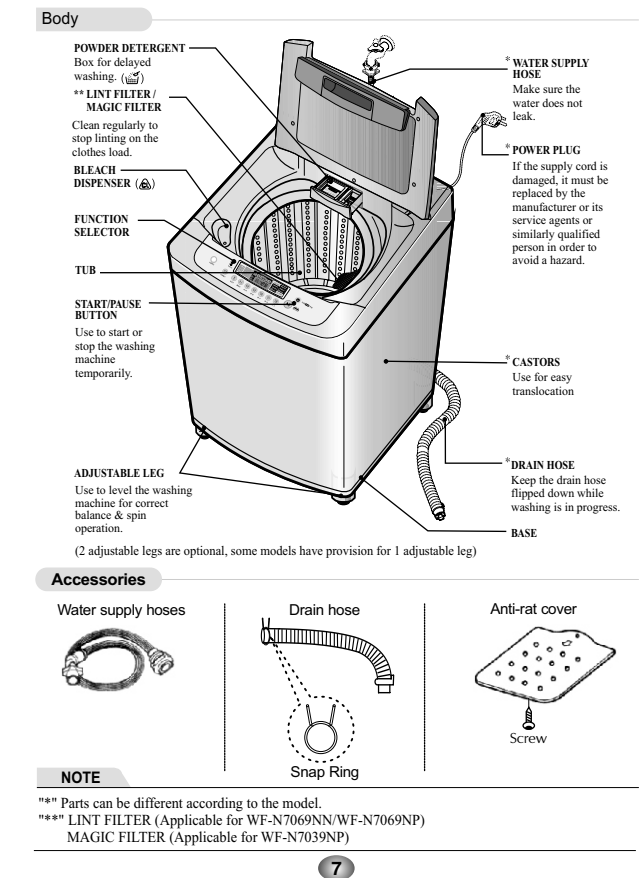

NOTE :
** Parts can be different according to the model.
*** LINT FILTER (Applicable for WF-N7069NN/WF-N7069NP)
MAGIC FILTER (Applicable for WF-N7039NP)

Use of Water, Detergent, Bleach and Softener

Using Fabric Softener

- Dilute fabric softener with water. Undiluted fabric softener may result in spots that look like oil stains.
- Measure and add the recommended amount of fabric softener into the compartment marked with this symbol (). Follow manufacturer's direction.
- Fabric softener is automatically dispensed in the final rinse with indication beep.
- If you want extra rinse, you must add fabric softener manually when indication beep rings in the final rinse. This maximizes the fabric softening function.
- Do not overfill. The dispenser hold max 35ml. Never add more than 35ml. Overfilling can cause early dispensing of the fabric softener which could result in stained clothes. A cap with a pouring spout will help you avoid spilling.
- The effect of adding fabric softener may vary according to its viscosity. The stickier fabric softener makes its effect the lower. For a sticky fabric softener it is recommended that it be diluted with water, then be manually correct time to dispense manually is optionally applied to some models. Please keep it in mind that fabric softener has to be diluted with water before-dispensed and never poured directly on clothes.

- Attention**
 - Do not mix with detergent or bleach.
 - Never pour fabric softener directly on clothes. It may stain them.
 - Do not stop the washer during the first spin for timely dispensing.
 - Option washing is not designed to be used with fabric softener dispenser.

Scrud (Waxy Build up)

Scrud is the name given to the waxy build-up that can occur within any washer when the fabric softener comes into contact with Detergent. This build-up is not brought about by a fault in the machine.

If crud is allowed to build-up in the machine it can result in stains on your clothes or an unpleasant smell in your washer.

If you wish to use fabric softener we recommend

- Using fabric softener sparingly.
- When filling the dispenser, do not splash or overfill.
- Clean dispenser as soon as the cycle is finished.
- Clean your machine regularly. (refer to page 29)
- Cold water washing increases the chance of this build-up occurring. We recommend a regular WARM or HOT wash e.g. every 5th wash should be at least a warm one.
- Fabric softener of thinner consistency is less likely to leave residue on the dispenser and contribute to a build-up.

Contents

READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your washer properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your washer. You will find many answers to common problems in the Troubleshooting section. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.

Introduction	Safety Information	4
	Identification of Parts	7
	Function Information	8
Before Starting to Wash	Preparation Before Washing	9
	Use of Water, Detergent, Bleach and Softener	10
	Special Guide for Stain Removal	13
	Function of each Button	14
Washing Programs	SOAK Wash	16
	FUZZY Wash (Normal Wash)	17
	WOOL Wash	17
	QUICK WASH	17
	JEANS Wash	17
	SILENT Wash	19
Additional Function Program	Option Washing	20
	DELAY START (RESERVATION) Wash	21
	Other Useful Functions	22
Installation	Placing and Leveling	23
	Connecting Water Supply Hose	24
	Connecting Drain Hose	25
Care and Maintenance	Grounding Method	26
	Cleaning and Maintenance	27
Troubleshooting	Common washing problems	29
	Troubleshooting	30
Specification	Specification	31
Installation Check Sheet	Installation Check Sheet	
Terms of Warranty	Terms of Warranty	

Safety Information

Read carefully and thoroughly through this booklet as it contains important safety information that will protect the user from unexpected dangers and prevent potential damages to the product.

This booklet is divided into 2 parts : Warning and Caution.

WARNING : This is a warning sign specifying user's applications which might be dangerous.

CAUTION : Failure to comply with the instructions under this sign may result in major physical injuries or death.

CAUTION : Failure to comply with the instructions under this sign may result in minor physical injuries or damages to the product.

WATER HEATER SAFETY

WARNING

- Under certain conditions hydrogen gas may be produced in a water heater that has not been used for two weeks or more. Hydrogen gas can be explosive under these circumstances. If the HOT water has not been used for two weeks or more, prevent the possibility of damage or injury by turning on all Hot water faucets and allowing them to run for several minutes. Do this before using any electrical appliance which is connected to the HOT water system. This simple procedure will allow any built-up hydrogen gas to escape. Since the gas is flammable, do not smoke or use an open flame or appliance during this process.

PROPER INSTALLATION

CAUTION

- The hose operating must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.
- Install or store where it will not be exposed to temperatures below freezing or exposed to the weather.
- If the product is exposed to such conditions, electric shock, fire, break down or deformation may occur.
- Properly ground water to conform with all governing codes and ordinances. Follow details in Installation Instructions.
- If not grounded properly, break down and leakage of electricity may occur, which may cause electric shock.
- Must be positioned so that the plug is accessible.
- If the plug is placed between the wall and the machine, it may get damaged, possibly causing fire or electric shock.
- Make sure the plug is completely pushed into the outlet.
- Failure to do so may cause electric shock and fire due to overheating.
- Do not connect ground to a gas pipe.
- If can cause explosion.
- Do not connect ground to telephone wires or lightning rods.
- This may be dangerous during electrical storms.

Safety Information

YOUR LAUNDRY AREA

WARNING

- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemical, etc. Operating with such materials around the machine may trigger explosion or fire.
- Close supervision is necessary if this appliance is used by or near children. Do not allow children to play on, with, or inside this or any other appliance. There is potential danger that children might drown in the tub.
- Do not touch the power plug with a wet hand. It will cause electric shock.
- Do not put your hand, foot or anything under the washing machine while the washing machine is in operation. There is a rotating mechanism under the machine, so you could be injured.

WHEN USING THE WASHER

CAUTION

- Use this appliance only for its intended purpose as described in this Owner's Manual. The laundry process can reduce the flame retardancy of fabrics. To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- NOTE :** Pressing Power button to turn off does NOT disconnect the appliance from the power supply.
- Make sure that draining is working properly. If water is not drained properly, your floor may get flooded. The laundry process may induce electricity leakage, further resulting in electric shock or fire.
- If, during spinning, opening the lid does not stop the tub within about 15 seconds, immediately discontinue operating the machine. Call for repair. A machine that spins with its door open may cause injuries.
- Never reach into washer while it is moving. Wait until the machine has completely stopped before opening the lid. Even slow rotation can cause injury.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Operating with a damaged plug may cause electric shock.
- Do not use water hotter than 60°C.
- Use of excessively hot water may cause damage to fabrics or cause leakage of water.

Safety Information

WHEN USING THE WASHER

WARNING

- Do not use a plug socket and wiring equipment for more than their rated capacity. Exceeding the limit may lead to electric shock, fire, break down, and/or deformation of parts.
- Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover. Mixing different chemicals can produce toxic gases which may cause death.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, dry-cleaning solvents, kerosene, etc.) Do not add these substances to the wash water. Do not use or place these substances around your washer or dryer during operation. It may ignite or explode.

WHEN NOT IN USE

CAUTION

- Turn off water faucets to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they may need replacement after 5 years.
- When the air temperature is high and the water temperature is low, condensation may occur and thus wet the floor.
- Wipe off dirt or dust on the contacts of the power plug.
- Using unclean power plug may cause fire.
- Before discarding a washer, or removing it from service, remove the washer lid to prevent children from hiding inside. Children may be trapped and suffocated if the lid is left intact. Do not attempt to repair or replace any part of this appliance unless specifically recommended in this Owner's Manual, or in published user-repair instructions that you understand and have the skills to carry out. Operating the machine with improperly replaced parts may be a cause for fire or electric shock.
- Do not tamper with controls. It may lead to electric shock, fire, break down, deformation.
- Do not touch the power cord in an attempt to disconnect the power plug. Securely hold the power plug to unplug the machine.
- Failure to observe these instructions may cause electric shock or fire due to short-circuit.
- When you are cleaning the washing machine, do not apply water directly to any part of the washing machine. It will cause short circuit and electric shock.

Function Information

Our machine provides various washing methods which suits various conditions and types of laundry.

Different types of laundry washing

- FUZZY (Normal) Wash**
Use this Program for everyday washing e.g. sheets, towels, T-shirts. (refer to page 17)
- JEANS Wash**
Use this Program for heavily soiled durable garments e.g. overall, jeans. Thick and heavy clothes or those which are excessively dry like jeans or working uniforms can be washed (refer to page 17)
- WOOL Wash**
Wool clothes (lingerie, wool, etc.) which may be easily damaged can be washed. (refer to page 17)
The fibers of machine washable wools have been specifically modified to prevent felting when they are machine washed. Most handknit garments are not made of machine washable wool and we recommend that you hand wash them.
Before washing your woolens check the care label for the washing instructions.
When washing woolens use a mild Detergent recommended for washing wool.
Hand washed woolens may be spun in a washing machine to reduce the time they take to dry.
To dry woolens lay them flat on a towel and get into shape. Dry woolens out of direct sunlight. (The heat and tumble action of a dryer may cause shrinkage or felting of woolen garments.)
Some wool undergarments and sleepwear products can be washed in a washing machine but may cause pump blockages. (Ensure that the whole article is suitable for machine washing and not just the backing material.)
You may wish to handwash these articles and place them in the machine to spin dry.

Washing according to the condition of laundry

- QUICK WASH**
QUICK WASH can be selected to wash lightly soiled clothes of less than 2.0 kg in a short time. (refer to page 17)
- SOAK Wash**
SOAK Wash can be selected to wash heavily soiled laundry by soaking in water for some time to remove dirt and grime. (refer to page 16)
- Other washing method**
DELAY START Wash
DELAY START Wash is used to delay the finishing time of the operation. The number of hours to be delayed can be set by the user accordingly. (refer to page 21)
- OPTION WASH**
When the user needs only SPIN, RINSE-SPIN, RINSE, WASH, RINSE-SPIN, SOAK WASH/RINSE-SPIN. (refer to page 20)

Preparation Before Washing

- Care Labels**
Look for care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed. Sort clothes into loads that can be washed with the same wash cycle, Water Temperature and spin speed.
- Sorting**
To get the best results, different fabrics need to be washed in different ways.
 - SOIL** (Heavy Normal, Light) Separate clothes according to the type and amount of soil.
 - COLOR** (Whites, Lights, Dark) Separate white fabrics from colored fabrics.
 - LINT** (Lint Producers, Collectors) Separate lint producers and lint collectors.
- Lint Producers**
Terry cloth, Chemise Towels, Nappies, Diapers
- Lint Collectors**
Synthetics, Cottony, Permanent Press, Socks
- Check before Loading**
 - Check all pockets to make sure that they are empty. Things such as nails, hairclips, matches, pens, coins, and keys can damage both your washer and your clothes.
 - Check any torn garments or loose buttons. Tears or holes may become larger during washing.
 - Remove belts, underwires, etc. to prevent damage to the machine or your clothes.
 - Prevent any dirt and stains.
 - Make sure the clothes are washable in water.
 - Check the washing instructions.
 - Remove tissue in pockets.
- Pretreatment on stains or heavy soil**
 - Pretreat shirt collars and cuffs with a pre-wash product or liquid Detergent when placing them in the washer.
 - Before washing treat special stains with hot soaps, liquid Detergent or a paste of water and granular Detergent.
 - Use a pretreat soil and stain remover.
 - Treat stains AS SOON AS POSSIBLE. The longer they are left the harder they are to remove. (For more detail refer to page 13)
- Loading**
Do not wash fabrics containing flammable materials (waxes, cleaning fluids, etc.).
Load Size
The WATER LEVEL should just cover the clothes. Adjust the load size accordingly. Loosely load clothes not higher than the top row of holes in the washer tub. To add items after washer has started, press Start button and submerge additional items. Close the lid and press Start button again to restart.
- Light and Large-sized clothing**
Clothes like downs and woolens are light weight, large and float easily. Use a nylon net and wash them in a small amount of water. If the laundry floats during the wash cycle, it may become damaged. Use dissolved Detergent to prevent the Detergent from clumping.
- Long laundry items**
Use nylon nets for long DELICATE items. For laundry with long strings or long length, a net will prevent tangling during washing. Fasten zippers, hook, and straps to make sure that these items don't snag on other clothes. Nylon net is not supplied by LG.

Function of each Button

WATER LEVEL BUTTON

- Use to select the proper amount of water in relation to the weight and type of laundry.
- Automatically controlled, but can be selected manually by pressing the WATER Button.
- WATER LEVEL is automatically selected for FUZZY (normal) program.
- The following settings are indicated as the button is pushed:
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

CHILD LOCK FUNCTION

- Use to lock or unlock the control buttons to prevent settings from being changed by a child.
- To lock, push the RINSE and SPIN buttons simultaneously and to unlock push them one more time during the washing process. (refer to page 22)

WASH, RINSE, SPIN BUTTON

- Use when wash, rinse, spin time need to be adjusted.
- If adjustments are needed during the wash, press the [start/pause] button before making any changes.

TIME LEFT, DELAY START (RESERVATION), ALARM INDICATION

- Time left** - During operation, the remaining time is indicated.
- DELAY START INDICATION (RESERVATION)** - When DELAY START (RESERVATION) program is selected, it indicates for finishing time. (RES - DELAY)
- Alarm Indication** - When an error occurs, an error message appears to indicate the abnormality. For example, **gE** indicates that the lid is open.

POWER (AUTO OFF) BUTTON

- Use to turn the power on or off.
- Push again and power goes on or off.
- The power goes off automatically about 10 seconds after the wash is finished.

START/PAUSE BUTTON

- Use to start or pause the washing process.
- Repeats start and pause by pushing the button.

PROGRAM BUTTON

- Use for selecting wash program.
- This button allows you to select 8 different programs for different kinds of laundry and dresses.
- The following settings are indicated as the button is pushed: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100
- Program selections light up in sequence as follows: FUZZY (Normal) > SILENT > QUICK WASH > WOOL > JEANS > SOAK > FUZZY (Normal) etc.
- Select the desired program by pressing the button.

DELAY START (RESERVATION) BUTTON

- Use to set a delayed finishing time.
- The time increases when the button is pushed.
- The following settings are indicated as the button is pushed: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100
- To cancel delay time, turn the power switch off. (refer to page 21)

SOAK Wash

Use this mode to wash normal clothes or thick and heavy clothes which are excessively dirty.

- Press the **POWER (AUTO OFF)** button to turn power on.
 - Press the **PROGRAM** button to select the **SOAK** Program.
 - Add the laundry and press the **START/PAUSE** button.
 - The **WATER LEVEL** will be shown and water will be supplied.
 - Add the Detergent.
 - Close the lid.
 - Water will be supplied for 2 minutes after the start of the wash to supplement the absorbed water by the laundry.
 - When the wash program ends, the buzzer will ring for 10 seconds before the Power goes off automatically.
- Finish**
- NOTE**
- Select washing time by pressing the Wash button repeatedly. (Wash timing cannot be set to zero in SOAK Program)
 - If necessary, adjust the times of Rinse and the time for Spinning by pressing the Rinse or Spin buttons till you reach the desired times.

Washing Programs

Washing Programs	POWER AUTO OFF	Add the laundry	PROGRAM	Add the Detergent
WASH FUZZY (Normal Wash) Used for normal loads, this mode automatically selects the most appropriate conditions and completes the sequence in one operation. The built-in sensor detects the size of the load and the ideal wash power and wash, rinse and spin times are set accordingly.				Add the appropriate quantity of Detergent as indicated by the WATER LEVEL, wash, RINSE and SPIN times. Or follow the Detergent manufacturer's instructions.
WASH WOOL Use this program for washing delicate fabrics such as knits and woolsens. (wash only "water washable" clothes). Before washing your woolsens check the care label for the washing instructions. (wash only water washable clothes).				- Select the WOOL program on the Control panel. - Use neutral Detergent appropriate for the laundry. - When washing woolsens use a mild Detergent recommended for washing wool.
WASH QUICK Use this mode when washing lightly soiled clothes for a short time. The highly recommended laundry amount is under 2.0kg.				- Select the QUICK WASH program on the Control panel. - Add the appropriate quantity of Detergent as indicated by the WATER LEVEL, wash, RINSE and SPIN times. Or follow the Detergent manufacturer's instructions.
WASH JEANS Use Jean program when washing jeans of different sizes.				- Select the JEANS program on the Control panel. - Spread the jeans evenly in the tub.

17

Washing Programs

START PAUSE	Close the lid	Finish	Caution & Note
			- If water is already in the tub, or putting wet laundry into the tub before starting will increase the WATER LEVEL. - With lightweight bulky loads, WATER LEVEL can be set low.
			- The indicator rotates for 8 seconds to detect the laundry load. - Then the WATER LEVEL and the amount of Detergent to be used will be shown and water will be supplied. - Water will be supplied for 2 minutes after the start of the wash to supplement the water the laundry has absorbed. - When the wash program ends, the buzzer will ring for 10 seconds before the Power goes off automatically.
			- When setting the WATER LEVEL manually, do not set to Medium to prevent damage to laundry. - Washing with HOT water may damage the laundry (Water is set to cold automatically). Ensure that the load is under 2kg. - In order to avoid damage to laundry, the spin cycle may appear slow. This also avoids wrinkles and clothing may still contain some water. This is normal. - When static pressure of water is more than 0.6kg/cm², the QUICK WASH course will be within 19min.
			- When setting the WATER LEVEL manually, do not set to Medium to prevent damage to laundry. - Washing with HOT water may damage the laundry (Water is set to cold automatically). Ensure that the load is under 2kg. - In order to avoid damage to laundry, the spin cycle may appear slow. This also avoids wrinkles and clothing may still contain some water. This is normal. - When static pressure of water is more than 0.6kg/cm², the QUICK WASH course will be within 19min.
			- When setting the WATER LEVEL manually, do not set to Medium to prevent damage to laundry. - Washing with HOT water may damage the laundry (Water is set to cold automatically). Ensure that the load is under 2kg. - In order to avoid damage to laundry, the spin cycle may appear slow. This also avoids wrinkles and clothing may still contain some water. This is normal. - When static pressure of water is more than 0.6kg/cm², the QUICK WASH course will be within 19min.
			- When setting the WATER LEVEL manually, do not set to Medium to prevent damage to laundry. - Washing with HOT water may damage the laundry (Water is set to cold automatically). Ensure that the load is under 2kg. - In order to avoid damage to laundry, the spin cycle may appear slow. This also avoids wrinkles and clothing may still contain some water. This is normal. - When static pressure of water is more than 0.6kg/cm², the QUICK WASH course will be within 19min.

18

SILENT Wash

Use this program to wash quietly in SILENT especially during late night and dawn.

1 Press the POWER (AUTO OFF) button to turn power on.	
2 Press the PROGRAM button to select SILENT program.	
3 Add the laundry into the washing tub.	
4 Press the START/PAUSE button.	
5 Add the Detergent and close the lid.	
NOTE - SILENT program takes longer washing time than FUZZY (Normal) program. - To reduce noise in spinning, spin rpm is lower than normal spinning rpm. So the laundry has more moisture than normal.	

19

Option Washing

When you only need the Wash, Wash/Rinse or Rinse cycles, these can be set manually.

1 Press the POWER (AUTO OFF) button to turn power on.	
2 Press the WASH button to select the desired timing.	
3 Press the RINSE button to select the desired no. of rinse cycles.	
4 Press the SPIN button to select the desired times of spin.	
5 Press the WATER LEVEL button, to control the water level according to the amount of laundry. If you do not choose anything, it is set at the middle water level automatically.	
6 Add the detergent and close the lid.	
NOTE - When Wash, Wash/Rinse or Rinse only option is selected, after the wash is completed the water will not be drained off. If you wish to drain the water, press SPIN button and wait until the water in the tub has drained completely. Then press the START/PAUSE button. - If you do not specify the water level, then Medium will be automatically selected. - If only Rinse is selected, the process will start from Water Supply.	

20

DELAY START (RESERVATION) Wash

DELAY START (RESERVATION) Wash is used to delay the finishing time of the operation. The hours to be delayed can be set by the user accordingly. The time on the display is the finishing time, not the start time.

1 Press the POWER (AUTO OFF) button to turn power on.	
2 Press the PROGRAM button to select the washing program.	
3 Press the DELAY START (RESERVATION) button.	
4 Add the laundry and press the START/PAUSE button.	
5 Add the Detergent.	
6 Close the lid.	
NOTE - The light will "DELAY" turn on and "TIME LEFT" will be marked. - Press the button repeatedly to set the desired finishing time. For example, To finish washing in 9 hours from now, by make the number 9:00 pressing the DELAY START (RESERVATION) button repeatedly. - When you press the START/PAUSE button the light will blink. - Water will be supplied for 2 minutes after the start of the wash to supplement the water the laundry has absorbed. - The washing will be finished according to the delayed time.	
NOTE - Finishing time can be delayed from 3-48 hours. Delaying from 3-12 hours can be done in 1 hour time intervals and from 12-48 hours in 2 hour time intervals. - If the lid is open, the machine will not work, and an alarm signal will alarm to remind you to close the lid. - To select washing time, timing time, spinning time, hot/cold or wash power manually, press the DELAY START (RESERVATION) button and select the desired option. Then press the START/PAUSE button. - When the laundry cannot be taken out immediately after the wash program ends, it is better to omit the spinning program. (The laundry will be wrinkled if left for a long time after spinning.)	

21

Other Useful Functions

Child Lock Function

If you want to lock all the keys to prevent settings from being changed by a child, you can use the child lock option.

How to Lock

1 Press the POWER (AUTO OFF) button.	
2 Press the START/PAUSE button to start washing.	
3 Press both the SPIN button and the DELAY button simultaneously.	
NOTE During the wash program, all the buttons are locked until washing is completed or it is child-lock function is deactivated manually.	

How to Unlock

If you want to unlock during wash, press both the SPIN and the DELAY button simultaneously again.

NOTE

• "CL" & the remaining time are alternatively shown on the display while they are locked.

Mute Option

If you want to use the washing machine without alarm signal sounds, press both the WASH and SPIN buttons simultaneously. To make buzzer work, press both the WASH and SPIN buttons simultaneously one more time.

Seeing Remaining Time

To see the remaining time for each process, first press START/PAUSE button and then press one of the WASH, RINSE and SPIN buttons.

WARRANTY

This LG Washing Machine comes with 2 year warranty, from the date of purchase, that comprises of a 2 year warranty on all Parts except Lin Filter, knob, inlet/outlet hose & Top Covers, subject to that the warranty card bears the rubber stamp, date and signature of our Authorized Dealer.

Terms & Condition

- The warranty is confined to the first purchaser of the Washing Machine only & is non-transferable.
- Repairs & replacements will be carried out by the dealer from whom the product has been purchased, or through the Authorized Service Centres of LGEL. In case the customer shifts the place of residence during warranty period, it is advised to contact Authorized Service Centre directly or call our help line.
- Repairs under warranty shall be carried out by an authorized service personnel only. The details of centralized help lines are attached.
- For units installed beyond municipal limits of the jurisdiction of company's Authorized Service Center, it is responsibility of the purchaser to contact the nearest authorized service center and bring the unit to the authorized service center.
- The authorized service center will advise the customer whether to effect the repairs at site or at the authorized service center.
- Call registered with the centralized help line/Authorized service center, wherein only cleaning of the unit/parts in the unit due to dust accumulation on portions of the unit, general explanation/returning, are not to be considered as defects.
- In case of repairs or replacement of any parts of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Replacement of parts would be purely at the discretion of LGEL, alone. In case the replacement of the entire unit is being made, (subject to the sole discretion of LGEL), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with the model of price equivalent at the time of purchase.
- In case of any damage to the product / customer should repair by un-authorized personnel/ misuse detected by the Authorized Service Center personnel, the warranty conditions are not applicable & repairs will be done subject to availability of parts and on a chargeable basis only.
- This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect in the Washing Machine. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period.
- The company or its Authorized Service Center reserves the right to retain any parts or component replaced at its discretion, in the event of a defect being notified in the equipment during warranty period.
- While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- Warranty does not cover accessories external to the equipment supplied by the dealer.
- If any coloured internal or external components are replaced, there will be commitment to ensure that the shades match with the original or other components. The replaced shades, patterns, fits may vary from the customer's unit due to continuous usage of the unit. Any matching components changed at customer's request will be on chargeable basis except the component which actually needed.

Warranty is not applicable in any of the following cases:

MODEL No.:	CUSTOMER'S COPY	DATE OF PURCHASE:
UNIT SERIAL No.:	CUSTOMER'S NAME & ADDRESS	DEALER'S NAME & ADDRESS
TEL.:	TEL.:	TEL.:
	Customer's Signature	Dealer's Signature

This Card is valid only if it is filled in and stamped by our authorized dealer on the date of purchase.

LG Electronics

Placing, Leveling and Installation

Please ensure that transit restraint has been removed before operating your machine.

Improper installation of the washer may cause noise and malfunctioning.

Note: 1. The venting opening in the base area must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

2. Install the washing machine on a level and firm surface, any tilt should be less than 4°.

How to adjust leveling

Adjustment leg

Installation area

Install the washer on flat and firm surface.

Check level

Do not add anything under back side legs.

Distance between drain hose and the wall should be more than 10cm, and the distance between the rear part of the rear part and the wall should be more than 2cm.

Top View

Checking Proper placement

Press the corners of the machine diagonally as shown in the figure. If any movement is observed, adjust the legs to proper leveling.

Anti-rat cover installation

Insert the anti-rat cover firmly from back side of Front side of washing machine and screw it.

Low Base

23

Connecting Water Supply Hose

Normal Type (Normal tap without thread & one touch type inlet hose.)

1 Separate Middle connector from Water Supply Hose.	
2 Loosen the fixed nuts to connect the connector to the tap.	
NOTE In case tap is too large. If the tap diameter is too large or is square, untighten the 4 screws and remove the guide plate. Then follow step 1.	
3 Fixing Connectors to the Tap.	
4 Fixing Upper Connector and Middle Connector.	
5 Connecting Middle Connector and Water Supply Hose.	
6 Check for water leakage.	

24

Connecting Drain Hose

Before connecting Drain Hose, check your Drain Hose model and choose the correct instructions.

How to connect the drain hose

1 Insert the drain hose to the connecting area at the body.	
2 Press the hose clip.	
3 Release the hose clip after pushing the hose.	
4 Make sure the hose is not crushed between the wall and the washer.	
5 Make sure that the hose is not clogged by alien substances.	
6 Make sure that the hose is not crushed.	
7 Avoid submerging the end of hose.	
8 Extension hose is used.	

25

Grounding Method

Earth wire should be connected.

If the earth wire is not connected, there is possible a danger of electric shock caused by the current leakage.

Grounding Method with Ground Insert space Terminal If the AC current with a ground terminal, then separate grounding is not required.	
Concerning the Power Cord Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets, base or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.	
Other Grounding Method Burying Copper Plate Connect the Ground Wire to a Ground Copper Plate and bury it more than 75cm in the ground.	
Using Ground Wire Connect the ground Wire to the socket provided exclusively for Grounding.	
Using a Short Circuit Breaker If grounding methods described above are not possible, a separate circuit breaker should be installed and installed by a qualified electrician employed and installed by a qualified electrician.	

26

Specification

Model	WF-N7069NN / WF-N7069NP / WF-N7099NP
Size	540(W)x540(D)x815(H)
Weight	31.5kg
Water tap pressure	30 - 800 kPa (0.3 - 8.0 kg/cm ²)

† In our continuing effort to improve the quality of our appliances, it may be necessary to make changes to the appliance without revising this manual.

Installation Check sheet

Customer Copy

Machine: _____ Colour: _____ Job No.: _____

Dt. of pur.: _____ M/C. S No.: _____

Name Of Customer: _____

Address: _____

TEL: _____ (Resi) _____ (Mob). Email: _____

Tick Appropriate (By Service Engineer)

S.No.	Check Point	Yes/No	Remarks
1	Physical condition of the Machine is satisfied?		
2	Electrical condition of household wiring / earthing for washing machine is proper?		
3	Advised to turn off machine after use?		
4	Explained Fusing of Inlet Hose Adapter to Tap?		
5	Explained Leg Adjustment & Common Conditions when Leveling Required?		
6	Explained Cleaning of Lin Filter and Required Cleaning Frequency?		
7	Explained Cleaning of Inlet Valve Filter and Required Cleaning Frequency?		
8	Explained Cleaning of Tub and Required Cleaning Frequency?		
9	Explained Regular Check Up and Safety Instructions?		
10	Anti Rat Cover installed?		
11	Inlet Hose and Drain Hose checked for water leakage after connection?		
12	Leveling check & adjusted?		
13	Explained Clothes Balancing, Proper Cloth Separation for best Wash?		
14	Explained All Features of the machine to customer?		
15	Demo given to customer?		
16	Explained Common Errors (I.E.O.E.U.E./E.P.E.A.F.E etc)		
17	Explained unbalance error in Spin Mode?		
18	Warranty terms explained?		

Name of ASC: _____ Installation Dt: _____ Installed by: _____

Customer Remarks If Any: _____

I hereby certify that above Checks & Demo have been done to me with full of satisfaction and I am fully satisfied with the machine installation and performance of washing machine and I agree to take care of machine, suggestions (If Any) in respect of safety.

Signature Of Customer _____ Date: _____ Time: _____

For Best Use, Please Read the User's Manual Properly.

FATL

Installation Check sheet

Company Copy

Machine: _____ Colour: _____ Job No.: _____

Dt. of pur.: _____ M/C. S No.: _____

Name Of Customer: _____

Address: _____

TEL: _____ (Resi) _____ (Mob). Email: _____

Tick Appropriate (By Service Engineer)

S.No.	Check Point	Yes/No	Remarks
1	Physical condition of the Machine is satisfied?		
2	Electrical condition of household wiring / earthing for washing machine is proper?		
3	Advised to turn off machine after use?		
4	Explained Fusing of Inlet Hose Adapter to Tap?		
5	Explained Leg Adjustment & Common Conditions when Leveling Required?		
6	Explained Cleaning of Lin Filter and Required Cleaning Frequency?		
7	Explained Cleaning of Inlet Valve Filter and Required Cleaning Frequency?		
8	Explained Cleaning of Tub and Required Cleaning Frequency?		
9	Explained Regular Check Up and Safety Instructions?		
10	Anti Rat Cover installed?		
11	Inlet Hose and Drain Hose checked for water leakage after connection?		
12	Leveling check & adjusted?		
13	Explained Clothes Balancing, Proper Cloth Separation for best Wash?		
14	Explained All Features of the machine to customer?		
15	Demo given to customer?		
16	Explained Common Errors (I.E.O.E.U.E./E.P.E.A.F.E etc)		
17	Explained unbalance error in Spin Mode?		
18	Warranty terms explained?		

Name of ASC: _____ Installation Dt: _____ Installed by: _____

Customer Remarks If Any: _____

I hereby certify that above Checks & Demo have been done to me with full of satisfaction and I am fully satisfied with the machine installation and performance of washing machine and I agree to take care of machine, suggestions (If Any) in respect of safety.

Signature Of Customer _____ Date: _____ Time: _____

For Best Use, Please Read the User's Manual Properly.

FATL

28

29

30

31