



KF750 User Guide

CE 0168

www.lgmobile.com

P/N : MMBB0321401 (1.1) H

LG ELECTRONICS INC.

KF750 User Guide

ENGLISH

Bluetooth QD ID B013855



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF750 User Guide

Congratulations on your purchase of the advanced and compact KF750 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Setup	01
Your standby screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08

Contents

Setup

Getting to know your phone	8
Inserting the USIM and battery	10
Memory card	12
Menu map	14

Your standby screen

Touch screen tips	16
The status bar	17

The basics

Calls	18
Making a voice call	18
Making a video call	18
Making a voice/video call from Contacts	18
Making international calls	19
Answering and rejecting a call	19
Speed dialling	19
Making a second call	19
DTMF tones	20
Viewing your call logs	20
Using call divert	20
Using call barring	21
Changing the common call settings	21
Changing your video call settings	22
Contacts	23
Searching for a contact	23
Adding a new contact	23
Contact options	24

Creating a group	24
Using service dial numbers	25
Viewing your own number	25
Creating a business card	25
Changing your contact settings	25
Messaging	27
Messaging	27
Sending a message	27
Entering text	27
T9 predictive	27
Abc manual	28
Setting up your email	28
Retrieving your email	29
Sending an email using your new account	29
Changing your email settings ...	29
Message folders	30
Managing your messages	30
Using templates	31
Using emoticons	31
Changing your text message settings	31
Changing your multimedia message settings	32
Changing your other settings	32

Get creative

Camera	33
Taking a quick photo	33
After you've taken your photo	33
Using the flash	34

Adjusting the brightness.....	34	Adding an effect to a photo	44
Choosing a shot mode	34	Morphing a photo.....	44
Using continuous shot mode	35	Spotlighting a photo	45
Using a frame shot mode.....	35	Editing your videos.....	45
Taking a panoramic shot	35	Trimming the length of	
Using the advanced settings	36	your video.....	45
Changing the image size.....	37	Merging two videos together....	45
Choosing a colour tone.....	37	Merging a photo with a	
Viewing your saved photos.....	38	video	46
Setting a photo as a		Adding text to a video.....	46
wallpaper or contact image	38	Overlaying a photo.....	46
Video camera	39	Adding a voice recording.....	47
Shooting a quick video	39	Adding a soundtrack to	
After you've shot your video.....	39	your video.....	47
Adjusting the brightness.....	39	Changing the speed of	
Using the advanced settings	39	your video.....	48
Changing the video size	40	Adding a dimming effect	48
Choosing an effect tone	41	Multimedia.....	49
Watching your saved videos	41	Images.....	49
Your photos and videos	42	My images option menus	49
Editing photo album options	42	Sending a photo.....	49
Editing video album options	42	Using an image	50
Adjusting the volume when		Organising your images	50
viewing a video.....	42	Deleting an image	50
Capturing an image		Moving or copying an image.....	50
from a video.....	42	Editing an image	51
Sending a photo or video		Marking and unmarking	
from the album	43	images.....	51
Viewing your photos as a		Checking your memory	
slide show	43	status	51
Setting a photo as a		Sounds	51
wallpaper	43	Using a sound.....	51
Editing your photos.....	44	Videos.....	52

Contents

Watching a video.....	52	Searching for stations.....	58
Using options while video is paused.....	52	Editing the channels	58
Sending a video clip.....	52	Resetting channels	58
Using a video clip as a ringtone.....	52	Listening to the radio	59
Using the video options menu.....	52	Using voice recorder	59
Games and Applications.....	53	Sending the voice recording.....	59
M-Toy menu	53	Get organised	
Playing a game.....	53	Organiser	60
Using the games options menu.....	53	Adding an event to your calendar	60
Flash contents	54	Changing your default calendar view	60
Viewing an SWF/SVG file	54	Adding an item to your to do list.....	60
Using options viewing the SWF/SVG file.....	54	Sharing a to do item.....	61
Documents.....	54	Adding a memo	61
Transferring a file to your phone	54	Tools	62
Viewing a file.....	55	Setting your alarm	62
Others.....	55	Using your calculator.....	62
Movie maker	55	Using the stopwatch.....	62
Creating a movie	55	Converting a unit	63
Music.....	55	Adding a city to your world time	63
Playing a song	56	PC Sync.....	64
Using options while playing music	56	Installing LG PC Suite on your computer	64
Creating a playlist.....	56	Connecting your phone and PC.....	64
Editing a playlist	57	Backing up and restoring your phone's information.....	64
Deleting a playlist	57	Viewing your phone files on your PC	65
Using the radio.....	57		

Synchronising your contacts	65
Synchronising your messages.....	65
Synchronising your music.....	65
Using your phone as a mass storage device	66
PIN for DivX connection	66

The web

Browser	68
Accessing the web	68
Adding and accessing your bookmarks.....	68
Saving a page	69
Accessing a saved page	69
Viewing your browser history	69
Using RSS reader	69
Adding the Feed.....	70
Updating the RSS reader	70
Changing the web browser settings	70
The web	71
Using your phone as a modem	71
Using Bluetooth.....	71
Sending and receiving your files using Bluetooth	72
Pairing with another Bluetooth device	73
Using a Bluetooth headset	73

Settings

Changing your screen settings.....	74
Personalising your profiles.....	74
Changing your phone settings.....	75
Using Date & Time.....	75
Changing your other settings.....	75
Changing security settings.....	76
Using memory manager.....	76
Using flight mode.....	76

Accessories.....77

Network service78

Technical data78

Guidelines

Guidelines for safe and efficient use	80
---	----

Getting to know your phone



**Charger, USB Cable,
Handsfree connector**

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Side keys

- **When the screen is idle:** volume of ring tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
 - **Short press:** controls the volume.
 - **Long press:** move to the next or previous music file.
- **Touch screen button:** turn the LCD into a touch screen to access your files.
- **Opens the multitasking menu**
- **Capture button**

01

02

03

04


05

06

07

08



External camera lens

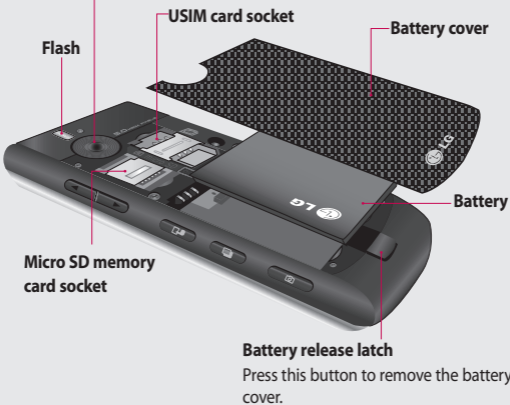

Inserting the USIM and battery

1 Remove the battery cover

  Press and hold down the battery release button at the top of the phone and lift off the battery cover.



2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment using the battery cover.




WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Insert the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the reverse direction.

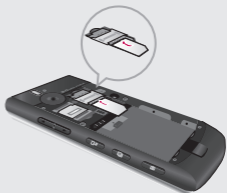


4 Insert the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



5 Charging your phone

Slide back the cover of the charger socket on the side of your KF750. Insert the charger (with the arrow to the back of the handset) and plug into a mains electricity socket. Your KF750 will need to be charged until a message reading "Battery full" appears on screen.

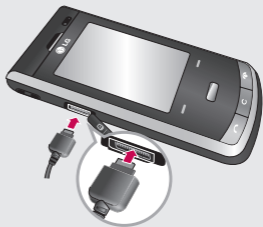

01

02

03

04

05

06

07

08

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card. The KF750 will support up to a 4GB memory card.

TIP: A memory card is an optional accessory.


- 1 Remove the battery cover as before.
- 2 Lift the memory card cover and insert a micro SD card with the gold contact area facing downwards. Close the memory card cover so that it clicks shut.



- 3 Replace the battery cover.

Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press  then select **Settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the security code, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open **Memory manager** from the Phone settings menu and select **Primary storage setting**.

NOTE: If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

01

02

03

04

05

06

07

08

Menu map



Games & apps

- 1 M-Toy
- 2 My games & apps
- 3 Settings



Calling

- 1 Make video call
- 2 Call logs
- 3 Call durations
- 4 Data volume
- 5 Call costs
- 6 Call divert
- 7 Call barring
- 8 Fixed dial numbers
- 9 Call waiting
- 0 Common settings
- * Video call settings



Organiser

- 1 Calendar
- 2 To do
- 3 Memo
- 4 Secret memo
- 5 Date finder
- 6 Settings



Multimedia

- 1 Touch media
- 2 Camera
- 3 Video camera
- 4 Music
- 5 FM radio
- 6 Voice recorder
- 7 Media editor
- 8 Movie maker



Messaging

- 1 Create new message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 My folders
- 8 Templates
- 9 Emoticons
- 0 Settings



My stuff

- 1 My images
- 2 My sounds
- 3 My videos
- 4 Games & Apps
- 5 Flash contents
- 6 Documents
- 7 Others
- 8 My memory card



Google

- 1 Search
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 You Tube
- 6 Upload History



Contacts

- 1 Add new
- 2 Search
- 3 Speed dials
- 4 Groups
- 5 Service dial numbers
- 6 Own number
- 7 My business card
- 8 Settings



Tools

- 1 Quick menu
- 2 Alarms
- 3 Calculator
- 4 Stopwatch
- 5 Converter
- 6 World time
- 7 SIM service



Browser

- 1 Home
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Settings



Connectivity

- 1 Bluetooth
- 2 Server sync
- 3 USB connection mode
- 4 TV out
- 5 PIN for DivX connection



Settings

- 1 Profiles
- 2 Phone
- 3 Screen
- 4 Date & Time
- 5 Network
- 6 Internet profile
- 7 Access points
- 8 Packet data conn.
- 9 Security
- 0 Memory manager
- * Streaming settings
- # Reset settings

01

02

03

04

05

06

07

08

Your standby screen

Whenever your KF750 isn't in use it will return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touch screen tips

If you press the touch screen button on the right-hand side of the phone the screen will switch to an interactive touch screen keypad.

Press and hold the touch screen button from the standby screen to enter a further multimedia menu.

To select an item, touch the icon on the touch screen. Your KF750 will vibrate slightly when it recognises that you've touched an option.

- There's no need to press too hard as the touchscreen is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Don't cover the phone with a case or cover, as the touch screen will not work with any material covering it.

- The touch pad below the screen can be used as a four way arrow pad to navigate you through the phone menus.

TIP! Use the touch screen for fast and easy access to your music, Photo, M-Toy, Document and FM radio.



Touch pad

- NOTE:** When the screen light goes off, you can press the camera key on the right hand side of the phone to restore the standby screen.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown below.



Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may reduce signal quality.

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty

Icon	Description
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	3G available

01

02

03

04

05





06

07

08

Calls

Making a voice call


- 1 Enter the number including the full area code.
To delete a digit press .
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

Making a video call

You can make a video call in a 3G-covered service area if the user you are calling also has a 3G video phone in a 3G-covered service area. You can also receive video calls. To make a video call, do the following.



- 1 Enter the phone number, as before.
- 2 If you do not want to use the speakerphone, ensure you have the headset plugged in.
- 3 To start the video function, press the left soft key **Options** and select **Make video call**. You will be notified that you will need to close other applications to make the video call.

NOTE: The video call may take some time to connect. Please be patient. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.


- 4 Adjust the camera position if necessary.
- 5 Press  to finish the call, or close the handset.

Making a voice/video call from Contacts


It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press the down key on the navigation touch pad to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- 4 Press  to finish the call.

Making international calls

- 1 Press and hold **0+~** for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Press Silent to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting!

Press the End key to reject the incoming call.



Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial 1. Select any other number to assign it to a speed dial contact.

- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- 1 Press the assigned number then press the send key , or .
- 2 Press and hold the assigned number until the contact appears on screen.

Making a second call

- 1 During your initial call, press **OK**, then **Options**, and select **Add new call**.
- 2 Dial the number or search your contacts (see page 18 for details on how to make a call from Contacts).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** → **End** followed by **All** or **Active**.

NOTE: You will be charged for each call you make.

01

02

03

04

05

06

07


08

Calls

DTMF tones

DTMF allows you to use numerical commands to navigate menus within automated messages. DTMF is switched on as default.

Viewing your call logs

Press , then select **Calling** → **Call logs**.


Choose to view:

All calls - View a complete list of all of your dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

Press , select **Calling**.

Before Calling you can also choose to view:


Call durations - View the duration of all your dialled and received calls.

Data volume - View the amount in kilobytes of all your received and sent data.

Call costs - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

TIP! From any calls list, touch the left soft key and **Delete All** to delete all the recorded items.

Using call divert

- 1 Press , then select **Calling**.
- 2 Select **Call divert** and choose **Voice calls** and/or **Video calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to or divert to your voice mail centre.
- 5 Select **Divert**.

NOTE: Charges may be incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all**.

Using call barring

- 1 Press , select **Calling**.
- 2 Select **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the common call settings

- 1 Press , then select **Calling**.
- 2 Select **Common settings**. From here you can amend the settings for:
 - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.
 - Send my number** - Choose whether your number will be displayed when you call someone.
 - Auto redial** - Choose **On** or **Off**.
 - Answer mode** - Choose whether to answer the phone by pressing the **Send** key, by pressing any key, or by opening the slide.
 - Minute minder** - Select **On** to hear a tone every minute during a call.
 - BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **handset**.

01

02

03

04

05

06

07

08


Calls

Save new number - Saves numbers you use that aren't already stored in Contacts.

Slide close setting - Select **End call** to be able to disconnect a call by closing the slide.

Voice clarity- Select **Yes** to listen to the voice clearly.

Changing your video call settings

- 1 Press , then select **Calling**.
- 2 Select **Video call settings**.
- 3 Determine whether to **Use private picture** and/or, switch on the **Mirror**.

Contacts

Searching for a contact

There are two ways to search for a contact:

From the standby screen


- 1 From the standby screen touch the down key on the touch pad to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press **4** (GHI) twice.

TIP! You can search by group by touching the left soft key and selecting **Search by group**. This will bring up a list of all your groups.

From the main menu

- 1 Select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

Adding a new contact

- 1 Press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 6 Add up to two email addresses.
- 7 You can assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add a **Homepage, Home address, Company name, Job title, Company address** and a **Memo**.

TIP! You can create customised groups for your contacts. See **Creating a group** on page 24.

01

02

03

04

05

06

07

08

Contacts

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press the left soft key to open the list of options.
From here you can:

Send message - Send a message or an email to the contact. See page 27 for details on how to send messages.

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message, Multimedia msg, Email** or via **Bluetooth**.

Make voice call - Call the contact.

Make video call - Make a video call to the contact.

Edit - You can edit the contact.

Mark/Unmark - Mark your contacts for multiple selection.


Search by - You can search the entry by number or group.

Save to USIM/ Handset - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).

Delete - Delete the contact.

Text input - You can set the text input method.


Creating a group

- 1 Press  and select **Contacts**.
- 2 Select **Groups** and touch the left soft key.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and touching the left soft key. Choose to **Add a member** to the group from your contacts, assign a **Group ringtone, Rename** the group or **Delete** the group.

Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

Viewing your own number


Select **Own number** in the Contacts menu to view your number.

Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.

Changing your contact settings

You can adapt your contact settings so that your address book works according to your preferences.

- 1 Press  and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset only** or **USIM only**. You can also select to show the first name or last name of a contact first, and to show a contact picture.

Synchronise contacts - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page 65.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one by one, or all together.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth - Send all contacts information to another handset by Bluetooth.

Back up contacts - See **Backing up and restoring your phone's information** on page 64.

01

02

03

04

05

06

07

08

Contacts

Restore contacts - See **Backing up and restoring your phone's information** on page 64.

Clear contacts - Delete all your contacts.


Memory info. - You can check how much memory you've got left on your handset or your USIM.


Messaging


Messaging

Your KF750 combines SMS, MMS and email into one intuitive and easy to use menu.

Sending a message

- 1 Select **Messaging** then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. A new SMS will open.
- 3 Select **Options**, then **Insert**, to add an image, video, sound or subject.
- 4 Press  **Send**. Enter the phone number or select **Contacts** to open your contacts list. You can add multiple contacts.


 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

 
Entering text

There are two ways to enter text:

T9 predictive and Abc manual.

To switch between text entry methods, press and hold the  key when you have a blank message open.

To change between upper, lower and title case press the  key.

To delete a character use the  hard key below the screen.

To enter a symbol select **Options** and **Insert**.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

01

02

03

04

05

06

07

08

Messaging

Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

Setting up your email

You can stay in touch on the move using email on your KF750. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Select **Messaging** then select **Settings**.
- 2 Select **Email**, then **Email accounts**.
- 3 You can now choose how your account works:
 - Title** - Enter a name for this account.
 - My name** - Enter your name.
 - Username** - Enter the account username.
 - Password** - Enter the account password.
 - Email address** - Enter the account email address.
 - Reply email address** - Enter the 'reply to' email address.

Outgoing mail server - Enter the account details.

Incoming mail server - Enter the account details.

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

Access point - Choose your Internet access point.

Auto retrieve - Choose whether to fetch your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

SMTP authentication - Choose the security settings for the outgoing mail server.

APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Retrieving your email

You can automatically or manually check your account for new email. See 'Changing your email settings' to check automatically.

To check manually:

- 1 Select **Messaging** then **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Open** and then **Retrieve** and the phone will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Select **Messaging**, then choose **Create new message**.
- 2 Choose **Email** and a new email will open.

- 3 Use **Options** to enter the recipient's address and to write your message. Use **Insert** to attach images, videos, sounds or other file types.
- 4 Select **Send** and your email will be sent.

TIP! You can email Word, Excel, Power Point and PDF documents to your KF750 so you can review them on the move.

Changing your email settings

You can adapt your email settings so that it works according to your preferences.

- 1 Select **Messaging** then open **Settings**.
- 2 Select **Email** and then you can adapt the following settings:
 - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
 - Request reply email** - Choose whether to request 'read confirmation' messages.
 - Retrieve interval** - Choose how often your KF750 checks for new email messages.

01

02

03

04

05

06

07

08

Messaging

Include message in Fwd & Reply -

Choose whether or not to include the original message.

Include attachment - Choose whether or not to include the original attachment.

Auto retrieval in Roaming -

Choose whether or not to automatically retrieve your messages when abroad.

New email notification - Choose whether or not to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Message folders

Inbox - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

Mailbox - All emails you receive are placed into your Mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder for messages that are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

Managing your messages

- 1 Select **Messaging** then **Inbox**.
- 2 Select **Options** and then choose to::

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Call - Call the person who sent you the message.

Delete - Delete the message.

Create new message - Open a new, blank message or email.

Mark/Unmark - Mark your messages for multiple deletion.

Copy & Move - Copy or move the message to your phone, USIM or My folders.

Filter - View your message by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, including the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 Select **Messaging** then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select Options to **Add new**, **Edit**, **Delete** or **Delete all** templates.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Select **Messaging** then choose **Emoticons**.
- 2 Select Options to **Add new**, **Edit**, **Delete** or **Delete all** emoticons.

Changing your text message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

01

02

03

04

05

06

07

08

Messaging

Send long text as - Choose to send as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Multimedia message**.

You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether or not to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Deliver your message at a specific time.

Multi msg. centre - Enter the details for your message centre.

Changing your other settings

Select **Messaging**, choose **Settings** then:

Info. service - Choose your reception status, language and other settings.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Camera

Taking a quick photo


- 1 Press and hold the capture button on the right-hand side of the handset and the camera's viewfinder will appear on the screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly depress the capture button and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject of your photo in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully.


After you've taken your photo


Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen together with five icons down the right side.





Back Go back to previous menu.

 View the pictures you have taken in your Album.

 Send the photo as an MMS, Email, via Bluetooth or Blog This. See page 27 for **Sending a message**, page 72 for **Sending and receiving your files using Bluetooth**.

 Take another photo straight away. Your current photo will be saved.

 Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

 Delete the photo you have just taken. The viewfinder will reappear.

TIP! In camera mode select the Play icon to open the photo album. See page 38, **Viewing your saved photos**, for details.

01

02

03

04

05

06


07

08

Camera

Using the flash



Flash is set to Auto by default, but there are other options.

- 1 Select  from the top right corner of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
 - On** - Your camera will always flash when taking a picture.
 - Auto** - Your camera will assess whether or not the flash is necessary for a good picture.
 - Off** - The camera will never flash. This is useful if you want to save battery power. Select the flash option you'd like to use.
- 3 When you've made your selection the flash menu will automatically close, ready for you to take your picture, and the flash icon in the viewfinder will change according to your chosen flash mode.

NOTE: Whenever you exit the camera, the flash setting will revert to Auto mode. You'll need to switch the flash back on if you still need it when you reopen the camera.

Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in **Settings**.
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.

Choosing a shot mode

- 1 Select **Settings** to view the available shot modes.
- 2 Choose from the five options:
 - Normal** - This is the default shot type. The photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 33.
 - Continuous shot** - This enables you to take nine shots automatically in very quick succession. See **Using continuous shot mode** below for details.
 - Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just to

decorate their surroundings.

Panorama - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** below for more details.

Music video shot - This shot type allows to take a shot with music or voice.

Using continuous shot mode

Continuous shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take nine shots in quick succession and display the first with eight thumbnails on the screen.
- 4 Select the shot you want to keep by selecting the thumbnail.

Using a frame shot mode

Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 Select **Frame shot** menu.
- 2 Position the subject in the fun frame and press the capture button.
- 3 Save the image by selecting **Save**.

Taking a panoramic shot

Capture life as it appears using panoramic shot. The camera will let you take three photos, all aligned, and combine them into one image so that your wide angle view becomes a panoramic photo.

- 1 Select **Panorama**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photos, line the ghost of the previous image up with the next image in the viewfinder.
- 4 In phone photos are saved as a one panoramic image only.

01

02

03

04

05

06

07

08

Camera

NOTE: Due to the image size the panoramic photo will appear slightly distorted in the Album view.

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the photo. See **Changing the image size** on page 37.

Scene mode - Set the the camera to adjust for the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

Brightness - Set the brightness of the image in the viewfinder of the camera.

Effect - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.

White Balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Daylight, Cloudy, Illuminate** and **Indoors**.

Timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds, 5 seconds** or **10 seconds**. Great for a group photo that you want to be part of too!

Shot mode - See page 34.

ISO - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be to light. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto, ISO 100, ISO 200, ISO 400** or **ISO 800**.

Quality - Super fine/ Fine /Normal

Memory in use - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Focus mode - Set the camera to focus automatically.

Sound - Select one of three different shutter sounds.

TIP! When you exit the camera, all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example, colour tone and ISO. Check them before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu. Remember to select **Save** before exiting to apply any changes.

Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.

- 1 From the viewfinder select **Settings** in the bottom left corner.

- 2 Select **Size**.

- 3 Select a pixel value from the six numerical options (**5M: 2592x1944**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**) or choose the preset:

Contact - This sets the camera to take a photo the perfect size to be added to a phone contact.

- 4 Select the size option you'd like to use and press **Select** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

Choosing a colour tone

- 1 From the viewfinder, select **Settings**.

- 2 Select **Effect**.

- 3 There are twelve colour tone options: **Off**, **Black & White**, **Negative**, **Sepia**, **Blue**, **Emboss**, **Sketch**, **Purpulish**, **Bluish**, **Monochrome**, **Edgemap**, or **Posterize**.

- 4 Choose the colour tone you'd like to use and press **Select**.

Camera

- 5 When you've made your selection, the colour tone menu will automatically close, ready for you to take your picture.

TIP! You can change a photo taken in colour to black and white or sepia, taken but you cannot change a picture taken in black and white or sepia back to colour.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the Album at the top of the icon menu.
- 2 Your album will appear on the screen.
- 3 Highlight the photo you want to view to bring it to the front of the album.
- 4 Select the photo to open it fully.

Setting a photo as a wallpaper or contact image


From your image album, select an image and **Use as** to use the image as a wallpaper or contact image.

NOTE: Contact images can only be added to contacts saved to your phone, not your SIM.

TIP! You can also access your photos using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and touch the **Photo** icon. You can then scroll through your pictures by touching the screen.





Video camera


Shooting a quick video

- 1 Move the camera mode switch to  and press the centre button. The video camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the capture button once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press the capture button again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with five icons down the right side.


 

-  View your video album.
-  Play the file.
-  New video is played.
-  Send the video as an MMS, as an Email, via Bluetooth or YouTube. See page 27 for **Sending a message**, or page 72 for **Sending and receiving your files using Bluetooth**.

 Delete the video you have just made. The viewfinder will reappear.

TIP! Select the album icon to open the video album. See **Watching your saved videos** on page 41 for details.

Adjusting the brightness

Contrast defines the difference between light and dark in an Video. A low contrast Video will appear foggy, whereas a high contrast Video will appear much sharper.

- 1 Select .
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier Video, or towards  for a higher contrast, sharper Video.

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the video. See **Changing the video size** on page 40.

Scene mode - Set the Video for adjusting the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

01

02

03

04

05

06

07

08

Video camera

Effect - Choose an effect tone to apply to the video you're making. See **Choosing an effect tone** on page 41.

White Balance - The white balance ensures that any white in your Videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Indoors**, **Illuminate** and **Cloudy**.

Music video shot - This shot type allows to take a shot with music or voice.

Recording speed - Record the video using **Normal**, **Slow video**, **Fast video**.

Duration - Select the maximum length of the recording.

Memory in use - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Voice - Choose **Mute** to record a video without sound.


NOTE: Always touch **Save** after selecting a new setting to implement the changes you've made.

TIP! When you exit the video camera all your settings will return to default, except Video Size & Video Quality. Any non-default settings you require will need to be reset, for example colour tone and white balance. Check them before you shoot your next video.

Changing the video size

The more pixels, the larger the file size, which in turn means they will take up more memory. If you want to fit more videos onto your phone you can alter the number of pixels to make the file size smaller.

- 1 Select **Size** from the settings menu.
- 2 Select a pixel value from the four options:
 - 640x480(W)** - The highest quality wide screen option.
 - 320x240** - Smaller Video size, therefore smaller file size. Great for saving on memory space.
 - 176x144** - Smallest Video size and therefore a smaller file size.
 - 16:9 Wide** - Wide screen option.

- 3 Select the size option you'd like to use and press . Press **Close** and you will be ready to shoot your video.

NOTE: When you view your videos, playback speed is 30 frames per second, with the exception of 120 fps where playback is at 15 frames per second.



WARNING: The great editing software on your LG KF750 is compatible with all video types except 640x480. Don't record in this format if you plan to edit your video.

Choosing an effect tone

- 1 Select **Settings** and choose **Effect**.
- 2 There are twelve colour tone options: **Off, Black & White, Negative, Sepia, Blue, Emboss, Sketch, Purpulish, Bluish, Monochrome, Edgemap** and **Posterize**.
- 3 Choose the colour tone you'd like to use and press **Select**.

- 4 When you've made your selection, the colour tone menu will automatically close, ready for you to shoot your video.

TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia to colour.

Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

01

02

03

04

05

06

07

08

Your photos and videos

Editing photo album options

You can view and edit your images using the Options menu in the photo album.

View - View the image.

Send - Send the image to a friend.

Delete - Delete the image.

Use as - Set the image as a wallpaper/ contacts image/start-up or shut down image.

Slide show - Set the image as a slide show.

Edit - Edit the image.

Print - Print an image file via PictBridge or Bluetooth.

Editing video album options

You can view and edit your videos using the Options menu in the video album.

Play - Play the video.

Send - Send the video to a friend.

Delete - Delete the video.

Use as - Set the video as a ringtone.

Rename - Rename the video.


Edit - Edit the video.

TIP! You can easily delete a photo or video. Select the photo or video, then select **Options** and choose **Delete**.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video, use up and down on the touch pad.

Capturing an image from a video


- 1 Play the video you would like to capture an image from.
- 2 Press  to pause the video on the frame you'd like to convert to an image and open the options menu.
- 3 From the options menu select **Capture**.
- 4 The image will appear on the screen with its assigned image name.
- 5 Select **OK**.
- 6 Select **Delete** to return to the album.

- 7 The image will be saved in the My files folder and will appear in the album (You need to exit the album and then re-open for this to appear).



WARNING: Some functions may not work properly if the multimedia file has not been recorded on the phone.

Sending a photo or video from the album

- 1 Select a photo or video to open it. If you select a video, press  when it starts to play.
- 2 Select the left soft key to open the options menu.
- 3 Select **Send** and choose how you would like to send the video or photo: **Message**, **Email** or **Bluetooth**.
- 4 The chosen messaging application will open so you can send the video or photo.

NOTE: The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case you can choose one of the other sending options.

Viewing your photos as a slide show

Slide show mode will show all the photos in your album one at a time as a slide show.

- 1 Select the photo you would like to begin the slide show.
- 2 Press the left soft key to open the Options menu.
- 3 Select **Slide show** and it will begin.

Setting a photo as a wallpaper

- 1 Select the photo you would like to set as a wallpaper.
- 2 Select the left soft key to open the Options menu.
- 3 Select **Use as - Wallpaper**.

01

02

03

04

05

06





 



07


08

Your photos and videos

Editing your photos

 There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and select **Options**.
- 2 Select **File** and then **Edit**.
- 3 Select an icon to adapt your photo:
 -  Rotate the image left or right.
 -  Change the size of the photo.
 -  Insert an icon to the image.
 -  Clip the image to 640X480, 320X240, 176X146.
 -  Distort the image.
 -  Change the colour tone to Black and white, Sepia, or Colour negative.
 -  Change or add a frame to the image.
 -  Reverse the picture to a mirror image.

-  Change the image using **Morphing**, **Fun mirror**, or **Spotlight**.

Adding an effect to a photo

- 1 From the editing screen, select **Special effect** or **Frame effect**.

- 2 Choose to apply any of the two options to the photo:

Special effect - Change the colour of a photo to **Black and white**, **Sepia** or **Colour Negative**.

Frame effect - Add a frame to your photo. Select the desired frame type. Select **OK** to have the chosen frame superimposed over your photo.

- 3 To undo an effect simply select **Undo**.

TIP! You can use more than one effect on a photo, except for a colour effect.

Morphing a photo

Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen select **More** and then **Morphing**.
- 2 If the face in the picture is not detected, a pop up message **Face was not detected** will be displayed and the morphing effect will be cancelled..

- 3 If the face is detected the first morphing style will be applied to the picture.
- 4 Select the morphing style you would like to use on the photo.
- 5 Select the intensity of morphing.
- 6 Select **OK** to apply the changes.

Spotlighting a photo

- 1 Select the desired location on the image.
- 2 Select the size of spotlight.
- 3 Select **OK** to apply the changes.

TIP! Use the Fun mirror to copy the left side of the image over the right side to make fun pictures.

TIP! You can undo more than one effect on a photo, except for a resize. If any effect is already applied before the resize effect, the applied and resize effects will be saved. The undo count will then be reset.

Editing your videos

Editing features are available for all video types except 640x480. Don't record in this format if you plan to edit your video.

Trimming the length of your video

- 1 Choose the video you'd like to edit, and touch **Options**.
- 2 Select **File, Edit** and choose **Trim**.
- 3 Select **Start** and **End** to mark the new start and end points.

Merging two videos together

- 1 Choose the first video you'd like to edit, and select **Options**.
- 2 Select **File, Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge to and choose **Select**.
- 4 Select **Effect** to choose how the videos merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board** or **Dissolve**.

01

02

03

04


05

06


07

08

Your photos and videos

- 5 Press  to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **File, Edit** and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and choose **Select**.
- 4 Select and slide the photo to merge it to the end or the beginning of the video.
- 5 Select **Effect** to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board** or **Dissolve**.
- 6 Press . Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **File, Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and press **Save**.
- 4 Mark when you'd like the text to appear and press **Ok**.
- 5 Press **Start** and mark when you'd like the text to appear in.
- 6 Select **End** to mark when you'd like the text to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more text.

Overlaying a photo

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **File, Edit** and choose **Image overlay**.

- 3 The My images folder will open. Choose the photo you would like to overlay your video and choose **Select**.
- 4 Mark when you'd like the photo to appear and press **Ok**.
- 5 Select **Start** and mark when you'd like the photo to appear. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Select **End** to mark when you'd like the text to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more photos.

Adding a voice recording

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **File, Edit** and choose **Voice recording**. The quality of the original audio will be affected by adding a voice recording.
- 3 Select **Yes** to continue.
- 4 Press **Play** to view your video. When you get to the part you'd like to record your voice over, press **Pause**.
- 5 Press **Start** to start recording and **End** to stop recording.
- 6 Select **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 7 Repeat these steps to add more voice recordings to the video.

Adding a soundtrack to your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **File, Edit** and choose **Audio**.
- 3 The My sounds folder will open. Choose the track you would like to add to your video and press **Select**.
- 4 The original audio recording of your video will be erased and press **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

01

02

03

04

05

06

07


08

Your photos and videos

Changing the speed of your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **File, Edit** and choose **Time scaling**.
- 3 Select one of the four speed options: **x4, x2, x1/4, x1/2**.
- 4 Choose to save over the original file or as a new file.

Adding a dimming effect

- 1 Open the video you'd like to edit, select  and select **Options**.
- 2 Select **File, Edit** and choose **Dimming effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

Multimedia

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

Images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images option menus

The options available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Sort by**, **Grid /List view** and **Memory manager** options are available for default images.

Send - Send the image to a friend.

Use as - Set the image to appear on your phone at certain times.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Mark/Unmark - Select multiple files.

Print - Print an image via PictBridge or Bluetooth®.

File - Change the name or view the information for the file.

Slide show - Start a slide show.

Sort by - Sort images into a specified order.

Grid view/ List view - View each image in grid or list type.

Memory manager - View the memory status.

Sending a photo

- 1 Select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.

01

02

03

04

05

06

07

08

Multimedia

- 3 Select **Send** and choose from **Message, Email, Bluetooth** or **Blog this**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Select **My stuff** then **My Images**.
- 2 Select the image and touch **Options**.
- 3 Select **Use as** and choose from:
 - Wallpaper** - Set a wallpaper for the standby screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Organising your images

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Sort by**.
- 3 Choose from **Date, Type** or **Name**.

Deleting an image

- 1 Select **My stuff**, then **My images**.
- 2 Select the image you want to delete and choose **Options**.
- 3 Select **Delete**, then **Yes** to confirm.

TIP! To quickly delete any file in My files, highlight it with the cursor and press the **C** key.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Select **My stuff** then **My images**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

Editing an image

You can edit the image using the **Options** menu.

- 1 Select **Multimedia** menu.
- 2 Select **Media editor**.
- 3 Select **Image** editor and choose from several options. See page 44 for details.

Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Select **My stuff** then **My images**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image, a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.

- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Memory manager**.
- 3 Choose **Handset memory** or **My memory card**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Select **My stuff**, then **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.

01

02

03

04

05

06

07

08

Multimedia

- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and **Use as**.
- 5 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up sound** and **Shut down sound**.

Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Select **My stuff** then **My videos**.
- 2 Select a video and press **Play**.

Using options while video is paused

Select **Options** while in pause mode and choose from:

Landscape view - View the video file in full shot.

Mute/ Unmute - Switch the sound on/off.

Capture - Capture the frozen frame as a picture.

Repeat - Repeat the video file.

File info. - View brief details about the file.

Send - Send the video in a message, email or via Bluetooth.

Delete - Delete the video.

Use as - Use as a voice/video ringtone.

Sending a video clip

- 1 Select a video and press **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**, **You Tube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using a video clip as a ringtone

- 1 Select a video and select **Options**.
- 2 Select **Use as** and choose from **Voice ringtone** or **Video ringtone**.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Send - Send a video to a friend.

Use as - Set a video as your ringtone.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Mark/Unmark - Select multiple files.

File - Edit the file name and view its information.

Create new folder - Create a new folder within the My videos folder.

Sort by - Sort videos into a specific order.

Grid view/ List view - View the options menu by grid or list type.

Memory manager - View the memory status.

Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

M-Toy menu

You can enjoy six default games:

Dart, Homerun Derby, Magic Ball, Hammer, Maze and Fishing.

About - View the information for a game.

Setting - Set the sound and vibration when activating a game.

Reset data - Reset all settings.

Exit - Leave the M-Toy menu.

Playing a game

1 Select **Games** menu.

2 Select a game and touch **Launch**.

Using the games options menu

From the Games and Applications folders, the following options are available:

Create new folder - Create a folder within the games and applications menu.

Sort by - Sort the games and applications by **Date, Size** or **Name**.

Memory manager - View the memory status.

01

02

03

04


05

06

07

08

Multimedia

TIP! You can also access these games using the touch screen. Press and hold the  touch screen button on the right-hand side of the phone and touch the **M-Toy** icon.

Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

Viewing an SWF/SVG file

- 1 Select **My Stuff**, then **Flash contents**.
- 2 Select the file and press **Play**.

Using options viewing the SWF/SVG file

Select **Options** while in pause mode and choose from:

Play/Pause - Pause or resume playback.

Full screen/ Landscape view -

View your SWF/SVG in full screen or landscape view mode (this only appears if you select **Options** without pausing).

Mute/Unmute - Switch the sound on/off.

Use as wallpaper - Set the SWF/SVG file as a wallpaper.

File info. - View brief details about the file.

Documents

From the Documents menu, you can view Excel, Powerpoint, Word, text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable. See page 64 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by selecting **OK**.
- 4 The file should appear in your **Documents** or **Others** folder.

Viewing a file

- 1 Select **My stuff**, then **Documents**.
- 2 Select a document and choose **View**.

Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

To move a file from Others to Documents:

- 1 Select **My Stuff** then **Others**.
- 2 Select a file and choose **Options**.
- 3 Select **Move**.

Movie maker

The Movie maker allows you to create an image slide show combined with music.

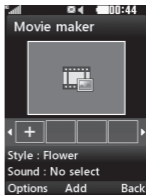

Creating a movie

- 1 Go to **Multimedia** and select **Movie maker**.
- 2 Select **+** to add an image. Choose the images you want to include then select **Done**.
- 3 Select **Style** menu to choose a movie style.
- 4 Select **Play** to see what you've created.

Music

Your LG KF750 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

01

02

03

04

05

06

07

08

Multimedia

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.




Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

Shuffle tracks - Listen to your music in a random order.

Playing a song

- 1 Select **My music**, then **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press  to pause the song.
- 4 Touch  (right) to skip to the next song.
- 5 Touch  (left) to skip to the previous song.

Using options while playing music

Select **Options** and choose from:

Minimize - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Move the Cursor to the My music folder.

Repeat - Repeat the selected track.

Shuffle - Listen to your music in a random order.

Equalizer - Set the equalizer menu.

Visualisation - Select the visual effects.

Add to playlist - Add the file to a playlist.

File info. - View brief details about the file.


Send - Send the song as a message or via Bluetooth.

Delete - Delete the song.

Use as - Use the song as one of your ringtones.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Select **My music**, then **Playlists**.
- 2 Select **Add**, enter the playlist name and press  **Save**.
- 3 The All tracks folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name and select **Done**.

To play a playlist, select it and choose **Play**.

NOTE: To add a second playlist, select **Options** then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 Select **My music**, then **Playlists**.
- 2 Select the playlist.
- 3 Select **Options**.

Add new songs – Add more songs to the playlist. Mark the ones you want and select **Done**.

File info. - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory manager - You can view the current status of memory.

Deleting a playlist

- 1 Select **My music**, then **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

Using the radio

Your LG KF750 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

01

02

03

04

05

06

07

08

Multimedia

Searching for stations

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.

To auto tune:



- 1 From **Music** select **FM radio** then **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.

TIP! You can access music using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and choose the **FM Radio** or **Music** icon. You can then scroll though and select your music files or the radio functions by touching the screen.

To manually tune:

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and choose the channel number you want to save the station to.

- 3 Enter the station frequency and touch **Select** to save.

NOTE: You can also manually tune into a station by using  (left) and  (right) displayed next to the radio frequency.

Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and touching **Options**:

Rename - Rename the channel.

Replace - Set new frequency for the selected channel.

Resetting channels

- 1 Select **FM radio**, then **Options**.
- 2 Select **Channel list**, then **Options**.

- 3** Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Listening to the radio

Select **FM radio**, then enter the channel number of the station you would like to listen to.

Using voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1** Select **Multimedia**.
- 2** Select **Voice recorder** then options and choose from:

Duration – Set the recording duration.

Choose from **MMS msg. size, 30 secs, 1 min** or **No limit**.

Quality – Select the sound quality.

Choose from **Super Fine, Fine** or **Normal**.

Memory in use - Check the current status of each memory.

Go to Voice recordings – Open the Voice recordings folder in **My sounds**.

- 3** Select **Rec.** to begin recording.
- 4** Select **Stop** to end recording.
- 5** Select **Play** in the options menu to listen to your recording.

Sending the voice recording

- 1** Once you have finished recording, select options.
- 2** Select **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

NOTE: After you have finished recording, select **Options** and choose **Play, Send, File, Delete, Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

01

02

03

04

05


06

07

08


Organiser

Adding an event to your calendar


- 1 From the standby screen, press  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** then **Add new event**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject** or **Name** and type in your note.
- 8 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

Changing your default calendar view


- 1 From the standby screen press  and choose **Organiser**. Select **Settings**.
- 2 Select **Calendar** and choose either **Month view** or **Week view**.

Adding an item to your to do list

- 1 From the standby screen press  and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.


TIP! You can edit an item by selecting it, touching **Options** and **Edit**. Confirm your amendments by selecting **Save**.

Sharing a to do item

- 1 From the standby screen press  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg**, **Email** or **Bluetooth**.

TIP! You can back up and synchronise your calendar with your computer. See PC Sync on page 64.

Adding a memo

- 1 From the standby screen press  and choose **Organiser - Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit and select **Edit**.

01

02

03

04

05



06

07

08

Tools


Setting your alarm

- 1 From the standby screen press  and choose **Tools** then **Alarms**.
- 2 Select **Options** and touch **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon-Fri, Mon-Sat, Sat-Sun, Sat-Wed, Sat-Thu, Sun-Thu** or **Except Holiday**.
- 5 Select  and **Edit** to select a sound for your alarm. To listen to sounds select the sound, and touch **Play**.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.
- 7 Finally, you can set the snooze interval at **5, 10, 20** or **30 mins, 1 hour** or **off**.
- 8 Once you have set your alarm, select **Done**.


NOTE: You can set up to 5 alarms.

The alarm will be alerted on even if the phone is switched off.


Using your calculator

- 1 From the standby screen, press  and choose **Tools**. Select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** and choose from +/-, **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.


Using the stopwatch

- 1 From the standby screen, press  and choose **Tools**. Select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Select **Stop** to stop the timer.
- 4 Select **Lap** to measure each lap time.
- 5 To restart stopwatch, select **Resume**.
- 6 Select **Reset** to return to zero.

Converting a unit

- 1 From the standby screen, press  and choose **Tools**. Select **Converter**.
- 2 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume or Velocity**.
- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

Adding a city to your world time

- 1 From the standby screen, press  and choose **Tools**. Select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

TIP! If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.

01

02

03

04

05

06


07

08

PC Sync

You can synchronise your PC with your phone to make sure all your important details and data match, and also as a backup to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the standby screen press  and choose **Connectivity**.
- 2 Select **USB connection mode** and click **OK**.
Music - Music Sync mode.
Data Service - Data Service mode.
- 3 Insert the supplied CD into your PC. Click on the **LG PC Suite Installer** which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the **LG PC Suite Installer wizard**.
- 6 Once installation is complete, the **LG PC Suite icon** will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite icon** on your desktop.
- 3 Click on **Connection Wizard** and **USB**.
- 4 Click on **Next**, then **Next** again, and **Finish**. Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

NOTE: To backup contacts saved to your USIM card, click on the SIM card folder on your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contacts**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Synchronising your music

- 1 Connect your phone to your PC.
- 2 Click on the **Music** icon.
- 3 The music files you have saved will be displayed on the screen in the Music folder.

PC Sync

NOTE: The following conditions must be met.

- Windows XP Service Pack 2 or higher.
- Windows Media Player 11 or higher.
- USB Connection mode should be active and Music Sync mode should be on.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen, press .
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Highlight **Mass storage** and press **Select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

- 6 All of your phone files will automatically be stored onto your PC hard drive.

NOTE: Your phone must be unplugged from your PC to initiate Mass Storage.

NOTE: Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the contents of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

PIN for DivX connection

Install the DivX converter which is supplied on the same CD as the PC Sync software.

Once installed select DivX from the Program Files on your PC, then DivX converter followed by Converter.

This will open the Converter application. Use the arrows in the application to change the conversion format to Mobile. If you right-click on the application box and select Preferences, you can change the location that the converted files are saved in.

Once you are ready to convert your files, simply drag and drop the files into the application. You will need then to select Convert for the process to begin. When the process is finished a “Conversion complete” pop up will be displayed. The converted file can now be transferred to your phone using the Mass Storage functionality (see page 66 for details) or uploaded using the PC Sync software (see page 64 for details).

Using TV out

Choose PAL or NTSC for connecting your KF750 to a TV.

01

02

03

04

05

06


07

08

Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.


Accessing the web

- 1 From the standby screen, press  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

Saving a page


- 1 Access your required webpage as described above.
- 2 Select **Options, Save items**, then **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

Viewing your browser history

- 1 From the standby screen press  and choose **Browser**, and then select **History**.
- 2 **Visual history** will be displayed. Select **Options** and select **List history**, to show a list of web page titles you have accessed recently.
- 3 To access one of these pages, simply select the required page and touch **Open**.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

01

02

03

04

05

06

07

08

Browser

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


Adding the Feed

You can input the feed directly yourself: **Browser** → **RSS reader** → **Options** → **Add new** or you can click the feed link by selecting the RSS icon in the webpage.

Updating the RSS reader

- 1 You can select **Update** or **Update all** options.
- 2 If you want to update it automatically, select **Update schedule**.

Changing the web browser settings

- 1 From the standby screen press  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, touch **Select**.

The web

Using your phone as a modem

Your KF750 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have LG PC Suite installed on your PC.
- 2 Connect your KF750 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF750.

NOTE: For more information on synchronising using LG PC Suite see page 64.

Using Bluetooth

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF750.
- 2 Pair your PC and KF750 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Settings**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KF750.

01

02

03

04

05

06

07

08

The web

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send.
- 2 Select Options and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.
- 4 Your KF750 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.


TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.

- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in My Stuff.

Changing your Bluetooth settings:

- 1 Press  in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:
 - My device visibility** - Choose to be **Visible**, **Visible for 1 min** or **Hidden**.
 - My device name** - Enter a name for your KF750.
 - Supported services** - Search for the profile supported by KF750. See **Using your phone as a modem** on page 71 or **Using a Bluetooth headset** on page 73.
 - My address** - Search your Bluetooth device address.

Pairing with another Bluetooth device

By pairing your KF750 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired devices, Options**, then **Add new device**.
- 3 Your KF750 will search for devices. If devices are found, **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KF750 will automatically switch to Headset profile.

01

02

03

04

05

06

07


08

Settings

Within this folder you can adapt your settings to personalise your KF750.

NOTE: For information on call settings see page 21.

Changing your screen settings

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Screen** and then choose from:
 - Screen theme** - Choose the theme for your Home Screen, start Up, Shut down the phone.
 - Menu style** - Choose the style used to display menus.
 - Dialling** - Set the display used when making a call.
 - Font** - Adjust the font.
 - Backlight** - Choose how long the backlight remains on for.
NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.
 - Image quality enhancement** - Chooesed the menu to enhance the quality of the selected image.

Handset theme - Quickly change the whole look of your screen.


Greeting message- Enter the greeting message used when the phone is switched on.

- 3 Choose **Select** to save your settings.

Personalising your profiles


You can quickly change your profile on the standby screen. Simply touch the currently active profile icon.

Using the settings menu you can personalise each profile setting.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit. You cannot edit the **Silent** profile. You can edit the Alert By option of your silent profile.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume, Message alerts** and more.

Changing your phone settings

Enjoy the freedom of adapting your KF750 so that it works in a way that suits you.

1 From the standby screen, press .

2 Select **Settings**, then **Phone**, and choose from the list below.

Auto key lock - Lock the keypad automatically in the standby screen.

Touchpad - Turn the touchpad vibration **On** or **Off**.

Touchscreen effect - Set the effect tone used when touching the screen.

Language - Change the language of for your KF750's display.

Power save - Choose to switch the power saving settings **On** or **Off**.

Information - View the technical information for your KF750.

Using Date & Time

Date & Time - Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

Changing your other settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

Network - Your KF750 connects automatically to your preferred network. To change these settings, use this menu.

Internet profiles - Set the profiles to connect to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn - Set the packet data connection.

Settings

Changing security settings

PIN code request - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

Handset lock - Set the phone lock to avoid unauthorised use. You will need a security code.

Change codes - Change the codes: PIN/ PIN2/ Security code.

Using memory manager

Your KF750 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Press  in standby screen. Select **Settings** then **Memory Manager**.

Handset Common memory - View the memory available on your KF750 for images, sounds, videos, flash, MMS, applications, java and others.

Handset reserved memory - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.



USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - choose Handset memory or External memory.

TIP! See page 12 for information on **Installing a memory card**.

Using flight mode

Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate. Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

Accessories

These accessories were supplied with KF750.

Charger



USB cable and CD

Connect and synchronise your KF750 and PC.



Battery



User Guide

Learn more about your KF750.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KF750

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C
(charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

21.Mar. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seekim @ lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KF750 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.5 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.755 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

Guidelines for safe and efficient use

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

LG MOBILE PHONE WARRANTY

Middle East & Africa



www.lgservice.com

www.lgmobile.com





Terms & Conditions

Your LG mobile phone and all accessories included in this package are under LG warranty across the countries mentioned in the back of this card for a period of 12 months from purchase date (pls. refer to list of coverage at the back), and (6 months for battery). Warranty support at LG Authorized Service Centers will be provided upon presentation of this warranty card. Warranty covers only those models that are sold in that particular market.

This Warranty is not applicable if this telephone has:

1. Been mishandled, misused, willfully damaged, neglected, improperly tested, liquid damaged, repaired, altered or defaced in any way.
2. A defect arising as a result of any failure to follow instructions either in the manual or product specification.
3. A defect which has risen from the use of non LG approved accessories or ancillary items attached or in connection with the telephone.



Warranty Card

Kindly fill in all details below at the time of purchase

REFERENCE NO.:

Customer's Name:

Product/ Model:

Serial No.:

IMEI No.:

Dealer's Name:

Date of Purchase:

Invoice/ Cash memo Details:

Operator/ Distributor's Stamp



Authorized Service Centers

CIC No. 0861-545454 (LGLGLG)

Tel.No. 27-11-571-6700, Fax No. 27-11-822-5751,

Regional

Middle East

UAE	800 54
KSA	+96612112345 +96638343000
Qatar	+9744315865
Oman	+96824502866/8
Bahrain	+97317403304
Yemen	+96771503240
Iran	+982188302922
Egypt	19960
Syria	+963113347720/1
Jordan	+96265510137

Africa

Morocco	081005454
Tunisia	+21670838424
Libya	+218213405695
Algeria	+21321917494
Kenya	+25420252240/1
Nigeria	+23418935454
South Africa	0861545454

Others

Turkey	+902165450404
Pakistan	+92214388271/74



Customer Registration Form

Kindly fill in all details below and fax/ email to your Local Customer Care.

REFERENCE NO:
Date of Purchase:.....
Customer's Name:.....
Tel: Fax:
Email:.....
Address:
Product/ Model:.....
Serial No.:
IMEI No.:
Date of Purchase:.....
Distributor's Name:.....
Dealer's Name:



Stamp

To,

LG Electronics S.A (Pty) Ltd.

181, Barbara Road, Elandsfontein, Johannesburg,

P.O.Box 473, Isando 1600, South Africa.



XPERIENCE

WINNING CELLULAR SERVICE

@ MONTECASINO

Thank you for buying a LG Mobile phone



Visit our LG Mobile Care Lounge

where you and your mobile phone receive five star

Service

Quality

Value

Advice



Visit the LG Xperience Store for the latest in mobile technology, content and accessories. Qualified and experienced staff are on call for all your mobile needs.

Find us at Monte Casino, opposite Nu Metro, Johannesburg
Call: 011 511 0184





LG Mobile Phone Service Centers in Middle East & Africa



❑ Service for LG Mobile Phone is available in the following countries

(List includes Only the Main Service Centers. Other area's customers can contact the Head-quarter of their countries for further information)

Middle East Countries

❑ 14 Countries

UAE
Saudi Arabia
Qatar
Oman
Kuwait
Bahrain
Yemen
Iran
Iraq
Syria
Lebanon
Jordan
Palestine
Egypt

Africa Countries

❑ 7 Countries

Morocco
Tunisia
Libya
Algeria
Kenya
Nigeria
South Africa

Other Countries

❑ 3 Countries

Turkey
Pakistan
Georgia

Lifes

Good

Middle East Countries

- | | |
|---------------------------------------|------------------------------------|
| UAE <input type="checkbox"/> | Iran <input type="checkbox"/> |
| Saudi Arabia <input type="checkbox"/> | Iraq <input type="checkbox"/> |
| Qatar <input type="checkbox"/> | Syria <input type="checkbox"/> |
| Oman <input type="checkbox"/> | Lebanon <input type="checkbox"/> |
| Kuwait <input type="checkbox"/> | Jordan <input type="checkbox"/> |
| Bahrain <input type="checkbox"/> | Palestine <input type="checkbox"/> |
| Yemen <input type="checkbox"/> | Egypt <input type="checkbox"/> |

UAE

Headquarter

- Agent Name : Jumbo Electronics Co. Ltd.
Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
Fax No. : +97143340821
Web Site : <http://www.jumbocorp.com>
Email : Roby.George@jumbo.ae

Service Centers

Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Aj Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sarjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Rajairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
As Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881

UAE

Headquarter

- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
- ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
- ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97142669964
- ❑ Web Site : www.alsa-g.com
- ❑ Email : helpdesk@alsa-g.com

Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

UAE

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P. O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : atcc@axiomtelecom.com

Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

SAUDI ARABIA

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No. : 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : ksasupport@axiomtelecom.com

Service Centers

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575

SAUDI ARABIA

Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+966121112345	+96612112311



SAUDI ARABIA

Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : ashraf.hassan@itsalat.com, headoffice@itsalat.com

Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055

SAUDI ARABIA

Headquarter

- ❑ Agent Name : LINGO-CARE
- ❑ Address : SARA CELLUCOM CO. LTD., CELLUCOM-MALL, TAHLIA STREET, OPP BUGSHAN HOSPITAL, NEAR DHL, JEDDAH - 21429 – KSA, P.O Box # 36832
- ❑ Telephone No. : +966 2 6689275
- ❑ Mobile No. : +966-542472709 (Kabir), +966- 554700308 (Saqib)
- ❑ Fax No. : +966 2 6689276
- ❑ Web Site/Email : kabir.ahmed@sab-holding.com, mohammad.saqib@lingo-retail.com

Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Tahlia Street, Opp Bugshan hospital	+966 2 6689275	+966 2 6689276
Riyadh	Mursalat	+966 1 4536784	+966 1 4549548

QATAR

Headquarter

- ❑ Agent Name : Video Home & Electronics Center
- ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
- ❑ Telephone No. : +9744315865
- ❑ Fax No. : +9744437876
- ❑ Web Site : <http://www.jumboqatar.com>
- ❑ Email : alexjacob@jumboqatar.com

Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876




OMAN

Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : sudhirk@otegroup.com

Service Centers

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942

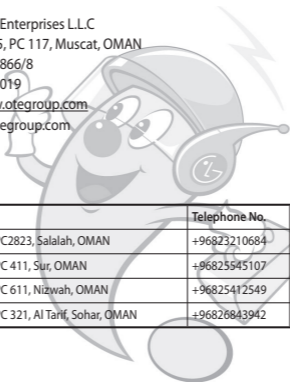

OMAN

Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234



OMAN

Headquarter

- ❑ Agent Name : Areej Business Systems Co.L.L.C.
- ❑ Address : P.O Box:1714,Ruwi- Postal Code-112, Sultanate of Oman
- ❑ Telephone No. : 968 24492333
- ❑ Fax No. : 968 24492669
- ❑ Web Site/Email : omzest.com/areej2@omantel.net.om

Service Centers

Area	Address	Telephone No.	Fax No.
Al-Ghobra	Areej Business Systems Co.L.L.C. P.O Box:1714,Ruwi- Postal Code-112,Sultanate of Oman	968 24494747	968 24494747




KUWAIT

Headquarter

- ❑ Agent Name : Cellucom Kuwait WLL
- ❑ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ❑ Telephone No. : +9655710801
- ❑ Fax No. : +9655710803
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

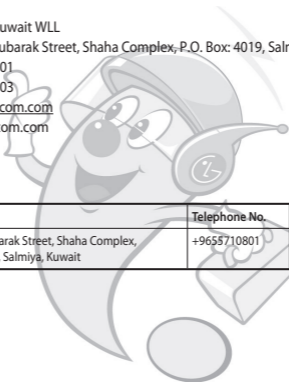

KUWAIT

Headquarter

- ❑ Agent Name : Al Ghanim Sons Group.
- ❑ Address : First Floor,Gharabally Building, Dhajeej Area, South Farwaniya, SAFAT-13097, Kuwait.
- ❑ Telephone No. : + 965 4331709
- ❑ Fax No. : + 965 4344790
- ❑ Email : snair@alghanim-sons.com

Service Centers

Area	Address	Telephone No.	Fax No.
South Farwaniya	First Floor,Gharabally Building,Dhajeej Area,South Farwaniya , SAFAT-13097,Kuwait	+ 965 4331709	+ 965 4344790

BAHRAIN

Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046



BAHRAIN

Headquarter

- ❑ Agent Name : Fono
- ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
- ❑ Telephone No. : 00973 17312001
- ❑ Fax No. : 00973 17310884
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : fcc@almoayyedintl.com.bh

Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973 17312001	00973 17310884

BAHRAIN

Headquarter

- ❑ Agent Name : FAKHRO ELECTRONICS
- ❑ Address : P.O. BOX 39, EXHIBITIONS AVENUE, MANAMA, KINGDOM OF BAHRAIN
- ❑ Telephone No. : +973 17299992
- ❑ Fax No. : +973 17290003
- ❑ Web Site/Email : www.fakhro.com / fakhroel@batelco.com.bh

Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Manama	GOSI Complex Exhibitions Avenue	+973 17311099	+973 17311699




YEMEN

Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st. Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

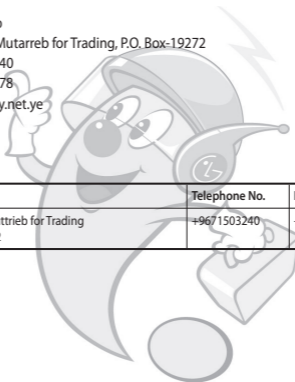

IRAN

Headquarter

- ❑ Agent Name : Persian Telecom (Al Raheel General Trading Co., L.L.C.)
- ❑ Address : First floor, No.140, Ghaem Magham St., Tehran, IRAN
- ❑ Telephone No. : +982188302922/+982188827100
- ❑ Fax No. : +982188302921
- ❑ Web Site : <http://www.persiantelecomclub.com>
- ❑ Email : bahrami@persiantelecom.ir

Service Centers

Area	Address	Telephone No.	Fax No.
Tehran	First floor, No.140, Ghaem Magham St., Tehran, IRAN	+982188302922 +982188827100	+982188302921
Tehran	No.69&70, Ground Floor, Aladdin Trade complex, Jomhori Ave, Tehran, IRAN	+982166722675 +982166724173	+982166724173

IRAQ

Headquarter

- ❑ Agent Name : Al-Seera Communication
- ❑ Address : Baghdad, Al.mansoor, 14Ramdan
- ❑ Telephone No. : +964-1-5438615, +964-77-065-07773
- ❑ Fax No. :
- ❑ Email : hawler1974@yahoo.com, ammar_sadik@hotmail.com

Service Centers

Area	Address	Telephone No.	Fax No.
Arbeil	Kotra Al.Saleam	+964-75-045-68308	



IRAQ

Headquarter

- ❑ Agent Name : Maraj Al-Bahrain for communication
- ❑ Address : Iraq Baghdad, Karada Dakhil Abo Eklam Alfarag Building
- ❑ Telephone No. : +964-79-019-06000
- ❑ Fax No. : +964-1-719-7327
- ❑ Email : ricoh5131@yahoo.com / www.marajalbahrain.com

Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	Al-Karrada Dakhil abo eklam, AlFarag Building	+964-78-072-00600	+964-17-197-327
Basra	Al-Jazaeer, 14th July St.	+964-78-102-10333/ +964-78-102-10444	

SYRIA

Headquarter

- ❑ Agent Name : Sons of Zouheir Ghreiwaty Group
- ❑ Address : Damascus - Abu Romaneh Shakib Arslan Str.
- ❑ Telephone No. : +963-11-333-3825
- ❑ Fax No. : +963-11-333-3529
- ❑ Email : ecc@net.sy

Service Centers



Area	Address	Telephone No.	Fax No.
Damascus	LG Showroom - Al Malki	+963-11-333-3825	+963-11-333-3529
Damascus	LG Showroom - Mokhayam al Yarmouk	+963-11-636-3303	+963-11-636-3303
Aleppo	Aljmelia Square beside alseddeik Mosque	+963-21-228-4002	+963-21-228-4002


LEBANON

Headquarter

- ❑ Agent Name : CLASS
- ❑ Address : Mar Elias Street -Jishi Center
- ❑ Telephone No. : +961-1-704-888
- ❑ Fax No. : +961-1-704-391
- ❑ Email : class@dm.net.lb

Service Centers

Area	Address	Telephone No.	Fax No.
Beirut	Mar Elias Street -Jishi Center	+961-1-704-888	+961-1-704-391

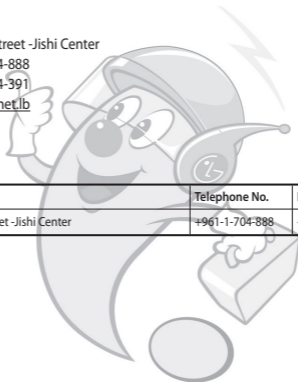


LEBANON

Headquarter

- ❑ Agent Name : Digital Technologies SARL
- ❑ Address : Bauchrieh 306 Jdeideh Sin El Fil Blvd.
- ❑ Telephone No. : +961-1-236-110
- ❑ Fax No. : +961-1-254-723
- ❑ Email : lgmobile@digitaltechnologies.com.lb

Service Centers

Area	Address	Telephone No.	Fax No.
Bauchrieh	Fawara Street, Santa Maria Bldg.	+961-1-246-666	+961-1-874-401

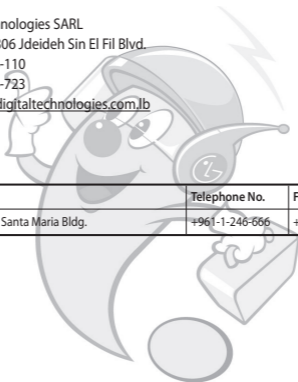


JORDAN

Headquarter

- ❑ Agent Name : 7GLOBAL for Communication Equipments
- ❑ Address : Amman, Al-Gardens Street, Al Asad Complex Building No. 37
- ❑ Telephone No. : +962-6-556-3008 (LG Customer Information Center : 0800-22-154)
- ❑ Fax No. : +962-6-556-3009
- ❑ Email : Hani@7global.info

Service Centers

Area	Address	Telephone No.	Fax No.
Amman	Al-Gardens Street, Al Asad Complex Building No. 37	+962-6-551-8883, +962-79-915-1515	+962-6-556-3009

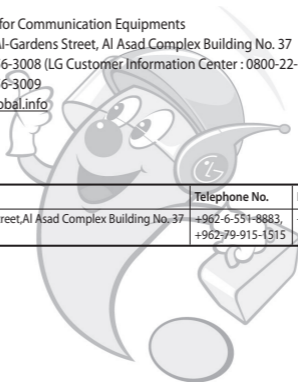


PALESTINE

Headquarter

- ❑ Agent Name : Bcell
- ❑ Address : P.O.Box 3917, Ramallah
- ❑ Telephone No. : +970-2-298-1108
- ❑ Fax No. : +970-2-296-4167
- ❑ Email : rtantawi@bci.ps, ttaha@bci.ps

Service Centers

Area	Address	Telephone No.	Fax No.
Ramallah	P.O.Box 3917, Ramallah	+970-2-298-8108	+970-2-296-4167

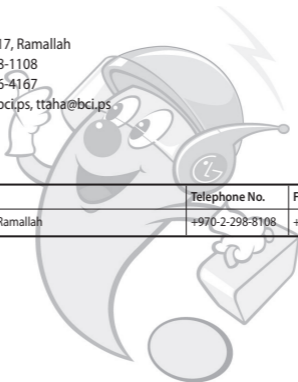


EGYPT

Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : salahezz@delta-group.org

Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

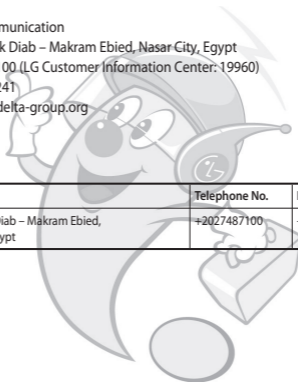

EGYPT

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : menon@axiomtelecom.com

Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXANDRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	

Life's
Good



Africa Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

MOROCCO

Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+21237776506	+21237671040


TUNISIA

Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Charguia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Charguia, Tunis, Tunisia	+21670838424	+21670838422

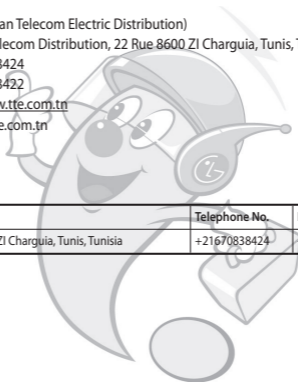


LIBYA

Headquarter

- ❑ Agent Name : AL MASAR the Import of Electronic Devices
- ❑ Address : Cedy Elmasri, Almadar Street Tripoli Libya
- ❑ Telephone No. : 00218-21-3600167
- ❑ Fax No. : 00218-21-3600167
- ❑ Web Site/Email : www.massar.com.ly / Info@massar.com.ly

Service Centers

Area	Address	Telephone No.	Fax No.
Tripol	Cedy Elmasri, Almadar Street Tripoli Libya	00218-21-3600167	00218-21-3600167

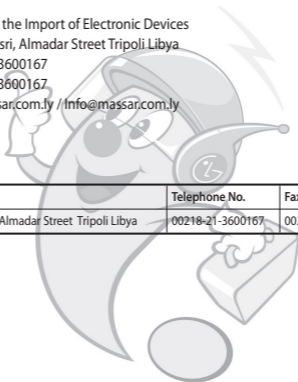

ALGERIA

Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : garantie@algerie-k.com

Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505




KENYA

Headquarter

- ☐ Agent Name : Skytel Limited
- ☐ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ☐ Telephone No. : +25420252240/1
- ☐ Fax No. : +25420252240
- ☐ Email : alex.kabuagi@xcom.co.ke

Service Centers

Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240

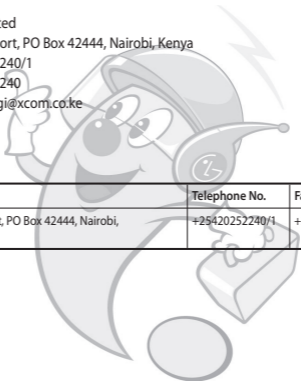

NIGERIA

Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos. Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : cland@lge.com

Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos. Nigeria	+23418927777	+23417936510



SOUTH AFRICA

Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley,Midrand,SA.
- ❑ Telephone No. : +27115464039 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27115464331
- ❑ Web Site : <http://www.cellucity.co.za>
- ❑ Email : craig.gower@vodacom.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley Midrand, SA	+27115464039	+27115464331

SOUTH AFRICA

Headquarter

- ❑ Agent Name : Combase
- ❑ Address : 44 Old Pretoria Road, Midrand, SA.
- ❑ Telephone No. : +27116558000 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +2711315 8387
- ❑ Email : deanw@combase.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Capetown	64-70 Edward Street, Belville, Capetown..	+27219102940	+27219103011
Durban	379 Umbilo Road, Durban	+27312060877	+27312057655
Port Elizabeth	Shop 1, Salgar House, 18 Newton Street, Newton Park.	+27413632989	+27413631787
Nelspruit	Shop G14, Nelcity Building, Cnr Paul Kruger & Louis Trichard Rds, Nelspruit	+27137554185	+27137554183
Bloemfontein	Shop 16, College Square, Nelson Mandela Road, Bloemfontein, 9300	+27514441688	+27514441922
Midrand	44 Old Pretoria Road, Midrand, SA	+27116558000	+27113158387


SOUTH AFRICA

Headquarter

- ❑ Agent Name : IXIA Trading 348 PTY Ltd
- ❑ Address : Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa
- ❑ Telephone No. : +27118057863 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27866339459
- ❑ Email : david@ixia.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa	+27118057863	+27866339459

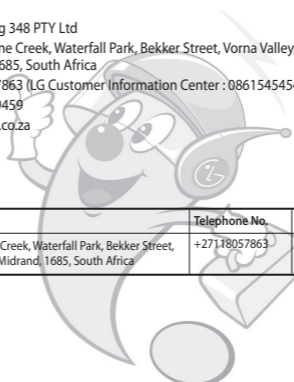

Life's
Good



Other Countries

- Turkey
- Pakistan
- Georgia

TURKEY

Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul
- ❑ Telephone No. : +902165450404
- ❑ Fax No. : +902165445656
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : sinan.kus@teleservice.com

Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul	+902165450404	+902165445656
Ankara	Mithatpasa cad. No:31 A TR-06420 Kızılay/Ankara	+903124301222	+903124353365
Diyarbakır	İnönü Cad. 4/C Büyük Hotel Altı Da_kapı TR-21090 Diyarbakır	+904122287785	+904122288088
Izmi	Gazi Bulvarı No:90/B TR-35230 Çankaya/Izmir	+902324458600	+902324457775
Teleservice			
KVK			
SNG			
Vadox			

PAKISTAN

Headquarter

- ❑ Agent Name : New Allied Mobile Communication
- ❑ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
- ❑ Telephone No. : +92214388271/74
- ❑ Fax No. : +92214388278
- ❑ Email : zpalg@yahoo.com

Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234


GEORGIA

Headquarter

- ❑ Agent Name : AMERITECH L.L.C (Aray Georgia)
- ❑ Address : Tbilisi, Mukhadze st. 24
- ❑ Telephone No. : +995 32 22 37 24
- ❑ Fax No. : +995 32 22 37 24
- ❑ Email : www.araytomorrow.ge / ameritech@ameritech.ge

Service Centers

Area	Address	Telephone No.	Fax No.
GEORGIA	13/15 I.Khvichia str, Tbilisi, 0162.Georgia	+99532 313252	+99532 223724

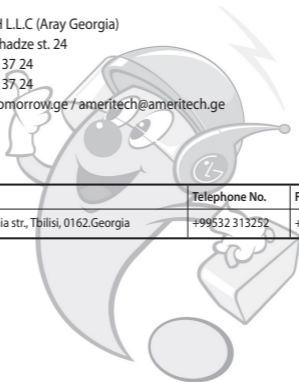



Visit us on

<http://www.lgservice.com>

<http://www.lgmobile.com>

