



GM750 使用手冊

LG ELECTRONICS INC.

# GM750 使用手冊

繁體中文  
ENGLISH



CE 0168 !

[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0355816 (1.0) G

Bluetooth QD ID B015842



此手冊中的部份內容可能會因  
手機軟件或服務供應商而有所  
不同。

本手機採用觸控式鍵盤，不適於  
失明及殘障人士使用。



## GM750 使用手冊



恭喜您購買了 LG 先進輕巧的 GM750 手機，  
本手機設計採用最新的數碼流動通訊科技。

# 內容

安全及有效使用準則 .....	8	通話中選項 .....	41
了解您的手機 .....	14	視訊通話中選項 .....	42
手機背面 .....	16	調整通話音量 .....	43
安裝智能咭和電池 .....	17	快速撥號 .....	43
記憶咭 .....	20	檢視通話記錄 .....	43
重設裝置 .....	21	LG 連絡人 .....	44
使用觸控屏幕 .....	23	搜尋連絡人 .....	44
使用光學搖桿 .....	25	新增連絡人 .....	44
桌面 .....	26	建立群組 .....	44
選擇桌面 .....	26	使用連絡人選項 .....	45
自訂 LG Smart Home .....	26	檢視資訊 .....	45
自訂 Windows Mobile 預設 屏幕 .....	28	複製連絡人 .....	45
快捷鍵 .....	29	訊息 .....	46
檢視狀態列 .....	30	訊息 .....	46
使用多項工作功能 .....	31	發送訊息 .....	46
使用「開始」按鈕 .....	32	訊息資料夾 .....	46
程式 .....	32	變更文字訊息設定 .....	47
設定 .....	35	變更多媒體訊息設定 .....	47
通話功能 .....	40	設定電子郵件 .....	48
撥打電話或視像通話 .....	40	透過 Microsoft® Exchange Server 設定 電子郵件 .....	48
從連絡人中撥打電話 .....	40	在「其他」上設定電郵 .....	49
接聽來電和拒接來電 .....	40		

41	發送郵件 / 編寫新郵件 .....	49	使用內視像攝錄機 .....	60
42	發送電郵 / 回覆電郵 .....	50	觀看已儲存影片 .....	60
43	變更電郵設定 .....	50	多媒體 .....	61
43	Messenger .....	50	圖片 .....	61
43	相機 .....	51	我的圖像選項功能表 .....	61
44	快速拍照 .....	51	發送相片 .....	61
44	拍照後 .....	51	使用相片 .....	61
44	了解取景器 .....	52	正在移動或複製圖片 .....	62
44	調整曝光 .....	53	建立投影片播放 .....	62
45	使用進階設定 .....	53	檢查記憶體狀態 .....	62
45	變更圖像解像度 .....	54	我的音樂 .....	62
45	選擇色彩效果 .....	54	使用聲音 .....	62
46	使用內相機 .....	55	影片 .....	63
46	檢視已儲存相片 .....	55	觀看影片 .....	63
46	視像攝錄器 .....	56	發送錄像片段 .....	63
46	快速製作影片 .....	56	遊戲和應用程式 .....	63
47	拍攝影片後 .....	56	玩遊戲 .....	63
47	了解取景器 .....	57	Mobile Java .....	63
48	調整曝光 .....	58	音樂 .....	64
48	使用進階設定 .....	58	正在播放曲目 .....	64
48	變更影片解像度 .....	59	建立播放清單 .....	64
49	選擇色彩效果 .....	59	播放播放清單 .....	65

# 內容

刪除播放清單.....	65	網絡功能.....	81
使用收音機.....	65	瀏覽器.....	81
搜尋電台.....	65	存取網絡.....	81
收聽收音機.....	66	新增並存取書籤.....	81
記事簿.....	67	使用瀏覽器選項功能表.....	81
新增事件至行事曆.....	67	Streaming Player.....	82
變更預設行事曆檢視.....	67	設定.....	86
新增項目至待辦事項清單.....	67	個人化情景模式.....	86
設定鬧鐘.....	68	變更您的顯示設定.....	86
使用 Office Mobile.....	68	變更手機設定.....	86
使用計算機.....	71	使用飛航模式.....	88
使用檔案總管.....	71	變更日期和時間.....	88
Mobile Zip.....	71	網際網路共用.....	89
Adobe Reader LE.....	74	GPS 設定.....	89
ActiveSync.....	75	藍芽.....	90
設定 Windows Vista™.....	76	開啓藍芽.....	90
在 Windows Mobile Device Center		同其他藍芽裝置配對.....	90
中設定同步.....	76	使用藍芽收發檔案.....	90
同步資訊.....	77	變更您的藍芽設定.....	91
透過藍芽同步.....	79	Wi-Fi.....	92
同步音樂、視像和圖片.....	80	開啓 Wi-Fi.....	92
		設定 Wi-Fi.....	92
		無線網絡設定.....	93
		設定 Wi-Fi 連接設定.....	93

81  
81  
81  
81  
81  
82  
86  
86  
86  
86  
88  
88  
89  
89  
90  
90  
90  
91  
92  
92  
92  
93  
93

DUN.....	95
軟件升級.....	97
配件.....	98
網絡服務.....	99
技術數據.....	99
疑難排解.....	101

## 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

### 射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本手機型號 GM750 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量子度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.16 W/kg (10 克)，攜帶於身上時則為 1.12 W/kg (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

## 產品護理及維修

### 警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
  - 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
  - 裝置需遠離發熱來源，如散熱器或烹調器具。
  - 請勿摔落手機。
  - 請勿讓此裝置遭機械震動或電擊。
  - 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
  - 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
  - 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
  - 切勿在柔軟家具上為手機充電。
  - 手機應在通風良好的環境中充電。
  - 請勿讓此裝置接觸過多煙或塵埃。
  - 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
  - 請勿以尖銳物件敲打熒幕，否則可能會對手機造成損毀。
  - 請勿將手機暴露於液體、濕氣或潮濕環境中

## 安全及有效使用準則

- 請小心使用配件，如耳機。如非必要，請勿觸及天線。
- 切勿在高濕度（如泳池、溫室、日光浴室）或熱帶環境中使用手機或配件，這可能會對手機造成損壞和使保用失效。

### 有效手機操作

#### 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

### 道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

## 玻璃部件

手機的部分部件採用玻璃製成。若手機墜落至堅固表面或受到硬物碰撞，玻璃會破碎。若玻璃破碎，則切勿觸碰或企圖移除玻璃。應停止使用手機，直到經由授權服務供應商更換玻璃才能再次使用。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輪或放置易燃氣體、液體或爆炸物。

# 安全及有效使用準則

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

## 電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。

- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

## 了解您的手機

聽筒

感應器

對內鏡頭

 
結束鍵

- 拒接來電。
- 按一下返回桌面。

光學搖桿

通話鍵

撥打電話號碼及接聽來電。

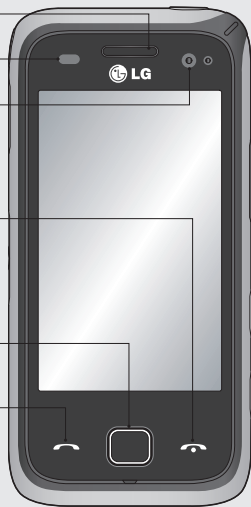

**⚠ 警告：**若將較重物體置於手機上或坐在手機上會損壞手機 LED 屏幕和觸控屏幕的功能。切勿在 LCD 的感應器上貼上保護貼，這樣可能妨礙感應器正常工作。

充電器、USB 線、  
耳機插孔

提示：連接  
USB 線之前，  
請先開機並確  
保連接到網  
絡。

音量鍵

- 屏幕處於備用狀態時：系統提示音與鈴聲音量。
- 通話中：聽筒音量。
- 播放曲目時：控制曲目音量。

電源/鎖定鍵

- 長按開機/關機。
- 短按鎖定屏幕。

記憶咭插槽

多項工作鍵

- 轉至多項工作功能表。


相機鍵

- 按相機鍵，直接轉至相機預覽。

## 開機時間

 GM750 的首次啟動時間大約為 150 秒。請將首次開機時間計算在內。購買後首次開機時，手機將進行首次啟動。手機首次啟動時，大約需要 150 秒鐘的時間進行檔案系統初始化。之後，開機時間將縮短到 50 秒左右。

## 手機背面

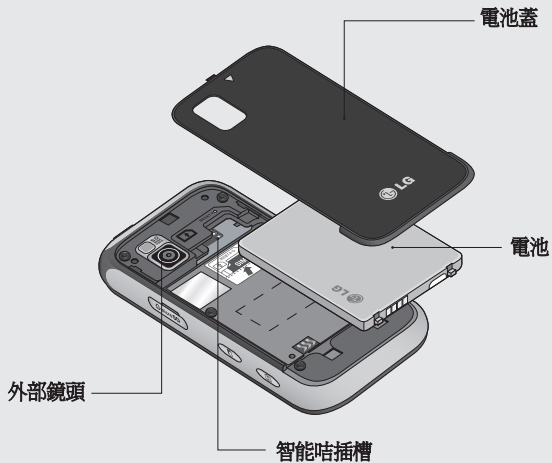

# 安裝智能咭和電池

 
## 1 取下電池蓋

向下滑動電池蓋並取下。




## 2 取下電池

抬起電池的邊緣，將其從電池格中取出。

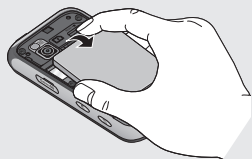

## 3 安裝智能咭

 將智能咭放入智能咭插槽。請確保智能咭上的金色接觸區面向下方。

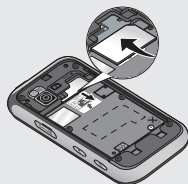

**⚠ 警告：**手機開機時，不要取下電池，因為這樣會損壞手機。

# 安裝智能啱和電池

## 4 安裝電池

首先，將電池頂部插入電池格邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入到位。



## 5 為手機充電

打開 GM750 手機側面的充電器插槽蓋。插入充電器並將充電器插頭插入電源插座。關閉裝置後重新為手機充電時，手機的 LED 燈會呈紅色亮起。

手機充滿電時，LED 燈呈綠色亮起。

電池完全放電之後，不可進行開機。可能需要 5 至 10 分鐘時間才能恢復至開機所需的電量狀態。

若您在充電模式下按住電源按鈕手機將開啓。

如果插入外置充電器，將顯示充電中動畫，LCD 背光燈將熄滅。

在 LCD 背光燈熄滅時按電源鍵，LCD 背光燈將再次亮啓並顯示充電中動畫。

如果電池電力不足，將顯示電池電力不足圖像，並提示使用者延長充電時間。

**注意：**首次充電時必須確保手機充滿電，以提高電池壽命。

**警告：**請勿將充電器連接至沒有電池的手機。充電之前，必須檢查是否已插入電池。

**警告：**充電時，請不要取下電池或智能咭。

**警告：**若使用類型不當的電池，則有發生爆炸的危險。請根據製造商的指示處理廢棄電池。

**警告：**如遇上雷暴天氣，請從電源和手機上拔除充電器，以防觸電或失火。

**警告：**請勿讓任何尖銳物與電池發生接觸。否則會導致火災風險。



## 記憶咭

### 安裝記憶咭

使用記憶咭，擴展手機的記憶體空間。

**注意：**記憶咭是選購配件。

將記憶咭插入插槽，直到卡緊為止。請確保金色接觸區面向下方。



**⚠警告：**請將記憶咭完全插入插槽，否則會導致損壞。

**⚠警告：**手機處於開啓狀態時，請不要插入或取出記憶咭，否則會損壞記憶咭。

 
## 重設裝置

在某些情況下，您可能需要重設裝置。標準(或軟)裝置重設會清除所有的活動程式記憶體並關閉所有活動程式。當裝置的執行速度變慢，或某個程式執行錯誤時，此操作將十分有效。安裝完部份程式後，亦需要軟重設。如果在執行程式時執行軟重設，則尚未儲存的工作將會丟失。

您亦可執行硬重設(亦稱為完全重設)。僅當標準重設無法解決系統問題時，需要執行硬重設。硬重設後，裝置將還原至其預設設定，即首次購買手機和開啓手機時系統所處的狀態。在裝置上安裝的任何程式、輸入的任何資料和自訂的任何設定將會丟失。

### 執行軟重設

找到軟重設鍵。

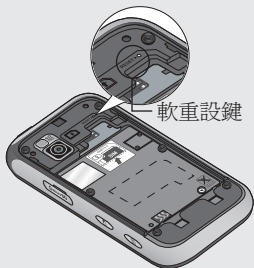

使用觸控筆按住重設鍵並稍等片刻。裝置會自動重啓並顯示桌面。

## 重設裝置

### 執行硬重設

僅當所有其他故障排除選項均不起作用時，才可執行硬重設。硬重設之後，裝置將還原至其預設設定，即首次購買手機和開啓手機時系統所處的狀態。在裝置上安裝的任何程式、輸入的任何資料和自訂的任何設定將會丟失。

- 1 開啓裝置。
- 2 點按**開始** > **設定** > **系統**標籤 > **清除儲存**。
- 3 輸入密碼 1234 兩次。
- 4 按**進入**。
- 5 選擇是否刪除內置記憶體或外置記憶體（SD 咭）以重設。
- 6 按「變更密碼」可變更您的密碼。

另一種方法是透過硬鍵序列對變更密碼。

- 1 關閉裝置。
- 2 依次按住下列硬鍵。



按住這些鍵，直至 LCD 屏幕開啓。

- 3 成功完成硬鍵重設並開機後，將出現校準屏幕

# 使用觸控屏幕

## 觸控屏幕提示

桌面亦是熟悉使用觸控屏幕的最佳位置。

要選擇某個項目，請點按圖示中央。

- 點按觸控屏幕時不需要重按，只需要輕輕按一下即可。
- 使用指尖點按所需的選項。小心不要按任何其他鍵。
- 當屏幕燈熄滅之後，按一下電源鍵以還原桌面。
- 未使用 GM750 時，會返回到鎖定屏幕。

## 校準裝置

校準裝置屏幕操作涉及到十字形在屏幕上移動時，使用觸控筆點按十字形的中心。此流程可確保使用觸控筆點按屏幕時，點按的項目即會啟用。

如果裝置無法準確回應屏幕點按，請遵循以下步驟重新校準。

- 1 點按**開始** > **設定** > **系統標籤** > **螢幕**。
- 2 在**校準**標籤上，點按**校準螢幕**，按照屏幕說明進行操作。
- 3 完成校準之後，會再次顯示對齊屏幕。點按右上角的**OK**鍵。

# 使用觸控屏幕

## 控制觸控屏幕

GM750 觸控屏幕上的控制會根據執行的任務動態變化。

## 開啓應用程式

要開啓任何應用程式，只需點按此應用程式的圖示。



## 捲動

 
左右拖動即可捲動。  
在一些屏幕（例如網頁）上，您還可以上下捲動。



# 使用光學搖桿

## 選擇光學搖桿

- 1 點按**開始** > **設定** > **系統標籤** > **光學搖桿**。
- 2 如果想要使用光學搖桿作為觸控板對屏幕滑鼠指標進行控制，請選擇**滑鼠模式**。點按右上角的**OK** 鍵。

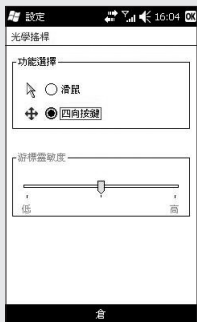

**注意：**四向按鍵功能取決於手指移動速度。

## 如何使用光學搖桿

- 1 將手指放在光學搖桿感應器上並自由移動。屏幕滑鼠指標將隨手指移動一起移動。移動滑鼠指標時，無需按下控制桿。
- 2 將滑鼠指標置於您想要執行的圖示上，然後按（按一下）控制桿。所選的應用程式將會啟動。

 
# 桌面

您可以透過此屏幕存取各種功能表選項、撥打電話、檢視手機狀態及更多內容。

## 選擇桌面

- 1 點按**開始 > 設定 > 個人標籤 > 桌面**。
- 2 選擇裝置桌面的佈局。如果選擇 **LG Smart Home**，將獲得一個五向桌面。如果選擇 **Windows Mobile 預設**，則可使用 Windows Mobile 今日屏幕。

## 自訂 LG Smart Home

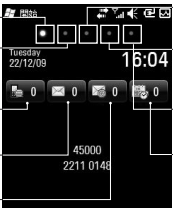- 
- 1 LG Smart Home
  - 2 Widget 桌面
  - 3 多媒體桌面
  - 4 最愛聯絡人桌面
  - 5 捷徑桌面
  - 6 未接來電
  - 7 訊息
  - 8 電郵
  - 9 行事曆
  - 10 簡便設定

## 進入 GM750

- 用戶界面基於五種類型的桌面。要在不同桌面之間切換，只需在顯示屏上從左到右或從右到左快速滑動。

## Widget 桌面



Widget 桌面顯示您最愛的 widget。如果按住某個圖示則會轉至編輯功能表，其中尚未顯示於屏幕上的所有可用 widget 將顯示於屏幕底部列表中。若要在這些 widget 之間捲動，請點按 widget 列。

## 多媒體桌面



多媒體桌面可在屏幕右側顯示使用者最愛的圖片，在屏幕左側顯示最愛的音樂。

## 最愛聯絡人桌面



最愛聯絡人以捲動或清單檢視顯示您常用的聯絡人。

## 捷徑桌面



在捷徑桌面中，您可以查看常用的捷徑圖示。

# 桌面

## 自訂 Windows Mobile 預設 屏幕



點按**開始** > **設定** > **Today** > **項目**  
**標籤**。

- 1 選擇要顯示於「Today」屏幕上的項目。
- 2 要變更其位置，請點按**上移**或**下移**。透過點按**選項**，您可自訂「行事曆」和「工作」的顯示選項。

- 3 選中**Today**畫面逾時，然後從下拉清單中選擇小時數。如果超過指定時間後仍未使用手機，則屏幕會切換到「Today」屏幕。
- 4 點按**開始** > **設定** > **Today 外觀** 標籤。
- 5 您可為背景選擇所需的主题。
- 6 如果使用自己的背景圖片，請點按**使用此圖片作為背景**。點按**瀏覽**查找所需的檔案。

### LG Smart Home



LG Smart Home 顯示未接來電清單、未讀訊息、電郵和最近約會、工作以及鬧鐘。您可點按屏幕上的區域，開啓相關程式。

## 快捷鍵

LG 智能桌面上的快捷鍵為您存取最常用的功能提供簡單的單觸式操作。

---


### 圖示 說明

---



點按以存取**電郵**功能表。您可檢查已接收的郵件並建立新郵件。



點按開啓**連絡人**。搜尋要撥打的電話號碼：點按新增連絡人旁邊的  以輸入聯絡人姓名。您亦可以新增連絡人或編輯現有連絡人。



點按以存取**訊息**功能表。您可從此處建立新訊息。



點按以存取 Internet Explorer。



點按以開啓**主功能表**，此功能表分為四個子功能表。



點按以存取 LG App Store。



點按以直接存取「**鬧鐘**」功能表。



點按以開啓**行事曆**，查看日程表。



點按以顯示**觸控撥號盤**，以撥打電話。



點按以直接進入「**音樂**」功能表。



點按以直接打開「**檔案總管**」

# 桌面



## 檢視狀態列

狀態列使用不同的圖式顯示各種狀況，例如訊號強度、新訊息和電池壽命以及是否啓用藍芽或 GPRS。

下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	藍芽免提連接已建立
	藍芽免提頻道已開啓
	藍芽高質量聲音頻道已開啓
	指示電池剩餘電量
	指明電池電量偏低
	電池充電
	開啓聲音
	關閉聲音
	震動模式
	連接已啓用
	連接已停用

圖示	說明
	同步進行中
	同步錯誤
	指明最大訊號強度
	無訊號
	指示藍芽服務
	無手機服務
	搜尋手機服務
	語音通話進行中
	通話已轉接
	通話保留
	未接來電或拒接來電
	GPRS (通用分組無線電服務) 可用
	EDGE (增強型資料傳輸的全球演進技術) 可用
	新文字訊息
	新留言
	存在更多的通知。點按圖示以檢視所有內容

圖示	說明
	未插入智能咭您不可在沒有智能咭的情況下使用網絡服務
	透過點按此指示符顯示正在執行的應用程式清單

## 使用多項工作功能


可透過 3 種方法調用多項工作功能。

- 1 按側面的「多項工作」鍵。
- 2 點按狀態列中的「多項工作」圖標。
- 3 點按**開始 > LG S-等級 > 多項工作**。

您可從此處檢視當前執行的所有應用程式並透過點按操作進行存取或退出。









## 使用「開始」按鈕

點按位於「Today」屏幕  的左上角的「開始」功能表，會顯示一個程式清單。此清單可讓您輕鬆地在各種程式之間切換。您可透過從此功能表中選擇一個程式來啟動它。

### 程式

以下是已安裝於裝置上的程式的部份圖示。

圖示	說明
	<b>LG S-等級</b> 以使用 LG 應用程式。相機、音樂與其它應用程式。
	工具可存取移動裝置上的各種工具和實用程式。 <b>Adobe Reader LE</b> ，開啓並讀取 PDF 檔案； <b>FM 收音機</b> ，收聽電臺節目； <b>Mobile Zip</b> ，檢視並擷取各種存檔格式。 <b>秒錶</b> 可記錄某個事件已進行的時間。
	<b>ActiveSync</b> 同步裝置和電腦之間的資訊。
	<b>計算機</b> 執行基本的計算功能，如加減乘除。
	<b>行事曆</b> 管理約會。
	<b>連絡人</b> 記錄電話。

圖示	說明
	<b>檔案總管</b> 組織和管理裝置上的檔案。
	<b>入門</b> 指導您在啟動裝置時熟悉一般功能。
	<b>網際網路共用</b> 將裝置用作互聯網共用裝置。
	<b>Java</b> 讓您在裝置上下載和安裝 Java 應用程式，如遊戲和應用程式。
	<b>電子郵件</b> 發送並接收電子郵件和文字訊息。
	<b>Messenger</b> 透過 Windows Live Messenger 發送和接收即時訊息。
	<b>記事</b> 建立手寫或鍵入的備註、繪圖和錄音。
	<b>圖片與視訊</b> 、組織並分類裝置上或儲存喏上「我的圖片」資料夾中的圖片和視像檔案。
	<b>搜尋裝置</b> 查找裝置上的檔案。
	<b>工作管理員查看活動</b> 工作的資訊。
	「工作」管理您的工作。






## 使用開始功能表

圖示	說明
	DUN 將手機作為數據機。
	Windows Live 存取 Windows Live。
	Windows Media 啓用裝置上的多媒體功能。
	串流播放器可播放同步媒體資料流，同時透過 IP 網絡將內容傳輸到本機。

## 設定

您可調整裝置設定，以適合工作需要。欲查看全部設定，點按**開始** > **設定**，然後點按**個人**、**系統**、**連接**以及其他設定。

### 個人功能表

圖示	說明
	<b>功能鍵</b> 為硬件按鈕指定程式或功能。
	<b>桌面</b> 選擇裝置的佈局。
	<b>輸入設定</b> 每種輸入方法的選項。
	<b>我的資訊</b> 在裝置中輸入您的個人資訊。
	<b>電話</b> 自訂手機設定（如鈴聲）、設定智能咭 PIN 碼以及更多。

# 使用開始功能表

## 系統功能表

圖示	說明
	關於您可在此處查看一些基本資訊，如 Windows Mobile® 版本和裝置使用的處理器類型。您還可指定裝置名稱。
	背光設定電池電量、外置電源、亮度、按鈕的背光設定。
	憑證查看裝置上安裝的憑證資訊。
	清除儲存僅當您需要刪除內置或外置記憶體中的所有數據和檔案並將裝置重設為出廠預設設定時，才可點按此圖示。
	客戶意見反應將客戶意見發送至 Microsoft，參與「客戶體驗改善計劃」。
	加密允許對儲存咕上的檔案進行加密。被加密的檔案僅可透過您的裝置進行讀取。
	錯誤報表當裝置發生錯誤時，啓用或停用錯誤報告功能。
	外部 GPS 設置適用的 GPS 通訊連接埠（如果需要）。當裝置上的程式需要存取 GPS 數據或將 GPS 接收器連接到裝置時，可能需要執行此操作。請參閱「說明」了解詳情。


圖示	說明
	<b>光學搖桿</b> 選擇控制桿設定。如果選擇 <b>滑鼠</b> ，將於屏幕上顯示滑鼠指標並可將控制桿用作滑鼠。如果選擇 <b>四向按鍵</b> ，則可將控制桿用作導覽鍵。移動滑鼠指標時，無需按下控制桿。
	<b>LG X 按鍵</b> 設定點按「X」按鈕時，立即結束程式。
	<b>受管理</b> 的程式您可在此處
	<b>記憶體</b> 查看裝置記憶體分配狀態和記憶咭資訊。
	<b>電源</b> 查看電池剩餘電量。您也可以設定屏幕熄滅（將裝置切換到「睡眠」模式）的逾時時間，以便節省電量。
	<b>區域設定</b> 設定地區設定，包括正數、貨幣正值和時間在裝置上的顯示格式。
	<b>移除程式</b> 移除裝置上安裝的程式。
	螢幕重新校準螢幕、變更螢幕文字大小。
	<b>系統資訊</b> 查看系統資訊和儲存資訊。
	<b>工作管理員</b> 查看活動工作的資訊。您也可以停止目前正在執行的程式。

# 使用開始功能表

## 連線功能表





圖示	說明
	<p><b>瀏覽器設定 Internet Explorer</b> 以連接其中一個接入點名稱 (APN)：</p> <ul style="list-style-type: none"><li><b>WAP APN</b>：預設 APN</li><li><b>Web APN</b>：預設 Internet APN</li></ul> <p><b>注意：</b> 此服務並不可用於所有國家/地區。有關詳情，請聯絡您的網絡商。</p>
	<p><b>連線裝置設定</b> 一種或多種數據機連接模式（如手機撥號、GPRS 等），以便裝置連接至互聯網或私人本地網絡。</p>
	<p><b>網域註冊</b> 將裝置連接到公司資源。</p>
	<p><b>GPRS 設定</b> 設定 GPRS 驗證方法，包括無、PAP 驗證以及 CHAP 驗證。</p>
	<p><b>USB 至 PC</b> 透過 USB 將手機連接到電腦。</p>
	<p><b>Wi-Fi</b> 讓您自訂 Wi-Fi 設定。</p>
	<p><b>裝置管理員</b> 讓您管理所有無線設定，例如 Wi-Fi、藍芽和電話。</p>
	<p><b>GPS 設定</b> 將 GPS 類型設定為獨立式 GPS 或輔助式 GPS。</p>

## 其他設定

圖示	說明
	<b>Bluetooth</b> 讓您自訂藍芽設定。
	<b>時鐘與鬧鐘</b> 將裝置時鐘設為當地日期和時間，或者在您外出時設為所在地的時區。您亦可將鬧鐘設定為一星期內的指定日期和時間。
	<b>鎖定</b> 設定裝置密碼。
	<b>聲音及通知</b> 為事件通知等啟用聲音，設定不同事件的通知類型。
	<b>Today</b> 自訂「Today」屏幕的外觀以及要顯示於此屏幕上的資訊。
	<b>Microsoft My Phone</b> 同步手機內容與 <a href="http://myphone.microsoft.com">http://myphone.microsoft.com</a> 上的手機帳戶

# 通話功能



## 撥打電話或視像通話

- 1 點按  開啟按鍵。
- 2 使用鍵盤輸入號碼。要刪除數字，請按清除鍵。
- 3 點按  鍵或 **語音通話** 進行通話。點按  進行視訊通話。
- 4 要結束通話，請點按  鍵。



**提示！** 若要在撥打國際電話時輸入「+」，請按住 **0+**。

**提示！** 按住電源鍵鎖定觸控屏幕，以防不小心進行撥號。

## 從連絡人中撥打電話


- 1 從桌面點按  打開**連絡人**。
- 2 在連絡人中捲動或透過點按  輸入您要與其通話的連絡人的首個字母。
- 3 從清單中，點按您要與其通話的連絡人並選擇要撥打的號碼，如果此連絡人存在多個關係電話。
- 4 點按**語音通話**或**視像通話**。


## 接聽來電和拒接來電

手機鈴響時，按屏幕上的通話鍵  或**接聽**以接聽電話。  
按「結束」鍵  拒絕來電。

## 通話中選項





**喇叭** - 點按  以開啓喇叭。再按一下關閉喇叭。


**靜音** - 點按  以關閉麥克風，這樣，通話對方就聽不到您的聲音。

**保留** - 點按  以保留通話。

**功能表** - 從通話選項清單中進行選擇

 - 結束通話。

 - 在通話期間搜尋連絡人。

 - 在通話期間新增記事。

**鍵盤** - 點按開啓數字鍵盤以導覽具有編號選項的功能表，例如撥打緊急呼叫中心或其他自動化電話服務。

# 通話功能

## 視訊通話中選項




**私人/顯示** - 點按  開啓視訊私人（現場）模式。再按一下關閉此私人模式。

**靜音/取消靜音** - 點按  以關閉麥克風，這樣，對方就聽不到您的聲音。

**標準/細緻** - 點按  以調校對方視像來電質素

**功能表** - 從通話選項清單中進行選擇

 - 結束通話。

**縮放** - 點按  以放大當前相機。

**內部/外部** - 點按  以在內部與外部之間切換相機模式

**鍵盤** - 點按開啓數字鍵盤以導覽具有編號選項的功能表，例如撥打緊急呼叫中心或其他自動化電話服務。


## 調整通話音量

若要在通話中調節音量大小，請使用手機右側的音量鍵。

## 快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 從桌面中，點按  開啓**連絡人**。
- 2 點按**功能表**並選擇**快速撥號**。
- 3 您的留言信箱已經設定至快速撥號 1。您無法變更此設定。點按任何其他號碼，為其指定快速撥號聯絡人。
- 4 將會打開連絡人。透過點按一下相應的電話號碼，選擇要指定給此號碼的聯絡人。

若要撥打快速撥號號碼，請從桌面中點按 ，然後按住指定號碼，直至聯絡人顯示在屏幕上。通話將自動啟動，無需點按**語音通話**。

## 檢視通話記錄

從桌面點按 ，然後點按「通訊」標籤中的**最近通話**。

或者，您可以透過按發送鍵 > 功能表 > 通話記錄以轉至此功能表。

檢視所有已撥、已接和未接來電的完整清單。




**提示！** 從任何通話記錄中點按「**功能表**」和「**刪除所有通話**」可刪除所有記錄項目。

**提示！** 點按任何單個通話記錄項目，檢視撥打的日期、時間和持續時間。


# LG 連絡人

## 搜尋連絡人


### 從桌面

- 1 從桌面中，點按  開啓**LG 連絡人**。點按  並使用按鍵輸入聯絡人名稱。
- 2 點按**視訊通話**或**語音通話**或  鍵進行通話。

### 從主功能表


- 1 點按 ，然後點按「通訊」標籤上的**LG 連絡人**。
- 2 點按**功能表**和**搜尋**。

## 新增連絡人

- 1 從桌面點按  並點按**功能表**和**新增連絡人**。
- 2 選擇是否將聯絡人儲存到**手機**或**智能啞**。
- 3 若要為每個聯絡人新增圖片，點按**新增圖片**。
- 4 輸入新聯絡人的名字和姓氏。您無需同時輸入名字和姓氏，但必須輸入其中一項。

- 5 輸入號碼並為每個號碼指定一個類型。
- 6 新增電郵地址。
- 7 將聯絡人分配到一個或多個組，從**沒有群組、商務、個人、家庭、季節**或建立的任一組中選擇。
- 8 還可按一下**更多**按鈕以添加**鈴聲、網頁、地址、公司、職位、辦公地址、備忘錄**等內容。
- 9 點按**確定**儲存連絡人。

## 建立群組

- 1 從桌面點按 ，然後點按「通訊」標籤中的**LG 連絡人**。
  - 2 點按**功能表**並選擇**新群組**。
  - 3 為新群組輸入一個名稱。
  - 4 點按**確定**儲存該群組。
- 注意：**若要刪除某群組，指定給該群組的聯絡人將不會遺失。他們仍將保留在您的連絡人中。

**提示！** 您可以透過點按一下選定群組以編輯現有群組。選擇**檢視成員、編輯群組、發送訊息、發送名片或刪除群組**。

## 使用連絡人選項

- 1 點按通訊標籤中的**連絡人**，然後點按**功能表**和**設定**。
- 2 您可從此處對以下設定進行調整：  
**顯示名稱** - 選擇是先顯示聯絡人的名稱還是姓氏。

## 檢視資訊

- 1 點按通訊標籤中的**連絡人**，然後點按**功能表**和**資訊**。
- 2 您可在此檢視**服務撥號號碼**、**本手機號碼**、**記憶體資訊**（記憶體剩餘空間）和**我的名片**。

**提示！** 若要新增個人名片，請選擇我的名片並輸入要為連絡人提供的任何詳情。點按**確定**完成。

## 複製連絡人

將通訊錄從智能咭複製到手機：



- 1 從「通訊」標籤中點按**連絡人**並點按**功能表**，然後選擇**更改位置**。
- 2 點按**複製至手機**記憶。
- 3 依次選擇名稱並點按**確定**。

# 訊息





## 訊息

GM750 手機將文字訊息和多媒體訊息結合在一個功能表中。

有兩種方法輸入訊息：

- 1 從桌面點按  或 ，然後捲動至「通訊」標籤上的LG 訊息。

## 發送訊息

- 1 點按 ，然後點按**寫入新訊息**開始編寫新訊息
- 2 點按**To(至)**輸入收件者號碼，或點按  開啟連絡人。輸入收件者號碼之後，您可透過點按「確定」返回訊息撰寫程式屏幕。您可以新增多個聯絡人。
- 3 完成後，點按以下訊息方塊開始編寫文字訊息。
- 4 點按  插入圖像、影片、聲音或其他。
- 5 點按**確定**，然後點按 。

## 訊息資料夾

「訊息資料夾」的結構大致如下。

**收件匣** - 您收到的全部訊息都儲存於收件匣中。您可在此處檢視並刪除訊息以及使用其他功能。

**寄件匣** - 這裡是發送中的訊息之臨時存放資料夾。

**已發送項目** - 已發送的訊息儲存於此資料夾中。

**草稿** - 如果您未能完成訊息編寫，可將寫完的部分儲存於此處。

**階層式方塊** - 您可在發送或接收訊息時進行檢視，正如訊息中心用戶端一樣。

**我的資料夾** - 建立資料夾，儲存您的訊息。

**已刪除的項目** - 已刪除的訊息儲存於此資料夾中。

## 變更文字訊息設定

您的 GM750 已預先定義訊息設定，以便您可立即發送訊息。您可以根據個人偏好變更這些設定。

捲動至設定標籤上的**訊息**並點按**文字訊息**。您可變更下列選項：  
**文字訊息中心** - 輸入訊息中心的詳細資料。

**發送報告**：向左滑動開關以便在訊息發送後接收確認訊息。僅當符合一組條件時才可使用此功能：寄件者網絡、收件者網絡以及收件者的 Windows Mobile 裝置均支援此功能。

**儲存已發送訊息** - 開啓/關閉

## 變更多媒體訊息設定

您的 GM750 已預先定義訊息設定，以便您可立即發送訊息。您可以根據個人偏好變更這些設定。

捲動至設定標籤上的**訊息**，然後選擇**MMS(多媒體訊息)**。您可變更以下設定：

**MMS中心(多媒體訊息中心)** - 輸入訊息中心的詳細資料。

### 接收模式

#### ▶ 立即擷取

**開啓**：立即接收多媒體訊息。

**關閉**：僅接收通知。

#### ▶ 只在家用網絡上下載 - 開啓/關閉

**拒接所有訊息** - 選擇不接受任何多媒體訊息。

**發送報告** - 選擇是否允許和/或要求發送報告 - 要求報告（開啓/關閉），允許報告（開啓/關閉）。

# 訊息

**讀取報告** - 選擇是否允許和/或發送讀取回覆 - 要求報告（開啓/關閉），允許報告（開啓/關閉）。

**訊息類別** - 選擇訊息的類別 - 個人、廣告、資訊以及自動。

**重要性** - 選擇多媒體訊息的重要性級別 - 最低、正常或最高優先。

**有效時期** - 選擇訊息在訊息中心的保留時間 - 1 小時、6 小時、12 小時、1 日、3 天或最大。

**儲存已發送訊息** - 選擇已發送訊息 - 開啓/關閉。

**發送時間** - 選擇多久後發送訊息 - 立即、1 小時後、1 天後或 1 星期後。

**投影片播放時間** - 選擇投影片在屏幕上的播放時間 - 2 秒、3 秒、4 秒、5 秒等。

**記憶體使用裝置** - 手機記憶體 / 外置記憶體

## 設定電子郵件

縱使出門在外，您亦可使用 GM750 上的電郵功能與其他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 從桌面點按 ，然後捲動至「通訊」標籤上的**電子郵件**。
- 2 要建立新訊息，選擇 **MSExchange** 並選擇**編寫電郵**。

**注意：**請向網絡供應商查詢以下詳情：伺服器位址、網域名稱、用戶名稱、密碼。還需要安裝由網絡供應商發佈的憑證。

## 透過 Microsoft® Exchange Server 設定電子郵件

- 1 從桌面或在「開始」功能表中點按電郵圖示 > 設定 > 新增帳戶 > MSExchange。
- 2 輸入電郵地址、密碼、網域名稱和伺服器位址。
- 3 選擇「自動搜尋」以從互聯網自動獲取電郵設定。

- 4 如果未檢測到伺服器設定，請手動輸入，然後點按「確定」。

## 在「其他」上設定電郵

- 1 從桌面或在「開始」功能表中點按電郵圖示 > 設定 > 新增帳戶。
- 2 選擇**其他**。
- 3 輸入電子郵件地址、電子郵件密碼、帳戶顯示名稱以及我的名稱。

**注意：**如果不輸入名稱，將自動儲存電子郵件地址的標題。

**注意：**對特殊的電子郵件供應商（如 hotmail），使用者應輸入帳戶全名，並在「撥出通話伺服器登入」欄位填寫網域（例如：sample@hotmail.com）

## 發送郵件 / 編寫新郵件

- 1 從桌面或在「開始」功能表中點按電郵圖示 > 點按 MExchange > 點按「編寫電郵」。
- 2 點按  右邊的 ，然後點按「收件者」/「抄本」/「密件抄送」。
- 3 要輸入標題，點按**主題**。
- 4 點按屏幕右側角落的  以附加視訊或圖像檔案。
- 5 點按  發送電郵。

**注意：**電郵可能不會儲存在寄件匣中，這取決於您的電郵帳戶或伺服器策略。

# 訊息

## 發送電郵 / 回覆電郵

您可以回覆、轉寄或回覆郵件。

- 1 從桌面或在「開始」功能表中點按電郵圖示 > 點按 **MSEXchange** > 點按 **收件匣** > 點按回覆圖示 > 點按 **回覆 / 回覆全部 / 轉寄**。
- 2 輸入要發送的內容。
- 3 點按 **發送**。

## 變更電郵設定

點按電郵圖示並點按屏幕右側角落的「功能表」並點按「設定」。

**預覽行** - 設定預覽行。

**提示音** - 設定接收電郵時的提示音。

**簽名** - 指定是否將簽名自動加入訊息。

**字型** - 設定字型樣式和字型大小。

**垃圾訊息** - 設定排序垃圾訊息。

**刪除訊息時** - 指定是否在伺服器保留郵件。

**電郵下載限制** - 設定從伺服器擷取電郵的條件。

## Messenger

**注意：**此服務並不可用於所有國家/地區。有關詳情，請聯絡您的網絡商。

您可透過此功能表與其他人聊天。Messenger 僅可與支援智能咭和國家一同使用。

# 相機

## 快速拍照

- 1 長按手機右側的相機鍵。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 輕輕按下拍攝按鈕。
- 4 當對焦方塊變綠，則表示相機對焦完成。
- 5 按住拍攝按鈕以拍攝照片。

## 拍照後

 
拍攝的相片將顯示於屏幕上。圖像名稱以及四個圖示會顯示在右側。



- ✉ 點按以**訊息、電郵**或**Bluetooth(藍芽)**方式發送相片。
- 🗑 點按刪除圖像。
- 📷 點按以立即拍攝另一張相片。當前相片將會被儲存。
- 📎 點按以將圖像作為牆紙或連絡人圖像。

# 相機

## 了解取景器

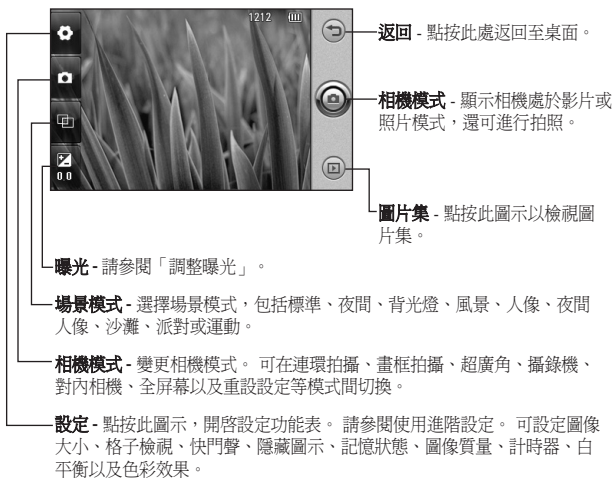



**提示！** 您可以關閉所有捷徑選項，以獲取更清晰的取景器屏幕。只需要點按一下取景器中央。要再調用選項，請再按一下屏幕。

## 調整曝光


曝光定義並控制圖像的光線強度。

低對比度會將圖像顯示得較暗，而高對比度會將圖像顯示得較亮。

1 點按 。

2 將對比度指示符沿列向  滑動，曝光度將減低，獲得的圖像較暗，向  滑動，曝光度將升高，獲得的圖像較亮。

## 使用進階設定

從取景器中，點按  以開啓所有進階設定選項。

您可以透過捲動滾輪變更相機設定。選擇適當選項之後，點按 **OK**。

**圖像大小** - 變更相片大小以節省記憶體空間。

**色彩效果** - 選擇要在新相片中使用的色調。從**關閉**、**負片**、**深褐色**、**單色**、**水溶液**、**浮雕**、**素描**、**紅色**、**綠色**與**曝光**中任選其一，以查看色彩效果。

**白平衡** - 從自動、白熱光、陽光、日光燈和陰天中選擇。

**計時器** - 自拍定時讓您設定按拍攝按鈕後的延遲時間。選擇**關閉**、**3 秒**、**5 秒**或**10 秒**。如果您想在拍照時讓自己一起留影，此功能十分有用。

**圖像質量** - 在超細緻、細緻及標準之間選擇。質素越細緻，相片越清晰。因此，相片占用的檔案大小會增大，手機記憶體中儲存的相片數量就會相應減少。

**記憶狀態** - 選擇是將照片儲存至手機記憶體還是外置記憶體。

**隱藏圖示** - 選擇是自動還是手動隱藏相機功能表上的圖示。

**快門聲** - 選擇拍照時的快門聲。

# 相機


**格線檢視** - 從關閉、四格或三等分之間選擇

**提示！** 關閉相機時，所有設定均將返回至預設情況。所需的任何非預設設定需要重設，如色彩效果。拍攝下一張相片前，需要檢查這些設定。

**提示！** 設定功能表會加在取景器上，這樣，當變更圖像色彩或質量的要素時，您將能夠在設定功能表後的預覽中查看到圖像變更。

## 變更圖像解像度


像素越高，檔案越大，從而佔據的記憶體空間便越多。若您想要在手機上儲存更多圖片，可以變更解像度來縮小檔案。

- 1 使用取景器，點按左上角的 。

- 2 從預覽功能表中選擇**圖像大小**。

- 3 有六種解像度可選（5M：2560x1920、3M：2048x1536、2M：1600x1200、1M：1280x960、640x480、320x240）。



## 選擇色彩效果

- 1 使用取景器，點按左上角的 。
- 2 從預覽功能表中選擇**色彩效果**。
- 3 有十種選項：**關閉、負片、深褐色、單色、水溶液、浮雕、素描、紅色、綠色或曝光**。
- 4 完成選擇後，可透過選擇 **OK** 關閉色調功能表。然後您就可以準備拍照了。


使  
用  
1  
2  
3  
4  
檢  
您  
片  
會

## 使用內相機

LG GM750 配備 640x480 的向內相機，不但可用於視像通話，亦可用於拍照。

- 1 若要切換至向內相機，請點按 ，然後從選擇對內相機。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要擷取圖像，請按標準方式，按一下拍攝按鈕。
- 3 拍攝相片後，手機將提供同主相機拍攝相片時可用的所有相同選項。
- 4 若要切換至主相機，請點按 ，然後從預覽功能表中選擇**對外相機**。

## 檢視已儲存相片

您可從相機模式存取已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。

# 視像攝錄器

## 快速製作影片




- 1 長按手機右側的相機硬鍵。
- 2 然後，點按攝錄機以切換至視像模式。
- 3 視像攝錄機的取景器將顯示於屏幕上。
- 4 水平握住手機，將鏡頭對準拍攝對象。
- 5 按一下拍攝按鈕，開始錄製。
- 6 **Rec** 將顯示於取景器頂部，而底部的計時器則會顯示影片錄製的長度。

- 7 點按屏幕上的  停止錄製。

## 拍攝影片後

將在屏幕上顯示一張靜態影片圖像。影片名稱將顯示於屏幕底端，同時還會在屏幕右側顯示三個圖示。



-  點按以**訊息、電郵**或 **Bluetooth(藍芽)**方式發送相片。
-  點按以刪除剛剛錄製的影片，透過點按**是**予以確定。取景器將再次出現。
-  點按立即拍攝另一張影片。當前影片將會被儲存。

## 了解取景器






**提示！** 您可以關閉所有捷徑選項，以獲取更清晰的取景器屏幕。只需要點按一下取景器中央。要再調用選項，請再按一下屏幕。


# 視像攝錄器

## 調整曝光

曝光定義圖像在有光和黑暗部分中的區別。低對比度會將圖像顯示得較暗，而高對比度會將圖像顯示得較亮。

- 1 點按 。
- 2 將對比度指示符沿列向  滑動，曝光度將減低，獲得的圖像較暗，向  滑動，曝光度將升高，獲得的圖像較亮。

## 使用進階設定

從取景器中，點按  開啓所有進階設定選項。

您可以透過捲動滾輪調整視像攝錄機設定。選擇選項之後，點按OK。

**影片大小** - 變更影片解像度，以便節省記憶體空間。

影片解像度有：400 x 240、320 x 240、176 x 144 以及 128 x 96 四種。

**格子檢視** - 從關閉、四格或三等分之間選擇。

**語音** - 選擇**靜音**以錄製影片，而沒有聲音。

**隱藏圖示** - 選擇是自動還是手動隱藏相機功能表上的圖示。

**記憶狀態** - 選擇將影片儲存至**手機記憶體**，或儲存至**外置記憶體**。

**影片品質** - 在**超細緻**、**細緻**及**標準**之間選擇。質素越細緻，影片越清晰。因此，檔案大小會增加，意味著手機記憶體中儲存的影片將減少。

**長度** - 為視像設定播放時間限制。選擇**標準**及**MMS**以限制按照多媒體訊息方式發送影片的最大大小。


**提示！** 若您選擇多媒體訊息持續時間，則可選擇低圖像品質，以錄製較長的影片。

**白平衡** - 白平衡可確保影片中的任何白色部分顯示得真實。爲了使相機正常調整白平衡，您可能需要確定光線條件。從**自動、白熱光、陽光、日光燈**或**陰天**中進行選擇。

**色彩效果** - 選擇要在影片中使用的色調。從**關閉、負片、深褐色、單色、水溶液、浮雕、素描、紅色、綠色**與**曝光**中任選一種色調模式。

## 變更影片解像度


像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若您想要在手機上儲存更多影片，可以變更影片解像度來縮小檔案。

- 1 使用取景器，點按左上角的 。
- 2 從預覽功能表中選擇**影片大小**。

3 選擇一種解像度：


 
1. 400 x 240
2. 320 x 240
3. 176 x 144
4. 128 x 96

## 選擇色彩效果


- 1 使用取景器，點按左上角的 。
- 2 從預覽功能表中選擇**色彩效果**。
- 3 有十種色彩效果選項：**關閉、負片、深褐色、單色、水溶液、浮雕、素描、紅色、綠色**或**曝光**。
- 4 點按想要使用的色調。

# 視像攝錄器

## 使用內視像攝錄機

- 1 若要切換至向內相機，請點按 ，然後從預覽功能表中選擇 **對內相機**。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要開始錄製影片，請按標準方式按一下拍攝按鍵，要停止錄製，請再按一下此按鍵。
- 3 影片錄製後，系統將提供同主相機錄製影片時可用的所有選項。
- 4 若要返回至主相機，請依次點按  和**對外相機**。


## 觀看已儲存影片

- 1 在取景器中，點按 。
- 2 圖片集將顯示在屏幕上。
- 3 點按要觀看的影片。

多  
您  
記  
片  
權  
暗  
要  
並  
權  
權  
圖  
我  
括  
載  
像  
我  
我  
取  
選  
圖

## 多媒體

您可以將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭以便釋放手機記憶體空間。

要存取多媒體功能表，點按  並從「多媒體」標籤中選擇**我的檔案**。您可開啓儲存所有多媒體檔案的資料夾清單。

### 圖片

**我的圖片**包括圖片清單，其中包括預載至手機的預設圖像、已下載圖像和透過手機相機拍攝的圖像。

### 我的圖像選項功能表


**我的圖片**中為您準備的可用選項取決於選定的圖像類型。所有選項均可用於手機相機上拍攝的圖片。

### 發送相片

- 1 若要發送相片，只需選擇想要發送的圖片。
- 2 點按**功能表**並選擇**傳送**。從**訊息、電子郵件或Bluetooth(藍芽)**之間選擇。
- 3 若選擇**訊息**或電子郵件，您的相片將會被附加至訊息，且您可按正常方式編寫和發送訊息。若選擇**藍芽**，手機將搜尋裝置以發送圖片。

### 使用相片


您可選擇將圖像用作牆紙、聯絡人、開機或關機圖片、或去電或來電圖像。

- 1 點按  功能表鍵並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖片**。
- 3 選擇圖像，並點按**功能表**。
- 4 點按用於並選擇牆紙或聯絡人圖像。

## 多媒體


### 正在移動或複製圖片

您可在手機記憶體和記憶咭之間移動或複製圖像。您可能想透過此操作清除某個記憶體的部分空間，或保護圖像以防丟失。

- 1 點按  功能表鍵並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖片**。
- 3 選擇圖像，並點按**功能表**。
- 4 選擇**移動**或**複製**。


### 建立投影片播放

若要檢視手機上的所有圖像，則可建立投影片播放，便於逐一開啓和關閉每個單獨的圖像。

- 1 點按  功能表鍵並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖片**。
- 3 點按**功能表**和**投影片播放**。

### 檢查記憶體狀態


您可查看已使用的記憶體空間及所剩記憶體空間。

- 1 點按  功能表鍵並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖片**。
- 3 點按**功能表**，然後點按**記憶體資訊**。

### 我的音樂

**我的音樂**資料夾包含已下載的聲音、**預設聲音**和**錄音**。您可從此處管理或發送聲音或將其設為鈴聲。

### 使用聲音


- 1 點按  功能表鍵並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的音樂**。
- 3 選擇一種聲音。
- 4 您可透過選擇**使用方式**功能表使用聲音。

- 5 從**鈴聲**和**訊息提示音**之間選擇。

## 影片

**我的影片**資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

## 觀看影片

- 1 點按  功能表鍵並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的影片**。
- 3 選擇一個影片進行播放。


## 發送錄像片段

- 1 選擇影片並點按**功能表**。
- 2 點按功能表並選擇傳送並從**訊息**、**電子郵件**或**Bluetooth(藍芽)**之間。
- 3 若選擇**訊息**或**電郵**，則錄像片段會附加至訊息中。若選擇**藍芽**，手機將搜尋裝置以發送影片。

## 遊戲和應用程式

可將新遊戲和應用程式下載至手機，以便休閒時娛樂。

## 玩遊戲

- 1 點按  功能表鍵並從「多媒體」標籤中選擇遊戲。
- 2 系統已預安裝 Windows 遊戲（Bubble Breaker、接龍）。您亦可透過**互聯網**下載遊戲。要播放遊戲，點按想要的遊戲。


## Mobile Java

GM750 支援 Java，因此，您可輕鬆從**互聯網**上下載 java 遊戲和其他 java 應用程式。

Mobile Java 當中有兩個子資料夾：「**遊戲**」和「**應用程式**」。請注意，使用線上服務可能需要額外付費。

# 多媒體

## 音樂

GM750 具有內置音樂播放機，這樣，您可播放所有喜愛的曲目。要存取音樂播放機，點按  並從「多媒體」標籤中選擇**音樂**。您可從此處存取大量資料夾：

**全部曲目** - 包含手機上具有的所有歌曲。





**演出者** - 按演出者瀏覽音樂收藏。


**專輯** - 按專輯瀏覽音樂收藏。

**類型** - 按類型瀏覽音樂收藏。

**最愛** - 包含儲存為最愛的全部歌曲。


## 正在播放曲目


- 1 點按功能表鍵  並從「多媒體」標籤中選擇**音樂**。
- 2 點按**全部曲目**。
- 3 選擇要播放的曲目。
- 4 點按  以暫停播放曲目。
- 5 點按  以跳至下一首曲目。
- 6 點按  以返回至上一曲目。

**提示！** 若要在收聽音樂時調節音量，則點按 。

## 建立播放清單


透過從所有曲目資料夾中選擇一系列曲目，您可建立自己的播放列表。

- 1 點按功能表鍵  並從「多媒體」標籤中選擇**音樂**。
- 2 點按**功能表**。
- 3 點按**新播放清單**，輸入播放清單名稱並點按**確定**。
- 4 全部曲目資料夾將會顯示。點按要納入播放清單的所有曲目；將於每個選定曲目名稱旁邊顯示一個勾號。
- 5 點按**確定**。


要播放播放清單，請選擇並點按 。

**注意：**要新增第二個播放清單，請點按**功能表**，然後點按**新播放清單**。

## 播放播放清單

- 1 點按功能表鍵  並從「多媒體」標籤中選擇**音樂**。
- 2 選擇想要播放的播放清單。
- 3 點按以播放播放清單。

## 刪除播放清單

- 1 點按  功能表鍵並從「多媒體」標籤中選擇**音樂**。
- 2 選擇想要刪除的播放清單。
- 3 點按**功能表**。
- 4 點按**刪除全部**移除播放清單中的所有歌曲，轉到**全部曲目**時將刪除空白播放清單。

## 使用收音機


GM750 配備 FM 收音機功能，您在外出途中可以調諧至最愛的電台進行收聽。

**注意：**您需要插入耳機才可收聽收音機。

## 搜尋電台



您可透過手動或自動搜尋收音機頻道，調諧手機中的收音機節目。您可將電台儲存至特定頻道編號，如此一來，您就不需要重新調諧。

### 自動調諧：

- 1 按  然後選擇「多媒體」標籤中的**FM 收音機**。
- 2 點按**功能表**。
- 3 點按**掃描**。
- 4 選擇**停止**以停止自動掃描。
- 5 若要儲存當前頻道，點按**功能表**並選擇**儲存預設**。可指定預設名稱和捷徑鍵。可在預設清單中找到。

# 多媒體

## 收聽收音機

- 1 點按 。
- 2 點按「多媒體」標籤中的 **FM 收音機**。
- 3 點按  顯示預設清單。
- 4 點按您想要從預設預設清單中收聽的電台頻道號碼。

**提示！** 如要改善收音機的接收效果，您可調整作為收音機天線的耳機線。


**警告：** 若將非配套耳機連接至手機，電台接收效果會受到干擾。

# 記事簿


## 新增事件至行事曆

- 1 在桌面中選擇 ，然後捲動至「實用程式」標籤中的**行事曆**。
- 2 選擇要將事件新增至的日期。
- 3 點按**功能表**，然後點按**新增約會**。
- 4 若要新增主題至事件中，請點按**主旨**；然後鍵入您的備註。
- 5 檢查事件的開始日期和時間。輸入結束日期和時間。
- 6 選擇**鬧鐘**設定事件提醒。若要重複鬧鐘，請選擇**重複**。
- 7 點按**類型**，然後從**商務、假期、個人、季節**或建立**新類型**中選擇。
- 8 點按「確定」以在行事曆中儲存該事件。方形彩色游標會顯示已儲存事件的日期，且於事件開始時間響鈴（視乎設定）。

## 變更預設行事曆檢視

- 1 在桌面中選擇 ，然後捲動至「實用程式」標籤中的**行事曆**。選擇**功能表**中的**設定**。
- 2 點按**設定預設檢視**並從**月、星期、日、清單**或**所有工作**之間選擇。

## 新增項目至待辦事項清單

- 1 在桌面中選擇 ，然後捲動至「實用程式」標籤中的**行事曆**。
- 2 選擇**功能表**中的**新增工作**。
- 3 為工作設定日期，新增備註，並選擇重要性等級：**低、標準**或**高**。
- 4 點按**確定**儲存工作。

# 記事簿

## 設定鬧鐘

- 1 在桌面中選擇 ，然後捲動至「實用程式」標籤中的**鬧鐘**。
- 2 若要新增鬧鐘，請點按**新增鬧鐘**。
- 3 若要設定鬧鐘於一小時內再次響鬧，請點按**快速鬧鐘**。
- 4 設定鬧鐘響鈴的時間。
- 5 選擇想要鬧鐘重複響鬧的重複類型。  
圖示指明您選擇日期。
- 6 選擇**聲音/震動**以選擇所需鬧鐘響鈴方式。
- 7 點按**更多**圖示之後，您可選擇**鬧鈴並控制音量、震動類型**。
- 8 選擇將延後間隔設為 5、10、20、30 分鐘或**關閉**。然後選擇延後重複。
- 9 最後，新增鬧鐘備忘錄。


## 使用 Office Mobile

### Excel Mobile

Excel Mobile 可讓您輕鬆開啓和編輯在電腦上建立的 Excel 工作簿和範本。

您亦可在裝置上建立新工作簿和範本。

**注意：**在全屏幕模式下操作，以盡可能查看更多的工作簿。

- 1 從桌面選擇 。
- 2 從「實用程式」標籤中選擇 **Office Mobile**，然後選擇 **Excel Mobile** 並打開工作簿。
- 3 點按檢視 > 顯示比例並選擇一個百分比，以便您可輕鬆讀取工作簿。

### Excel Mobile 中不受支援的功能


Excel Mobile 不完全支援某些功能，如公式和單元格註解。在裝置上儲存工作簿後，部份資料和格式會被丟失。

## PowerPoint Mobile

透過 PowerPoint Mobile，您可以 \*.ppt 和 \*.pps 格式開啓和檢視在電腦上建立的幻燈片放映演示。

很多內建於幻燈片放映的演示元素（如幻燈片轉換和動畫）將會在裝置上播放。如果演示設定為計時幻燈片放映，則幻燈片會自動進入到下一張幻燈片放映。系統亦支援連結到網址。

### 開始幻燈片演示

- 1 從桌面選擇 ，然後捲動至「實用程式」標籤中的 Office Mobile 並選擇 PowerPoint Mobile。
- 2 在演示清單中，點按要檢視的幻燈片。
- 3 點按目前幻燈片，即可進入下一張幻燈片。


如果演示設定為計時幻燈片，則幻燈片會自動前進。

### 停止幻燈片

- 在 PowerPoint Mobile 演示中，點按 ▲，然後點按**結束放映**。

### 在幻燈片之間瀏覽

如果演示未設定為計時幻燈片，則您可進入下一張幻燈片，返回到上一張幻燈片，或進入序列中的任何幻燈片。

- 1 從桌面選擇 ，然後捲動至「實用程式」標籤中的 Office Mobile 並選擇 PowerPoint Mobile。
- 2 開啓要檢視的演示。
- 3 點按 ▲，然後點按**下一張**或**上一張**，或點按**進入幻燈片**並點按要檢視的幻燈片。

## 記事簿

### 提示！

- ▶ 只需要點按目前幻燈片，即可進入下一張幻燈片。
- ▶ 如果您已放大幻燈片，以便更詳細地進行查看，則在縮小前，您無法瀏覽至其他幻燈片。點按「下一張」或「上一張」可能會播放幻燈片上的動畫，而不會瀏覽其他幻燈片。

### Word Mobile

Word Mobile 是 Microsoft Word 的簡化版本。您可在裝置上開啓和編輯在電腦上建立的 Word 文件。您亦可在 Word Mobile 中建立和編輯文件和範本並將其儲存為 \*.doc、\*.rtf、\*.txt 和 \*.dot 檔案。您一次只能開啓一個文件。開啓第二個文件時，第一個文件會被儲存起來，並自動關閉。

關閉新建的文件後，它會自動命名為文件中的前幾個單字並置於 Word Mobile 文件清單中。您可輕

鬆地以更有意義的名稱對文件進行重新命名，並將其移動至其他資料夾或儲存咕中。


### 建立檔案

從桌面選擇 ，然後捲動至「實用程式」標籤中的 **Office Mobile** 並選擇 **World Mobile**。

- 1 在 Word Mobile 中，點按「新建」。
- 2 取決於選定預設範本的類型，您將看到一個空白文件或範本。
- 3 鍵入文字。
- 4 完成後，點按「確定」儲存檔案。


Word Mobile 不完全支援 Microsoft Word 的全部功能，如修訂標記和密碼保護。在裝置上儲存文件後，部份資料和格式會被丟失。

## 使用計算機

- 1 從桌面選擇 ，然後捲動至「實用程式」標籤中的**計算機**。
- 2 點按數字鍵以輸入數字。
- 3 對於簡單計算，點按所需的  
功能（+、-、x、÷），然後  
按 =。


## 使用檔案總管

允許您瀏覽儲存在手機上的檔案。

- 1 從桌面選擇 ，然後捲動至「實用程式」標籤中的**檔案總管**。
- 2 點按要查看的資料夾。

## Mobile Zip

Mobile Zip 是一款綜合的存檔工具，用於檢視並解壓縮各種存檔格式。

點按 ，然後選擇「實用程式」標籤中的「工具」，然後點按 **Mobile Zip**。

### Mobile Zip 主要功能

- 多重標籤用戶介面
- 開啓並瀏覽各種存檔格式
- 非常易於使用的介面
- 透過大量軟鍵和導覽按鈕支援實現單手操作
- 雙資料夾視圖允許用戶在兩個視圖之間輕鬆進行複製、移動、解壓縮和新增至存檔操作
- 支援「解壓縮-檢視-編輯」循環操作。在存檔中開啓一個項目，編輯此項目並重新插入存檔
- 在資料夾視圖中將存檔作為常規資料夾開啓

## 記事簿

- 加密：Mobile Zip 包含標準 zip 2.0 檔案加密技術，與其他主要的桌面壓縮檔案應用程式相容，一些最新的桌面電腦壓縮應用程式還可使用 AES 256 位元進階加密。
- 加密：Mobile Zip 提供密碼管理程式 (PassMan)，以便用戶使用一個單一的主密碼輕鬆儲存及擷取密碼
- 加密：密碼管理程式視圖提供密碼清單設定連結。

### 視圖

- ▶ **主頁**視圖主要用作開始頁，您可透過此頁面了解一些基本的應用程式功能並進行設定。
- ▶ **第一個資料夾**和**第二個資料夾**視圖是一個雙資料夾視圖，旨在使資料複製、移動、解壓縮和存檔工作變得異常輕鬆。
- ▶ **PassMan** 視圖是一個密碼管理程式視圖並包含一些設定連結，用戶可以在一個單一的主密碼加密資料庫中使用這些連結對密碼進行管理。

- ▶ **選項**視圖提供設定對話方塊連結和其他資訊連結。

### 建立壓縮存檔

在選定資料夾中，選取一個或多個項目，按住選定的一個或多個項目。在顯示捷徑功能表時向下捲動並選取：

- **新增至存檔...**：允許將密碼、名稱和類別設定選項新增至存檔中。
- **新增至「name.zip」**：允許在不使用密碼的情況下直接新增至所命名的存檔。

### 解壓縮存檔

在選定的資料夾視圖中，按住選定存檔。在資料夾捷徑功能表中，選取：

- **解壓縮...**：允許解壓縮選定的存檔。可設定目標資料夾、設定密碼、選取解壓縮動作等。
- **解壓縮在這裡**：允許將選定存檔的內容簡單地解壓縮在當前資料夾中。

- **解壓縮至名稱資料夾：**允許將選定存檔的內容簡單地解壓縮至指定資料夾中。

### 密碼管理程式

密碼管理程式是一個密碼管理模組，有助更輕鬆且安全地管理密碼。密碼資料庫檔案透過主密碼以 AES-256 加密檔案格式儲存在應用程式目錄中。如果您忘記主密碼，則將無法使用密碼清單。此時，您需要使用「刪除全部」指令刪除密碼清單並重新開始。在 PassMan 視圖中，您可使用以下選項：

- **密碼狀態切換**，允許用戶將密碼管理程式狀態切換至開啓或關閉。系統將提示用戶輸入主密碼以啓用密碼管理程式。啓用後，密碼對話方塊中的右軟鍵將顯示 PassMan 指令。您可在任何提示用戶輸入密碼的存檔密碼對話方塊中使用該指令存取密碼清單。如果尚未定義密碼清單，請開啓密碼管

理程式以建立密碼資料庫，同時系統將提示用戶輸入資料庫主密碼。

- **密碼清單**是用於管理用戶密碼清單的對話方塊連結。在此對話方塊中，使用右軟鍵可新增、編輯、刪除或儲存密碼。要新增密碼，請選取「新增」，填寫 ID 和密碼，然後選取「套用」。
- **主密碼**允許用戶為現有密碼清單設定新的主密碼。
- **刪除全部**允許用戶刪除全部密碼清單且不會提示用戶輸入主密碼。如果您已忘記主密碼，請使用此選項。

# 記事簿

## Adobe Reader LE

Adobe Reader LE 是 Adobe PDF 軟件用於手機的升級版本。允許用戶在 GM750 上檢視更豐富、更高質量以及更安全的內容。

### 檢視檔案

從桌面選擇 ，然後捲動至「實用程式」標籤中的「工具」，選擇 **Adobe Reader LE**。  
找到要檢視的檔案。

# ActiveSync

ActiveSync 同步手機與電腦上的資訊，如 Outlook 內容。如果您的公司或服務供應商運行具有 Exchange ActiveSync 的 Microsoft Exchange Server，則 ActiveSync 可同步手機網絡與 Microsoft Exchange Server。同步後，ActiveSync 會比較裝置上的資訊與電腦和/或 Exchange Server 上的資訊，並使用最新資訊更新所有位置。

透過 ActiveSync，您可以執行以下操作：

- ▶ 同步手機與電腦上的資訊，例如 Outlook 電子郵件、通訊錄、日曆約會以及工作，亦可同步圖片、影片及音樂。
- ▶ 直接同步手機與 Exchange Server 上的 Outlook 電郵、聯絡人、日曆約會或工作，以便在電腦關閉的情況下，仍可保持最新狀態。

- ▶ 交換裝置和電腦之間的檔案，而毋需同步。
- ▶ 選擇同步的資訊類型並指定要同步的資訊級別。例如，指定要同步的日曆約會的時間期限。

與電腦同步資訊前，需要首先在電腦上安裝 ActiveSync。然後，在手機和電腦之間建立同步關係。

您可從互聯網安裝 ActiveSync，例如 <http://www.microsoft.com/windowsmobile/en-us/help/synchronize/device-synch.msp>

一旦安裝 ActiveSync 並設定同步關係後，電腦上的 ActiveSync 可在連線時識別裝置，並自動傳輸在裝置上指定的同步設定。

您可能透過公司或無線服務供應商，同步裝置與 Exchange Server。如果計劃執行此操作，則在開始「同步設定精靈」前，從管理員獲取電郵地址、Exchange Server 地址、用戶名稱、密碼和網域名稱。

# ActiveSync

## 設定 Windows Vista™

Microsoft Windows Mobile® Device Center 是 Microsoft® ActiveSync® on Windows Vista 的替換物。

**注意：**部份版本的 Windows Vista 隨已安裝的 Windows Mobile Device Center 一塊提供。您可與基於 Windows 的電腦同步電子郵件、通訊錄、日曆、歌曲、圖片以及網絡最愛。開始前請瀏覽 - [www.microsoft.com/getstarted](http://www.microsoft.com/getstarted)。

## 在 Windows Mobile Device Center 中設定同步

將裝置連接到電腦並首次啓用 Windows Mobile Device Center 時，系統會要求您同裝置建立一種 Windows Mobile 合夥關係。按以下步驟建立合夥關係。

▶ 將裝置連接到電腦。Windows Mobile Device Center 設定其自身，然後予以開啓。

**注意：**如果您只要傳輸媒體檔案、檢查更新、瀏覽裝置而不是同步 Outlook 資訊，則選擇在**不設定裝置的情況下進行連線**。

- ▶ 選擇要同步的項目，然後點按**下一步**。
- ▶ 輸入裝置名稱，並點按**設定**。完成設定精靈後，Windows Mobile Device Center 會自動同步裝置。注意，同步後，Outlook 電郵和其他資訊會顯示在裝置上。

使用 Windows Mobile Device Center

要開啓 Windows Mobile Device Center，請在 Windows Vista 電腦上點按**開始 > 所有程式 > Windows Mobile Device Center**。在 Windows Mobile Device Center 上，您可執行以下操作：

- ▶ 點按 **Mobile Device 設定**，變更同步設定。

- ▶ 點按**圖片、音樂與視訊**後，可**匯入新圖片/視像短片**，且精靈會指導您標記並將相片從裝置傳輸到 Windows Vista 電腦的「相片庫」中。
- ▶ 點按**圖片、音樂與視訊** > 將**媒體從 Windows Media 播放器新增至裝置**，以使用 Windows Media 播放器同步音樂和視像檔案。更多資訊，請參閱第 11 章的「Windows Media® Player Mobile」。
- ▶ 點按**檔案管理** > **瀏覽裝置內容**從裝置檢視文件和檔案。

## 同步資訊

使用 USB 或藍芽連接將裝置連接到電腦後，ActiveSync 將立即同步。連接裝置後，每次對電腦或裝置作出變更後，ActiveSync 即會同步。

正在同步 Outlook 資訊

如果您已在裝置和電腦間設定同步關係，則同步會使電腦與手機上的 Outlook 資訊保持最新狀態。預設情況下，ActiveSync 同步一定量的資訊，以便節省裝置上的儲存空間。您可在資訊類型的「設定」中變更為指定資訊類型同步的資訊量。

您可設定裝置，以便與多台電腦或與一台或多台電腦和 Exchange Server 組合同步。與多台電腦同步後，同步的項目會顯示在與其同步的所有電腦上。

例如，如果您已設定同兩台電腦（PC1 和 PC2）同步，且這兩台電腦具有不同項目，當您與兩台電腦同步裝置上的「聯絡人」和「日曆」時，結果如下：

# ActiveSync

位置	新狀態
PC1	位於 PC2 上的所有 Outlook 聯絡人和日曆約會如今亦位於 PC1 上。
PC2	位於 PC1 上的所有 Outlook 聯絡人和日曆約會如今亦位於 PC2 上。
裝置	來自 PC1 和 PC2 的所有 Outlook 聯絡人和日曆約會位於裝置上。

## 開始和停止同步

- ▶ 要同步電腦上的 Outlook 資訊和其他本地資訊，包括媒體檔案，請使用藍芽或線纜將裝置連接到電腦。
- ▶ 如果使用 Exchange Server 直接進行同步，您可使用電腦連接至「桌面通過」網絡，或者在不連接電腦和手機網絡的情況下進行同步。

▶ 在 ActiveSync 中，點按**同步**。要在完成前結束同步，則點按「結束」。要變更同步的資訊類型：

1 在裝置的 ActiveSync 中，點按**功能表 > 選項**。

2 執行以下一項或兩項操作：

▶ 選擇任何要同步項目的核取方塊。如果您無法選取核取方塊，則可能需要清除清單中其他位置相同資訊類型的核取方塊。

▶ 清除要停止同步的任何項目的核取方塊。

3 要完全停止同電腦的同步，則點按「電腦」並點按「刪除」。

**注意：**Outlook 電郵僅可與一台電腦同步。要變更可用的同步設定，請選擇資訊類型，並點按「設定」。

要使用 Exchange Server 直接進行同步

在可透過公司或無線服務供應商的情況下，您可在裝置上設定同 Exchange Server 的同步。但是，您應該首先詢問管理員，了解以下資訊，然後執行以下步驟：電郵地址、Exchange Server 地址、用戶名稱、密碼和網域名稱。

- 1 在裝置的 ActiveSync 中，點按 **功能表 > 設定伺服器**。如果您尚未設定與 Exchange Server 的同步，則將顯示為**新增伺服器來源**。
- 2 輸入電郵地址，並點按**下一步**。
- 3 在伺服器位址中，輸入執行 Exchange Server 的伺服器的位址。如果此伺服器需要加密 (SSL) 連接，請選中此核取方塊。點按**下一步**。

- 4 輸入用戶名稱、密碼和網域，然後點按**下一步**。要變更解決同步衝突的規則，請點按**進階**。
- 5 選擇要與 Exchange Server 同步的資訊項目類型的核取方塊。
- 6 要變更可用的同步設定，請選擇資訊類型，並點按**設定**。
- 7 點按**完成**。

## 透過藍芽同步

您可使用藍芽，將裝置連接到要同步的電腦上。

### 透過藍芽與電腦同步

- 1 首先，在電腦的 ActiveSync 連線設定功能表中選中「允許連接到以下選項之一」選項。選擇合適的 COM 連接埠。如果無可用連接，則必須首先建立藍芽配對。

## ActiveSync

- 2 在「程式」功能表中選擇 ActiveSync 項目，然後選擇 ActiveSync 功能表透過藍芽連接。

### 同步音樂、視像和圖片

如果要在外出旅行中攜帶音樂或其他數字媒體，則 ActiveSync 會與 Windows Media Player 配合使用，以同步音樂、視像和圖片。除了在同步的 ActiveSync 中選擇媒體資訊類型，所有的媒體同步設定必須在 Windows Media Player 中設定。同步媒體前，您必須執行以下操作：

- ▶ 在電腦上安裝 Windows Media Player 版本 10。
- ▶ 使用 USB 線纜，將裝置與電腦相連。如果目前已使用藍芽連接裝置，則在同步媒體前，您必須結束此連接。

- ▶ 往裝置中插入儲存咭（建議使用 32MB 或更大）。
- ▶ 在儲存咭和 Windows Media Player 之間設定同步合夥關係。

### 變更媒體同步設定

一旦在同步的 ActiveSync 中選擇媒體資訊，則 Windows Media Player 播放清單中任何喜歡的音樂、視像和圖片檔案將會同步。您要執行的所有操作是，為這些媒體檔案在 Windows Media Player 中設定同步。

設定與儲存咭的同步關係

- 1 開啓 Windows Media Player。
- 2 點按**同步**標籤。
- 3 選擇儲存咭。
- 4 點按**設定同步**。

# 網絡功能

## 瀏覽器

無論您身在何處，有何種需求，瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接往手機中載入更多內容。

## 存取網絡

1 從桌面點按 ，然後選擇「通訊」標籤中的 **Internet Explorer**。


2 將直接開啓瀏覽器主頁。


**注意：**連接到這類服務並下載其中的內容將會產生額外收費。請向服務提供商諮詢資料費用。

## 新增並存取書籤

爲了方便快捷地存取喜愛的網站，您可新增書籤並儲存網頁。

1 從桌面選擇 ，然後選擇「通訊」標籤中的 **Internet Explorer**。

2 選擇 。書籤清單將會顯示在屏幕上。

3 要新增書籤，請選擇 。輸入書籤名稱及其網址。

4 點按**新增**。此時，書籤將會顯示在書籤清單中。

5 要存取書籤，只需點按此書籤。將連接到相應的 URL。

## 使用瀏覽器選項功能表

您可透過點按選項圖示查看以下功能表。

**首頁** - 直接存取首頁。

**記錄** - 查看已檢視的網頁清單。

**下一頁** - 檢視先前已檢視過的網頁時，選擇下一頁即可顯示目前檢視網站的下一頁。

**重新整理** - 重新下載目前顯示的網站。

## 網絡功能

### 檢視

- **文字大小**：最大/大/中/小/最小
- **啓動 Activex 控制項**：**檢查**以啓動 ActiveX 控制項
- **行動電話**：此選項指定 Internet Explorer Mobile 6 作為手機瀏覽器。
- **桌面**：此選項指定 Internet Explorer 6 作為桌面瀏覽器。您可打開同一完整網頁，並在其桌面上擷取。

### 注意：

這兩個選項（手機與桌面）可透過向伺服器發送不同的用戶代理字串，幫助您控制數據消耗（手機頁面比桌面頁面消耗的數據量更少）。每發送一次手機用戶字串，內容供應商都將返回一個手機頁面（如可用）。如果無可用的手機頁面，內容供應商將返回一個桌面頁面。

### 工具

- **發送連結**：您可透過 SMS、MMS 或電子郵件在文字訊息中發送連結。
  - **內容**：檢視頁面資訊。
  - **選項**：查看更多選項。
- 複製/貼上** - 在網頁中複製或貼上文字。

### Streaming Player

Streaming Player 是一種用戶端應用程式，可播放同步媒體資料串流（如音訊和視訊）同時透過 IP 網絡將內容傳輸到本機。它採用包括交換資料串流服務的 3GPP 規格設計和工作。

資料流媒體播放器支援以下使用場合。

**播放指定視訊及音樂（MOD 和 VOD）**：登入 MOD 與 VOD 內容入口。導覽網站上列出的音樂及影片。使用者選擇其中一項內容進行預覽時，將啓動 Streaming Player 播放該內容。

**Streaming Live TV:** 將即時電視節目匯入手機裝置。

啓動 Streaming Player

Streaming Player 應用程式可按以下幾種方式啓動：

- ▶ 選擇 Streaming Player 應用程式圖示後以獨立模式啓動
- ▶ 選擇視訊或音訊檔案連結後，從 Internet Explorer 瀏覽器啓動。此播放器將緩衝媒體資料，然後進行播放。
- ▶ 選擇 RTSP URL 從 SMS、MMS 或 WAP Push 啓動。此播放器將緩衝媒體資料，然後進行播放。

從 Internet Explorer 選擇連結啓動 Internet Explorer 并瀏覽檔案連結。按照以下步驟播放所需檔案。

- 1** 按一下想要透過觸控筆播放的連結，或按一下導覽鍵選擇連結，然後按一下「確定」鍵。
- 2** Streaming Player 啓動，同時連接到連結。
- 3** 如果連結無效，將彈出錯誤訊息。按一下「確定」返回 Internet Explorer。
- 4** 如果連結有效，應用程式將緩衝該檔案。
- 5** 緩衝完成後，將播放該媒體檔案。

## 網絡功能

### 輸入 URL

如果以獨立模式啓動應用程式，您需要手動輸入連結到該檔案的 URL。請按照以下步驟輸入 URL。

- 1 按一下 Streaming Player 圖示啓動應用程式。
- 2 按一下「開啓」或按一下「功能表」然後選擇「開啓」。
- 3 使用裝置輸入工具在「輸入 URL」欄位輸入 URL，或從最近歷史清單選擇 URL。
- 4 按一下「連接」連接至 URL。

此應用程式將近期存取的 URL 儲存在「最近歷史」清單中。

按一下「功能表」選擇「移除全部」刪除「目前歷史記錄」清單，選擇「取消」結束打開的 URL 對話方塊並返回主屏幕。。

- ▶ 如果 URL 有效，應用程式將緩衝檔案，然後進行播放。

- ▶ 如果 URL 無效，將彈出錯誤訊息。按一下「確定」關閉錯誤訊息，按一下「開啓」輸入新的 URL。

### 功能表

應用程式提供一個功能表，以協助在播放時管理媒體檔案：

開啓 - 轉至屏幕，輸入並開啓 URL。

全屏幕 - 以全屏幕模式檢視媒體檔案。

效果 - 調節視訊亮度、對比度和飽和度。亦可以小視窗預覽。鍵入「完成」儲存變更。

選項 - 設定網絡設定選項。

緩衝 - 在緩衝時間過後播放媒體檔案。

UDP 端口範圍 - 輸入自定值，範圍在 1024 至 65535 之間。程式將從該範圍內選擇可用的 UDP 端口進行 RTP/TRCP 傳輸。如果輸入的值無效，將彈出錯誤訊息。

傳輸 - 選擇 RTP 傳輸模式。

UDP: UDP 傳輸模式

TCP: TCP 傳輸模式

自動：程式將自行決定使用 UDP 或 TCP 傳輸模式。

（UDP 模式最常用）如果您的裝置使用 NAT，且資料串流伺服器連接網絡，您將無法匯入媒體資料。播放器將一直顯示緩衝 0%。在此情況下，請試用 TCP 模式。

請注意，某些伺服器不支援 TCP 傳輸。

連接方式 - 選擇連接網絡。也可在裝置的設定頁面中設定連接。

內容 - 顯示目前檔案的相關資訊，例如：位置、持續時間、類型、位元率、音訊視訊類型及大小。

關於 - 顯示有關 Streaming Player 的資訊和軟件授權資訊。


結束 - 結束應用程式。

# 設定


在此功能表中，您可個人化 GM750 的設定。

## 個人化情景模式

在「設定」標籤中，您可個人化每個情景模式設定。

- 1 從桌面選擇 ，然後捲動至「設定」標籤中的**情景模式**。
- 2 選擇想要編輯的情景模式：**標準、震動、靜音、戶外或自動**。
- 3 您可對清單中所有可用的聲音和提示選項進行變更。


## 變更您的顯示設定

- 1 從桌面選擇 ，然後捲動至「設定」標籤中的**顯示**。
- 2 您可以選擇以下選項功能表：  
**背光** - 設定背光設定。  
**注意**：背光的維持時間越長，電池耗電也就越多，手機充電次數也就越頻繁。  
**主題** - 選擇主題。

**提示！** ALC（自動亮度控制）感應器 LCD 背景燈亮度根據周圍光線自動調整。

## 變更手機設定

您可根據喜好隨意自訂 GM750 的設定。

- 1 從桌面選擇 ，然後捲動至「設定」標籤中的**手機**。
- 2 從以下清單中選擇其中一個標籤功能表。

### 手機

- **響鈴方式**：該選項可確定來電通知模式。您可從以下選項中選擇：**鈴聲、鈴聲漸強、響鈴一次、震動、震動並響鈴、震動後響鈴、無**。
- **來電鈴聲**：您可選擇來電鈴聲。
- **鍵盤**：您可設定按按鍵時的按鍵音。

**安全性** - 若將 PIN 碼安全性設為啟用，則在您每次開機時都會要求輸入 PIN 碼。

**服務** - 要存取服務設定，請從以下清單中選擇，並點按**取得設定**。

**- 通話限制**

限制撥入電話：所有通話/漫遊時/關閉。

限制撥出電話：所有通話/國際電話/除了撥到本國/地區以外的國際電話/關。

要編輯手機通話限制設定，您需要密碼。訂閱此網絡服務後，從服務供應商獲取限制密碼。

通話限制會影響所有語音和資料通話，但緊急通話除外。

**- 本機號碼**：設定本機號碼的顯示。

**- 來電轉接**：可讓您將來電轉接到其他電話號碼或您的留言信箱。

**- 插撥**：要在通話中通知有其他來電時，請選擇「通知我」。

**- 語音信箱與簡訊**：將智能咭插入至手機後，預設情況下，它會自動偵測並設定語音郵件和文字訊息伺服器。但是，您可在必要時檢視設定。透過點按「快速撥號」屏幕上的「語音郵件」，您亦可檢視留言號碼。

**- 限制撥號**：選擇固定撥號號碼開啓並編譯可從您的手機撥出的號碼清單。啓用後，僅固定撥號清單中包含的號碼可從手機撥出。

**網絡** - 您可選擇網絡類型及網絡選定方式。

**- 目前網絡**：目前網絡顯示於目前網絡欄位中。

**- 網絡選取**：定義如旅行時，如何在不同的可用網絡間選擇。例如，如選擇**手動**，您可自行選擇網絡。捲動至所需的網絡並點按屏幕右上的**確定**。要自動選擇網絡，請選擇**自動**。

# 設定

**提示！** 當您知道一種網絡比另一種便宜或一種網絡提供更快的資料傳輸，則手動選擇可能會十分有效。

- **優先網絡：**點按**設定網絡**（擷取設定可能要花幾分鐘時間）。選擇網絡，並透過點按**上移**或**下移**，重新設定網絡使用次序的優先級。

**區域廣播** - 資訊服務訊息指網絡發送給 GSM 手機用戶的文字訊息。這些訊息提供一般資訊，如天氣報告、交通消息及股市行情。每項資訊都附有一編號，這可向服務供應商索取。當您收到資訊服務訊息後，提示訊息會指示一新訊息回條，或資訊服務訊息會直接顯示。


- **區域廣播：**您可以設定接收狀態。
- **語言：**透過點按語言，您可以選擇所需語言。將以選定語言接收資訊服務訊息。

- **選擇想要編輯或刪除的頻道：**您可對從中接收資訊的頻道進行管理。


**頻段** - 選擇想要使用的頻帶類型。您可選擇**自動**、**僅限 3G** 或**僅限 2G**。如選擇「**只限 2G**」，將不會執行視像通話等 3G 服務。

**按鍵音** - 選擇**樂曲**及**蜂鳴聲**。

## 使用飛航模式

- 1 從桌面選擇 ，然後選擇「設定」標籤中的**無線設定**。
- 2 透過點按圖示，將**飛航模式**設為**開啓**。  
在飛航模式中，您不可撥打電話、連接至互聯網或發送訊息。

## 變更日期和時間

- 1 從桌面選擇 ，然後選擇**日期及時間**。
- 2 調整日期與時間設定，或選擇**自動更新時間**。

## 網際網路共用

允許將裝置用作互聯網共用裝置。

### 注意

- 需要 ActiveSync 軟件 4.5 或更高版本。

- 1 將 USB 線連接至電腦。
- 2 點按開始 > 互聯網分享。
- 3 設定電腦連接到 USB 或藍芽 PAN
- 4 設定網絡連接到合適的 APN
- 5 點按「下方」的連接
- 6 當成功啓動 PDP 後，將顯示數據連接指示符 (G/ E/ 3G)。

 
### 注意

需要 Windows XP SP2 或以上作業系統。

## GPS 設定

### 設定 GPS 類型


- 1 點按開始 > 設定 > 「連線」標籤。
- 2 點按「GPS 設定」。
- 3 輔助式 GPS 可提供增強性能，透過下載最新衛星資訊，加速確定初始 GPS 位置的時間。但是需要網絡連接以及額外充電才能使用輔助式 GPS。如果不需要，請選擇獨立式 GPS。

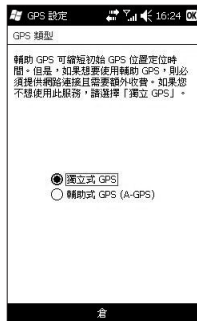

## 藍芽

藍芽功能讓附近相容的流動裝置、週邊設備與電腦無須接上線路，即可通訊。本手機帶有藍芽連線功能，可連線至相容的藍芽耳機、電腦應用程式等等。

### 開啓藍芽

從桌面選擇 ，然後選擇**無線設定**。

透過點按圖示，將將Bluetooth(藍芽)設為**開啓**。

**注意：**如果您經由藍芽使用電腦同步功能，則只能交換連絡人中的資料。

**注意：**當您從另一部藍芽裝置接收資料時，手機會要求確認。確認轉送後，檔案會複製到手機。

### 同其他藍芽裝置配對

將 GM750 手機與其他裝置配對時，您可設定一個密碼，使連接更安全。

**1** 確保藍芽已**開啓**。

請參閱**開啓藍芽**，了解更多

資訊。

您可在**設定**功能表中變更您的可見狀態。

- 2 選擇「**設定**」標籤中的**藍芽**，然後點按**新增裝置**。
- 3 選擇裝置類型以限制搜尋，然後點按**繼續**。GM750 手機將搜尋裝置。
- 4 選擇想要配對的裝置。
- 5 驗證兩台裝置上的密碼是否符合，然後選擇**是**。手機將連接至其他裝置。
- 6 密碼保護藍芽連接已準備就緒。

### 使用藍芽收發檔案

藍芽是一種收發檔案的好方法，因為無需傳輸線，並且連接方便快捷。您亦可連接到藍芽手機，以接聽來電。

#### 要發送檔案：

- 1 打開要發送的檔案，此類檔案通常為相片、影片或音樂檔案。


- 2 點按**功能表**並選擇**發送**。  
選擇**選擇Bluetooth(藍芽)**。
- 3 如果已配對藍芽裝置，GM750 手機將不會自動搜尋其他藍芽裝置。否則，GM750 手機將搜尋範圍內其他已啟動藍芽的裝置。
- 4 選擇要將檔案發送至的裝置。
- 5 您的檔案將會被送出。

**提示！** 檢查進度列，確定檔案將要發送。

### 要接收檔案：

- 1 要接收檔案，必須將藍芽設定為**開啓**。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按**接受接收檔案**。
- 3 您將看到檔案寄件者、檔案名稱和檔案儲存位置。

## 變更您的藍芽設定

- 1 在桌面中選擇 ，然後捲動至「設定」標籤中的藍芽。
- 2 選擇設定標籤。

**新增裝置** - 設定新的藍芽裝置。

**停用Bluetooth** - 選擇停用藍芽。

**名稱** - 檢查當手機為「可見」時，您的手機顯示於其他手機的名稱。您可**變更名稱或使用Windows Mobile 名稱**。

**可見** - 僅當希望其他裝置找到此裝置時，裝置才可見。可選擇**永遠可見、可見時間: 60 秒**或**不可見**。

**進階** - 設定其他選項。

**關於** - 查看藍芽資訊。

# Wi-Fi


無線設定可讓您管理裝置上的 Wi-Fi 互聯網。它容許手機連接本地無線網絡或存取無線互聯網。Wi-Fi 速度較快，且比藍芽無線技術擁有的範圍更廣。

## 警告

此裝置採用非協調頻率，適用於整個歐洲國家或地區。

WLAN 可用於歐盟，無室內操作限制，但在法國有禁止室外操作的限制。

## 開啓 Wi-Fi

- 1 從桌面選擇 ，然後選擇「設定」標籤中的**無線設定**。
- 2 透過點按圖示，將 Wi-Fi 設為**開啓**。

## 設定 Wi-Fi

- 1 確保 Wi-Fi 已開啓。
- 2 氣泡視窗會彈出，顯示檢測到的存取點。
- 3 選擇准許存取的存取點並點按**確定**。
- 4 選擇互聯網以擁有互聯網服務，並點按**連接**。

**注意：**如果 Wi-Fi 服務供應商或網絡管理員設定網絡安全性的 WEP 加密，您應在彈出視窗中填入 WEP 密鑰。如果 WEP 加密尚未設定，則系統不會顯示此彈出視窗。如果您不知道密鑰，則需要向 Wi-Fi 服務供應商或網絡管理員諮詢。

## 無線網絡設定

可在檢測到網絡時或透過輸入設定資訊手動新增無線網絡。執行這些步驟之前，確定是否需要驗證資訊。

- 1 點按**開始** > **設定** > **連線標籤** > **Wi-Fi** > **無線通訊標籤**。
- 2 在**要存取的網絡**中，從清單中選擇**所有可用的網絡**、**僅存取點**或**僅電腦至電腦**，具體取決於想要連接到的網絡類型。
- 3 執行以下操作之一
  - 如未查看到所需網絡，請點按**功能表** > **新增**。
  - 若要變更已設定網絡的網絡設定，請點按**網絡介面卡**。
- 4 按照**設定網路驗證**頁面中的精靈繼續操作。
  - 從**驗證**清單中選擇一種驗證方法 - 開啓、共用、WPA、WPA-PSK、WPA2 以及 WPA2-PSK。

- 要使用數據加密，請從**數據加密**清單中選擇一種加密方法
  - 停用、WEP
- 要自動使用網絡密鑰，請點按**自動提供此密鑰**。或者，輸入網絡密鑰。

## 設定 Wi-Fi 連接設定

**注意：**設定 WLAN 設定前，您需要詢問 WLAN 服務供應商或網絡管理員，了解 IP 設定。

- 1 點按**開始** > **設定** > **連線標籤** > **Wi-Fi**。
- 2 選擇**網絡介面卡**標籤。
- 3 在**網絡介面卡**標籤並選擇 **Broadcom 802.11 DHD 網絡**。
- 4 如果點按**使用伺服器指定 IP 位址**，則可自動獲得已指定的 IP 設定。如果點按**使用指定 IP 位址**，則需要設定 WLAN 服務供應商或網絡管理員指定的 IP 位址。

## Wi-Fi

**5** 填充 IP 位址、子網路遮罩和預設閘道。

**6** 點按名稱伺服器。

**7** 必要時，填充 DNS 和次要 DNS、WINS 和次要 WINS。

**注意：**為了避免可能丟失手機上的資料，當電池電量幾乎耗盡或低於百分之五時，WLAN 會自動結束。

# DUN

## 注意：

- ▶ 啓用 DUN 之前，確保您的手機安裝了 GPRS 智能咭，並已設定了 GPRS 數據機連接。同樣，請確保您的 GPRS 智能咭支援 DUN，並已將手機透過 USB 連接至電腦。
- ▶ 要使用 DUN，您必須在電腦上安裝 LGUSBWMLModemDriver。參見以下網站。 [www.lgmobile.com](http://www.lgmobile.com)
- ▶ 啓用 DUN 後，ActiveSync 將自動停用。

## 要將手機設定為 USB 數據機

- 1 在手機上點按**開始 > DUN**
- 2 在手機與電腦之間插入 USB 線適配器。
- 3 點按「啓用」。

## 要將手機新增為電腦的 USB 數據機

- 1 在電腦上，按一下**開始 > 控制台**。
- 2 連按兩下「手機與數據機選項」。
- 3 按一下「數據機」標籤。從「數據機」清單中選擇新數據機，然後連按兩下新數據機。
- 4 在「進階」標籤上，將以下 AT 命令新增至 Extra 初始化命令：  
AT+CGDCONT=1,"ip",," <access point name>"

**注意：**例如，  
at+cgdcont=1,"ip",," web.  
vodafone.de"

## 要撥號並連接至互聯網

- 1 在電腦上，按一下**開始 > 控制台**
- 2 連按兩下**網絡連接**。
- 3 按一下檔案 > **建立新連接**。
- 4 在「新連接精靈」中，按一下**下一步**。

## DUN

- 5 按一下**連接互聯網**，然後按一下**下一步**。
- 6 選擇「**手動設定我的連接**」，然後按一下**下一步**。
- 7 選擇「**透過撥號數據機連接**」，然後按一下**下一步**。
- 8 選擇先前安裝的數據機，然後按一下**下一步**。
- 9 輸入此連接的說明性名稱，然後按一下**下一步**。
- 10 輸入電話號碼，如 \*99# 或供應商支援號碼（如 \*99\*\*\*1#），然後按一下**下一步**。
- 11 在**網絡帳戶資訊**下，使用 GPRS 時可能不需要輸入用戶名稱和密碼。僅需按一下「**下一步**」以繼續操作。
- 12 按一下「**完成**」結束精靈。
- 13 將打開「**連接**」對話方塊，按一下「**內容**」以再次檢查是否選擇了 LGE WML USB 數據機。如果正確無誤，按一下「**確定**」，然後返回「**連接**」對話方塊。
- 14 按一下**撥號**以撥號並連接至互聯網。

# 軟件升級

## LG 流動電話軟件升級程式

有關安裝和使用本程式的更多資訊，請瀏覽 <http://update.lgmobile.com>

此功能可讓您在網上快捷方便地將軟件升級到最新版本，而無需到訪我們的服務中心。

由於手機軟件升級程式在升級過程中需要用戶格外留意，因此，在繼續之前，務必要仔細閱讀各步驟中顯示的任何說明和注意事項。請注意，在升級過程中移除 USB 數據傳輸線或電池可能會對流動電話造成嚴重損壞。由於製造商不會為升級過程中的數據損失承擔任何責任，建議您事先備份好任何重要資料，以策安全。

## 配件

這些配件可透過購買的方式與 GM750 手機配套使用。

**充電器**



**USB 線及光碟**



**電池**



**立體聲  
耳機**



**觸控筆**



**注意：**

- 只可用原裝LG 配件。
- 不使用原裝LG 配件，保養可能失效。
- 不同地區可能有不同的配件。

## 網絡服務

本指南所述之無線電話經認可可用於 GSM 850、E-GSM 900、DCS 1800、PCS 1900 和 W-CDMA 網絡。

手冊中提及的多項功能均為網絡服務。這些為可透過無線網絡供應商提供的特殊服務。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

## 技術數據

### 一般資訊

產品名稱：GM750

系統：GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA

### 環境溫度

最高：+55°C（放電），  
+45°C（充電中）

最低：-10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

### Model Name

GM750

### Trade Name

LG

CE 0168

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1 / EN 301 489-24 V1.4.1  
EN 300 328 V 1.7.1  
EN 60950-1 : 2001  
EN 50360-2001/EN62209-1:2006  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

31. Aug. 2009

Signature of representative

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel: +31 - 36- 547 - 8940, Fax: +31 - 36 - 547 - 8794  
email: jacob @ lge.com

## 疑難排解

本章列出了您在使用手機過程中可能會遇到的一些問題。有些問題需要您向服務供應商尋求支援，但多數問題可自己輕鬆解決。

訊息	可能原因	合理的解決方案
智能咭錯誤	手機中無智能咭，或智能咭插入方式不正確。	請確保智能咭正確插入。
無網絡連接	訊號較弱 位於 GSM 網絡覆蓋範圍之外	將手機移至窗戶旁邊或空曠之地。 諮詢服務供應商，了解服務區域地圖。
密碼不匹配	要變更安全密碼，需要再次輸入新密碼進行確認。	請聯絡服務供應商。
無法設定功能	服務供應商不支援此功能或功能需要註冊	請聯絡服務供應商。
無法撥打電話	撥號錯誤 已插入新智能咭。通話費用已達上限	未獲得新網絡的使用授權。查看新的限制條款。請聯絡服務供應商或使用 PIN 2 碼重設限制。
無法開機	按下開啓/關閉鍵的時間不夠長 電池已耗盡 電池觸片不潔淨	按開啓/關閉鍵至少兩秒鐘。 保持長時間連接充電器。 對觸片進行清潔。

訊息	可能原因	合理的解決方案
充電錯誤	電池電量完全耗盡	為電池充電。
	不在適當溫度範圍內	確定室溫合適，稍候再充電。
	接觸問題	檢查電源及其與手機的連接。檢查電池觸片，必要時進行清潔。
	電源無電	插入到其他插座或檢查電壓。
	充電器故障	如果充電器沒有反應，請更換充電器。
手機失去網絡連接	使用不當充電器	只可使用原廠 LG 配件。
	電池故障	更換電池。
號碼不允許	訊號太弱	自動重新連接到其他服務供應商。
	固定撥號功能已開啓。	檢查設定。



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind and disabled people as it has a touch screen keypad.



## GM750 User Guide

C  
a  
w  
d

Congratulations on your purchase of the advanced and compact GM750 phone from LG which is designed to operate with the latest digital mobile communication technology.

# Contents

Guidelines for safe and efficient use .....	8
Getting to know your phone .....	14
Open view .....	16
Installing the USIM and battery ....	17
Memory card.....	20
Resetting the device.....	21
Using your Touch screen.....	23
Using your Joystick .....	25
Your Home Screen .....	26
Select Home Screen .....	26
Customising the LG Smart Home Screen.....	26
Customising the Windows Mobile default screen .....	28
Quick keys.....	29
Viewing the status bar.....	30
Using the Multi-tasking function.....	31
Using the Start Button .....	32
Programs .....	32
Settings .....	35
Calls .....	40
Making a call or a video call.....	40
Calling your contacts .....	40
Answering and rejecting a call .....	40
In-call options.....	41
In-video call Options .....	42
Adjusting call volume .....	43
Speed dialling .....	43
Viewing your call logs.....	43
Contacts.....	44
Searching for a contact .....	44
Adding a new contact .....	44
Creating a group.....	45
Use your contact options .....	45
Viewing information .....	45
Transferring your contacts.....	46
Messaging.....	47
Messaging.....	47
Sending a message.....	47
Message folders.....	47
Changing your text message settings.....	48
Changing your multimedia message settings.....	48
Setting up your email .....	50
Setting up your email through Microsoft® Exchange Server.....	50
Setting up your email on Others .....	50
Sending email / Write new email.....	51

41	Sending email / Replying to an	Multimedia .....	64
42	email .....	Pictures .....	64
43	Changing email setting.....	My Pictures options menu.....	64
43	Messenger.....	Sending a photo.....	64
43	Camera .....	Using a picture .....	65
44	Taking a quick photo .....	Moving or copying a picture.....	65
44	Once you've taken the photo .....	Creating a slide show .....	65
44	Getting to know the viewfinder.....	Checking your memory status .....	65
45	Adjusting the exposure.....	My Music.....	66
45	Using the advanced settings.....	Using a sound .....	66
45	Changing the image resolution .....	Videos .....	66
46	Choosing a colour effect.....	Watching a video .....	66
47	Using the inner camera.....	Sending a video clip.....	66
47	Viewing your saved photos .....	Games and Applications .....	66
47	Video Camera.....	Playing a game .....	67
47	Making a quick video .....	Mobile Java.....	67
48	After shooting a video.....	Music.....	67
48	Getting to know the viewfinder .....	Playing a track .....	67
50	Adjusting the exposure.....	Creating a playlist.....	68
50	Using the advanced settings.....	Playing a playlist.....	68
50	Changing the video resolution .....	Deleting a playlist.....	68
50	Choosing a colour effect.....	Using the radio .....	69
50	Using the inner video camera.....	Searching for stations .....	69
51	Watching your saved videos .....	Listening to the radio.....	69

# Contents

UTILITIES .....	71	Settings .....	94
Adding an event to your calendar .....	71	Personalising your profiles .....	94
Changing your default calendar view .....	71	Changing your Display settings .....	94
Adding an item to your To Do list .....	71	Changing your phone settings .....	95
Setting your alarm .....	72	Using flight mode .....	97
Using Office Mobile .....	72	Change Date and Time .....	98
Using your calculator .....	75	Internet Sharing .....	98
Using your File Explorer .....	75	GPS Setting .....	98
Mobile Zip .....	76	Bluetooth .....	100
Adobe Reader LE .....	79	Turn on Bluetooth .....	100
ActiveSync .....	80	Pairing with another Bluetooth device .....	100
Setting up Windows Vista™ .....	81	Sending and receiving your files using Bluetooth .....	101
Set up synchronization in Windows Mobile Device Centre .....	81	Changing your Bluetooth settings .....	102
Synchronizing Information .....	83	Wi-Fi .....	103
Synchronizing via Bluetooth .....	86	Turn on Wi-Fi .....	103
Synchronizing Music, Video, and Pictures .....	86	Set up Wi-Fi .....	103
The Web .....	88	Wireless network settings .....	104
Browser .....	88	Configuring Wi-Fi Connection Settings .....	105
Accessing the web .....	88		
Adding and accessing your bookmarks .....	88		
Using browser option menus .....	89		
Streaming Player .....	90		

94	DUN.....	106
94	Software Upgrade.....	108
94	Accessories .....	109
95	Network service .....	110
97	Technical data.....	110
98	Troubleshooting .....	112

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model GM750 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

8

LG GM750 | User Guide

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.16 W/kg (10g) and when worn on the body is 1.12 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

## Guidelines for safe and efficient use

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

#### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Guidelines for safe and efficient use

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Getting to know your phone

**Earpiece**

**Proximity sensor**

**Inner camera**

 
**End key**

- Rejects a call.
- Press once to return to the Home Screen.

**Joystick/Optical Mouse**

**Call key**

Dials a phone number and answers incoming calls.

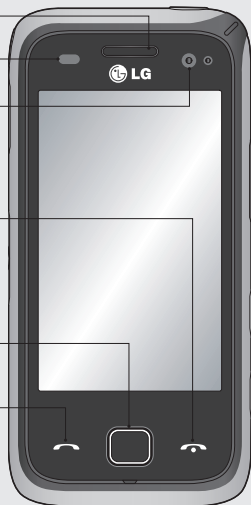


**⚠ WARNING:** Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protection film on the proximity sensor of the LCD as this can cause the sensor to malfunction.

**Charger, Data cable,  
Ear Microphone  
(USB cable)**

**TIP:** Before connecting the USB cable, wait until the phone has powered up and been registered on the network.

**Volume keys**

 - **When the screen is idle:** volume of system tone & ring tone.
- **During a call:** earpiece volume.
- **When playing a track:** controls track volume.



**Power/Lock key**

- Long press (3 secs) for Power ON / OFF.
- Short press to turn the screen off.



**MicroSD Card Slot**

**Multi-tasking key**

- Go to multitasking menu.

**Camera key**

 
- Go to camera preview directly by pressing the camera key when on homescreen.



## Booting time

The cold boot time of the GM750 is about 150 seconds. Please take a first booting time (cold boot) into consideration. The cold boot will be occurred when you power on the device first after buying it. And when you make a cold boot, about 150 seconds will have to be needed for the initialization of the file system. After that, the booting time will be decreased as about 50 seconds.

## Open view

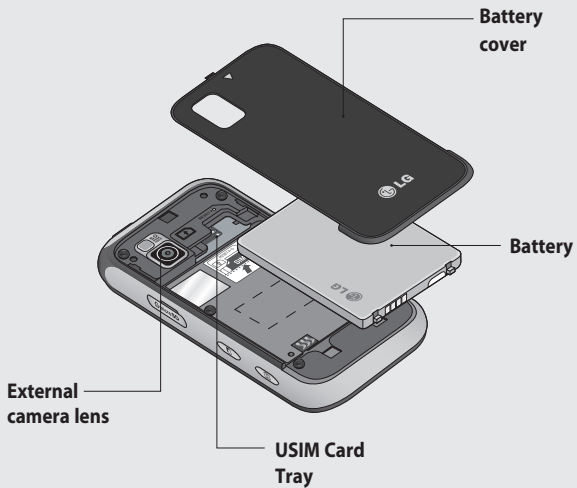

# Installing the USIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



## 2 Remove the battery

 
Using the cut-out at the bottom, lift it from the battery compartment.



**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the USIM card

Put the USIM card into the USIM card holder. Make sure the gold-coloured contact area on the card is facing downwards. Push the USIM card holder back.

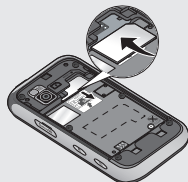

## Installing the USIM and battery

### 4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.



### 5 Charging your phone

Open the charger socket cover on the side of your GM750. Insert the charger and plug it into a mains electricity socket. When you recharge your phone after device switch off, the phone's LED lights up red.

When the phone is fully charged, the LED lights up green.

When the battery is fully discharged, you can not power on the phone. It takes approx. 5-10 minutes to reach a charge state sufficient for booting.

If you press and hold the power button in charging mode, the phone is turned on.

If user inserts external charger, If user inserts external charger, Charging animation will be shown and LCD Backlight will be dark as per the settings.

If user presses and hold OK key

while LCD Backlight is turned off, LCD Backlight is turned on again and show charging animation. If the battery is critically low, image for the critical low battery will be shown and notify user to charge more time.

**NOTE:** The battery must be fully charged initially to improve battery lifetime.

**WARNING:** Do not connect the charger to the phone without the battery. You must check the battery is inserted before charging.

**WARNING:** Do not remove your battery or USIM card while charging.

**WARNING:** There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries in accordance with the maker's instructions.

**WARNING:** Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.

**WARNING:** Make sure that no sharp items come into contact with the battery. This could pose a fire risk.




## Memory card


### Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

**NOTE:** A memory card is an optional accessory.

Slide the memory card into the slot at the top until it clicks into place. Make sure the gold-coloured contact area is facing downwards.

 **WARNING:** Slide the memory card fully into the slot, otherwise damage can occur.

 **WARNING:** Do not attach or remove a memory card when the phone is switched on, as this may damage the memory card.



## Resetting the device

 
You may need to reset your device occasionally. A normal (or soft) reset of your device clears all active program memory and shuts down all active programs. This can be useful when the device is running more slowly than normal, or a program is not performing properly. A soft reset is also necessary after the installation of some programs.

If a soft reset is performed when programs are running, unsaved work will be lost.

You can also perform a hard reset (also known as a full reset). A hard reset should only be performed if a normal reset does not solve a system problem. After a hard reset, the device is restored to its default settings—the way it was when you first purchased it and turned it on. Any programs you installed, data you entered and settings you customised on the device will be lost.

### To perform a soft reset

Find the Soft reset key.

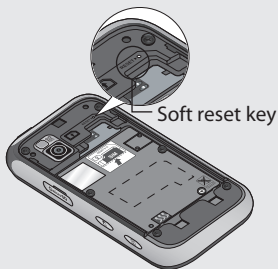

Use the stylus to press the reset key and hold it for a while. Your device may automatically restart and display the Home Screen.

## Resetting the device

### To perform a hard reset

A Hard Reset should only be performed after all other trouble shooting options have been exhausted. After a hard reset, the device is restored to its default settings - the way it was when you first purchased it and turned it on. Any programs you installed, data you entered and settings you customised on your device will be lost.

- 1 Power the device ON.
- 2 Tap **Start** > **Settings** > **System** tab > **Clear Storage**.
- 3 Enter 1234 for the password twice.
- 4 Press **Enter**.
- 5 Select whether to delete the Internal Memory or the External Memory (SD card) to reset.
- 6 You can also change the password by pressing Change Password.

Another way is via the hard key sequence

- 1 Power the device OFF.
- 2 Press and hold the following hard keys in sequence.



Keep the keys pressed until your LCDscreen turns on.

- 3 Align screen will appear upon power up if you had successfully completed the hard key reset.

# Using your Touch screen

## Touch screen tips

The Home Screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not press too hard; the touch screen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, press the power key once to restore the Home Screen.
- Whenever your GM750 is not in use it will return to the lock screen.

## Calibrate the device

Calibrating the device screen involves tapping with the stylus the centre of a cross as it moves around the screen. This process ensures that when you tap the screen with your stylus, the tapped item is activated.

If your device does not accurately respond to screen taps, follow these steps to re-calibrate.

- 1** Tap **Start > Settings > System tab > Screen**.
- 2** On the **Alignment** tab, touch **Align Screen** and follow the instructions on the screen.
- 3** After calibration is completed, the Align screen reappears. Click **OK** on upper right corner.

# Using your Touch screen

## Control the touch screen

The controls on the GM750 touch screen change dynamically depending on the task you are carrying out.

## Opening Applications

To open any Application, simply touch its icon.



## Scrolling

 
Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.



# Using your Joystick

## Select the Joystick function

- 1 Tap **Start > Settings > System** tab > **Optical Joystick**.
- 2 Select **Mouse Mode** if you want to use the Joystick as a trackpad to control the mouse pointer on screen. Click OK on the upper right corner.

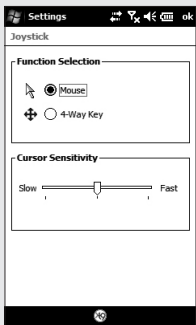

**NOTE:** 4-Way Key performance will depend on the speed of finger movement.

## How to use your Joystick

- 1 Put your finger on the Joystick sensor and move smoothly. The Mouse cursor on the screen will move with your finger movement. You don't need to press the Joystick when you move the mouse cursor.
- 2 Place the mouse cursor on the icon that you want to execute and press (click) the Joystick. The application that you select will be launched.

 
# Your Home Screen

From this screen you can access menu options, make a call, view the status of your phone and much more.

## Select Home Screen

- 1 Touch **Start > Settings > Personal** tab > **Home Screen**.
- 2 Select a layout for your device Home Screen. If you select **LG Smart Home**, you will have a 5-Way Home Screen. If you select **Windows Mobile Default**, you can use Windows Mobile's Today screen.


## Customising the LG Smart Home Screen

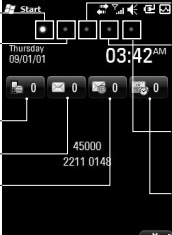- 
- 1 LG Smart Home Screen
  - 2 Widget Home Screen
  - 3 Multimedia Home Screen
  - 4 Favourite Contact Home Screen
  - 5 Shortcut Home Screen
  - 6 Missed calls
  - 7 Messages
  - 8 E-mail
  - 9 Schedule
  - 10 Easy settings

## Get in touch with your GM750

 - The User Interface is based on five types of Home Screen. To swap between the Home Screens just wipe quickly over the display from left to right or right to left.

## Widget Home Screen




The Widget Home Screen can show your favourite widgets. If you press and hold an icon you will be taken to the edit menu where all the available widgets not yet on your screen will be shown in a bar at the bottom of the screen. To scroll through them flick across the widget bar.

## Multimedia Home Screen



 
The Multimedia Home Screen can show your favourite pictures on the right side of the screen and your favourite music on the left.

## Contact Home Screen



The contacts Home Screen can show your favourite contacts in a scroll through or list view.


## Shortcut Home Screen

 

In the Shortcuts Home Screen, you can see the favourites shortcut icons.

# Your Home Screen
 
## Customising the Windows Mobile default screen

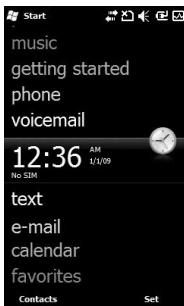

Touch **Start > Settings > Today > Items tab.**

- 1 Select the item you want to appear on the Today screen.
- 2 To change its position, tap **Move up** or **Move Down**. You can customise the further display options of Calendar and Tasks by tapping **Options**.
- 3 Check **Today timeout** then select the number of hours from

the drop down list.

If you don't use your phone after the specified duration has elapsed, the screen switches to the Today screen.

- 4 Touch **Start > Settings > Today > Appearance** tab.
- 5 You can select the desired theme for the background.
- 6 If you use your own background image, tap **Use this picture as the background**. Tap **Browse** to locate the file you want.













## LG Smart Home Screen



The LG Smart Home Screen displays the missed call list, unread messages, Email and upcoming appointments, tasks and alarms. You can tap a section on the screen to open the associated program.

## Quick keys

The quick keys on your LG Smart Home Screen provide easy, one-touch access to the functions you use most.








Icon	Description
	Touch to access the <b>E-mail</b> menu. You can check your received Email and create new Email.
	Touch to open your contacts. To search for the number you want to call: Enter the name of the contact by touching  next to the New Contact touchpad. You can also create new contacts and edit existing ones.
	Touch to access the <b>Message</b> menu. From here you can create a new SMS or MMS.
	Touch to access Internet Explorer.
	Touch to open the main menu, which is divided into four sub-menus.
	Touch to access LG App Store.
	Touch to access the Alarm menu directly.
	Touch to open your <b>Calendar</b> to check your schedule.
	Touch to bring up the touch dialling pad, which lets you make a call.
	Touch to enter the Music menu directly.
	Touch to open File Explorer directly







 





 



# Your Home Screen






 
## Viewing the status bar

The status bar uses different icons to show conditions such as signal strength, new messages and battery life as well as whether Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Bluetooth Hands-Free connection established
	Bluetooth Hands-Free channel opened
	Bluetooth High Quality Audio channel opened
	Indicates the battery power remaining
	Indicates the battery is very low
	Battery charging
	Sound on

Icon	Description
	Sound off
	Ringer in vibration mode
	Connection is active
	Connection is not active
	Synchronisation in progress
	Synchronisation error
	Indicates maximum signal strength
	No signal
	Indicates Bluetooth service
	No phone service
	Searching for phone service
	Voice call in progress
	Calls are forwarded
	Call on hold
	Missed call or rejected call
	GPRS (General Packet Radio Services) available

Icon	Description
	EDGE (Enhanced Data Rates For Global Evolution) available
	New email or text messages
	New voice mail
	There are more notifications. Tap the icon to view all
	USIM is not inserted. You can not use Network services without USIM
	Shows the list of running Applications by tapping this indicator


## Using the Multi-tasking function

 There are 3 ways to recall the Multi-tasking function.


- 1 By pressing the side key "Multitasking".
- 2 By tapping the Multi-tasking icon in the status bar.

### 3 By Touching **Start** > **LG S-CLASS**> **Multitasking**.

From here you can view the applications that are currently running and access or end them with one touch.

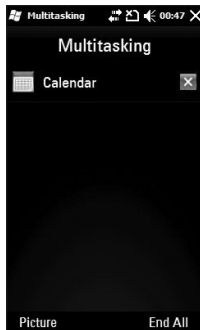






## Using the Start Button

A tap on the Start button located at the top left corner of the Today screen  displays a list of programs. It lets you easily switch from one program to another. You can start a program by selecting it from the menu.






### Programs

The following are some of the icons for the programs that are already installed on your device.

Icon	Description
	<b>LG S-CLASS</b> To use LG Applications. Camera, Music and other Applications.
	<b>Tools</b> To Access an array of tools and utilities on your mobile device. <b>Adobe Reader LE</b> allows you to open and read PDF files, FM Radio allows you to listen to FM Radio, <b>Mobile Zip</b> allows you to view and extract a wide range of archiving formats. <b>Stopwatch</b> allows you to record the elapsed time of an event.
	<b>ActiveSync</b> To synchronise information between your device and a PC.
	<b>Calculator</b> To perform basic arithmetic calculations such as addition, subtraction, multiplication and division.
	<b>Calendar</b> To keep track of your appointments and creates meeting requests.

Icon	Description
	<b>Contacts</b> To keep track of your friends and colleagues.
	<b>File Explorer</b> Enables you to organise and manage files on your device.
	<b>Getting Started</b> Guides you through the general functions at device startup.
	<b>Internet Sharing</b> To use your device as an internet sharing device.
	<b>Java</b> Enables you to download and install Java applications, such as games and tools, on your device.
	<b>E-mail</b> To send and receive email and text messages.
	<b>Messenger</b> to send and receives instant messages with your Windows Live Messenger contacts.
	<b>Notes</b> To create handwritten or typed notes, drawings and recordings
	<b>Pictures &amp; Videos</b> To collect, organise and sort picture and video files in the My Pictures folder of your device or on a storage card.
	<b>Search Phone</b> Allows you to find a file on your device.
	<b>Task Manager</b> To check active task information.






## Using the Start Menu

Icon	Description
	<b>Tasks</b> To keep track of your tasks.
	<b>DUN</b> Use your mobile device as a modem.
	<b>Windows Live</b> Enables Windows Live Access.
	<b>Windows Media</b> Enables the multimedia function on your device.
	<b>Streaming player</b> A client application that plays synchronized media streams while the content is transmitted to you over an IP network

## Settings









You can adjust the device settings to suit the way you work. To see all available settings, tap **Start > Settings**, then tap the **Personal, System, Connections** and other device settings.










### Personal menu

Icon	Description
	<b>Buttons</b> To assign a program or function to a hardware button.
	<b>Home Screen</b> To select a layout for your device.
	<b>Input</b> To set options for each of the input methods.
	<b>Owner Information</b> To enter your personal information on your device.
	<b>Phone</b> To customise phone settings such as ring tone, set a PIN number for your USIM card, and more.


# Using the Start Menu

## System menu







Icon	Description
	<b>About</b> This is where you can see basic information such as the Windows Mobile® version and type of processor used on your device. You can also specify a name for your device.
	<b>Backlight</b> To set the backlight timeout and adjust Brightness, External power, Button settings.
	<b>Certificates</b> To see information about certificates that are installed on your device.
	<b>Clear Storage</b> Tap this icon only when you need to remove all your data and files from the internal or external memory and reset your device to factory default settings.
	<b>Customer Feedback</b> You can participate to the Customer Experience Improvement Program by sending your feedback to Microsoft.
	<b>Encryption</b> Allow files on your storage card to be encrypted. Encrypted files will be readable only on your device.
	<b>Error Reporting</b> To enable or disable error reporting when errors occur on your device.
	<b>External GPS</b> To set the appropriate GPS communication port, if required. You may need to do this when there are programs on your device that access GPS data or you have connected a GPS receiver to your device. See Help for details.



Icon	Description
	<p><b>Optical Joystick</b> Select your Joystick settings. If you choose <b>Mouse</b>, a mouse cursor appears on the screen and you can use your joystick as a mouse. If you choose <b>4-Way Key</b>, you can use your joystick as a navigation key. You don't need to press the joystick when you move the cursor.</p>
	<p><b>LG X Button</b> Sets the "X" button to end programs immediately when you tap the button.</p>
	<p><b>Managed Programs</b> This is where you can see the installation history of your device.</p>
	<p><b>Memory</b> To check the device memory allocation status and memory card information.</p>
	<p><b>Power</b> To check the remaining battery power. You can also set the timeout for turning off the display (switching device to Sleep mode) to conserve battery power.</p>
	<p><b>Regional Settings</b> Sets the regional configuration, including the format for displaying numbers, currency, date and time on your device.</p>
	<p><b>Remove Programs</b> To remove programs that you installed on your device.</p>
	<p><b>Screen</b> To re-calibrate the screen and change the screen text size.</p>
	<p><b>System information</b> Checks your system information and storage information.</p>

## Using the Start Menu







Icon	Description
	<b>Task Manager</b> Checks active task information. You can also stop currently running programs.

### Connections menu

Icon	Description
	<b>BrowserConnect</b> To configure Internet Explorer to connect through one of the Access Point Names (APN): <b>WAP APN</b> : Default APN <b>Web APN</b> : Default preset Internet APN <b>NOTE</b> This service is not available in all countries. Please contact your service provider for further information
	<b>Connections</b> To set up one or more types of modem connection for your device, such as phone dial-up, GPRS, and more, so that your device can connect to the Internet or a private local network.
	<b>Domain Enrol</b> Connect your device to company resources.
	<b>Config.GPRS</b> Sets the GPRS authentication method, including None, PAP Authentication and CHAP Authentication.
	<b>USB to PC</b> Allows you to connect your phone to a PC via USB.
	<b>Wi-Fi</b> Allows you to customise Wi-Fi settings.






Icon	Description
	<b>Wireless Manager</b> Allows you to manage all wireless settings such as Wi-Fi, Bluetooth and Phone.
	<b>GPS Setting</b> Set the GPS Type either Assisted GPS or Standalone.

 
### Other device settings

Icon	Description
	<b>Bluetooth</b> Allows you to customise Bluetooth settings.
	<b>Clock &amp; Alarms</b> To set the device clock to the date and time of your local time zone or to a visiting time zone when you're travelling. Alarms can also be set at specified days and times of a week.
	<b>Lock</b> Set a password for your device.
	<b>Sound &amp; Notifications</b> To enable sounds for events, notifications, and more, and set the type of notification for different events.
	<b>Today</b> To customise the appearance of and the information to be displayed on the Today screen.
	<b>Microsoft My Phone</b> To synchronizes your phone's contents with your My Phone account at <a href="http://myphone.microsoft.com">http://myphone.microsoft.com</a>

# Calls



## Making a call or a video call

- 1 Touch  to open the keypad.
- 2 Key in the number on the keypad. To delete a digit, press the clear key.
- 3 Touch the  key or  to place the call. Touch  to place the video call.
- 4 To end the call, touch the  key.


**TIP!** To enter + for making international calls, press and hold down .

**TIP!** Press the power key to lock the touchscreen to prevent calls being made by mistake.

## Calling your contacts

- 1 From the Home Screen touch  to open your **Contacts**.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 From the list, touch the contact you want to call and select the number to use if there is more than one for that contact.
- 4 Touch **Voice call** or **Video call**.

## Answering and rejecting a call


When your phone rings press the call key  or **Answer** key on the screen to answer.

Press the end key  to reject an incoming call.

## In-call options




**Speaker** - Touch  to turn the speaker phone on. Touch again to turn off.

**Mute** - Touch  to turn the microphone off so the person you are talking to cannot hear you.

**Hold** - Touch  to put a call on hold.

**Menu** - Choose from a list of further in-call options

 - You can end the call.

 - Search your contacts during a call.

 - Add a memo during a call.


**Keypad** - Touch to open a numerical keypad for navigating menus with numbered options, when dialling call centres or other automated telephone services.

# Calls

## In-video call Options



**Private/Show** – Touch  to turn the video private(live)-mode on. Touch again to turn off

 
**Mute/Unmute** – Touch  to turn the microphone off so the person you are talking to cannot hear you


**Standard/Fine** – Touch  to request the talking party to control the video quality

**Capture** – Press the camera button to capture the video of the talking party.

**Menu** - Choose from a list of further in-call options

 - You can end the call.

**Zoom** – Touch  to zoom the current camera in.

**External/Internal** – Touch  to switch the camera between the internal and the external


**Keypad** - Touch to open a numerical keypad for navigating menus with numbered options, when dialling call centres or other automated telephone services.


## Adjusting call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.


## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the Home Screen touch  to open your **Contacts**.
- 2 Touch **Menu** and select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 4 Your contacts list will open. Select the contact you want to assign to that number by touching the phone number once.

To call a speed dial number, touch  on the Home Screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without having to touch **Voice call**.

## Viewing your call logs

From the Home Screen, touch , then touch **Recent history** in the COMMUNICATION tab.

Or, you can go to this menu by pressing Send Key > Menu > Call History.

View a complete list of all dialled, received and missed calls.




**TIP!** From any call log touch **Menu** and **Delete all calls** to delete all the recorded items.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

# Contacts

## Searching for a contact


### From the Home Screen

- 1 From the Home Screen touch  to open your **LGContacts**. Touch  and enter the contact name using the key pad.
- 2 Touch **Video call** or **Voice call** or the  key to place the call.

### From the main menu


- 1 Touch , touch **LGContacts** on the **COMMUNICATION** tab.
- 2 Touch **Menu** and **Search**.

## Adding a new contact

- 1 From the Home Screen touch  and touch **Menu** and **New contact**.
- 2 Choose whether to save the contact to **Handset** or **SIM**.
- 3 If you want to add a picture to each contact, touch **Add picture**.

- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter at least one.
- 5 Enter the numbers and assign a type to each of the numbers.
- 6 Eventually add an email addresses.
- 7 Assign the contact to one or more groups, choosing between **No group**, **Business**, **Personal**, **Family**, **Seasonal** or any groups you created.
- 8 You can also add a **Ring Tone**, **Web page**, **Home address**, **Company name**, **Job title**, **Office loc**, **Memo** and so on by clicking the **More** button.
- 9 Touch **OK** to save the contact.

## Creating a group

- 1 From the Home Screen Touch  and then touch **LGContacts** in the COMMUNICATION tab.
- 2 Touch **Menu** and select **New Group**.
- 3 Enter a name for the new group.
- 4 Touch **OK** to save the group.

**NOTE:** If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by touching the selected group once. Choose **View members, Edit the group, Send message, Send businesscard** or **Delete group**.

## Use your contact options

- 1 Touch **LGContacts** from the COMMUNICATION tab, then touch **Menu** and **Settings**.
- 2 From here, you can adjust the following settings:  
**Display name** - Choose whether to display the first or last name of a contact first.

## Viewing information

- 1 Touch **LGContacts** from the COMMUNICATION tab, touch **Menu** and touch **Information**.
- 2 From here you can view **Service Dial Numbers, Own Numbers, your Memory Info**. (memory space remaining) and **My Business Card**.

# Contacts

**TIP!** To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **OK** to finish.

## Transferring your contacts

To transfer your contacts from your USIM to phone:

- 1 From the COMMUNICATION tab, touch **LGContacts** and touch **Menu** then select **Change location**.
- 2 Touch **Copy to handset**.
- 3 Select names one by one and touch **OK**.

# Messaging



## Messaging

Your GM750 combines SMS and MMS into one intuitive easy-to-use menu.

There are two ways to enter messaging:


- 1 From the Home Screen, touch  or , then scroll to **Message** from the COMMUNICATION tab.

## Sending a message

- 1 Touch  then **Write New Message** to begin composing a new message
- 2 Touch **To** enter the recipient's number, or touch  to open your contacts. After entering the recipient's number, you can go back to the message composer screen by touching OK. You can add multiple contacts.

- 3 When you have finished, touch the message box below to start composing the text message.

- 4 Touch  to insert Image, Video, Sound or Others.

- 5 Touch **OK** then press .

## Message folders

Your Messaging Folder structure is outlined below.

**Inbox** - All messages you receive are stored in your inbox. From here you can view and delete them, as well as other functions.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent Items** - Messages that have been sent are stored in this folder.

**Drafts** - If you don't finish writing a message, you can save what you've done in this folder.

# Messaging

**Threaded Box** - You can view messages as you send or receive them, as you would experience with an instant messaging client.

**My Folders** - Create folders to store your messages.

**Deleted Items** - Messages you delete are stored in this folder.

## Changing your text message settings

Your GM750 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Scroll through **Message Settings** from the SETTINGS tab and touch

**Text Message**. You can change the following:

**Text message Centre** - Enter the details of your message centre.

**Delivery Report** - Slide the switch to the left to receive confirmation that your messages have been delivered. This feature works only if a set of conditions are met; the sender's network, the receiver's network and the receiver's Windows Mobile device all support it.

**Save sent message** - On/ Off

## Changing your multimedia message settings

Your GM750 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

In the **Message** menu, touch **Settings**, then select **Multimedia message**. You can make a change to the following:

**MMS Center** - Enter the details of your message centre.

## **Retrieval mode**

### ▶ **Retrieve Immediately**

**On:** Receive MMS messages immediately.

**Off:** Receive notifications only.

### ▶ **Download on Home Network only** - On/ Off

**Reject all message** - Choose to not receive any MMS messages - On/ Off.

**Delivery Report** - Choose whether to allow and/or request a delivery report - Request report (On/ Off), Allow report (On/ Off).

**Read Report** - Choose whether to allow and/or send a read reply - Request report (On/ Off), Allow report (On/ Off).

**Message class** - Choose your message class - Personal, Advertisement, Informational and Auto.

**Priority** - Choose the priority level of your MMS - Low, Normal or High priority.

**Validity period** - Choose how long your message is stored at the message centre - 1 Hour, 6 hours, 12 hours, 1 Day, 3 Days or Maximum.

**Save sent message** - Choose where to save the message after sending - On/Off.

**Delivery time** - Choose how long to wait before a message is delivered - Immediately, After 1 hour, After 1 day or After 1 week.


**Slide duration** - Choose how long slides appear on screen - 2 seconds, 3 seconds, 4 seconds, 5 seconds etc.

**Memory in use** - Handset memory / External memory

# Messaging

## Setting up your email

You can keep in touch on the move by using your GM750 for email. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  from the Home Screen and scroll through **LG E-mail** on the COMMUNICATION tab.
- 2 To Create a new e-mail, select your E-mail account (e.g. MExchange) and select **Write E-mail**.

**NOTE:** You need the information from your network provider as follows: Server address, Domain name, User name, Password. You may also need installation of the certification distributed by the network provider on your device.

## Setting up your email through Microsoft® Exchange Server

- 1 From the Home screen or in the Start menu, tap the email icon > Settings > Add account > MExchange.
- 2 Enter your email address, password, domain name and server address.
- 3 Select "Automatic Search" to get the email settings automatically from the Internet.
- 4 If server settings are not detected, enter them manually, then tap "OK".

## Setting up your email on Others



- 1 From the Home screen or in the Start menu, tap the email icon > Settings > Add account.
- 2 Select **Others**.


- 3 Enter your Email Address, Email Password, Account Display Name and My Name.


**NOTE:** If you do not enter the name, the header of the email address will be saved automatically.

**NOTE:** At the specific email provider like hotmail, User should type full account name with domain in the "outgoing server login" field (ex: sample@hotmail.com)

### **Sending email / Write new email**

- 1 From the Home screen or in the Start menu, tap the email icon > Touch MExchange > Touch "Write E-mail".
- 2 Touch  right next to , and touch To/Cc/Bcc.
- 3 To enter the title, tap **Subject**.

- 4 You can attach a video or image file when you touch  in the right-hand corner of the screen.

- 5 Tap  to send the email.

**NOTE:** An email might not be saved in the outbox, depending on your mail account or server policy.

### **Sending email / Replying to an email**

You can reply, forward or reply all to an email.

- 1 From the Home screen or in the Start menu, tap the email icon > Touch **MSEXchange** > Tap **Inbox** > Tap the reply icon > Touch **Reply/ Reply all/ Forward**.
- 2 Enter the contents you want to send.
- 3 Tap **Send**.

# Messaging

## Changing email setting

Tap the email icon and touch Menu in the right-hand corner of the screen and touch Settings.

**Preview Line** - Allows you to set the preview line.

**Alert Sounds** - Set the alert sound when you receive an email.

**Signature** - Define whether to merge a signature to the message automatically.

**Font** - Set the Font Size and Font Type.

**Spam Message** - Set to sort spam message.

**When Deleting Messages** - Define whether or not email remains on the server.

**E-mail Download Restriction** - Set condition to retrieve email from server.

## Messenger

**NOTE:** This service is not available in all countries. Please contact your service provider for further information.

You can chat with other people using this menu. Messenger can only be used with a supporting USIM and country.

# Camera





## Taking a quick photo

- 1 Press the Camera hard key to launch.
- 2 Holding the phone horizontally, point the lens towards the subject you want to take a picture of.
- 3 Press gently the capture button and hold it down.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press firmly the capture button, the picture will be taken.

## Once you've taken the photo

 
Your captured image will appear on the screen. The image name is shown with four icons on the right-hand side.



-  Touch to send the photo as a **Message, E-mail** or via **Bluetooth**.
-  Touch to delete the image.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to use the image as Wallpaper or Contact Image.

# Camera

## Getting to know the viewfinder

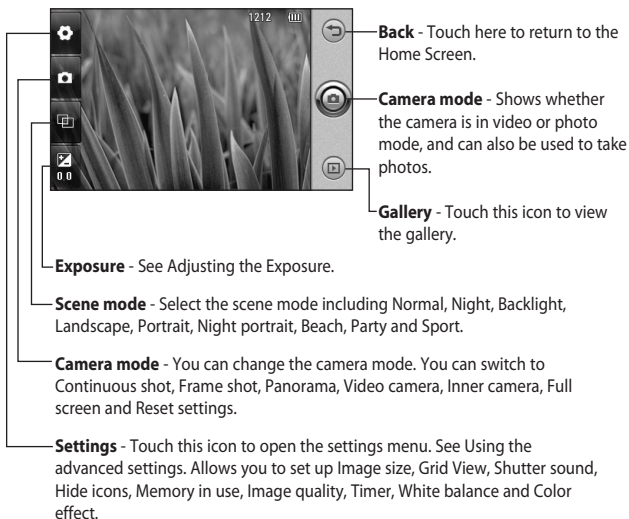

**Back** - Touch here to return to the Home Screen.

**Camera mode** - Shows whether the camera is in video or photo mode, and can also be used to take photos.

**Gallery** - Touch this icon to view the gallery.

**Exposure** - See Adjusting the Exposure.

**Scene mode** - Select the scene mode including Normal, Night, Backlight, Landscape, Portrait, Night portrait, Beach, Party and Sport.

**Camera mode** - You can change the camera mode. You can switch to Continuous shot, Frame shot, Panorama, Video camera, Inner camera, Full screen and Reset settings.

**Settings** - Touch this icon to open the settings menu. See Using the advanced settings. Allows you to set up Image size, Grid View, Shutter sound, Hide icons, Memory in use, Image quality, Timer, White balance and Color effect.



**TIP!** You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

## Adjusting the exposure


The exposure defines and controls the amount of light entering the image.

A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

1 Touch 

2 Slide the contrast indicator along the bar towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

You can change the camera settings by scrolling the wheel. After selecting the appropriate option, touch the **OK** button.

**Image size** - Change the photo size to save memory space or to take

an appropriate size picture for a contact.

**Color effect** - Choose a colour tone to use on your new photo. See a colour effect by choosing between **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green** and **Solarize**.

**White balance** - Choose between **Auto, Incandescent, Sunny, Fluorescent** and **Cloudy**.

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Select **Off, 3 secs, 5 secs** or **10 secs**. This is ideal if you want to be included in a photo.

**Image quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the phone's memory.

# Camera

**Memory in use** - Choose whether to save your photos to the **Handset memory** or the **External memory**.

**Hide icons** - Select whether to hide the icons on the camera menu automatically or manually.

**Shutter sound** - Select one of the shutter sounds.


**Grid view** - Choose between **Off**, **Simple cross**, **Trisection**

**TIP!** When you exit the camera, all your settings will return to default, except image size, Grid view, Shutter sound, Hide Icons and Image quality. Any non-default settings you require will need to be reset, for example colour effect. Check these settings before you take your next photo.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will be able to see the image change in preview behind the settings menu.

## Changing the image resolution


The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can alter the number of megapixels to make the files smaller.


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Image size** from the Preview menu.
- 3 Select one of the six available resolutions (**5M: 2560x1920**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**).

## Choosing a colour effect


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Color effect** from the Preview menu.
- 3 There are ten colour tone options: **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green** or **Solarize**.
- 4 Once you've made your selection, the colour tone menu can be closed by selecting **OK**. You are then ready to take a picture.

## Using the inner camera

- 1 To switch to the inner camera, touch  then select **Inner Camera**.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the capture button as normal.


- 3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.
- 4 To return to the main camera, touch  and then select **Outer Camera** from the Preview menu.


## Viewing your saved photos

You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

# Video Camera


## Making a quick video


- 1 Press the Camera hard key on the right-hand side of the phone.
- 2 Then touch  and select **Video camera** to switch to video mode.
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.


- 7 Touch  on the screen to stop recording.


## After shooting a video

A still image representing your video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with three icons on the right-hand side.

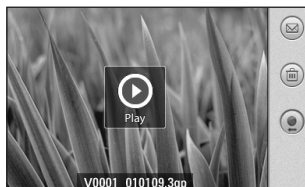 


 Touch to send the photo as a **Message, E-mail** or **Bluetooth**.

 Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

# Video Camera

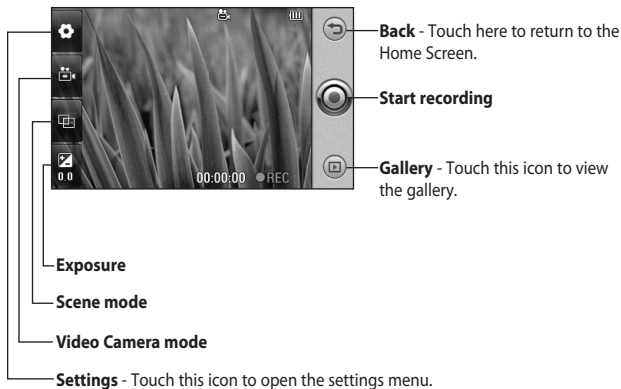 


## Getting to know the viewfinder




**TIP!** You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

## Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

## Using the advanced settings

Using the viewfinder, touch  to open all the advanced settings options.

You can adjust the video camera setting by scrolling the wheel. After selecting an option, touch the **OK** Button.

**Video size** - Change the resolution of the video to save memory space. Select a video resolution between 400 x 240, 320 x 240, 176 x 144 and 128 x 96.

**Grid view** - Choose between Off, Simple cross or Trisection.

**Voice** - Choose **Mute** to record a video without sound.

**Hide icons** - Select whether to hide the icons on the camera menu automatically or manually.

**Memory in use** - Choose whether to save your videos to **Handset memory** or **External memory**.

**Video quality** - Choose between **Super Fine**, **Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

## Video Camera

**Duration** - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size of the video to send it as an MMS.


**TIP!** If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

**White balance** - The white balance ensures that any white parts of your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.


**Color effect** - Choose a Colour tone to use for your video. Select a Colour tone between **Off**, **Negative**, **Sepia**, **Mono**, **Aqua**, **Emboss**, **Sketch**, **Red**, **Green** and **Solarize**.

### Changing the video resolution


The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can alter their resolution to make the files smaller.


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select one of the four resolutions:
  1. 400 x 240
  2. 320 x 240
  3. 176 x 144
  4. 128 x 96

## Choosing a colour effect


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Color effect** from the Preview menu.
- 3 There are ten colour effect options: **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green,** or **Solarise.**
- 4 Touch the colour tone you want to use.

## Using the inner video camera

- 1 To switch to the inner camera, touch  then select **Inner camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the video, press the capture button as normal and press it again to stop recording.


- 3 After you have shot the video you will be offered all the options available for a video shot using the main camera.
- 4 To return to the main camera, touch  and then **Outer Camera.**

## Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch the video you want to watch.

## Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

To access the Multimedia menu, touch  then select **My Stuff** from the MULTIMEDIA tab. You can open a list of the folders that store all your multimedia files.

### Pictures

**My Pictures** contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken with your phone's camera.

### My Pictures options menu


The options which are available to you in **My Pictures** depend on what type of image you have selected. All of the options will be available for pictures you have taken with the phone's camera.

### Sending a photo

- 1 To send a photo just select the picture you want.
- 2 Touch **Menu** and select **Send**. Choose from **Message**, **E-mail**, **Bluetooth**.
- 3 If you choose **Message** or **E-mail**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to.


## Using a picture

You can choose images to use as a wallpaper, contact, start-up or shut-down image, or as your outgoing or incoming call image.

- 1 Touch menu key  then select **My Stuff** from the MULTIMEDIA tab.
- 2 Touch **My Pictures**.
- 3 Select an image and touch **Menu**.
- 4 Touch **Use as** and choose **Wallpaper** or **Contact Image**.

## Moving or copying a picture

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images from being lost.

- 1 Touch menu key  then select **My Stuff** from the MULTIMEDIA tab.


- 2 Touch **My Pictures**.

- 3 Select an image and Touch **Menu**.

- 4 Select **Move** or **Copy**.

## Creating a slide show

If you want to view all the images on your phone, you can create a slide show to save you having to open and close each individual image.

- 1 Touch menu key  then select **My Stuff** from the MULTIMEDIA tab.
- 2 Touch **My Pictures**.
- 3 Touch **Menu** then **Slide show**.

## Checking your memory status

You can check to see how much memory space you have used and how much you have left available.

- 1 Touch menu key  then select **My Stuff** from MULTIMEDIA tab.

# Multimedia

2 Touch **My Pictures**.

3 Touch **Menu** then **Memory Info**.

## My Music

The **My Music** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**.

From here you can manage or send sounds or set them as ringtones.

## Using a sound

1 Touch menu key  then select **My Stuff** from MULTIMEDIA Tab.

2 Touch **My Music**.

3 Select a sound.

4 You can use the sound by selecting **Use as** menu.

5 Choose from **Ring Tone** or **Message tone**.

## Videos

The **My Video** folder shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

1 Touch menu key  then select **My Stuff** from MULTIMEDIA Tab.

2 Touch **My Video**.

3 Select a video to play.

## Sending a video clip

1 Select a video and touch **Menu**.


2 Touch **Send** and choose from **Message, E-mail, Bluetooth**.

3 If you choose **Message** or **E-mail**, your video clip will be attached to the message. If you choose **Bluetooth**, your phone will search for a device to send the video to.

## Games and Applications

You can download into your phone new games and applications to enjoy in your spare time.

## Playing a game

- 1 Touch menu key  then select **Games & Apps** from the MULTIMEDIA tab.
- 2 Windows games (Bubble Breaker, Solitaire) have been pre-installed. You can also download games from the internet. To play, tap the game that you want to play.


## Mobile Java

GM750 supports Java and hence you can easily download java games and other java applications from the internet.

Mobile Java has two sub-folders: Games and Applications.

Please note that additional costs may be incurred when using online services.

## Music

Your GM750 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then select **Music** from the MULTIMEDIA tab. From here, you can access a number of folders:

**All Tracks** - Contains all of the tracks you have on your phone.


**Artists** - Browse your music collection by artist.

**Albums** - Browse your music collection by album.





**Genres** - Browse your music collection by genre.

**Favourites** - Contains the songs you have saved as favourites.

## Playing a track

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Touch **All Tracks**.

## Multimedia


- 3 Select the track you want to play and touch .
- 4 Touch  to pause the track.
- 5 Touch  to skip to the next track.
- 6 Touch  to go back to the previous track.

**TIP!** To change the volume while listening to music, touch




### Creating a playlist

You can create your own playlists by choosing a selection of tracks from the **All Tracks** folder.

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Touch **Menu**.
- 3 Touch **New Playlist**, enter the playlist name and touch **OK**.
- 4 The All tracks folder will be displayed. Touch all of the tracks



that you wish to include in your playlist; a tick will **appear** next to each selected track names.

- 5 Touch **OK**.


To play a playlist, select it and touch .

**NOTE:** To add a second playlist, touch **Menu** then **New Playlist**.

### Playing a playlist

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Select the playlist you wish to play.
- 3 Touch  to play a playlist.

### Deleting a playlist

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Select the playlist you wish to delete.
- 3 Touch **Menu**.

- 4 Touch **Remove All** to remove all of the tracks from the playlist; your empty playlist will be deleted when you go to **All Tracks**.

## Using the radio

Your GM750 features an FM radio tuner allowing you to listen to your favourite stations on the move.

**NOTE:** You will need to attach your earphones to listen to the radio.

## Searching for stations

You can tune your phone to radio stations by searching for them manually or automatically. You can save stations to specific channel numbers so you don't have to keep re-tuning.

## Automatic tuning:


- 1 Touch  then select **FM Radio** from the MULTIMEDIA tab.
- 2 Touch **Menu**.
- 3 Touch **Scan**.
- 4 Select **Stop** to stop the auto scan.
- 5 If you want to save the current channel, touch **Menu** and select **Save preset**. You can designate the Preset name and Shortcut key. It can be found in the preset list.

## Listening to the radio

- 1 Touch .
- 2 Touch **FM Radio** in the MULTIMEDIA tab.
- 3 Touch  to bring up the preset list.
- 4 Touch the channel of the station you wish to listen to from the preset list.


## Multimedia

**TIP!** To improve radio reception, extend the headset cord that acts as the radio antenna.

 **WARNING:** If you connect a headset not specifically made for the phone, the radio reception can be affected.


## UTILITIES

### Adding an event to your calendar


- 1 From the Home Screen select  then scroll through **LGCalendar** in the UTILITIES tab.
- 2 Select the date you wish to add an event to.
- 3 Touch **Menu** then **New Appointment**.
- 4 If you wish to add a subject to your event, touch **Subject** and type in your note.
- 5 Check the date and time you want your event to begin. Enter the finish date and time also.
- 6 Select **Alarm** to set an alert for the event. If you want to repeat the alarm, select **Repeat**.
- 7 Touch **Categories** then choose between **Business, Holiday, Personal, Seasonal** or create **New category**.

- 8 Touch OK to save the event in the calendar. A coloured square cursor will show days with saved events and an alarm will sound at the set time.

### Changing your default calendar view

- 1 From the Home Screen select  then scroll through **LGCalendar** in the UTILITIES tab. Select **Settings** in **Menu**.
- 2 Touch **Set default view** and choose **Month, Week, Day, List** or **All Tasks**.


### Adding an item to your To Do list

- 1 From the Home Screen select  then scroll through **LGCalendar** in the UTILITIES tab.
- 2 Select **New Task** in **Menu**.

## UTILITIES

- 3 Set the date for the task, add notes, then select its priority level: **Low**, **Normal** or **High**.
- 4 Save the task by tapping **OK**.

### Setting your alarm

- 1 From the Home Screen select  then scroll through **Alarms** in the UTILITIES tab.
- 2 If you want to add a new alarm, touch **New Alarm**.
- 3 Or if you want to set the alarm to sound again within one hour, touch **Quick Alarm**.
- 4 Set the time you wish the alarm to ring.
- 5 Choose the repeat type you want the alarm to repeat. The icons indicate the weekday you select.
- 6 Select **Sound/Vibration** to select the type of alarm you prefer.


- 7 After touching the **More** icon, you can select **Alarm Bell**, control **Volume**, **Vibration** and **Type**.
- 8 Select the snooze interval between **5**, **10**, **20**, **30 minutes** or **Turn it off**. Then select snooze repeat.
- 9 Finally add a memo to the alarm.

### Using Office Mobile

#### Excel Mobile

Excel Mobile makes it easy for you to open and edit Excel worksheets and templates created on your PC. You can also create new worksheets and templates on your device.

**NOTE:** Work in full-screen mode to see as much of your workbook as possible.

- 1 From the Home Screen select .

- 2 Select Office Mobile in the UTILITIES tab, then choose Excel Mobile and open the worksheet.
- 3 Tap View > Zoom and select a percentage so that you can easily read the worksheet.

### Unsupported features in Excel Mobile

Excel Mobile does not fully support some features such as formulas and cell comments. Some data and formatting may be lost when you save the worksheet on your device.


### PowerPoint Mobile

With PowerPoint Mobile, you can open and view slide show presentations created on your PC in \*.ppt and \*.pps format.

Many presentation elements built into the slide shows - such as slide transitions and animations - will play back on the device. If the presentation is set up as a timed

slide show, one slide will move to the next automatically. Links to URLs are also supported.

### To start a slide show presentation

- 1 From the Home Screen select  then scroll through **Office Mobile** in the UTILITIES tab and select **PowerPointMobile**.
- 2 In the presentation list, tap the slide show you wish to view.
- 3 Tap the current slide to move to the next one.

If the presentation is set up as a timed slide show, slides will move on automatically.

### To stop a slide show


- In a PowerPoint Mobile presentation, tap ▲ and **End Show**.

### To navigate between slides

You can move to the next slide if a presentation is not set up as

## UTILITIES

a timed slide show, return to the previous slide, or go to any slide out of sequence.

- 1 From the Home Screen select  then scroll through **Office Mobile** in the UTILITIES tab and select **PowerPoint Mobile**.
- 2 Open the presentation you wish to view.
- 3 Tap **▲** and **Next** or **Previous**, or tap **Go to Slide** and tap the slide you wish to view.

### TIP!

- ▶ Simply tap the current slide to go to the next one.
- ▶ If you have zoomed in to see a slide in more detail, you cannot navigate to another slide until you zoom out. Tapping Next or Previous may play an animation on a slide rather than navigate to another slide.


### Word Mobile

Word Mobile is a streamlined version of Microsoft Word. Word documents created on your PC can be opened and edited on your device. You can also create and edit documents or templates in Word Mobile and save them as \*.doc, \*.rtf, \*.txt, and \*.dot files.

You can only have one document open at a time. When you open a second document, the first one is saved and closed automatically.

When you close a newly created document, it is automatically named after the first few words in the document and placed in the Word Mobile document list. You can easily rename the document with a more meaningful name and move it to another folder or a memory card.

### To create a file


From the Home Screen select  then scroll through **Office Mobile** in the UTILITIES tab and select

#### **World Mobile.**

- 1 In Word Mobile, tap New.
- 2 You will see either a blank document or template, depending on what you have selected as the default template.
- 3 Type a text.
- 4 When you have finished, tap OK to save the file.


Word Mobile does not fully support all features of Microsoft Word such as revision marks and password protection. Some data and formatting may be lost when you save the document on your device.

### Using your calculator

- 1 From the Home Screen select , then scroll through **Calculator** in the UTILITIES tab.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you require (+, -, x, ÷), followed by =.

### Using your File Explorer


Allows you to explore the files saved on your phone.

- 1 From the Home Screen select , then scroll through **File Explorer** in the UTILITIES tab.
- 2 Touch the folder you wish to see.

## UTILITIES

### Mobile Zip

Mobile Zip is a comprehensive archiving tool for viewing and extracting a wide range of archiving formats.

Touch , and select Tools in the UTILITIES tab, then tap Mobile Zip.

#### Main Features of Mobile Zip

- Multi-tab user interface
- Open and browse a wide range of archive formats
- Extremely easy to use with user friendly interface
- Single-handed operation with extensive softkeys and navigation buttons support
- Two folder views that enable user to copy, move, extract and add to archive from one to the other in a breeze
- Extract-View-Edit cycle supported. Open an item in the archive, edit it and have it inserted back in the

- Open archive as regular folder in the folder views
- Encryption: Mobile Zip includes standard zip 2.0 file encryption which is compatible with other major zip file applications on the desktop, and AES 256 bits advanced encryption Which is available to some of the latest zip utilities on desktop computers.
- Encryption: Mobile Zip includes password manager (PassMan) that makes it easy for user to store and retrieve passwords using a single master password
- Encryption: Password-Manager view provides links to password list settings.

#### Views

- ▶ **Home** view is used mainly as a startup page where you learn some basic features of the application and go through the setup.

- ▶ **First-Folder and Second-Folder** views are double-folder views that have been designed to make copying, moving, extracting and archiving data an extremely easy task
- ▶ **PassMan** view is a password-manager view with some setting links that enable user to organise passwords in a single, master password-encrypted database
- ▶ **Options** view provides you with links to settings dialogues and other informative links

### Creating Zip Archive

In the selected folder, select an item or items, tap and hold on the selected item or items. When the shortcut menu appears scroll down to select:

- **Add to archive...:** Allows you to add archive with options to set password, name and type.
- **Add to 'name.zip':** Allows you to add directly the named archive without password.

### Extracting Archive(s)

In the selected folder view, tap and hold on the selected archive(s). On the folder shortcut context menu, select:

- **Extract...:** Allows you to extract the selected archive(s). with option to set a destination folder, set a password, select extraction behaviour etc.
- **Extract Here:** Allows you to simply extract the content of the selected archive(s) in the current folder.
- **Extract to 'name folder':** Allows you to simply extract the content of the selected archive(s) to the named folder.

## UTILITIES

### Password Manager

Password manager is a password-managing module that facilitates easy but secure password management. The password database file is saved in the application directory as an AES-256-encrypted file based on the master password. If you forget your master password, you lose the password list. In that case you need to use the Delete All command to delete the password list and create a new one. In the PassMan view you have the following options:

- **Password Status Switch** enables user to switch the password manager on and off. User will be prompted to enter the master password to activate password manager. Once activated, in the password dialogue the right-hand softkey will display the PassMan command. Use it to access the password list in


the password dialogue for any archive that prompts the user for a password. If a password list has not been defined, switching on the password manager will create a password database and the user will be prompted to input a master password for the database.

- **Password List** is the link to a dialogue that manages the user's password list. In the dialogue, use the right-hand softkey to add, edit, delete or save a password of the list. To add a new password, select New, fill in the ID and Password and then select Apply.
- **Master Password** enables the user to set a new master password for the existing password list.
- **Delete All** allows the user to delete the entire password list without prompting the user for the master password. Use it if you have forgotten your master password.

## **Adobe Reader LE**

Adobe Reader LE is an extension of the Adobe PDF software for mobile phones. It allows to reliably view rich, high-impact, more secure content on your GM750.

### **To view a file**

From the Home Screen select the  then scroll through Tools in the UTILITIES tab and select Adobe Reader LE.

Find the file you want to see.

# ActiveSync

ActiveSync synchronises information on your device and on your PC, such as Outlook content. ActiveSync can also synchronise over a cellular network with a Microsoft Exchange Server if your company or service provider is operating one with Exchange ActiveSync. When you synchronise, ActiveSync compares the information on your device with the one on your PC and/or Exchange Server, then updates all locations with the most recent information.

With ActiveSync, you can:

- ▶ Synchronise information such as Outlook Emails, Contacts, Calendar appointments and Tasks between your device and your PC, as well as pictures, videos and music.

- ▶ Synchronise Outlook Emails, Contacts, Calendar appointments and Tasks on your device directly with Exchange Server so that you can stay up to date even when your PC is turned off.
- ▶ Exchange files between your device and your PC without synchronising.
- ▶ Select which types of information are synchronised and specify the level of information to be synchronised. For example, you can define the time period of the Calendar appointments to be synchronised.

Before you can synchronise information with a PC, you need first to install ActiveSync on your PC. Then, you need to create a synchronisation relationship between your device and the PC. You can install ActiveSync from the internet, e.g. via <http://www>.

microsoft.com/windowsmobile/en-us/help/synchronize/device-synch.mspix

Once you have installed ActiveSync and set up a synchronisation relationship, ActiveSync on the PC recognises your device when you connect it and automatically transfers the synchronisation settings you specified on your device.

You may be able to synchronise your device with Exchange Server through your company or a wireless service provider. If you plan to do so, please obtain email address, Exchange Server address, user name, password and domain name from your administrator before starting the Sync Setup Wizard.

## **Setting up Windows Vista™**

Microsoft Windows Mobile® Device Centre is the replacement for Microsoft® ActiveSync® on Windows Vista™.

**NOTE:** Some versions of Windows Vista that come with Windows Mobile Device Centre are already installed. You can synchronize your e-mail, contacts, calendar, songs, pictures and internet favorites with your Windows-based PC. Start by visiting this Microsoft Web site - [www.microsoft.com/getstarted](http://www.microsoft.com/getstarted).

## **Set up synchronisation in Windows Mobile Device Centre**

When you connect your device to your PC and start Windows Mobile Device Centre for the first time, you will be asked to create a Windows Mobile partnership with your device. Follow the steps below to create a partnership.

## ActiveSync

- ▶ Connect your device to your PC. Windows Mobile Device Centre configures itself and then opens.
- ▶ On the licence agreement screen, click **Accept**.

**NOTE:** Choose **Connect without setting up your device** if you only want to transfer media files, check for updates and explore your device, but not sync Outlook information.

- ▶ Select the items you want to synchronise, then click **Next**.
- ▶ Enter a device name and click **Set Up**. When you finish the setup wizard, Windows Mobile Device Centre synchronises your device automatically. Note that Outlook emails and other information will appear on your device after synchronisation.

### Use Windows Mobile Device Center

To open Windows Mobile Device Center, click **Start > All Programs > Windows Mobile Device Center** on your Windows Vista computer. On Windows Mobile Device Center, you can do the following:

- ▶ Click **Mobile Device Settings** to change synchronisation settings.
- ▶ When you click **Pictures, Music and Video > \_\_\_ new pictures/video clips are available for import**, a wizard guides you through tagging and transferring photos from your device to the Photo Gallery on your Windows Vista PC.
- ▶ Click **Pictures, Music and Video > Add media to your device from Windows Media Player** to synchronise music and video files using Windows Media™ Player. For more information, see “Windows Media® Player Mobile” in Chapter 11.

- ▶ Click **File Management** > **Browse the contents of your device** to view documents and files from your device.

## Synchronising Information

When you connect your device to the PC using a USB or Bluetooth connection, ActiveSync will immediately synchronise. While the device is connected, ActiveSync synchronises every time you make a change on either the PC or the device.

### Synchronising Outlook information

If you have set up a synchronisation relationship between your device and the PC, synchronisation keeps Outlook information up-to-date on the computer and Mobile handset. ActiveSync synchronises a limited amount of information by default to save storage space

on your device. You can change the amount of information synchronised for a given information type in changing the Settings for the information type. You can set up your device to synchronise with more than one PC or with a combination of one or more PCs and Exchange Server. When synchronising with multiple computers, the items that you synchronise will appear on all of the computers with which they are synchronised.

For example, if you have set up synchronisation with two PCs (PC1 and PC2) which have different items, and you synchronise Contacts and Calendar on the device with both computers, the result is as follows:

# ActiveSync

---

## Location New state

---

### PC1

All Outlook contacts and calendar appointments that were on PC2 are now also on PC1.

---

### PC2

All Outlook contacts and calendar appointments that were on PC1 are now also on PC2.

---

### Device

---

All Outlook contacts and calendar appointments from both PC1 and PC2 are on the device.

## To start and stop synchronisation

- ▶ To synchronise Outlook information and other local information on the PC, including media files, connect your device to the PC using Bluetooth or a cable.

- ▶ If you are synchronising directly with an Exchange Server, you can use the PC connection to the network that is “Desktop Pass-through”, or you can synchronise without connecting to the PC over a cellular network.

- ▶ In ActiveSync, tap **Sync**. To end synchronisation before it completes, tap Stop. To change the type of information that is synchronised:

- 1 In ActiveSync on the device, tap **Menu > Options**.
- 2 Do one or both of the following:
  - ▶ Select the checkbox for any items you want to synchronise. If you cannot select a checkbox, you may have to clear the checkbox for the same information type elsewhere in the list.
  - ▶ Clear the checkbox for any items you want to stop synchronising.

- 3 To stop synchronising with one PC completely, tap the PC and tap Delete.

**NOTE:** Outlook emails can be synchronised with only one computer. To change the available synchronisation settings, select the type of information and tap Settings.

### To synchronise directly with an Exchange Server

You can set up a synchronisation with an Exchange Server on your device if it is available to you through your company or wireless service provider. However, you should first ask your administrator for the following information and then continue with the steps: email address, Exchange Server address, user name, password and domain name.

- 1 In ActiveSync on the device, tap **Menu > Configure Server**. If you have not yet set up synchronisation with an Exchange Server, it will say **Add Server Source**.
- 2 Enter the email address and tap **Next**.
- 3 In Server address, enter the address of the server running Exchange Server. Select the checkbox if this Server requires an encrypted (SSL) connection. Tap **Next**.
- 4 Enter user name, password and domain, then tap **Next**. To change the rules for resolving synchronisation conflicts, tap **Advanced**.
- 5 Select the checkboxes for the types of information items that you want to synchronise with Exchange Server.

# ActiveSync

**6** To change the available synchronisation settings, select the type of information and tap **Settings**.

**7** Tap **Finish**.

## Synchronising via Bluetooth

You can connect your device to the PC to synchronise using Bluetooth.

To synchronise with a PC via Bluetooth

- 1** First, check “Allow connections to one of the following” from the ActiveSync connections Settings menu on your PC. Select the proper COM port. If there are no available connections you should first create a Bluetooth pairing.
- 2** Select the ActiveSync item in the Programs menu, then ActiveSync↓Menu↓Connect via Bluetooth.

## Synchronising Music, Video and Pictures

If you wish to carry your music or other digital media with you while you travel, ActiveSync works with Windows Media Player to synchronise music, videos and pictures.

Other than selecting the Media information type in ActiveSync to be synchronised, all media synchronisation settings must be set in Windows Media Player. Before media can be synchronised you must do the following:

- ▶ Install Windows Media Player Version 10 on the PC.
- ▶ Connect your device to the PC with a USB cable. If the device is currently connected using Bluetooth, you must end that connection before media can be synchronised.

- ▶ Insert a storage card in your device (32MB or larger is recommended).
- ▶ Set up a sync partnership between the storage card and Windows Media Player.

### Change Media synchronisation settings

Once you select the Media information type in ActiveSync to be synchronised, any of your favourite music, video or picture files in Windows Media Player playlists can be synchronised. All you have to do is set up synchronisation in Windows Media Player for those media files.

To set up a sync relationship with a storage card


- 1 Open Windows Media Player.
- 2 Click the **Sync** tab.
- 3 Select the storage card.
- 4 Click **Set up Sync**.

# The Web

## Browser

**Browser** gives you a fast, full-colour world of games, music, news, sport, entertainment and much more straight to your mobile phone - wherever you are and whatever you're into.

## Accessing the web

- 1 From the Home Screen select  then select **Internet Explorer** from the COMMUNICATION tab.
- 2 The browser homepage will be opened directly.

**NOTE:** You will incur an extra cost by connecting to this service and downloading content. Check the data charges with your service provider.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the Home Screen select  then select **Internet Explorer** from the COMMUNICATION tab.
- 2 Select . The list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select . Enter a name for the bookmark followed by its URL.
- 4 Touch **Add**. Your Bookmark will now appear in the bookmark list.
- 5 To access the bookmark simply touch it. You will be connected to the corresponding URL.

## Using browser option menus

You can check the following menus by tapping **Menu**.

**Home Page** - You can access the home page directly.

**History** - You can display a list of the pages you've already viewed.

**Forward** - When viewing again previously viewed pages, selecting Forward displays the next page of the currently visited web site.

**Refresh** - Reload the currently displayed web site.

### View

- **Text Size:** Largest/Larger/ Medium/Smaller/Smallest
- **Enable Activex Controller:** check to enable ActiveX controller
- **Mobile (Default view):** This option identifies Internet Explorer Mobile 6 as a mobile browser.

- **Desktop:** This option identifies Internet Explorer 6 as a desktop browser. This lets you open the same full Web page you would retrieve on their desktop.

### NOTE

Those two options (Mobile and Desktop) help you control data consumption (mobile pages are less data intensive than desktop pages) by sending a different User Agent String to the server. Every time a mobile user string is sent, the content provider returns a mobile page if one is available. If no mobile page is available, the content provider returns a desktop page.

### Tools

- **Send Link:** You can send the Link in a text message , via SMS, MMS or Email.
- **Properties:** You can view the page's information.

## The Web

- **Options:** You can check more options.

**Copy/Paste** - You can copy or paste the text into a web page.

### Streaming Player

Welcome to Streaming Media Player, a client application that plays synchronized media streams (e.g. audio and video) while the content is transmitted to you over an IP network. It is designed and implemented according to 3GPP specifications for packet-switched streaming service.

The Streaming media player supports the following typical use cases.

**Video and Music On Demand (MOD and VOD):** Sign in contents portal for MOD and VOD. Navigate the listed music and video content on the site. Media player will be launched to stream in the content

for playback after user selects one to preview.

**Streaming Live TV:** Streams live TV show on to the mobile device.

### Launching Streaming Player

The Streaming Player application can be launched in several ways:

- ▶ Standalone mode after you select the Streaming Player application icon.
- ▶ From the Internet Explorer browser after you select a link of a video or audio file. The player will buffer the media data and then play.
- ▶ From SMS, MMS, or WAP Push by selecting a RTSP URL. The player will buffer the media data and then play.

## Select a Link from Internet Explorer

Launch Internet Explorer and browse the file links. Follow the steps below to play the file you want.

- 1** Click on the link you want to play with the stylus, or select the link by pressing the navigation keys, and press the "OK" key.
- 2** The Streaming Player launches and connects to the link at the same time.
- 3** If the link is invalid, an error message will pop up. Click "ok" to go back to Internet Explorer.
- 4** If the link is valid, the application will then buffer the file.
- 5** After buffering is complete, the media file will play.

## Enter a URL

If you launch the application in the standalone mode, you need to manually enter the URL which links to the file. Follow the steps below to enter a URL.

- 1** Launch the application by clicking the Streaming Player icon.
- 2** Click "Open" or click on the "Menu" and select "Open".
- 3** Input the URL in the "Enter URL" field using the input tool of the device, or select the URL from the Recent History list.
- 4** Click "Connect" to connect to the URL.

The application saves recently accessed URLs in the "Recent History" list. Click on the "Menu" and select "Remove All" to delete the "Recent History" list; select "Cancel" to quit the open URL dialog and go back to the main screen.

## The Web

- ▶ If the URL is valid, the application will buffer the file and then play it.
- ▶ If the URL is invalid, an error message will pop up. Click on “ok” to close the error message and click “Open” to enter a new URL

### Menu

The application provides a menu to help you manage the media files while playing:

**Open** - Go to the screen to enter and open a URL.

**Full Screen** - View the media files in full screen.

**Effect** - Adjust Brightness, Contrast and Saturation of video. You can preview in the small window. Tab “Done” to save the changes.

**Options** - Set options for network settings.

**Buffer** - Play the media file after buffering for the selected time.

**UDP Port Range** - Enter a customized value during the valid range from 1024 to 65535. The program selects a workable UDP Port from the range for RTP/TRCP transport. If the input value is not valid, an error message will pop up.

**Transport** - Select the transport mode for RTP.

UDP: UDP transport mode

TCP: TCP transport mode

Automatic: Program will decide to use UDP or TCP as the transport mode.

(UDP is the most common.) If your device is behind a NAT and the streaming server is on the internet, you will have trouble streaming media

data. The player will keep displaying buffering 0%. Try the TCP mode in this situation. Please note that some servers do not support TCP transport.

**Connect via** - Select the connection network. You may also configure the connections in the device's setting page.

**Properties** - Displays the current file information; information includes: Location, Duration, Type, Bit Rate, Video Audio Type, and Dimension.

**About** - Display information about Streaming Player and software license information.


**Exit** - Exit the application.

# Settings


In this menu you can personalise the settings of your GM750.

## Personalising your profiles

The SETTINGS tab allows you to personalise each profile setting.

- 1 From the Home Screen select  then scroll through **Profiles** in the SETTINGS tab.
- 2 Choose the profile you wish to edit: **Normal**, **Vibrate**, **Silent**, **Outdoor** or **Automatic**.
- 3 You can then change all of the sounds and alert options available in the list.

## Changing your Display settings

- 1 From the Home Screen select  then scroll through **Display Settings** in the SETTINGS tab.
- 2 You can choose the option menu from:

**Backlight** - Set your backlight settings.


**NOTE:** The longer the backlight stays on, the more battery power it uses and so you may need to recharge your phone more often.

**Wallpaper** - Choose your background.

**TIP!** ALC (Auto Luminous Control) Sensor LCD backlight brightness is automatically adjusted depending on the surrounding light.

## Changing your phone settings

Enjoy the freedom of customising your GM750 to operate according to your own preferences.

- 1 From the Home Screen select  then scroll through **Phone** in the SETTINGS tab.
- 2 You can choose one of the tab menu from the list below.

### Phone

- **Ring type:** This option defines the incoming call notification mode. You can select from **Ring, Increasing ring, Ring once, Vibrate, Vibrate and ring, Vibrate then ring, None.**
- **Ring tone:** You can select the ringtone for incoming voice calls.
- **Keypad:** You can set the key tone to be played when pressing the keys (Long tones/Short tones/Off)

**Security** - When PIN Security is set to **Enabled**, you are requested to enter your PIN each time you switch the phone on.

**Services** - To access settings for a service, select it from the following list and tap **Get Settings**.

### - Call Barring

Block incoming calls: All calls/  
When roaming/Off.

Block outgoing calls: All calls/  
International/International except  
to home country/Off

To edit mobile call barring settings, you need a password. You can obtain the barring password from your service provider upon subscription to this network service.

Call barring affects all voice and data calls, except emergency calls.

- **Caller ID:** Scroll to **Everyone** to let your caller ID be displayed to the people you call, **No one** to hide it or **Only to contacts** to let

## Settings

it be displayed when you call from the contacts.

- **Call Forwarding:** Allows you to forward your incoming calls to another phone number or to your voicemail.
- **Call Waiting:** To be notified of incoming calls while you have a call in progress, select Notify me.
- **Voice Mail and Text Messages:** When you insert the USIM card in your phone, it automatically detects and sets your voicemail and SMS servers by default. However, you can view the settings if you want. You can also view your voicemail numbers by tapping Voice Mail on the Speed Dial screen.
- **Fixed Dialing:** Select Fixed dial numbers to turn on and compile a list of numbers that can be called from your phone. When activated, only numbers included in the fixed dial list can be called from

your phone.

**Network** - You can select the network type and the manner of selecting networks.

- **Current network:** The current Network is displayed in the Current network field.
- **Network selection:** Define how to choose between different available networks when travelling. For example, if you choose **Manual**, you can select the network yourself. Scroll to the desired network and tap **OK** on the upper right side of the screen. To have the network selected automatically choose **Automatic**.

**TIP!** Manual selection can be useful when you know that one network is less expensive than another or that it provides faster data transmission.

- **Preferred networks:** Tap **Set Networks** (retrieving settings may take a few minutes). Select a network and re-prioritise the order for network usage by tapping **Move Up** or **Move Down**.

**Info. Service** - Info service messages are text messages sent by the network to GSM phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies and stock prices. Each type of information is associated with a number that can be obtained from the service provider. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly.

- **Cellbroadcast:** You can set the reception status.


- **Language:** You can select a language you want by tapping on it. The info service messages in the selected language will be received.

- **Select channel to edit or `delete:** You can manage the channels to receive information from.

**Band** - Select the band type that you want to use. You can choose **Automatic**, **3G Only** or **2G Only**. If you choose 2G Only, 3G services such as video call can not be used.


**Keystone** - Select between **Melody** and **Beep**.

## Using flight mode

- 1 From the Home Screen select  then select **Wireless Settings** in the SETTINGS tab.
- 2 Set the **Flight Mode** to **ON** by tapping the icon. Flight mode will not allow you to make calls, connect to the Internet or send messages.

# Settings

## Change Date and Time

- 1 From the Home Screen select  then select **Date & Time**.
- 2 Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

## Internet Sharing

Allows you to use your device as an internet sharing device.

### Note

- ActiveSync software version 4.5 or higher is required.

- 1 Connect the USB cable to the PC.
- 2 Tap Start > Internet Sharing.
- 3 Set PC Connection to USB or Bluetooth PAN
- 4 Set Network Connection to proper APN

- 5 Tap Connect in the bottom line
- 6 Data connection indicator (G/ E/ 3G) is displayed when PDP activation is performed successfully.

### Note

 
Operating System on your PC is required Windows XP SP2 or later.

## GPS Setting

### To Set GPS Type

- 1 Tap Start > Setting > Connections tab.
- 2 Tap GPS Setting.
- 3 Assisted GPS provides enhanced Standalone performance and speeds up the time required to determine initial GPS position by downloading latest Satellite information.  
But it requires a network connection and an extra charge to use Assisted GPS.

If you don't want it, please select  
Standalone GPS.

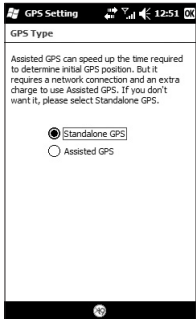

# Bluetooth

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset features Bluetooth connectivity, which allows it to connect compatible Bluetooth headsets, computer applications and so on.

## Turn on Bluetooth

From the Home Screen select  then select **Wireless Settings**.

Set the Bluetooth to **ON** by tapping the icon.

**NOTE:** If you use a PC sync via Bluetooth, you can exchange data only within the phonebook.

**NOTE:** When you receive data from another Bluetooth device, the phone requests a confirmation. After confirming the transfer, the file will be copied to your phone.

## Pairing with another Bluetooth device

While pairing your GM750 with another device, you can set up a code that makes the connection more secure.

- 1 Make sure that Bluetooth is **On**. See **Turn on Bluetooth** for more information.  
You can change your visibility in the **Settings** menu.
- 2 Select **Bluetooth** in the **SETTINGS** tab and touch **Add a device**.
- 3 Select a device type to limit the search and touch **Continue**. Your GM750 will search for Bluetooth devices.
- 4 Choose the device you wish to pair with.
- 5 Verify the code match on both devices and select **Yes**. Your phone will then connect to the other device.

**6** Your code protected Bluetooth connection is now ready.

## Sending and receiving files using Bluetooth

Bluetooth is a great way to send and receive files as it uses no wires and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

- 1** Open the file you want to send, which will typically be a photo, video or music file.
- 2** Touch **Menu** and choose **Send**. Choose **Bluetooth**.
- 3** If you have already paired the Bluetooth device, your GM750 will not automatically search for other Bluetooth devices. If not, your GM750 will search for other Bluetooth-enabled devices within range.

**4** Choose the device you wish to send the file to.

**5** Your file will be sent.


**TIP!** Check the progress bar to make sure that your file is being sent.

### To receive a file:

- 1** To receive files, Bluetooth must be turned **On**.
- 2** A message will prompt you to accept the file from the sender. Touch **Accept** to receive the file.
- 3** You will see the sender of the file, the name of the file and where the file has been saved.

# Bluetooth

## Changing your Bluetooth settings

1 From the Home Screen select  then scroll through **Bluetooth** in the SETTINGS tab.

2 Select **Settings** tab.

**Add a device** - Setup a new Bluetooth device.

**Disable Bluetooth** - Choose to deactivate Bluetooth.

**Name** - Check your device name that other devices see when your device is "discoverable". You can change the name or use the Windows Mobile name.

**Discoverable** - Make your device visible only when you wish other Bluetooth devices to find it. You can choose an option between **Always Visible**, **Visible for 60 seconds** or **Not Visible**.

**Advanced** - Set up additional options.

**About** - check your Bluetooth information.

## Wi-Fi


Wireless Settings allows you to manage Wi-Fi Internet on your device. It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

### WARNING

This device uses non-harmonised frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

### Turn on Wi-Fi

- 1 From the Home Screen select  then select **Wireless Settings** from the SETTINGS tab.
- 2 Set the Wi-Fi to **ON** by tapping the icon.

### Set up Wi-Fi

- 1 Make sure that Wi-Fi is On.
- 2 A bubble window pops up and shows detected Access Points.
- 3 Select the Access Point you are permitted to access and tap **OK**.
- 4 Select internet to have an internet service and tap **Connect**.

**NOTE:** If your Wi-Fi service provider or network administrator sets WEP encryption for network security, you should fill in the WEP key in the pop-up window. If WEP encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask your Wi-Fi service provider or network administrator for it.

# Wi-Fi

## Wireless network settings

A wireless network can be added either when the network is detected or manually by entering settings information. Before performing these steps, determine if you need authentication information.

- 1 Tap **Start** > **Settings** > **Connections** tab > **Wi-Fi** > **Wireless** tab.
- 2 Under **Networks to access**, select **All available**, **Only access points** or **Only computer-to-computer** for the list, depending on the type of networks to which you connect.
- 3 Do one of the following
  - If you do not see a desired network, tap **Menu** > **Add New**.

- To change network settings for a network you have already configured, tap **Network Adapters**.

- 4 Proceed through the wizard to the **Configure Network Authentication** page.
  - Select the authentication method from the **Authentication** list - Open, Shared, WPA, WPA-PSK, WPA2 and WPA2-PSK.
  - To use data encryption, select an encryption method from the **Data encryption** list - Disabled, WEP
  - To use a network key automatically, tap **The key is automatically provided**. Otherwise, enter the network key.

## Configuring Wi-Fi Connection Settings

**NOTE:** Before you set the WLAN configuration, you need to ask your WLAN service provider or network administrator for the IP settings.

- 1 Tap **Start > Settings > Connections** tab > **Wi-Fi**
- 2 Select **Network Adapters** tab.
- 3 Tap **Network Adaptor** tab and select **Broadcom 802.11 DHD Network**.
- 4 If you tap **Use server-assigned IP address**, you can get IP settings assigned automatically. If you tap **Use specific IP address**, you need to set the IP address assigned by your WLAN service provider or network administrator.
- 5 Fill in **IP address**, **Subnet mask** and **Default gateway**.
- 6 Tap **Name Servers**.

- 7 Fill in **DNS** and **Alt DNS**, **WINS** and **Alt WINS** if necessary.

**NOTE:** To prevent a possible loss of data on your phone, WLAN automatically ends when the battery is almost empty or at a level less than five per cent.

# DUN

## NOTE:

- ▶ Before activating DUN, make sure your device has a GPRS SIM card installed, and you have set up a GPRS modem connections on your device.

Also make sure you have GPRS SIM support DUN, and connected your device to a computer via USB.

- ▶ To use DUN, you have to install the LGUSBWMLModemDriver on your computer. Refer the below site. [www.lgmobile.com](http://www.lgmobile.com)
- ▶ When you activate DUN, ActiveSync will be disabled automatically.

## To Set up your device as an USB modem

- 1 On your device, tap **Start** > **Programs** > **DUN**
- 2 Plug in the USB cable adapter between your device and the computer.

- 3 Tag Activate.

## To add your device as a USB modem to your Computer

- 1 On your computer, click **Start** > **Control Panel**.
- 2 Double-click Phone and Modem Options.
- 3 Click the Modems tab. Select the new modem from the Modem list, then double click the new Modem.
- 4 On the Advanced tab, add following AT command to the Extra initialization commands:  
`AT+CGDCONT=1,"ip",<access point name>"`

**NOTE:** For example,  
`at+cgdcont=1,"ip",web.vodafone.de"`

## To dial up and connect to the Internet

- 1 On your computer, click **Start** > **Control Panel**
- 2 Double-click **Network Connections**.
- 3 Click File > **Create a new Connection**.
- 4 In the New Connection Wizard, click **Next**.
- 5 Click **Connect to the Internet** then click **Next**.
- 6 Select Set up my connection manually then click **Next**.
- 7 Select Connect using a dial-up modem then click **Next**.
- 8 Select the modem that you previously installed, then click **Next**.
- 9 Enter a descriptive name for this connection, then click **Next**.
- 10 Enter the telephone number as \*99# or Vender support number( ex, \*99\*\*\*1#), then click **Next**.
- 11 Under **Internet Account Information**, you may not need to enter a user name and password when using GPRS. Just click Next to proceed.
- 12 Click Finish to exit the wizard.
- 13 The Connect dialog box then opens, Click Properties to check again whether the LGE WML USB Modem is selected. If it is correct, click OK, and then, return to the connect dialog box.
- 14 Click **Dial** to dial up and connect to the Internet.

# Software Upgrade

## **LG Mobile Phone Software Upgrade Program**

For more information on installing and using this program, please visit <http://update.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note

down any important information in advance for safekeeping.

## Accessories

These accessories are available for purchase for use with your GM750.

### Charger



### Battery



### Stereo headset

 


### Data cable and CD

Connect and synchronise your GM750 and PC.



### Stylus pen



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

## Network service

The wireless phone described in this guide is approved for use on GSM 850, E-GSM 900, DCS 1800, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that can be offered through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### **General**

Product name: GM750

System: GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 / W-CDMA

### **Ambient Temperatures**

Max: +55°C (discharging),  
+45°C (charging)

Min : -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

### Model Name

GM750

### Trade Name

LG

CE 0168

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1 / EN 301 489-24 V1.4.1  
EN 300 328 V 1.7.1  
EN 60950-1 :2001  
EN 50360-2001/EN62209-1:2006  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

31. Aug. 2009

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel: +31 - 36- 547 - 8940, Fax: +31 - 36 - 547 - 8794  
email: jacob @ lge.com

Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Solutions</b>
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted. Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery empty Battery contacts dirty	Press the On/Off key for at least two seconds. Keep the charger connected for a longer period of time. Clean the contacts.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Solutions</b>
Charging error	Battery totally empty	Charge the battery.
	Temperature out of range	Make sure that the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Phone loses network	Battery defective	Replace the battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.





## Warranty Card 產品保用證

## Mobile Phone 手提電話

### 服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

## Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



**Welcome to contact for detailed information  
& Customer Care Centre address**

**歡迎致電查詢詳細資料及維修服務中心地址**

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

**Thank you for your purchase of LG Electronics product under the terms  
and conditions listed on this warranty card.**

**多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。**

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.  
Otherwise, this warranty will be voided.**

**重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。**

## Mobile Phone Warranty Policy

HK Area  
香港地區

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
  - (i) Handset :12 months
  - (ii) Charger :6 months
  - (iii) Battery :6 months
  - (iv) Hand free earphone :3 months.
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
  - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
  - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
  - (iii) The IMEI number sticker on this product has been erased or modified.
  - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

## Mobile Phone Warranty Policy

 
### 手提電話保用條款

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
  - (i) 機身：12個月
  - (ii) 充電器：6個月
  - (iii) 電池：6個月
  - (iv) 免提耳機：3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
  - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
  - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
  - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
  - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。

---

---

---



To:

LG Electronics HK Ltd.  
North Point Post Office Box No.54509  
香港北角郵政信箱54509號

## Limited Warranty

### 限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.

您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

## Customer Information

### 客戶資料

Purchaser's Name:   
客戶姓名

Address:   
地址

E-mail:   
電郵

Mobile:  Home:   
手提電話 家居電話

Model No.:   
型號

IMEI No.:   
機身IMEI編號

Date of Purchase:   
購買日期

Invoice/Sales Docket No.:   
購買單據編號



