


© Vodafone Group 2009. Vodafone and the Vodafone logos are trade marks of the Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners. P/N : MMBB0355810 (1.0) G

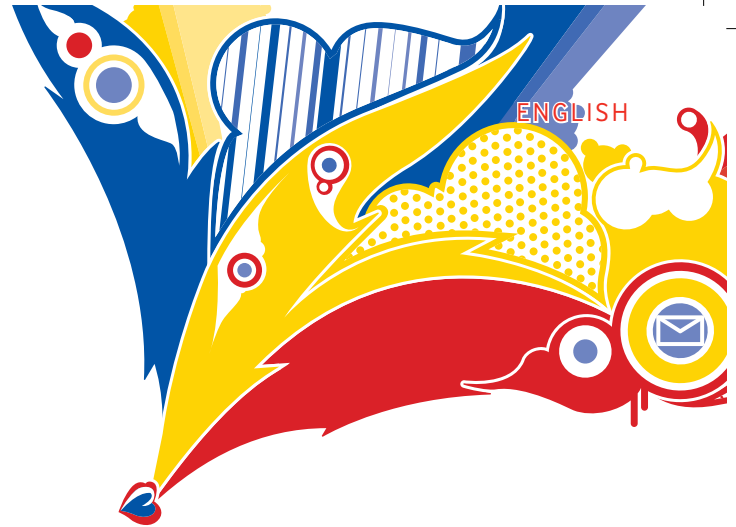

User Manual LG GM750



Bluetooth QD ID B015842



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind and disabled people as it has a touch screen keypad.



GM750 User Guide

C
a
w
d



Congratulations on your purchase of the advanced and compact GM750 phone from LG which is designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Contents

Guidelines for safe and efficient use	8	Using Block Recogniser	48
Getting to know your phone	20	XT9 Keypad	49
Open view	22	Using Transcriber	50
Installing the USIM and battery	23	Drawing and writing on the screen ..	54
Memory card	26	Recording a Note	56
Resetting the device	27	Searching for Information	57
Using your Touch screen	29	Calls	58
Using your Joystick	31	Making a call or a video call	58
Your Home Screen	32	Calling your contacts	58
Select Home Screen	32	Answering and rejecting a call	58
Customising the LG Smart Home		In-call options	59
Screen	32	In-video call Options	60
Customising the Windows Mobile		Adjusting call volume	61
default screen	34	Speed dialling	61
Quick keys	35	Viewing your call logs	61
Viewing the status bar	36	Contacts	62
Using the Multi-tasking function	37	Searching for a contact	62
Using the Start Button	38	Adding a new contact	62
Programs	38	Creating a group	63
Settings	41	Use your contact options	63
Entering and Searching for		Viewing information	63
Information	46	Transferring your contacts	64
Overview of Input Panel	46	Messaging	65
Using the Keyboard	47	Messaging	65
Using Letter Recogniser	48	Sending a message	65
		Message folders	65

48	Changing your text message settings.....	66	Video Camera.....	77
49	Changing your multimedia message settings.....	66	Making a quick video.....	77
50	Setting up your email	68	After shooting a video.....	77
54	Setting up your email through Microsoft® Exchange Server	68	Getting to know the viewfinder.....	79
56	Setting up your email on a well-known email Service Provider ..	69	Adjusting the exposure.....	80
57	Setting up your email on Others	69	Using the advanced settings.....	80
58	Sending email / Write new email.....	70	Changing the video resolution	81
58	Sending email / Replying to an email	70	Choosing a colour effect.....	82
58	Changing email setting.....	70	Using the inner video camera.....	82
58	Messenger.....	71	Watching your saved videos	82
59	Camera	72	Multimedia	83
59	Taking a quick photo	72	Pictures	83
59	Once you've taken the photo	72	My Pictures options menu	83
59	Getting to know the viewfinder.....	73	Sending a photo	83
59	Adjusting the exposure.....	74	Using a picture	84
59	Using the advanced settings.....	74	Moving or copying a picture.....	84
59	Changing the image resolution	75	Creating a slide show	84
59	Choosing a colour effect.....	76	Checking your memory status	84
59	Using the inner camera.....	76	My Music.....	85
59	Viewing your saved photos	76	Using a sound	85
			Videos	85
			Watching a video	85
			Sending a video clip.....	85
			Games and Applications	85
			Playing a game	86
			Mobile Java.....	86
			Music.....	86





Contents



Playing a track	86	The Web	107
Creating a playlist	87	Browser	107
Playing a playlist	87	Accessing the web	107
Deleting a playlist	87	Adding and accessing your bookmarks	107
Using the radio	88	Using browser option menus	108
Searching for stations	88	Service	109
Listening to the radio	88	Settings	110
Organiser	90	Personalising your profiles	110
Adding an event to your calendar	90	Changing your Display settings	110
Changing your default calendar view	90	Changing your phone settings	111
Adding an item to your To Do list	90	Using flight mode	113
Setting your alarm	91	Change Date and Time	114
Using Office Mobile	91	Internet Sharing	114
Using your calculator	94	GPS Setting	114
Using your File Explorer	94	Bluetooth	116
Mobile Zip	95	Turn on Bluetooth	116
Adobe Reader LE	98	Pairing with another Bluetooth device	116
ActiveSync	99	Sending and receiving your files using Bluetooth	117
Setting up Windows Vista™	100	Changing your Bluetooth settings	118
Set up synchronization in Windows Mobile Device Centre	100	Wi-Fi	119
Synchronizing Information	102	Turn on Wi-Fi	119
Synchronizing via Bluetooth	105	Set up Wi-Fi	119
Synchronizing Music, Video, and Pictures	105	Wireless network settings	120
		Configuring Wi-Fi Connection Settings	121

07
07
07
07
08
09
10
10
11
13
14
14
14
16
16
16
17
18
19
19
19
20
21

DUN	122
Software Upgrade	124
Accessories	125
Network service	126
Technical data	126
Troubleshooting	128

Guidelines for safe and efficient use

Symbol	Description	Symbol	Description
	Read the Safety Information section of this user guide on page 9		Switch off in explosive environments
	Do not use hand-held while driving		Do not use while re-fuelling
	For body-worn operation maintain a separation of 1.5 cm		This device may produce a bright or flashing light
	Small parts may cause a choking hazard		Do not dispose of in a fire
	This device may produce a loud sound		Avoid contact with magnetic media
	Keep away from pacemakers and other personal medical devices		Avoid Extreme Temperatures
	Switch off when instructed in hospitals and medical facilities		Avoid contact with liquid, keep dry
	Switch off when instructed in aircrafts and airports		Do not try and disassemble

Symbol	Description
	Do not rely on this device for emergency communications
	Only use approved accessories

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and

establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the

Guidelines for safe and efficient use

maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this device when tested for use when placed to the ear is 1.16 W/kg. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is

used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use when worn on the body is 1.12 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values

may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

FCC SAR information

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use when placed to the ear is 1.36 W/kg and when properly worn on the body is 1.06 W/kg.

Additionally, this device was tested for typical body-worn operations with the back of the phone kept

0.79 inches (2cm) between the user's body and the back of the phone.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2cm) must be maintained between the user's body and the back of the phone.

*** FCC Notice & Caution**

Notice!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device must not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Guidelines for safe and efficient use

Caution!

Changes or Modifications that are not expressly approved by the manufacturer could invalidate the user's authority to operate the equipment.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use the accessories like earphones cautiously. Do not press the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments. It may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm is maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker.

Guidelines for safe and efficient use

To ensure this, use the phone at the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
 - Give full attention to driving.
 - Use a hands-free kit, if available.
 - Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
 - When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
 - If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not press or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.

Guidelines for safe and efficient use


- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Antenna

Do not touch the antenna unnecessarily.

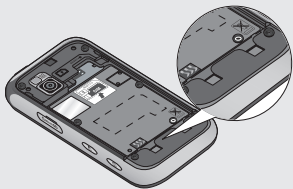

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to Maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in a bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest Authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- The actual battery life will depend on the network configuration, product settings, usage patterns, battery and environmental conditions.

Guidelines for safe and efficient use

Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

- Use your wireless phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
 - Australia Dial (0-0-0)
 - New Zealand Dial (1-1-1)
 - International Dial (1-1-2)
 - other local emergency number.Remember, it is a free call on your wireless phone for emergency services.
- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special nonemergency wireless number.

Getting to know your phone

Earpiece

Proximity sensor

Inner camera


End key

- Rejects a call.
- Press once to return to the Home Screen.

Joystick/Optical Mouse

Call key

Dials a phone number and answers incoming calls.

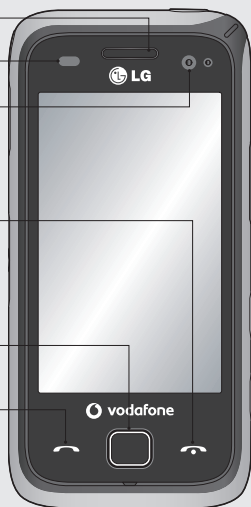


⚠ WARNING: Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protection film on the proximity sensor of the LCD as this can cause the sensor to malfunction.

**Charger, Data cable,
Ear Microphone
(USB cable)**

TIP: Before connecting the USB cable, wait until the phone has powered up and been registered on the network.

Volume keys

 - **When the screen is idle:** volume of system tone & ring tone.
- **During a call:** earpiece volume.
- **When playing a track:** controls track volume.



Power/Lock key

- Long press (3 secs) for Power ON / OFF.
- Short press to turn the screen off.



MicroSD Card Slot

Multi-tasking key

- Go to multitasking menu.

Camera key


- Go to camera preview directly by pressing the camera key when on homescreen.



Booting time

The cold boot time of the GM750 is about 150 seconds. Please take a first booting time (cold boot) into consideration. The cold boot will be occurred when you power on the device first after buying it. And when you make a cold boot, about 150 seconds will have to be needed for the initialization of the file system. After that, the booting time will be decreased as about 50 seconds.

Open view

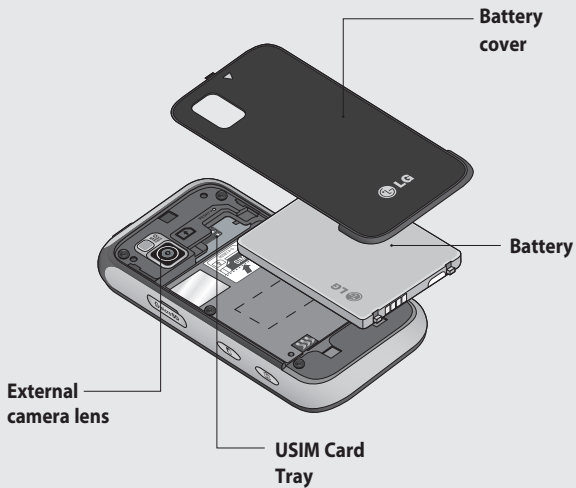

Installing the USIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



2 Remove the battery


Using the cut-out at the bottom, lift it from the battery compartment.



⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Put the USIM card into the USIM card holder. Make sure the gold-coloured contact area on the card is facing downwards. Push the USIM card holder back.

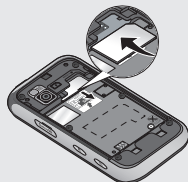

Installing the USIM and battery

4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.



5 Charging your phone

Open the charger socket cover on the side of your GM750. Insert the charger and plug it into a mains electricity socket. When you recharge your phone after device switch off, the phone's LED lights up red.

When the phone is fully charged, the LED lights up green.

When the battery is fully discharged, you can not power on the phone. It takes approx. 5-10 minutes to reach a charge state sufficient for booting.

It takes 20 minutes more for charging by USB connection.

If you press and hold the power button for approx. 1 second in charging mode, the phone is turned on.

If user inserts external charger, Charging animation will be shown and LCD Backlight will be dark.

If user presses and hold OK key while LCD Backlight is turned off, LCD Backlight is turned on again and show charging animation.

If the battery is critically low, image for the critical low battery will be shown and notify user to charge more time.

NOTE: The battery must be fully charged initially to improve battery lifetime.

WARNING: Do not connect the charger to the phone without the battery. You must check the battery is inserted before charging.

WARNING: Do not remove your battery or USIM card while charging.

WARNING: There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries in accordance with the maker's instructions.

WARNING: Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.

WARNING: Make sure that no sharp items come into contact with the battery. This could pose a fire risk.



Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

Slide the memory card into the slot at the top until it clicks into place. Make sure the gold-coloured contact area is facing downwards.

⚠ WARNING: Slide the memory card fully into the slot, otherwise damage can occur.

⚠ WARNING: Do not attach or remove a memory card when the phone is switched on, as this may damage the memory card.



Resetting the device


You may need to reset your device occasionally. A normal (or soft) reset of your device clears all active program memory and shuts down all active programs. This can be useful when the device is running more slowly than normal, or a program is not performing properly. A soft reset is also necessary after the installation of some programs.

If a soft reset is performed when programs are running, unsaved work will be lost.

You can also perform a hard reset (also known as a full reset). A hard reset should only be performed if a normal reset does not solve a system problem. After a hard reset, the device is restored to its default settings—the way it was when you first purchased it and turned it on. Any programs you installed, data you entered and settings you customised on the device will be lost.

To perform a soft reset

Find the Soft reset key.

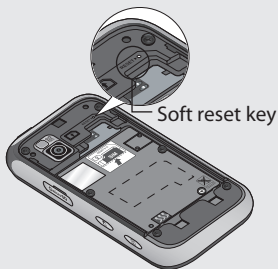

Use the stylus to press the reset key and hold it for a while. Your device may automatically restart and display the Home Screen.

Resetting the device

To perform a hard reset

A Hard Reset should only be performed after all other trouble shooting options have been exhausted. After a hard reset, the device is restored to its default settings - the way it was when you first purchased it and turned it on. Any programs you installed, data you entered and settings you customised on your device will be lost.

- 1 Power the device ON.
- 2 Tap **Start** > **Settings** > **System** tab > **Clear Storage**.
- 3 Enter 1234 for the password twice.
- 4 Press **Enter**.
- 5 Select whether to delete the Internal Memory or the External Memory (SD card) to reset.
- 6 You can also change the password by pressing Change Password.

Another way is via the hard key sequence

- 1 Power the device OFF.
- 2 Press and hold the following hard keys in sequence.



Keep the keys pressed until your LCDscreen turns on.

- 3 Align screen will appear upon power up if you had successfully completed the hard key reset.

Using your Touch screen

Touch screen tips

The Home Screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not press too hard; the touch screen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, press the power key once to restore the Home Screen.
- Whenever your GM750 is not in use it will return to the lock screen.

Calibrate the device

Calibrating the device screen involves tapping with the stylus the centre of a cross as it moves around the screen. This process ensures that when you tap the screen with your stylus, the tapped item is activated.

If your device does not accurately respond to screen taps, follow these steps to re-calibrate.

- 1** Tap **Start > Settings > System tab > Screen**.
- 2** On the **Alignment** tab, touch **Align Screen** and follow the instructions on the screen.
- 3** After calibration is completed, the Align screen reappears. Click **OK** on upper right corner.


Using your Touch screen

Control the touch screen

The controls on the GM750 touch screen change dynamically depending on the task you are carrying out.


Opening Applications

To open any Application, simply touch its icon.

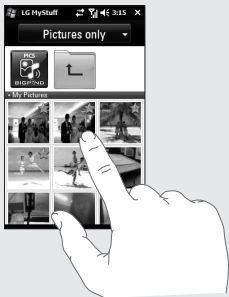

Scrolling


Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.

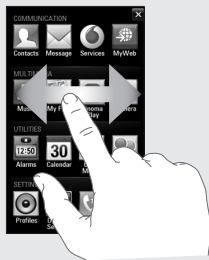

Using your Joystick

Select the Joystick function

- 1 Tap **Start > Settings > System** tab > **Optical Joystick**.
- 2 Select **Mouse Mode** if you want to use the Joystick as a trackpad to control the mouse pointer on screen. Click OK on the upper right corner.

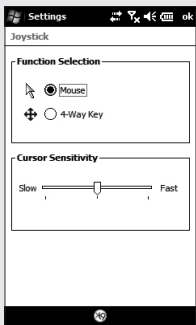

NOTE: 4-Way Key performance will depend on the speed of finger movement.

How to use your Joystick

- 1 Put your finger on the Joystick sensor and move smoothly. The Mouse cursor on the screen will move with your finger movement. You don't need to press the Joystick when you move the mouse cursor.
- 2 Place the mouse cursor on the icon that you want to execute and press (click) the Joystick. The application that you select will be launched.


Your Home Screen

From this screen you can access menu options, make a call, view the status of your phone and much more.

Select Home Screen

- 1 Touch **Start > Settings > Personal** tab > **Home Screen**.
- 2 Select a layout for your device Home Screen. If you select **LG Smart Home**, you will have a 5-Way Home Screen. If you select **Windows Mobile Default**, you can use Windows Mobile's Today screen.


Customising the LG Smart Home Screen

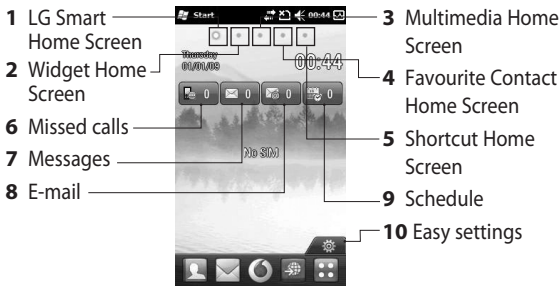

Get in touch with your GM750

- The User Interface is based on five types of Home Screen. To swap between the Home Screens just wipe quickly over the display from left to right or right to left.

 Widget Home Screen




The Widget Home Screen can show your favourite widgets. If you press and hold an icon you will be taken to the edit menu where all the available widgets not yet on your screen will be shown in a bar at the bottom of the screen. To scroll through them flick across the widget bar.

Multimedia Home Screen




The Multimedia Home Screen can show your favourite pictures on the right side of the screen and your favourite music on the left.

 Contact Home Screen



The contacts Home Screen can show your favourite contacts in a scroll through or list view.

 
Shortcut Home Screen



In the Shortcuts Home Screen, you can see the favourites shortcut icons.

Your Home Screen

Customising the Windows Mobile default screen

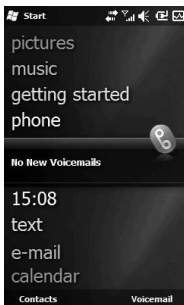

Touch **Start > Settings > Today > Items** tab.

- 1 Select the item you want to appear on the Today screen.
- 2 To change its position, tap **Move up** or **Move Down**. You can customise the further display options of Calendar and Tasks by tapping **Options**.
- 3 Check **Today timeout** then select the number of hours from

the drop down list.

If you don't use your phone after the specified duration has elapsed, the screen switches to the Today screen.

- 4 Touch **Start > Settings > Today > Appearance** tab.
- 5 You can select the desired theme for the background.
- 6 If you use your own background image, tap **Use this picture as the background**. Tap **Browse** to locate the file you want.












LG Smart Home Screen



The LG Smart Home Screen displays the missed call list, unread messages, Email and upcoming appointments, tasks and alarms. You can tap a section on the screen to open the associated program.

Quick keys

The quick keys on your LG Smart Home Screen provide easy, one-touch access to the functions you use most.








Icon	Description
	Touch to open your contacts. To search for the number you want to call: Enter the name of the contact by touching  next to the New Contact touchpad. You can also create new contacts and edit existing ones.
	Touch to access the Message menu. From here you can create a new SMS or MMS.
	Touch to access My web!
	Touch to access the Service menu directly
	Touch to open the main menu, which is divided into four sub-menus.
	Touch to bring up the touch dialling pad, which lets you make a call.
	Touch to access the E-mail menu. You can check your received Email and create new Email.
	Touch to access the Alarm menu directly.
	Touch to open your Calendar to check your schedule.
	Touch to enter the Music menu directly.








 








Your Home Screen







Viewing the status bar

The status bar uses different icons to show conditions such as signal strength, new messages and battery life as well as whether Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Bluetooth Hands-Free connection established
	Bluetooth Hands-Free channel opened
	Bluetooth High Quality Audio channel opened
	Indicates the battery power remaining
	Indicates the battery is very low
	Battery charging
	Sound on

Icon	Description
	Sound off
	Ringer in vibration mode
	Connection is active
	Connection is not active
	Synchronisation in progress
	Synchronisation error
	Indicates maximum signal strength
	No signal
	Indicates Bluetooth service
	No phone service
	Searching for phone service
	Voice call in progress
	Calls are forwarded
	Call on hold
	Missed call or rejected call
	GPRS (General Packet Radio Services) available

Icon	Description
	EDGE (Enhanced Data Rates For Global Evolution) available
	New email or text messages
	New voice mail
	There are more notifications. Tap the icon to view all
	USIM is not inserted. You can not use Network services without USIM
	Shows the list of running Applications by tapping this indicator


Using the Multi-tasking function

There are 3 ways to recall the Multi-tasking function.


- 1 By pressing the side key "Multitasking".
- 2 By tapping the Multi-tasking icon in the status bar.

3 By Touching **Start** > **LG S-CLASS**> **Multitasking**.

From here you can view the applications that are currently running and access or end them with one touch.

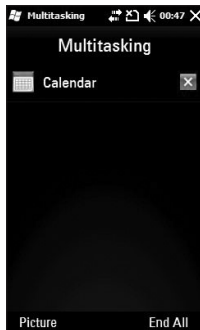


















Using the Start Button

A tap on the Start button located at the top left corner of the Today screen  displays a list of programs. It lets you easily switch from one program to another. You can start a program by selecting it from the menu.




Programs

The following are some of the icons for the programs that are already installed on your device.

Icon	Description
	LG S-CLASS To use LG Applications. Camera, Music and other Applications.
	Tools To Access an array of tools and utilities on your mobile device. Adobe Reader LE allows you to open and read PDF files, FM Radio allows you to listen to FM Radio, Mobile Zip allows you to view and extract a wide range of archiving formats. Stopwatch allows you to record the elapsed time of an event.
	ActiveSync To synchronise information between your device and a PC.
	Calculator To perform basic arithmetic calculations such as addition, subtraction, multiplication and division.
	Calendar To keep track of your appointments and creates meeting requests.

Icon	Description
	Contacts To keep track of your friends and colleagues.
	File Explorer Enables you to organise and manage files on your device.
	Getting Started Guides you through the general functions at device startup.
	Internet Sharing To use your device as an internet sharing device.
	Java Enables you to download and install Java applications, such as games and tools, on your device.
	E-mail To send and receive email and text messages.
	Messenger to send and receives instant messages with your Windows Live Messenger contacts.
	Notes To create handwritten or typed notes, drawings and recordings
	Pictures & Videos To collect, organise and sort picture and video files in the My Pictures folder of your device or on a storage card.
	Search Phone Allows you to find a file on your device.
	Task Manager To check active task information.
	Tasks To keep track of your tasks.






Using the Start Menu

Icon	Description
	DUN Use your mobile device as a modem.
	Windows Live Enables Windows Live Access.
	Windows Media Enables the multimedia function on your device.

Settings









You can adjust the device settings to suit the way you work. To see all available settings, tap **Start > Settings**, then tap the **Personal, System, Connections** and other device settings.










Personal menu

Icon	Description
	Buttons To assign a program or function to a hardware button.
	Home Screen To select a layout for your device.
	Input To set options for each of the input methods.
	Owner Information To enter your personal information on your device.
	Phone To customise phone settings such as ring tone, set a PIN number for your USIM card, and more.


Using the Start Menu

System menu







Icon	Description
	About This is where you can see basic information such as the Windows Mobile® version and type of processor used on your device. You can also specify a name for your device.
	Backlight To set the backlight timeout and adjust Brightness, External power, Button settings.
	Certificates To see information about certificates that are installed on your device.
	Clear Storage Tap this icon only when you need to remove all your data and files from the internal or external memory and reset your device to factory default settings.
	Customer Feedback You can participate to the Customer Experience Improvement Program by sending your feedback to Microsoft.
	Encryption Allow files on your storage card to be encrypted. Encrypted files will be readable only on your device.
	Error Reporting To enable or disable error reporting when errors occur on your device.
	External GPS To set the appropriate GPS communication port, if required. You may need to do this when there are programs on your device that access GPS data or you have connected a GPS receiver to your device. See Help for details.



Icon	Description
	<p>Optical Joystick Select your Joystick settings. If you choose Mouse, a mouse cursor appears on the screen and you can use your joystick as a mouse. If you choose 4-Way Key, you can use your joystick as a navigation key. You don't need to press the joystick when you move the cursor.</p>
	<p>LG X Button Sets the "X" button to end programs immediately when you tap the button.</p>
	<p>Managed Programs This is where you can see the installation history of your device.</p>
	<p>Memory To check the device memory allocation status and memory card information.</p>
	<p>Power To check the remaining battery power. You can also set the timeout for turning off the display (switching device to Sleep mode) to conserve battery power.</p>
	<p>Regional Settings Sets the regional configuration, including the format for displaying numbers, currency, date and time on your device.</p>
	<p>Remove Programs To remove programs that you installed on your device.</p>
	<p>Screen To re-calibrate the screen and change the screen text size.</p>
	<p>System information Checks your system information and storage information.</p>

Using the Start Menu







Icon	Description
	Task Manager Checks active task information. You can also stop currently running programs.

Connections menu

Icon	Description
	BrowserConnect To configure Internet Explorer to connect through one of the Access Point Names (APN): WAP APN : Default APN Web APN : Default preset Internet APN NOTE This service is not available in all countries. Please contact your service provider for further information
	Connections To set up one or more types of modem connection for your device, such as phone dial-up, GPRS, and more, so that your device can connect to the Internet or a private local network.
	Domain Enrol Connect your device to company resources.
	Config.GPRS Sets the GPRS authentication method, including None, PAP Authentication and CHAP Authentication.
	USB to PC Allows you to connect your phone to a PC via USB.
	Wi-Fi Allows you to customise Wi-Fi settings.

Icon	Description
	Wireless Manager Allows you to manage all wireless settings such as Wi-Fi, Bluetooth and Phone.
	GPS Setting Set the GPS Type either Assisted GPS or Standalone.


Other device settings

Icon	Description
	Bluetooth Allows you to customise Bluetooth settings.
	Clock & Alarms To set the device clock to the date and time of your local time zone or to a visiting time zone when you're travelling. Alarms can also be set at specified days and times of a week.
	Lock Set a password for your device.
	Sound & Notifications To enable sounds for events, notifications, and more, and set the type of notification for different events.
	Today To customise the appearance of and the information to be displayed on the Today screen.
	Microsoft My Phone To synchronizes your phone's contents with your My Phone account at http://myphone.microsoft.com






Entering and Searching for Information

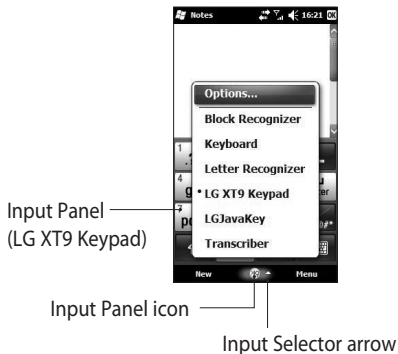You can set various screen input methods, including **Block Recogniser**, **Keyboard**, **Letter Recogniser**, **LG XT9 Keypad**, **LGJavaKey**, **Transcriber**. The Input Panel icon appears on the menu bar to indicate which input method is currently selected. The Input Selector arrow (shown on the right side of the Input Panel icon) opens a list of available input methods. **Notes** menu is used in the examples below.

Overview of Input Panel



To change the input method, tap the Input Selector arrow.

Icon	Indicates the selected input method is
	The on-screen keyboard
	Transcriber.
	Letter Recogniser or Block Recogniser
	XT9 Keypad
	LGJavaKey

Using the Keyboard

To enter text, symbols and numbers, you can either type using the QWERTY Keyboard, ABC characters or the standard on-screen **Keyboard**.

Using the standard on-screen Keyboard

The on-screen Keyboard is available when text entry is possible. You can enter text by tapping keys on the keyboard that is displayed on the screen.

Enter text using the on-screen keyboard

- ▶ The on-screen keyboard is available when text entry is possible.
- ▶ To make the keys larger, tap the Input Selector arrow, and then **Options**. In the **Input method** list, select **Keyboard** and then tap **Large Keys**.
- ▶ The general rule for entering text is the same as that for an MS-based PC.


Entering and Searching for Information


Using Letter Recogniser

With Letter Recogniser, you can write individual letters, numbers and punctuation, which are then converted to typed text.

Enter text using Letter Recogniser

- ▶ Letter Recogniser is available when text entry is possible.

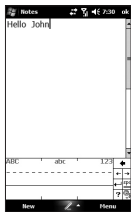


- ▶ Check  to see the demo for **writing** characters.

Using Block Recogniser

With Block Recogniser, you use a single stroke to write letters, numbers, symbols and punctuation, which are then converted to typed text.



- ▶ Block Recogniser is available when text entry is possible.
- ▶ With Block Recogniser, you use a single stroke to write letters, numbers, symbols and punctuation, which are then converted to typed text.


- ▶ The preferred word list will disappear if there is no user response within 6 seconds.
- ▶ Enter letters by writing in the abc (left) area of the box.
- ▶ Enter numbers by writing in the 123 (right) area of the box.
- ▶ Enter symbols and punctuation by tapping in either area of the box and then writing the desired character.
- ▶ Check  to see the demo for **writing** characters.


XT9 Keypad


With XT9 keypad, keys displayed on the screen. This is the most common way to enter text with word prediction function.



- ▶ XT9 Keypad is available when text entry is possible.
- ▶ Enter letters by tapping the keys labelled with the required letters.


 Touch to turn on T9 predictive texting.

 Tap to switch between numbers, symbols and text keypads.

 Short press switches to uppercase for one key press, long press switches to caps lock mode.

Entering and Searching for Information

XT9 mode

In XT9 mode, you will see . XT9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional multitap mode.

This is sometimes known as predictive text. This feature is supported only in portrait screen.


NOTE: You cannot activate XT9 in the Search input box.

ABC mode

You can enter letters by tapping the key labelled with the required letter once or more until the correct letter is displayed. Tap once for the first letters and twice for the second letters. This mode is known as multitap mode.

LGJavaKey

LGJavaKey is the navigation key used when you use a Java application. You cannot therefore enter letters using LGJavaKey.

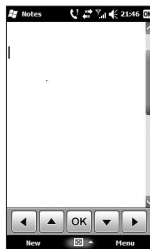

Using Transcriber

Transcriber is a handwriting recognition program that allows you to write in cursive, print, or a combination of both. Transcriber works transparently in the background of programs, recognising words with its integrated dictionary. When Transcriber is turned on, it

interprets stylus movement anywhere on the screen as handwriting input. For more information about using Transcriber, see Help on your device.

To start Transcriber


- 1 Start a program that accepts user input, such as Word Mobile.
- 2 Tap the Input Selector arrow and tap Transcriber. The Transcriber introductory screen appears.

To write using Transcriber

- 1 Within a program, position the cursor where you want text to appear.
- 2 Use the stylus to write anywhere on the screen. The handwriting will be converted to text shortly after you lift the stylus from the screen.

To enter punctuation and symbols

Transcriber comes with an on-screen keyboard that provides an easy way to add punctuation or a special symbol to existing text.

- ▶ From a program, tap  on the Transcriber toolbar. The keyboard remains visible until you tap the button again.

NOTE: To reposition the keyboard, tap and hold the title bar, then drag to the desired location.

To edit text

- 1 In a program, draw a line across the text you want to edit. This only appears to work if the line goes from left to right.
- 2 After you lift the stylus from the screen, the line will disappear and the selected text will be highlighted.



Entering and Searching for Information





3 Do either of the following:





- ▶ Rewrite the text.
- ▶ Use gestures to capitalise letters, insert a space and so on.

Transcriber Gestures

Use quick strokes of the stylus to edit your text or to insert returns, spaces or tabs.





Do	To
	Insert a paragraph return at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
	Insert a space at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.

Do	To
	Move the cursor one space back and erase any text. Do the gesture by drawing a line from right to left.
	Open the menu of alternate words if a word is selected, or the onscreen Transcriber keyboard if no text is selected. Do the gesture by drawing a line straight down and back up.
	Change the capitalisation of a selected letter, word or block of text. Do the gesture by drawing a line straight up.
	Undo the last action. Do the gesture by drawing a line straight up and back down.







Do	To
	Copy the selected text. Do the gesture by drawing a line from left to right and back.
	Cut the selected text. Do the gesture by drawing a line from right to left and back.
	Paste copied or cut text. Do the gesture by drawing a line from the lower left of the screen diagonally up toward the right and back down to the right.
	Insert a tab. The horizontal portion of the gesture must be at least two times longer than the vertical portion.

NOTE: You can also use the Enter, Space and Backspace buttons on the Transcriber toolbar.

The Transcriber toolbar

Do	To
	You can set the transcriber options such as Writing direction, Dictionaries and Shorthand.
	You can set the shape of letters as your handwriting.
	You can enter numbers, punctuation and symbols.
	You can change text input methods. <ul style="list-style-type: none"> • a mode. This is the default for optimum handwriting recognition. • 123 mode. Numbers and some letters are allowed and the calculator is activated. • A mode. All letters are automatically capitalized. If you are in A or 123 mode, recognition returns automatically to the default mode once you lift the stylus.

Entering and Searching for Information

Do	To
	You can insert a space at the cursor.
	You can insert a paragraph return at the cursor.
	You can insert the cursor one space to the left.
	You can move the cursor one space to the right.
	Back and erase any text.
	Help

Drawing and writing on the screen

You can draw directly on the screen, or write on the screen and save notes in your own handwriting. To do this, you must set the input mode in Notes to

Writing.

If you prefer to use handwriting or frequently add drawings to your notes, you may find it helpful to set Writing as the default input mode. If you prefer typed text, set **Typing** as the default input mode.

To set the input mode for Notes

- 1 Tap **Start** > **Notes**.
- 2 In the note list, tap **Menu** > **Options**.
- 3 In the **Default mode** box, tap one of the following:

► **Writing** if you want to draw or enter handwritten text in a note.

► **Typing** if you want to create a typed note.

4 Tap **OK**.

To write a note

Tap **Start > Notes**.

1 In the note list, tap **New**.

2 Write your text on the screen.

3 When finished, tap **OK** to return to the note list.

NOTE: To select handwritten text, tap and hold next to the writing. As soon as dots appear, and before they form a complete circle, quickly drag across the writing.

If a letter crosses three ruled lines, it is treated as a drawing rather than text.

To draw in a note

1 Tap **Start > Notes**.

2 In the note list, tap **New**.

3 To draw on the screen, use the stylus like a pen.

4 A selection box appears around your drawing.

5 When finished, tap **OK** to return to the note list.

NOTE: To select a drawing (for example, to copy or delete it), tap and hold the drawing briefly. When you lift the stylus, the drawing is selected.

Entering and Searching for Information

Recording a Note

You can create a standalone recording (voice note) or you can add a recording to a note.


To create a voice note

- 1 Tap **Start > Notes**.
- 2 Do one of the following:
 - ▶ To create a standalone recording, record from the note list.
 - ▶ To add a recording to a note, create or open a note.
- 3 If you do not see the Recording toolbar, tap **Menu > View Recording Toolbar**.
- 4 Hold your device's microphone near your mouth or other source of sound. Press the record button from the Recording Toolbar.
- 5 If you are adding a recording to a note, tap **OK** to return to the note list when finished.

- 6 If you are recording when a note is open, an icon will appear in the note.
- 7 If you are creating a standalone recording, the recording will appear in the note list.

To record a voice note during a call

- 1 Touch **Note** on the calling screen, and tap the recording icon to record a voice note during a call.
- 2 Once you have finished recording, a pop-up message will appear as shown below.

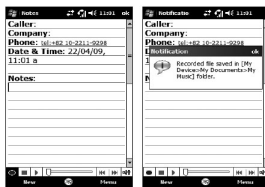

NOTE: When you start recording during a call, there isn't a notification beep sound to inform the other end user.

Searching for Information

You can search for files and other items stored on your device in the My Documents folder or on the storage card. You can search by file name or by word.

For example, you can search in email messages, notes, appointments, contacts and tasks, as well as in online Help.

To search for a file or an item

- 1 Tap **Start** > **Search Phone**.
- 2 In **Search for**, enter the file name, word or other information you want to search for.
- 3 If you have looked for this item before, tap the **Search for** arrow and select the item from the list.






4 In **Type**, select a data type to help narrow your search.

 
5 Tap **Search**.

6 In the **Results** list, tap the item you want to open.

Calls



Making a call or a video call

- 1 Touch  to open the keypad.
- 2 Key in the number on the keypad. To delete a digit, press the clear key.
- 3 Touch the  key or  to place the call. Touch  to place the video call.
- 4 To end the call, touch the  key.


TIP! To enter + for making international calls, press and hold down .

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Calling your contacts

- 1 From the Home Screen touch  to open your **Contacts**.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 From the list, touch the contact you want to call and select the number to use if there is more than one for that contact.
- 4 Touch **Voice call** or **Video call**.

Answering and rejecting a call


When your phone rings press the call key  or **Answer** key on the screen to answer.

Press the end key  to reject an incoming call.

In-call options




Speaker - Touch  to turn the speaker phone on. Touch again to turn off.

Mute - Touch  to turn the microphone off so the person you are talking to cannot hear you.

Hold - Touch  to put a call on hold.

Menu - Choose from a list of further in-call options

 - You can end the call.

 - Search your contacts during a call.

 - Add a memo during a call.


Keypad - Touch to open a numerical keypad for navigating menus with numbered options, when dialling call centres or other automated telephone services.

Calls

In-video call Options



Private/Show – Touch  to turn the video private(live)-mode on. Touch again to turn off

 
Mute/Unmute – Touch  to turn the microphone off so the person you are talking to cannot hear you


Standard/Fine – Touch  to request the talking party to control the video quality

Capture – Press the camera button to capture the video of the talking party.

Menu - Choose from a list of further in-call options

 - You can end the call.

Zoom – Touch  to zoom the current camera in.

External/Internal – Touch  to switch the camera between the internal and the external


Keypad - Touch to open a numerical keypad for navigating menus with numbered options, when dialling call centres or other automated telephone services.


Adjusting call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.


Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the Home Screen touch  to open your **Contacts**.
- 2 Touch **Menu** and select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 4 Your contacts list will open. Select the contact you want to assign to that number by touching the phone number once.

To call a speed dial number, touch  on the Home Screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without having to touch **Voice call**.

Viewing your call logs

From the Home Screen, touch , then touch **Recent history** in the COMMUNICATION tab.

Or, you can go to this menu by pressing Send Key > Menu > Call History.

View a complete list of all dialled, received and missed calls.




TIP! From any call log touch **Menu** and **Delete all calls** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Contacts

Searching for a contact


From the Home Screen

- 1 From the Home Screen touch  to open your **Contacts**. Touch  and enter the contact name using the key pad.
- 2 Touch **Video call** or **Voice call** or the  key to place the call.

From the main menu


- 1 Touch , touch **Contacts** on the COMMUNICATION tab.
- 2 Touch **Menu** and **Search**.

Adding a new contact

- 1 From the Home Screen touch  and touch **Menu** and **New contact**.
- 2 Choose whether to save the contact to **Handset** or **SIM**.
- 3 If you want to add a picture to each contact, touch **Add picture**.

- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter at least one.
- 5 Enter the numbers and assign a type to each of the numbers.
- 6 Eventually add an email address.
- 7 Assign the contact to one or more groups, choosing between **No group**, **Business**, **Personal**, **Family**, **Seasonal** or any groups you created.
- 8 You can also add a **Ring Tone**, **Web page**, **Home address**, **Company name**, **Job title**, **Office loc**, **Memo** and so on by clicking the **More** button.
- 9 Touch **OK** to save the contact.

Creating a group

- 1 From the Home Screen Touch  and then touch **Contacts** in the COMMUNICATION tab.
- 2 Touch **Menu** and select **New Group**.
- 3 Enter a name for the new group.
- 4 Touch **OK** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

TIP! You can edit an existing group by touching the selected group once. Choose **View members, Edit the group, Send message, Send businesscard** or **Delete group**.

Use your contact options

- 1 Touch **Contacts** from the COMMUNICATION tab, then touch **Menu** and **Settings**.
- 2 From here, you can adjust the following settings:
Display name - Choose whether to display the first or last name of a contact first.

Viewing information

- 1 Touch **Contacts** from the COMMUNICATION tab, touch **Menu** and touch **Information**.
- 2 From here you can view **Service Dial Numbers, Own Numbers, your Memory Info**. (memory space remaining) and **My Business Card**.

Contacts

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **OK** to finish.

Transferring your contacts

To transfer your contacts from your USIM to phone:

- 1 From the COMMUNICATION tab, touch **Contacts** and touch **Menu** then select **Change location**.
- 2 Touch **Copy to handset**.
- 3 Select names one by one and touch **OK**.

Messaging



Messaging

Your GM750 combines SMS and MMS into one intuitive easy-to-use menu.

There are two ways to enter messaging:

- 1 From the Home Screen, touch  or , then scroll to **Message** from the COMMUNICATION tab.

Sending a message

- 1 Touch  then **Write New Message** to begin composing a new message
- 2 Touch **To** enter the recipient's number, or touch  to open your contacts. After entering the recipient's number, you can go back to the message composer screen by touching OK. You can add multiple contacts.

- 3 When you have finished, touch the message box below to start composing the text message.

- 4 Touch  to insert Image, Video, Sound or Others.

- 5 Touch **OK** then press .

Message folders

Your Messaging Folder structure is outlined below.

Inbox - All messages you receive are stored in your inbox. From here you can view and delete them, as well as other functions.

Outbox - This is a temporary storage folder while messages are being sent.

Sent Items - Messages that have been sent are stored in this folder.

Drafts - If you don't finish writing a message, you can save what you've done in this folder.

Messaging

Threaded Box - You can view messages as you send or receive them, as you would experience with an instant messaging client.

My Folders - Create folders to store your messages.

Deleted Items - Messages you delete are stored in this folder.

Changing your text message settings

Your GM750 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Scroll through **Message Settings** from the SETTINGS tab and touch **Text Message**. You can change the following:

Text message Centre - Enter the details of your message centre.

Delivery Report - Slide the switch to the left to receive confirmation that your messages have been delivered. This feature works only if a set of conditions are met; the sender's network, the receiver's network and the receiver's Windows Mobile device all support it.

Save sent message - On/ Off

Changing your multimedia message settings

Your GM750 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

In the **Message** menu, touch **Settings**, then select **Multimedia message**. You can make a change to the following:

MMS Center - Enter the details of your message centre.

Retrieval mode

▶ **Retrieve Immediately**

On: Receive MMS messages immediately. **Off:** Receive notifications only. **Download on Home Network** only will be set to **Off**.

▶ **Download on Home Network only** - On/ Off

Reject all message - Choose to not receive any MMS messages - On/ Off.

Delivery Report - Choose whether to allow and/or request a delivery report - Request report (On/ Off), Allow report (On/ Off).

Read Report - Choose whether to allow and/or send a read reply - Request report (On/ Off), Allow report (On/ Off).

Message class - Choose your message class - Personal, Advertisement, Informational and Auto.

Priority - Choose the priority level of your MMS - Low, Normal or High priority.

Validity period - Choose how long your message is stored at the message centre - 1 Hour, 6 hours, 12 hours, 1 Day, 3 Days or Maximum.

Save sent message - Choose where to save the message after sending - On/Off.

Delivery time - Choose how long to wait before a message is delivered - Immediately, After 1 hour, After 1 day or After 1 week.

Slide duration - Choose how long slides appear on screen - 2 seconds, 3 seconds, 4 seconds, 5 seconds etc.

Memory in use - Handset memory / External memory

Messaging

Setting up your email

You can keep in touch on the move by using your GM750 for email. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  from the Home Screen and scroll through **E-mail** on the COMMUNICATION tab.
- 2 To Create a new message, choose **MSExchange** and select **Write E-mail**.

NOTE: You need the information from your network provider as follows: Server address, Domain name, User name, Password. You may also need installation of the certification distributed by the network provider on your device.

Setting up your email through Microsoft® Exchange Server

- 1 From the Home screen or in the Start menu, tap the email icon > Settings > Add account > MSExchange.
- 2 Enter your email address, password, domain name and server address.
- 3 Select "Automatic Search" to get the email settings automatically from the Internet.
- 4 If server settings are not detected, enter them manually, then tap "OK".

Setting up your email on a well-known email Service Provider

- 1 From the Home screen or in the Start menu, tap the email icon > Settings > Add account.
- 2 Select email service provider.
- 3 Enter user ID, Password and My Name.
- 4 Select **Push enable** if you want to receive email automatically.
- 5 Tap OK to set up email account.

Warning!

- ▶ You may incur an additional cost when you connect to the internet.
- ▶ The battery will be discharged faster when you receive a lot of emails.
- ▶ The time to receive an email can be dependent on the account.
- ▶ If you select **Push Enable**, GM750 can connect to the

network, regardless of the user setting to receive or send email.

Setting up your email on Others





- 1 From the Home screen or in the Start menu, tap the email icon > Settings > Add account.
- 2 Select **Others**.
- 3 Enter your Email Address, Email Password, Account Display Name and My Name.

NOTE: If you do not enter the name, the header of the email address will be saved automatically.

NOTE: At the specific email provider like hotmail, User should type full account name with domain in the "outgoing server login" field (ex: sample@hotmail.com)

Messaging

Sending email / Write new email

- 1 From the Home screen or in the Start menu, tap the email icon > Touch MExchange > Touch "Write E-mail".
- 2 Touch  right next to , and touch To/Cc/Bcc.
- 3 To enter the title, tap **Subject**.
- 4 You can attach a video or image file when you touch  in the right-hand corner of the screen.
- 5 Tap  to send the email.

NOTE: An email might not be saved in the outbox, depending on your mail account or server policy.

Sending email / Replying to an email

You can reply, forward or reply to an email.

- 1 From the Home screen or in the Start menu, tap the email icon >

Touch **MExchange** > Tap **Inbox** > Tap the reply icon > Touch **Reply/ Reply all/ Forward**.

- 2 Enter the contents you want to send.
- 3 Tap **Send**.

Changing email setting

Tap the email icon and touch Menu in the right-hand corner of the screen and touch Settings.

Preview Line - Allows you to set the preview line.

Alert Sounds - Set the alert sound when you receive an email.

Signature - Define whether to merge a signature to the message automatically.

Font - Set the Font Size and Font Type.

Spam Message - Set to sort spam message.

When Deleting Messages - Define whether or not email remains on the server.

E-mail Download Restriction - Set condition to retrieve email from server.

Messenger

NOTE: This service is not available in all countries. Please contact your service provider for further information.

You can chat with other people using this menu. Messenger can only be used with a supporting USIM and country.

Camera





Taking a quick photo

- 1 Press the Camera hard key on the right-hand side of the phone for more than 0.5 secs to launch.
- 2 Holding the phone horizontally, point the lens towards the subject you want to take a picture of.
- 3 Press gently the capture button and hold it down.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press firmly the capture button, the picture will be taken.


Once you've taken the photo

Your captured image will appear on the screen. The image name is shown with four icons on the right-hand side.



-  Touch to send the photo as a **Message, E-mail** or via **Bluetooth**.
-  Touch to delete the image.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to use the image as Wallpaper or Contact Image.

Getting to know the viewfinder

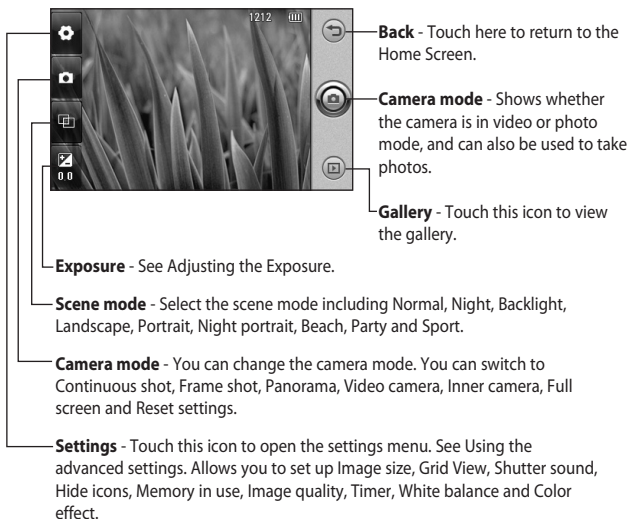




TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Camera


Adjusting the exposure

The exposure defines and controls the amount of light entering the image.

A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

You can change the camera settings by scrolling the wheel. After selecting the appropriate option, touch the **OK** button.

Image size - Change the photo size to save memory space or to take

an appropriate size picture for a contact.

Color effect - Choose a colour tone to use on your new photo. See a colour effect by choosing between **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green** and **Solarize**.

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent** and **Cloudy**.

Timer - The self-timer allows you to set a delay after the capture button is pressed. Select **Off, 3 secs, 5 secs** or **10 secs**. This is ideal if you want to be included in a photo.

Image quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the phone's memory.

Memory in use - Choose whether to save your photos to the **Handset memory** or the **External memory**.

Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Shutter sound - Select one of the four shutter sounds or off to take picture in silent mode.


Grid view - Choose between **Off**, **Simple cross**, **Trisection**

TIP! When you exit the camera, all your settings will return to default, except image size, Grid view, Shutter sound, Hide Icons and Image quality. Any non-default settings you require will need to be reset, for example colour effect. Check these settings before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will be able to see the image change in preview behind the settings menu.

Changing the image resolution

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can alter the number of megapixels to make the files smaller.

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Image size** from the Preview menu.
- 3 Select one of the six available resolutions (**5M: 2560x1920**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**).

Camera



Choosing a colour effect

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Color effect** from the Preview menu.
- 3 There are ten colour tone options: **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green** or **Solarize**.
- 4 Once you've made your selection, the colour tone menu can be closed by selecting **OK**. You are then ready to take a picture.


TIP! You can change a picture taken in colour to black and white or sepia after it is taken, but you cannot change a picture taken in mono or sepia back to colour.

Using the inner camera

Your LG GM750 has an inner 640x480 camera for both video calls and taking photos.


- 1 To switch to the inner camera, touch  then select **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the capture button as normal.
- 3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.
- 4 To return to the main camera, touch  and then select **Outer Camera** from the Preview menu.


Viewing your saved photos

You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

Video Camera


Making a quick video

- 1 Press the Camera hard key on the right-hand side of the phone.
- 2 Then touch  and select **Video camera** to switch to video mode.
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.




- 7 Touch  on the screen to stop recording.

After shooting a video

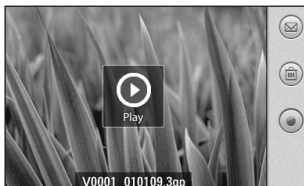
A still image representing your video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with three icons on the right-hand side.



Video Camera

-  Touch to send the photo as a **Message, E-mail** or **Bluetooth**.
-  Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video immediately. Your current video will be saved.

Getting to know the viewfinder

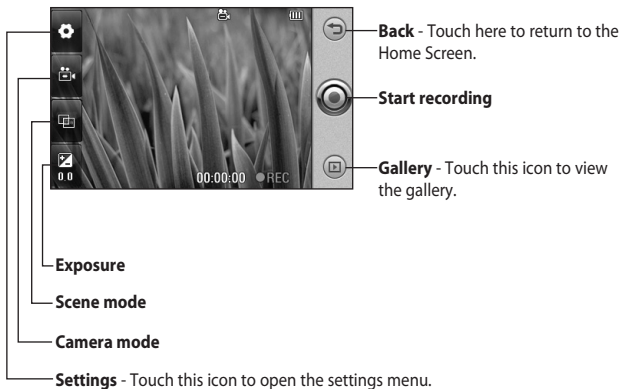




TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.


Video Camera

Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch 
- 2 Slide the contrast indicator along the bar towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced settings options.

You can adjust the video camera setting by scrolling the wheel. After selecting an option, touch the **OK** Button.

Video size - Change the resolution of the video to save memory space. Select a video resolution between 400 x 240, 320 x 240, 176 x 144 and 128 x 96.

Grid view - Choose between Off, Simple cross or Trisection.

Voice - Choose **Mute** to record a video without sound.

Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Memory in use - Choose whether to save your videos to **Handset memory** or **External memory**.

Video quality - Choose between **Super Fine**, **Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size of the video to send it as an MMS.


TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

White balance - The white balance ensures that any white parts of your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Color effect - Choose a Colour tone to use for your video. Select a Colour tone between **Off**, **Negative**, **Sepia**, **Mono**, **Aqua**, **Emboss**, **Sketch**, **Red**, **Green** and **Solarize**.


Changing the video resolution

The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can alter their resolution to make the files smaller.


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select one of the four resolutions:
 1. 400 x 240
 2. 320 x 240
 3. 176 x 144
 4. 128 x 96


Video Camera

Choosing a colour effect


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Color effect** from the Preview menu.
- 3 There are ten colour effect options: **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green,** or **Solarise.**
- 4 Touch the colour tone you want to use.

Using the inner video camera

- 1 To switch to the inner camera, touch  then select **Inner camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the video, press the capture button as normal and press it again to stop recording.


- 3 After you have shot the video you will be offered all the options available for a video shot using the main camera.
- 4 To return to the main camera, touch  and then **Outer Camera.**

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch the video you want to watch.

Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

To access the Multimedia menu, touch  then select **My Files** from the MULTIMEDIA tab. You can open a list of the folders that store all your multimedia files.

Pictures

My Pictures contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken with your phone's camera.

My Pictures options menu

The options which are available to you in **My Pictures** depend on what type of image you have selected. All of the options will be available for pictures you have taken with the phone's camera.


Sending a photo

- 1 To send a photo just select the picture you want.
- 2 Touch **Menu** and select **Send**. Choose from **Message**, **E-mail**, **Bluetooth**.
- 3 If you choose **Message** or **E-mail**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to.

Multimedia


Using a picture

You can choose images to use as a wallpaper, contact, start-up or shut-down image, or as your outgoing or incoming call image.

- 1 Touch menu key  then select **My Files** from the MULTIMEDIA tab.
- 2 Touch **My Pictures**.
- 3 Select an image and touch **Menu**.
- 4 Touch **Use as** and choose **Wallpaper** or **Contact Image**.

Moving or copying a picture

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images from being lost.

- 1 Touch menu key  then select **My Files** from the MULTIMEDIA tab.


- 2 Touch **My Pictures**.

- 3 Select an image and Touch **Menu**.

- 4 Select **Move** or **Copy**.

Creating a slide show

If you want to view all the images on your phone, you can create a slide show to save you having to open and close each individual image.

- 1 Touch menu key  then select **My Files** from the MULTIMEDIA tab.
- 2 Touch **My Pictures**.
- 3 Touch **Menu** then **Slide show**.

Checking your memory status

You can check to see how much memory space you have used and how much you have left available.


- 1 Touch menu key  then select **My Files** from MULTIMEDIA tab.

- 2 Touch **My Pictures**.
- 3 Touch **Menu** then **Memory Info**.

My Music

The **My Music** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage or send sounds or set them as ringtones.


Using a sound

- 1 Touch menu key  then select **My Files** from MULTIMEDIA Tab.
- 2 Touch **My Music**.
- 3 Select a sound.
- 4 You can use the sound by selecting **Use as** menu.
- 5 Choose from **Ring Tone** or **Message tone**.

Videos

The **My Video** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch menu key  then select **My Files** from MULTIMEDIA Tab.
- 2 Touch **My Video**.
- 3 Select a video to play.

Sending a video clip


- 1 Select a video and touch **Menu**.
- 2 Touch **Send** and choose from **Message, E-mail, Bluetooth**.
- 3 If you choose **Message** or **E-mail**, your video clip will be attached to the message. If you choose **Bluetooth**, your phone will search for a device to send the video to.

Games and Applications

You can download into your phone new games and applications to enjoy in your spare time.

Multimedia

Playing a game

- 1 Touch menu key  then select **Games & Apps** from the MULTIMEDIA tab.
- 2 Windows games (Bubble Breaker, Solitaire) have been pre-installed. You can also download games from the internet. To play, tap the game that you want to play.


Mobile Java

GM750 supports Java and hence you can easily download java games and other java applications from the internet.

Mobile Java has two sub-folders: Games and Applications.

Please note that additional costs may be incurred when using online services.

Music

Your GM750 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then select **Music** from the MULTIMEDIA tab. From here, you can access a number of folders:

All Tracks - Contains all of the tracks you have on your phone.


Artists - Browse your music collection by artist.





Albums - Browse your music collection by album.

Genres - Browse your music collection by genre.

Favourites - Contains the songs you have saved as favourites.

Playing a track

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Touch **All Tracks**.


- 3 Select the track you want to play and touch .
- 4 Touch  to pause the track.
- 5 Touch  to skip to the next track.
- 6 Touch  to go back to the previous track.

TIP! To change the volume while listening to music, touch




Creating a playlist

You can create your own playlists by choosing a selection of tracks from the **All Tracks** folder.

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Touch **Menu**.
- 3 Touch **New Playlist**, enter the playlist name and touch **OK**.
- 4 The All tracks folder will be displayed. Touch all of the tracks



that you wish to include in your playlist; a tick will **appear** next to each selected track names.

- 5 Touch **OK**.


To play a playlist, select it and touch .

NOTE: To add a second playlist, touch **Menu** then **New Playlist**.

Playing a playlist

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Select the playlist you wish to play.
- 3 Touch  to play a playlist.

Deleting a playlist

- 1 Touch menu key  then select **Music** from the MULTIMEDIA tab.
- 2 Select the playlist you wish to delete.
- 3 Touch **Menu**.

Multimedia

4 Touch **Remove All** to remove all of the tracks from the playlist; your empty playlist will be deleted when you go to **All Tracks**.

Using the radio


Your GM750 features an FM radio tuner allowing you to listen to your favourite stations on the move.

NOTE: You will need to attach your earphones to listen to the radio.

Searching for stations

You can tune your phone to radio stations by searching for them manually or automatically. You can save stations to specific channel numbers so you don't have to keep re-tuning.

Automatic tuning:

1 Touch  then select **FM Radio** from the MULTIMEDIA tab.

2 Touch **Menu**.

3 Touch **Scan**.


4 Select **Stop** to stop the auto scan.

5 If you want to save the current channel, touch **Menu** and select **Save preset**. You can designate the Preset name and Shortcut key. It can be found in the preset list.

Listening to the radio

1 Touch .

2 Touch **FM Radio** in the MULTIMEDIA tab.


3 Touch  to bring up the preset list.

4 Touch the channel of the station you wish to listen to from the preset list.

5 Touch **Menu** and select **Options**; This allows you to enable RDS.


TIP! Enable RDS: Displays the received data message from the radio station on the screen.

TIP! To improve radio reception, extend the headset cord that acts as the radio antenna.

 **WARNING:** If you connect a headset not specifically made for the phone, the radio reception can be affected.


Organiser

Adding an event to your calendar


- 1 From the Home Screen select  then scroll through **Calendar** in the UTILITIES tab.
- 2 Select the date you wish to add an event to.
- 3 Touch **Menu** then **New Appointment**.
- 4 If you wish to add a subject to your event, touch **Subject** and type in your note.
- 5 Check the date and time you want your event to begin. Enter the finish date and time also.
- 6 Select **Alarm** to set an alert for the event. If you want to repeat the alarm, select **Repeat**.
- 7 Touch **Categories** then choose between **Business, Holiday, Personal, Seasonal** or create **New category**.

- 8 Touch OK to save the event in the calendar. A coloured square cursor will show days with saved events and an alarm will sound at the set time.

Changing your default calendar view


- 1 From the Home Screen select  then scroll through **Calendar** in the UTILITIES tab. Select **Settings** in **Menu**.
- 2 Touch **Set default view** and choose **Month, Week, Day, List** or **All Tasks**.

Adding an item to your To Do list

- 1 From the Home Screen select  then scroll through **Calendar** in the UTILITIES tab.
- 2 Select **New Task** in **Menu**.

- 3 Set the date for the task, add notes, then select its priority level: **Low**, **Normal** or **High**.
- 4 Save the task by tapping **OK**.

Setting your alarm

- 1 From the Home Screen select  then scroll through **Alarms** in the UTILITIES tab.
- 2 If you want to add a new alarm, touch **New Alarm**.
- 3 Or if you want to set the alarm to sound again within one hour, touch **Quick Alarm**.
- 4 Set the time you wish the alarm to ring.
- 5 Choose the repeat type you want the alarm to repeat. The icons indicate the weekday you select.
- 6 Select **Sound/Vibration** to select the type of alarm you prefer.


- 7 After touching the **More** icon, you can select **Alarm Bell**, control **Volume**, **Vibration** and **Type**.
- 8 Select the snooze interval between **5**, **10**, **20**, **30 minutes** or **Turn it off**. Then select snooze repeat.
- 9 Finally add a memo to the alarm.

Using Office Mobile

Excel Mobile

Excel Mobile makes it easy for you to open and edit Excel worksheets and templates created on your PC. You can also create new worksheets and templates on your device.

NOTE: Work in full-screen mode to see as much of your workbook as possible.

- 1 From the Home Screen select .

Organiser

- 2 Select Office Mobile in the UTILITIES tab, then choose Excel Mobile and open the worksheet.
- 3 Tap View > Zoom and select a percentage so that you can easily read the worksheet.

Unsupported features in Excel Mobile

Excel Mobile does not fully support some features such as formulas and cell comments. Some data and formatting may be lost when you save the worksheet on your device.


PowerPoint Mobile

With PowerPoint Mobile, you can open and view slide show presentations created on your PC in *.ppt and *.pps format.

Many presentation elements built into the slide shows - such as slide transitions and animations - will play back on the device. If the presentation is set up as a timed

slide show, one slide will move to the next automatically. Links to URLs are also supported.

To start a slide show presentation

- 1 From the Home Screen select  then scroll through **Office Mobile** in the UTILITIES tab and select **PowerPointMobile**.
- 2 In the presentation list, tap the slide show you wish to view.
- 3 Tap the current slide to move to the next one.

If the presentation is set up as a timed slide show, slides will move on automatically.


To stop a slide show

- In a PowerPoint Mobile presentation, tap ▲ and **End Show**.

To navigate between slides

You can move to the next slide if a presentation is not set up as

a timed slide show, return to the previous slide, or go to any slide out of sequence.

- 1 From the Home Screen select  then scroll through **Office Mobile** in the UTILITIES tab and select **PowerPoint Mobile**.
- 2 Open the presentation you wish to view.
- 3 Tap **▲** and **Next** or **Previous**, or tap **Go to Slide** and tap the slide you wish to view.

TIP!

- ▶ Simply tap the current slide to go to the next one.
- ▶ If you have zoomed in to see a slide in more detail, you cannot navigate to another slide until you zoom out. Tapping Next or Previous may play an animation on a slide rather than navigate to another slide.

Word Mobile


Word Mobile is a streamlined version of Microsoft Word. Word documents created on your PC can be opened and edited on your device. You can also create and edit documents or templates in Word Mobile and save them as *.doc, *.rtf, *.txt, and *.dot files.

You can only have one document open at a time. When you open a second document, the first one is saved and closed automatically.

When you close a newly created document, it is automatically named after the first few words in the document and placed in the Word Mobile document list. You can easily rename the document with a more meaningful name and move it to another folder or a memory card.

Organiser


To create a file

From the Home Screen select  then scroll through **Office Mobile** in the UTILITIES tab and select **World Mobile**.

- 1 In Word Mobile, tap New.
- 2 You will see either a blank document or template, depending on what you have selected as the default template.
- 3 Type a text.
- 4 When you have finished, tap OK to save the file.


Word Mobile does not fully support all features of Microsoft Word such as revision marks and password protection. Some data and formatting may be lost when you save the document on your device.

Using your calculator

- 1 From the Home Screen select , then scroll through **Calculator** in the UTILITIES tab.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you require (+, -, x, ÷), followed by =.


Using your File Explorer

Allows you to explore the files saved on your phone.

- 1 From the Home Screen select , then scroll through **File Explorer** in the UTILITIES tab.
- 2 Touch the folder you wish to see.

Mobile Zip

Mobile Zip is a comprehensive archiving tool for viewing and extracting a wide range of archiving formats.

Touch , and select Tools in the UTILITIES tab, then tap Mobile Zip.

Main Features of Mobile Zip

- Multi-tab user interface
- Open and browse a wide range of archive formats
- Extremely easy to use with user friendly interface
- Single-handed operation with extensive softkeys and navigation buttons support
- Two folder views that enable user to copy, move, extract and add to archive from one to the other in a breeze
- Extract-View-Edit cycle supported. Open an item in the archive, edit it and have it inserted back in the archive

- Open archive as regular folder in the folder views
- Encryption: Mobile Zip includes standard zip 2.0 file encryption which is compatible with other major zip file applications on the desktop, and AES 256 bits advanced encryption Which is available to some of the latest zip utilities on desktop computers.
- Encryption: Mobile Zip includes password manager (PassMan) that makes it easy for user to store and retrieve passwords using a single master password
- Encryption: Password-Manager view provides links to password list settings.

Views

- ▶ **Home** view is used mainly as a startup page where you learn some basic features of the application and go through the setup.

Organiser

- ▶ **First-Folder** and **Second-Folder** views are double-folder views that have been designed to make copying, moving, extracting and archiving data an extremely easy task
- ▶ **PassMan** view is a password-manager view with some setting links that enable user to organise passwords in a single, master password-encrypted database
- ▶ **Options** view provides you with links to settings dialogues and other informative links

Creating Zip Archive

In the selected folder, select an item or items, tap and hold on the selected item or items. When the shortcut menu appears scroll down to select:

- **Add to archive...:** Allows you to add archive with options to set password, name and type.
 - **Add to 'name.zip':** Allows you to add directly the named archive without password.
- ### Extracting Archive(s)
- In the selected folder view, tap and hold on the selected archive(s). On the folder shortcut context menu, select:
- **Extract...:** Allows you to extract the selected archive(s). with option to set a destination folder, set a password, select extraction behaviour etc.
 - **Extract Here:** Allows you to simply extract the content of the selected archive(s) in the current folder.
 - **Extract to 'name folder':** Allows you to simply extract the content of the selected archive(s) to the named folder.

Password Manager

Password manager is a password-managing module that facilitates easy but secure password management. The password database file is saved in the application directory as an AES-256-encrypted file based on the master password. If you forget your master password, you lose the password list. In that case you need to use the Delete All command to delete the password list and create a new one. In the PassMan view you have the following options:

- **Password Status Switch** enables user to switch the password manager on and off. User will be prompted to enter the master password to activate password manager. Once activated, in the password dialogue the right-hand softkey will display the PassMan command. Use it to access the password list in

the password dialogue for any archive that prompts the user for a password. If a password list has not been defined, switching on the password manager will create a password database and the user will be prompted to input a master password for the database.


- **Password List** is the link to a dialogue that manages the user's password list. In the dialogue, use the right-hand softkey to add, edit, delete or save a password of the list. To add a new password, select New, fill in the ID and Password and then select Apply.
- **Master Password** enables the user to set a new master password for the existing password list.
- **Delete All** allows the user to delete the entire password list without prompting the user for the master password. Use it if you have forgotten your master password.

Organiser

Adobe Reader LE

Adobe Reader LE is an extension of the Adobe PDF software for mobile phones. It allows to reliably view rich, high-impact, more secure content on your GM750.

To view a file

From the Home Screen select the  then scroll through Tools in the UTILITIES tab and select Adobe Reader LE.

Find the file you want to see.

ActiveSync

ActiveSync synchronises information on your device and on your PC, such as Outlook content. ActiveSync can also synchronise over a cellular network with a Microsoft Exchange Server if your company or service provider is operating one with Exchange ActiveSync. When you synchronise, ActiveSync compares the information on your device with the one on your PC and/or Exchange Server, then updates all locations with the most recent information.

With ActiveSync, you can:

- ▶ Synchronise information such as Outlook Emails, Contacts, Calendar appointments and Tasks between your device and your PC, as well as pictures, videos and music.

- ▶ Synchronise Outlook Emails, Contacts, Calendar appointments and Tasks on your device directly with Exchange Server so that you can stay up to date even when your PC is turned off.

- ▶ Exchange files between your device and your PC without synchronising.

- ▶ Select which types of information are synchronised and specify the level of information to be synchronised. For example, you can define the time period of the Calendar appointments to be synchronised.

Before you can synchronise information with a PC, you need first to install ActiveSync on your PC. Then, you need to create a synchronisation relationship between your device and the PC. You can install ActiveSync from the internet, e.g. via <http://www>.

ActiveSync

microsoft.com/windowsmobile/en-us/help/synchronize/device-synch.msp

Once you have installed ActiveSync and set up a synchronisation relationship, ActiveSync on the PC recognises your device when you connect it and automatically transfers the synchronisation settings you specified on your device.

You may be able to synchronise your device with Exchange Server through your company or a wireless service provider. If you plan to do so, please obtain email address, Exchange Server address, user name, password and domain name from your administrator before starting the Sync Setup Wizard.

Setting up Windows Vista™

Microsoft Windows Mobile® Device Centre is the replacement for Microsoft® ActiveSync® on Windows Vista™.

NOTE: Some versions of Windows Vista that come with Windows Mobile Device Centre are already installed. You can synchronize your e-mail, contacts, calendar, songs, pictures and internet favorites with your Windows-based PC. Start by visiting this Microsoft Web site - www.microsoft.com/getstarted.

Set up synchronisation in Windows Mobile Device Centre

When you connect your device to your PC and start Windows Mobile Device Centre for the first time, you will be asked to create a Windows Mobile partnership with your device. Follow the steps below to create a partnership.

▶ Connect your device to your PC. Windows Mobile Device Centre configures itself and then opens.

▶ On the licence agreement screen, click **Accept**.

NOTE: Choose **Connect without setting up your device** if you only want to transfer media files, check for updates and explore your device, but not sync Outlook information.

▶ Select the items you want to synchronise, then click **Next**.

▶ Enter a device name and click **Set Up**. When you finish the setup wizard, Windows Mobile Device Centre synchronises your device automatically. Note that Outlook emails and other information will appear on your device after synchronisation.

Use Windows Mobile Device Center

To open Windows Mobile Device Center, click **Start > All Programs > Windows Mobile Device Center** on your Windows Vista computer. On Windows Mobile Device Center, you can do the following:

▶ Click **Mobile Device Settings** to change synchronisation settings.

▶ When you click **Pictures, Music and Video > ___ new pictures/video clips are available for import**, a wizard guides you through tagging and transferring photos from your device to the Photo Gallery on your Windows Vista PC.

▶ Click **Pictures, Music and Video > Add media to your device from Windows Media Player** to synchronise music and video files using Windows Media™ Player. For more information, see “Windows Media® Player Mobile” in Chapter 11.

ActiveSync

- ▶ Click **File Management** > **Browse the contents of your device** to view documents and files from your device.

Synchronising Information

When you connect your device to the PC using a USB or Bluetooth connection, ActiveSync will immediately synchronise. While the device is connected, ActiveSync synchronises every time you make a change on either the PC or the device.

Synchronising Outlook information

If you have set up a synchronisation relationship between your device and the PC, synchronisation keeps Outlook information up-to-date on the computer and Mobile handset. ActiveSync synchronises a limited amount of information by default to save storage space

on your device. You can change the amount of information synchronised for a given information type in changing the Settings for the information type. You can set up your device to synchronise with more than one PC or with a combination of one or more PCs and Exchange Server. When synchronising with multiple computers, the items that you synchronise will appear on all of the computers with which they are synchronised.

For example, if you have set up synchronisation with two PCs (PC1 and PC2) which have different items, and you synchronise Contacts and Calendar on the device with both computers, the result is as follows:

Location **New state**

PC1

All Outlook contacts and calendar appointments that were on PC2 are now also on PC1.

PC2

All Outlook contacts and calendar appointments that were on PC1 are now also on PC2.

Device

All Outlook contacts and calendar appointments from both PC1 and PC2 are on the device.

To start and stop synchronisation

- ▶ To synchronise Outlook information and other local information on the PC, including media files, connect your device to the PC using Bluetooth or a cable.
- ▶ If you are synchronising directly with an Exchange Server, you can use the PC connection to the network that is “Desktop Pass-through”, or you can synchronise without connecting to the PC over a cellular network.
- ▶ In ActiveSync, tap **Sync**. To end synchronisation before it completes, tap **Stop**. To change the type of information that is synchronised:
 - 1** In ActiveSync on the device, tap **Menu > Options**.
 - 2** Do one or both of the following:
 - ▶ Select the checkbox for any items you want to synchronise. If you cannot select a checkbox, you may have to clear the checkbox for the same information type elsewhere in the list.
 - ▶ Clear the checkbox for any items you want to stop synchronising.

ActiveSync

- 3 To stop synchronising with one PC completely, tap the PC and tap Delete.

NOTE: Outlook emails can be synchronised with only one computer. To change the available synchronisation settings, select the type of information and tap Settings.

To synchronise directly with an Exchange Server

You can set up a synchronisation with an Exchange Server on your device if it is available to you through your company or wireless service provider. However, you should first ask your administrator for the following information and then continue with the steps: email address, Exchange Server address, user name, password and domain name.

- 1 In ActiveSync on the device, tap **Menu > Configure Server**. If you have not yet set up synchronisation with an Exchange Server, it will say **Add Server Source**.
- 2 Enter the email address and tap **Next**.
- 3 In Server address, enter the address of the server running Exchange Server. Select the checkbox if this Server requires an encrypted (SSL) connection. Tap **Next**.
- 4 Enter user name, password and domain, then tap **Next**. To change the rules for resolving synchronisation conflicts, tap **Advanced**.
- 5 Select the checkboxes for the types of information items that you want to synchronise with Exchange Server.

6 To change the available synchronisation settings, select the type of information and tap **Settings**.

7 Tap **Finish**.

Synchronising via Bluetooth

You can connect your device to the PC to synchronise using Bluetooth.

To synchronise with a PC via Bluetooth

- 1** First, check “Allow connections to one of the following” from the ActiveSync connections Settings menu on your PC. Select the proper COM port. If there are no available connections you should first create a Bluetooth pairing.
- 2** Select the ActiveSync item in the Programs menu, then ActiveSync↓Menu↓Connect via Bluetooth.

Synchronising Music, Video and Pictures

If you wish to carry your music or other digital media with you while you travel, ActiveSync works with Windows Media Player to synchronise music, videos and pictures.

Other than selecting the Media information type in ActiveSync to be synchronised, all media synchronisation settings must be set in Windows Media Player. Before media can be synchronised you must do the following:

- ▶ Install Windows Media Player Version 10 on the PC.
- ▶ Connect your device to the PC with a USB cable. If the device is currently connected using Bluetooth, you must end that connection before media can be synchronised.

ActiveSync

- ▶ Insert a storage card in your device (32MB or larger is recommended).
- ▶ Set up a sync partnership between the storage card and Windows Media Player.

Change Media synchronisation settings

Once you select the Media information type in ActiveSync to be synchronised, any of your favourite music, video or picture files in Windows Media Player playlists can be synchronised. All you have to do is set up synchronisation in Windows Media Player for those media files.

To set up a sync relationship with a storage card


- 1 Open Windows Media Player.
- 2 Click the **Sync** tab.
- 3 Select the storage card.
- 4 Click **Set up Sync**.

The Web

Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more straight to your mobile phone - wherever you are and whatever you're into.

Accessing the web

- 1 From the Home Screen select  then select **MyWeb** from the COMMUNICATION tab.
- 2 The browser homepage will be opened directly.

NOTE: You will incur an extra cost by connecting to this service and downloading content. Check the data charges with your service provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the Home Screen select  then select **MyWeb** from the COMMUNICATION tab.
- 2 Select . The list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select . Enter a name for the bookmark followed by its URL.
- 4 Touch **Add**. Your Bookmark will now appear in the bookmark list.
- 5 To access the bookmark simply touch it. You will be connected to the corresponding URL.

The Web

Using browser option menus

You can check the following menus by tapping **Menu**.

Home Page - You can access the home page directly.

History - You can display a list of the pages you've already viewed.

Forward - When viewing again previously viewed pages, selecting Forward displays the next page of the currently visited web site.

Refresh - Reload the currently displayed web site.

View

- **Text Size:** Largest/Larger/Medium/Smaller/Smallest

- **Enable Activex Controller:** check to enable ActiveX controller

- **Mobile (Default view):** This option identifies Internet Explorer Mobile 6 as a mobile browser.

- **Desktop:** This option identifies Internet Explorer 6 as a desktop browser. This lets you open the same full Web page you would retrieve on their desktop.

NOTE

Those two options (Mobile and Desktop) help you control data consumption (mobile pages are less data intensive than desktop pages) by sending a different User Agent String to the server. Every time a mobile user string is sent, the content provider returns a mobile page if one is available. If no mobile page is available, the content provider returns a desktop page.

Tools

- **Send Link:** You can send the Link in a text message , via SMS, MMS or Email.

- **Properties:** You can view the page's information.

- **Options:** You can check more options.

Copy/Paste - You can copy or paste the text into a web page.

Service

Service consists of a set of applications offered by Vodafone.

You can find this menu in the COMMUNICATION tap.


NOTE: Please refer to the Vodafone Service Guide provided with your phone or contact Vodafone or your service provider for further information.

Settings


In this menu you can personalise the settings of your GM750.

Personalising your profiles

The SETTINGS tab allows you to personalise each profile setting.

- 1 From the Home Screen select  then scroll through **Profiles** in the SETTINGS tab.
- 2 Choose the profile you wish to edit: **Normal**, **Vibrate**, **Silent**, **Outdoor** or **Automatic**.
- 3 You can then change all of the sounds and alert options available in the list.

Changing your Display settings

- 1 From the Home Screen select  then scroll through **Display Settings** in the SETTINGS tab.
- 2 You can choose the option menu from:

Backlight - Set your backlight settings.


NOTE: The longer the backlight stays on, the more battery power it uses and so you may need to recharge your phone more often.

Wallpaper - Choose your background.

TIP! ALC (Auto Luminous Control) Sensor LCD backlight brightness is automatically adjusted depending on the surrounding light.

Changing your phone settings

Enjoy the freedom of customising your GM750 to operate according to your own preferences.

- 1 From the Home Screen select  then scroll through **Phone** in the SETTINGS tab.
- 2 You can choose one of the tab menu from the list below.

Phone

- **Ring type:** This option defines the incoming call notification mode. You can select from **Ring, Increasing ring, Ring once, Vibrate, Vibrate and ring, Vibrate then ring, None.**
- **Ring tone:** You can select the ringtone for incoming voice calls.
- **Keypad:** You can set the key tone to be played when pressing the keys (Long tones/Short tones/Off)

Security - When PIN Security is set to **Enabled**, you are requested to enter your PIN each time you switch the phone on.

Services - To access settings for a service, select it from the following list and tap **Get Settings**.

- Call Barring

Block incoming calls: All calls/
When roaming/Off.

Block outgoing calls: All calls/
International/International except
to home country/Off

To edit mobile call barring settings, you need a password. You can obtain the barring password from your service provider upon subscription to this network service.

Call barring affects all voice and data calls, except emergency calls.

- **Caller ID:** Scroll to **Everyone** to let your caller ID be displayed to the people you call, **No one** to hide it or **Only to contacts** to let

Settings

it be displayed when you call from the contacts.

- **Call Forwarding:** Allows you to forward your incoming calls to another phone number or to your voicemail.
- **Call Waiting:** To be notified of incoming calls while you have a call in progress, select Notify me.
- **Voice Mail and Text Messages:** When you insert the USIM card in your phone, it automatically detects and sets your voicemail and SMS servers by default. However, you can view the settings if you want. You can also view your voicemail numbers by tapping Voice Mail on the Speed Dial screen.
- **Fixed Dialing:** Select Fixed dial numbers to turn on and compile a list of numbers that can be called from your phone. When activated, only numbers included in the fixed dial list can be called from

your phone.

Network - You can select the network type and the manner of selecting networks.

- **Current network:** The current Network is displayed in the Current network field.
- **Network selection:** Define how to choose between different available networks when travelling. For example, if you choose **Manual**, you can select the network yourself. Scroll to the desired network and tap **OK** on the upper right side of the screen. To have the network selected automatically choose **Automatic**.

TIP! Manual selection can be useful when you know that one network is less expensive than another or that it provides faster data transmission.

- **Preferred networks:** Tap **Set Networks** (retrieving settings may take a few minutes). Select a network and re-prioritise the order for network usage by tapping **Move Up** or **Move Down**.

Info. Service - Info service messages are text messages sent by the network to GSM phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies and stock prices. Each type of information is associated with a number that can be obtained from the service provider. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly.

- **Cellbroadcast:** You can set the reception status.


- **Language:** You can select a language you want by tapping on it. The info service messages in the selected language will be received.

- **Select channel to edit or `delete:** You can manage the channels to receive information from.

Band - Select the band type that you want to use. You can choose **Automatic**, **3G Only** or **2G Only**. If you choose 2G Only, 3G services such as video call can not be used.

Keystone - Select between **Melody** and **Beep**.


Using flight mode

1 From the Home Screen select  then select **Wireless Settings** in the SETTINGS tab.

2 Set the **Flight Mode** to **ON** by tapping the icon. Flight mode will not allow you to make calls, connect to the Internet or send messages.

Settings

Change Date and Time

- 1 From the Home Screen select  then select **Date & Time**.
- 2 Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

Internet Sharing

Allows you to use your device as an internet sharing device.

Note

- ActiveSync software version 4.5 or higher is required.

- 1 Connect the USB cable to the PC.
- 2 Tap Start > Internet Sharing.
- 3 Set PC Connection to USB or Bluetooth PAN
- 4 Set Network Connection to proper APN

- 5 Tap Connect in the bottom line
- 6 Data connection indicator (G/ E/ 3G) is displayed when PDP activation is performed successfully.

Note


Operating System on your PC is required Windows XP SP2 or later.

GPS Setting

To Set GPS Type

- 1 Tap Start > Setting > Connections tab.
- 2 Tap GPS Setting.
- 3 Assisted GPS provides enhanced Standalone performance and speeds up the time required to determine initial GPS position by downloading latest Satellite information.
But it requires a network connection and an extra charge to use Assisted GPS.

If you don't want it, please select
Standalone GPS.

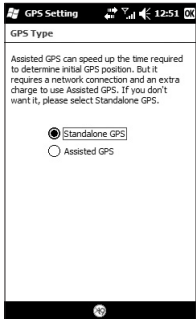

Bluetooth

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset features Bluetooth connectivity, which allows it to connect compatible Bluetooth headsets, computer applications and so on.

Turn on Bluetooth

From the Home Screen select  then select **Wireless Settings**.

Set the Bluetooth to **ON** by tapping the icon.

NOTE: If you use a PC sync via Bluetooth, you can exchange data only within the phonebook.

NOTE: When you receive data from another Bluetooth device, the phone requests a confirmation. After confirming the transfer, the file will be copied to your phone.

Pairing with another Bluetooth device

While pairing your GM750 with another device, you can set up a code that makes the connection more secure.

- 1 Make sure that Bluetooth is **On**. See **Turn on Bluetooth** for more information.
You can change your visibility in the **Settings** menu.
- 2 Select **Bluetooth** in the **SETTINGS** tab and touch **Add a device**.
- 3 Select a device type to limit the search and touch **Continue**. Your GM750 will search for Bluetooth devices.
- 4 Choose the device you wish to pair with.
- 5 Verify the code match on both devices and select **Yes**. Your phone will then connect to the other device.

- 6 Your code protected Bluetooth connection is now ready.

Sending and receiving files using Bluetooth

Bluetooth is a great way to send and receive files as it uses no wires and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, which will typically be a photo, video or music file.
- 2 Touch **Menu** and choose **Send**. Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your GM750 will not automatically search for other Bluetooth devices. If not, your GM750 will search for other Bluetooth-enabled devices within range.

- 4 Choose the device you wish to send the file to.
- 5 Your file will be sent.


TIP! Check the progress bar to make sure that your file is being sent.

To receive a file:

- 1 To receive files, Bluetooth must be turned **On**.
- 2 A message will prompt you to accept the file from the sender. Touch **Accept** to receive the file.
- 3 You will see the sender of the file, the name of the file and where the file has been saved.

Bluetooth

Changing your Bluetooth settings

1 From the Home Screen select  then scroll through **Bluetooth** in the SETTINGS tab.

2 Select **Settings** tab.

Add a device - Setup a new Bluetooth device.

Disable Bluetooth - Choose to deactivate Bluetooth.

Name - Check your device name that other devices see when your device is “discoverable”. You can change the name or use the Windows Mobile name.

Discoverable - Make your device visible only when you wish other Bluetooth devices to find it. You can choose an option between **Always Visible**, **Visible for 60 seconds** or **Not Visible**.

Advanced - Set up additional options.

About - check your Bluetooth information.

Wi-Fi


Wireless Settings allows you to manage Wi-Fi Internet on your device. It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

WARNING

This device uses non-harmonised frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Turn on Wi-Fi

- 1 From the Home Screen select  then select **Wireless Settings** from the SETTINGS tab.
- 2 Set the Wi-Fi to **ON** by tapping the icon.

Set up Wi-Fi

- 1 Make sure that Wi-Fi is On.
- 2 A bubble window pops up and shows detected Access Points.
- 3 Select the Access Point you are permitted to access and tap **OK**.
- 4 Select internet to have an internet service and tap **Connect**.

NOTE: If your Wi-Fi service provider or network administrator sets WEP encryption for network security, you should fill in the WEP key in the pop-up window. If WEP encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask your Wi-Fi service provider or network administrator for it.

Wi-Fi

Wireless network settings

A wireless network can be added either when the network is detected or manually by entering settings information. Before performing these steps, determine if you need authentication information.

- 1 Tap **Start** > **Settings** > **Connections** tab > **Wi-Fi** > **Wireless** tab.
- 2 Under **Networks to access**, select **All available**, **Only access points** or **Only computer-to-computer** for the list, depending on the type of networks to which you connect.
- 3 Do one of the following
 - If you do not see a desired network, tap **Menu** > **Add New**.

- To change network settings for a network you have already configured, tap **Network Adapters**.

- 4 Proceed through the wizard to the **Configure Network Authentication** page.
 - Select the authentication method from the **Authentication** list - Open, Shared, WPA, WPA-PSK, WPA2 and WPA2-PSK.
 - To use data encryption, select an encryption method from the **Data encryption** list - Disabled, WEP
 - To use a network key automatically, tap **The key is automatically provided**. Otherwise, enter the network key.

Configuring Wi-Fi Connection Settings

NOTE: Before you set the WLAN configuration, you need to ask your WLAN service provider or network administrator for the IP settings.

- 1 Tap **Start > Settings > Connections** tab > **Wi-Fi**
- 2 Select **Network Adapters** tab.
- 3 Tap **Network Adaptor** tab and select **Broadcom 802.11 DHD Network**.
- 4 If you tap **Use server-assigned IP address**, you can get IP settings assigned automatically. If you tap **Use specific IP address**, you need to set the IP address assigned by your WLAN service provider or network administrator.
- 5 Fill in **IP address**, **Subnet mask** and **Default gateway**.
- 6 Tap **Name Servers**.

- 7 Fill in **DNS** and **Alt DNS**, **WINS** and **Alt WINS** if necessary.

NOTE: To prevent a possible loss of data on your phone, WLAN automatically ends when the battery is almost empty or at a level less than five per cent.

DUN

NOTE:

- ▶ Before activating DUN, make sure your device has a GPRS SIM card installed, and you have set up a GPRS modem connections on your device.

Also make sure you have GPRS SIM support DUN, and connected your device to a computer via USB.

- ▶ To use DUN, you have to install the LGUSBWMLModemDriver on your computer. Refer the below site. www.lgmobile.com
- ▶ When you activate DUN, ActiveSync will be disabled automatically.

To Set up your device as an USB modem

- 1 On your device, tap **Start** > **Programs** > **DUN**
- 2 Plug in the USB cable adapter between your device and the computer.

- 3 Tag Activate.

To add your device as a USB modem to your Computer

- 1 On your computer, click **Start** > **Control Panel**.
- 2 Double-click Phone and Modem Options.
- 3 Click the Modems tab. Select the new modem from the Modem list, then double click the new Modem.
- 4 On the Advanced tab, add following AT command to the Extra initialization commands:
AT+CGDCONT=1,"ip", <access point name>"

NOTE: For example,
at+cgdcont=1,"ip",web.vodafone.de"

To dial up and connect to the Internet

- 1 On your computer, click **Start** > **Control Panel**
- 2 Double-click **Network Connections**.
- 3 Click File > **Create a new Connection**.
- 4 In the New Connection Wizard, click **Next**.
- 5 Click **Connect to the Internet** then click **Next**.
- 6 Select Set up my connection manually then click **Next**.
- 7 Select Connect using a dial-up modem then click **Next**.
- 8 Select the modem that you previously installed, then click **Next**.
- 9 Enter a descriptive name for this connection, then click **Next**.
- 10 Enter the telephone number as *99# or Vender support number(ex, *99***1#), then click **Next**.
- 11 Under **Internet Account Information**, you may not need to enter a user name and password when using GPRS. Just click Next to proceed.
- 12 Click Finish to exit the wizard.
- 13 The Connect dialog box then opens, Click Properties to check again whether the LGE WML USB Modem is selected. If it is correct, click OK, and then, return to the connect dialog box.
- 14 Click **Dial** to dial up and connect to the Internet.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note

down any important information in advance for safekeeping.

Accessories

These accessories are available for purchase for use with your GM750.

Charger



Data cable

Connect and synchronise your GM750 and PC.



Battery



Stereo headset



Stylus pen



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Network service

The wireless phone described in this guide is approved for use on GSM 850, E-GSM 900, DCS 1800, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that can be offered through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name: GM750

System: GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900 / W-CDMA

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GM750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1 / EN 301 489-24 V1.4.1
EN 300 328 V 1.7.1
EN 60950-1 :2001
EN 50360-2001/EN62209-1:2006
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

31. Aug. 2009

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel: +31 - 36- 547 - 8940, Fax: +31 - 36 - 547 - 8794
email: jacob @ lge.com

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted. Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery empty Battery contacts dirty	Press the On/Off key for at least two seconds. Keep the charger connected for a longer period of time. Clean the contacts.

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge the battery.
	Temperature out of range	Make sure that the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Phone loses network	Battery defective	Replace the battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

MANUFACTURER'S WARRANTY

Australia & New Zealand

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer.
LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

MANUFACTURER'S WARRANTY

Australia & New Zealand

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

MANUFACTURER'S WARRANTY Australia & New Zealand

- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

AUSTRALIA:
LG Electronics Australia Pty Ltd
2 Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175
Tel: 1300 LG CARE
(1300 54 2273) Australia
Fax: 02-8805-4201

NEW ZEALAND:
LG Electronics Australia Pty Ltd
Unit A, 38 Highbrook Drive
East Tamaki 2013
PO Box 58195 Greenmount
Auckland 2141
Tel: 0800 LG CARE
(0800 54 2273) New Zealand
Fax: 09-914-2441



LG Electronics Australia Pty Ltd.

