



OWNER'S MANUAL

Digital Video Recorder

Please read this manual carefully before operating your set and retain it for future reference.

MODEL
LE6016N
LE6016D

P/NO : COV30400919

1105(V1.5)

1 Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

REGULATORY INFORMATION: FCC Part 15

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection

against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- A suitable conduit entries, knock-outs or glands shall be provided in the cable entries of this product in the end user.
- Caution: Danger of explosion if battery is incorrectly replaced. Replaced only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.
- Holes in metal, through which insulated wires pass, shall have smooth well rounded surfaces or shall be provided with brushings.

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: Do not install this equipment in a confined space such as a bookcase or similar unit.

Warning: Wiring methods shall be in accordance with the National Electric Code, ANSI/NFPA 70.

Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warning: To reduce a risk of fire or electric shock, do not expose this product to rain or moisture.

Caution: This installation should be made by a qualified service person and should conform to all local codes.

Caution: To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Caution: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

Caution:

This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center. Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

To disconnect power from mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.



LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2009/125/EC.

European representative :

LG Electronics Service Europe B.V.
Veluwezoom 15, 1327
AE Almere. The Netherlands
(Tel : +31-(0)36-547-8888)

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

EEE Compliance with Directive. (for Turkey only)

Safety way to remove the battery or the battery from the equipment:

Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the lile.

Disposal of waste batteries/accumulators



1. When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.

Please follow the directions safely use the product

The purpose of the following safety precaution is to prevent any unexpected risk or damage by using the product accurately as intended.

Warning

- Turn off the power of the product before installing the product. Do not plug many plugs into one outlet.
 - It can cause an electric shock or a fire.
- Do not put any containers with liquid such as water, coffee, beverage etc. on top of the product.
 - It can cause a fire, an electric shock or a product problem.
- Do not put any heavy object on top of the cable or excessively bend the cable.
 - It can cause a fire.
- When wiping the surface of the product, do not use water, chemical or detergent, and always use a dry towel.
 - It can cause an electric shock, problems or scratches to the surface of the product.
- Do not install the product where the level of humidity, dust or smoke is high.
 - It can cause an electric shock or a fire
- When unplugging the power, hold the plug and unplug slowly. Do not hold the plug with wet hands or plug to a loose power outlet.
 - It can cause an electric shock or a fire.
- Do not disassemble or reconfigure the product. Because high level of current flows on the device, it is dangerous to do so.
 - It can cause a fire, an electric shock or an injury.
- Always check for dangerous elements where the product is installed. If dangerous elements (Moisture, damaged cable, unstable installation etc.) are identified, please contact your nearest service center.
 - It can cause an electric shock or a fire.
- Because the cable connected to this device can be damaged, keep at least 15cm of clearance between where the product is installed and where the power outlet is.
 - It can cause a fire, an electric shock or an injury.
- Install the product in a cool location not exposed to direct sunlight. Do not install the product where traffic is high or near the heating devices.
 - It can cause a fire.
- Install the product on a location with a flat surface where it is ventilated well and not too high.
 - It can cause a problem or an injury.
- The power outlet must be grounded and the voltage range must be within 10% of the rated voltage. Do not share the power outlet with hair dryer, iron, refrigerator or heating device etc.
 - It can cause an explosion.
- When replacing the battery, always replace with the same type of battery as the one provided. When disposing the battery, follow the direction of the manufacturer.
 - It can cause an explosion.

- For old hard drives, you may not be able to recover the data stored on the drive. When you use a damaged hard drive, you will see a sign on the screen saying "Error or defective". For the old hard drive, contact your nearest service center or the original retailer to replace the hard drive.
 - LG Electronics is not responsible for the data loss from misuse by the user.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution

Please read the following precautions carefully before installing the product and follow the directions for installation.

- **Do not install the product where the level of humidity, dust or smoke is high.**
- **Do not install the product where it is exposed to direct sunlight or close to the heating device.**
- **Do not install the product where there is danger of electric shock or near magnetic object.**
- **Do not put objects with high conductivity on top of the ventilation outlet of the product.**
- **Make sure the power is turned off before installing the product.**
- **Secure sufficient space to connect the product when installing the product.**
- **Do not install the product where it is not flat, not ventilated well or where vibration is severe.**
- **When you install the product near electronic appliances such as radio or TV, it can cause problems to the product.**
- **Do not disassemble the product unless done by a technician certified by LG Electronics.**
- **Do not put heavy objects on top of the product.**
- Be careful not to let alien particles get inside the product.
 - It can cause a problem to the product.
- Install the product where it is ventilated well.
 - The product at least 15 cm away from the wall power outlet because the cable can be damaged.
- Do not install the product at a location close to a product or broadcast receiver with strong electric or magnetic wave.
- Do not put heavy objects on top of the product.
 - It can cause a problem to the product.
- Install the product at a flat and stable location.
 - The product may not operate normally.
- The product at a location with appropriate level of temperature and humidity.
 - Do not install the product where the temperature is too high (40 °C or above) or too low (0° or less).
- Because the vibration and impact can damage the product, do not throw any objects to the location where the product is installed.
- Do not install the product where it is exposed to direct sunlight or close to the heating device.

- Firmly fixate the product at a location where it is well ventilated.
 - It can cause problems to the product depending on the surrounding environment. It is recommended to use the Automatic Voltage Regulator. It is recommended to wrap wires around the Ferrite core.
- The power outlet must be grounded.
- If you hear any noise or smell any odor from the product, turn the product off and contact your nearest service center.
 - It can cause a fire or an electric shock.
- Periodically have the product checked by the service center to safely use the product
 - When replacing the battery, always replace with the same type of battery as the one provided. When disposing the battery, follow the direction of the manufacturer.
 - LG Electronics is not responsible for the problem from misuse by the user
- Do not move or flip the product over while using the product.

Contents

1

Safety Information

- 4 **IMPORTANT SAFETY INSTRUCTIONS**

- 5 Please follow the directions safely use the product

2

Before use

- 10 2-1. Product characteristics

- 11 2-2. Components

- 11 2-3. Front side
 - 11 LE6016D model
 - 12 LE6016N model
- 13 2-4. Rear side

- 14 2-5. Remote Controller
 - 14 How to set the id of remote controller

- 15 2-6. Connection and initial setting
 - 16 RS-485 connection
 - 16 Control port (Output) connection
 - 17 Sensor (Input) connection
 - 17 About internal hard disk
 - 18 Hard disk installation or replacement

3

Functional description

- 22 3-1. Operation
 - 22 Start Up
 - 23 Shutdown
- 24 3-2. Monitor Screen

- 28 3-3. System Setting
 - 28 System
 - 33 Camera
 - 38 Event
 - 42 Network
 - 46 Information
- 49 3-4. PTZ Control

- 51 3-5. Search (Playback) & Backup

51	Time search
52	Event Search
53	Bookmark
54	Backup

4

Web viewer

58	4-1. Installation
58	Web viewer installation
60	4-2. Functional description
60	Web viewer monitoring window
61	Web viewer search window
62	Search dialog box
63	Saving as AVI file dialog box

5

Apple iPhone/iPod

64	5-1. Functional description
64	Real-time monitoring

6

Reference

66	6-1. Check before requesting for service
70	6-2. Recommended device to use
70	List of recommended USB memory
71	Recommended list of CD/DVD media
72	List of supported PTZ camera
73	6-3. Initial setting list for factory default
80	6-4. Product specification

1

2

3

4

5

6

2 Before use

2


Before use

2-1. Product characteristics

- Adopted the stable Embedded Linux
- Stable file system recovery even after power supply is disconnected from a power outage.
- Realized small file size and high video quality by applying the H.264.
- Supports terra byte hard disk (up to 1TB)
- Supports E-SATA port to use additional external hard disk.
- Real time recording
 - Maximum of 480 IPS@352 X 240 at NTSC
 - Maximum of 400 IPS@352 X 288 at PAL
- Supports various recording resolutions and qualities.
 - D1(720x480), Half D1(720x240), CIF(352x240) at NTSC
 - D1(720x576), Half D1(720x288), CIF(352x288) at PAL
 - 5 stage recording qualities (Very high, high, normal, low, very low).
- Easy operation through various user interface and user friendly GUI system.
- Realized powerful multi-function.
 - Real time video display or recording, network transmission and back up can be performed simultaneously
- Easy search functions.
 - Date/Time search (Calendar search), event search
- Recording before event. (Can be 2~4 seconds).
- Recording after event. (Can be only up 10 seconds).
- The operating condition pre-check function according to the change in motion detection and movement detection
- Can set recording quality and number of recording frames per seconds.
- Powerful recording schedule management.
- Complete synchronization of video/audio.
- Easy software upgrading through USB storage device or network.
- Maximum of 5 clients can be connected to 1 DVR at the same time.

- Band width setting is automatically set depending on the network speed connected to this device.
- Remote alarm notification via e-Mail.
- PTZ (Pan/Tilt/Zoom) operation.
- Remote control operation
- Key board control operation (optional)
- Supporting Daylight saving
- Simultaneous output to VGA and BNC


2-2. Components

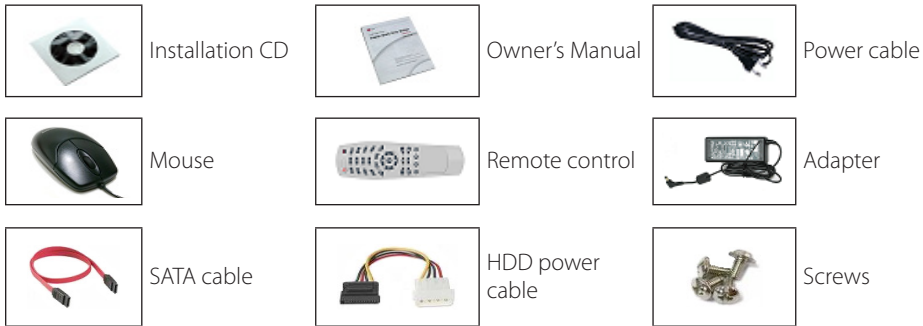

Reference: The type of components can be applied differently by the option.

2-3. Front side

LE6016D model

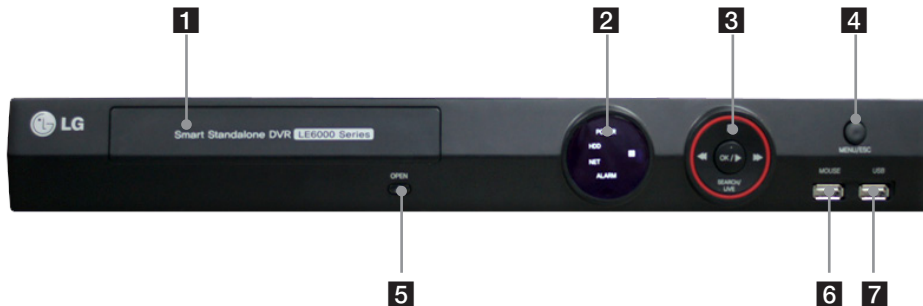

LE6016N model

There is no built-in DVD recorder at LE6016N model.



Before use




- 1** DVD Recorder: This is used for DVD backup.
- 2** LED
 - Hard disk LED: This is turned on HDD is accessed.
 - Power LED: This is turned on when the power is turned on.
 - Network LED: This is turned on when network is connected.
 - Alarm LED: This is turned on when alarm event occurs.
- 3** Navigation buttons
 - At power off status, it is turned on by pressing “OK” button in some seconds.
 - At power on status, instant panic recording is executed by pressing “OK” button in some seconds.
 - “SEARCH/LIVE” button is used as navigation key, when menu is shown, on the Chapter 1 Before use other hand, it is used for switching key between SEARCH and LIVE screen when menu not be shown.
- 4** MENU/ESC: This is used to open or close menu.
- 5** OPEN: This is used to open or close the door of DVD recorder.
- 6** MOUSE: This is used to connect mouse.
- 7** USB: This is used to connect USB external device.



CAUTION

Mouse should be connected to front side mouse port.

2-4. Rear side

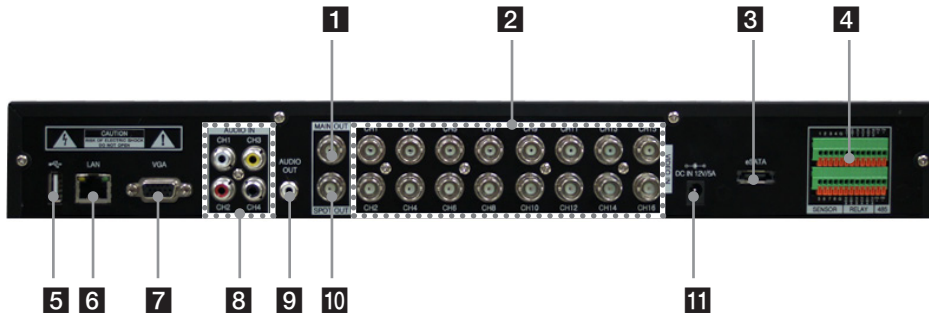

- 1** Main output port: It is used to connect BNC type monitor. (It outputs the same video as MAIN output.)
- 2** Camera video input: These are used to connect cameras.
- 3** External HDD port: It is used to connect E-SATA HDD.
- 4** Sensor/Alarm/RS-485 ports - These are used to connect sensor, alarm and RS-485 serial communication port.
- 5** USB port: It is used to connect the USB external device.
- 6** Ethernet port - It is used to connect RJ-45 Ethernet connector. (LAN PORT).
- 7** VGA port: It is used to connect VGA monitor.
- 8** Audio input port - It is used to connect audio output port of external device.
- 9** Audio output port - It is used to connect audio input port of external device.
- 10** SPOT output port - It is used to connect BNC type monitor.
- 11** Power connector - It is used to connect Power adapter.


2

Before use

2-5. Remote Controller

2

Before use

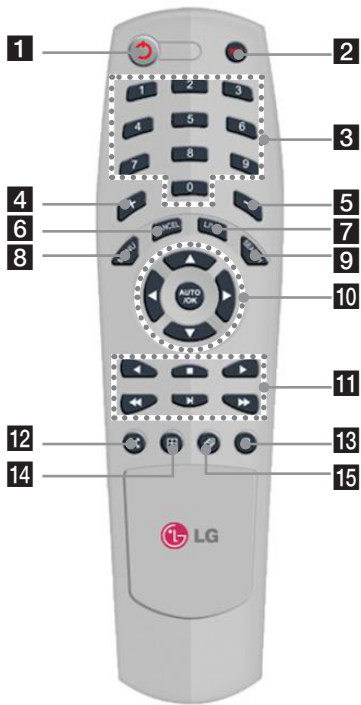

No.	Function	Description
1	Power	This is used to turn on/off the power.
2	Emergency recording	This is used to start/stop emergency recording.
3	Number keys	This is used to input channel or values.
4	Plus(+)	This is used to increase setting values.
5	Minus(-)	This is used to decrease setting values.
6	CANCEL	This is used to cancel a job.
7	LIVE	This is used to display real time screen.
8	MENU	This is used to display menu.
9	SEARCH	This is used to display screen search.
10	▲▼◀▶, OK	This is used to navigate each menu item.
11	Play buttons	These are used to control playback (Backward or forward search, play and pause) ※ ◀ and ▶ buttons have no function.
12	PTZ Menu	This is used to open PTZ Menu.
13	Export backup	This is used to run backup. ※ It can be run in search mode.
14	Split screen	This is used for split screen display.
15	Auto switching	This is used to display channel one by one. ※ It works as event search at search mode.

Reference: The shape of remote controller can be different by the model.


How to set the id of remote controller

1. Press CANCEL button about 3 seconds then light of power button turns on.
2. Enter two digit numbers which is the id of remote controller using number keys.
 - ※ You have to input '0' first when you are to input one digit number.
Ex) In case you want to use '2' as ID, input '02'.
3. Every time you press the number key the light of power button will blink.
4. Stopping blinking means that the id is saved.

2-6. Connection and initial setting


Caution

- The camera or other external devices can be connected to this device in numerous methods. Refer to the user manual of the camera or other external device for addition information on connection methods.
- When installing the camera, check whether the power of the camera is turned off.
- After installing the monitor, turn on the power of the DVR.

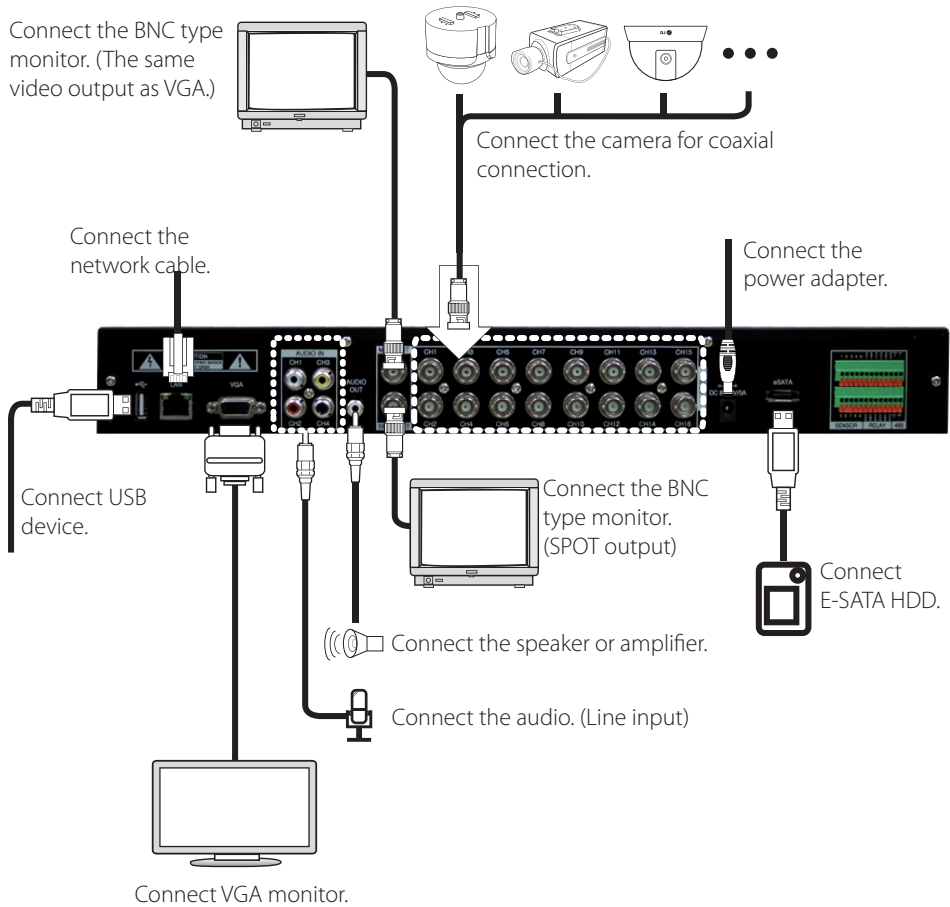

RS-485 connection

- ① This device has 1 data port (RS-485).
- ② Use this port to connect the PTZ camera or the keypad. (Optional)
- ③ PTZ camera / keyboard connection
 - i. Connect the PTZ serial communication cable to the RS-485 port.
 - ii. When connecting the cable, make sure that the TX- of the device is connected to the RX- (TX-) of the camera(keyboard), and TX+ of the device is connected to the RX+(TX+) of the PTZ camera(keyboard).
 - iii. Recommended initial data setting is 9 600 baud rate, 8 data bits, 1 stop bit and no parity.
 - iv. When connecting the PTZ camera or keyboard, always change the setting of the DVR setting menu according the RS-485 setting of the camera, keyboard and this device.
 - v. Set the same baud rate when you are to use PTZ camera and keyboard at the same time

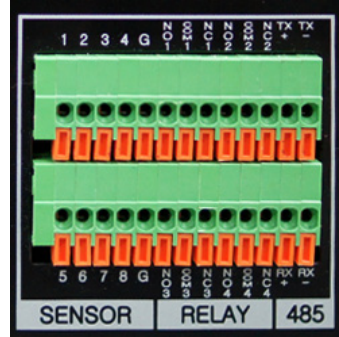

Control port (Output) connection

- ① For interface and auto control with the external sensor, the interfacing control output port (Set value from "Setup → Event → Sensor/Motion/Video loss" menu) and the "RELAY" port are connected.
- ② If the control device (Alarm light, amplified siren, external relay etc.) is "NC (Normal Close)" type, connect to the control output NC (Normal Close) port.
- ③ If the control device (Alarm light, amplified siren, external relay etc.) is "NO (Normal Open)" type, connect to the control output NO (Normal Open) port.

Sensor (Input) connection

Connect one of the signal cables (2 cables) of various sensors (IR sensor, heat ray detector, magnetic etc.) to the COM port and connect the remaining signal cable to the sensor number you want. (Sensor "NC, NO" type can be set from "Setup → Event → Sensor" menu.)

1	Sensor input 1
2	Sensor input 2
3	Sensor input 3
4	Sensor input 4
G	Ground
5	Sensor input 5
6	Sensor input 6
7	Sensor input 7
8	Sensor input 8
G	Ground



NOTE

NC and NO cannot be selected simultaneously.

2

Before use

About internal hard disk

The hard disk installed inside the device is a precision device which can be damaged even with the small impact. To prevent the hard disk from being damaged, manage the device as follows. To prevent the data loss, it is recommended to back up any important data into an external storage device. When installing or uninstalling the hard disk, you must always turn off the power of the product.

- If the power is turned on, do not move the device.
- Do not install this device where it is too hot and humid and where the temperature change is sudden. It can cause a problem to the device.
- DO NOT pull out the plug or intercept the power supply while this device's power is on.
- When there is a power outage while the power is turned on, some data can be lost.
- Do not drop the hard drive or put any metallic object, such as coins, inside the device.
- In case of a power outage while recording, avoid adding, replacing or moving the HDD. The recorded data can be lost. In this case, turn on the power with the original hard disk that was used while the power outage occurred. And then add, replace or move the HDD.
- Because the hard disk is a high precision device, the parts inside the disk can be damaged at the slightest impact. Please read the following precautions in detail and follow the directions.
 - Do not directly put the hard disk on the desk or table. Because the parts inside the hard disk can be damaged at the slightest impact, put a thick cushion below the hard disk.
 - If you use the motored driver, the parts inside the hard disk can be damaged from the vibration.
 - When replacing the hard disk, be careful not to cause any impact to the other parts.

- Be careful not to cause an impact from the tools and hard disk used for the installation.
- Protect the hard disk from static electricity.



CAUTION

This device has elements to cause an electric shock, an accident or a problem to the product. Also the hard disk may not be recognized or operated properly due to incorrect installation and setting. Therefore consult with an experienced expert technician when installing the hard disk.

2

Before use

Hard disk installation or replacement

Hard disk installation

After turning on the power of the device, unplug the power from the outlet.


1. Loosen the screw on the left, right and rear side of the product.
2. Separate the cover of the main unit.
3. Remove the screws on the bracket holding the hard disk, separate the bracket from the hard disk.
4. Install the hard disk to the bracket and tighten the 4 screws.
 - ▶ Connecting bracket to hard disk




Set the SATA cable connection port to lower direction to install the hard disk to the bracket.




Connect the bracket to hard disk by tighten the 4 screws.

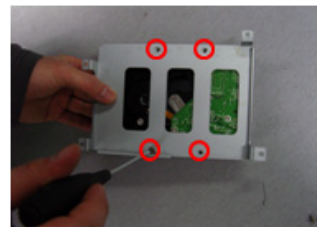

5. After installing the bracket on the main unit, tighten the screws.
6. Connect the power cable of the hard disk.
7. Connect the SATA cable to the hard disk.

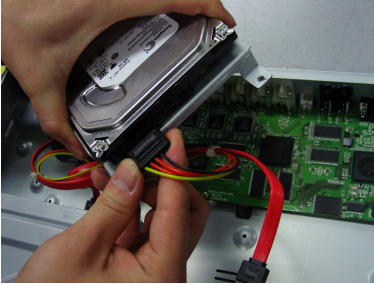

<Connecting power cable>

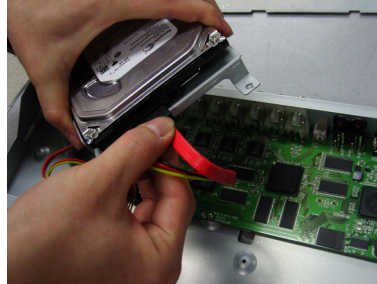

<Connecting SATA cable>

8. Connect the SATA cable to the SATA port of the main board.
9. Close the cover of the main unit.
10. Tighten the screws.
11. After installing the hard disk, you must format the hard disk from the setting menu.



<LE6016N>



<LE6016D>

- The first SATA cable port on the main board must be connected at all times. If a hard disk is not connected, this device may not operate normally.

Hard disk replacement

First turn off the power of the device and then unplug the power.

1. Loosen the screw on the left, right and rear side of the product.
2. Separate the cover of the main unit.

3. After removing all of power/SATA cable connected to hard disk, please separate hard disk bracket from the body.
4. Loosen the screws on the left and right side of the bracket holding the hard disk.
5. Separate the hard disk from the bracket holding the hard disk.
6. In the reverse order of removing the hard disk, assemble the new hard disk.
7. After replacing the hard disk, turn on the power of the device.
8. Reference
 - Each SATA cable must be connected to the connecting port precisely.
 - Do not vertically put the hard disk in upright position or put other objects on top of the hard disk.
 - When connecting/disconnecting the hard disk, do not use a motored tool.
 - Refer to the following when adding/replacing the hard disk.

Connecting E-SATA HDD

- Turn off the power of DVR then connect E-SATA HDD to E-SATA port. And turn on the power of E-SATA HDD first then turn on the power of DVR.
- E-SATA HDD is used only for recording, it cannot be used for any other purpose like backup, for example.

Recommended list of hard disk

Hard disks of below are the ones proved to be compatible through experiment. Please refer to when adding or replacing the hard disk.

Capacity	LE6016	
250 GB	ST3250310CS	Seagate
	ST3250312CS	
500 GB	ST3500312CS	
1 TB	ST3100322CS	



CAUTION

When you select the hard drive in use for resetting, the video data saved previously will be deleted. Therefore you must be careful.

Database recovery of the HDD

- The system has the check process of the database condition during the system booting. If there is some problem, the system will be displayed the confirmation window to recover the database.
- Recovery time of the database is proportional to the amount of data.
- Recovery time takes more than 16 times if database recover included event data.
- Basically, the recorded data is not damaged because it always makes the backup data.

Arrangement of the database on the HDD

- The system will be displayed the confirmation window to arrange the database at the reboot time every 6 month when you use the device normal. If you do not database arrangement, the system will perform the database arrangement every 12 month at booting point.


Check the HDD problem


- If you install the hard disk first time, or do the Initialization, or shut down equipment abnormally more than three times consecutively, the system checks integrity of the hard disk when booting.
- The system will be random check the bad sector on the hard disk.

3 Functional description

3-1. Operation

Start Up

1. Turn on this device, then it boots with power indicator light turned on.
2. After booting it will be displayed as the LOGOUT id.
3. Pressing  button, then the login window would be displayed. Select user and press "OK" button to continue.

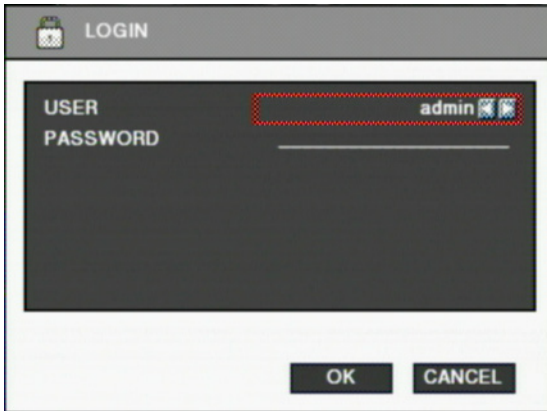

■ [USER]

You may select user to login and authority is restricted by kind of user. The access rights can be set for each user.

- 1) admin for system administrator (Access rights to Live, Search and Setup)
- 2) user1/user2/user3 for general user (Access rights can be set by administrator)

■ [PASSWORD]


The default user and password are set to 'admin' and '000000' as shown above. Click password input area, you will see the screen keypad as right.



4. Input password by using virtual keypad on screen.
5. Click "OK" button to execute DVR system and you will see live screen.

Shutdown

1. While the status is logged in, press  button, then logout window will be displayed as below.

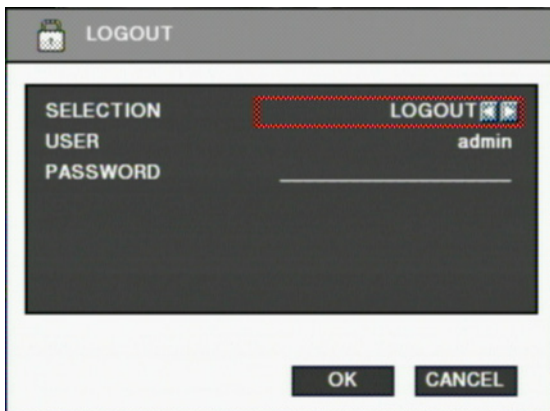

- SELECTION: Select the Log Out or EXIT.
 - USER : Display current user has logged. (admin/user1/user2/user3)
 - PASSWORD : Input password.
2. Click "OK" button to "Log Out" or "DVR Shutdown".

3-2. Monitor Screen

3 Functional description



- 1** [Camera name]
 - Shows camera name
 - If you want to modify camera name, you can do so by selecting [Setup] → [Camera]→ [Channel]
- 2** [Status icon] (OSD)
 - Status icon shows current status of camera/recording.
 - (OSD Feature)

Item	Icon	Description
Camera		Audio Icon
		Motion Icon
		PTZ Icon
Recording		Continuous Recording


Item	Icon	Description
Recording		Immediate Recording
		Recording by Motion
		Non Recording
		Recording by Sensor

3 [Channel selection]

- Selected channel shows green rectangle on the edge of the screen.

4 [Live view]

- It shows current live view as real time.

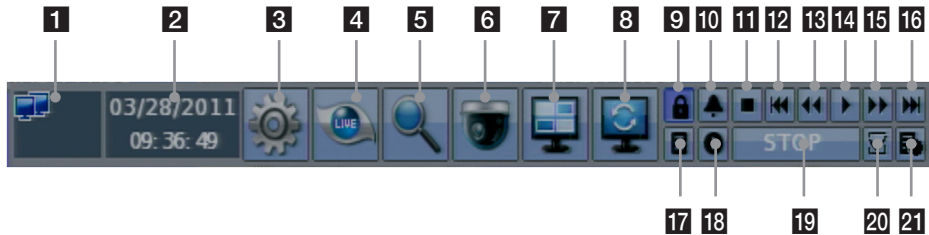5 [System control toolbar]**1** [Network status display]

- It shows current connection status of network.



(Black : It shows disconnected status.)



(Blue : It shows connected status.)

- If you want to modify network settings, you can do so by selecting [Setup] → [Network] → [TCP/IP]

2 [Current Date/Time]

- Current date and time is displayed.
- If you want to modify date and time, you can do so by selecting [Setup] → [System] → [Date]

3 [Setup]

- Set the system environment and function.
- Refer to Chapter "3-3. System Setting".

4 [Live screen]




- This is the button to switch over to the live display window to view the realtime video screen.


5 [Search]


- This is the button to switch over to the search window to view the recorded screen.
- Refer to Chapter "3-5. Search (Playback) & Backup"

6 [PTZ control]

- This is the button to control the PTZ camera
- Refer to Chapter "3-4. PTZ Control".

- 7** [Divided screen selection]
- 1/4/9/13/16 divided screen can be displayed in live view.
- 8** [Auto sequential]
- Click  button and each channel will be switched automatically.
 - This function does not work at 16 divided screen.
 - You can set the switching interval at [Setup] → [System] → [Overview] → [Auto- switching].
- 9** [Logout]
- Use Lock menu to change user or lock system operation.
- 10** [Relay out off(Alarm off)]
- When alarm (relay out) is on by event, you can stop the alarm with it.
 - Press  button to stop alarm (relay out).
 - If next event occurs after alarm (relay out), the alarm will start again.
- 11** [Stop]
- Click this button to stop playback recorded data.
- 12** [Reverse frame by frame playback]
- Click this button to search the data with reverse frame by frame playback.
- 13** [Fast backward playback]
- Click this button to playback fast backward. The speed of fast backward playback can be set to one of the following, X2, X4, X8, and X16.
- 14** [Forward playback]
- Click this button to playback forward as normal speed.
 - Live screen can be switched to playback instantly by clicking this button.
- 15** [Fast forward playback]
- Click this button to playback fast forward. The speed of fast forward playback can be set to one of the following, X2, X4, X8, and X16.
- 16** [Forward frame by frame playback]
- Click this button to search the data with forward frame by frame playback.
- 17** [System Log]
- This shows the system log in DVR.
 - Click  button to show the system log list.

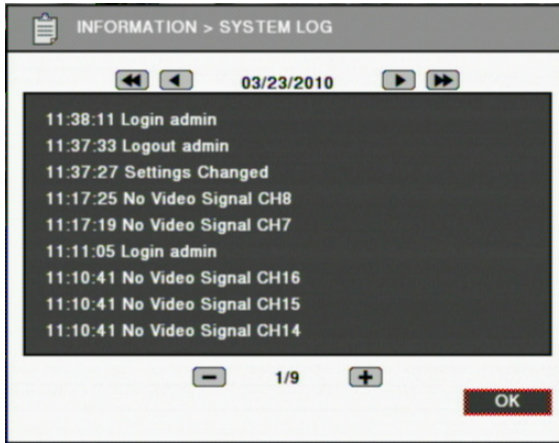

- You can see the log of previous date or next date by using ◀/▶ button.
- You can see the previous or next log list by using (-) / (+) button.
- Click "OK" button to close window.
- Clicking  button at search mode, Event search dialog box will be shown. Refer to "Event search".

18 [Information]

- It shows the system information.

19 [Playback status]

- It shows the playback status.

20 [Bookmark]

- You can add playback position (date/time) to access immediately later.

21 [Backup]

- Click this button to run backup recorded data.
- Refer to Chapter "3-5 Search (Playback) & Backup".

! NOTE

- You can show or hide system control bar by double clicking right mouse button.
- If the HDD has some bad sector, the HDD information will be displayed on right top of the screen.


3-3. System Setting

System setting can be configured by setup menu. Working condition can be specified by front button / mouse / remote controller.

Only admin user can setup system configuration by menu.


System

3 Functional description

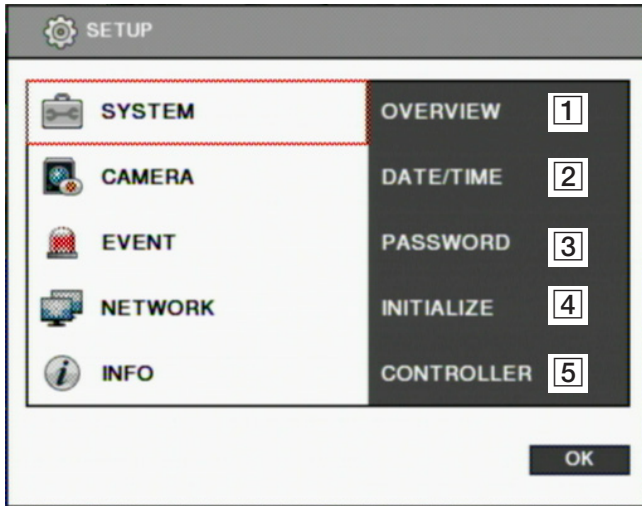

1 [Overview]


- You can specify the system configuration by this menu.
- Use ◀ / ▶ button to change configuration.

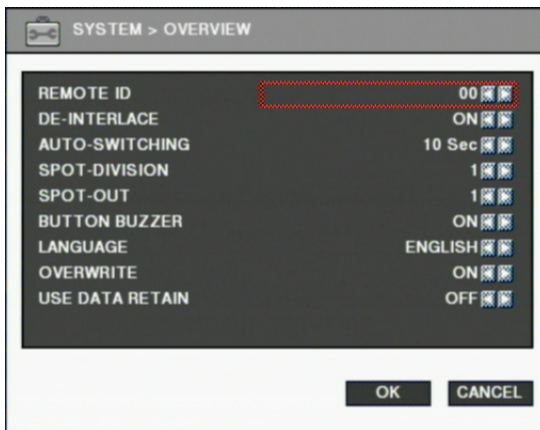

- REMOTE ID: ID can be selected from 00 to 99.
- DE-INTERLACE: Enable or disable de-interlace feature for playback screen. De-interlace feature is only available for 'D1' resolution.
- AUTO SWITCHING : Set dwell time when auto switching function is working. (1 Sec ~ 30 Sec)
- SPOT-DIVISION: Set the division mode for SPOU OUT screen.
- SPOT-OUT : Select spot channel. (channel 1~16, AUTO). If you select "AUTO", Spot will be changed sequentially.
 - ※ When spot channel is changed automatically, dwell time that specified by Spot from AUTO SWITCHING is applied.
- BUTTON BUZZER : Select button buzzer on / off.
- LANGUAGE : Select language.
- OVERWRITE: If you select "ON", when recording space of HDD is exhausted, it overwrites on the oldest recorded data to continue recording.
- USE DATA RETAIN : data saving period can be set from 1 day to 60 days.

2 [Date/Time]


- Specify date and time of system.
- You can specify setting by using ◀ / ▶ button
- Select date and time, then you will see virtual keypad as below.

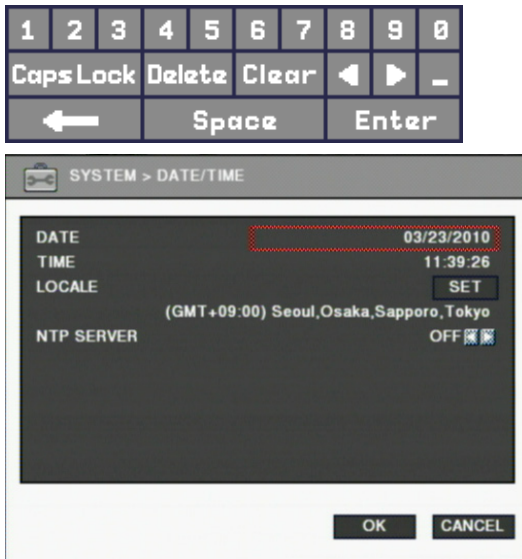

- DATE : Specify current date
- TIME : Specify current time

- LOCALE : Specify locale of country.

If you click **SET** button, the time zone dialog box will be shown as below, and select a time zone, then click OK to change setting.

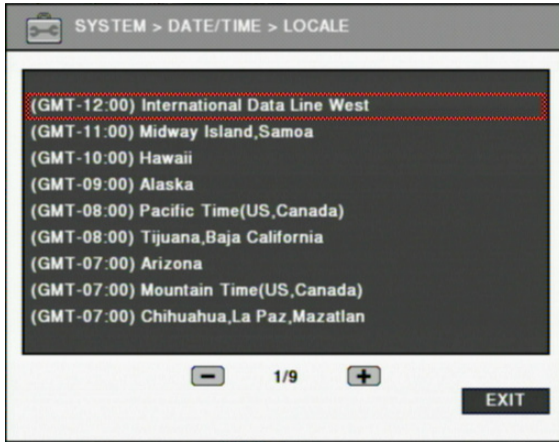


- NTP SERVER : It is used to set internet time server.

- ✘ Daylight saving time is applied automatically according to corresponding location.

3 [Password]

- You can specify password and authority of each user.
- The password can be set max 20 digits.
- You can set authority for each camera, setup, search/backup, and PTZ control for each user.
- You can set the system log out automatically. If there is no operate during the selected time, the system will log out automatically.

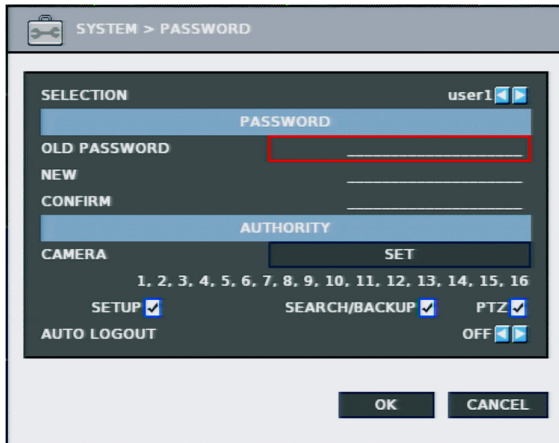


3 Functional description


- ※ If you access as Admin account, previous password is not required.
- ※ No authority setting is available for Admin account.
- ※ Only camera authority is allowed for Logout account.
- ※ Logout screen setting is applied as the same for Spot-Out.
- ※ White screen will be shown for the cameras which are not set the authority.

4 [Initialize]

- You can initialize data and configuration by this menu.

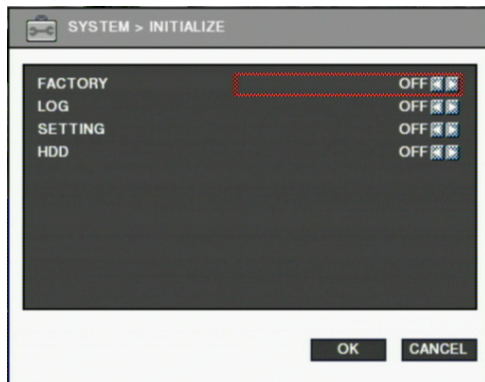

- FACTORY : Delete entire data in the system and restore as factory default.
 - The dialog box will be shown as below at the first booting after factory default setting.
 - The text in the dialog box will be shown in English as default.

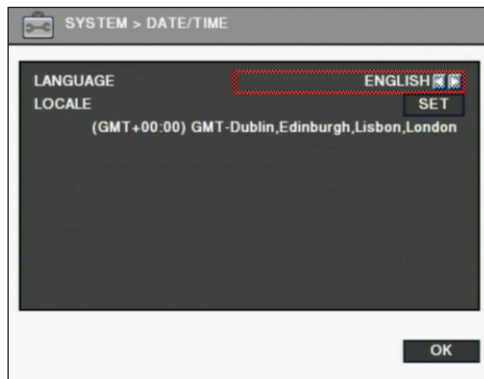

- ※ You can set time zone by clicking SET button, and which is the same as [SYSTEM] → [DATE/TIME] menu.


- LOG : Delete all event log.
- SETTING : Delete setting of configuration.
- HDD : Format HDD data.

NOTE

- If data is initialized, it can't be recovered. Before use "initialize", important data must be backup.
- HDD Factory initialization makes format HDD and you will loose recorded data

5 [Controller]


- Connect keyboard controller to DVR system.
- Setup configuration to access DVR with keyboard controller.
(*Refer to controller user manual)

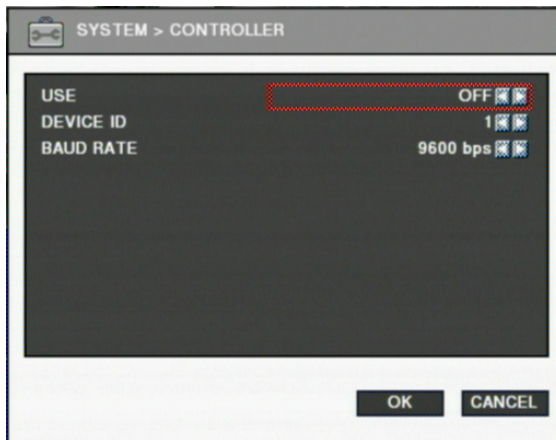

※ Supported device : LKD1000 Dynamic Controller (LG)


Camera

On the camera menu, channel, recording, schedule, color and PTZ can be configured.

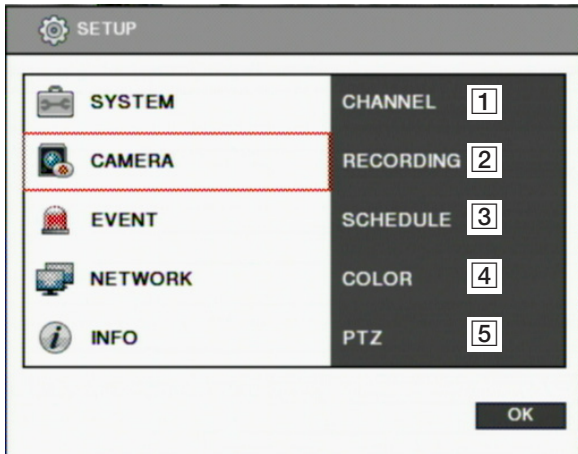

1 [Channel]

- You can specify channel name and audio for each camera.

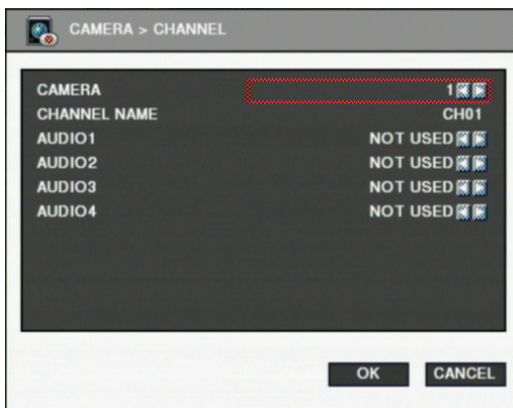


- CAMERA : Select camera to change
- CHANNEL NAME : Input channel name (Max 8 digits)
- AUDIO : Specify channel that audio is related.



Functional description

2 [Recording]


- You can specify recording configuration.

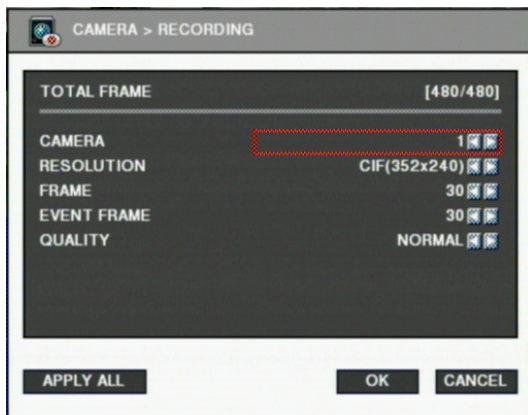

- TOTAL FRAME : Max frame rate has restricted by screen resolution.
- CAMERA : Select camera to set frame and quality.
- RESOLUTION : Specify screen resolution. (CIF / HALF D1 / D1)
- FRAME : You can specify recording frame rate when recording method is continuous for selected camera.
- ※ **Frame rate cannot exceed event frame rate.**
- EVENT FRAME : You can specify recording frame rate when recording method is event for selected camera.
- QUALITY : Specify image quality for selected camera. (VERY HIGH, HIGH, NORMAL, LOW, VERY LOW)
- Click "APPLY ALL" button to apply setting to all cameras.

3 [Schedule]

- You can specify recording method by schedule with date and time.

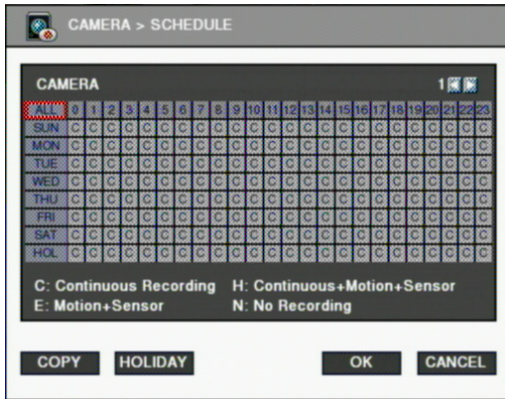

- Click time table to change recording method.
- Click channel number to change recording method for all time.
- Click time label to change recording method for all channel.
- Click "COPY" button to copy the settings for applying the current settings to the other channel(s).


C : Continuous recording method

H : Continuous recording + event recording method (Motion, Sensor)

E : Event recording method: if event (Motion, Sensor) happens, recording works.

N : No Recording.


- Click 'HOLIDAY' button to specify holidays.

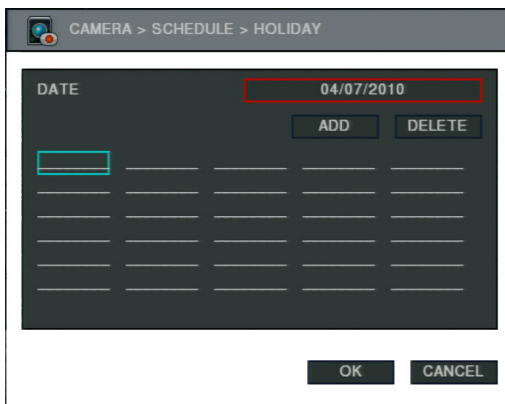

- You can select month and day by clicking date button.
- Click the Add button, the selected month and day will be added to the list of holidays.
- Click the Delete button to delete the selected date from list.


4 [Color]

- You can adjust brightness, contrast, saturation and hue.

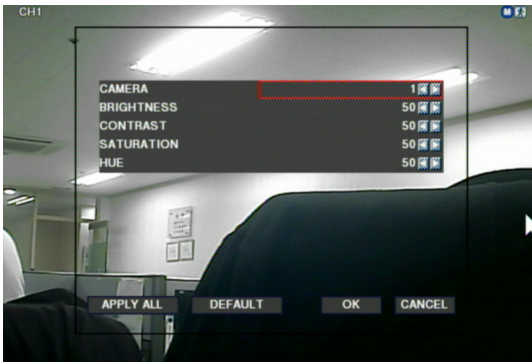

5 [PTZ]

- This is to setup the PTZ configuration.

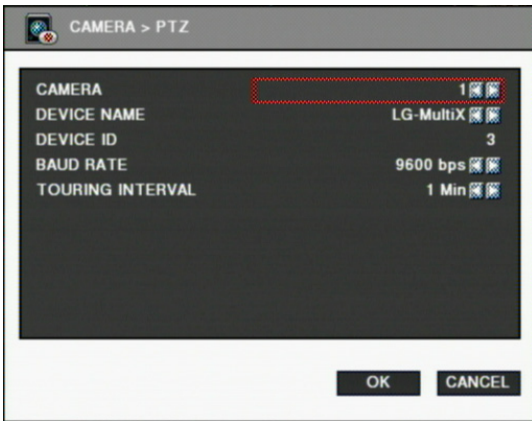

- CAMERA : select camera to setup PTZ.
- DEVICE NAME : Select camera name.(Max 15 cameras supported)
 1. LG Multix_E / LG Co.,Ltd
 2. LG Multix / LG Co.,Ltd
 3. LPT - A100L / LG Co.,Ltd
 4. LVC-C100 / C200HM / LG Electric Inc

5. HSDN251 / Honeywell Co.,Ltd
6. MD200 / 2000 / 1200 / 800 / Sony Co.,Ltd
7. New_Born / NEW BORN HIGHTECH
8. WVCS850 / Panasonic
9. PELCO-D / PELCO Co.,Ltd
10. PELCO-P / PELCO Co.,Ltd
11. SAMSUNG_E / SAMSUNG Co.,Ltd
12. SPD-2300 / 3000 / 3300 / SAMSUNG Co.,Ltd
13. SUNGJIN / SUNGJIN Co.,Ltd
14. TPD7720 / DYNACOLOR,INC
15. V1305R-DC / V1300RB / CRX - 1013 / VICON

- DEVICE ID : Select ID that configured in camera.
- BPS : Bit rate Per Second for data transmission.
Default value of BPS is 9600
- ※ Value can be selected by camera setting: (1200/ 2400/ 4800/ 9600/ 19200/ 38400/ 57600/ 115200 bps)
- TOURING INTERVAL : This is time interval before moving to next preset position when touring.
 - Select one from 5 seconds, 10 seconds, 20 seconds, 30 seconds, 1 minute, 3 minutes and 5 minutes.
 - The default is 1minute.


**NOTE**

Basically, DVR supports one RS-485 port for PTZ connection.

Event


You can specify the processing when event occurs like sensor, motion detection, video loss, and the email notification settings when event occurs.

3 Functional description

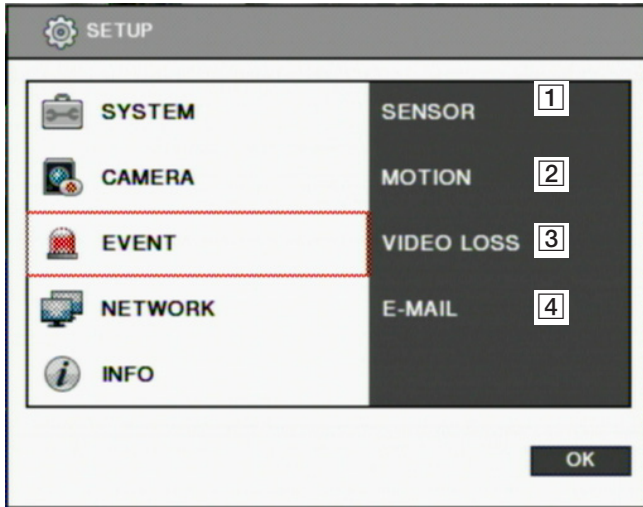

1 [Sensor]

- You can specify the processing when event occurs from input device.

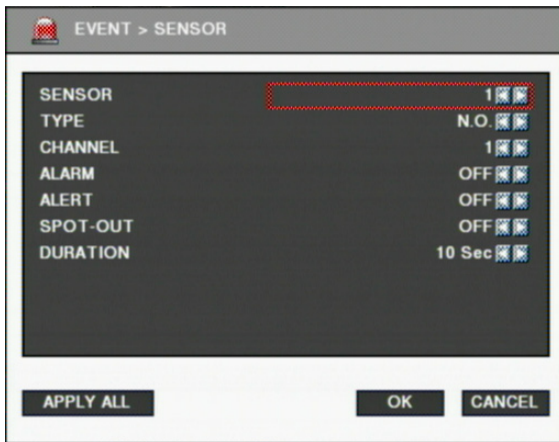


- SENSOR : Selecting sensor number. (1 ~ 8)
- TYPE : Setting NO / NC type.
 - NO (Normal Open) : The type of input device is opened normally.
 - NC (Normal Close) : The type of output device is closed normally.


- CHANNEL : Selecting associated channel with the sensor input. (OFF/1~16)
- ALARM : Setting alarm out when event occurs from input device.(OFF/1~4)
- ALERT : Setting sound a buzzer when event occurs from input device. (ON/OFF)
- SPOT-OUT : Setting spot out when event occurs from input device.(ON/OFF)
- DURATION : Setting the duration time from event occurs. (1~10 Sec, OFF)

2 [Motion detection]

- You can specify the process when motion is detected.

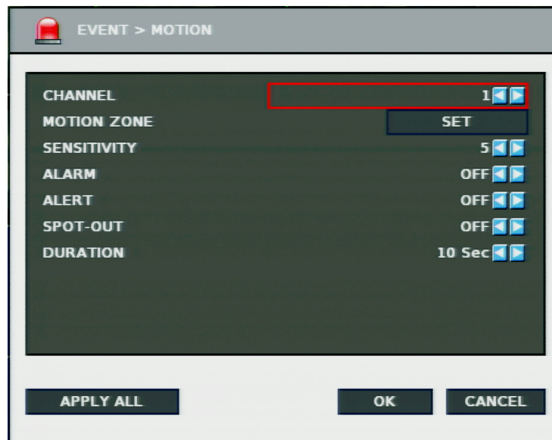


- CHANNEL : Selecting camera which is associated event.
- MOTION_ZONE : Setting the motion detection zone.
 - Click "SET" button to setting motion detection zone.
 - The red-marked area is set as motion detection zone.

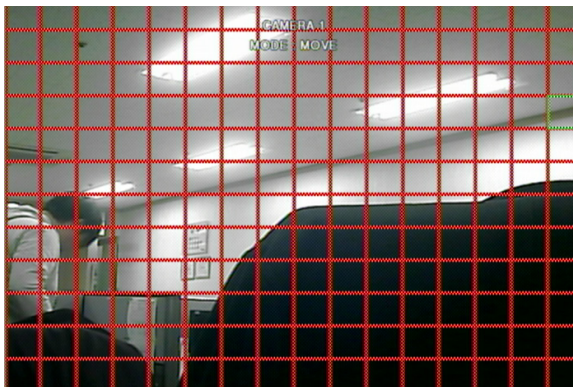

- Click right button of mouse on the screen to display menu window.

3


Functional description

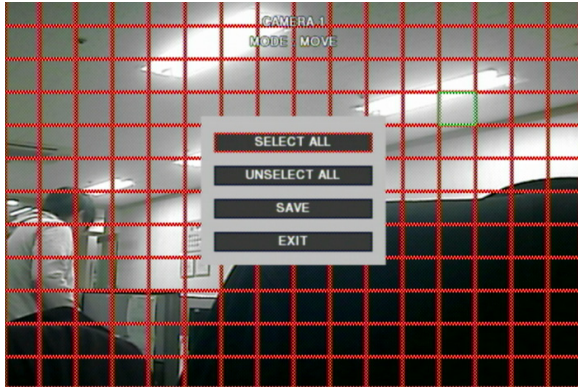

- > SELECT ALL : Selecting entire area.
- > UNSELECT ALL : Unselecting entire area.
- > SAVE : Saving selected area as a motion detection zone.
- > EXIT : Exiting motion zone setting.
- SENSITIVITY : Setting the motion sensitivity. (1 to 10)
- ALARM : Setting alarm out when motion is detected.
- ALERT : Setting sound a buzzer when motion is detected.
- SPOT-OUT : Setting spot out when motion is detected.
- DURATION : Setting the duration time from motion detection occurs.

3 [Video loss]

- You can specify the processing when video loss.

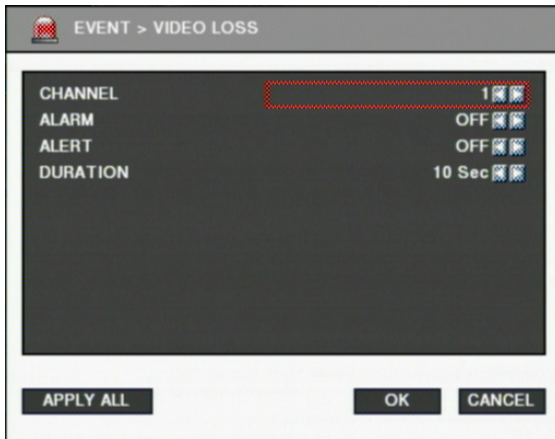


- CHANNEL : Selecting camera which is associated event. (1~16)
- ALARM : Setting alarm out when video loss. (OFF/1~4)

- ALERT : Setting sound a buzzer when video loss. (ON/OFF)
- DURATION : Setting duration time from video loss. (OFF/1~10 Sec.)

4 [E-mail]

- You can set the E-mail notification when event occurs.

- MODE : Enabling or disabling E-mail notification. (OFF / Authentication / Not authentication)
- SMTP SERVER : Setting the IP address or domain name of SMTP server.
- PORT : Setting the TCP port number of SMTP (Default value is 25).
- ACCOUNT : Setting the E-mail account registered in SMPT server.
- PASSWORD : Setting the password of the E-mail account.
- SENDER : Setting the E-mail address of sender.
- RECEIVER : Setting the E-mail address of receiver.
- SSL : Marks up when using the SSL(Secure Socket Layer) function.
- E-MAIL TEST : Click to send testing E-mail, then RECEIVER can check the testing E-mail.

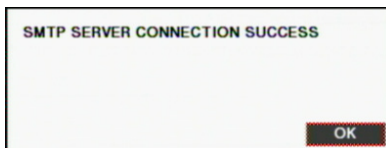


<Success>



<Failure>

Network


You can set the network environments.

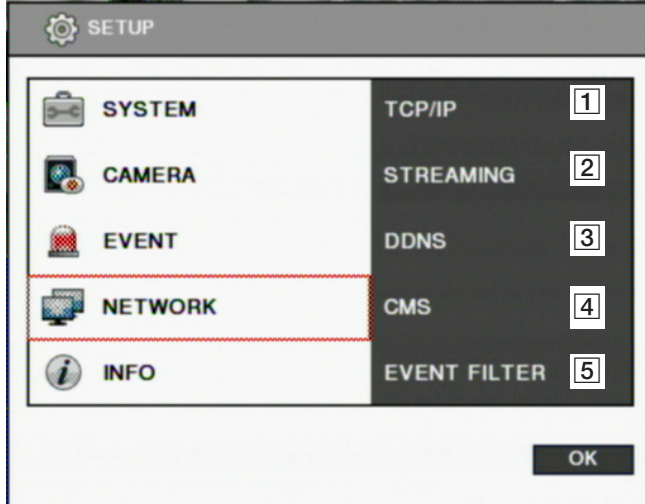

3 Functional description

1 [TCP/IP]

- You can specify the TCP/IP setting according to network environment.
- Specifying the TCP port number of Web, Playback and Live.
- Default values: Web(80), Playback(9091), Live(9092)

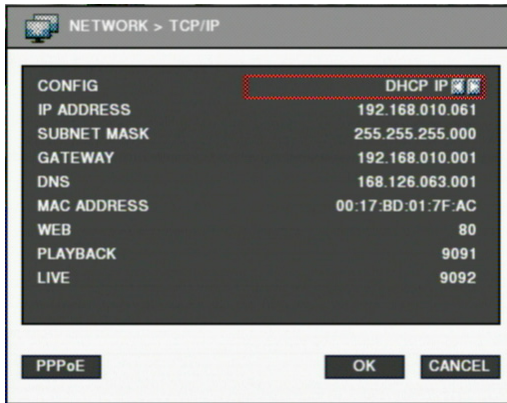

For dynamic IP or PPPoE


- All the items of IP address, subnet mask, gateway and DNS are disabled and set each value automatically.
- You can specify account and password of PPPoE using PPPoE button which is located left below.

For static IP

- IP ADDRESS : Enter IP address received from ISP using screen keyboard.
- SUBNET MASK : Enter subnet mask received from ISP using screen keyboard.
- GATEWAY : Enter gateway received from ISP using screen keyboard.
- DNS : Enter the DNS IP address received from ISP using screen keyboard.
- MAC ADDRESS : This is hardware specific unique address of network device, so user cannot set this value.
- ※ 8000~65535 port number is recommended.
- ※ Do not use the same port number with each other.
web(80),playback(9091),live(9092),CMS LG(9100)
- ※ If the network of DVR is connected via router, you must set Configuration of port forwarding according to the router.
(web, search, live ports) Please refer to user's guide of the router which you are using.

2 [Streaming]


- You can set each item about the network video streaming.

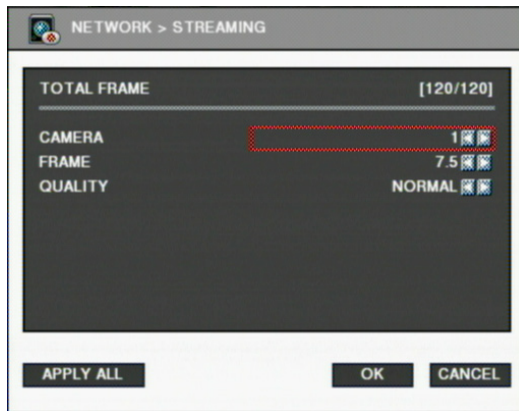

- TOTAL FRAME: : Total frame rate set / Maximum available frame rate
- CAMERA: Selecting camera.
- FRAME: Frame rate per a second for each camera
- QUALITY: Selecting video encoding quality (VERY HIGH, HIGH, NORMAL, LOW, VERY LOW)
- Click " APPLY ALL " button to apply setting to all cameras.

3 [DDNS]


- You can use DDNS service provided by LG.
- You can connect to DVR easily using host name instead of IP address with LG DDNS

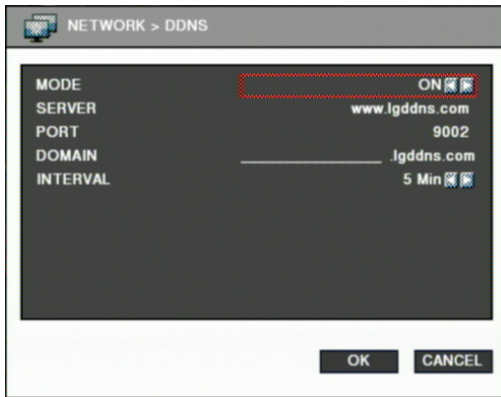

- MODE : Enabling or disabling DDNS.
- SERVER : IP address of DDNS.
- PORT : TCP port number of DDNS.
- DOMAIN : The domain name of DVR device.
- INTERVAL : Setting the interval of IP address updating.

4 [CMS]

- Specifying IP address and TCP port number of CMS.

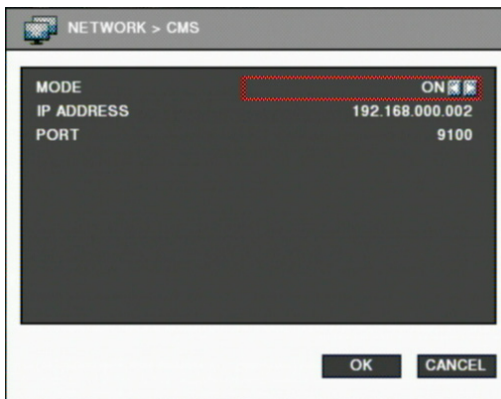


- MODE : Enabling or disabling event report to the central monitoring center when event occurs.
- IP ADDRESS : The IP address of the central monitoring center.

- PORT : The TCP port number of the central monitoring center.
 - ※ 8000~65535 port number is recommended.
 - ※ Do not use the same port number with each other.
web(80), playback(9091), live(9092), CMS LG(9100)

5 [Event filter]


- Specifying the event which will be sent to the central monitoring center and E-mail.

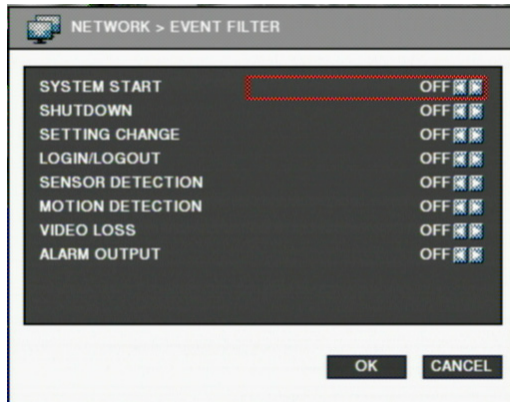

- SYSTEM START : Enabling or disabling the system start event.
- SHUTDOWN : Enabling or disabling the system shutdown event.
- SETTING CHANGE : Enabling or disabling the setting change event.
- LOGIN / LOGOUT : Enabling or disabling the login / logout event.
- SENSOR DETECTION : Enabling or disabling the sensor detection event.
- MOTION DETECTION : Enabling or disabling the motion detection event.
- VIDEO LOSS : Enabling or disabling the video loss event.
- ALARM OUTPUT : Enabling or disabling the alarm output event.


Information

You can view the general system information and run software update.

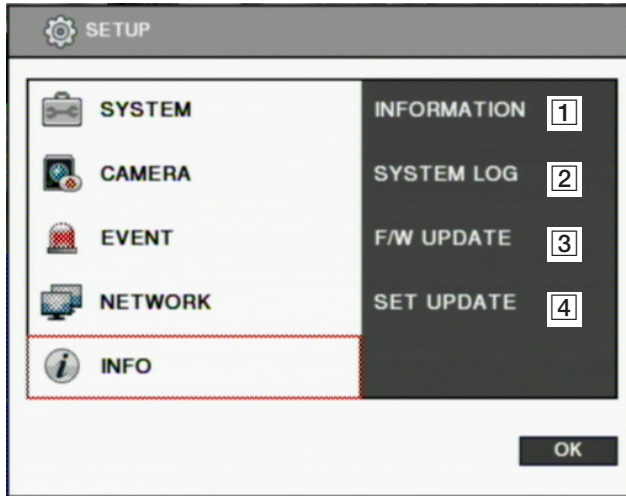

1 [System information]

- You can view the system information.

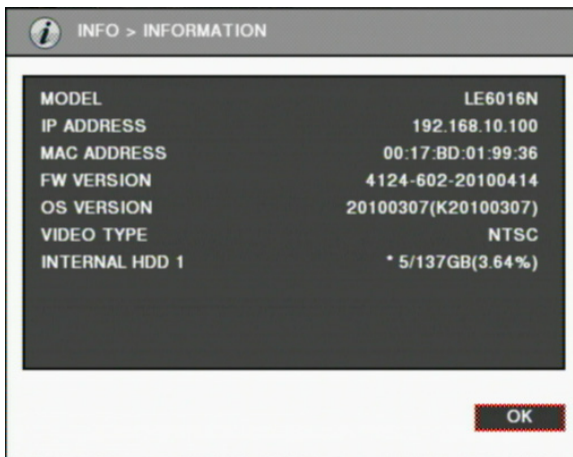

- MODEL : Model name of the device.
- IP ADDRESS : The IP address assigned to the device.
- MAC ADDRESS : The MAC address assigned to the device.
- F/W VERSION : The version number of firmware.
- OS VERSION : The version number of Operating system.


- VIDEO TYPE : Showing NTSC or PAL. This is set automatically by detecting incoming video signal, so user cannot change this value.
- HDD: HDD capacity, using ratio and status.
 - * mark is shown at the HDD which is currently recording.
 - "NOT HEALTHY" is shown according to the HDD status.
 - The HDD connected to E-SATA port is displayed as "External HDD".

2 [System log]

- You can view the system log. (Refer to page 26 [System log])


3 [F/W Update]

- You can run firmware update.

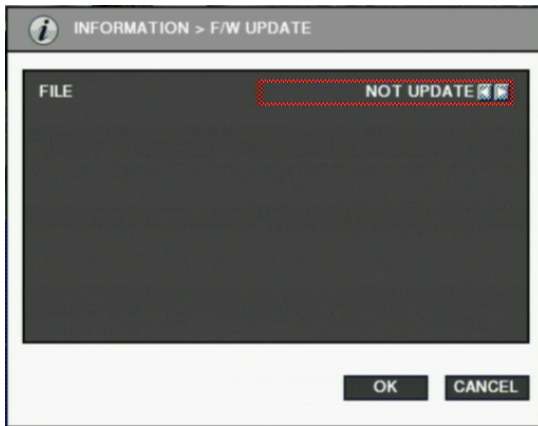

- FILE : You can specify the firmware file to update using ◀ / ▶ buttons.

4 [Setting update]

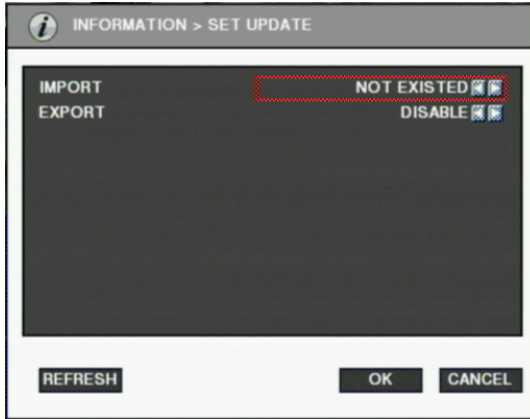

- IMPORT: You can replace current setting values with new values from USB memory. (ENABLE/DISABLE)
- EXPORT: You can export current setting values to USB memory. (ENABLE/DISABLE)

! NOTE


USB memory stick is needed to update F/W or settings.
It takes about 5 seconds to recognize USB memory device after connected.
"USB is not detected." Message will be shown when you are to run backup without connected USB.


3

Functional description

3-4. PTZ Control

It is used to control PTZ camera which is connected at RS-485 port. Settings of camera and DVR should be done if you are to control PTZ camera.

1. Click the icon  to control PTZ.
2. Control the PTZ camera using each item below.

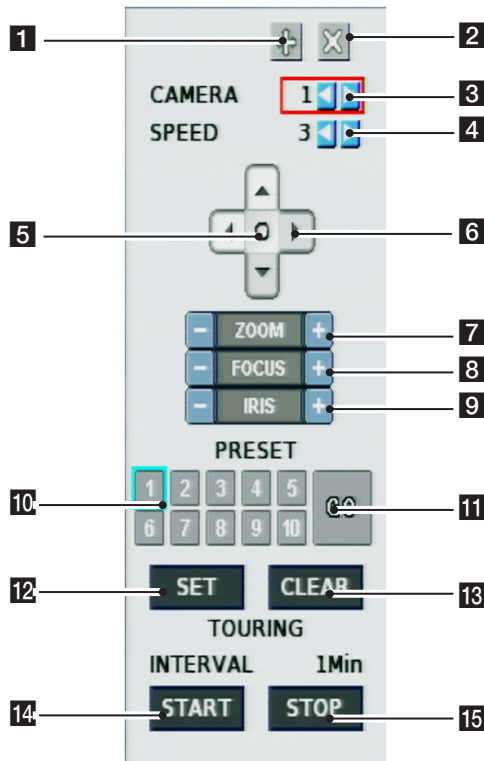

- 1 Click to move the PTZ control window.
- 2 Click this button to close the PTZ control window.
- 3 Click this spin control to select PTZ camera. (1~16)
- 4 Click this spin control to specify the moving speed of PTZ camera (1~6).
- 5 Click this button to show the OSD menu of camera.
- 6 Click these direction buttons to pan or tilt camera.
- 7 Click to control zoom in or out.

- **8** Click to control the focus of camera manually.
- **9** Click to control the iris of camera manually.
- **10** Click to select preset number.
- **11** Click to move to selected preset position.
- **12** Click to set current position as a new preset position.
- **13** Click to delete specified preset number.
- **14** Click to start touring, which function traverse each preset position one by one according to dwell time.
- **15** Click to stop touring.

- Setting a new preset position
 1. Move camera position using direction button **6**.
 2. Select the preset number to set using button **10**.
 3. Click button **12** "SET".
 4. Repeat process 1 ~ 3 stage to set another preset position.
 - ※ **Preset numbers are available up to 10.**
 - ※ **The maximum preset number is different according to the specification of camera.**
- Moving camera to preset position
 1. Select the preset number to move using button **10**.
 2. Click button **11** "GO".
 - ※ **Moving camera to preset position is only available when the camera supports preset feature.**
- Deleting preset position
 1. Select the preset number to delete using preset number button **10**.
 2. Click button **13** "CLEAR".
 - ※ **Deleting preset position is only available when the camera supports.**
- Starting touring
 1. Click button **14** "START".
 2. Then it will start traversing each preset position one by one automatically.
- Stopping touring
 1. Click button **15** "STOP".
 2. Then it will stop traversing.

! NOTE


- The tour which is working will be stop after the setting is changed.
- If you control the Camera OSD by using the SAMSUNG E protocol to select the exit(X) menu, the DVR may not operate normally. In this case, you can recover the system as input the Zoom +/- key after input O key of the OSD.


3-5. Search (Playback) & Backup


Various features are available for user to search recorded data easily.

Time search

You can search recorded data with date and time.

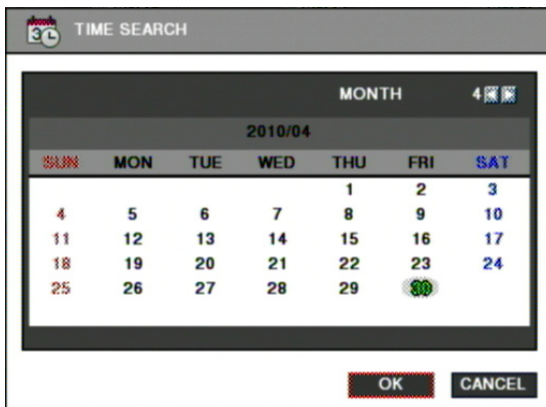

- Search method
 - Click  button on menu bar of real time screen.
 - Select the date you want to search on the calendar above and click "OK". (The date with recorded data is displayed in bold.)
 - Then recorded time table will be displayed. (Refer to the image below)
 - The recorded data will be displayed after you select time and click "OK" button.

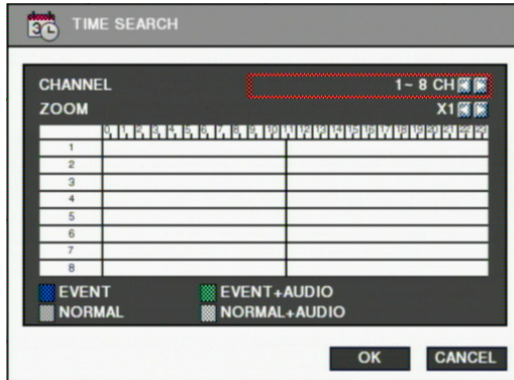


- ✗ Click the "CANCEL" button to select date again.
- ✗ You can select a data if data are duplicated at the same time stamp using spin box below. The spin box is shown only when data are duplicated at the same time stamp, which is caused when daylight saving period.
- ✗ Bigger number of duplicated data stands for more recent data.

Event Search

You can search recorded data using event occurrence time.




- A. Click mouse on the icon  of the menu bar which is located in the lower position of the search mode screen.
- B. Use ◀▶ buttons on the upper right side to select camera to search.
- C. Check sensor, motion check box below to filter out the events.
- D. Move to previous or next page using - and + buttons.

- E. Select a data to search from the list. Click the mouse button to move to the corresponding recorded data.
- F. Click "PLAY" button and the searched data will be played.

Bookmark


You can access the bookmarked time directly without going through the search.

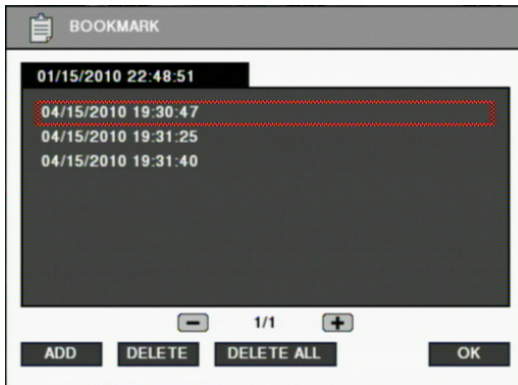

- ADD
 1. Use the time search and place you want to add a bookmark.
 2. Click mouse on the icon.
 3. If you want to add the current selected time, click Add button. Bookmarks can be added up to 100.
- SEARCH
 1. Click mouse on the icon.
 2. "+" and "-" button to move the page using a bookmark and then select the item you want to move to
- DELETE
 1. Click mouse on the icon.
 2. After you select an item, click the Delete button to delete it. If you want to delete the entire entry, click DELETE ALL.


Backup


You can back up the recorded data which you select date/time and channels.

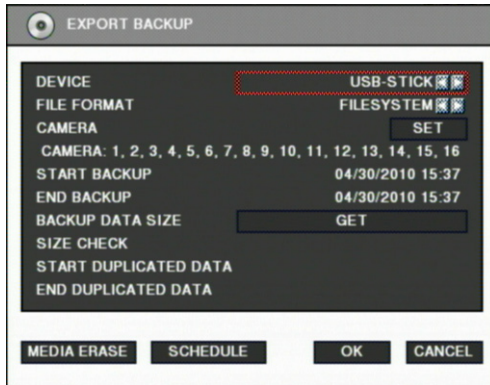


3

Functional description

- A. Click mouse on the icon  of the menu bar which is located in the lower position of the screen.
- B. Select a device to backup data will be stored. Only USB-STICK is available for LE6016N. USB-STICK, CD-RW, or DVD-RW can be used for LE6016D.
- C. Select media type. If you select FILESYSTEM, backup data will be stored as native format with backup player. If you select AVI, only one channel is backup
- D. If you select the camera you want to perform a backup, click "SET" button and select cameras you want. On the other hand, when AVI is selected, only one camera can be selected.
- E. It displays selected cameras. (CAMERA : 1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16)
- F. Specify starting date/time of backup period.
- G. Specify ending date/time of backup period.
- H. Check the data size to backup. But, when AVI is selected, only one camera can be selected.
- I. If duplicated data exists in the backup data period, select one data from "START DUPLICATED DATA" or "END DUPLICATED DATA".
- J. After finishing setting for backup, click OK button.
- K. When backup is started, the screen moves from search to real time live mode and the icon and text will be shown as below to display backup progress.

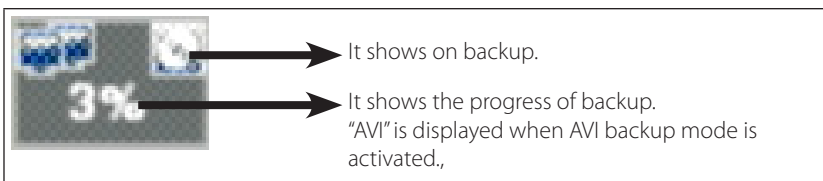


 
- L. The message "BACKUP STOP" will be shown when backup is finished.
- You can backup automatically daily based by schedule backup.

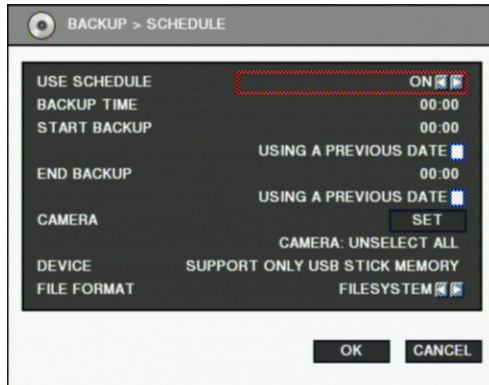


- A. If you are to use schedule backup, set "USE SCHEDULE" to "ON".
 - B. Enter the time to execute backup at "BACKUP TIME". If USB memory stick is not connected nor has no free space, backup cannot be executed.
 - C. Enter start time of backup period at "START BACKUP". Check "USING A PREVIOUS DATE" if needed.
 - D. Enter end time of backup period at "END BACKUP". Check "USING A PREVIOUS DATE" if needed.
 - E. If you want to select cameras to backup, Click "SET" button at "CAMERA" and then select cameras. On the other hand, In case of AVI backup, only one camera can be used.
 - F. Selected cameras are shown. (CAMERA : 1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16)
 - G. Select data format. When selecting "FILESYSTEM", native backup player is included as well. So you can search and playback easily with it.
 - H. Click "OK" button after finishing settings. When the set time at "BACKUP TIME", the backup will be executed automatically.
- ※ Schedule backup will be executed repeatedly once a day.

How to cancel backup

➔ If you press  button when backup is running, the selection message will be shown as below.



 ➔ Click "OK" button to cancel backup.

**MEDIA ERASE**

- ➔ You can erase data in the storage media, like USB memory stick, CD-RW or DVD-RW.
- ➔ When you are to use USB memory stick, after connecting USB storage to USB port of front side, click "MEDIA ERASE" button to erase data.
- ➔ It is recommended to backup important data stored in USB storage before using this function.
- ➔ When you are to use CD-RW or DVD-RW, after inserting media to DVD recorder, click "MEDIA ERASE" button to erase data.

- ✘ The backup process is not started if you specify invalid starting and ending date/time.
- ✘ The backup period cannot exceed 24 hours.
- ✘ The USB memory stick should be formatted as FAT32.
- ✘ When AVI backup, if there are different resolution or frame rate exist, the AVI files are separated at each changed position.
- ✘ Maximum size of backup data is depends on the storage media to be used. In case of USB memory stick, only free space is used. (But, in case of AVI backup, the maximum file size is limited to 2GB.), up to 700MB for CD-RW, and up to 4.7GB for DVD-RW.
- ✘ In case of FILE-SYSTEM backup, data files are separated as 127MB unit, in the other hand, single file is used for AVI backup.
- ✘ If data contained at CD-RW or DVD-RW media, old data are removed and new data will be written.
- ✘ If there's duplicated data at the same time stamp, you can select specific data position with the dialog box as below. Select data position with spin box, and then click "OK" button to start back up. The older data is the smaller number.
- ✘ The other functions do not work when backup is running.

- ※ Bigger number of duplicated data stands for more recent data.




NOTE


Do not remove the external USB device when backup is running.

- Backup data playback

The backup data in USB storage or CD/DVD media can be played at PC.

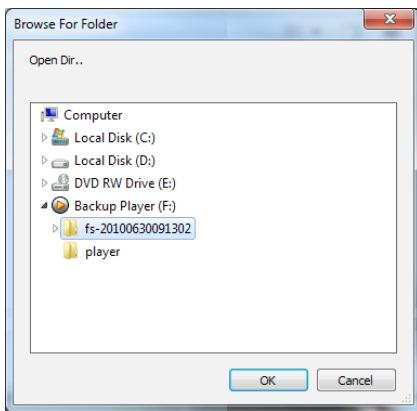

<Selecting backup folder in USB storage>

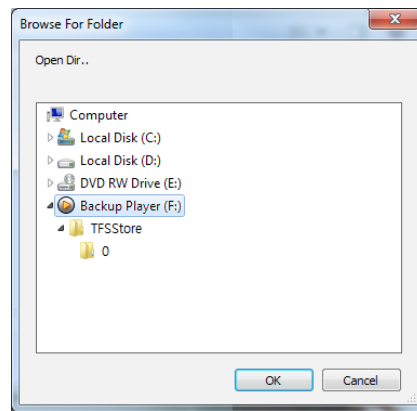

<Selecting CD/DVD drive >

- The backup player software will run automatically when you insert the media containing backup data at the PC. If backup player is not run automatically, according to security settings of PC, you should run it manually. In case of USB storage, it is located at "\player\player.exe", and in case of CD/DVD, it located at "\player.exe".
 - Specify the folder containing backup data. In case of USB storage, the name of folder consists of fs-[backup date/time], and in case of CD/DVD, just select disk driver.
 - After specifying data folder, click "OK" button, then backup data will be played.
- The system log backup
The system log information will be saved by the text file format in the backup data folder. When the backup is progress, the system log is saved from backup start date/time to backup end date/time at the same time.

4 Web viewer

4-1. Installation


Set up the network before the installation.

Web viewer installation


1. Enter the LG DVR IP address in the Web address window, and then the following Active X installation window will be displayed.


4

Web viewer

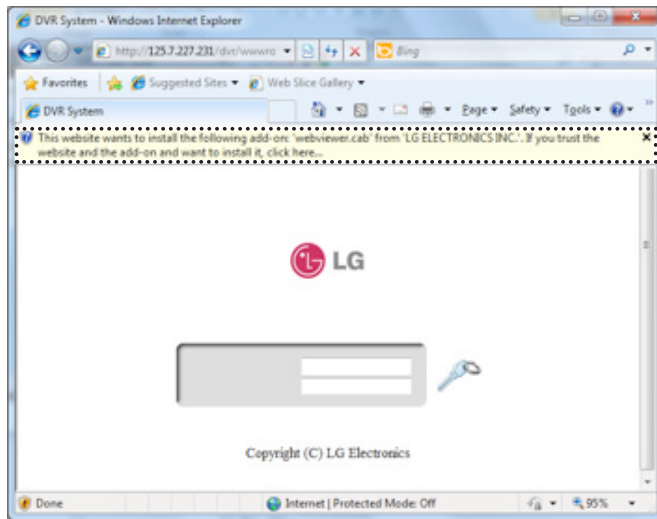


2. When you click on the Active X install button, the following window will be displayed. Press the Install button.

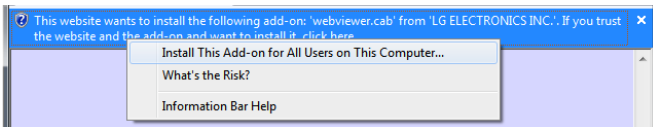

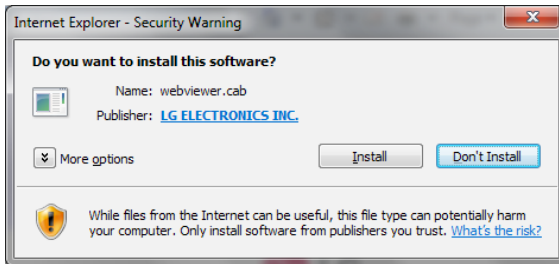


3. Press the Next button from the Web View installation window. When the installation is completed, the Web initialization screen will be displayed. (General installation recommended)

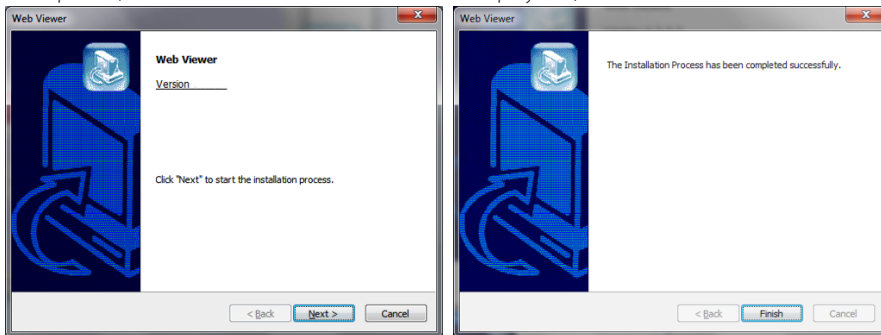

4. Enter the ID and password. (Multi-login is not enabled for admin user ID.)
(Default: admin, user1, user2, user3)

User Id :

Password :



NOTE

Web Viewer and CMS LG cannot be used at the same time.


4-2. Functional description

Web viewer monitoring window




- 1 Divide screen division (Full screen/1/4/9/16)
- 2 Selecting a camera
- 3 Real time image capture (Save as JPEG)
- 4 Settings (It is available only when you logged in as admin)
- 5 Enable or disable incoming audio (Default value is disable.)
- 6 Zoom control
- 7 Iris control
- 8 Focus control
- 9 Preset (Click "Go" button after selecting preset number at combo box)
- 10 Start/Stop touring (Rotation between each preset positions)
 - × Preset and touring are available after preset is set on the device.
- 11 Pan tilt control (Up, down, left and right buttons)
- 12 Controlling moving speed when pan tilt operation
- 13 Switching to search window
- 14 Logout

Web viewer search window

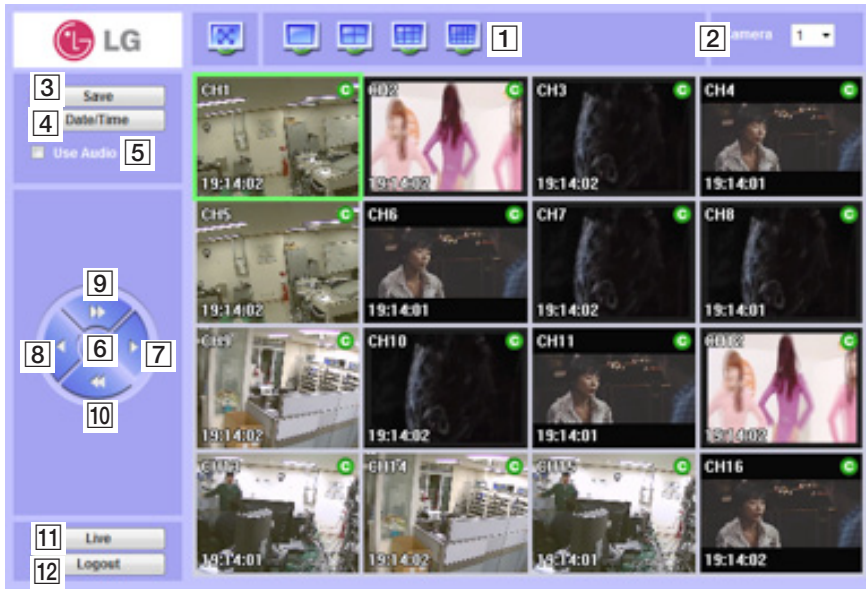

- 1 Divide screen division (Full screen/1/4/9/16)
- 2 Selecting a camera
- 3 Saving video or still image (Saving as AVI/JPEG/BMP)
- 4 Date/Time selection button to play back (Refer to "Search dialog box")
- 5 Enable or disable incoming audio (Default value is disabled.)
- 6 Pause button
- 7 Forward play button
- 8 Backward play button (Displaying only key-frame)
- 9 Fast forward play button
- 10 Fast backward play button
- 11 Switching to monitor window
- 12 Logout

Search dialog box

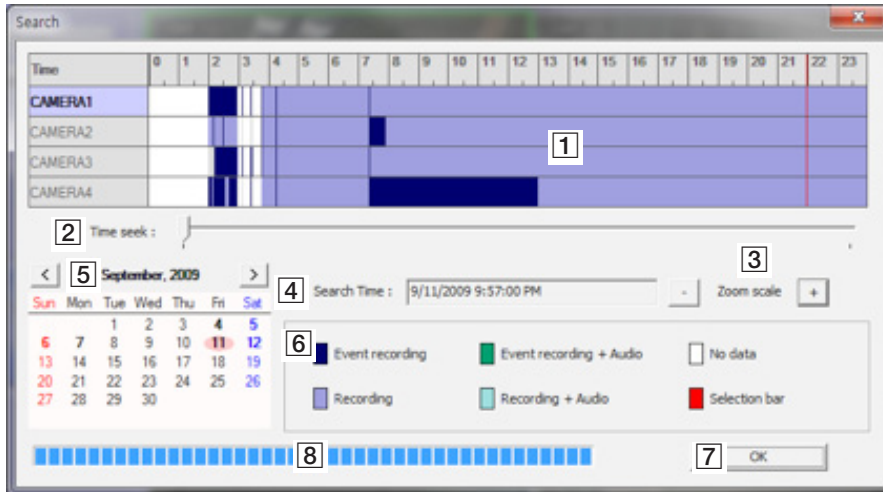


4

Web viewer

- 1 Recorded data graph (Click on the data graph to select time to play.)
- 2 Time scroll bar
- 3 Zoon in/out of graph (It can be scaled from 2 hours to 24 hours by minute unit.)
- 4 Displaying selected data/time
- 5 Displaying calendar (The dates are shown in bold if recorded data exist.)
- 6 Description of the color of the recorded data graph
- 7 "OK" button (Video is played immediately when you selected data/time which has recorded data.)
- 8 Progress bar which shows loading progress.

Saving as AVI file dialog box

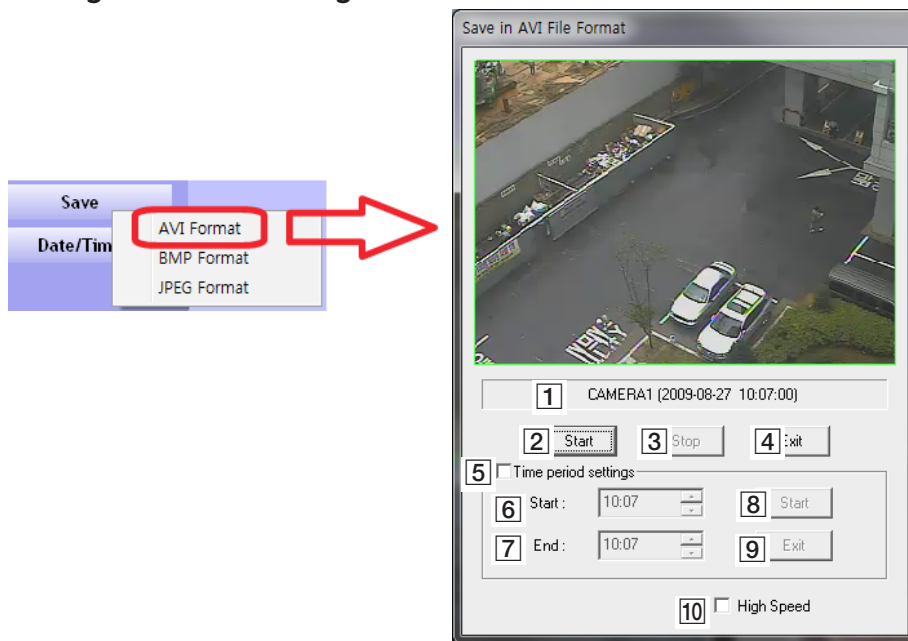

- 1 Camera name/Date/Time which is currently displayed.
- 2 Starting AVI saving (File name is requested when you click on this button.)
- 3 Stopping AVI saving
- 4 Closing Save as AVI dialog box (It will be closed automatically after stopping AVI file if it is being saved.)
- 5 Specifying time period to save AVI file.
- 6 Starting time to save AVI file.
- 7 Stopping time to save AVI file.
- 8 Starting periodic AVI file saving
- 9 Closing after finishing AVI file saving.
- 10 Increasing AVI saving speed with reducing displaying frame rate.

5 Apple iPhone/iPod

5-1. Functional description

Real-time monitoring

If you can use Wi-Fi environments, you can view the real-time monitoring video from DVR with iPhone/iPod.

1. Run web browser at iPhone/iPod, and enter LG DVR IP address.



5

Apple iPhone/iPod

2. Enter id and password, and click "login" button the real-time monitoring screen will be shown.



3. Real-time monitoring screen.



- 1 Camera selection (CH1~16)
- 2 Video screen



6

Reference

6-1. Check before requesting for service

If the following symptoms are observed when using the product, recheck the following. It may not be a problem.

Symptom	Checkpoint and resolution
I cannot turn on the power of the device	Check whether the power plug is correctly plugged.
	Check whether the voltage of the power supply is correct.
	If the power cannot be turned even when the power of the device is connected correctly, please contact your closest service center
The power of the device is turned on, but the screen on the monitor is not turned on	Check whether the power plug is correctly plugged.
	Check whether the monitor is turned on.
	Check whether the video cable between the monitor and device is connected correctly.
	Check the selected monitor type.
Camera number is displayed on the screen but the video of the camera is not displayed	Try disconnecting the power plug, and then plugging it again.
	Check whether the video output port of the camera is correctly connected to the device.
	Check whether the power supply of the camera is connected correctly.
	Check whether the resolution is set to 1024x768 in VGA environment setting.
	Check if there is any issue with the video cable between the device and the camera.
Reboot this device.	

Symptom	Checkpoint and resolution
Video of camera is displayed on the screen but I cannot record the video through the device	Check the recording setting from the recording setting menu.
	Check whether the hard disk is recognized from the system information window.
	If the hard disk is not recognized normally, check the format and connected condition of the hard disk.
	Check the available space on the hard disk.
I cannot search the recorded video.	During the search, check whether the video data currently being recorded exists.
	If the video data currently being recorded does not exist, check the recording setting of the menu.
	Check whether the hard disk is recognized from the system information window.
	If the hard disk is not recognized normally, check the format and connected condition of the hard disk.
I cannot hear the audio recorded with the video.	Check whether the recording audio channel is correctly set up.
	Check whether the connector on the rear side of the device is connected with external device (Line input) correctly.
	Check whether the connected external device is operating correctly.
Screen colors of some cameras are incorrect or the video is displayed in abnormal way.	If there is an object in the camera connected to the system, connect the camera to the video input port to check the video and check if there is any issue with the existing cameras connected to the system.
	Check whether the video format of the device is the same as that of the camera.
	The video format can differ by the region into PAL or NTSC format. IF the video format of the device is not the same as that of the camera, the video may not be recognized.

Symptom	Checkpoint and resolution
There is noise in the video.	If there is an issue with the camera connected to the system, connect a different camera to the video input port to check whether the existing camera connected to the system has an issue.
	Check whether the video cable connecting the device and the camera is damaged.
	Check whether there is a cable with high voltage near the video cable. It can cause noise in the video or cause deterioration in the video quality.
	Check whether the video cable connected between the device and the camera is the cable for correct usage.
The sensor connected to the device is not working.	If the power cable is used for the usage of video cable, it can cause noises in the video.
	Check whether the sensor type set in the sensor setting menu is the same as that of the sensor.
	From the schedule management item of the recording setting menu, check whether the recording using the sensor is set up.
PTZ camera connected to the device is not working.	Check whether the sensor is correctly connected to the ALARM-IN port.
	Check whether the PTZ camera is correctly set up from the camera setting menu.
	Check whether the power cord of the PTZ camera connected to the system is correctly connected.
	Check whether the signal cord connected to the PTZ camera connected to the system is correctly connected.
	Check the channel the PTZ camera connected to the system controls.
	Check the user type. General user cannot use the PTZ function.

Symptom	Checkpoint and resolution
I cannot receive the E-mail sent from the device.	<p>When the E-mail transmission fails without SMTP server setting.</p> <ul style="list-style-type: none"> • Check whether the network is set up correctly. • Check whether the E-mail address is entered correctly. • Check the spam mail setting for the entered E-mail address. (If the spam mail is set, some mails may automatically be deleted or classified into spam mail box etc.) • Some SMTP mail server providers does not support sent email from the commercial SMTP server. In this case, use a public SMTP server.
	<p>When the E-mail transmission fails even with the SMTP server setting.</p> <ul style="list-style-type: none"> • If you see a message saying "Please check the SMTP information or internet cable". <ul style="list-style-type: none"> - Check the SMTP server address. - Check the SMTP port number. - Check the network setting. • If the E-mail cannot be received without any error message. <ul style="list-style-type: none"> - Check the E-mail address of the recipient. - Check the spam mail setting for the entered E-mail address.
I cannot see the video screen connected with iPhone/iPod.	<ul style="list-style-type: none"> • Check if wireless internet is available. <ul style="list-style-type: none"> - If receive sensitivity is low, it can be disconnected or you cannot see the video.

6-2. Recommended device to use

List of recommended USB memory

Classification	Manufacturer	Model name	Capacity
1	ELECOM	MF-BU201GWH	1GB
2	BUFFALO	RUF2-E1GL-BL	
3	Scandisk	Cruzer Micro	
		Cruzer Micro U3	8/16GB
4	SONY	USM1GJX	1GB
		USM8GH	8GB
5	PRINCETON	PFU-ST51G	1GB
6	DATA	TB-ST1GB I-O	
7	FM Semiconductor	MLC gold	
8	SAMSUNG	SUM-M4GPV	4GB
		SUM-LWW	8GB
9	Transcend	JetFlash V10	
10	IMATION	Atom USB Drive MLC	
11	Sky Digital	SKY-DRVx2	32G
12	LG	XTICK	8GB

Reference:

Even when the USB memory listed in the above list is recognized in this device, it may not operate normally.



NOTE

- For some monitor TCs, the screen output size may not fit.
- For monitors that do not support resolution of 1280 x 1024, the output may not be normal.

Recommended list of CD/DVD media

Manufacturer	CD-R	CD-RW	DVD+R	DVD-R	DVD+RW	DVD-RW
LG	○	○	-	○	-	-
Samsung Pleomax	○	○	○	○	○	-
Melody	○	○	○	○	○	-
Sony	○	-	○	○	-	-
MITSUBISHI	○	○	○	○	-	○
Verbatim	○	○	○	○	○	-
Memorex	-	○	○	○	○	○



NOTE

Dual layer and mini CD/DVD is not supported in the recommended list of CD/DVD media.

List of supported PTZ camera

Protocol	Manufacturer	Pan/Tilt	Zoom	Focus	Iris	Preset	Tour
LG Multix_E	LG	X	O	O	O	X	X
LG Multix	LG	O	O	O	O	O	O
LPT-A100L	LG	O	X	X	X	X	X
LVC-C100/200HM/LG Electric Inc	LG	X	O	O	O	X	X
HSDN251 / Honeywell Co., Ltd	Honeywell	O	O	O	O	O	O
MD200/2000/1200/800/ Sony Co., Ltd	Sony	O	O	O	X	X	X
New_Born / NEW BORN HIGHTECH	New Born	O	O	O	O	O	O
WVCS850 / Panasonic	Dongyang	O	O	O	O	O	O
PLECO -D / PELCO Co.,Ltd	PELCO	O	O	O	O	O	O
PLECO -P / PELCO Co.,Ltd	PELCO	O	O	O	O	O	O
SAMSUNG_E / SAMSUNG Co.,Ltd	SAMSUNG	O	O	O	O	O	O
SPD - 2300/3000/3300/ SAMSUNG Co.,Ltd	SAMSUNG	O	O	O	O	O	O
SUNGJIN / SUNGJIN Co.,Ltd	SUNGJIN	O	O	O	X	X	X
TPD7720 / DYNACOLOR, INC	DYNACOLOR	O	O	O	O	O	O
V1305R-DC / V1311RB/ CRX-1013 / VICON	VICON	O	O	O	X	X	X

! NOTE

LE6016N/LE6016D is not compatible with KVM because of exclusive use of mouse.

6-3. Initial setting list for factory default

1 Step	2 Step	3 Step	4 Step	INPUT	Default
SYSTEM	OVERVIEW	REMOTE ID		00~99	00
		DE-INTERLACE		ON / OFF	ON
		AUTO-SWITCHING		1~30 Sec	10 Sec
		SPOT-DIVISION		1 / 4 / 16	1
		SPOT-OUT		AUTO/1~16	1
		BUTTON BUZZER		ON/OFF	ON
		LANGUAGE			ENGLISH
		OVERWRITE		ON / OFF	ON
		USE DATA RETAIN		ON/OFF	ON
		RETAIN DAY		1 ~ 60 Days	30 Days
	DATE/TIME	DATE			-
		TIME			-
		LOCALE			-
		NTP SERVER		OFF Time.nuri.net Time.kriss.re.kr ntp.tmc.edu ntp2.ja.net stdtime.gov.hk time.service.uit.no pool.ntp.org	OFF

	PASSWORD	SELECTION		admin/user1/user2/ user3	admin
		OLD PASSWORD			-
		NEW			-
		CONFIRM			-
		CAMERA SET		1~16	1~16
		SETUP		O/X	X
		SEARCH / BACKUP		O/X	O
		PTZ		O/X	O
		AUTO LOGOUT		Off, 5 Min to 60 Min	Off
	INITIALIZE	FACTORY		ON/OFF	OFF
		LOG		ON/OFF	OFF
		SETTING		ON/OFF	OFF
		HDD		ON/OFF	OFF
	CONTROLLER	USE		ON/OFF	OFF
		DEVICE ID		1~16	1
BAUD RATE			1200~115200	9600	
CAMERA	CHANNEL	CAMERA		1~16	1
		CHANNEL NAME		CH 01	CAMERA1
		AUDIO 1~4		CAMERA1~16 NOT USED	NOT USED

RECORDING	CAMERA		1~16	1
	RESOLUTION		CIF/ HALF D1/ D1	CIF
	FRAME		1~30	30
	EVENT FRAME		OFF / 1 / 5 / 7.5 / 10 / 15 / 30	30
	QUALITY		VERY LOW LOW NORMAL HIGH VERY HIGH	NORMAL
SCHEDULE	CAMERA		1~16	1
			C/H/E/N	C
	COPY			
	HOLIDAY			
COLOR	CAMERA		1~16	1
	BRIGHTNESS		0~100	50
	CONTRAST		0~100	50
	SATURATION		0~100	50
	HUE		0~100	50

PTZ	CAMERA		1~16	1	
	DEVICE NAME		LG-Multix_E LG-Multix LPT-A100L LVC-C100 HSDN251 MD200 New_Born WVCS850 PELCO-D PELCO-P SAMSUNG_E SPD-2300 SUNGJIN TPD7720 V1305R-DC OFF	OFF	
	DEVICE ID			0	
	BAUD RATE		1200~115200	9600	
	TOURING INTERVAL		5 Sec 10 Sec 20 Sec 30 Sec 1 Min 3 Min 5 Min	1Min	
EVENT	SENSOR	SENSOR		1~8	1
		TYPE		N.O/N.C	N.O
		CHANNEL		1~16/OFF	1
		ALARM		1~4/OFF	OFF
		ALERT		ON/OFF	OFF
		SPOT-OUT		ON/OFF	OFF
		DURATION		1~10 Sec./OFF	10 Sec.

MOTION	CHANNEL		1~16	1
	MOTION ZONE			SELECT ALL
	SENSITIVITY		1 ~ 10	5
	ALARM		1~4/OFF	OFF
	ALERT		ON/OFF	OFF
	SPOT-OUT		ON/OFF	OFF
	DURATION		1~10 Sec./OFF	10 Sec.
VIDEO LOSS	CHANNEL		1~16	1
	ALARM		1~4/OFF	OFF
	ALERT		ON/OFF	OFF
	DURATION		1~10 Sec./OFF	10 Sec.
E-MAIL	MODE		ON/OFF	OFF
	SMTP SERVER			-
	PORT			25
	ACCOUNT			-
	PASSWORD			-
	SENDER			-
	RECEIVER			-
	E-MAIL TEST			-

NETWORK	TCP / IP	CONFIG		DHCP IP STATIC IP PPPoE	DHCP IP	
		IP ADDRESS			-	
		SUBNET MASK			-	
		GATEWAY			-	
		DNS			-	
		MAC ADDRESS			-	
		PPPoE	STATUS			DISCONNECT
			USER			
			PASSWORD			-
		WEB			80	
		PLAYBACK			9091	
	LIVE			9092		
	STREAMING	CAMERA		1~16		
		FRAME		OFF / 1 / 5 / 7.5		
		QUALITY		VERY LOW LOW NORMAL HIGH VERY HIGH	NORMAL	
	DDNS	MODE		ON/OFF	OFF	
		SERVER			www.lgddns.com	
		PORT			9002	
		DOMAIN			-	
		INTERVAL		1~60 Min	5 Min	
	CMS	MODE		ON/OFF	OFF	
		IP ADDRESS			-	
		PORT			0	

	EVENT FILTER	SYSTEM START		ON/OFF	OFF
		SHUTDOWN		ON/OFF	OFF
		SETTING CHANGE		ON/OFF	OFF
		LOGIN/ LOGOUT		ON/OFF	OFF
		SENSOR DETECTION		ON/OFF	OFF
		MOTION DETECTION		ON/OFF	OFF
		VIDEO LOSS		ON/OFF	OFF
		ALARM OUTPUT		ON/OFF	OFF
INFO	INFORMATION	MODEL			-
		IP ADDRESS			-
		MAC ADDRESS			-
		F/W VERSION			-
		OS VERSION			-
		VIDEO TYPE			-
		INTERNAL HDD			
		EXTERNAL HDD			-
	SYSTEM LOG			-	
	F / W UPDATE	FILE			NOT EXISTED
	SET UPDATE	IMPORT			
		EXPORT		DESABLE/ENABLE	DESABLE
REFRESH				-	

6-4. Product specification

MODEL	LE6016N	LE6016D
OPERATING SYSTEM	Embedded Linux	
COMPRESSION	H.264 Hardware Codec	
MULTIPLEX FUNCTION	Live, Record, Backup and Network at the same time	
RECORDING RESOLUTION	D1, Half D1, CIF	
RECORDING SPEED	480 fps (NTSC), 400 fps (PAL) at CIF Resolution	
VIDEO INPUT	16 BNC Composite	
VIDEO OUTPUT	2 BNC Composite (Main, Spot-out), 1 VGA (15PIN DSUB)	
AUDIO INPUT/OUTPUT	4 line/ 1 line	
SENSOR INPUT / ALARM OUTPUT	8 line (NC/NO selectable)/ 4 line(NC/NO selectable)	
Display Mode	1/4/9/13/16 and Auto sequential	
BACKUP MEDIA	USB storage, Network and external ODD	USB storage, Network and internal ODD
STORAGE MEDIA	2 SATA HDD	1 SATA HDD
RECORDING MODE	Continuous, alarm, motion, and instant panic	
OPERATION CONTROL	Front Key, Mouse and Remote controller	
COMMUNICATION PORT	RS-485	
NETWORK	LAN (Ethernet RJ-45, 10/100/1000 base), DDNS, TCP-IP	
SIZE(WxDxH)	430 mm x 330 mm x 57 mm	
WEIGHT (without HDD)	2.65 kg	3.45 kg
POWER	DC 12 V Adapter (60W)	
POWER CONSUMPTION	20 W	17 W
OPERATING TEMPERATURE	0 °C to 40 °C	
OPERATING HUMIDITY	10 % RH to 80 % RH	

- ※ The detail and specification of this product can partially change for quality improvement.

