

LG-C320 User Guide


Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.



www.lg.com
Bluetooth QD ID B016956

P/N: MFL67003501(1.0)

Getting to Know Your Phone

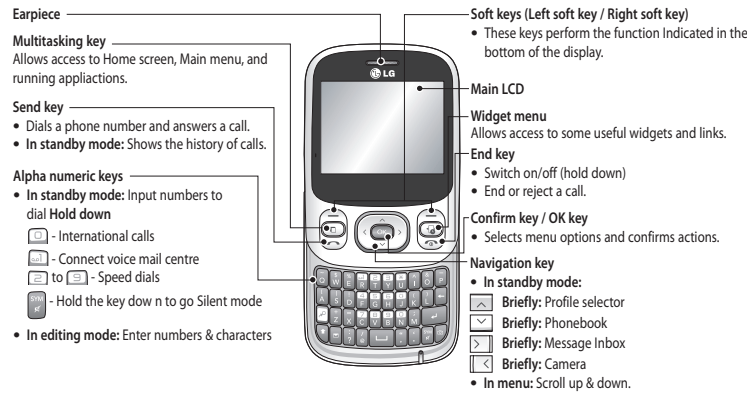

Installing the SIM Card and Charging the Battery

Installing the SIM Card


When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open the battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery

If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.

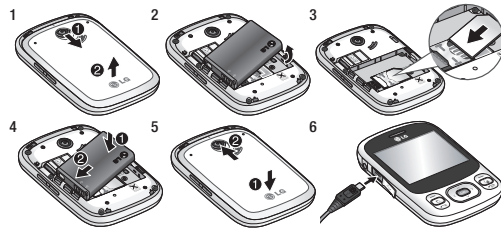

WARNING: Do not remove the battery when the phone is switched off, as this may damage the phone.

Video Camera

Shooting a quick video

- 1 Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- 2 Point the camera to the subject of your recording.
- 3 Press **OK** to start the recording. **Rec** will appear at the bottom of the viewfinder. Press **OK** again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:
Videos - View the pictures and videos you have taken in your Album.

Play - Play the file.

New - Press to shoot another video straight away.

Send - Send the video as **Message**, as an **E-mail** or via **Bluetooth**.

Delete - Delete the video you have just made. The viewfinder will reappear.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your **Text** into **Voice**, **Fax**, **X.400** or **Email**.
Character encoding - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

Send long text as - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.

Changing your multimedia message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Retrieval mode - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Delivery report - Choose to request or allow a delivery report.

Read reply - Choose to request or allow a read reply.

Priority - Choose the priority level of your multimedia message.

Music

MP3 Player

Your LG-C320 has a built-in music player so you can play all your favourite music.

NOTE:

- Before using music player, you will need to transfer music file onto your phone.
- Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

To access the music player, press **Menu** and select **Music** and select **MP3 player**. From here you can access to:
Last played song - View all of the songs you have played recently.
All songs - Contains all of the songs you have on your phone.
My Playlists - Contains all playlists you have created.
Artists - Allows you to view all tracks sorted by artist.
Albums - Allows you to view all tracks sorted by album.
Genres - Allows you to view all tracks sorted by genre.
Shuffle all songs - Allows you to play all of the songs in random order.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.
Creation mode - Allows you to select the contents type supported by MMS.

Delivery time - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

MMS centre - Allows you to configure network information such as the multimedia service centre and the internet profile to send a multimedia message.

Phonebook

Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Phonebook**.

Calling

Making a Call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete press the key.
- 3 Press to begin the call.
- 4 To end the call, press .

TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your Phonebook.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press to begin the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press to answer the call.

While your phone is ringing you can press **Silent** to mute the

ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press or select **Reject** in order to reject an incoming call.

NOTE: In call when speaker is activated, the speaker icon is displayed with red colour strike, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialing

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** to open the main menu. Select **Phonebook**, then select **Option** and **Speed dials**.
- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Set** or by pressing the hard key number.
- 3 Your Phonebook will open. Select the contact you'd like to assign to that number using the navigation keys then Press **Select**. To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press .

NOTE: If you are in an area with bad radio reception, you may have difficulty listening to the radio.
A headset must be inserted to use the FM Radio.

Browser

Accessing the web

You can launch the WAP browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WAP page.

- 1 Press **Menu** and select **Boost Live**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Messaging

Your LG-C320 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the

- 2 Press **Option** and select **New contact**.
- 3 Choose whether to store your new contact on your **Handset** or **USIM** card.
- 4 Enter the information you want in the fields provided and select **Done**.

Tools

Setting your Alarm

- 1 To access the Alarm clock press menu, and select **Tools** and chose **Alarm clock**.
- 2 To set a new alarm select **New alarm**. Set the time, repeat, alert type, alert tone, volume, snooze interval. A memo can be added to the alarm as well.
- 3 When the details are entered, press **Done** to save the alarm.

Adding an event to your calendar
1 To access the Calander press menu, and select **Tools** and chose **Organiser** then select **Calander**.

- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.

Note: you will need the Security code to unlock the memo.

Viewing your Calls

You can only check the log of missed, received and dialed calls if the network supports Calling Line Identification (CLI) within the service area.

Changing the call settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Call waiting - Be alerted when you have a call waiting.

Fixed dial numbers - Choose a list of numbers that can be called from your phone.

Excuse message - Before you reject an incoming call, you can use "Excuse messages" to send a message to explain why you do not receive an incoming call.

Common call settings - Allows access to **Answer mode**, **Send my number**, **Minute minder**, **Auto redial**, **Send DTMF tones**, **Save new number**, **Bluetooth answer mode**, **Hang up mode**, **Call reject**.

network's service messages. To use these functions, press **Menu** and select **Messaging**.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write new message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- 3 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.
- 4 Select **Options** and choose **Insert** to add an **Image**, **Video**, **Sound**, **Template**, **Emoticon**, **Name & Number**, **New slide**, **Subject** or **More (Business card/Schedule/Memo/Tasks/My business card)**.
- 5 Choose **Send to**.
- 6 Choose a contact from the list of contacts or enter the phone number.
- 7 Select **Send**.

Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Sending a voice recording

Once you have finished recording, select **Options**.

Using your calculator

- 1 Press **Menu** and select **Tools**, then choose **Calculator**.
- 2 Press the numeric keys to input numbers.

Using the stopwatch

- 1 Press **Menu** and select **Tools**, then choose **Stopwatch**.
- 2 Select **Start** to begin the timer.

Converting Units

- 1 Press **Menu** and select **Tools**, then choose **Unit converter**.
- 2 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.

Adding a city to your World clock

- 1 Press **Menu** and select **Tools**, then choose **World clock**.

Camera

Taking a quick photo

- 1 Press **Menu** and select **Camera** and **Camera**.
- 2 Point the camera to the subject of your photo and press **OK** to take the Photo.

After taking a photo

Your captured photo will appear on the screen. The image name is shown on the screen with five icons on the bottom.
Images - View the pictures and videos you have taken in your Album.

Send - Send the photo as **Message**, as an **E-mail** or via **Bluetooth**.

New - Take another photo straight away.

Set as - Use the image as **Wallpaper**, as a **Contact** image, or in your **Start up** image or **Shut down** image.

Delete - Delete the photo you have just taken. The viewfinder will reappear.

WARNING: Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: **Abc** mode, and **123** mode.

NOTE: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Changing your text message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.
Delivery report - Choose to receive confirmation that your message have been delivered.

2 To find out the time of specific city, press **Options** and select **New city**.

Settings

Changing your profiles

- 1 Press **Menu** and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Personalise**.
- 4 You can change all of the tones, its volumes and alert options from here.

Using Flight Mode

When Flight mode is activated, you will not be able to make calls, connect to the Internet or send messages.

Changing your Device settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device settings** and choose from the list below.
Date and time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.
Power save - Choose to switch the factory set power saving settings **On** or **Off**.

