



ENGLISH



USER GUIDE

**LG-P970**



**CE 0168** 

P/N: MFL67204217(1.0) 

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B017629



# Optimus Black (LG-P970)

## User Guide - English

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



# Contents

<b>Guidelines for safe and efficient use.....</b>	<b>5</b>	Pre-loaded SD card content.....	30
<b>Important notice.....</b>	<b>14</b>	Adding widgets to your homescreen.....	30
1. Phone memory .....	14	Getting back to a recently used application.....	31
2. Optimising battery life.....	14	Onscreen keyboard .....	34
3. Installing an open source OS..	15	Entering accented letters.....	34
4. Using unlock pattern.....	16	<b>Google Account Set-up .....</b>	<b>35</b>
5. Connecting to Wi-Fi networks...	17	Creating your Google account....	35
6. Opening and switching applications .....	18	Signing in to your Google account .....	35
7. Installing the LG PC suite on your PC.....	18	<b>Calls/Contacts .....</b>	<b>37</b>
8. Connecting your phone to a computer via USB .....	21	Making a voice call.....	37
10. Do not connect your phone when you power on/off your PC	22	Making a video call .....	37
11. Hold your phone upright .....	22	In Video call Menu .....	38
12. If the screen freezes.....	22	Calling your contacts.....	38
<b>Getting to know your phone.....</b>	<b>23</b>	Answering and rejecting a call ...	38
Installing the SIM card and battery.....	25	Adjusting call volume .....	39
Charging your phone.....	26	Making a second call .....	39
Installing the memory card .....	26	Viewing your call logs.....	39
Formatting the memory card .....	27	Call settings.....	39
<b>Your Homescreen .....</b>	<b>28</b>	Contacts .....	41
Touch-screen tips .....	28	Searching for a contact .....	41
Lock your phone .....	28	Adding a new contact.....	41
Unlock screen .....	29	Favourite contacts.....	42
Home .....	29		

<b>Messaging/Email.....</b>	<b>43</b>	<b>Video camera .....</b>	<b>56</b>
Messaging.....	43	Getting to know the viewfinder... ..	56
Sending a message.....	43	Shooting a quick video .....	57
Changing your message settings.....	44	After shooting a video.....	57
Setting up your email .....	44	Advanced settings.....	58
Microsoft Exchange email		Watching your saved videos .....	59
account .....	44	Adjusting the volume when	
Others (POP3, IMAP) email		viewing a video .....	59
account .....	45	<b>Multimedia .....</b>	<b>60</b>
Composing and sending email... ..	46	Gallery.....	60
Working with account folders.....	47	To change how the contents of an	
Adding and editing email		album are displayed.....	60
accounts.....	47	Music .....	61
<b>Social networking .....</b>	<b>49</b>	Playing a song .....	61
Adding your account to your		Using the radio.....	62
phone .....	49	Searching for stations.....	62
Viewing and updating your		Listening to the radio.....	62
status .....	49	Transferring files using USB mass	
Removing accounts on your		storage devices.....	63
phone.....	50	How to save music/video files to	
What's New .....	50	your phone .....	63
<b>Camera.....</b>	<b>51</b>	How to move contacts from your old	
Getting to know the viewfinder... ..	51	phone to your current phone.....	64
Focus modes .....	52	How to send data from your phone	
Once you've taken the photo .....	52	via Bluetooth.....	64
Advanced settings.....	52	<b>Google applications.....</b>	<b>66</b>
Using the focus mode.....	54	Maps.....	66
Viewing your saved photos .....	55	Market.....	66
		Gmail.....	66
		Talk .....	67

# Contents

Google Search .....	67	Sharing your phone's mobile data connection.....	79
<b>Utilities .....</b>	<b>68</b>	Portable Wi-Fi hotspot settings ..	79
Setting your alarm.....	68	To share your phone's data connection as a portable Wi-Fi hotspot.....	80
Using your calculator.....	68	To rename or secure your portable hotspot.....	80
Adding an event to your calendar.....	68	Using SmartShare .....	81
Recording a sound or voice .....	69	Wi-Fi Direct.....	83
Sending the voice recording .....	69	How to use On-Screen Phone....	84
<b>The Web.....</b>	<b>70</b>	On-Screen Phone icons.....	84
Browser.....	70	On-Screen Phone features .....	84
Using options.....	70	How to install On-Screen Phone on your PC .....	85
<b>Settings .....</b>	<b>71</b>	How to connect your mobile phone to your PC.....	85
Wireless & networks.....	71	To check the phone to PC connection .....	86
Sound.....	72	To disconnect your phone from your PC .....	86
Display .....	73	Phone Software update .....	86
Gesture .....	74	<b>Copyrights and trademarks .....</b>	<b>88</b>
Location & security .....	74	<b>Accessories .....</b>	<b>90</b>
Applications .....	75	<b>Technical data .....</b>	<b>91</b>
Accounts & sync .....	76	<b>Troubleshooting.....</b>	<b>92</b>
Privacy .....	76		
SD card & phone storage .....	76		
Language & keyboard .....	77		
Voice input & output.....	77		
Accessibility.....	77		
Dock settings.....	77		
Date & time .....	78		
About phone .....	78		
Wi-Fi .....	78		
Turn on Wi-Fi .....	78		
To connect to Wi-Fi .....	78		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

#### THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the

# Guidelines for safe and efficient use

protection of the health and the safety for the user and any other person.

The highest SAR value for this device when tested for use at the ear is 1.27 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

The highest SAR value for this device when tested for use at the body is 1.43 W/kg.

\* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

## **FCC SAR information**

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada.

These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during

product certification for use at the ear is 1.18 W/kg and when properly worn on the body is 0.51 W/kg.

Additionally, this device was tested for typical body-worn operations with the back of the phone kept 2 cm (0.79 inches) between the user's body and the back of the phone.

To comply with FCC RF exposure requirements, a minimum separation distance of 2 cm (0.79 inches) must be maintained between the user's body and the back of the phone.

### \* **FCC Notice & Caution**

#### **Notice!**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **Caution!**

Change or Modifications that are not specifically approved by the manufacturer could void the user's authority to operate the equipment.

#### **Product care and maintenance**

##### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have

## Guidelines for safe and efficient use

- functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
  - The unit should be kept away from heat sources such as radiators or cookers.
  - Do not drop.
  - Do not subject this unit to mechanical vibration or shock.
  - Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
  - Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
  - Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
  - Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
  - Do not charge the phone when it is on soft furnishings.
  - The phone should be charged in a well ventilated area.
  - Do not subject this unit to excessive smoke or dust.
  - Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
  - Do not tap the screen with a sharp object as it may damage the phone.
  - Do not expose the phone to liquid or moisture.
  - Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions require you to do so.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. This can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

# Guidelines for safe and efficient use

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

**NOTE:** Excessive sound pressure from earphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use your phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Use your mobile phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;

- Australia Dial (0-0-0)
- New Zealand Dial (1-1-1)
- International Dial (1-1-2)
- other local emergency number.

Remember, it is a free call when dialling emergency services from your mobile phone in Australia.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.

## Guidelines for safe and efficient use

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

### **Driver Safety Tips**

Your mobile telephone gives you the powerful ability to communicate almost anywhere, anytime. But an important responsibility accompanies the benefits of mobile phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your mobile phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device to add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.

- Do not take notes or look up phone numbers while driving. Typing up a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
  - Place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
  - Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
  - Use your mobile phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
    - Australia Dial (0-0-0)
    - New Zealand Dial (1-1-1)
    - International Dial (1-1-2)
    - other local emergency number.
- Remember, it is a free call when dialling emergency services from your mobile phone in Australia.
- Use your mobile phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
  - If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance, local traffic authority or police station.

## Important notice

If you encounter any problems, please check this section before taking your phone in for service or calling a service representative.

### 1. Phone memory

When available space on your phone memory is less than 10%, your phone can't receive new messages. You will need to check your phone memory and delete some data, such as applications or messages to make more memory available.

#### To manage the application:

- 1 On the homescreen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll and select the application you want to uninstall.
- 3 Tap **Uninstall** and touch OK to uninstall application you desired.

### 2. Optimising battery life

You can extend your battery's life by turning off features that you don't need constantly running in the background. You can also monitor how applications and system resources consume battery power.

#### To extend the life of your battery:

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may cause your battery's life to be reduced.

#### To check the battery charge level:

- 1 On the homescreen, touch **Applications** tab and select **Settings > About phone > Status**.

- 2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.

**To monitor and control what uses the battery:**

- 1 On the homescreen, touch **Applications** tab and select **Settings > About phone > Battery use**.
- 2 The top of the screen displays battery usage time. This is either how long since your phone was last connected to a power source or if connected to a power source, how long since your phone was last run on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

### 3. Installing an open source OS

If you install an open source OS on your phone and you do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING**

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

## Important notice

### **WARNING**

To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work properly or serious errors may occur. You will need to uninstall those applications and all of its data and settings from the phone.

## 4. Using unlock pattern

Set an unlock pattern for greater phone security.

To set an unlock pattern go to **Settings > Location & security > Set up screen lock > Pattern**, this opens a set of screens that guide you through drawing a screen unlock pattern.

You can draw your own unlock pattern by connecting four or more dots.

If you set a pattern, the phone screen will lock. To unlock the phone, draw the pattern you have set on the screen.

**Caution:** A Gmail account should be set up before you set an unlock pattern.

### **WARNING**

#### **Precautions to take when using the Pattern Lock**

It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all five chances, you can try again after 30 seconds.

### If you can't recall your unlock pattern:

If you have tried to log on to your Google account on the phone and failed to use correct pattern five times, tap the Forgot pattern button. You will then be required to sign in with your Google account to unlock your phone.

## 5. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or “hotspot.” Some access points are open and you can simply connect to them, others are hidden or implement other security features, so you must configure your phone to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

### To turn Wi-Fi on and connect to a Wi-Fi network:

- 1 On the homescreen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
  - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
  - If the network is open, you are prompted to confirm that you want to connect to that network.
  - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4 The status bar displays icons that indicate Wi-Fi status.

## Important notice

### 6. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

#### To stop the application you use:

- 1 On the homescreen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
- 2 Scroll to the desired application and touch **Force Stop** to stop using it.

#### TIP!

#### Getting back to a recent Application

Touch and hold the **Home** key.

A screen will appear listing the applications you have used recently.

### 7. Installing the LG PC suite on your PC

To synchronise your phone with your PC via a USB cable, you need to install the LG PC suite program on your PC.

As the PC Suite IV is embedded in the external memory on your phone, and you can simply copy it to your PC.

**Note:** PC Suite IV is for use with Windows PC.

**Note:** Please do not remove or delete other program file installed on your memory card as this may cause damage to the pre-installed applications on your phone.

You can download this program from the LG website (<http://www.lg.com>).

Steps to download PC Suite IV:

1. Go to <http://www.lg.com>
2. Select your region, country & language.

3. On the left hand side of the screen select Support
4. Select Mobile Phone Support
5. Download the LG Mobile Support Tool
6. Once the tool is installed, run it.
7. Go to the Customer Support dropdown menu (beside File)
8. Select "Application, User Manual & USB driver download"
9. Connect the phone to the PC via a USB cable
10. Select Read phone info.
11. Download the PC Suite IV zip folder to you computer
12. Un-zip the PC suite IV zip folder
13. Open the unzipped folder
14. Run the LGInstaller.exe
15. Follow the prompts to install the PC Suite IV to your computer

Visit the LG website for more information on installing and using the program.

### **LG PC SUITE**

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of your mobile phone on your PC.

#### **Major functions of the LG PC Suite IV**

- Create, edit and delete phone data conveniently
- Synchronise data from a PC or phone (contacts, calendar, message (SMS), bookmark)
- Transfer multimedia files (photo, video, music) conveniently with a simple drag & drop between your PC and your phone
- Transfer messages from your phone to your PC
- S/W update without losing your data

## Important notice

Optimus Black does not support:

- PC Connection via Bluetooth
- To-do in Calendar
- Java Application

For more information, please refer to the user's guide for LG PC Suite IV. This can be found in the Help menu after installing LG PC Suite IV.

### To Install the LG PC Suite to your PC

- 1 Insert your microSD memory card in your phone. (It may already be inserted on your phone.)
- 2 Before connecting the USB data cable, make sure that the **Mass storage** mode is enabled on your phone.
- 3 Connect your phone to your PC using a USB data cable.

### 4 Touch **Turn on USB storage.**

- (1) You can view the mass storage content on your PC and transfer the files.
- (2) Copy the 'LGPCSuiteIV' folder on your mass storage device to your PC.
- (3) Run 'LGInstaller.exe' file on your PC and follow the instructions.

\* When LG PCSuite IV installation is completed, disable **Mass storage** mode to run the LG PCSuite IV.

**NOTE:** Please do not remove or delete other program file installed on your memory card as this may cause damage to the pre-installed applications on your phone.

## 8. Connecting your phone to a computer via USB

### To transfer files in your microSD card using USB devices:

- 1 Install your microSD card in your phone. (It may already be inserted on your phone.)
- 2 Use a USB cable with your phone to connect the phone to a USB port on your computer. A notification will appear in the notification drawer. Drag the notification drawer down and select USB connected then touch

#### **Turn on USB storage.**

When the phone is connected as USB storage, you will receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

**NOTE:** When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed.

Therefore, they must be uninstalled manually.

**TIP!** To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage.** During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as camera, gallery and music functions. To disconnect your phone from the computer, carefully follow your computer's instructions for correctly disconnecting USB devices, to avoid losing information on the card.

- 1 Open the notification drawer and touch **Turn off USB storage.**
- 2 Touch **Turn off** in the dialog that opens.
- 3 Safely disconnect the USB device on your computer.

## Important notice

### 9. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just press the power key.

### 10. Do not connect your phone when you power on/off your PC

Make sure you disconnect your phone and PC when you are powering on/off your PC, as it might cause errors on your PC.

### 11. Hold your phone upright

Please hold your phone straight and upright, as with a normal phone. The **Optimus Black** has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may cause loss of performance. While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. This may affect signal quality.

### 12. If the screen freezes

If the phone does not respond to user input or the screen freezes: Remove the battery, insert it again and switch on the phone. If it still does not work, please contact the service centre.

# Getting to know your phone

To turn on the phone, press and hold the **Power** key for 3 seconds.

To turn off the phone, press and hold the **Power** key for 3 seconds, touch **Power off** and touch OK.

**Earpiece**

**Internal camera**


**Proximity Sensor**

**Home key**

- Return to home from any screen.

**Menu key**

- Options vary depending on what screen or application is in use.

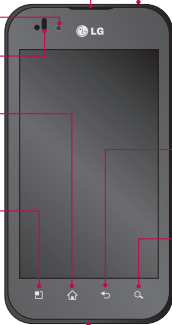

**Power/Lock key**

- Switch your phone on/off by pressing and holding this key.  
- Turn off and lock the screen.

**Back key**

- Return to the previous screen.

**Search key**

- Search the web and contents in your phone.

**Microphone**

 
**⚠ WARNING:** Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functions.

Do not cover the LCD's proximity sensor, even with a protective film, as this may cause the sensor to malfunction.

**TIP!** Touch the **Menu** key to check what options are available, as these change from application to application.



**TIP!** If the **Optimus Black** displays error messages when you use it, or if you cannot turn it on, remove the battery, put it back in, then turn it on after 5 seconds.

# Getting to know your phone



- Volume keys**
- On the homescreen: controls ringer volume.
  - During a call: controls your earpiece volume.
  - When playing a track: controls playback volume.

 - 3D Motion Gesture key (G-key)**
- Press and hold and move (tilting, shaking, or tapping, etc) to easily activate features.

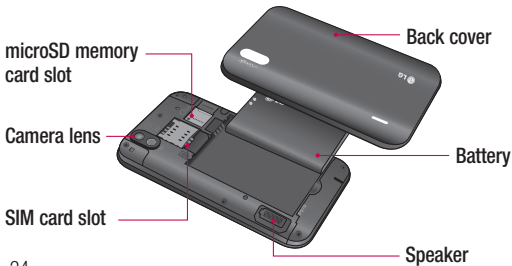


## Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the back cover, hold the phone firmly in your hand. With the other hand, firmly press down the centre of the battery cover, while pulling the bottom away with your forefinger. Then lift off the battery cover.



- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

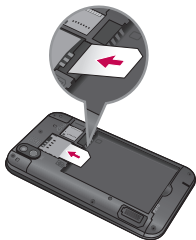

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.

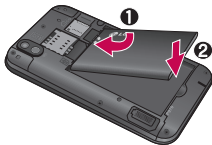


# Getting to know your phone

- 4 Replace the back cover of the phone.



## Charging your phone

The charger connector is located on the top of your **Optimus Black**. Insert the charger and plug it into an electrical socket. Your **Optimus Black** will be charged when you can see .



**NOTE:** The battery must be fully charged initially to extend battery lifetime.


## Installing the memory card

To store multimedia files, such as photographs created with the built-in camera, you must insert a memory card into your phone.


**Note:** The **Optimus Black** supports upto a 32GB memory card.

To insert a memory card:

- 1 Turn off your phone before inserting or removing the memory card. Remove the back cover.

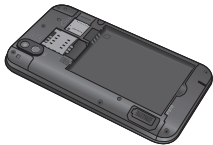

- 2 Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

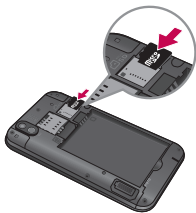

## Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE:** All files on your memory card are deleted when you format it.

- 1 On the homescreen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Touch **Unmount SD Card**.
- 5 Touch **Format SD card**, then confirm your choice.

- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

**NOTE:** If there is content on your memory card, the folder structure may be different after formatting, as all the files will have been deleted.

**TIP!** If your memory card is already unmounted, you can use the following steps to format it. Touch **Applications > Settings > SD card & phone storage > Format SD Card**.

### **WARNING**

Do not remove a memory card without unmounting it. Otherwise, you may damage the memory card as well as your phone and the data stored on the memory card may be corrupted. To unmount the memory card safely, please select **Applications > Settings > SD card&phone storage > Unmount SD card**.

# Your Homescreen

## Touch-screen tips

Here are some tips on how to navigate around your phone.

**Touch** - To choose a menu/option or open an application, touch it.

**Touch and hold** - To open an options menu or grab an object you want to move, touch and hold it.

**Drag** - To scroll through a list or move slowly, drag across the touch screen.

**Flick** - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

**Flip** - Pause or mute in incoming call, Music/video player or alarm menus.

**Tilting & Panning** - Zoom in/out and navigate through lists.

**Tapping** - Control music and move the cursor on a text page by tapping one of the four sides of the phone.

## NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

## Lock your phone

When you are not using the **Optimus Black**, press the **Power** key to lock your phone. This helps to prevent accidental touching of the keys and saves battery power.

If you do not use the phone for a while, the homescreen or other screen you are viewing is replaced by the lock screen to conserve the battery.

**NOTE:** If there are any programs running when you set the pattern, they may continue running in lock mode. It is recommended that you exit all programs before entering

lock mode, to avoid unnecessary charges (e.g. phone call, web access and data communications).

## Unlock screen

**TIP!** Press the G-key on the left side of the phone, keep it pressed, then shake the phone twice. The camera preview will automatically be launched.

To turn on your phone, press the **Power** key. The lock screen will appear. Touch and slide up the lock screen to unlock your homescreen. The last screen you were working on will open.

## Home

Simply swipe your finger to the left or right to view the different panels that make up your homescreen. You can also customise each panel with widgets, LG widgets, shortcuts to your favourite applications, folders and wallpapers.

**TIP!** Once the G-key is held down, tilting the phone left or right allows you to change to another homescreen panel quickly.

**NOTE:** Some screen images may be different depending on your phone provider.

In your homescreen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** to bring up the touch-dialling pad to make a call.

 Touch the **Contacts** to open your contacts.

 Touch the **Messaging** icon to access the messaging menu. Here, you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed

# Your Homescreen

applications. Just touch to scroll through your applications.

To open the desired application, simply touch the icon in the applications list.

**NOTE:** Preloaded applications may be different depending on your phone's software or your service provider.

## Pre-loaded SD card content

Where a microSD Card is provided with your handset there will be a select number of applications available on the microSD Card. A microSD Card is an optional accessory. Please contact your service provider for more information.

To install these applications please download a file manager of your choice from Android Market (icon)

## Once you have installed a file manager

- 1 Browse to your microSD card
- 2 Select the Application (.APK) file on your microSD card.
- 3 Select Install
- 4 Select Open to open the application or Done. to go back to you file manager

## Adding widgets to your homescreen

You can customise your homescreen by adding shortcuts, widgets, or folders to it. For more convenience when using your phone, add your favourite widgets to the homescreen.


### To add a desired icon to your homescreen:

- 1 On the homescreen, touch the **Menu** key and select **Add**, or touch and hold an empty part of the homescreen.

- 2 On the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it. Select **Contacts with phone numbers** from the list and tap it.
- 4 You will see a new folder's icon on the homescreen. Drag it to the desired location on the desired panel and release your finger from the screen.

**TIP!** To add an application icon to the homescreen on the **Applications** menu, touch and hold the application you want to add.

### To remove an application icon from the homescreen:

- 1 Touch and hold the icon you want to remove.
- 2 Drag and drop an application icon to the bin icon .

**NOTE:** You cannot delete the preloaded applications. (Only their icons can be removed from the homescreen.)

 
### Getting back to a recently used application

- 1 Touch and hold the **Home** key. The screen will show you a pop up with icons of applications that you have used recently.
- 2 Touch an icon to open its application, or touch the **Back** key to return to the current application.


# Your Homescreen

## Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger, or on the homescreen touch the **Menu** key and select **Notifications**. Here you can check and manage Wi-Fi, Bluetooth, GPS status as well as other notifications.

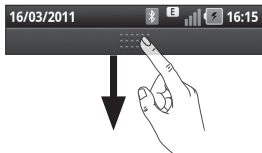



 








 





 


## Viewing the status bar







The status bar uses different icons to display phone information, such as signal strength, new messages, battery life and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you are likely to see in the status bar.



Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail

Icon	Description
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	On-Screen Phone connected
	3 more notifications not displayed

Icon	Description
	Data is syncing
	Download finished
	New email
	New Gmail
	New Google Talk message
	New message
	Song is playing
	Upcoming event
	FM radio turned on in the background
	Portable Wi-Fi hotspot is active
	SmartShare On
	SmartShare sharing request

# Your Homescreen

## Onscreen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

### Using the keypad & entering text



Tap once to capitalise the next letter you type. Double-tap for all caps.



Tap to switch to the numeric and symbol keyboard. You can also touch and hold this tab to view the settings menu.



Tap to view or long press to change the writing language.

**space** Tap to enter a space.



Tap to create a new line in the message field.



Tap to delete the previous character.



Tap to hide the onscreen keyboard.

## Entering accented letters


When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. á).

For example, to input "á", touch and hold the "a" key until the special characters are shown. And select the special character you want.

# Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

## Creating your Google account

- 1 On the homescreen, touch **Applications** tab  to open the applications menu.
- 2 Tap **Gmail** and tap **Next > Create** to start the Gmail set up wizard.
- 3 Touch a text field to open the touch keyboard and enter your name and username for your Google account. When entering text, you can move to the next text field by touching **Next** on the keyboard.
- 4 When you have finished inputting your name and username, tap **Next**. Your phone is

communicating with Google servers and checking username availability.

- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

## Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Gmail and take advantage of Google services on your phone.
- 3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (This depends on your synchronisation settings.)

# Google Account Set-up

After sign in, you can use Gmail, Google Calendar and Android Market; download applications from Android Market; and take advantage of other Google services on your phone.





- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign into that account.


## **IMPORTANT!**

- Some applications, such as Calendar, only work with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with these applications first. When you sign in, your contacts, Gmail messages, calendar events and other information from these applications and services on the web are synchronised with your phone. If you don't sign into a Google account during setup, you will be prompted to sign in or to create a Google account the first time you start an application that requires one, such as Gmail or Android Market.

# Calls/Contacts



## Making a voice call

- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad.  
To delete a digit, touch **Clear** icon .
- 3 Touch **Call** icon  to make a call.
- 4 To end a call, touch **End** icon .

**TIP!** To enter “+” to make international calls, touch and hold down .

**TIP!** To bring up the keypad during a call, touch **Dialpad**.

## Making a video call

- 1 Touch  to open the keypad.
- 2 Enter the phone number as before.
- 3 Touch the **Video call** icon  to make a video call.

- 4 If you do not want to use the speaker phone, touch **Speaker** and ensure you have the headset plugged in.
- 5 While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen. Adjust the inner camera position if necessary.

**6** To end a video call, touch **End**.  
**Private:** You can change the image instead of showing the current private image.

**Dialpad:** Type in a number.

**Hold:** Mute the sound and pause the video.

**Mute:** Mute the sound.

**Speaker:** Speaker on or off.


# Calls/Contacts

## In Video call Menu

**Capture** - You can capture an image of the other party.

**Use secondary camera** - Switch the camera.

## Calling your contacts


- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

## Answering and rejecting a call

**TIP!** Flip your phone or press the volume (side) key to mute the incoming call.

**TIP!** Press the G-key and shake your phone to answer a call. On a call press the G-key and shake to quit the call.

### When screen locked:

When your phone rings, Drag decline icon  to the left to decline/reject an incoming call.

### When screen is unlocked:

When your phone rings, touch the **Accept** icon . Touch decline icon  to Decline/Reject an incoming call.



### TIP! Excuse messages


When you want to decline/reject a call, you can send a message quickly by dragging **Excuse msg** on the screen. This is useful if you need to reply the message during a meeting.


## Adjusting call volume

To adjust the in-call volume during a call, use volume up & down keys on the left side of the phone.

## Making a second call

- 1 During your initial call, touch **Add call** .
- 2 Dial the number or search your contacts to select the number you want to call.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch the list of holding on to toggle between calls.

**NOTE:** You can touch **Merge calls**  to make a conference call.

- 6 To end active calls, touch **End** icon .

## Viewing your call logs

On the homescreen, touch  and choose **Call log** tab.

View a complete list of all dialed, received and missed calls.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

**TIP!** Touch the **Menu** key, then touch **Delete All** to delete all the recorded items.

## Call settings

You can configure phone call settings, such as call forwarding and other special features offered by your carrier.

- 1 On the homescreen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings** and choose options that you want to adjust.

# Calls/Contacts

## < Fixed Dialling Numbers >

Select **Fixed Dialling Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

## < Voicemail >

**Voicemail service** – Allows you to select your carrier's voicemail service.

**Voicemail settings** – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

## < Other call settings >

**Call forwarding** – You can configure how your calls are forwarded when you're on the phone, when you don't answer and so on.

**Other call settings** – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on a call. (Depends on your network provider.)
- **Select line:** Allow two different phone numbers in your SIM to select and use.

**Call barring** – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

**Call costs** – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

**Call duration** – View the duration of all calls including all, dialed, received calls and the last call.


**Excuse messages** – When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

**Video call settings** – Change your video call settings.




## Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google account or other accounts that support syncing contacts.

### Searching for a contact

- 1 On the homescreen, touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.

### Adding a new contact


- 1 On the homescreen, touch , and enter the new contact's number, then touch the **Menu** key, touch **Add to contacts**. Select **Create new contact** or **Add to existing**.
- 2 If you want to add a picture to the new contact, touch . Choose from **Capture picture** or **Pick from gallery**.
- 3 Select the contact type by touching .
- 4 Touch a text field to open the touch keyboard and enter a new contact's name.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **Done** to save the contact.

# Calls/Contacts


## Favourite contacts

You can classify frequently called contacts as favourites.

### To add a contact to your favourites:

- 1 On the homescreen, touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns gold.
- 4 The favorites contact will be saved under groups as Favorites.

### To remove a contact from your favourites list:


- 1 On the homescreen, touch  to open your contacts.
- 2 Touch **Groups** tab and select **Favourites**. Touch a contact to view their details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

# Messaging/Email

## Messaging

Your **Optimus Black** combines SMS and MMS into one intuitive, easy-to-use menu.

## Sending a message

- 1 Touch  icon on the homescreen and touch **New message** to open a blank message.
- 2 Enter a contact name or call number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

**NOTE:** You will be charged for a text message for every person you send the message to.

- 3 Touch **Enter message** below to start entering your message.
- 4 Touch **Send** to send your message.

**TIP!** You can touch  icon to attach a file you want to share with your message.

- 5 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

### **WARNING**

The 160-character limit may vary from country to country depending on how the SMS is coded and the language.

### **WARNING**

If an image, video or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

**NOTE:** If you get an SMS message during a call, there will be audible notification.

# Messaging/Email

## Changing your message settings

Your **Optimus Black** message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the homescreen and touch the **Menu** key, then tap **Settings**.

## Setting up your email

Touch **Applications** tab and select **Email**. If the email account is not set up, you need to start the email set up wizard.

**TIP!** If an email account is already set up, the wizard is not activated automatically.

You can select mailbox type between **MS Exchange** and **Others**.

## Microsoft Exchange email account

**Email address** – Enter the email address.

**User name** – Enter the account's user name.

**Password** – Enter the account's password.

**Domain** – Enter the account's domain (optional).

**Server address** – Enter the server address.

**Use SSL** – Choose whether to use SSL for Microsoft Exchange.

Touch the **Next** button to connect to the server.

Setup complete screen will appear and you need to enter "name" for account display and my name.

Now the account will appear in the list of accounts.

## Others (POP3, IMAP) email account

**Email address** – Enter the email address.

**Password** – Enter the account's password.

Choose whether to enable Push Email account. Once you select to enable, it will connect to the server immediately.

Setup complete screen will appear and you need to enter "name".

Now the account will appear in the list of accounts.

**Incoming server** – Enter the incoming email server address.

**Port number** – Each account's default number will be displayed.

**Secure type** – Choose from TLS, SSL and Off.

**Outgoing server** – Enter the outgoing email server address.

**Port number** – Each account's default number will be displayed.

**SMTP Secure type** – Choose from TLS, SSL and Off.

## The Accounts screen

The **Accounts** screen lists your **Combined Inbox** and each of your email accounts.

- Touch **Application** tab and select **Email**. The **Account list** screen appears.

**TIP!** In account lists touch and hold an email account to move the account icon in your home screen. Touch the icon to go to the **Inbox** directly.


You can touch an account to view its **Inbox**. The account from which you send email by default is indicated with a checkmark.

# Messaging/Email

## Composing and sending email

### To compose and send a message:

- 1 While in the **Email** application, touch the **Menu** key and touch **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your contacts. Separate multiple addresses with commas.
- 3 Touch the **Menu** key and touch **Add Cc/Bcc** to be able to Cc or Bcc other contacts/email addresses.
- 4 Enter the text of the message body.
- 5 Touch **Attach** to attach the file you want to share with your message.
- 6 Touch **Send**.  
If you're not ready to send the message, touch the **Menu** key and touch **Save as draft** to save

it in a **Drafts** folder. Touch a draft message in a **Drafts** folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key  before sending it. Long press on saved item to delete a message, including any saved drafts. If you aren't connected to a network, for example, if you are working in Airplane mode, the messages that you send are stored in your **Outbox** folder until you're connected to a network again. If the **Outbox** contains any pending messages, it is displayed on the **Accounts** screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself.

If you want to see your sent messages in the **Sent** folder (or with the **Sent** label), you will often need to open the **Sent** folder/label and select **Refresh** from the options menu.

**TIP!** When a new email arrives in the inbox, a notification will sound and vibrate.

## Working with account folders

Each account has **Inbox**, **Outbox**, **Sent**, **Drafts**, **Trash** and **Junk** folders. Depending on the features supported by your account's service provider, you may have additional folders.

## Adding and editing email accounts

To add an email account:

- 1 Touch the **Applications tab** and select **Email**.
- 2 Push the **Menu** button then select **New Account**.
- 3 Select **MS Exchange** or **Others**.
- 4 Enter a name confirm how you want your name to appear in outgoing mail, then touch **Done**.

# Messaging/Email

## To change account settings:

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account which you want to change the settings of. In the menu that opens, touch **Account settings**.

## To delete an email account:

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Delete** in the menu that opens and **OK** in the dialog box to confirm.

## Social networking

With your phone, you can enjoy social networking and manage your micro-blog in on-line communities. You can update your current status upload photos and view your friends' status updates.

If you don't have an account, you can visit the relevant website to set one up.

**NOTE:** Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

### Adding your account to your phone

- 1 On the homescreen, touch the **Applications** tab to open the applications menu.
- 2 Choose any social networking client application you want to use among Facebook, Twitter, and MySpace.
- 3 Enter your email address and the password that you set up on your community, then tap **Log in**.

- 4 Wait while your details are checked with your community.
- 5 If you tap your community, you can see the current status of your social community.

**TIP!** If you add 'My Status' widget on your homescreen, it will show your status and help you update your status on the social community.

You can also add 'Social Feeds' widget on your homescreen which shows any updates and news from the social community.


### Viewing and updating your status

- 1 Choose a community you want to access.
- 2 You can see the current status of your social community.
- 3 You can update your current status with comments or upload photos.

# Social networking

**NOTE:** This is dependent on network services.

**TIP!** You can use information about friends in the social networking site or sync all data to contacts.

- 2 By tapping the  button, you can choose either list view or category view.

## Removing accounts on your phone

- 1 Choose **Applications > Settings > Accounts & sync**.
- 2 Choose the account you want to delete, then touch **Remove account**.

## What's New

What's New displays recent notifications that are received from applications such as Facebook, Twitter, Myspace, and also includes missed calls and messages.


- 1 Choose **Applications > What's New**.

# Camera

## Getting to know the viewfinder

**Zoom** - Zoom in or zoom out. Alternatively, you can use the side volume keys.

**Swap** - You can swap to the internal camera from the external one.

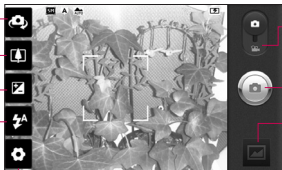

**Video mode** - Slide down this icon to switch to video mode.

**Taking a photo**

**Gallery** - Touch to view the last photo you captured. This enables you to access your gallery and view saved photos from within camera mode.

**Settings** - Touch this icon to open the settings menu. See Advanced settings on page 52.


**Flash** - Allows you to turn on the flash when taking a photo in a dark place.

**Brightness** - This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” to lower the brightness of the image or towards “+” to increase it.

**TIP!** You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

# Camera

## Focus modes

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Touch the shutter icon .
- 4 The camera brings the image into focus. When the image is in focus, the focus indicators in each corner turn green and the camera takes a picture.

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share your photo via **Bluetooth**, **Picasa**, **Messaging**, **Facebook for LG**, **MySpace for LG**, **Twitter for LG**, **Gmail**, or **Email**.


**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.


**TIP!** If you have a social networking site account and set it up on your phone, you can share your photos to your community.

**Set as** Touch to set the image as **Contact icon** or **Wallpaper**.

**Rename** Touch to edit the name of the selected picture.

 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view the last photo you captured.

## Advanced settings

In the viewfinder, touch  to open all advanced options.

You can change the camera setting by scrolling the list. After selecting the option, touch the **Back** key.

**Focus** – Touch this icon to select the options menu. See Focus modes on page 52.

**Image size** – Touch to set the size (in pixels) of the picture you are taking.

**Scene mode** – Choose from **Normal**, **Portrait**, **Landscape**, **Sports**, **Sunset** and **Night**.

**ISO** – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash.

**White balance** – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

**Colour effect** – Choose a colour tone for your new photo. Choose from **None**, **Sepia**, **Black & white**, **Negative**, **Vivid**, **Negative sepia**, **Blue**, **Emboss** and **Solarise**.

**Timer** – The self-timer allows you to set a delay before a picture is taken after the shutter is pressed.

**Shot mode** – Select various shooting modes from the options.

**Image quality** – Choose from **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos.



**Auto review** – If you set **Auto review** to on, it will show you the picture you have just taken automatically.

**Shutter sound** – Select one of the four shutter sounds.

**Tag location** – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

# Camera

**NOTE:** This function is only available when location service is activated.

-  Restore all camera default settings.
-  Touch whenever you want to know how this function operates. This is to provide you with a quick guide.

**TIP!** When you exit the camera, some settings will return to default. Check camera settings before you take your next photo.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

## Using the focus mode

You can select the focus mode using the following options;

**Auto** – Set the camera to focus automatically.

**Macro** – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

### Continuous

**Face tracking** – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

**Manual** – Set the camera to focus manually.

## Viewing your saved photos

1 You can access your saved photos from within the camera mode.

Just touch  and your gallery will appear on the screen. Touch the photo on the screen. You will then see **Slideshow** and **Menu**.



Touch to see slide show. Touch **Menu** and select the options you want.



Touch to share the contents.



Touch to delete a photo.



Touch **More** for more options below.

**Details** - Find out more information about the contents.

**Set as** - Set as contact icon or wallpaper.

**Crop** - Crop your photo. Move your finger across the screen to select the area.

**Rotate** - Rotate left or right.

**TIP!** In the thumbnail list you can move quickly by holding the G-key and tilting right or left.

**TIP!** Press the G-key to zoom In/Out of the photo. Once you are zoomed into a photo, hold down the G-key and tilt the phone to move around a photo.

**TIP!** Tapping the left or right side of the phone while photo is viewing allows you to go to the previous/next photo.

# Video camera

## Getting to know the viewfinder

**Zoom** - Zoom in or zoom out. Alternatively, you can use the side volume keys. Before starting to record a video, you can use the zoom function. You can't control the zoom function during recording.

**Swap** - You can swap to the internal camera from the external one.



**Camera mode** - Slide up this icon to switch to camera mode.

**Start recording**





**Gallery** - Touch to view the video you recorded last. This enables you to access your gallery and view your saved videos from within the video mode.

**Settings** - Touch this icon to open the settings menu. See Advanced settings on page 58.

**Flash** - Allows you to turn on the flash when taking a photo in a dark place.

**Brightness** - This defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar, towards “-” to lower the brightness of the video or towards “+” to increase it.

## Shooting a quick video

- 1 Open the **Camera** application and slide the camera mode button down to the **Video** position. The shutter icon  will change to .
- 2 The video camera viewfinder will appear on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Touch the start video icon .
- 5 Rec will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Touch the stop video icon  to stop recording.

**TIP!** A single video file to be stored cannot exceed 4GB.

## After shooting a video


A still image representing your video will appear on the screen.


**Play** Touch to play the video.


**Share** Touch to share your video via **Bluetooth, Email, Gmail, Messaging** or **YouTube**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.

**Rename** Touch to edit the name of the selected video.


 Touch to delete the video you just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video straight away.

 Touch to view the last video you recorded.

## Video camera

### Advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera settings by scrolling the list. After selecting the option, touch the **Back** key.

**Video size** – Touch to set the size (in pixels) of the video you record. Choose your video image size from HD 720P (1280x720), TV (720x480), VGA (640x480), QVGA (320x240) or QCIF (176x144).

**White balance** – The white balance ensures that white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.



**Colour effect** – Choose a colour tone to use for your new view. Choose from **None**, **Sepia**, **Black&White**, **Negative**, **Vivid**, **Negative sepia**, **Blue**, **Emboss** and **Solarize**.

**Video quality** – Choose from **Super fine**, **Fine** and **Normal**.


**Video duration** – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

**Voice** – Choose **Mute** to record a video without sound.

**Auto review** – If you set this to **On**, it will automatically show you the video you have just recorded.

-  Reset all the video camera settings.
-  Touch whenever you want to know how the selected function operates. This provides you with a quick guide.

## Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It will start to play automatically.

**TIP!** Flip your phone to pause the playing video.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the side of the phone.

# Multimedia


## Gallery

Images and videos are saved directly to the external memory.

Touch **Applications** tab, then select **Gallery**.

1 You can access your saved photos from within the camera mode.

Just touch  and your gallery will appear on the screen. Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to see slide show. Touch **Menu** and select the options you want.

 Touch to share the contents.

 Touch to delete a photo.

 Touch **More** for more options below.

**Details** - Find out more information about the contents.


**Set as** - Set as contact icon or wallpaper.


**Crop** - Crop your photo. Move your finger across the screen to select the area.

**Rotate** - Rotate left or right.

## To change how the contents of an album are displayed

You can view the images and videos in your albums in a chronological grid or in stacks, sorted by the date and the location where they were taken.

 Drag the Album View switch to the left to view the album contents in a chronological grid.

 Drag the Album View switch to the right to view the contents of the album in stacks.

## Music

Your **Optimus Black** has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Applications** tab, then select **Music**.

### Playing a song

- 1 On the homescreen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  twice to go back to the previous song.

To change the volume while listening to music, touch the up and down volume keys on the left side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Use as phone ringtone**, **Delete**, **Share**, **Search** and **Details** as options.

**NOTE:** Music file copyright may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the laws of the relevant country concerning the use of such material.

# Multimedia

## Using the radio

Your **Optimus Black** has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

**NOTE:** You must attach your headphone to listen to the radio. Insert that into the headphone jack.

## Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning it.

- 1 On the homescreen, touch **Applications** tab and select **FM Radio**.
- 2 Touch the **Scan FM radio stations**.
- 3 If there are pre-set channels, you will see a pop-up with 'All channels will be reset. Continue?'. If you choose **OK**,

all the pre-set channels will be deleted and auto scan will start.

- 4 During auto scanning, touch **Stop scanning** if you want to stop scanning. Only channels scanned before you stop scanning will be saved.

**NOTE:** You can also manually tune in to a station using the wheel displayed.

## Listening to the radio

- 1 On the homescreen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.
- 3 Touch  icon to listen to the radio via the built-in speaker.

## Transferring files using USB mass storage devices

### To transfer files using USB devices:

- 1 Connect the **Optimus Black** to a PC using a USB cable.
- 2 Drag the notification drawer down and select USB connected.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage contents on your PC and transfer the files.

### NOTE:

- You need to install your microSD card first. Without a microSD card, you cannot use USB mass storage.

## How to save music/video files to your phone

- 1 Connect your phone to the PC using the USB cable.
  - Touch and drag down the notification drawer on the homescreen. Select **USB connected** > **Turn on USB storage** > Open folder to view files.
- 2 Save music or video files from your PC to the phone's removable storage.
  - You may copy or move files from your PC to the phone's removable storage using a card reader.
  - If there is a video file with a subtitle file (.srt file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.

# Multimedia

- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to your phone.

## How to move contacts from your old phone to your current phone

### Export your contacts as a CSV file from your old phone to your PC using PC Suite IV.

- 1 Download PC Suite IV for Android at [www.lg.com](http://www.lg.com) and install it on your PC, see page 18 for more information. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 Select the **Contacts** icon. Go to **File > Import** and select the CSV file saved in the PC.
- 3 If the fields in the imported CSV file are different from the ones in PC Suite IV for Android, you need

to map the fields. After mapping the fields, click OK. Then the contacts are added in PC Suite IV for Android.

- 4 If the connection for the **Optimus Black** phone (using the USB cable) is detected by PC Suite IV for Android, click "Sync" or "Sync contacts" to synchronise the contacts saved in the PC to your phone and save them.

## How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a corresponding application, rather than from the Bluetooth menu as with normal mobile phones.

- **Sending pictures:** Run the **Gallery** application and select a picture and press **Menu**, then click **Share** and select **Bluetooth** > Check if bluetooth is turned on and select **Scan for devices** > Choose the device you want to send data to from the list.

- **Exporting contacts:** Run the **Contacts** application. Touch the address you want to export to. Touch the **Menu** and select **Share > Bluetooth >** Check if bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data to from the list.

**NOTE:** Only contacts stored on the Phone memory can be exported this way.

- **Sending multi-selected contacts:** Run the **Contacts** application. To select more than one contact touch the **Menu** key and touch **Share**. Select the contacts you want to send or touch **Select all > Share > Bluetooth >** Check if bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

**NOTE:** Only contacts stored on the Phone memory can be exported this way.

- **Connecting to FTP (Only the FTP server is supported on this handset):** Select **Settings > Wireless & networks > Bluetooth settings**. Then, select the **Discoverable** checkbox and search for other devices. Find the service you want and connect to the FTP server.

**TIP!** The Bluetooth version is 2.1 + EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

**NOTE:** If you want to search for this phone from other devices, go to **Settings > Wireless & networks > Bluetooth settings**. Then, select the **Discoverable** checkbox. The checkbox is cleared after 120 seconds.

**NOTE:** Supported profiles are SDAP, HFP, HSP, OPP, PBAP (server), FTP (server), A2DP and AVRCP.

# Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email and calendar in your Google account will automatically synchronise with your **Optimus Black**.

## Maps

Use Maps to check your current location, traffic and receive directions to your destination. Your phone must be connected to Wi-Fi or 3G/GPRS.

**NOTE:** Google Maps does not cover all cities and countries.

## Market

Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the **Optimus Black** menu.

You can check others' comments regarding an application or you can post your own comments.

## Gmail

Gmail is configured when you first set up your phone. Depending on your synchronisation settings, Gmail on your phone is automatically synchronised with your Google account on the web. The inbox conversations list is your default Gmail view.

Touch the **Menu** key, then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google account on the web. With the **Menu** key, you can compose an email, add accounts, go to labels, search and so on.

## Talk

Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.

Touch the **Menu** key and select available options as below: **All friends, Add friend, Search, Sign out, Settings** and so on.

## Google Search

Google Mobile Web Search allows you to search for content on the internet.

# Utilities

## Setting your alarm

- 1 On the homescreen, touch **Applications** tab and select **Alarm/Clock**.
- 2 If you want to add a new alarm, touch **Menu > New alarm**.
- 3 Set the alarm and touch **Save** to turn on.

**TIP!** When an alarm sounds, flip your phone to activate the snooze, if set, other wise flipping your phone will stop the alarm.

**NOTE:** To delete the alarm on alarm list screen, touch the Menu key and select **Delete/Delete all**. Adjust the below options: Alarm in silent mode, Side button behavior, Alarm volume, Set default ringtone, Weather info settings and Puzzle lock options.

## Using your calculator

- 1 On the homescreen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.

- 3 For simple calculations, touch the function you want (+, -, x or ÷), followed by =.
- 4 For more complex calculations, touch **Menu > Advanced panel**, then choose sin, cos, tan, log and so on.

## Adding an event to your calendar

- 1 On the homescreen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a account to use **Calendar**.
- 3 To check the event, touch the date. Touch and hold if you want to add a new event. then touch **New event**.
- 4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin and finish.
- 5 Also touch **Where**, then enter the location.



- 6 If you would like to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **Repetition** and set **Reminders** if necessary.
- 8 Touch **Done** to save the event in the calendar. A coloured triangle in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

## Recording a sound or voice

Use the voice recorder to record voice memos or other audio files.

- 1 On the homescreen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  Record to begin recording.
- 3 Touch  Stop to end recording.
- 4 Touch  Play to listen to the recording.

- 5 Touch  List to access your album. You can listen to the saved recording.

**TIP!** Touch the  Speaker button to set the speaker mode. Touch  to **Rename** the audio file or **Set as** to use the recording as a ringtone.

**Notice:** The available recording time may differ from the real time.

## Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording will be added to the message that you write, and it will be sent normally.

# The Web





## Browser


Browser gives you a fast, full-colour world of games, music, news, sports, entertainment and much more, right on your mobile phone. Wherever you are and whatever you're into.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

## Using options

Touch the **Menu** key to view options.

-  **New window:** Open a new window.
-  **Bookmarks:** Add/show bookmark, show most visited sites and history.
-  **Windows:** Show all your open windows.
-  **Refresh:** Touch to refresh the web page.

 **Forward:** Goes to the page you connected to after the current page. The **Back** key takes you to the previous page.

## More

- **Add bookmark:** Add the current web page as a bookmark.
- **Find on page:** If you enter a letter or word, it will mark all the letters you entered in web page.
- **Select text:** Touch and select the lines you want to copy. Touch and hold any input box then you can paste it.
- **Page info:** Show the web page information.
- **Share page:** Send the web page.
- **Downloads:** Show download history.
- **Settings:** Change web browser settings.

**NOTE:** To return the previous web page, touch the **Back** key.

# Settings

On the homescreen, touch **Application** tab then scroll and touch **Settings**.

## Wireless & networks

Here you can manage Wi-Fi, SmartShare and Bluetooth. You can also set mobile networks and airplane mode.

**Airplane mode** – After setting Airplane mode, all wireless connections will be disabled.

**Wi-Fi** – This turns on Wi-Fi to connect to available Wi-Fi networks.

**Wi-Fi settings** – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed by touching the **Menu** key and selecting **Advanced**.

**Wi-Fi Direct Settings** – Set Wi-Fi Direct device name and scan for other devices, or be a Group owner to allow legacy Wi-Fi devices to connect.

### **TIP!** How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your **Optimus Black** into the router.

You can find the MAC address in the following user interface: Touch **Applications > Settings > Wireless & networks > Wi-Fi settings** and touch the **Menu** key. Then select **Advanced > MAC address**.

**SmartShare settings** – Allows you to change device name and select content type to be shared.

**Bluetooth** – Turns on/off Bluetooth.

**Bluetooth settings** – Set the device name & discoverable mode. Scan for other devices. Or check a list of Bluetooth devices that you've previously configured.

# Settings

**Portable hotspot** – Share your phone's mobile connection as a portable Wi-Fi hotspot.

**Mobile networks** – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

**On-Screen Phone settings** – Allows you to change the On-Screen Phone password (the default password is "0000"). On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC using the mouse or keyboard.

## Sound

< **General** >

**Silent mode** – Allows you to silence all sounds (including call and notification ringtones) except the audio from music, videos and any alarms you have set. (You must silence media and alarms in their own applications.)

**Notice:** After enabling silent mode **Settings** > **Sound** > **Volume** menu is disabled.

**Vibrate** – Allows you to set your phone to vibrate when you receive an incoming call.

**Volume** – Allows you to set the volume for ringtones, media and alarms. If you un-select the option to use the same volume for both calls and notifications, you can set both volumes separately.

< **Incoming calls** >

**Phone ringtone** – Allows you to set your default incoming call ringtone.

## < Notifications >

**Notification ringtone** – Allows you to set your default notification ringtone.

## < Feedback >

**Audible touch tones** – Allows you to set the phone to sound tones when using the dial keypad to dial numbers.

**Audible selection** – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

**Screen lock sounds** – Allows you to set your phone to play a sound when locking and unlocking the screen.

**Haptic feedback** – Allows you to set your phone to vibrate briefly when you touch the soft keys and perform other actions.

## Display

**Brightness** – Adjust the brightness of the screen. You can set the brightness manually by using the slide bar or select **Automatic brightness** and either **Optimized brightness** or **Power saving**.

**Auto-rotate screen** – Allows you to set the orientation to automatically switch to landscape mode or portrait mode when you turn the phone sideways or upright.

**Animation** – Allows you to set animated transitions when navigating from screen to screen.

**Screen timeout** – Allows you to adjust the delay time before the screen automatically turns off. For the best battery performance, use the shortest convenient timeout.

**Display font** - Change the display font.

# Settings

## Gesture

Toggle on/off the gesture settings for text input field, homescreen, alarm, music, Video player, incoming call, Gallery, Camera and Browser.

## Location & security

### < My Location >

**Use wireless networks** – If you select **Use wireless networks**, your phone will help determine your approximate location using Wi-Fi and mobile networks.

**Use GPS Satellites** – If you select **Use GPS satellites**, your phone will be determine your location to street-level accuracy.

### < Screen unlock >

**Set up screen lock** – Set up a screen lock for greater phone security. See page 16 for more information. You can set a **PIN** or **Password** instead of a **Pattern**, or leave it as **None**.

**TIP!** To lock your screen by using the **Pattern Lock**

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You are prompted to draw and redraw your own pattern. The next time you turn on your phone or wake up the screen, you will be prompted to draw your unlock pattern to unlock the screen.

### < SIM card lock >

**Set up SIM card lock** – Set up SIM card lock or change SIM PIN.

### < Passwords >

**Visible passwords** – Select to show passwords as you type them or deselect to hide passwords as you type them.

### < Device administration >

**Select device administrators** – Add or remove device administrators.

## < Credential storage >

**Use secure credentials** – Select to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of Wi-Fi connections. If you have not set a password for credential storage, this setting is dimmed.

**Install from SD card** – Allows you to install encrypted certificates from a microSD card.

**Set password** – Allows you to set or change the password for your secure credential storage. Your password must have at least eight characters.

**Clear storage** – Deletes all secure certificates and related credentials and erases the secure storage's own password.

## Applications

**Unknown sources** – Permits installation of applications that you obtain from websites, email or other locations other than Android Market.

### **WARNING**

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

**Manage applications** – Manage and remove installed applications.

**Running services** – Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it is using.

**Development** – Allows you to set options for application development, such as **USB debugging**, **Stay awake** and **Allow mock locations**.

# Settings

## Accounts & sync

### <General sync settings >

**Background data** – Permits applications to synchronise data in the background, whether or not you are actively working in them. Un-selecting this setting can save battery power and lowers (but does not eliminate) data use.

**Auto-sync** – Permits applications to synchronise, send and receive data on their own schedule.

### < Manage accounts >

List of all Google accounts and other accounts you've added to your phone. If you touch an account in this screen, its account screen opens.

## Privacy

### < Personal data >

**Factory data reset** – Erases all of your personal data from internal phone storage, including information about your Google account, any other accounts, your system/application

data and settings, any downloaded applications and DRM licences. Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you are prompted to re-enter the same information as when you first started Android.

## SD card & phone storage

### < USB connection mode >

Your phone can be used as a mass storage device. You can set the default USB connection mode setting to **Mass storage only**.

### < SD card >

Here you can check the total and Available space on your memory card. Touch **Unmount SD card** for safe removal. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you can format it.

## < Internal phone storage >

Check the **Available space**.

## Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the onscreen keyboard, including words that you have added to its dictionary.

## Voice input & output

### < Voice input >

#### **Voice recogniser settings** –

Use the **Voice recogniser settings** to configure the Android voice input feature.

### < Voice output >

#### **Text-to-speech settings** –

Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

**NOTE:** If you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

## Accessibility

Use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

**NOTE:** Requires additional plug-ins to become selectable.

## Dock settings

**Optimus Black** supports a car dock. You can use the **Dock** settings, to set your preferences for how the phone and the dock interact.

**WARNING:** Only works on the dock for **Optimus Black**.

**Audio** - Available when **Optimus Black** is inserted in a car dock. For a car dock, opens Car Home application. Your settings apply only to the dock for **Optimus Black**.

# Settings

**Dock insertion sound** - Check to play a sound when inserting or removing the phone from a dock.

## Date & time

Use **Date & time** settings to set your references for how dates are displayed. You can also use these settings to manually set the time and time zone rather than obtaining the current time from the mobile network.


## About phone

View legal information and check phone status and software version.


## Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). You can enjoy wireless internet with Wi-Fi, without extra charges.

## Turn on Wi-Fi

From the homescreen, open the notification drawer and touch  on, or touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.

## To connect to Wi-Fi

Choose Wi-Fi network you want to connect to. If you see , you need to enter password to connect.

### NOTE:


- If you are out of Wi-Fi area the 3G connection is used, additional charges may be applied.
- If your phone changes to sleep mode, even when connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)

- The **Optimus Black** supports WEP, WPA/WPA2-PSK and 802.1x EAP. security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Sharing your phone's mobile data connection

You can also share your phone's data connection with up to five devices at once, by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

Icon	Description
	Portable Wi-Fi hotspot is active

For the latest information about portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

**NOTE:** Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

## Portable Wi-Fi hotspot settings

On the homescreen, touch the **Application** tab and select **Settings**.

Touch **Wireless & networks** and select **Portable hotspot**.


Choose options that you want to adjust.

# Settings

**Portable Wi-Fi hotspot** – Check to share your phone's mobile network data connection as a portable Wi-Fi hotspot.

**Help** – Opens a dialog with information about portable Wi-Fi hotspots as well as information about where to learn more.

## To share your phone's data connection as a portable Wi-Fi hotspot

- 1 On the homescreen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Portable hotspot**.
- 3 Check **Portable Wi-Fi hotspot**.
  - After a moment, the phone starts broadcasting its Wi-Fi network name (SSID), so you can connect to it with up to five computers or other devices. An ongoing notification  is added to the status bar and notifications drawer.

- When **Portable Wi-Fi hotspot** is selected, you can change its network name or secure it.
- 4 Unselect **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

## To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the homescreen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Portable hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is selected.
- 4 Touch **Portable Wi-Fi hotspot settings**.
- 5 Touch **Configure Wi-Fi hotspot**.

- The **Configure Wi-Fi hotspot** dialog opens.
- You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security with a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. Or touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

### **ATTENTION!**

If you set the security option as **Open**, you can not prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised use, you are advised to keep the security option.

## **6 Touch Save.**

### **Using SmartShare**

**SmartShare** uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Both devices must be DLNA certified to support this feature.

#### **To turn SmartShare on and allow sharing contents**

- 1** Touch application tab and select Settings.
- 2** Choose **Wireless & networks and SmartShare settings**.

# Settings

- 3 Touch SmartShare to checkmark and turn the function on. Touch **Always allow requests** if you would like to automatically accept sharing requests from other devices.
- 4 Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures, Videos, and Music**.
- 5 SmartShare is now activated and ready to share contents.

## To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

**NOTE:** Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC)

- 1 Touch the top right button to select the device from renderer lists.

- 2 Touch the top left button and select the device of the remote content library.
- 3 Touch SmartShare to checkmark and turn the function on.
- 4 You can browse the content library.
- 5 Touch and hold a content thumbnail and flick them to the top area with your finger or touch the play button.

## To share contents from your phone to your renderer device (e.g. TV)

**NOTE:** Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the Gallery application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- 2 Touch Share on the menu and select the SmartShare.

- 3 SmartShare is automatically launched with the selected files.
- 4 Touch the top right button to select the device from renderer lists.
- 5 Touch the play button to let your renderer device play the files.

**NOTE:** Follow the same steps to use the Music player to share music files.

**NOTICE:** Check that your device is connected with your home network using Wi-Fi connection to use this application.

**NOTICE:** Some DLNA enabled device (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list.

**NOTICE:** Your device might not be able to play some contents.

## Wi-Fi Direct

Wi-Fi Direct enables other devices with Wi-Fi Direct to connect, transfer files and stream media. Wi-Fi Direct also allows Wi-Fi enabled devices to connect and stream media from the **Optimus Black** share information via DLNA, but not transfer files.

Wi-Fi Direct cannot be enabled while using other Wi-Fi functions.

Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices. The searched devices will be listed in the order of arrival in **SmartShare**.

- 1 On the homescreen, touch the **Application** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Wi-Fi Direct Settings**.
- 3 Ensure **Wi-Fi Direct** is selected.
- 4 Select a device to connect in the scanned device list.

# Settings






- **Forced G/O mode** - Touch to activate group owner mode that enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in the **Menu > Advanced > Password**.

**NOTE:** When your phone becomes group owner, it will consume more battery power than being a client. Wi-Fi Direct connection does not provide Internet service.

## How to use On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC using the mouse or keyboard.

## On-Screen Phone icons

-  Connects or disconnects your mobile phone to/from your PC.
-  Rotates the On-Screen Phone window (only available at applications that support rotation).
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone program.
-  Minimises the On-Screen Phone window.

## On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.

- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply click and drag to send a file to your PC.
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop into the On-Screen Phone window. The files you send are stored on a microSD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages, as well as alarm and event notifications.

**Notice:** The Camera preview and Video are not supported in OSP, so it is not available on the PC.

## How to install On-Screen Phone on your PC

Visit LG Home (<http://www.lg.com>) and go to Support > Mobile Phone Support > Download LG Mobile Support Tool to PC. If you download LG PC Suite IV, the On-Screen Phone program will also be downloaded on your PC. Then you can install the On-Screen Phone on your PC.

## How to connect your mobile phone to your PC

### USB connection:

- 1 Open Connection Wizard, select "USB Cable connection" and click "Next".
- 2 Connect your mobile phone to the PC using a USB cable and click "Next".
- 3 Enter the On-Screen Phone password and click "Next". The default password is "0000". You can change the password in **Settings > Wireless &**

# Settings


**Networks > On-Screen Phone Settings.**

4 Click "OK" to exit the window.

## To check the phone to PC connection

Once the devices have been connected, drag down the notification bar at the top of the homescreen to check the On-Screen Phone connection status.

## To disconnect your phone from your PC

Click  in the top left of the On-Screen Phone window. Or drag down the notification bar at the top of the homescreen and select "On-Screen Phone". Touch "Yes" in the Disconnect window.

**NOTE:** You must restart your phone after shutting down the On-Screen Phone service.

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware of your phone to the newer version conveniently from the internet without the need to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

**NOTE:** LG reserves the right to make firmware updates available only for selective models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

### **Software update Over-the-Air (OTA)**

Software update allows you to update the firmware of your phone Over-the-Air (OTA), without connecting a USB data cable.

This feature is only available if and when LG makes the newer version of the firmware available for your device.

Software update is located at **Applications > Software update > Software update check.**

**Note:** Software update requires the use of a Wi-Fi network.

# Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.
- microSD™ and the microSD logo are Trademarks of the SD Card Association.
- Google™, Google Search™, Maps™, Gmail™, YouTube™, Talk™ and Market™ are trademarks of Google, Inc.
- Wi-Fi® and Wi-Fi Protected Access® are registered trademarks of the Wi-Fi Alliance. Wi-Fi Direct™ and Wi-Fi Protected Setup™ are trademarks of the Wi-Fi Alliance.



- Contains Adobe® Flash® Player or Adobe AIR® technology under license from Adobe Systems Incorporated. Copyright © 1995-2011.

- **Dolby Mobile License notice**



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

- **DivX Mobile**



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

**DivX Certified® to play DivX® video up to HD 720p, including premium content. DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under licence.**

**Notice!**

**Open Source Software**

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

## Accessories

These accessories are available for use with the LG-P970.  
(Items described below may be optional.)

### Charger



### Data cable

Connect your LG-P970 and PC.



### Battery



### User Guide

Learn more about your LG-P970.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

# Technical data

## Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

### Declaration of Conformity



#### Supplier Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

#### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P970

Trade Name

LG

CE 0168

#### Applicable Standards Details

RATTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-07 V1.3.1 / EN 301 489-17 V2.1.1 /

EN 301 489-19 V1.2.1 / EN 301 489-24 V1.4.1

EN 300 328 V1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 / EN62209-1:2006 / IEC62209-2:2010

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 / EN 301 908-2 V4.2.1

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

#### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee / Director

Issued Date

31. Jan. 2011

Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. Check if the SIM card is older than 6–12 months. If so, change your SIM at your network provider's nearest branch.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialling error New SIM card inserted Prepaid Charge limit reached	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough Battery is not charged Battery contacts are dirty	Press the On/Off key down for at least two seconds. Keep charger attached for longer. Clean the contacts. Take out the battery and insert again.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective Measures</b>
Charging error	Battery is not charged. Outside temperature is too hot or cold Contact problem	Charge battery. Make sure phone is charging under normal temperatures. Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage Charger defective	Plug into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery.
	Wrong charger. Battery defective.	
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/ send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check if it is covering the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove and re-insert battery. Turn on the phone. Try to do a software update service via WEB site.





