



P/N : MMBB0098423

Revision 1.1
PRINTED IN KOREA

型號 : G7100



繁體中文
ENGLISH



CE 0700

用戶手冊

GPRS與MMS手機

用戶手冊

型號 : G7100

使用行動電話前，請務必詳閱本手冊，
並妥善保存以備日後參考。

G • P • R • S • P • H • O • N • E

GPRS與MMS手機

使用手冊

型號：G7100

使用行動電話前，請務必詳閱本手冊，
並妥善保存以備日後參考。



所有無線電發送器均可能干擾附近的電器設備。



搭乘飛機時，應全程關閉行動電話。



加油站、儲油槽、化學工廠或爆破作業場附近，請勿使用手機。



在任何有特殊規定，限制使用之場所，也請關閉手機。例如，請勿在醫院使用手機，以免對敏感的醫療設備造成影響。



對電視、收音機、電腦等均可能造成輕微干擾。



請勿邊開車邊手持手機通話。



請勿拆解手機或電池。



手機應置於兒童不易取得的安全地方。手機包括細小配件，如果拆解，可能會有哽塞之虞。



手濕時應避免碰觸充電器或手機。



安全須知



爲了您的安全，請務必使用原廠電池與充電器。

請注意：



棄置電池時應依照當地相關法規處理。



限用原廠配件，以免損壞手機。



並非所有行動電話網路均提供緊急電話服務。
因此，請勿只依賴手機來撥打緊急電話。



開關機蓋如果過度用力，可能會損壞LCD顯示器。
有關詳細資料，請參閱第11頁。

重要事項

本使用手冊涵蓋本手機的使用與操作上的重要資訊。爲發揮手機的最佳性能，並避免造成損壞或不當使用，請詳讀本手冊的所有內容。若對手機進行本手冊未明載之任何改造，將導致保固權益喪失。



暴露於無線電波和比吸收(SAR)的訊息

此G7100型號手機設計符合有關無線電波輻射的要求。這要求是基於科學的研究後制定的，並且已包含了一定的安全寬容度，以確保不同年齡和健康狀況的人群的安全。

- 行動電話的輻射標準採用的計算單位被稱為「比吸收率」(“Specific Absorption Rate” or “SAR”)。在測量比吸收收率(SAR)，均採用標準測量方式，測量手機在不同波段中以最高可發射功率操作時的比吸收率(SAR)。
- 也許不同型號LG手機的比吸收率(SAR)可能有所差異，但它們都符合暴露於無線電波的相關國際標準。
- 根據國際非電離輻射防護委員會(INCRP)所發展的標準，適用於公眾的無線電話比吸收率(SAR)限制是平均每10克組織2.0瓦特/千克(W/kg)，而SAR在台灣的限制標準為1.6瓦特/公斤。
- LG G7100 經政府認可的實驗室測試後，此型號的最高比吸收率(SAR)值為1.11瓦特/公斤。
- 減少電池波影響，請妥善使用手機!



目錄

導覽

手機配件	10
手機機身	10
前衛旋轉造型折蓋設計	11
手機外部	12
按鍵說明	13
方向鍵	14
字母鍵	15

顯示資訊

顯示資訊	16
螢幕圖示	16

開始使用

安裝	17
1. 插入SIM卡	17
2. 取出SIM卡	17
3. 安裝電池	18
4. 為電池充電	18
5. 取下充電器	19
撥打電話與接聽來電	20
撥打電話	20
國際電話	20
使用電話簿撥打電話	20

附加功能

來電功能表	21
1 通話中	21
2 多方通話或電話會議	23



密碼鎖	25
PIN碼 (4 至8 位數字)	25
PIN2碼 (4 至8 位數字)	25
PUK碼 (4 至8 位數字)	25
PUK2碼 (4 至8 位數字)	25
手機密碼 (4 至8 位數字)	25
進入功能表	
功能表目錄	26
訊息[功能表1]	28
寫訊息[功能表1-1]	28
寫多媒體訊息[功能表1-2]	31
收信箱[功能表1-3]	37
發信箱[功能表1-4]	38
語音信箱[功能表1-5]	40
區域廣播[功能表1-6]	40
常用短語[功能表1-7]	42
設定[功能表1-8]	43
通話記錄[功能表2]	45
未接來電[功能表2-1]	45
已接來電[功能表2-2]	45
已撥電話[功能表2-3]	45
刪除近期通話[功能表2-4]	45
通話計費[功能表2-5]	45
GPRS訊息[功能表2-6]	47
情景模式[功能表3]	48
震動[功能表3-1]	48
靜音[功能表3-2]	48
標準[功能表3-3]	48
大聲[功能表3-4]	48
耳機[功能表3-5]	48
車用[功能表3-6]	48



目錄

照相[功能表 4]	51
照相機[功能表4-1]	51
照在相框中[功能表4-2]	52
連續拍攝[功能表4-3]	52
我的相簿[功能表4-4]	53
設定[功能表4-5]	53
設定[功能表5]	54
鬧鐘[功能表5-1]	54
日期和時間[功能表5-2]	54
手機設定[功能表5-3]	55
通話設定[功能表5-4]	56
保密設定[功能表5-5]	61
網路設定[功能表5-6]	63
恢復初始設定[功能表5-7]	63
記事簿[功能表6]	64
行程表[功能表6-1]	64
電話簿[功能表6-2]	66
娛樂與工具[功能表7]	73
遊戲[功能表7-1]	73
計算機[功能表7-2]	73
我的文件夾[功能表7-3]	74
作曲家[功能表7-4]	75
單位換自器[功能表7-5]	75
時區設置[功能表7-6]	75
語音備忘錄[功能表7-7]	76
啓動紅外線[功能表7-8]	76



行動網[功能表8]	77
首頁[功能表8-1]	77
書籤[功能表8-2]	77
Push資訊[功能表8-3]	77
情景模式[功能表8-4]	78
進入URL[功能表8-5]	80
緩存[功能表8-6]	80
安全認證[功能表8-7]	80
重新設定[功能表8-8]	80
瀏覽器版本[功能表8-9]	80
瀏覽器功能表	81
Java[功能表9]	82
應用程式[功能表9-1]	82
下載[功能表9-2]	82
記憶體狀態[功能表9-3]	82
收藏夾[功能表10]	83
配件	84
手機的維護	85
技術資料	87



 
手機配件

手機機身





前衛造型旋轉折蓋設計

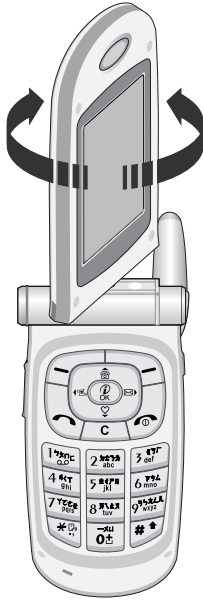 


LCD顯示器可順時針旋轉 90 度，也可逆時針旋轉 180 度。但是，如果強行旋轉，將會導致嚴重損壞。



手機配件


 


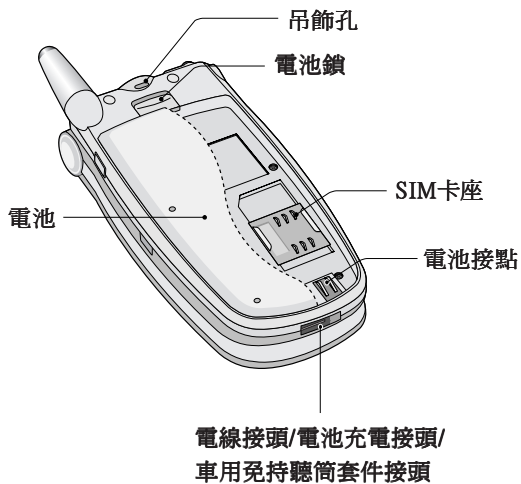

 

手機外部








以下是手機的按鍵說明。

按鍵說明



按 鍵	說 明
	<p>左功能鍵/右功能鍵 這些按鍵會執行正上方螢幕上文字所指明的功能。</p>
	<p>情景模式快捷鍵 可直接進入情景模式功能表，長按此鍵也可直接啓用震動模式。</p> <p>訊息鍵 無需捲動即可直接進入訊息功能表(文字訊息、語音訊息、Push訊息、行程表或鬧鐘)。</p> <p>導覽鍵 用於捲動姓名、電話號碼、功能表或設定選項。按導覽鍵的向下鈕，可檢視收藏夾功能表清單。</p> <p>WAP快速鍵(= 確認鍵) 長按住此鍵片刻即可直接連線到WAP。</p>
	<p>發送鍵 撥出電話和接聽電話。如果您按此鍵後未輸入號碼，手機會顯示最近撥出、已接聽和未接聽的電話號碼。</p>
	<p>數字鍵 這些按鍵主要用來在待機模式下進行撥號，以及在編輯模式下輸入數字或字元。 長按這些鍵一段時間後：</p> <ul style="list-style-type: none"> • 使用  可撥打語音信箱。 • 使用  可撥打國際電話。 • 使用  至  可用來快速撥號。



按鍵說明

按 鍵	說 明
	結束/電源鍵 用於結束或拒接電話。此鍵也可當作電源鍵使用，只要按住此鍵數秒即可開機。
	可刪除字元，返回功能表。此外，在待機模式中按一下此按鍵時，可檢視語音備忘錄清單。
	長按住此鍵片刻可啓用語音辨識功能。

方向鍵

按 鍵	說 明
	向上/向下鍵 折蓋關閉時，按下此鍵將分別顯示時間、日期、我的顯示幕及問候語。再按一次，則會根據「顯示時間」的設定顯示時間。
	相機功能鍵 此鍵用來拍攝及儲存相片。



顯示資訊

 
手機螢幕上會顯示多種圖示，下表將說明這些圖示代表的意義：

螢幕圖示

圖示/指示器	說明
	顯示網路訊號強度。
	電話已接通。
	可以使用GPRS服務。
	表示正在使用漫遊服務。
	如果您申請了雙線路服務，則表示正在使用線路1或2撥打電話。
	鬧鐘已經設定且處於啟動狀態。
	顯示電池狀態。
	收到文字訊息。
	收到語音留言。
	收到push 訊息。
	查看個人行程表。
	情景模式中的「震動」功能表。
	情景模式中的「標準」功能表。
	情景模式中的「大聲」功能表。
	情景模式中的「靜音」功能表。
	情景模式中的「聽筒」功能表。
	情景模式中的「車用」功能表。
	轉接來電。



 
1. 插入SIM卡

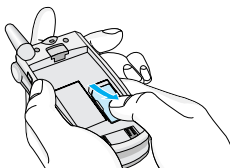

找出手機背面的SIM卡座位置。
依下面步驟安裝SIM卡。

1. 如果已裝入電池，請先取出。
2. 以SIM卡的金色接觸點向下，截角朝右的方式，將SIM卡滑入至銀色卡座下方。

2. 取出SIM卡

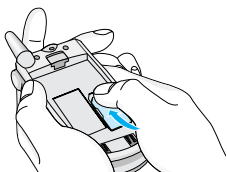

依下面步驟取出SIM卡。

1. 如已裝入電池請先取出。
2. 從座中取出SIM卡。

 
注意

- 在手機開啓時取出電池可能會導致手機發生故障。
- SIM卡金屬接點容易因刮傷而損壞。取出或裝入SIM卡時應特別小心。請依照SIM卡所附之說明書進行安裝。

 


安裝

3. 安裝電池

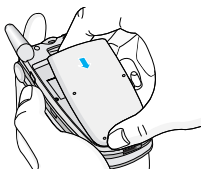

 
1. 將電池底部的凸耳插入固定座，

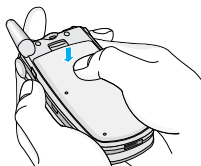

 
2. 然後把電池的另半部分推入定位。

4. 為電池充電

手機要連接旅行充電器前，必須先裝入電池。

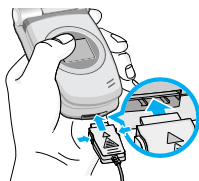

1. 如圖中所示，使箭頭對著自己，將電池充電器上的插頭推入手機底部的插座，直至它卡入定位為止。

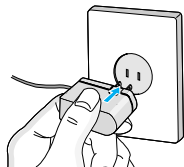

2. 將旅行充電器的另一端插入電源插座。僅可使用隨附的充電器。





警告

- 請勿強力插入接頭，以免損壞手機和/或旅行充電器。

5. 拔下充電器



如圖所示，按下旅行充電器側面的按鈕即可將其從手機上拔下。

附註

- 使用手機前，請確定電池已完全充電。
- 電池或SIM卡不可在充電期間取出。
- 充電完畢後，電池圖示的移動式指示列將會停止動作。

附註

如果電池無法充電：

- 關閉手機。
- 確定電池是否安裝正確。



撥打電話與接聽來電

撥打電話

1. 鍵入電話號碼，包括區碼。如果要刪除號碼，請按 **C**。
2. 按 撥出電話。
3. 按 結束通話。

國際電話

1. 按住 鍵以撥打國際撥接碼。「+」字元可以取代國際撥接碼。
2. 輸入國碼、區碼及電話號碼。
3. 按 .

使用電話簿撥打電話



1. 在待機模式下，按右功能鍵 [電話簿]。
2. 功能表顯示時，按 選取[尋找]。
3. 依姓名或號碼找到所需的項目後，按 撥出電話。





通話時手機螢幕上顯示的功能表，與待機螢幕上顯示的預設主功能表不同，它具有下列項目差異。

1 通話中


1-1 保留通話


撥打電話或接聽來電後，按  [發送] 可保留通話。在通話被保留時，按  [發送] 可啓用通話。

1-2 撥打第二通電話

您可從電話簿取得一個撥接號碼，以撥打第二通電話。按  [電話簿]，然後選取**尋找**。通話時，如要將撥接號碼儲存到電話簿，請按  [電話簿]，然後選取[新增]。

1-3 在兩個電話之間切換

要在兩個電話之間切換，請依次選取  [選項]與**交換**，或直接按  [發送] 鍵。

按向上/向下鍵，從兩個電話中選擇其中一個。如果要結束兩個電話的其中一個，請選擇要結束的通話，然後按  [結束] 鍵。





來電功能表

1-4 接聽來電

 



要在手機鈴響時接聽來電，只需按  [發送] 鍵即可。

通話中如有其他來電，本手機具備額外的通知功能。耳機會發出聲音，而螢幕上則會顯示第二個電話正在等候接聽。此功能稱為「來電等候」，僅在網路支援時才可使用。要取得如何啓用與停用此功能的詳細資訊，請參閱來電等候[功能表5-4-4]。


如已啓用來電等候功能，您可以按  [發送]，或選取  [接聽] 與**保留與接聽**，保留第一通電話並接聽第二通電話。

 
您可以依次選取  [功能表] 與**保留與接聽**，結束目前通話並接聽正在等候的來電。

1-5 來電拒接

在非通話狀態下，如果折蓋在開啓狀態，您可以按  [結束] 在不接聽的情況下拒接來電；如果折蓋已關閉，則可按  外部 EZ 鍵，亦可在不接聽的情況下拒接來電。在通話狀態下，您可以按  [功能表] 鍵並選取**多方通話/結束**，或按  [結束] 鍵拒接來電。


1-6 麥克風靜音

在通話時按  [選項] 鍵，然後選取靜音，可使麥克風靜音。

按  [取消靜音]，可取消手機靜音。


手機靜音時，來電者將聽不見您的聲音，但您仍可聽見來電者的聲音。

1-7 在通話中開啓雙音多頻音

要在通話中啓用雙音多頻功能 (例如：讓手機使用自動切換功能)，請依次選取  [選項] 與雙音多頻開啓。使用相同方法可關閉雙音多頻功能。



1-8 叫出訊息或SIM卡主功能表

在來電功能表中選取  [選項]，可以進入訊息或SIM卡工具組主功能表選項。只有當SIM卡支援SIM卡工具組這項服務時，才會在螢幕上顯示此功能表。



2 多方通話或電話會議

如果您的網路系統尚支援多方通話或會議服務，您即可使用此功能同時與超過一個來電者通話。


要啟動多方通話，您必須至少有一個電話正在通話中以及一個電話保留中，同時這兩個電話都已被接聽。啟動多方通話之後，啟動者可新增、中斷或隔離（即從多方通話中離開，但仍與您連線）任何一個電話。這些選項都包含在通話中功能表內。

多方通話中的來電者人數最多為五人。啟用多方通話後，您可以對其進行控制，並且只有您才可以新增通話。

2-1 撥打第二個電話

您可以在通話時撥打第二個電話。要撥打第二個電話，請輸入第二個號碼，然後按  [發送]。在您撥打第二個電話時，第一個電話將被自動保留。您可以依次選取  [選項]與**切換**，以在兩個電話之間切換。

2-2 設定多方通話

您可以依次選取  [選項]與**多方通話/全部加入**，將一個或多個保留通話連接到目前的通話，形成一組多方通話。


2-3 保留多方通話

要保留多方通話，請依次選取  [選項]與**多方通話/全部保留**。




來電功能表



2-4 啓用保留中的多方通話

要啓用保留中的多方通話，請依次選取  [選項] 與 **多方通話/全部加入**。


2-5 新增通話到多方通話

要將目前通話加入到被保留的各方通話中，請依次選取  [選項] 與 **多方通話/全部加入**。


2-6 顯示多方通話中的通話者

要在手機螢幕上捲動查看參與多方通話的來電者號碼，請按與  鍵 。




2-7 保留多方通話成員

要保留多方通話中其中一位來電者的通話(其號碼顯示在螢幕上)，請依次選擇  [選項] 與 **多方通話/排除**。

2-8 在多方通話中進行私人通話

要與多方通話中的某個通話者進行私人通話，請先使其號碼顯示在螢幕上，然後依次選取  [選項] 與 **多方通話/私人通話** 保留所有其他來電。

2-9 結束多方通話

按  [結束] 鍵可中斷目前顯示的各方通話來電。要結束多方通話，請按  [選項]，然後選取 **多方通話/結束多方通話**。依次選取  [選項] 與 **多方通話/全部結束**，將會結束所有進行中與保留中的通話。



使用本章節所述之密碼鎖，可避免他人盜用您的手機。密碼鎖 (PUK和PUK2碼除外) 可以使用[功能表5-5-5]加以變更。

PIN碼 (4 至8 位數字)

PIN碼(個人識別碼) 能保護您的SIM卡免於遭受他人盜用。通常PIN碼會隨SIM卡一起提供。當PIN碼設定為啓用時，每次開機時，手機將會要求您輸入PIN碼。相反的，若PIN碼設定為關閉時，手機不需輸入PIN碼即會自動連接網路。

PIN2碼 (4 至8 位數字)

有些SIM卡會附隨提供PIN2碼，需要輸入此密碼才能使用某些功能如電話帳單通知、固定撥號等。這些功能僅在SIM卡支援的情況下才能使用。

PUK碼 (4 至8 位數字)

要變更已被鎖定的PIN 碼，必須輸入PUK (PIN開鎖密碼) 碼。PUK碼可能會隨SIM卡一起提供。如果沒有，請洽當地電信公司以取得該密碼。如果遺失該密碼，也可向電信公司索取。

PUK2碼 (4 至8 位數字)

有些SIM卡會附隨提供PUK2碼，輸入此密碼才能變更已被鎖定的PIN2碼。如果遺失該密碼，也可向電信公司索取。

手機密碼 (4 至8 位數字)

手機密碼可防止手機遭受他人擅用。此密碼通，會隨手機提供。要刪除所有手機的資料輸入並啓用「恢復原廠設定」功能表時，必須輸入此密碼。預設密碼為“0000”。



功能表目錄



1 訊息

- 1 寫訊息
- 2 寫多媒體訊息
- 3 收信箱
- 4 發信箱
- 5 語音信箱
- 6 區域廣播
- 7 常用短語
- 8 設定



2 通話記錄

- 1 未接來電
- 2 已接來電
- 3 已撥電話
- 4 刪除近期通話
- 5 通話計費
- 6 GPRS訊息



3 情景模式

- 1 震動
- 2 靜音
- 3 標準
- 4 大聲

- 5 耳機
- 6 車用



4 照相

- 1 照相機
- 2 照在相框中
- 3 連續拍攝
- 4 我的相簿
- 5 設定



5 設定

- 1 鬧鐘
- 2 日期和時間
- 3 手機設定
- 4 通話設定
- 5 保密設定
- 6 網路設定
- 7 恢復初始設定



6 記事簿

- 1 行程表
- 2 電話簿



7 娛樂與工具

- 1 遊戲
- 2 計算機
- 3 我的文件夾
- 4 作曲家
- 5 單位換自器
- 6 時區設置
- 7 語音備忘錄
- 8 啓動紅外線



8 行動網

- 1 首頁
- 2 書籤
- 3 Push資訊
- 4 情景模式
- 5 進入URL
- 6 緩存
- 7 安全認證
- 8 重新設定
- 9 瀏覽器版本



9 Java

- 1 應用程式
- 2 下載
- 3 記憶體狀態



10 收藏夾



11 行動增值服務

此功能表會按SIM卡和網路服務而異。





訊息 [功能表1]

此功能表包括SMS (短訊服務)、MMS (多媒體訊息服務)、語音訊息以及網路服務訊息之相關功能。

寫訊息 [功能表1-1]

您可以編寫及修改文字訊息、查看訊息頁數。

1. 按  [選擇] 進入**訊息**功能表。
2. 如果您要編寫一個新訊息，請選擇**寫訊息**。
3. 爲了使用文字輸入更加方便，請參考T9輸入法。詳細說明請參閱**如何使用T9輸入法** (第33頁)。
4. 按[附加] 可插入符號、圖片、歌曲等。
5. 編寫完成後，您可以選擇  [選項]，選擇發送或是儲存，以及字體顏色、大小、對齊等。

附註

- 本手機支援EMS第5版，可以傳送彩色相片、聲音及文字樣式等。如果對方的手機不支援此類選項，則可能無法接收對方的簡訊相片、聲音或文字符號。



附加

- **符號**

您可以選擇新增特定符號。

- **圖片**

您可以選擇在訊息中附加原始內建圖片或是從我的文件夾中選取自行下載的圖片。

- **歌曲**

您可以選取喜好的歌曲附加至訊息中。

- **常用短語**

常用短語是預設的訊息，您可以從列表中加入適合的的常用短語。

- **電話簿**

您可以附加電話簿的電話號碼或電子郵件地址。

- **名片**

名片的訊息是姓名、手機、公司、傳真及電子郵件。您可以將名片加入簡訊。




訊息 [功能表1]

選項

- **發送**

傳送文字訊息。

1. 輸入收信人電話號碼。
2. 按  可以增加一位收信人。
3. 在發給欄中輸入收信人的電話號碼，最多同時傳送給六個收信人。
4. 輸入電話號碼完成後，可以按發送。

- **儲存**

將訊息儲存在發信箱中。

- **字體**

選取字體的大小與字型。

- **顏色**

選取前景與背景的颜色。

- **對齊**

調整訊息內容的對齊方式為居左，居中及居右。

- **新增字典**

新增個人常用語。僅在編輯模式為預設型 (T9Abc/T9abc/T9ABC) 時才會顯示此功能表。

- **T9語言輸入法**

選取T9語言輸入法模式。


- **結束**

如果您在輸入訊息時按結束，則可以結束輸入並返回訊息功能表。您所輸入的訊息將不會儲存。



寫多媒體訊息 [功能表1-2]

輸入並編輯多媒體訊息、查看訊息大小。

1. 按  [選擇] 進入**訊息**功能表。
2. 如果您想傳送一個多媒體訊息，請選取**寫多媒體訊息**。
3. 您可以選擇建立新訊息，或選取其中一個已建立的多媒體訊息範本。
4. 輸入文字訊息後，可以選擇**附加**，附加**符號、圖片、歌曲、用短語、電話簿及名片**。

選擇

- **預覽**
預覽您所輸入的多媒體訊息。
- **發送**
將多媒體訊息傳送至電子郵件信箱、或給多個聯絡人、設定訊息的優先順序，以及訊息的狀態報告等。
- **儲存**
將多媒體訊息儲存在發信箱或作為範本。
- **增加**
在目前的幻燈片之前或之後新增幻燈片。
- **轉到**
移至上一張或下一張幻燈片。
- **刪除**
刪除目前的幻燈片。



訊息 [功能表1]

- **設置訊息格式**
 - **設定計時器**
設定幻燈片、文字、相片及聲音的定時器。
 - **置換文字和圖片**
改變訊息內的相片與文字位置。
- **刪除多媒體**
刪除幻燈片播放中的相片或聲音。此選項僅在存有媒體的情況下才會顯示。
- **新增字典**
新增個人常用語。僅在編輯模式為預設型 (T9Abc/T9abc/T9ABC)時才會顯示此功能表。
- **T9語言輸入法**
選取T9中文輸入模式。
- **結束**
返回**訊息**功能表。

附註

- 在編輯多媒體訊息時，若讀取的圖片檔案大小為15k，則至少需要15秒鐘的載入時間。在這段載入的時間內，您可以再使用其他的按鍵，15秒鐘以後，便可開始編輯多媒體訊息。



如何使用T9輸入法

 
T9 可讓您快速輸入文字。

在T9 模式下，您只需按對應的字母鍵一次。此模式以內建字典為基準，您也可以字典中新增常用語。

• 使用T9 輸入字元。

1. 使用按鍵 至 輸入字元。一個字母只需按一次按鍵。

例如，輸入「Girl」。

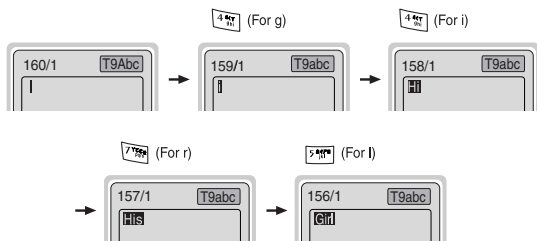


按一次按鍵，字元就會變更一次。因此，在按下所有適當的按鍵之前，您無需特別留意螢幕上顯示的字元。要刪除多餘的字元，請按 。


要插入一些數字，請按住 並按下數字鍵。按下 可以變更語言類型(您也可以使用選項)。此外，手機還支援三種模式：預設型 (T9Abc, T9ABC, T9abc)，Multitap (ABC, abc), Numeric (123), 如果您要變更模式，請按 鍵。




訊息 [功能表1]

或者：按  鍵，然後選取插入符號。選取所需的字元並按 **選擇**。


2. 完成字元輸入後，請檢查字元是否正確。

如果字元正確：按  並輸入下一個字元。

如果字元不正確：按 ， (上一個與下一個字元) 進行搜尋。

或者：如果沒有您所想要的字元，您可以新增個人常用短語。
在 **預設型** 編輯模式中按  [選項]。選取 **新增字典** 功能表。
請看以下範例。



3. 要插入標點符號，請重複按  直到出現所需的符號。

T9 語言

- 您可以透過選取功能表來選取T9 語言。
在T9模式下，您也可以選取T9關閉功能表。
(預設為T9開啓)



- 1) **ST (筆劃輸入法)**：如何使用筆劃輸入法選取中文字元。當您逐一輸入各別筆劃字根後，中文字元便會顯示出來。使用 **[←(及)→]** 鍵來查看其他字元選項，並按 **[Ⓚ]** 加以選取。同樣地，使用 **[←(、)→]**、**[Ⓛ]** 及 **[Ⓜ]** 鍵來尋找更多不同字元。

例如) 要輸入「你好」，請順序按數字鍵 **[5.01]**、**[2.33]** 及 **[3.01]**，然後您將會看到首個字元「你」。現在，按 **[Ⓚ]** 然後再按 **[1.23]** 鍵選取「好」。

按鍵	筆劃	按鍵	筆劃
[1.23]	一	[6.33]	? (通配符號)
[2.33]	丨	[7.33]	
[3.01]	丿	[8.33]	
[4.01]	丶	[9.33]	
[5.01]	フ	[Ⓚ]	選擇鍵

<筆劃表>

- 2) **PY (拼音輸入法)**：「拼音輸入法」可根據中文字元的英文拼音尋找字元。

拼音輸入法：在輸入首個拼音符號後便可直接尋找字元。

例如) 要輸入「國民」，請順序按數字鍵 **[4.01]**、**[8.33]** 及 **[6.33]**，然後「guo」及「huo」將出現在外部編輯螢幕。在選取「guo」後，許多具有相同拼音方式的字元將會出現供您選擇。接下來您可從其中選取字元「國」(按 **[Ⓚ]** 然後再按 **[1.23]**)。在選取首個字元後，接著會出現其他各種字元。您可用相同方法選取「民」(按 **[Ⓚ]** 然後再按 **[5.45]**)。



訊息 [功能表1]

按鍵	英文字母	按鍵	英文字母
			MNO
	ABC		PQRS
	DEF		TUV
	GHI		WXYZ
	JKL		選擇鍵

<拼音字母表>

- 3) **注音輸入法 (Bopomofo)**：依照注音符號可讓您輸入您所需要的中文字。詳細的輸入方法介紹以及鍵盤對照表，請參考以下說明：

例如) 要輸入「必要」，請順序按數字鍵 及 ，然後「ㄅ」將出現在外部編輯螢幕。因為許多字元均具有相同的注音方式。所以您應從其中選取字元「必」(按 然後再按)。在選取首個字元後，接著會出現其他各種字元。您可用相同方法選取「要」(按 然後再按)。






按鍵	注音	按鍵	注音
	ㄅ ㄆ ㄇ		ㄆ ㄇ ㄏ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ



收信箱 [功能表1-3]

在您收到訊息時會顯示訊息符號，表示訊息儲存於收信箱。在收信箱中，您可以根據圖示識別每則訊息。有關詳細資料，請參閱圖標說明。

圖標說明

- [] 多媒體訊息
- [] 訊息
- [] SIM訊息
- [] 未讀取
- [] 通報

如果手機顯示「SIM卡無空間接受新訊息」，您必須刪除某些儲存在收信箱 或發信箱 中的SIM 訊息。如果手機顯示「無空間接受新訊息」，您要刪除每個資料庫中的一些訊息、媒體及應用程式以釋放空間。

* SIM 訊息

SIM 訊息指專門儲存在SIM卡中的訊息。

對於已經接收的多媒體訊息，您必須在下載與處理完成後方能閱讀。對於通知設定，請參閱[功能表1-8-2] 以取得詳細資料。

要閱讀訊息，請按  以選取其中一則訊息。

回覆

回覆寄信者。

轉寄

將選取的訊息轉寄給其他人。



訊息 [功能表1]

回覆電話

撥打寄信者電話。

刪除

刪除目前訊息。

保存訊息資料

取得相片、聲音與文字。它們將儲存在我的文件夾或電話簿中。

查看訊息

查看接收的訊息之相關資訊：寄件者地址、主旨(僅限於多媒體訊息)、訊息日期與時間、類型與大小。

重放 (僅適用於多媒體訊息)

重新播放多媒體訊息。

* 已接收 (僅限於通知訊息)

如果將多媒體訊息設定為自動下載關閉，則您只能收到通知。要接收訊息，您需要選取[接收]。儘管多媒體訊息已設定為自動下載啟動，但由於網路狀況或其他原因，您可能仍只會收到通知訊息。


發信箱 [功能表1-4]


您可以在發信箱中查看已傳送與未傳送的訊息。對於已傳送的訊息，您可以查看傳送狀態。

查看方法與查看收信箱 中的訊息相同。



圖標說明

 傳送未成功

 未傳送

 轉發

* 要使用已傳送的訊息時

轉寄

將目前訊息轉寄給其他人。

刪除

刪除目前訊息。

查看訊息

查看發信箱中訊息的相關資訊：寄件者地址、主旨(僅限於多媒體訊息)、訊息日期與時間、類型、大小。

* 要使用未傳送的訊息時

修改

編輯選取的訊息。

發送

發送選取的訊息。

刪除

刪除選取的訊息。

查看訊息

查看傳送訊息的相關資訊。



訊息 [功能表1]


語音信箱 [功能表1-5]

如果您的網路系統商支援此功能，則您可以接收留言。當新的留言到達時，螢幕上會顯示符號。請向您的網路系統商洽詢他們服務的詳細資料，並依照相關業者設定調整手機。

收聽語音信箱 [功能表1-5-1]

聽取留言。

語音中心號碼 [功能表1-5-2]

1. 在待機模式下按  鍵。
2. 您可以查看下列子功能表。

- **本地中心**

選取主頁可以聽取留言。

- **漫遊地中心**

如網路系統商支援漫遊服務，即使您身在國外也可以聽取留言。


區域廣播 [功能表1-6]

(取決於網路和您所申請的服務)

資訊服務訊息是由網路傳送給GSM 用戶的文字訊息。網路提供如天氣報導、交通新聞、稅務、醫療和股市行情等一般資訊。每類資訊均有代碼；因此，您只需輸入資訊的特定代碼即可洽詢電信系統商。如果收到資訊服務訊息，您可以看到代表您收到訊息的快顯訊息，或查看直接顯示的資訊服務訊息。要再次查看訊息或處於非待機模式時，請按以下程序執行：



讀取 [功能表1-6-1]

1. 如果收到資訊服務訊息並選取**讀取**以閱讀訊息，則訊息會顯示在螢幕上。您可以捲動或按  [下一筆] 閱讀其他訊息。
2. 此訊息將一直保留，直至收到其他訊息。

接收 [功能表1-6-2]

- **啓動**
如果選取此功能表，您的手機將會接收資訊服務訊息。
- **關閉**
如果選取此功能表，您的手機將不再接收資訊服務訊息。

來電提示 [功能表1-6-3]

- **啓動**
收到資訊服務訊息代碼時，您的手機將會發出嗶聲。
- **關閉**
收到資訊服務訊息代碼時，您的手機不會發出嗶聲。


語言 [功能表1-6-4]

按[開啓/關閉] 可以選取所需的語言。然後資訊服務訊息將會以您選取的語言顯示。



訊息 [功能表1]

標題(取決於網路和您所申請的服務) [功能表1-6-5]

- **新增**
您可以用暱稱將資訊服務訊息代碼新增至手機記憶體。
- **查看列表**
查看新增的資訊服務訊息代碼。如果您按  [選項]，則可編輯與刪除新增的資訊訊息類型。
- **目前列表**
您可以在現用清單中選取資訊服務訊息代碼。如果您啟動資訊服務代碼，則可以接收該代碼傳送的訊息。

常用短語 [功能表1-7]

文字 [功能表1-7-1]

您可以建立11個文字範本。您可以將預先定義的範本變更為自己喜好的內容，或者留為<空白>。

多媒體[功能表1-7-2]

您可以使用下列子功能表。

修改：編輯多媒體範本。

新增：新增多媒體範本。

寫訊息：使用多媒體範本編輯多媒體訊息。

刪除：刪除多媒體範本。

名片 [功能表1-7-3]

製作本人名片。主要內容包括姓名、電話號碼、傳真號碼及電子郵件。



設定 [功能表1-8]

短訊息[功能表1-8-1]

- **訊息類型**
文字、語音、傳真、傳呼、X.400、電子郵件、ERMES
通常訊息的類型會設為**文字**。您可以將文字轉換為其他格式。
有關能否使用此功能，請洽詢系統商。
- **訊息有效日期**
此網路服務可讓您設定訊息中心可以儲存文字訊息的期限。
- **狀態報告**
如果設定為啓動，可以查看訊息是否傳送成功。
- **簡訊中心**
如果您要傳送文字訊息，則可透過此功能表接收簡訊中心地址。

多媒體訊息 [功能表1-8-2]

- **訊息有效日期**
此網路服務可讓您設定訊息中心可以儲存文字訊息的期限。
- **狀態報告**
如果在此功能表中設定為啓動，可以查看訊息傳送是否成功。
- **自動下載**
如果選取啓動，可以自動接收多媒體訊息。如果選取關閉，您將只能接收收信箱 中的通知訊息，然後您可以查看此通知。



訊息 [功能表1]

- **網路設定**

如果選用多媒體訊息伺服器，您可設定多媒體伺服器的URL。

- **允許訊息類型**

個人 : 個人訊息。

廣告 : 商業訊息。

資訊 : 必要資訊。

記憶體狀態 [功能表1-8-3]

您可以查看每個資料庫、SIM卡記憶體的剩餘空間與使用狀況。

您可以進入每個資料庫功能表。



未接來電 [功能表2-1]

此功能表可顯示最近未接聽的電話號碼。您可以撥打這些電話號碼、儲存，以及查看日期與時間。

已接來電 [功能表2-2]

此功能表可顯示最近已接聽的電話號碼。您可以撥打這些電話號碼、儲存，以及查看日期與時間。

已撥電話 [功能表2-3]

此功能表可顯示最近已接聽的電話號碼。您可以撥打這些電話號碼、儲存，以及查看日期與時間。

刪除近期通話記錄 [功能表2-4]

您可以刪除最近保留在未接來電、已接來電、已撥電話或全部通話列表記錄中的電話號碼。

通話計費 [功能表2-5]

在以下子功能表中，您可以查看電話的通話時間與費用。

通話計時 [功能表2-5-1]

此功能可讓您查看最後通話、全部通話、已接來電、已撥電話的通話時間 (以小時、分鐘和秒來計算)。您也可重設通話計時器。

1. 在待機模式下按 [功能表]。
2. 按 直接進入，或使用導覽鍵進入通話記錄，然後選取通話計費選項。
3. 捲動至通話計時，使其反白，然後按 [選擇]。

下列5個子功能表可供選擇：**最後通話、全部通話、已接來電、已撥電話和全部歸零。**



通話記錄 [功能表2]

通話費用 [功能表2-5-2]

此功能可讓您查看上次通話與全部通話的費用、保留、重設費用以及費用餘額。若要重設通話費用，必須輸入PIN2密碼。

1. 在待機模式下按 [功能表]。
2. 按 直接進入，或使用導覽鍵進入通話記錄，然後選取通話計費。
3. 捲動至通話費用，使其反白，然後按 [選擇]。下列為4個可供選的子功能表：**最後通話**、**全部通話**、**話費餘額**以及**全部歸零**。

附註

- 系統商的實際通話費用帳單會隨網路功能、帳單四捨五入計算、稅額等而有不同。

設定 [功能表2-5-3] (功能取決於SIM卡)

• 設定費率

設定幣別與單價。請洽詢系統供應商以瞭解計費單價。要在此功能表中選取幣別或單價，您可能需要輸入PIN2碼。

如果要輸入 €、£、\$ 符號，請清除所有幣別字串，然後按 鍵。如果要變更符號，請再次按 鍵。

附註

- 在所有金額全部用盡時，除緊急電話以外，您將無法撥打任何電話。您需要輸入PIN2碼才能設定電話費用限制，視SIM卡而定。



- **設定額度**

此網路服務可讓您將電話費用限制在選定的計費金額內。如果您選取讀取，將會顯示剩餘金額。如果您選取更改，則可變更金額限制。

- **自動顯示**

此網路服務可讓您自動查看上次通話的費用。若設定為開啓，可以在通話結束後查看費用。

GPRS資訊 [功能表2-6]

查看透過GPRS網路傳輸的資料量。此外，也可以查看上線時間。

通話計時 [功能表2-6-1]

查看**最後通話**和**全部通話**的通話時間。您也可以重設通話計時器。






資料量 [功能表2-6-2]

查看**已傳送**、**已接收**、**已傳送與接收**的資料量和**全部歸零**。



情景模式 [功能表3]

在此功能表中，您可以調整和自訂不同場合與環境的手機鈴聲。

1. 在待機模式下按  [功能表]。
2. 按  直接存取或使用使用  (與 )。
3. 在待機模式下按  鍵可直接進入此功能表。
4. 在蓋上折蓋的待機模式中，您可以透過壓著側鍵改情景模式。
請注意! 在此狀態下僅能切換於“震動”與“大聲”模式。

震動 [功能表3-1]

如果您需要使用震動模式，您可以將情景模式設為**震動**模式。

靜音 [功能表3-2]

在安靜場所中，可以將情景模式調整為**靜音**模式。

標準 [功能表3-3]

調整情景模式為**標準**模式。

大聲 [功能表3-4]

如果您在吵雜的環境，可以將情景模式為**大聲**模式。

耳機 [功能表3-5]

使用免持耳機時，可將情景模式調整為**耳機**模式。

車用 [功能表3-6]

使用車用免持聽筒設備時，可將情景模式調整為**車用**模式。



附註

- 僅在手機上裝有免持耳機或車用免持聽筒設備時，才能啓用耳機與車用情景模式。但其內容可能會因人而異。

啓動 [功能表3-x-1]

啓用選取的操作模式。

更改 [功能表3-x-2]

每個功能表都有如下所示的子功能表，但震動的功能表除外。

來電提示類型

可根據不同環境選取來電提示類型，如鈴聲、震動等。

鈴聲類型

可根據不同環境設定不同的鈴聲。

鈴聲音量

可根據不同環境設定不同的鈴聲音量。電源開啓/關閉的音量及所有來電提示音量均根據鈴聲音量進行設定。

簡訊提示類型

可根據不同環境，設定收到訊息時的來電提示，如提醒一次、多次提醒等。

簡訊提示鈴聲

可以選取收到訊息的提示音。

按鍵音量

可根據不同環境設定不同的按鍵音量。



情景模式 [功能表3]

按鍵音

可根據不同的環境選取不同的按鍵音。

折蓋聲音

您可根據不同環境設定不同的折蓋聲音。

確認音音量

您可根據不同環境設定不同的音效音量。

電源開關音量

您可根據不同環境設定不同的電源開啓/關閉音量。

自動接聽

只有在手機接上耳機或免持聽筒時，此功能才可啓用。

- **關閉**：手機不會自動接聽。
- **5秒後**：5秒鐘後，手機將自動接聽。
- **10秒後**：10秒鐘後，手機將自動接聽。

重命名[功能表3-x-3]

您可以變更除震動、聽筒及車用功能表之外的預設操作模式名稱。

附註

- 如果手機已接上免持聽筒，您不可使用任何與來電鈴聲類型或簡訊提示鈴聲功能表相關的震動模式。在車用功能表中，可使用下列子功能表：
 - **來電鈴聲類型**：鈴聲、靜音。
 - **簡訊提示鈴聲**：提醒一次、定時提醒、靜音。



您可以在外出時使用相機拍攝人物與事件的照片。您也可以在多媒體訊息中傳送照片。

照相機[功能表4-1]

1. 選擇照相，然後按 。如您要直接進入此功能表，請按住 。
2. 對焦並拍下目標的影像，然後按 或 。
3. 如要儲存，請按 或 。

參考!

• 設定視窗

按下 或 可控制影像大小、閃光燈、亮度、色彩、旋轉或縮放。

- 解析度 : VGA 640*480、QVGA 320*240、QQVGA 60*120、PB : 48*48
- 閃光燈 : 開, 關
- 旋轉 : 逆時針旋轉影像 90 度。
- 相片品質 : 高、正常與低
- 變焦 : x1、x2、x4。預設值為 x1。
- 亮度 : -1、-2、標準、+1、+2。
- 顏色 : 原色、恢葛、黑 / 白。



照相 [功能表 4]

啓用按鍵

- (←) : 移動設定的項目。
- : 拍攝與儲存相片。
- : 回到之前的功能表或退出照相模式。
- : 在應用程式設定中，您可以變更預設值。您也可以將影像旋轉 90 度。
- (→) : 移動設定的項目。
- : 拍攝與儲存相片。

照在相框中[功能表4-2]

您可以在各種背景下拍攝相片。此外，您也可以按 、 選擇外框。

參考!

- 在此模式中，您無法變更解像度與色彩的設定。

連續拍攝[功能表4-3]

同一時間內，最多只可連續拍攝 9 張相片。拍攝相片後，您可以按 、 檢視，也可以按 儲存相片。

參考!

- 如果您設定的解像度為 640x480，您僅能拍攝 3 張相片。如果設定為 320x240，可以拍攝 6 張相片。



[我的相簿\[功能表4-4\]](#)

您可以檢視與傳送照片。此外，您也可以將視窗設為背景。

[全部圖片\[功能表4-4-1\]](#)

您最多只可按順序檢視 9 張相片。

[通用圖片\[功能表4-4-2\]](#)

您可以檢視除外框與電話號碼外的所有相片。

[相框圖片\[功能表4-4-3\]](#)

您可以檢視所有外框相片。

[電話本圖片\[功能表4-4-4\]](#)

您可以檢視所有電話簿相片。

• 選項

- **縮小** : 螢幕上最多只可檢視 9 幅縮圖。
- **寫多媒體訊息** : 透過 MMS 訊息傳送照片。
- **設成待機圖片** : 將照片設定為底色圖案。
- **刪除** : 刪除照片。
- **編輯標題** : 編輯照片標題。

[設定\[功能表4-5\]](#)

[記憶體狀態\[功能表4-5-1\]](#)

您可以檢查全部、已使用及可用的記憶體容量。

[清空相簿\[功能表4-5-2\]](#)

您可以刪除儲存在記憶體中的所有照片。



設定 [功能表5]

您可根據個人喜好和方便程度設定下列功能表。

1. 在待機模式下按 [功能表]。
2. 按 直接進入設定。

鬧鐘 [功能表5-1]

手機共可設定5組鬧鐘時間。

1. 選取**開**，然後輸入要設定的鬧鐘時間。
2. 選取重覆期限：**一次、週一～週五、週一～週六、每天**。
3. 選取要設定的鬧鐘鈴聲，然後按 [確認]。
4. 輸入鬧鐘名稱，然後按 [確認]。
5. 如果將**鬧鐘**設定為**關機後使用鬧鐘?**，即使手機已關閉，鬧鐘亦會在指定的時間響起。

日期和時間 [功能表5-2]

設定與日期時間有關的功能。

日期設定 [功能表5-2-1]

可以輸入目前的日期。

日期格式 [功能表5-2-2]

可以將日期格式設定為日/月/年、月/日/年、年/月/日。

時間設定 [功能表5-2-3]

輸入目前的時間。

時間格式 [功能表5-2-4]

設定時間格式為24小時制或12小時制。



手機設定 [功能表5-3]

設定手機的相關功能。

顯示設定 [功能表5-3-1]

- **待機圖片**

在待機模式下選取待機圖片。

 - **預設**

按 [◀(或)▶] 選取作為待機時的圖案或動畫。
 - **我的文件夾**

選取作為待機時的圖案或動畫。
- **電話撥入時**

設定電話撥入時將顯示的動畫。
- **電話撥出時**

設定電話撥出時將顯示的動畫。
- **問候語**

如果選取啟用，則可編輯在待機模式中顯示的文字。
- **背景燈**

設定內部螢幕的背光顯示時間。
- **螢幕對比度**

按 [◀(,)▶] 可以設定外部LCD螢幕的對比度。
- **資訊提示視窗**

開啓功能表之前，預覽選定功能表的目前狀態。其狀態顯示在螢幕底部。
- **功能表顏色**

從各種組合中選取所需的機能表顏色。



設定 [功能表5]

外螢幕顏色 [功能表5-3-2]

- **我的顯示**：您可以設定按「向上/向下」鍵時出現的動畫。
- **顯示時間**：您可以設定捲動外部 LCD 時的顯示時間。
- **亮度**：您可以設定捲動外部 LCD 時的亮度。
- **字體顏色**：您可以設定外部 LCD 的字型色彩。

語言 [功能表5-3-3]

變更手機顯示文字的語言。此操作亦會影響語言輸入模式。

通話設定 [功能表5-4]

您可以在設定功能表中按[選擇]來設定通話相關功能表。

來電轉接 [功能表5-4-1]

來電轉接服務可讓您將撥入的語音電話、傳真電話和數據電話轉接到另一個號碼。詳細資訊請洽詢系統供應商。

- **轉接所有語音來電**
無條件轉接語音電話。
- **正在通話時轉接來電**
線路繁忙時轉接語音電話。
- **無人接聽時轉接來電**
無人接聽時轉接語音電話。
- **無網路或關機時轉接來電**
關機或不在服務區域內時轉接語音電話。
- **轉接所有數據通訊**
無條件轉接至連接一個含電腦連線的號碼。



- **轉接所有傳真通訊**
無條件轉接至連接一個傳真的號碼。
- **取消全部轉接**
取消所有來電轉接服務。

子目錄

來電轉接功能表內含下列子功能表。

- 啓動

啓用相關服務。

語音信箱

轉接至語音信箱。此功能未在轉接所有數據通訊和轉接所有傳真通訊功能表中顯示。

其他號碼

輸入欲轉接號碼。

常用號碼

可查看最近轉接的5個號碼。

- 取消

停用相關服務。



- 查詢狀態

查看相關服務狀態。



設定 [功能表5]

接聽模式 [功能表5-4-2]

- **翻蓋接聽**
如選用此功能表，則只能使用翻開折蓋方式接聽來電。
- **任意鍵接聽**
如果選用此功能表，則可以按  [結束/電源] 以外的按鍵接聽來電。
- **按發送鍵接聽**
如果選用此功能表，則只能以按  [發送] 鍵的方式接聽來電。

發送號碼 [功能表5-4-3]

(取決於網路和您所申請的服務)

- **開**
提供手機號碼給對方。您的手機號碼會顯示在受話者的手機上。
- **關**
不顯示您的手機號碼。
- **網路設定**
如選取此項目，則可以根據您撥打的線路提供手機號碼，如線路1或線路2。




來電等候 [功能表5-4-4] (取決於網路)

- **啓動**
如果選取啓動，可以接聽待接來電。
- **關閉**
如果選取關閉，則無法識別待接來電。
- **查詢狀態**
顯示來電等候的狀態。

分鐘提示 [功能表5-4-5]

如果選取**開**，通話時，手機將在每分鐘發出嗶聲，用以提示您通話時間。

聲控撥號 [功能表5-4-6]

- **自動**：任何時候，您只要翻開折蓋，即可進入語音撥號。
- **手動**：按  住向下鍵即進入語音撥號模式。

自動重撥 [功能表5-4-7]

- **開**
啓用此功能時，手機會在撥號失敗後自動重撥。
- **關**
手機會不在通話失敗後自動重撥。



設定 [功能表5]

現用電話線路 [功能表5-4-8]

只有當服務供應商支援**雙線路服務時**，才可使用這項功能。在此服務下，您的手機可登記兩個獨立的電話號碼。這項功能可讓您選擇目前使用的手機號碼。如果您的服務供應商可支援這項功能，則螢幕上將顯示以下目錄。

1. **線路1**：選擇線1為目前的手機號碼。
2. **線路2**：選擇線2為目前的手機號碼。

封閉用戶群組 [功能表5-4-9] (取決於網路)

使用此功能可以限制手機撥出屬於某個用戶群組的號碼。當使用此功能時，每個撥出的電話會連接一個群組目錄，如果已經指定一個群組目錄，他將適用於所有撥出電話。如果沒有指定群組目錄，網路會使用優先目錄（一個儲存在網路中的特定目錄）。

 
- 預設** : 啓用與網路商一致的預設群組。
- 設定** : 設定選取的封閉用戶群組索引。
- 編輯** : 編輯封閉用戶群組名稱和封閉用戶群組索引。
- 刪除** : 刪除選取的封閉用戶群組。
- 刪除全部** : 刪除所有封閉用戶群組。



保密設定 [功能表5-5]

需要PIN碼 [功能表5-5-1]

在此功能表中，您可以設定手機在電源開啓時需要輸入SIM卡的PIN 碼。如果啓用此功能，您將需要輸入PIN碼。

1. 在保密設定功能表中選取需要PIN 碼，然後按  [選擇]。
2. 設定開啓或關閉。
3. 如果要變更此設定，則在開機時需要輸入PIN 碼。
4. 如果輸入錯誤的PIN 碼超過3次，手機將被鎖定。一旦PIN碼被鎖定，您需要輸入PUK碼。
5. 您最多可以輸入PUK碼10次。如果輸入錯誤的PUK碼超過10次，就無法將手機解除鎖定。請洽詢系統供應商。

手機鎖 [功能表5-5-2]

使用安全密碼可避免他人擅用您的手機。如果將手機鎖定設為開，每次開機時手機均會要求輸入安全密碼。如果將手機鎖定設為「自動」，手機只會在您更換SIM 卡時才要求輸入安全密碼。

通話限制 [功能表5-5-3]

通話限制服務能防止手機撥出或接收特定類型的電話。此功能需要限制通話密碼。您可以查看以下子功能表。

- **所有撥出電話**
限制撥出任何電話。
- **撥出國際電話**
限制撥出任何國際電話。
- **國際漫遊時撥打電話**
除原用網路外，限制撥出任何國際電話。



設定 [功能表5]

- **所有來電**
限制任何來電。
- **國際漫遊時來電**
漫遊時限制任何來電。
- **全部取消**
取消所有通話限制。
- **更換密碼**
變更通話限制密碼。

各主功能表的子功能表:

- **啓動**
要求網路啓用通話限制。
- **取消**
停用選取的通話限制。
- **查詢狀態**
檢查是否限制通

固定撥號 [功能表5-5-4] (取決於SIM)

限制手機只可撥打特定的電話號碼。這些號碼受PIN2 密碼保護。

- **啓動**
限制手機只可撥打特定的電話號碼。
- **取消**
停用固定撥號功能。




• 號碼列表

查看設定為固定撥號的號碼清單。

更改密碼 [功能表5-5-5]

PIN是個人身份號碼的縮寫，可防止他人擅用手機。

可以變更的密碼：**PIN碼**、**PIN2碼**、**安全密碼**。

1. 如要變更安全密碼/PIN/PIN2密碼，請輸入原始密碼，然後按  [確認]。
2. 輸入新的安全密碼/PIN/PIN2密碼，然後加以確認。

網路設定 [功能表5-6]

選取自動或手動登入的網路。通常，網路的選擇會設為**自動**。

自動 [功能表5-6-1]

如果選擇自動模式，手機會自動搜尋並選擇網路。選擇**自動**後，即使電源關閉後再重新啟動，手機也會設定為**自動**。

手動 [功能表5-6-2]

手機將尋找可用的網路清單，然後顯示在螢幕上。您可以選取所要使用的網路，但這個網路必須與您的主網路商之間有漫遊協定。如手機無法存取該選取的網路，您仍可選擇其他網路。如果關機，手機會重設為**自動**。

優先網路 [功能表5-6-3]

您可以設定優先登入的網路清單，手機會先嘗試登入該網路，然後再嘗試登錄到其他網路。此清單是透過手機的已知網路預定清單而建立的。

恢復初始設定 [功能表5-7]

啟用所有原廠預設值。必須輸入安全密碼才能啟用此功能。



記事簿 [功能表6]

行程表[功能表6-1]

進入此功能表，行程表即顯示。在螢幕最上方，有日期區。

另外，在螢幕底部，有圖示區(行程表、備忘錄)。每次變更日期時，行事曆就會據此進行更新。且該特定日期會用方框游標加以標示。如果在行事曆下方指示列出現該日期，則表示當日記有行程或備忘錄。此功能有助於提醒您行程或備忘錄。如您為記事設定此項功能，手機到時將會發出鬧鈴聲。

變更年月日。

按 鍵	說 明	按 鍵	說 明
	每年		每週
	每月		每天

附註

- 開機後才能使用此功能。





新增 [功能表 6-1-1]

最多可以容納20則記事，每則記事最多可以編輯39個字元(中文則為21個字元)。



- **行程表**

運用可使用的按鍵輸入標題、行程時間、重複、鬧鈴。


- **備忘錄**

1. 按  [選擇] 選取**新增**。
2. 按**備忘錄**。
3. 輸入備忘事項，然後按  [確認]。

瀏覽 [功能表6-1-2]

顯示所選日期的備忘錄。用於瀏覽記事清單。如果為記事設定鬧鈴，鬧鈴圖案會顯示是否有設置鬧鈴。同時，如果按  [選擇]，則可以看到詳細的記事內容。按  [選項] 可刪除、編輯選取的記事。

查看全部 [功能表6-1-3]

顯示您設定的所有記事。使用瀏覽記事清單。您可以按  [選項] 來使用與瀏覽 相同的功能表。

刪除已過行程 [功能表6-1-4]

刪除已收到提醒的舊行程。

全部刪除[功能表6-1-5]

刪除所有記事。



記事簿 [功能表6]

電話簿 [功能表6-2]

1. 要使用**電話簿**，請在待機模式下按 [電話簿]。
2. 要使用**電話簿**，請在待機模式下按 [功能表]，然後選擇**公事包**。

尋找[功能表6-2-1] (使用電話簿撥號)

1. 在待機模式下，按 [電話簿]。
2. 按 [選擇] 以**尋找**。
3. 輸入要搜尋的電話號碼或電子郵件地址所屬姓名，或選擇「列表」以查看電話簿。
4. 輸入要搜尋的姓名或號碼之首個字母可進行即時搜尋。
5. 如果要編輯、刪除、複製項目或將聲控設定新增到項目，請選擇 [選項]。將顯示下列功能表。
 - **編輯** : 按 [確認] 可以編輯姓名、號碼、電子郵件及傳真。
 - **寫訊息** : 找到所要的號碼後，您可直接寫訊息給對方。
 - **複製** : 將選取電話項目從SIM卡複製到手機或從手機複製到SIM卡。
 - **聲控** : 您可以對項目新增聲控設定或變更聲控內。
 - **主要號碼** : 您可以從 - 用的行動電話、住家電話或公司電話中選擇一個主號碼。如已設定此號碼，主號碼會先顯示。
 - **刪除** : 刪除項目。



新增 [功能表6-2-2]

使用此功能可以新增電話到電話簿。

手機記憶容量為200筆。SIM卡記憶容量會隨系統供應商而異。您也可以將20個名稱儲存在手機記憶體，而將其他名稱儲存在SIM卡。名稱數量取決於SIM卡記憶體容量。

1. 在待機模式下，按 [電話簿] 開啓電話簿。
2. 捲動至**新增**，使其反白，然後按 [選擇]。
3. 選取要儲存的記憶體：**SIM**或**手機**。如果設定為手機，則需要選擇主號碼。
 - a. 按 [確認] 以輸入姓名。
 - b. 按 [確認]，然後輸入號碼。
 - c. 按 [確認]。
 - d. 按 可設定項目所屬群組。
 - e. 按 ，， 可為項目設定名稱。接聽來電時，該名稱會顯示在螢幕上。
 - f. 如要新增聲控設定(附加語音)，請按 [是]。

附註

- 當您在電話簿中同時儲存文字與相片時，可隨時檢視任一張相片。

必須在2秒鐘內說出名稱，手機會要求您再說一次，以確定語音辨識的準確性。完成語音辨識後，聲控語音即已成功加上。



記事簿 [功能表6]

附註

- 只有主號碼能附加聲控設定。例如：如您變更主號碼，聲控設定會自動附加在變更的號碼上。這表示，您無法同時將語音附加在行動電話、公司、住家號碼上。
- 您可以替SIM卡的電話號碼新增聲控設定。如取出或更換SIM卡，可能會清除這些聲控設定。

來電群組 [功能表6-2-3]

每個群組可以列出最多20個成員。共有7個群組清單可供設定。

1. 在待機模式下，按 [電話簿]。
2. 捲動至來電群組，然後按 [選擇]，每個群組清單都會顯示。
3. 按 [選擇] 選取所要的群組名稱。

- **成員列表**

顯示選定的群組成員。

- **群組來電鈴聲**

您可指定群組成員的來電鈴聲。

- **群組標示**

您可針對群組選取圖片。

- **新增組員**

新增群組成員。每個群組成員不得超過20個。

- **移除組員**

從群組成員清單中移除成員。但是，姓名與號碼仍然會保留在電話簿中。



- **重新命名**

變更群組名稱。

快速撥號 [功能表6-2-4]

您可指定 至 中任一按鍵，作為姓名清單項目的快速撥號代碼。按此按鍵2-3 秒便可直接撥出電話。

1. 在待機模式下，按 [電話簿] 開啓電話簿。
2. 捲動到快速撥號，然後按 [選擇]。
3. 如果您想新增快速撥號，請選取<空白>。然後，您可以搜尋電話簿中的姓名。
4. 選取已配置快速撥號的姓名，然後選取更改或刪除來編輯姓名。

- **更改**

替速撥鍵配置新電話號碼。

- **刪除**

移除撥號鍵已配置的電話號碼。

語音列表 [功能表6-2-5]

查看所有包含聲控設定的電話號碼。使用 與 選取電話號碼並按 [選項]後，您可以看到下列子功能表。

- **播放**：播放附加在電話號碼上的聲控語音。
- **變更**：變更聲控語音。
- **刪除**：刪除聲控語音。
- **撥號**：選取此功能表可撥出電話。



記事簿 [功能表6]

設定 [功能表6-2-6]

1. 在待機模式下按 [電話簿]。
2. 捲動到**設定**，然後按 [選擇]。
 - **記憶設定**
捲動至**記憶設定**，使其反白，然後按 [選擇]。
 - 如果選取自選，在新增項目時，手機會要求您提供儲存位置。
 - 如果選取SIM卡或手機，手機會將項目儲存到SIM卡或手機。
 - **查找方式**
捲動選取查找方式，然後按 [選擇]。
 - 如果選取自選，手機會要求您提供搜尋方式。
 - 如果選取**姓名**或**號碼**，手機會依姓名或號碼搜尋項目。
 - **查看選項**
捲動至查看選項，使其反白，然後按 鍵 [選擇]。
 - **姓名和號碼**：設定僅顯示姓名的電話號碼清單。
 - **圖片電話本**：設定含有字元與相片資訊的電話號碼清單。



全部複製 [功能表6-2-7]

您可以將項目從SIM卡記憶體複製/移到手機記憶體，反之亦然。

1. 在待機模式下，按 [電話簿] 開啓電話簿。
2. 捲動至全部複製，然後按 [選擇] 進入此功能表。
 - **SIM卡到話機**：將項目從SIM卡複製到手機記憶體。
 - **話機到SIM卡**：將項目從手機記憶體複製到SIM卡。
3. 您可以查看下列子功能表。
 - **保留原始號碼**：複製時，保留原始號碼。
 - **清除原始號碼**：複製時，清除原始號碼。

全部刪除 [功能表6-2-8]

刪除SIM卡、手機及聲控撥號的所有項目。除語音外，此功能需要輸入安全密碼。

1. 在待機模式下按 [電話簿] 並選取全部刪除，然後按 [選擇]。
2. 再選取要清除的記憶體。
3. 輸入安全密碼，然後按 [確認] 或 [返回]。



記事簿 [功能表6]

資訊 [功能表6-2-9]

- **特別服務號碼**

使用此功能可進入網路商所提供的服務清單(若SIM卡支援的話)。

1. 在待機模式下，按 [電話簿] 開啓電話簿，然後選取資訊。
2. 捲動到特別服務號碼，然後按 [選擇] 進入。
3. 可用服務名稱將會顯示。
4. 使用 與 選取服務。按 [發送]。

- **記憶體狀態**

此功能可查看電話簿中可使用和已使用的容量。

1. 在待機模式下，按 [電話簿] 開啓電話簿。按 [選擇] 選取資訊。
2. 捲動至記憶體狀態，然後按 [確認]。

- **本機號碼 (取決於SIM)**

查看SIM卡內的本機號碼。





 
遊戲 [功能表7-1]

手機為您提供了各種遊戲。

附註


 



- 控制鍵會因遊戲而異。但是，每種遊戲會簡單介紹主要控制鍵。其餘按鍵功能如下所示。

[常用鍵功能]

-  : 遊戲功能表
-  : 返回
-  : 暫停或繼續玩遊戲

計算機 [功能表7-2]

包含標準功能，如 +、-、x、÷：加、減、乘及除。

1. 按下數字鍵輸入數字。
2. 使用導覽鍵選取計算符號。
3. 然後輸入數字。
4. 按下  [結果] 查看結果。
5. 按下[清除]或輸入數字以重複上述程序。
6. 使用  鍵清除任何數字或符號。
7. 如果按下鍵 ，可以輸入負數。如果按下鍵 ，可以輸入小數。
8. 要結束計算機，請按下  [返回]。



娛樂與工具[功能表7]

我的文件夾 [功能表7-3]

可查看下載的相片與聲音。您可以把它們設定為底色圖案或鈴聲。您可以查看、聆聽、刪除或重新命名已下載的資料。

圖片 [功能表7-3-1]

鈴聲 [功能表7-3-2]

各主功能表的子功能表

- **編輯標題**
編輯每個下載內容的標題。
- **寫訊息**
建立具有圖片或鈴聲的簡訊/多媒體訊息(取決於媒體類型)。
- **設為待機畫面/設定鈴聲**
將下載的鈴聲或圖片設定為待機圖片或來電鈴聲。
- **刪除**
刪除個別已下載的內容。
- **全部刪除**
刪除所有已下載的內容。



作曲家 [功能表7-4]

輸入想要使用的鈴聲音樂。進入此功能時，首先將會播放以前輸入的鈴聲。輸入新鈴聲或編輯現有鈴聲：

1. 輸入所需的音符。(C¹²⁰⁰~F⁷²⁰)：CDEFGAB)
2. 調整音符特性，請執行下列操作：
 - **持續時間**：具 $\frac{1}{2}$ 級縮短與 $\frac{1}{2}$ 級延長的音符或休止符長度。
 - **休止符**：插入與前面音符長度相同的休止符。
 - **八度音階**：設定新音符的八度音。
 - **高階音**：音符升調。

單位換自器 [功能表7-5]

轉換測量單位。轉換單位類型共有4種：**長度**、**面積**、**重量**及**數量**。

1. 您可以按 [單位] 鍵選取四種單位類型的其中一種。
2. 使用 (←, →) 選擇標準值。
3. 按下 [上] 與 [下] 選擇要轉換的單位。
4. 您可以查看單位的轉換值。此外，您也可以按下 [.] 輸入小數。

時區設置 [功能表7-6]

您可以查看世界主要城市的時間。

1. 按 (←, →) 鍵選取該城市所屬時區。
2. 您也可以按下 [設定] 把您選取的城市時間設定為目前的時間。





娛樂與工具[功能表7]

語音備忘錄[功能表7-7]

語音備忘錄功能可容許您錄製多達10則語音記事，每則訊息最長20秒。

錄音 [功能表7-7-1]

1. 您可以在語音備忘錄功能表中錄製語音備忘錄，也可以在待機模式下按下 **C**。
2. 開始錄音後，將顯示錄製中的訊息與剩餘時間。
3. 如果您要結束錄音，請按下  [儲存]。
4. 鍵入語音備忘錄標題，按下  [確認]。

查看列表 [功能表7-7-2]

手機將顯示語音備忘錄清單。您可以播放與刪除錄製的語音備忘錄。

啓動紅外線[功能表7-8]

如果啓用此功能，便可以使用紅外線進行PC同步處理。您不能同時使用序列埠和紅外線功能。

PC Sync

PC Sync 是一套程式，可透過數據傳輸線在PC和手機間交換資料。詳情請參考光碟中的PC Sync Help 檔案指引。





本手機可支援以無線應用協定(WAP)為基礎的服務。您可存取您的開戶網路支援的服務。服務功能表可供您獲取各種資訊，例如新聞、天氣預報及航班時間表等。

[首頁\[功能表8-1\]](#)

連線到首頁。首頁是目前啓用之上網設定中定義的網站。若啓用的上網設定中未定義首頁，通訊系統商將為您定義一個首頁。

[書籤\[功能表8-2\]](#)

按下  [選擇] 存取可用選項，或按下  [返回] 結束。

- **連接**：連線至您選取的書籤。
- **新增**：您可以手動增加新的書籤。
- **修改**：修改選擇書籤的內容。
- **刪除**：從書籤刪除選取的書籤。

[Push 資訊\[功能表8-3\]](#)

使用Push 訊息的資訊可連線到特定網站。

[收信箱 \[功能表8-3-1\]](#)

閱讀或刪除Push 訊息。

- **資訊**：顯示接收到Push訊息的資訊。
- **下載**：您可以讀取或刪除Push訊息。
- **刪除**：您可以刪除選定的Push訊息。


[接收\[功能表8-3-2\]](#)

您可利用這個選項設定是否要接收訊息。



行動網 [功能表8]

情景模式 [功能表8-4]

您最多可建立10種操作模式，而且每次只能啟動其中一種。捲動至您要操作模式，跟著按  以操作可用的功能選項。

- **啟動**

啟動所選取的WAP上網模式設定。

- **設定**

修改及變更所選取之上網設定的WAP設定。

- **首頁**

輸入作為首頁的網站位址(URL)。您不需要輸入「http://」這個網址的前置字元，WAP 瀏覽器會自動加入。

- **連接方式**

設定傳送資料服務。

- **數據**

- **GPRS**

- **資料設定**

僅在您選取資料設定作為連接方式服務時才會出現。

IP 地址：輸入要使用的WAP網路閘道IP 位址。

撥叫號碼：輸入存取WAP網路閘道所需撥接的電話號碼。

用戶名：用於撥接伺服器(非WAP網路閘道)的用戶身份。

密碼：撥接伺服器 (非WAP網路閘道) 識別身份所需的密碼。

通話類型：選取資料通話類型：類比 或數位 (ISDN)。

連接速度：資料連線速度：9600或14400。

閒置時限：您需要輸入逾時時間。若超過設定時限後，將自動停用WAP導覽服務。



- **GPRS設定**

僅在選擇GPRS作為載送服務時，才可使用這些服務設定。

IP 地址：輸入您要存取之WAP網路閘道IP位址。

APN：輸入GPRS的APN。

用戶名：APN伺服器的用戶身份。

密碼：APN伺服器所需的密碼。
- **顯示圖像**

選擇是否顯示WAP的圖像。
- **連接類型**

連線類型選項為自選連接或固定連續，視所用的網路閘道而定。

固定連續
可產生較高網路流量的一種確認傳輸機制。

自選連接
一種非確認(無連接)服務。
- **安全設定**

根據所用的網路閘道連接埠，您可以選擇啟動或關閉。
- **重新命名**

編輯操作模式名稱。
- **刪除**

刪除操作模式。
- **新增**

以手動方式新增操作模式。



行動網 [功能表8]

- **郵件伺服器**

以手動方式新增操作模式。

- **連接**

連接至您設定的電子郵件伺服器。

- **新增電子郵件地址**

編輯電子郵件地址。

[進入URL \[功能表8-5\]](#)

直接連接至想要瀏覽的網站。您需要輸入特定的URL。

[緩存 \[功能表8-6\]](#)

移除快取記憶體儲存的內容或變更快取模式。

[清空緩存 \[功能表8-6-1\]](#)

移除快取記憶體儲存的內容。

[查詢緩存 \[功能表8-6-2\]](#)

設定是否要檢查快取記憶體。

[安全認證 \[功能表8-7\]](#)

顯示可用憑證清單。

[重新設定 \[功能表8-8\]](#)

重設操作模式以恢復原始設定。

[瀏覽器版本 \[功能表8-9\]](#)

顯示WAP瀏覽器版本。



如您已上線，則可以查看以下功能表。

- **首頁**
請參閱[功能表8-1]。
- **更新**
重新載入目前網頁。
- **書籤**
請參閱[功能表8-2]。
- **儲存為書籤**
將某個網站儲存為書籤。
- **簡訊**
使用Wap連時時，您仍可查閱簡訊。
- **Push資訊**
請參閱[功能表8-3]。
- **轉到URL**
移到想要瀏覽的網站。在此功能表中，您還可以編輯網址。
- **轉到電子郵件伺服器**
移到您指定的電子郵件伺服器。
- **清除緩存**
移除快取記憶體儲存的內容。
- **儲存圖片**
儲存WAP提供的圖像。



Java [功能表9]

應用程式 [功能表9-1]



Java功能表選項

捲動到應用程式並選取選項。

- 1. 開啓** : 啓動選定的MIDlet。
- 2. 刪除** : 刪除選定的MIDlet。
- 3. 更新** : 存取伺服器與更新選定的MIDlet。
- 4. 資訊** : 顯示關於MIDlet的資訊。
- 5. 手機設定** : 可讓您設定java遊戲的背光與聲音。

下載 [功能表9-2]

請參閱[功能表7-2]。您可以編輯與設定MIDlet伺服器位址。使用WAP瀏覽器下載MIDlets，並將其儲存在手機中。您也可以查看儲存在應用程式 螢幕上的MIDlets清單。


記憶體狀態 [功能表9-3]

顯示可用於安裝遊戲與應用程式的記憶體大小。您也可以查看手機的整體記憶體狀態。



JAVA™是Sun Microsystems, Inc. 的商標。



最多可設定 10 個經常在收藏夾中使用的功能表。您可以按  直接連接此功能表。

如果您要設定收藏夾中的功能表，請選擇清單中的 <空>。如果功能表已設定，將顯示下列選項：

- **選擇** : 啓用已設定的功能表。
- **更改** : 變更功能表。
- **刪除** : 刪除已設定的功能表。
- **全部刪除** : 刪除在收藏夾中已設定的所有功能表。
- **訊息** : 檢視已設定功能表的資訊。



配件

手機配有多種配件。您可依據個人需要選擇所需配件。



標準電池



免持耳機

連接電話後可便攜操作。



旅行充電器

您可在離家或辦公室時使用充電器充電。



項鍊型吊飾



數據傳輸組件/光碟

您可使用數據傳輸組件連接PC進行通訊。

昭示

- 請務必使用原裝 LG 配件。
- 不使用原裝配件可能會導致保固失效。
- 以上附件可因區域不同而有所差異，詳情可諮詢我們的區域服務商或代理商。



使用本手機時，請務必遵循以下的基本安全注意事項。

- 請勿用潮濕的手去碰觸充電器接頭。
- 請勿自行拆開本手機。(需要維修時，請交由合格的服務技術人員處理。)
- 手機應遠離電視、收音機或個人電腦等電子設備。
- 手機應遠離熱源，例如散熱器或電鍋附近。
- 切勿拋擲本手機
- 避免讓手機承受機械性震盪或撞擊。
- 若用包裝紙或保鮮紙包裹本手機，手機的表面塗層可能會受損。
- 請使用乾布來清潔手機外部。(請勿使用如苯、稀釋劑或酒精等溶劑。)
- 請勿讓本手機經常接觸煙霧或塵埃。
- 請勿讓手機接近信用卡或其他附有磁帶的卡，否則可能損壞磁帶內的資訊。
- 請勿讓硬物碰撞顯示幕，以免損壞機身。
- 請勿讓手機受潮或弄濕。
- 使用如免持耳機等配件時請份外小心。如無必要，請勿觸摸天線。



手機的維護

電池保養

- 電池充電前，無須完全放電。與其他系統不同的是，本電池的性能不會受到記憶效應的影響。
- 您只可使用LG電池和充電器。LG充電器是經過特別設計為發揮電池最長壽命而設計的。
- 請勿自行拆開電池造成電池短路。
- 請保持電池的金屬接觸面的清潔。
- 當電池無法再發揮令人滿意的效能時。請更換電池。此電池可重複充電數百次，直到它需要被更換為止。
- 如果電池經過長時間未使用，應重新充電以發揮最大的效力。
- 請勿將電池充電器至於日光下曝曬，或在高濕度下使用，例如在浴室內。
- 請勿將電池保存在太熱或太冷的地方，如此可能會損耗電池的效能。



一般資料

產品名稱 : G7100

系統 : GSM 900 / DCS 1800

環境溫度

最高 : +55 °C

最低 : -10 °C



備忘錄

備忘錄





備忘錄

ENGLISH

GPRS Phone

USER'S MANUAL

MODEL: G7100

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.

For Your Safety



All radio transmitters carry risks of interference with electronics in close proximity.



Mobile Phones must be switched off at all times in an aircraft.



Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.



Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.



Minor interference may affect TVs, radios, PCs, etc.



Do not hold the phone in your hand while driving.



Do not dismantle the phone or battery.



Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.



Do not touch the charger or phone with wet hands.



For Your Safety



For your safety, use ONLY specified ORIGINAL batteries and chargers.

Please note:



Batteries should be disposed of in accordance with relevant legislation.



Only use ORIGINAL accessories to avoid damage to your phone.



Emergency call may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls.



LCD indicator can be damaged if you turn a flip excessively. For details, please see P.11.

Important Information

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model G7100 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).
- The highest SAR value for this model phone which tested by DASY4 for use at the ear is 1.11W/kg (1g).



Contents

Overview

Part of the Phone	10
• Main body of the Phone	10
• Outside of the Phone	12
Key Description	13
• Side of the Key	14
• Letter Keys	15

Display Information

Display Information	16
• On-Screen Icons	16

Getting Started

Installation	17
• Inserting the SIM Card	17
• Removing the SIM Card	17
• Installing the Battery	18
• Charging the Battery	18
• Disconnecting the charger	19
Making and Answering Calls	20
• Making a call	20
• International Calls	20
• Making a call using the Phonebook	20

Additional Functions

In call Menu	21
• 1 During a call	21
• 2 Multiparty or Conference Calls	23



Access Codes	26
• PIN code (4 to 8 digits)	26
• PIN2 code (4 to 8 digits)	26
• PUK code (4 to 8 digits)	26
• PUK2 code (4 to 8 digits)	26
• Security code (4 to 8 digits)	26

Accessing the Menu

Menu Tree	27
Messages [Menu 1]	29
• Write short message [Menu 1-1]	29
• Write multimedia message [Menu 1-2]	32
• Inbox [Menu 1-3]	36
• Outbox [Menu 1-4]	37
• Voice mail [Menu 1-5]	39
• Info service [Menu 1-6]	39
• Templates [Menu 1-7]	41
• Settings [Menu 1-8]	42
Call register [Menu 2]	44
• Missed calls [Menu 2-1]	44
• Received calls [Menu 2-2]	44
• Dialed calls [Menu 2-3]	44
• Delete recent calls [Menu 2-4]	44
• Call charges [Menu 2-5]	44
• GPRS information [Menu 2-6]	47
Profiles [Menu 3]	48
• Vibrate only [Menu 3-1]	48
• Quiet [Menu 3-2]	48
• General [Menu 3-3]	48



Contents

• Loud [Menu 3-4]	48
• Headset [Menu 3-5]	48
• Car [Menu 3-6]	48
Camera [Menu 4]	51
• Take picture [Menu 4-1]	51
• Take in modes [Menu 4-2]	52
• Take continuously [Menu 4-3]	52
• My album [Menu 4-4]	53
• Settings [Menu 4-5]	54
Settings [Menu 5]	55
• Alarm clock [Menu 5-1]	55
• Date & Time [Menu 5-2]	55
• Phone settings [Menu 5-3]	56
• Call settings [Menu 5-4]	57
• Security settings [Menu 5-5]	62
• Network settings [Menu 5-6]	64
• Reset settings [Menu 5-7]	65
Organiser [Menu 6]	66
• Scheduler [Menu 6-1]	66
• Phonebook [Menu 6-2]	68
Fun & Tools [Menu 7]	75
• Games [Menu 7-1]	75
• Calculator [Menu 7-2]	75
• My folder [Menu 7-3]	76
• Melody composer [Menu 7-4]	77
• Unit converter [Menu 7-5]	77
• World time [Menu 7-6]	77
• Voice recorder [Menu 7-7]	78
• Activate IrDA [Menu 7-8]	78

 


Internet [Menu 8]	79
• Home [Menu 8-1]	79
• Bookmarks [Menu 8-2]	79
• Push messages [Menu 8-3]	79
• Profiles [Menu 8-4]	80
• Go to URL [Menu 8-5]	83
• Cache settings [Menu 8-6]	83
• Security certification [Menu 8-7]	83
• Reset profiles [Menu 8-8]	83
• Browser version [Menu 8-9]	83
On browsing menu	84
Java [Menu 9]	85
• Applications [Menu 9-1]	85
• Download [Menu 9-2]	85
• Memory status [Menu 9-3]	85
Favorites [Menu 10]	86
Accessories	87
Care and Maintenance	88
Technical Data	90



 
Part of the Phone

Main body of the Phone

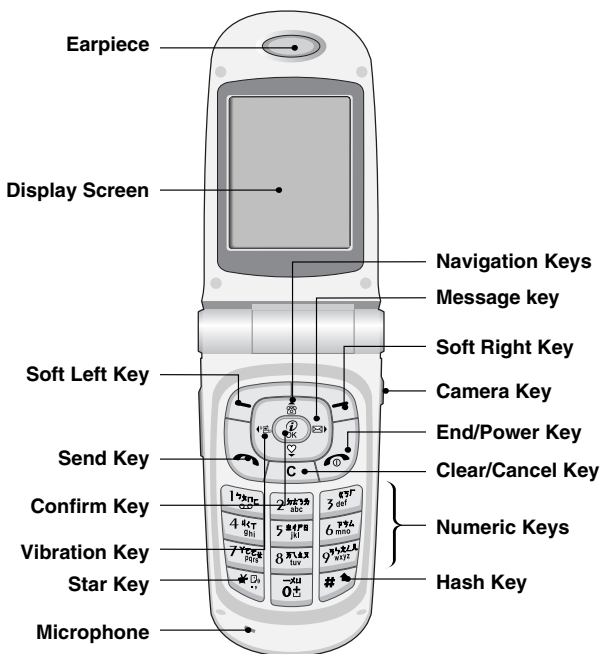



Swivel flip of the phone

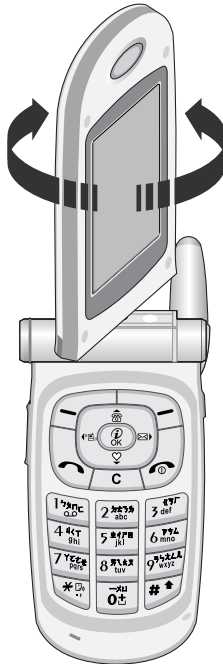 


You can rotate LCD clockwise an angle of 90 degrees and counter-clockwise an angle of 180 degrees. However, if you turn it by force, it can cause serious damage.



Part of the Phone

Outside of the Phone

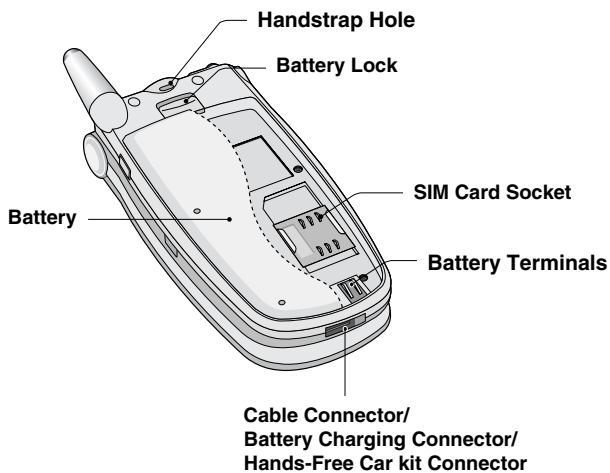




 





Key Description



 

The following shows key components of the phone.

Keypad Description



Key	Description
	<p>Soft Left Key / Soft Right Key Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p>Vibration key You can activate the vibration directly by holding down this key.</p> <p>Message key You can go to Message menu (Inbox, Memory status, Scheduler or Alarm) directly.</p> <p>Navigation Keys Used to scroll through name, phone numbers, menus or setting options. When you press down key, you can view Favorites menu list.</p> <p>WAP Hot key (=Confirm key) If you press this key for a while, you can connect to WAP directly.</p>
	<p>Send Key You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed numbers.</p>
	<p>Numeric Keys These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time.</p> <ul style="list-style-type: none"> Used to call your voicemail box by . Used to call for international call by . Used to call Speed dials by from  to .
	<p>END/PWR Key Used to end or reject a call. This key is also used as Power Key by pressing this key for a few seconds.</p>



Key Description

Key	Description
	You can delete the characters, go back the menu. In addition, you can view voice memo list when you press this key shortly in a standby mode.
	If you press this key for a long time, you can activate voice recognition.

Side of the Key

Key	Description
	Up/Down Side Key On closing a flip, when you press this key sequently, time, date, my display, and greeting note is displayed respectively. If you press this key once, time is displayed. It will show up depending on setting "Show time".
	Camera key This key is used to take a picture and save it.



Letter Keys

Each key can be used for several symbols. There are shown below.















 



Key	Description
	., / ? ! - : ' " 1
	A B C 2 Ä Å Æ Ç a b c ä å æ ç
	D E F 3 Ë È É Ê d e f ë è é ê
	G H I 4 İ ï Î Ñ Ğ g h i ì í î ñ
	J K L 5 j k l
	M N O 6 Ñ Ö Ø Ò Ó Ô Õ Æ m n o ñ ö ø ò ó ô õ æ
	P Q R S 7 B Ş p q r s B ş
	T U V Ü Ú Û Ü t u v 8 ü ú û ü
	W X Y Z w x y z 9
	[space] 0



Display Information

 
The screen displays several icons. There are described below.

On-Screen Icons

Icon/Indicator	Description
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls – If you subscribe to the Two Line Service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You have received an push message.
	You can view your schedule.
	All audible signals are turned off.
	General menu in profile.
	Loud menu in profile.
	Silent menu in profile.
	Headset menu in profile.
	Car menu in profile.
	You can divert a call.



 
1. Inserting the SIM Card

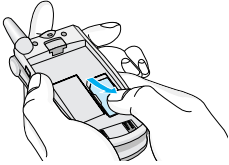

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right.

2. Removing the SIM Card

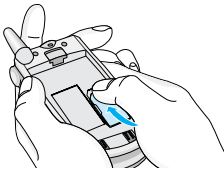

Follow the steps below to Remove the SIM card.

1. Remove the battery if attached.
2. Take out the SIM card from the slot.

 
Notice

- Removing the battery from the phone whilst it is switched on may cause it to malfunction.
- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.

 


Installation

3. Installing the Battery

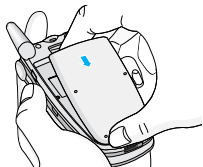

 
1. Position the lugs on the bottom of the battery into the retaining holder.

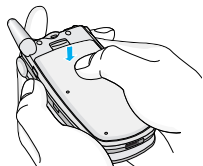

 
2. Then push to the half of the battery into position.

4. Charging the Battery

To connect the travel adapter to the phone, you must have installed the battery.

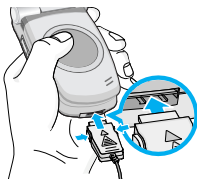

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.

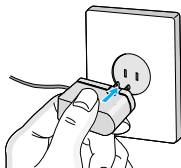

2. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.





Warning

- Do not force the connector as this may damage the phone and/or the travel adapter.

5. Disconnecting the charger



Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

Note

- Ensure the battery is fully charged before using the phone.
- Do not remove your battery or the SIM card while charging.
- The moving bars of battery icon will stop after charging is complete.

Note

- If the battery does not charge,
- switch the phone off.
 - ensure the battery is correctly fit.



Making and Answering Calls

Making a call

1. Key in phone number including the area code. If you want to delete number, press **C**.
2. Press to call the number.
3. Press to end the call.

International Calls

1. Press and hold the key for the international prefix.
“+” character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

Making a call using the Phonebook



1. In standby mode, press [Names].
2. When the menu is displayed, you select Search by pressing .
3. If you find out the desired item through searching by a name or a number, press to call.




 
The menu displayed on the handset screen during a call is different to the default main menu reached from the idle screen, and the options are described here.

1 During a call



1-1 Putting a Call on Hold


When a call is made or answered, press the  [Send] to place it on hold. When a call is held, press the  [Send] to make it active.

1-2 Making a Second Call

You can get a dial number from phonebook to make a second call. Press  [Names] then select **Search**. To save the dial number into phonebook during call, press  [Names] then select **Add new**.

1-3 Swapping Between Two Calls


To switch between two calls, select  [Options], then select **Swap** or just press  [Send] key.

You can make one of two calls focused by pressing up/down arrow key. If you want to end one of two calls, make the call you want to end focused, then press  [End] key when the call you want to end is focused.






In call Menu

1-4 Answering an Incoming Call



To answer an incoming call when the handset is ringing, simply press the  [Send] key.

 

The handset is also able to warn you of an incoming call while you are already in a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as Call Waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting [Menu 5-4-4].

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing  [Send] or by selecting  [Answer], then **Hold & Answer**.



You can end the current call and answer the waiting call by selecting  [Menu], then **End & Answer**.

1-5 Rejecting an Incoming Call

When not in a call you can reject an incoming call without answering it by simply pressing the  [End] or  for a long time when the flip is closed.

When in a call you can reject an incoming call by pressing the  [Menu] key and selecting **Multiparty/Reject** or by pressing  [End] key.


1-6 Muting the Microphone

You can mute the microphone during a call by pressing the  [Options] key then selecting **Mute**. The handset can be unmuted by pressing the  [Unmute].


When the handset is muted, the caller cannot hear you, but you can still hear them.



1-7 Switching DTMF Tones on During a Call

To turn DTMF tones on during a call, for example, to allow your handset to make use of an automated switchboard, select  [Options], then **DTMF On**. DTMF tones can be turned off the same way.

1-8 Calling up Messages and SIM Tool kit main menu

The Messages and SIM Tool kit main menu options can be reached from the in-call menu by selecting  [Options]. SIM Tool kit menu is shown only when SIM in the handset supports SIM Tool kit service.

2 Multiparty or Conference Calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.


 
A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call.

The maximum callers in a multiparty call is five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.

 


In call Menu

 
2-1 Making a Second Call

You can make a second call while you are already in a call. To do this, enter the second number and press  [Send]. When you get second call the first call is automatically put on hold. You can swap between calls by selecting  [Options] then **Swap**.


2-2 Setting up a Multiparty Call

You can connect a call on hold to the currently active call to form a multiparty call by selecting  [Options] then **Multiparty/Join all**.


2-3 Putting the Multiparty Call on Hold

To put a multiparty call on hold, select  [Options] then **Multiparty/Hold all**.

 

2-4 Activate the Multiparty Call on Hold

To make a multiparty call on hold active, select  [Options] then **Multiparty/Join all**.

2-5 Adding Calls to the Multiparty Call


To join an active call to the held multiparty call, select  [Options] then **Multiparty/Join all**.

2-6 Displaying Callers in a Multiparty Call


To scroll through the numbers of the callers who make up a multiparty call on the handset screen, press  and  keys.




 
2-7 Putting a Member of a Multiparty Call on Hold

To place one selected caller (whose number is currently displayed on-screen) of a multiparty call on hold, select  [Options] then **Multiparty/Exclude**.

2-8 A Private Call in a Multiparty Call

To have a private call with one caller of a multiparty call, display the number of the caller you wish to talk to on the screen, then select  [Options] and **Multiparty/Private** to put all the other callers on hold.

2-9 Ending a Multiparty Call

The currently displayed caller of a multiparty call can be disconnected by pressing the  [End] key. To end a multiparty call, press  [Options] then select **Multiparty/End** multiparty.

Selecting  [Options] then **Multiparty/End all**, will end all the active and held calls.



Access Codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using [Menu 5-5-5].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code** is set **On**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code** is set **Off**, your phone connects to the network directly without the request PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.

Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate “Reset settings” menu. The default number is “0000”.



1 Messages

- 1 Write short message
- 2 Write multimedia message
- 3 Inbox
- 4 Outbox
- 5 Voice mail
- 6 Info service
- 7 Templates
- 8 Settings



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call charges
- 6 GPRS information



3 Profiles

- 1 Vibrate only
- 2 Quiet
- 3 General
- 4 Loud

- 5 Headset
- 6 Car



4 Camera

- 1 Take picture
- 2 Take in modes
- 3 Take continuously
- 4 My album
- 5 Settings



5 Settings

- 1 Alarm clock
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 Reset settings



6 Organiser

- 1 Scheduler
- 2 Phonebook



Menu Tree



7 Fun & Tools

- 1 Games
- 2 Calculator
- 3 My folder
- 4 Melody composer
- 5 Unit converter
- 6 World time
- 7 Voice recorder
- 8 Activate IrDA



8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 Security certification
- 8 Reset profiles
- 9 Browser version



9 Java

- 1 Applications
- 2 Download
- 3 Memory status



10 Favorites



11 SIM Service



This menu depends on SIM and the network services.



This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

Write short message [Menu 1-1]

You can write and edit text message, checking the number of message pages.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write short message**.
3. To make text input easier, use T9. For details, see **How to use T9** (Page 33).
4. Press [Insert] to attach the followings.
5. If you want to set option for your text, or to finish your writing, press  [Options].

Note

- The phone which supports EMS release 5 is available to send colour pictures, sounds, text styles, etc.. The other party may not receive pictures, sounds or text styles you sent properly if the phone does not support such options.



Messages [Menu 1]

Insert

- **Symbol**

You can add special characters.

- **Picture**

You can insert the **Default** pictures or pictures in **My folder** that are available for short messages.

- **Sound**

You can insert sounds that are available for short messages.

- **Text templates**

You can use **Text templates** already set in the phone.

- **Phonebook**

You can add phone numbers or e-mail addresses in **Phonebook**.

- **Business card**



You can add your contact information to the message.



Options

- **Send**

Sends text messages.

1. Enter numbers of recipient.
2. Press  key to add more recipients.
3. You can add phone numbers in the phone book.
4. Press  after entering numbers.

- **Save**

Stores messages in Outbox.

- **Font**

You can select **Size** and **Style** of fonts.

- **Colour**

You can select **Colour** of foreground and background.

- **Alignment**

You can make the message contents aligned **Right**, **Centre** or **Left**.

- **Add T9 dictionary**

You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 languages**

Select a T9 input mode.

- **Exit**


If you press **Exit** while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.



Messages [Menu 1]

Write multimedia message [Menu 1-2]

You can write and edit multimedia messages, checking message size.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write multimedia message**.
3. You can create a new message or choose one of the multimedia message templates already made.
4. Press **Insert** to add **Symbol, Photo, Picture, Sound, Text template, Phonebook** or **Business card**.

Options

- **Preview**

You can preview multimedia messages you wrote.

- **Send**

You can send multimedia messages to multiple recipients, prioritise your message, and make it sent later as well.

- **Save**

You can save multimedia messages in the outbox or as templates.

- **Add slide**

You can add a slide before or after current slide.

- **Move to slide**

You can move to previous or next slide.

- **Delete slide**

You can delete current slides.



- **Set slide format**

- **Set timer**

- You can set timer for slide, text, picture and sound.

- **Swap text and picture**

- You can switch the position of picture and text of the message.

- **Remove media**

- You can remove pictures or sounds in the slide. This option can be shown only when any media exists.

- **Add T9 dictionary**

- You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 languages**

- Select a T9 input mode.

- **Exit**

- You can back to the Message menu.

A blue speech bubble icon with the word "Note" inside, pointing to the right.

Note

- If you select the picture (15K) on writing multimedia message, loading duration will take around 15 seconds at least. Furthermore, you can't activate any key during loading time. After 15 seconds, it is available to write multimedia message.



Messages [Menu 1]

How to Use T9

 
T9 allows you to input text quickly.

In T9, you only need to press the key with the corresponding letter once. This is based on a built-in dictionary to which you can also add new words.

• Writing words by using T9.

1. Start writing a word by using the keys to . Press each key only once for one letter.

To write for instance 'Girl', press , , . The characters that you enter appear blocked.

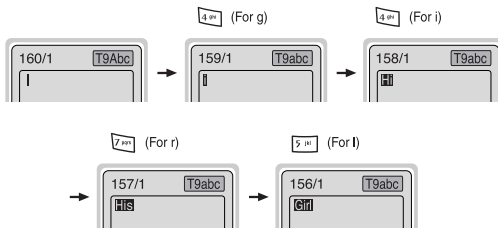

The word changes after each keystroke. Therefore you shouldn't pay too much attention to how the word appears on the display until you have pressed all the appropriate keys.


To delete a character to the left, press .

To insert several numbers, hold down and key in the numbers.


If you hold down, you can change the type of language. (You can also use options.)

 

Also, the phone supports three modes: **Predictive** (T9Abc, T9ABC, T9abc), **Multitap** (ABC, abc), **Numeric** (123). If you want to change a mode, press key.




Alternatively : Press  key and select insert symbols. Select the desired character and press **select**.

2. When you have finished writing a word, check whether the word is correct.


If the word is correct : Press  and write the next word.

If the word is not correct : Search by  ,  (**Previous** and **Next word**).

Alternatively : If there is no word you want you can add your own word.

Press  [Options] in the Predictive edit mode. Select Add T9 dictionary Menu. You can see the following.



3. To insert a punctuation mark, press  repeatedly until the desired mark appears.

T9 languages

- You can select T9 Languages by selecting Menu. In T9 mode, you can also select T9 Off menu. (Default is T9 On)




 


 
Messages [Menu 1]

Inbox [Menu 1-3]

You will be alerted when you have received messages. They will be stored in Inbox.

In Inbox, you can identify each message by icons. For detail, see the icon directive.

Icon directive


- [] Multimedia message
- [] Short message
- [] SIM message
- [] Read
- [] Notified multimedia message

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

* SIM message

SIM message means the message exceptionally stored in SIM card.

For notified multimedia message, you have to wait for downloading and processing of the message. For notification setting, see [Menu 1-8-2] for detail.

To read a message, select one of the messages by pressing .

Reply

You can reply to the sender.



Forward

You can forward the selected message to another party.

Return call

You can call back to the sender.

Delete

You can delete the current message.

Extract

You can extract picture, sound and text. They will be saved in My folder or Phonebook.

View information

You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

Replay (applicable to Multimedia message only)

You can replay multimedia messages.

* Receive (In the case of notification message)

If **Multimedia message** is set to **Auto download off**, you can get only Notification. To receive a message, you need to select [Receive].

Outbox [Menu 1-4]




You can see sent and unsent messages here. For sent message, you can see the delivery status.

The browsing is same as that for the inbox message.



Messages [Menu 1]

Icon directive

- [] Sent
- [] Unsent
- [] Delivery confirmed

* When you already sent the message:

Forward

You can forward the current message to other recipients.

Delete

You can delete the current message.

View information

You can view information about outbox messages; Recipient's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

* When you didn't send the message:

Edit

You can edit the message.

Send

You can send the message.

Delete

You can delete the current message.

View information

You can view information about outbox messages.




Voice mail [Menu 1-5]

Listen to voice mail [Menu 1-5-1]

You can listen to voice mail.

Voice mail centre [Menu 1-5-2]

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.

- **Home**

You can listen to voice mails by selecting **Home**.

- **Roaming**

Even when you are in abroad, you can listen to voice mails if roaming service is supported.

Info service [Menu 1-6]

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider as long as you have input the certain number for the information. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed. To view the message again or not in standby mode, follow the sequence shown below;



Messages [Menu 1]

Read [Menu 1-6-1]

1. When you have received an info service message and select **Read** to view the message, it will be displayed on the screen. You can read another message by scrolling [\leftarrow , \rightarrow] or \leftarrow [Next].
2. The message will be shown until another message is reached.

Receive [Menu 1-6-2]

- **Yes**

If you select this menu, your phone will receive Info service messages.

- **No**

If you select this menu, your phone will not receive Info service messages any more.

Alert [Menu 1-6-3]

- **Yes**

Your phone will beep when you have received Info service message numbers.

- **No**

Your phone will not beep even though you have received info service messages.

Languages [Menu 1-6-4]

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.




Topics (Dependent to network and subscription) [Menu 1-6-5]

- **Add new**

You can add Info service message numbers in the Phone memory with its nickname.

- **View list**

You can see Info service message numbers which you added. If you press  [Options], you can edit and delete info message category which you added.

- **Active list**

You can select Info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

Templates [Menu 1-7]

Text [Menu 1-7-1]

You have 11 text templates. You can change the predefined templates into your favorite ones or fill the <empty>s.

Multimedia [Menu 1-7-2]

You can use the following options.

Edit : You can edit multimedia templates.

Add new : Allows you to add new multimedia templates.

Write message : You can write multimedia messages using multimedia templates.

Delete : You can delete multimedia templates.



Messages [Menu 1]

Business card [Menu1-7-3]

You can make your business card. Key in Name, Phone number, Fax number and Email.

Settings [Menu 1-8]

Short message [Menu 1-8-1]

- **Message types**

Text, Voice, Fax, Natl. paging, X.400, E-mail, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If you set to **Yes**, you can check whether your message is sent successfully.

- **SMS centre**

If you want to send the text message, you can receive the address of SMS centre through this menu.



Multimedia message [Menu 1-8-2]

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If it is set to **Yes** in this menu, you can check whether your message is sent successfully.

- **Auto download**

If you select **On**, you receive multimedia messages automatically. If you select **Off**, you receive only notification message in the inbox and then you can check this notification.

- **Network settings**

If you select multimedia message server, you can set URL for multimedia message server.

- **Permitted message types**

Personal : Personal message.

Advertisements : Commercial message.

Information : Necessary information.

Memory status [Menu 1-8-3]

You can check free space and memory usage of each repository, SIM memory. You can go to each repository menu.



Call register [Menu 2]

[Missed calls \[Menu 2-1\]](#)

This menu shows recently missed numbers. You can call these numbers, save and view the date and the time.

[Received calls \[Menu 2-2\]](#)

This menu shows recently received numbers. You can call these numbers, save and view the date and the time.

[Dialled calls \[Menu 2-3\]](#)

This menu shows the latest dialled numbers up to 20.

[Delete recent calls \[Menu 2-4\]](#)

You can delete recent calls of **Missed calls**, **Received calls**, **Dialled calls** or **All calls**.

[Call charges \[Menu 2-5\]](#)

Within these submenus, you can view the duration and the call cost of your calls.



Call duration [Menu 2-5-1]

This function allows you to view the duration of your Last Call, All Calls, Received calls and Dialed calls in hours, minutes and seconds. You can also reset the call timers.

1. Press [Menu] in standby mode.
2. Press for direct access or use and to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call duration** and Press [Select].

The following 5 submenus: **Last call**, **All calls**, **Received calls**, **Dialed calls** and **Reset all**.

Call costs [Menu 2-5-2]

This function allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need the PIN2 code.

1. Press [Menu] in standby mode.
2. Press for direct access or use and to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call costs** and Press [Select].

The following 4 submenus: **Last call**, **All calls**, **Remaining** and **Reset all**.

Note

- The actual cost invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, tax, and etc.





Call register [Menu 2]

Settings [Menu 2-5-3] [SIM Dependent]

- **Set tariff**

You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

If you want to input €, £, \$ symbol, clear all currency strings and then press  key. If you want to change symbol, press  key again.



Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

- **Set credit**

This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.

- **Auto display**

This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the last cost when the call is released.



GPRS information [Menu 2-6]

You can check the amount of data transferred over the network through GPRS. In addition, you can view how much time you are online.

Call duration [Menu 2-6-1]

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.

Data volumes [Menu 2-6-2]

You can check the **Sent**, **Received** or **All data volumes** and reset all.



Profiles [Menu 3]

In this menu, you can adjust and customize the phone tones for different events and environments.

1. Press [Menu] in standby mode.
2. Press for direct access or use {≡} (and)≡}.
3. You can also enter this menu directly by pressing {≡} key in standby mode.
4. When you press side key for a long time with closing the flip, you can use Profile menu.

Vibrate only [Menu 3-1]

You can adjust the profile as **Vibrate only** if you need vibration mode. In the mode, all kinds of alert are Vibrate or Silent.

Quiet [Menu 3-2]

You can adjust the profile as **Quiet** if you are in quiet place.

General [Menu 3-3]

You can adjust the profile as **General**.

Loud [Menu 3-4]

You can adjust the profile as **Loud** if you are in a noisy environment.

Headset [Menu 3-5]

You can adjust the profile as **Headset** when you put on a headset.

Car [Menu 3-6]

You can adjust the profile as **Car** when you activate Handsfree kit.



Note

- Headset and Car profiles can be activated only when Handsfree kit or Ear microphone put on the handset. However, their properties can be personalised.

Activate [Menu 3-x-1]

Activates the selected Profile.

Personalise [Menu 3-x-2]

Each has the submenus as shown below except for **Vibrate only**.

Call alert type

Allows to select alert type such as Ring, Vibrate, etc. for the incoming for adjusting environment.

Ring tone

Allows to set the ring tone for adjusting environment.

Ring volume

Allows to set the ring volume for adjusting environment. The volume of Power on / off sound and all the alert sounds set according to **Ring volume**.

Message alert type

Allows to alert when receiving a message for adjusting environment.

Message tone

Allows to select the alert tone for message reception.

Keypad volume

Allows to set the keypad volume for adjusting environment.



Profiles [Menu 3]

Keypad tone

Allows to select the keypad tone for adjusting environment.

Flip tone

Allows to set the flip tone for adjusting environment.

Effect sound volume

Allows to set the effect sound volume for adjusting environment.

Power on/off volume

Allows to set the power on/off volume for adjusting environment

Auto answer

This function will be activated only when your phone is connected to the headset or handsfree kit.

- **Off** : The phone will not answer automatically.
- **After 5 secs** : After 5 seconds, the phone will answer automatically.
- **After 10 secs** : After 10 seconds, the phone will answer automatically.

Rename [Menu 3-x-3]

You can change the default profile name except of Vibrate only, Headset, and Car menus.

Note

- If you set the Handsfree kit to the phone, you can't use the vibrate mode related with Call alert type or Message alert menu. In car menu, the following submenus are available;
 - **Call alert type** : Ring, Silent
 - **Message alert type** : Ring once, Ring periodically, Silent

Camera [Menu 4]



With the camera you can take pictures of people and events while on the move.

Take picture [Menu 4-1]

1. Select **Camera**, and then press . If you want to reach this menu directly, press for a long time.
2. Focus on the subject to capture the image, and then press or .
3. If you want to save it, press or .

Reference!

- **Settings window**

You can control the image size, flash, brightness, colour, rotating and zooming by pressing side up key , (or).

- **Resolution** : VGA 640*480, QVGA 320*240, QQVGA 160*120, PB : 48*48.
- **Flash** : On, Off
- **Rotating** : Rotate an image 90 degrees anticlockwise.
- **Image quality** : High, Normal, and Low
- **Zooming** : x1, x2, x4. The default value is x1.
- **Brightness** : -2, -1, Standard, +1, +2.
- **Colour** : True colour, Sepia, Black/ White.



Camera [Menu 4]

Activating a key

- : Move the item which you set.
- : Take and save a picture.
- : Go back to the previous menu or exit from camera mode.
- : In application setting, you can change the default value.
- : Move the item which you set.
- : Take and save a picture

Take in modes [Menu 4-2]

You can take a picture on the various of backgrounds. Furthermore, you can select a frame by pressing , .

Reference!

- In this mode, you can't change the settings of resolution.

Take continuously [Menu 4-3]

You can take the maximum of 9 pictures subsequently at the same time. After taking a picture, you can view it by pressing , . You can also save it by pressing .

Reference!

- If you set 640x480 in resolution, you can take only 3 pictures. In case of 320x240, it is available to 6 pictures.



My album [Menu 4-4]

You can view and send a picture. In addition, you can set the window as a background.

All pictures [Menu 4-4-1]

You can view the maximum of 9 pictures in order.

General pictures [Menu 4-4-2]

You can view all pictures except of frame and phone book ones.

Mode pictures [Menu 4-4-3]

You can view all frame pictures.

Phonebook pictures [Menu 4-4-4]

You can view all phonebook pictures.

• Option

- **Multi view** : You can view the maximum of 9 thumbnails in a screen.
- **Write multimedia message** : You can send a picture thru MMS.
- **Set as wallpaper** : You can set a picture as a wallpaper.
- **Delete** : You can delete a picture.
- **Edit title** : You can edit the title of picture.



Camera [Menu 4]

Settings [Menu 4-5]

Memory status [Menu 4-5-1]

You can check the capacity of total, used, and free memory.


 
Clear album [Menu 4-5-2]

You can delete all pictures which saved in a memory.

Settings [Menu 5]





You can set the following menus for your convenience and preferences.

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter **Settings**.

Alarm clock [Menu 5-1]

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period : **Once, Mon~Fri, Mon~Sat, Everyday**.
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].
5. If you set **Alarm clock** to **Power off alarm** the alarm goes off at a specified time even though the phone is switched off.

Date & Time [Menu 5-2]

You can set functions relating to the date and time.

Set date [Menu 5-2-1]

You can enter the current date.

Date format [Menu 5-2-2]

You can set the Date format such as **DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD**. (D: Day / M: Month / Y: Year)

Set time [Menu 5-2-3]

You can enter the current time.

Time format [Menu 5-2-4]

You can set the time format between 24-hour and 12-hour.



Settings [Menu 5]

Phone settings [Menu 5-3]

You can set functions relating to the phone.

Display settings [Menu 5-3-1]

- **Wallpaper**

You can select the background pictures in standby mode.

- **Default**

You can select a picture or an animation of wallpaper by pressing [←(or)→].

- **My folder**

You can select a picture or an animation as wallpaper.

- **Incoming calls**

You can set the animation as getting a call.

- **Outgoing calls**

You can set the animation as making a call.

- **Greeting note**

If you select **On**, you can edit the text which is displayed in standby mode.

- **Backlight**

You can set the light-up duration of the internal display.

- **LCD contrast**

You can set the brightness of LCD by pressing [←(,)→].

- **Information window**

You can preview the current state of the selected menu before open the menu. The state is shown at bottom of the display.



- **Menu colour**

You can select the preferred menu colour among various combination.


Sub LCD [Menu 5-3-2]

- **My display** : You can set the animation when you press side key.
- **Show time** : You can set the duration when you scroll sub LCD.
- **Brightness** : You can set the brightness when you scroll sub LCD.
- **Font colour** : You can set the font colour which is displayed on sub LCD.

Language [Menu 5-3-3]

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Call settings [Menu 5-4]

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

Call divert [Menu 5-4-1]

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- **All voice calls**

Diverts voice calls unconditionally.

- **If busy**

Diverts voice calls when the phone is in use.

- **If no reply**

Diverts voice calls which you do not answer.



Settings [Menu 5]

- **If out of reach**

Diverts voice calls when the phone is switched off or out of coverage.

- **All data calls**

Diverts to a number with a PC connection unconditionally.

- **All fax calls**

Diverts to a number with a fax connection unconditionally.

- **Cancel all**

Cancels all call divert service.

- **The submenus**

Call divert menus have the submenus shown below.

- **Activate**

Activate the corresponding service.

- To voice mail centre**

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

- To other number**

Inputs the number for diverting.

- To favourite number**

You can check recent 5 diverted numbers.

- **Cancel**

Deactivate the corresponding service.

- **View status**

View the status of the corresponding service.




Answer mode [Menu 5-4-2]


- **Flip open**

If you select this menu, you can receive an incoming call by only opening the flip.

- **Press any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

- **Send only**

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number [Menu 5-4-3] (network and subscription dependent)

- **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- **Off**

Your phone number will not be shown.

- **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.



Settings [Menu 5]

Call waiting [Menu 5-4-4] (network dependent)

- **Activate**

If you select Activate, you can accept a waiting (receiving) call.

- **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

- **View status**


Shows the status of Call waiting.

Minute minder [Menu 5-4-5]

If you select **On**, you can check the call duration by deep sound every minute during a call.

Voice dial [Menu 5-4-6]

- **Automatic** : You can enter the voice dial mode whenever you open the flip.

- **Manual** : You can enter the voice dial mode by holding down  key.

Auto redial [Menu 5-4-7]

- **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- **Off**

Your phone will not make any attempts to redial when the original call has not connected.



Select line [Menu 5-4-8]

This function is only used if Two Line Service is supported by the Service Provider. If this function is supported by your service provider, the following menu will be displayed.

- **Line 1**
- **Line 2**

Closed User Group [Menu 5-4-9]

(network dependent)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

Default : Activate the default group agreed on with the network operator.

Set : Setting the selected CUG Index.

Edit : Editing the CUG name and CUG Index.

Delete : Deleting the selected CUG.

Delete all : Deleting All CUG.



Settings [Menu 5]

Security settings [Menu 5-5]

PIN code request [Menu 5-5-1]

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press [Select].
2. Set **On/Off**.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock [Menu 5-5-2]

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.



Call barring [Menu 5-5-3]

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing**

The barring service for all outgoing calls.

- **Outgoing international**

The barring service for all outgoing international calls.

- **Outgoing international except home country**

The barring service for all international outgoing calls except home network.

- **All incoming**

The barring service for all incoming calls

- **Incoming when abroad**

The barring service for all incoming calls when roaming

- **Cancel all**

You can cancel all barring services.

- **Change password**

You can change the password for Call Barring Service.

Each call barring menu has following submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.



Settings [Menu 5]

- **View status**

View the status whether the calls are barred or not.

Fixed dial number [Menu 5-5-4] (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **Activate**

You can restrict your outgoing calls to selected phone numbers.

- **Cancel**

You can cancel fixed dialling function.


- **Number list**

You can view the number list saved as Fixed dial number.

Change codes [Menu 5-5-5]

PIN is an abbreviation of Personal Identification Number used to prevent use by only unauthorized person.

You can change the access codes: **PIN code**, **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

Network settings [Menu 5-6]

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.



Automatic [Menu 5-6-1]

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.

Manual [Menu 5-6-2]

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

Preferred [Menu 5-6-3]

You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone’s predefined list of known networks.

Reset settings [Menu 5-7]

You can initialize all factory defaults. You need Security code to activate this function.



Organiser [Menu 6]

Scheduler [Menu 6-1]

When you enter this menu a Calendar will show up. On top of the screen there are sections for date. Also on bottom of the screen there are sections for icons (schedule, memo). Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see under bar on the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.

To change the day, month, and year.

Key	Description	Key	Description
	Yearly		Weekly
	Monthly		Daily

Note

- Your phone should be switched on to use this function.





Add new [Menu 6-1-1]

You can edit maximum 39 characters (21 characters in Chinese) and take up to 20 notes.





• Schedule

Input the subject, the schedule time, the repeat, the alarm by pressing allowed keys.


 

• Memo

1. Select **Add new** by pressing  [Select].
2. Press **Memo**.
3. Input the memo and then press  [OK].

View [Menu 6-1-2]

Shows the note for the chosen day. Use  ,  to browse through the note lists. If you set alarm for the note, Alarm watch is displayed. At that time, if you press  [Select], you can see the note in detail. Press  [Options] to delete, edit the note you selected.

View all [Menu 6-1-3]

Shows the notes that are set for all days. Use  ,  to browse through the note lists. You can use the same menu as “**View**” by pressing  [Options].

Delete past [Menu 6-1-4]

You can delete the past schedule that has been already notified you.

Delete all [Menu 6-1-5]

You can delete for the all note(s).



Organiser [Menu 6]

Phonebook [Menu 6-2]

1. To use **Phonebook**, press [Names] in standby mode.
2. To use **Phonebook**, press [Menu] in standby mode and select **Organiser**.

Search [Menu 6-2-1]

(Calling from phonebook)

1. In standby mode, press [Names].
2. **Search** by pressing [Select].
3. Enter the name whose phone numbers or e-mail address you want to search or Select 'List' to view phonebook.
4. Instant searching is available by inputting the initial letter of the name or number you want to search.
5. If you want to edit, delete, copy an entry, or to add the voice to one, select [Options]. The following menu will be displayed.
 - **Edit** : You can edit the name, number, E-mail and fax by pressing [OK].
 - **Write message** : After you have found the number you want, you can send a message to the selected number.
 - **Copy** : You can copy an entry from SIM to phone or from phone to SIM.
 - **Voice** : You can add the voice to the entry or change the voice tag.
 - **Main number** : You can select the one out of mobile, home, office that you often use. The main number will be displayed first, if you set this.
 - **Delete** : You can delete an entry.



Add new [Menu 6-2-2]

You can add phonebook entry by using this function.

Phone memory capacity is 200 entries. SIM card memory capacity depends on the cellular service provider.

You can also save 20 characters of name in The Phone memory, and save characters in the SIM card. The number of character is SIM dependent feature.

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to highlight **Add new**, and press [Select].
3. Select the memory you want to save: **SIM** or **Phone**. If set to Phone, you need to select which number you want as Main number.
 - a. Press [OK] to input a name.
 - b. Press [OK], then you can input a number.
 - c. Press [OK].
 - d. You can set a group for the entry by pressing (,)=:
 - e. You can set a character and a picture for the entry by pressing , , (,)=.
 - f. If you want to add the voice, press [Yes].

Note

- When you save text and picture in a phone book at the same time, you can view a picture on any condition.

You should speak words within 2 seconds, and the phone asks you to speak it again to ensure the accuracy of voice recognition. After voice recognition has finished, Voice is attached successfully.



Organiser [Menu 6]

Note

- The voice can only be attached to the main number which you set. For example, if you change the main number, voice will be automatically attached to the changed number. This means that you cannot attach voice to mobile, office, home number simultaneously.
- You can add voice tag to phone number in SIM card. The voice tag can be erased if you remove or change SIM card.

Caller Groups [Menu 6-2-3]

You can list up to 20 members per one group. There are 7 groups you can make lists to.

1. In standby mode, press [Names].
2. Scroll to **Caller groups** item then press [Select], and every Group list will be displayed.
3. Select Group name you want by pressing [Select].
 - **Member list**
Shows the group members you have selected.
 - **Group ring tone**
Allows you to specify ring tone for the group members' call.
 - **Group icon**
Allows you to select the icon dependent on Group.
 - **Add member**
You can add group members. Each group member shouldn't be exceeded 20.



- **Remove member**

You can remove the member from the Group member list. But the name and the number still remain in phonebook.

- **Rename**

You can change a group name.

Speed dials [Menu 6-2-4]

You can assign any of the keys, to with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to **Speed dial**, then press [Select].
3. If you want to add Speed dial, select **(Empty)**. Then, you can search the name in phonebook.
4. Select allocated a name by speed dial, and choose **Change** or **Delete** to edit the name.

- **Change**

You can allocate a new phone number to the dial key.

- **Delete**

You can remove the allocated phone number from the dial key.

Voice list [Menu 6-2-5]

You can see all phone numbers which contain voice. After selecting phone number by using and and press [Options], you can see the following submenus.

- **Play** : You can play voice which is attached to phone number.
- **Change** : You can change voice.
- **Delete** : You can delete voice.
- **Call** : You can call by selecting this menu.



Organiser [Menu 6]

Settings [Menu 6-2-6]

1. Press [Names] in standby mode.

2. Scroll to **Settings**, then press [Select].

• **Set memory**

Scroll to highlight **Set memory**, then press [Select].

- If you select **Variable**, when adding entry, the phone will ask where to store.
- If you select **SIM** or **Phone**, the phone will store an entry to SIM or phone.

• **Search by**

Scroll to highlight **Search by**, then press [Select].

- If you select **Variable**, the phone will ask how to search.
- If you select **Name** or **Number**, the phone will search an entry by Name or Number.

• **View options**

Scroll to highlight **View options**, then press [Select]

- **Name only** : Set the phonebook list with displaying only name.
- **With pictures** : Set the phonebook list with the information of character and picture.



Copy all [Menu 6-2-7]

You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing [Names] in standby mode.
2. Scroll to **Copy all**, then press [Select] to enter this menu.
 - **SIM to Phone** : You can copy the entry from SIM Card to Phone memory.
 - **Phone to SIM** : You can copy the entry from Phone memory to SIM Card.
3. You can see the following submenus.
 - **Keep original** : When copying, Original Dial Number is kept.
 - **Delete original** : When copying, Original Dial Number will be erased.

Delete all [Menu 6-2-8]

You can delete all entries in SIM, Phone, and Voice. This function requires Security code except for voice.

1. Press [Names] in standby mode and select Delete all, press [Select].
2. Then select a memory to erase.
3. Enter security code and Press [OK] or [Back].



Organiser [Menu 6]

Information [Menu 6-2-9]

- **Service dial number**

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing [Names] in standby mode and select **Information**.
2. Scroll to **Service dial number**, then press [Select] to enter.
3. The names of the available services will be shown.
4. Use and to select a service. Press [Send].

- **Memory status**

This feature allows you to see how many free and in-use are in your phonebook.

1. Open the phonebook first by pressing [Names] in standby mode. Select **Information** by pressing [Select].
2. Scroll to **Memory status**, then press [OK].

- **Own number (SIM dependent)**

You can check your own number in SIM card.

Fun & Tools [Menu 7]





 
Games [Menu 7-1]

The phone offers you the games to play with.

Note






- The control keys are different depending on a game. However, each one has an introduction to explain the main control keys. The rest ones are as follows.

[Common Key Function]

-  : Game menu
-  : Back
-  : Pause or resume a game

Calculator [Menu 7-2]

This contains the standard functions such as $+$, $-$, \times , \div : **Addition**, **Subtraction**, **Multiplication**, and **Division**.

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  [Result] to view the result.
5. Press [Reset] or enter numbers to repeat the procedure above.
6. Use  key to erase any numbers or signs.
7. If you press  key, you can input a minus number. In addition, If you press  key, you can input a decimal number.
8. To end **Calculator**, press  [Back].



Fun & Tools [Menu 7]

[My folder \[Menu 7-3\]](#)

Enables you to view the downloaded pictures and sounds. They can be set as Wallpaper or Ring tone. You can view, listen, delete or rename downloaded data.

[Pictures \[Menu 7-3-1\]](#)

[Sound \[Menu 7-3-2\]](#)

The Submenus for each main one

- **Edit title**

You can edit the title for each download contents.

- **Write messages**

You can write Short message/Multimedia message(available depending on type of Media) with attachment pictures or sounds.

- **Set as wallpaper/Set as ring tone**

You can set downloaded sounds or pictures as wallpaper or Ring tone.

- **Delete**

You can delete each downloaded content.

- **Delete all**

You can delete all downloaded contents.



Melody composer [Menu 7-4]

You can compose a ring tone melody which you want. When you enter this function, the tones that you composed before are played. To enter a new or edit an existing tone:

1. Enter the desired notes. (\square ~ \square : CDEFGAB)
2. To adjust the characters of the note, do as follows:
 - **Duration** : \square shortens and \square lengthens the duration of the note or rest.
 - **Rest** : \square inserts a rest of the same duration as the previous note.
 - **Octave** : \square sets the octave for new notes.
 - **Sharp note** : \square makes the note sharp.

Unit converter [Menu 7-5]

This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length**, **Area**, **Weight**, and **Volume**.

1. You can select one of four unit types by pressing \square [Unit] key.
2. Select the standard value by using \square , \square .
3. Select the unit you want to convert by pressing \square and \square .
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing \square .

World time [Menu 7-6]

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing \square (,) key.
2. You can set the current time to the city time you select by pressing \square [Set].



Fun & Tools [Menu 7]

Voice recorder [Menu 7-7]

The voice memo feature you to record up to 10 voice messages and each memo is up to 20 Seconds.

Record [Menu 7-7-1]

1. You can record voice memo in Voice recorder menu and also holding down **C** in the standby mode.
2. Once recording is started, the message Recording and the remaining time is displayed.
3. If you want to finish recording, press **S** [Save].
4. Key in Voice memo title, press **O** [OK].

View list [Menu 7-7-2]

The phone shows voice memo list. You can Playback and Delete the recorded voice memo.

Activate IrDA [Menu 7-8]

If you activate this function, you can use PC-Sync by infrared. You can't use serial port and infrared function at the same time.

PC Sync

PC Sync is a program for data exchange between PC and the phone by data cable. For more information, you can use the guide of PC Sync Help file in CD.





The phone supports services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather reports, and flight times.

Home [Menu 8-1]

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by Service Provider if you don't make in activated profile.

Bookmarks [Menu 8-2]

Press  [Select] to access available options, or press  [Back] to exit.

- **Connect** : Connect to the selected bookmark.
- **Add new** : Add a new bookmark manually.
- **Edit** : Edit the title and the address of the selected bookmark.
- **Delete** : Delete the selected bookmark from the bookmark list.

Push messages [Menu 8-3]

Inbox [Menu 8-3-1]

You can read or delete push messages.

- **Information** : Show the information of received push messages.
- **Load** : You can connect to a specific site using the information in the received push message.
- **Delete** : Delete the selected push message.


Receive [Menu 8-3-2]

You can set the option whether you will receive the message or not.



Internet [Menu 8]

Profiles [Menu 8-4]

You can make up to 10 profiles and activate only one out of them. Scroll to the desired profile and press  to access available options.

- **Activate**

You can activate the profile you want.

- **Settings**

You can edit and change WAP settings of the selected profile.

- **Homepage**

This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type "http://" at the front of each URL as the WAP Browser will automatically add it.

- **Bearer**

You can set the bearer data service.

- Data
- GPRS

- **Data settings**

Appeares only if you select Data settings as a Bearer\service.

IP address : Enter the IP address of the WAP gateway you want.

Dial number : Enter the telephone number to dial to access your WAP gateway.

User ID : The users identity for your dial-up server (and NOT the WAP gateway).

Password : The password required by your dial-up server (and NOT the WAP gateway) to identify you.

Call type : Select the type of data call: Analogue or Digital (ISDN).



- Call speed** : The speed of your data connection;9600 or 14400.
- Linger time** : You need to enter timeout period.After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

- GPRS settings

The service settings are only available when GPRS is chosen as a bearer service.

- IP address** : Input the IP address of the WAP gateway you access.
- APN** : Input the APN of the GPRS.
- User ID** : The users identify for your APN server.
- Password** : The password required by your APN server.

- Display image

You can select whether images on WAP cards are displayed or not.

- Connection type

The options for connection type are Temporary or Continuous and depend on the gateway you are using.

Continuous

A confirmed delivery mechanism but generates more network traffic.

Temporary

A non-confirmed (connectionless) service.



Internet [Menu 8]

- **Secure settings**

According to the used gateway port, you can choose this option as **On** or **Off**.

• **Rename**

Edit the Profile Name.

• **Delete**

Delete the Profile.

• **Add new**

You can add a new profile manually.

• **Email server**

- **Connect**

Connect to the E-mail server that you configured.

- **Edit address**

Edit the E-mail address.



[Go to URL \[Menu 8-5\]](#)

You can directly connect to the site you want. You need to enter a specific URL.

[Cache settings \[Menu 8-6\]](#)

You can remove the contents of Cache memory or change the Cache mode.

[Clear cache \[Menu 8-6-1\]](#)

The contents of Cache memory will be removed.

[Check cache \[Menu 8-6-2\]](#)

You can set the option whether you will check the cache memory or not.

[Security certification \[Menu 8-7\]](#)

A list of the available certificates is shown.

[Reset profiles \[Menu 8-8\]](#)

You can reset profiles to return to original settings.

[Browser version \[Menu 8-9\]](#)

The WAP Browser version is displayed.



On browsing menu

If you are on line, you can view the following menus.

- **Home**

Refer to [Menu 8-1].

- **Reload**

Reloads the current page.

- **Bookmarks**

See [Menu 8-2].

- **Save as bookmark**

You can save a site as bookmark.

- **Messages**

During Wap connection, you can see the Short messages.

- **Push messages**

See [Menu 8-3].

- **Go to URL**

You can move to the site you want. In this menu, you can also edit the site address.

- **Go to email server**

You can move to the E-mail server that you configured.

- **Set as email server**

You can set the address of current site as E-mail server.

- **Clear cache**

 
The contents of cache memory will be removed.

- **Save Images**

You can save the image which is provided by the WAP.



Applications [Menu 9-1]

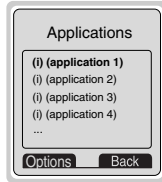

Java Menu Options

Scroll to an application and select Options.

- 1. Open** : Launches the selected MIDlet.
- 2. Delete** : Deletes the selected MIDlet.
- 3. Update** : Accesses the server and updates the selected MIDlet.
- 4. Information** : Displays information about the selected MIDlet.
- 5. Phone settings** : Allows you to set backlight and sound for java game.

Download [Menu 9-2]

You can edit and set MIDlet server address. Download MIDlets using WAP Browser and store them in the phone. You can also view the list of MIDlets stored on the Applications screen.

Memory status [Menu 9-3]

Shows the size of memory available for game and application installations. You can also see the whole memory status of Handset.



JAVA™ is a trademark of Sun Microsystems, Inc.



Favorites [Menu 10]

You can set up to 10 menus which you have used often in Favorites. You can connect this menu directly by pressing hot key 10.

If you want to register the menu in favorites, select <Empty> on a list. If the menu is already registered, the options are displayed as follows:

- **Select** : Activate the registered menu.
- **Change** : Change the menu.
- **Delete** : Delete the registered menu.
- **Delete all** : Delete all menus which are registered in Favorites.
- **Information**: View the information of registered menu.



There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.



Standard Battery



Portable Handsfree

This connects to your phone, allowing handsfree operation.



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Neckstrap



Data cable/CD

You can connect your phone to PC to exchange the data between them.

Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.



Care and Maintenance

When using this unit, basic safety precautions as below should be always followed.

- Do not disassemble this unit. (Take it to a qualified service technician when repair work is required.)
- Away from electrical appliance such as a TV, radio or personal computer.
- The unit should be situated from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.



□ Caring for the Battery

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



Technical Data

General

Product name : G7100

System : GSM 900 / DCS 1800

Ambient Temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity



LG Electronics

This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

If available, write the contact person(s)

Mr. Jin Seog, Kim
LG Amsterdam Branch Office
Capornilaan 6, 1119 NR Schiphol-rijik,
The Netherlands
(Tel.) +31-20-655 7774

Mr. Ji Jong, Jeon
LG Electronics Inc. GSM Division
Emerald BD, 1042 Hogye-Dong, Dongan-Gu
Anyang-city, Kyuonki-Do
431-080, Korea

CE 0700



Memo

Memo





Memo