



P/N : MMBB0121116

ISSUE 1.0
PRINTED IN KOREA

型號 : L1100



繁體中文
ENGLISH



CE 0889

用戶手冊

GPRS與MMS手機

用戶手冊

型號 : L1100

使用手機前，請務必詳讀本手冊。
並小心保存本手冊，以備日後參考之用。

GPRS與MMS手機

用戶手冊

型號：L1100

使用手機前，請務必詳讀本手冊。
並小心保存本手冊，以備日後參考之用。

如果您需要相關商品服務，
歡迎您與客服中心聯絡 0800898899
或者您也可以瀏覽LG台灣網站
網址：<http://www.lge.com.tw>

簡介

恭喜您購買L1100手機，本機型是採用最新的數位行動通訊的技術的行動電話。



本操作手冊包含了所有手機操作的重要資訊，請您於使用前務必閱讀才能將您的手機發揮最大功能，並避免造成損壞或不當使用，請詳讀本手冊的所有內容。若對手機進行本手冊未明載之任何改造，將導致保固權益喪失。



並避免造成損壞或不當使用，請詳讀本手冊的所有內容。若對手機進行本手冊未明載之任何改造，將導致保固權益喪失。

Exposure to radio frequency energy

暴露於無線電波和比吸收(SAR)的訊息

此L1100型號手機設計符合有關無線電波輻射的要求。這要求是基於科學的研究後制定的，並且已包含了一定的安全寬容度，以確保不同年齡和健康狀況的人群的安全。

- 行動電話的輻射標準採用的計算單位被稱為「比吸收率」(“Specific Absorption Rate” or “SAR”)。在測量比吸收率(SAR)，均採用標準測量方式，測量手機在不同波段中以最高認可發射功率操作時的比吸收率(SAR)。
- 也許不同型號LG手機的比吸收率(SAR)可能有所差異，但它們都符合暴露於無線電波的相關國際標準。
- 根據國際非電離輻射防護委員會(INCRP)所發展的標準，適用於公眾的無線電話比吸收率(SAR)限制是平均每10克組織2.0瓦特/千克 (W/kg)，而SAR在台灣的限制標準為1.6瓦特/公斤。
- L1100 經政府認可的實驗室測試後，此型號的最高比吸收率(SAR)值為1.39瓦特/公斤。
- 減少電池波影響，請妥善使用手機!



使用手機安全須知

使用手機維護與安全須知

注意: 請務必使用相同機型的配件如電池,旅行用充電器 避免手機造成損害導致保固失效。

- 請勿自行拆解手機，若手機需維修時請送至LG授權的維修服務中心處理。使用手機時可能造成電視、收音機、電腦等輕微干擾，故使用時請遠離。
- 手機應遠離熱源，例如散熱器或電鍋附近。
- 切勿拋擲本手機。
- 避免讓手機承受機械性震盪或撞擊。
- 若用包裝紙或保鮮紙包裹本手機，手機的表面塗層可能會受損。
- 請使用乾布來清潔手機外部。
(請勿使用如苯、稀釋劑或酒精等溶劑。)
- 請勿讓本手機經常接觸煙霧或塵埃。
- 請勿讓手機接近信用卡或其他附有磁帶的卡，否則可能損壞磁帶內的資訊。
- 請勿讓硬物碰撞顯示幕，以免損壞機身。
- 請勿讓手機至於潮濕環境中
- 使用如免持耳機等配件時請份外小心。如無必要，請勿觸摸天線。



影響電話使用

爲了您的手機能隨時保持最佳效能，請您參考下列說明：

- 當您與他人通話時請握好手機並將您的聲音直接傳入麥克風，天線的角度最好能高過您的肩膀，以避免手機通話受到干擾。
- 使用手機通話時請勿觸碰天線，若您握著天線通話將可能造成您的待機時間縮短。
- 如果您的手機支援紅外線裝置，請勿將此裝置照射眼睛。

電子產品

行動電話可能干擾附近的電器設備。

- 請勿在醫院使用手機，以免對敏感的醫療設備造成影響。
- 行動電話可能會對助聽器造成干擾。
- 行動電話可能會對監視器，電視，收音機，電腦...等電子裝置造成干擾。

道路安全須知

請確認當地的法令是否允許您在車上使用行動電話，並遵循下列原則：

- 開車時切勿手持行動電話。
- 請務必專心開車。
- 如果可能，請使用免持裝置。
- 行車時需撥電話或接聽電話請將汽車停靠路邊。
- 無線電波可能會對您車上的電子設備造成影響，如收音機...等。
- 如您的汽車配備安全氣囊，請勿在其附近放置物件或安裝無線設備不當操作將會導致嚴重傷害。



使用手機安全須知

爆破區域

爆破作業進行當中，請勿使用電話。

觀察禁止告示並遵守任何規章條例。

具有潛在爆炸危險的環境

- 請勿在加油站使用電話。請勿在汽油及化學品附近使用電話。
- 不要將行動電話及配件與易燃氣體、液體或爆裂物置於同一車廂內一起運送或儲存。

在飛機上

無線電波可能會造成飛行意外，請注意下列事項。

- 搭機前請務必關閉您的手機。
- 未經空服人員許可，在地面停駐時也請勿使用。

兒童安全

手機應置於兒童不易取得的安全地方。手機包括細小配件，如果拆解，可能會有哽塞之虞。

緊急通話

緊急通話不一定能適用於全部的行動電話網路。此外，您不能太過於依賴於使用緊急撥號功能。相關資訊請洽詢您的網路系統服務商。



電池使用與保養

- 電池充電前，無須完全放電。與其他系統不同的是，本電池的性能不會受到記憶效應的影響。
- 您只可使用LG電池和充電器。LG充電器是經過特別設計為發揮電池最長壽命而設計的。
- 請勿自行拆開電池造成電池短路。
- 請保持電池的金屬接觸面的清潔。
- 當電池無法再發揮令人滿意的效能時。請更換電池。此電池可重複充電數百次，直到它需要被更換為止。
- 如果電池經過長時間未使用，應重新充電以發揮最大的效力。
- 請勿將電池充電器至於日光下曝曬，或在高濕度下使用，例如在浴室內。
- 請勿將電池保存在太熱或太冷的地方，如此可能會損耗電池的效能。



目錄

手機介紹	11
手機外觀說明	11
本機功能	12
側鍵	13
螢幕顯示訊息	14
開始使用	15
裝上SIM卡及電池	15
為電池充電	16
取下充電器	17
開啓與關閉您的手機	18
密碼鎖	18
一般功能	20
撥打電話與接聽來電	20
輸入文字	22
電話簿	27
來電功能表	27
多方通話或電話會議	28
功能表結構	31
手機功能設定選項	33
情景模式[功能表1]	34
震動[功能表1-1]	34
靜音[功能表1-2]	34
一般[功能表1-3]	34
大聲[功能表1-4]	34
耳機[功能表1-5]	34
汽車[功能表1-6]	34
通話記錄[功能表2]	36
未接來電[功能表2-1]	36
已接來電[功能表2-2]	37



已撥來電[功能表2-3]	38
刪除最近通話[功能表2-4]	38
通話時間[功能表2-5]	39
通話計費[功能表2-6]	39
計費設定[功能表2-7]	40
GPRS 訊息[功能表2-8]	40
娛樂與工具[功能表3]	42
鬧鐘[功能表3-1]	42
計算機[功能表3-2]	42
我的資料夾[功能表3-3]	43
單位換算器[功能表3-4]	44
時區設置[功能表3-5]	44
語音備忘錄[功能表3-6]	45
啟動紅外線[功能表3-7]	46
公事包[功能表4]	47
行程表[功能表4-1]	47
備忘錄[功能表4-2]	48
電話簿[功能表4-3]	49
訊息[功能表5]	56
一般簡訊[功能表5-1]	56
多媒體簡訊(MMS)[功能表5-2]	61
語音信箱[功能表5-3]	67
區域廣播[功能表5-4]	67
常用短語[功能表5-5]	69
記憶體狀態[功能表5-6]	71
照相機[功能表6]	72
拍照[功能表6-1]	72
相簿[功能表6-2]	74

 


目錄

遊戲與應用程式[功能表7]	75
遊戲[功能表7-1]	76
應用程式[功能表7-2]	76
下載[功能表7-3]	77
訊息提示[功能表7-4]	77
行動網[功能表8]	78
首頁[功能表8-1]	79
書籤[功能表8-2]	79
Push訊息[功能表8-3]	80
網路設定[功能表8-4]	80
進入URL[功能表8-5]	81
暫存設定[功能表8-6]	81
安全認證[功能表8-7]	82
重設網路設定[功能表8-8]	82
瀏覽器版本[功能表8-9]	82
設定[功能表9]	83
日期和時間[功能表9-1]	83
手機設定[功能表9-2]	84
通話設定[功能表9-3]	85
保密設定[功能表9-4]	88
網路設定[功能表9-5]	92
GPRS設定[功能表9-6]	93
恢復原廠設定[功能表9-7]	94
行動增值服務[功能表 0]	95
使用問答集	96
配件	99
技術資料	100





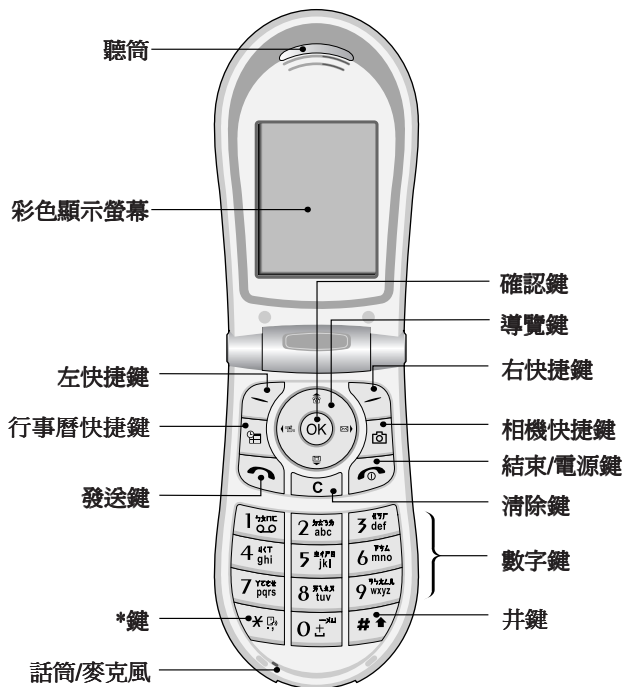

手機外觀說明









手機介紹


本機功能

按 鍵	說 明
	左快捷鍵/右快捷鍵 左右快捷的的功能請參考螢幕上的指示使用。
	導覽鍵 可利用快捷鍵功能快速進入功能表 <ul style="list-style-type: none">• 上導覽鍵 用於捲動姓名、電話號碼...等電話簿查詢• 下導覽鍵 可直接進入語音記事功能，壓住此鍵可以直接進行錄音• 左導覽鍵 可直接讓您設定個人情景模式• 右導覽鍵 可直接進入訊息功能選項 確認鍵 選擇功能表後可以用此進行確認。
	發送鍵 撥出電話和接聽電話。如果您按此鍵後未輸入號碼，手機會顯示最近撥出、已接聽和未接聽的電話號碼。
	數字鍵 這些按鍵主要用來在待機模式下進行撥號，以及在編輯 模式下輸入數字或字元。



按 鍵	說 明
	結束/電源鍵 用於結束或拒接電話。此鍵也可當作電源鍵使用，只要按住此鍵數秒即可開機或關機。
	清除鍵 清除鍵可刪除字元，返回功能表。
	相機快捷鍵 選擇功能表後可以用此進行拍照。
	行事曆快捷鍵 選擇此功能可以檢視當月行程表中的內容。

側鍵

按 鍵	說 明
	上/下測鍵 <ul style="list-style-type: none">• 通話中可調整通話音量。• 如果折蓋已關閉，可查看日期與時間。• 一般待機時，如果折蓋已打開可調整按鍵音量。



手機介紹

螢幕顯示訊息

手機螢幕上會顯示多種圖示，下表將說明這些圖示代表的意義：



螢幕圖示

按 鍵	說 明
	顯示網路訊號強度。
	電話已接通。
	可以使用GPRS服務。
	表示正在使用漫遊服務。
	鬧鐘已經設定且處於啟動狀態。
	顯示電池狀態。
	收到文字訊息。
	收到語音留言。
	收到多媒體簡訊。
	情景模式中的「震動」功能表。
	收到電子郵件訊息。
	情景模式中的「大聲」功能表。
	情景模式中的「靜音」功能表。
	情景模式中的「耳機」功能表。
	情景模式中的「汽車」功能表。
	情景模式中的「一般」功能表。
	可以使用push訊息服務。
	提示您個人個人行程表所設定的日期。
	正在使用WAP服務。
	正在使用GPRS服務。
	正在輸入保密碼。



裝上SIM卡及電池

  
1. 請確認手機為關機狀態後再取下電池。取下電池時請先按下電池卡榫，並以45度角將電池取出。

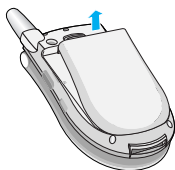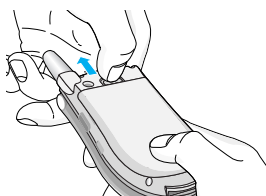


請注意

- 取下電池時請確定手機為關機狀態不然可能會對手機造成傷害。

 2. 將SIM卡插入卡座，請以SIM卡的金色接觸點向下，截角朝右的方式，將SIM卡滑入至銀色卡座下方。

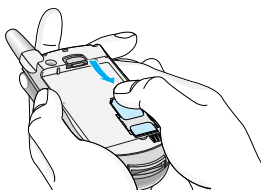

插入SIM卡

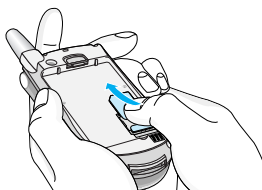 

取出SIM卡

 
 
請注意

- 由於SIM卡金屬介面非面容易損壞，所以請務必小心放置。



開始使用



3. 取出電池時請壓下電池卡損並輕拉電池前緣的凹槽再將電池取下。

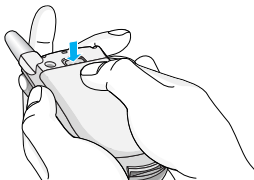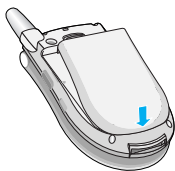

為電池充電

請務必使用原廠提供之充電器為您的手機充電。

  1. 手機要連接旅行充電器前，必須先裝入電池並將旅充街頭插入手機底部的固定座，請確認旅充接頭上的箭頭朝上並連上手機。
2. 請將旅行充電器的另一端插入電源插座。

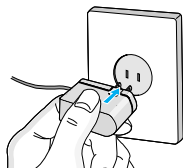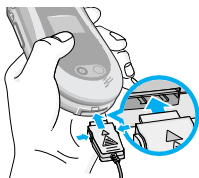

請注意

- 使用非原廠充電器可能造成手機損毀並喪失您個人手機保固的權益。
- 請勿強力插入接頭，以免損壞手機或旅行充電器。



請注意

- 插上旅行用充電器後，螢幕會顯示「電池正在充電中」。唯有在電池完全沒電時，通話指示燈才會亮起，但不會顯示「電池正在充電中」。

取下充電器

請務必使用原廠提供之充電器為您的手機充電。

1. 當充電完畢後，手機螢幕上電池圖示的移動式指示列將會停止動作並於螢幕上顯示“電池已充滿”。
2. 取下充電器，如圖所示按下旅充側面的二個按鈕即可將旅充自手機取下。



請注意

- 請確認電池已經充飽電，尤其當您第一次使用時。
- 不可在充電期間取出電池或SIM卡。
- 如果您的電池無法正常充電，請您先使用手機關機鍵關機後再重新充電。




開始使用

開啓與關閉您的手機

開啓您的手機



1. 將電池裝上您的手機並將旅行用充電器或車上型充電器接上您的手機。
2. 按下  數秒直到手機螢幕開啓。
3. 並依您的PIN碼設定狀況輸入您的PIN碼。

請注意

- 如同其他無線產品一樣再手機開機時請不免不必要的接觸天線。

關閉您的手機

1. 按下  數秒直到手機螢幕關閉。

密碼鎖

使用本章節所述之密碼鎖，可避免他人盜用您的手機。密碼鎖 (PUK和 PUK2碼除外) 可以使用[功能表 9-4-5]變更密碼功能。請參考92頁。



PIN碼(4 至8 位數字)

PIN碼(個人識別碼) 能保護您的SIM卡免於遭受他人盜用。通常PIN碼會隨SIM卡一起提供。當PIN碼設定為啓用時，每次開機時，手機將會 要求您輸入PIN碼。相反的，若PIN碼設定為關閉時，手機不需輸入 PIN碼即會自動連接網路。

PIN2碼(4 至8 位數字)

有些SIM卡會提供PIN2 碼，需要輸入此密碼才能使用某些功能如電話帳單通知、固定撥號等。這些功能僅在SIM卡支援的情況下才能使用。

PUK碼(4 至8 位數字)

要變更已被鎖定的PIN 碼，必須輸入PUK (PIN開鎖密碼) 碼。PUK碼可能會隨SIM卡一起提供。如果沒有，請洽當地電信公司以取得該密碼。如果遺失該密碼，也可向電信公司索取。

PUK2碼(4 至8 位數字)

有些SIM卡會附隨提供PUK2碼，輸入此密碼才能變更已被鎖定的PIN2碼。如果遺失該密碼，也可向電信公司索取。

手機密碼(4 至8 位數字)

手機密碼可防止手機遭受他人擅用。此密碼通會隨手機提供。要刪除所有手機的資料輸入並啓用「恢復原廠設定」功能表時，必須輸入此密碼。預設密碼為“0000”。

來電轉接密碼

 



來電轉接密碼提供您使用來電轉接服務，詳細說明請參考85頁。





一般功能

撥打電話與接聽來電

 

撥打電話

1. 請確定您的手機是開機狀態。
2. 鍵入電話號碼，包括區碼。如要編輯號碼請您使用左/右導覽鍵，您可使用左/右導覽鍵移動字元至您想要修改的位置，按下清除鍵一次可清除一個字元()要全部清除您則需要。
 - ▶ 長按著清除鍵()清除全部的字元。
3. 按下發話鍵()撥出電話。
4. 要結束通話，可以按 () 結束通話或者按下右快捷鍵。您也可以利用關閉折蓋結束通話。

使用發送鍵撥出電話

1. 在待機模式中，按下發送鍵()，您可檢視最近通話資料包括已接，已撥以及未接來電紀錄。
2. 您可以透過導覽鍵 上/下移動選擇您想撥出的號碼。
3. 按下 。

撥打國際電話

1. 按住  鍵以撥打國際撥接碼。「+」字元可以取代國際撥接碼。
2. 輸入國碼、區碼及電話號碼。
3. 按下 。



結束通話

當您結束通話時，請按下(📞)鍵。

使用電話簿撥打電話

您可以儲存姓名及電話於SIM卡或手機的記憶體內，所以您可以透過電話簿內的資料輕鬆的撥出電話更多詳細的資料請參閱49-55頁。

調整通話音量

如果您想要在通話中調整耳機音量，請您使用側鍵(🔊)。按上鍵增加音量按下鍵降低音量。

接聽來電

當您收到來電時手機會響鈴並且會有來電圖示於螢幕上閃動。如果來電者是可辨識則來電者(姓名或照片存於電話本)將會顯示於螢幕上。

1. 可以使發話鍵接聽來電，或打開折蓋接聽。

請注意

- 您可以在通話中繼續使用電話簿及其他功能表。

2. 結束通話，如果折蓋已關閉或按下(📞)。



一般功能

顯示網路訊號強度

您可透過螢幕上的訊號強度  檢視目前手機收訊狀況。訊號強度依手機的收訊的狀況，而改變特別是在大樓內收訊狀況可能不佳，此時只要您向窗口移動收訊狀況就可能獲得改善。

輸入文字

您可以透過手機按鍵輸入字元。例如，儲存電話簿中的聯絡人姓名，寫訊息，新增個人問候語或在行程表中安排行程活動。

下列的輸入方式將適用於本手機中。


T9 輸入

在T9 模式下，您只需按對應的字母鍵一次。T9 輸入將以內建字典為基準為您組合相近的文字，當然您也可以字典中新增常用語。

ABC 模式


在此模式輸入字元時您需依按鍵上字元編排順序，按下按鍵一，二，三或四次一直到您要的字元出現。

123 模式 (數字模式)

在此模式時您僅能就按鍵上的數字進行輸入，要結束123輸入模式，請按  鍵。





變更文字輸入模式









1. 您可以依螢幕右下角的圖示，了解您目前的輸入狀態。
2. 要變更輸入模式請按下  鍵，作輸入法的切換，您可參考螢幕右下角圖示說明。


文字輸入模式

使用T9輸入法輸入字元可以減化您的輸入的步驟，在您第一次輸入字元時手機會顯示您所輸入的字元並且依照內建字典進行文字組合，當然您也可以字典中新常用語，作為個人字典使用。

1. 使用按鍵  至按鍵  輸入字元。一個字母只需按一次按鍵。
 - 正確文字將依您所輸入字元而顯示。
 - 如果文字仍然不正確，您可以按下下導覽鍵進行選擇正確的文字。

請注意

- 輸入     則出現 **Good**。
- 輸入     按下 [下-導覽鍵] 則出現 **Home**。

- 如果您在T9找不到想要輸入的文字您可以切換回ABC模式。
- 當您在T9輸入模式下。您可以按下左快捷鍵[選項]進行選擇T9語言的輸入法或按  鍵切換語言。在此選項您也可以關閉T9功能。一般輸入時T9預設為開啓。



一般功能

- 刪除或編輯已輸入文字。
- 您可以按 **[0]** 字鍵輸入空格。刪除文字請按一下 **[c]** 字鍵。一直按著 **[c]** 字鍵可將所有輸入的字清除。

請注意

- 如果您不想儲存所輸入的資料，您只要按下 **[↵]** 即可返回待機模式。

► 中文輸入法

1) **ST (筆劃輸入法)**：如何使用筆劃輸入法選取中文字元。
當您逐一輸入各別筆劃字根後，中文字元便會顯示出來。使用 **[↵]** 及 **[↵]** 鍵來查看其他字元選項，並按 **[OK]** 加以選取。同樣地，使用 **[↵]**、**[↵]**、**[↵]** 及 **[↵]** 鍵來尋找更多不同字元。

例如 要輸入「你好」，請順序按數字鍵 **[3]**、**[2]** 及 **[3]**，然後您將會看到首個字元「你」。現在，按 **[OK]** 然後再按 **[1]** 鍵選取「好」。

按鍵	筆劃	按鍵	筆劃
[1]	一	[6]	? (通配符號)
[2]	丨	[7]	
[3]	丿	[8]	
[4]	丶	[9]	
[5]	フ	[0]	選擇鍵

<筆劃表>



2) **注音輸入 (Bopomofo)**：依照注音符號可讓您輸入您所需要的中文字。詳細的輸入方法介紹以及鍵盤對照表，請參考以下說明：

例如) 要輸入「必要」，請順序按數字鍵 **1** ^ㄅ_{abc} 及 **0** ^ㄛ_o，然後「ㄅㄛ」將出現在外部編輯螢幕。因為許多字元均具有相同的注音方式。所以您應從其中選取字元「必」(按 **OK** 然後再按 **3** ^ㄣ_{def})。在選取首個字元後，接著會出現其他各種字元。您可用相同方法選取「要」(按 **OK** 然後再按 **2** ^{ㄨㄢ}_{abc})。

按鍵	注音	按鍵	注音
1 ^ㄅ _{abc}	ㄅ ㄆ ㄇ ㄊ	6 ^ㄩ _{uvw}	ㄩ ㄜ ㄝ ㄞ
2 ^{ㄨㄢ} _{abc}	ㄨ ㄨㄢ ㄨㄣ	7 ^{ㄩㄣ} _{vw}	ㄩㄣ ㄜㄝ ㄞㄟ
3 ^ㄣ _{def}	ㄣ ㄤ ㄥ	8 ^{ㄩㄣ} _{vw}	ㄩㄣ ㄜㄝ ㄞㄟ
4 ^ㄟ _{ghi}	ㄟ ㄠ ㄡ	9 ^{ㄩㄣ} _{vw}	ㄩㄣ ㄜㄝ ㄞㄟ
5 ^ㄟ _{ghi}	ㄟ ㄠ ㄡ	0 ^ㄛ _o	ㄛ ㄜ ㄝ

► 使用 ABC 輸入模式

您可使用按鍵上數字鍵 **2** ^ㄅ_{abc} 至 **9** ^{ㄨㄢ}_{vw} 輸入字元。

- 依按鍵上字元排列順序之指示按下按鍵：
 - 按一次選擇第一個字元
 - 按二次選擇第二個字元
 - 依此類推
- 要插入空格，請按一次按鍵 **0** ^ㄛ_o。刪除文字請按一下 **⌫** 字鍵。一直按著 **⌫** 字鍵可將所有輸入的文字清除。



一般功能

請注意

- 相關按鍵資訊請參考下列表格。

按 鍵	按順序顯示的字元	
	大 寫	小 寫
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	空格	空格

► 使用 123(數字) 輸入模式

數字輸入模式可在一般簡訊(電話號碼，列如)輸入數字。
您可以在數字輸入模式中按下任何您想要輸入的數字。



電話簿

您可以儲存聯絡人電話於SIM卡中，此外您一次同時可以儲存255個號碼於手機記憶體中。

SIM卡與電話記憶方式類似。(相關操作說明請參考49-51頁說明)

來電功能表

通話時手機螢幕上顯示的功能表，與待機螢幕上顯示的預設主功能表不同，它具有下列項目差異，請按下左功能鍵[選項]選擇。


撥打第2個電話


您可從電話簿取得一個撥接號碼，以撥打第二通電話。按右快捷鍵[電話簿]，然後選取尋找。通話時，如要將撥接號碼儲存到電話簿，請按右快捷鍵[電話簿]，然後選取[新增]。

切換通話

您可以使用左快捷鍵在二個通話中切換通話。

接聽來電


接聽來電時您只需要按下  鍵。同時當您已經在通話中手機也足夠以嘟嘟聲通知您有另一個來電。此功能稱為「來電等候」，僅在網路支援時才可使用。要取得如何啓用與停用此功能的詳細資訊，請參閱來電等候[功能表 9-3-4]。


如已啓用來電等候功能，您可以按  鍵或按左快捷鍵[接聽]與保留與接聽，保留第一通電話並接聽第二通電話。您可以依次選取左快捷鍵 結束或接聽正在等候的來電。



一般功能

來電拒接

在不接聽的情況下拒接來電您可以按  鍵。

在通話中您可以使用左快捷鍵[功能表]選擇 多方通話/拒接來電或按  鍵拒接。

麥克風靜音

在通話時按左快捷鍵[選項]鍵，然後選取靜音，可使麥克風靜音。按左快捷鍵[取消靜音]，可取消手機靜音。當手機靜音時，來電者將聽不見您的聲音，但您仍可聽見來電者的聲音。

在通話中開啓雙音多頻音


要在通話中啓用雙音多頻功能(例如: 讓手機使用自動切換功能)，請 依次選取左快捷鍵[選項] 雙音多頻開啓。使用相同方法可關閉雙音多 頻功能。

多方通話或電話會議

如果您的網路系統商支援多方通話或會議服務，您即可使用此功能同時與超過一個來電者通話。要啓動多方通話，您必須至少有一個電話正在通話中以及一個電話保留中，同時這兩個電話都已被接聽。啓動多方通話之後，啓動者可新增、中斷或隔離（即從多方通話中離開，但仍與您連線）任何一個電話。這些選項都包含在通話中功能表內。多方通話中的來電者人數最多爲五人。啓用多方通話後，您可以對其進行控制，並且只有您才可以新增通話。



撥打第二個電話

您可以在通話時撥打第二個電話。要撥打第二個電話，請輸入第二個號碼，然後按  鍵[發送]。在您撥打第二個電話時，第一個電話將被自動保留。您可以依次選取左快捷鍵[選項]進行切換，在兩個電話 之間切換。

設定多方通話

您可以一次選取[選項]與多方通話/全部加入，將一個或多個保留通話 連接到目前的通話，形成一組多方通話。

保留多方通話

要保留多方通話，請依次選取左快捷鍵[選項]與**多方通話/全部保留**。

啓用保留中的多方通話

要啓用保留中的多方通話，請依次選取左快捷鍵[選項]選擇與**多方通話/全部加入**。

新增通話到多方通話

新增通話到多方通話，要將目前通話加入到被保留的多方通話中，請 依次選取左快捷鍵[選項]選擇與**多方通話/全部加入**。

顯示多方通話中的通話者

要在手機螢幕上捲動查看參與多方通話的來電者號碼，使用上/下導覽鍵進行瀏覽。




一般功能

在多方通話中進行私人通話

與多方通話中的某個通話者進行私人通話，請先使其號碼顯示在螢幕上，然後依次選取左快捷鍵[選項]與**多方通話/私人通話**保留所有其他來電。

結束多方通話

按  鍵可中斷目前顯示的多方通話來電。要結束多方通話，請按 左快捷鍵[選項]，然後選取**多方通話/結束多方通話**。再選取**多方通話/全部結束**後，將會結束所有進行中與保留中的通話。



1 情景模式

- 1 震動
- 2 靜音
- 3 一般
- 4 大聲
- 5 耳機
- 6 汽車



2 通話記錄

- 1 未接來電
- 2 已接來電
- 3 已撥來電
- 4 刪除最近通話
- 5 通話時間
- 6 通話計費
- 7 計費設定
- 8 GPRS 訊息



3 娛樂與工具

- 1 鬧鐘
- 2 計算機
- 3 我的資料夾
- 4 單位換算器
- 5 時區設置
- 6 語音備忘錄
- 7 啓動紅外線



4 公事包

- 1 行程表
- 2 備忘錄
- 3 電話簿



5 訊息

- 1 一般簡訊
- 2 多媒體簡訊(MMS)
- 3 語音信箱
- 4 區域廣播
- 5 常用短語
- 6 記憶體狀態



功能表結構

6



6 照相機

- 1 拍照
- 2 相簿

7



7 遊戲與應用程式

- 1 遊戲
- 2 應用程式
- 3 下載
- 4 訊息提示

8



8 行動網

- 1 首頁
- 2 書籤
- 3 Push訊息
- 4 網路設定
- 5 進入URL
- 6 暫存設定
- 7 安全認證
- 8 重設網路設定
- 9 瀏覽器版本

9



9 設定

- 1 日期和時間
- 2 手機設定
- 3 通話設定
- 4 保密設定
- 5 網路設定
- 6 GPRS設定
- 7 恢復原廠設定

0



0 行動增值服務

本功能表內容請依照SIM卡及網路服務而定。



此手機提供您可自行更改相關設定。相關功能可搭配二個快捷鍵
☞如☞所示，您可以輕易的檢視每一個主功能表與子功能表的
設定狀況。





情景模式 [功能表 1]

在情景模式中, 您可以依不同的場合、環境、群組修改您的電話聲音。手機總共提供了6組不同環境情景模式: **震動**, **靜音**, **一般**, **大聲**, **耳機**與**汽車**。除了震動與靜音外, 其他情景模式均可自訂選項。

請按下功能表鍵()使用導覽鍵選擇您所使用的情景模式。

選取情景模式 [功能表1-X-1]

1. 進入情景模式選單中。
2. 以上/下導覽鍵捲動螢幕至您想要啓動的情景模式後按下OK鍵或以左快捷鍵 [確認]。
3. 完成後, 請選擇啓動。

更改情景模式內容 [功能表1-X-2]

以上/下導覽鍵捲動螢幕至您想要啓動的情景模式後按下OK鍵或以左快捷鍵 [確認], 選擇更改情景模式相關設定。

來電提示類型: 可根據不同環境選取來電提示類型, 如鈴聲、震動等。

鈴聲類型: 可根據不同環境設定不同的鈴聲。您可使用上/下導覽鍵試聽鈴聲清單中所有鈴聲並選擇您想設定的鈴聲。

鈴聲音量: 可根據不同環境設定不同的鈴聲音量。

簡訊提示類型: 可根據不同環境, 設定收到訊息時的來電提示。

簡訊提示音: 可以選取收到訊息的提示音。

按鍵音: 可根據不同的環境選取不同的按鍵音。

按鍵音量: 可根據不同環境設定不同的按鍵音量。



折蓋音效: 設定開啓及關閉上蓋時的音效。

效果音量: 您可根據不同環境設定不同的音效音量。

電源開關鈴聲: 您可根據不同環境設定不同的電源開啓/關閉音量。

自動接聽: (只有在手機接上汽車免持聽筒時) 您才可以啓動自動接聽功能。選擇自動接聽的所需的時間。

情景模式 - 重新命名 [功能表1-X-3]

您可以變更除震動、耳機及汽車...等情景模式的預設操作模式名稱。


1. 如欲更改情景模式名稱，在情景模式的目錄下以上/下導覽鍵選擇您要更改的情請模式，選擇後按下OK鍵或者左快捷鍵並選擇重新命名。
2. 輸入您想要命名的名稱後按下OK鍵或左快捷鍵[儲存]。



通話記錄 [功能表 2]

在此功能表可顯示最近未接聽的電話號碼。您可以撥打這些電話號碼、儲存，以及查看日期與時間，但需要視您的網路系統商是否提供來電識別功能而定(CLI)。

如過網路系統商能提供系統服務您將可以同時檢視來電的姓名、號碼與圖片並且也可以檢視通話時間與費用。

按下功能表()並且使用導覽鍵選擇**通話紀錄**。

未接來電 [功能表 2-1]

此功能表可顯示最近未接聽的10通電話號碼。在您按下左快捷鍵後[選項]，您還可以：

- 查看細節如果來電號碼已經存在電話中。
- 儲存號碼到電話簿的通訊錄中。
- 傳送簡訊。
- 刪除此通通話紀錄。

注意

- 也可以刪除所有最近通話紀錄。

- 編輯電話簿裡儲存的姓名。

注意

- 只能編輯電話簿中的姓名。不可為其他號碼 (如 FDN 及 SDN) 編輯姓名。



已接來電 [功能表2-2]

此功能表可顯示最近已接聽的20通電話號碼。在您按下左快捷鍵後[選項]，您還可以：

- 查看細節如果來電號碼已經存在電話中。
- 儲存號碼到電話簿的通訊錄中。
- 傳送簡訊。
- 刪除此通通話紀錄。

注意

- 您也可以刪除所有最近通話紀錄。

- 編輯電話簿裡儲存的姓名。

注意

- 只能編輯電話簿中的姓名。不可為其他號碼 (如 FDN 及 SDN) 編輯姓名。



通話記錄 [功能表 2]

已撥來電 [功能表2-3]

此功能表可顯示最近已撥出的20通電話號碼。在您按下左快捷鍵後[選項]，您還可以：

- 查看細節如果來電號碼已經存在電話中。
- 儲存號碼到電話簿的通訊錄中。
- 傳送簡訊。
- 刪除此通通話紀錄。

注意

- 您也可以刪除所有最近通話紀錄。

- 編輯電話簿裡儲存的姓名。

注意

- 如果啓用 FDN，則選單中不會顯示 [編輯姓名] 選項。

刪除最近通話 [功能表2-4]

您可以刪除最近保留在未接來電、已接來電、已撥電話或全部通話列表記錄中的電話號碼。



通話時間 [功能表2-5]

此功能表可以顯示您所撥出與接收的通話時間並且可將通話時間重新設定。您可以使用上/下導覽鍵捲動螢幕進行選擇，選擇完成後按下[OK] 鍵或左快捷鍵[重設] 針對您所選擇的項目重新設定所有通話時間。爲了避免不當的操作此向功能您必須輸入您的PIN2碼才能完成設定。

- **最後通話**：最後通話的時間
- **已接來電**：已接來電的時間
- **已撥電話**：已撥電話的時間
- **所有通話**：所有通話時間

注意

- 系統商的實際通話費用帳單會隨網路功能、帳單四捨五入計算、稅額等而有不同。

通話計費 [功能表2-6]

此項服務您可以設定幣別與單價但請洽詢系統供應商以瞭解計費單價。要在此功能表中選取幣別或單價，您可能需要輸入PIN2碼。

注意

- 系統商的實際通話費用帳單會隨網路功能、帳單四捨五入計算、稅額等而有不同。



通話記錄 [功能表 2]

計費設定 [功能表2-7]

- **通話費用限制**：此網路服務可讓您將電話費用限制在選定的計費金額內。如果您選取讀取，將會顯示剩餘金額。如果您選取更改，則可變更金額限制。但是您必須輸入您的PIN2碼您才可以進更改。
- **設定費率**：您可以設定目前費率的貨幣類型與金額。設定幣別與單價。請洽詢系統供應商以瞭解計費單價。要在此功能表中選取幣別或單價，您可能需要輸入PIN2 碼。

注意

- 在所有金額全部用盡時，除緊急電話以外，您將無法撥打任何電話。您需要輸入PIN2碼才能設定電話費用限制，視SIM卡而定。

- **自動顯示**：此網路服務可讓您自動查看上次通話的費用。若設定為 開啓，可以在通話結束後自動顯示費用。

GPRS 訊息 [功能表2-8]

您可以檢視所有透過GPRS網路傳輸的數據，此外，您也可以您GPRS 的上限時間。

(GPRS 所代表的是整合型封包無線傳輸服務。)

- **WAP 訊息**

您可以檢視在WAP上所使用的資料量與時間。

在功能表中，在下左快捷鍵[重置]或者OK清除所有資料。



- **外部裝置**


您可以檢視外部裝置所使用GPRS的資料量與時間，例如一邊通訊連接埠。

- **總數據**

您可以檢視所有透過WAP與外部裝置的數據使用數量。



娛樂與工具 [功能表 3]

按下功能表()並且使用導覽鍵選擇娛樂與工具選項。

鬧鐘 [功能表3-1]

此功能提供您可在特定的時間提供您鬧鈴提示，相關操作如下所示。

開啓

開啓鬧鐘功能。

1. 進入鬧鐘功能表。
2. 使用左/右導覽鍵將選項改為[開啓]。
3. 然後輸入要設定的鬧鐘時間。
4. 使用左/右導覽鍵選取鬧鈴週期：一次，每日，每週，每月。
5. 選取要設定的鬧鐘鈴聲：使用左/右導覽鍵選取要設定的鬧鐘鈴聲。

關閉

關閉鬧鐘功能。

計算機 [功能表3-2]




含標準功能，如 +、-、 \times 、 \div ：加、減、乘及加、減、乘除。

手機本身提供您簡易的計算機功能，相關操作如下所述：

使用計算機

1. 按下數字鍵輸入數字。
2. 使用導覽鍵選取計算符號。
3. 按下[結果]查看結果，請按下左快捷鍵[結果]或者按OK鍵也可以。
4. 按下左快捷鍵[清除]或輸入數字以重複上述程序。

注意

- 要清除輸入錯入的字元請按  鍵。
- 要輸入小數點的字元請按  鍵。
- 要輸入負數字元請按  鍵。

我的資料夾 [功能表3-3]

我的資料夾包含3個功能:圖片，動畫與聲音。您可以查看、聆聽、刪除或重新命名已下載的資料。您可以透過WAP網站或MMS及SMS下載 圖片，動畫及聲音，下載後的資料您可進行傳送給他人或進行修改或刪除。您可以將資料夾內的動畫圖案設成您的待機圖片。在聲音部分，可以將您下載的鈴聲設成來電鈴聲。

圖片[功能表3-3-1]

動畫[功能表3-3-2]

聲音[功能表3-3-3]

記憶體狀態[功能表3-3-4]




娛樂與工具 [功能表 3]

單位換算器 [功能表3-4]

轉換測量單位。轉換單位類型共有4種：長度、面積、重量及體積。

1. 您可以按右快捷鍵[單位] 鍵選取四種單位類型的其中一種。
2. 使用上/下導覽鍵選擇標準值。
3. 按下左/右導覽鍵選擇要轉換的單位。
4. 移動導覽鍵至單位轉換選項。
5. 按下左/右導覽鍵選擇要轉換的單位。
6. 輸入您要轉換的數值。

注意

- 您可以使用  鍵輸入小數點。

時區設置 [功能表3-5]

您可以查看世界主要59個城市的時間，請使用左/右導覽鍵移動尋找。手機螢幕上城市名稱以及目前該城市的日期與時間。

選擇目前您所在的時區設定方式如下：

1. 按下左/右導覽鍵移動尋找鍵選取該城市所屬時區。
2. 您也可以按下左功能鍵[設定] 把您選取的城市時間設定為目前的時間。

注意


- 網路狀況可以會影響時區設定之功能。

語音備忘錄 [功能表3-6]


語音備忘錄功能可容許您錄製長達30秒的語音紀錄，您總共可以錄製90秒的語音記事，所以語音紀錄的則數將依90秒為上限。

您可以使用左快捷鍵撥放已錄製的語音記事亦可進行刪除已錄製的語音記事或者錄製新的語音記事。

錄音 [功能表3-6-1]

1. 在一般待機模式中按下  下導覽鍵直接入語音記事功能。
2. 開始錄音後，將顯示錄製中的訊息與剩餘時間。
3. 如果您要結束錄音，請按下左快捷鍵[儲存]。
 - **撥放**：您可以撥放已錄製完成的語音記事，螢幕上方並會顯示錄製 的日期與時間。
 - **刪除**：您可以刪除語音記事。
 - **新錄音**：您可以錄製新的語音記事。
 - **全部刪除**：您可以刪除全部的語音記事，請使用左快捷鍵選擇[是] 進行清除。

檢視語音紀錄清單 [功能表3-6-2]

您可以在待機模式中按 。檢視已錄製完成的語音記事紀錄。您也可以進行撥放或刪除語音紀錄。

注意

 
- 在一般待機模式中，您可以按下 下導覽鍵直接入語音記事功能。錄製新的語音記事。
- 如果目前手機的記憶體已滿載您則必須刪除一些舊的語音記事後您才可以重新錄製。



娛樂與工具 [功能表 3]

啓動紅外線 [功能表3-7]

如果啓用此功能，便可以使用紅外線進行PC同步處理。使紅外線方式如下：

1. 安裝紅外線驅動程式與數據機程式。
2. 安裝網路撥號軟體。
3. 設定您的上網組態並且啓動您的PC上紅外線裝置通訊連接埠。
4. 啓動手機上的紅外線裝置，您可以於手機上的右下角看到紅外線  的圖示。
5. 進行網路撥號。


如果在30內手機的紅外線組件與PC的紅外線組件沒有連接成功，手機將會自動停止紅外線功能回應。

相關更多的訊息請聯絡您的網路系統商。

注意

- PC Sync 是一套程式，可透過數據傳輸線在PC和手機間交換資料。詳情請參考光碟中的PC Sync Help 檔案指引。



按下功能表鍵()。並使用導覽鍵選擇**公事包**。

行程表 [功能表4-1]

進入此功能表，行程表即顯示在螢幕最上方有日期區，另外，在螢幕底部，有圖示區(行程表、備忘錄)。每次變更日期時，行事曆就會據此進行更新。且該特定日期會用方框游標加以標示。如果在行事曆下方指示列出現該日期，則表示當日記有行程或備忘錄。此功能有助於提醒您行程或備忘錄。如您為記事設定此項功能，手機到時將會發出鬧鈴聲。

檢視 [功能表 4-1-1]

顯示所選日期的行程。按下[選項]可以進行。

修改 [功能表 4-1-2]

修改目前的行程。

刪除 [功能表 4-1-3]

刪除前的行程。

新增 [功能表 4-1-4]

最多可以容納20則記事，每則記事最多可以編輯39個字元。
(中文則為21個字元)

行事曆 [功能表 4-1-5]

回到日曆選項。



公事包 [功能表 4]

行程鬧鈴 [功能表4-1-6]

手機的鬧鈴將可以依您所需求提供鬧鈴提示。

檢視所有行程表 [功能表4-1-7]

顯示您設定的所有行程。使用瀏覽行程清單。您可以使用上/下導覽鍵來使用與瀏覽相同的功能表。

進入日期 [功能表4-1-8]

您可使用左/右導覽鍵移動輸入日期並直接進入特定的日期。

刪除舊紀錄 [功能表4-1-9]

您可以刪除已過的行程紀錄。

全部刪除 [功能表4-1-10]

您可以刪除全部的行程紀錄，但在刪除前您需進行確認。

備忘錄 [功能表4-2]

您可進行新增，修改，刪除存在備忘錄上的資料。

1. 使用上/下導覽鍵捲動螢幕上到備忘錄。
2. 按下左快捷鍵 [新增]。
3. 輸入備忘錄內容後並且按下左快捷鍵 [選項]。

您可以執行子目錄如下。

- **儲存**：您可以儲存備忘錄。
- **T9 語言**：選擇您在備忘錄中的輸入法。
- **退出編輯器**：您可以使用此功能退出回到備忘錄。

當您的手機已經有儲存的備忘資料時，

1. 選擇備忘錄。
2. 按下左快捷鍵[選擇]。
3. 按下左快捷鍵[選項]。

進入選項後您可選擇。

- **修改**：您可以進行備忘錄編輯。
- **刪除**：您可以刪除此備忘錄。
- **新增**：您可新增一筆備忘錄。
- **全部刪除**：刪除所有備忘錄資料。

電話簿 [功能表4-3]

您可以儲存聯絡人電話於SIM卡中，此外您一次同時可以儲存255個號碼於手機記憶體中。SIM卡與電話記憶方式類似相關操作如下：

- 在待機模式下，按左快捷鍵[功能表]開啓電話簿，並且選擇**公事包** → **電話簿**。
- 或者，在待機模式下，按右快捷鍵[電話簿]。

尋找 [功能表4-3-1]

1. 在功能表模式下，選擇**公事包** → **電話簿**，再選取**尋找**。
或是在待機模式下，按右快捷鍵 [電話簿]，再選取「尋找」。
輸入您要找尋的名稱的字首後，按下左快捷鍵[尋找]。

注意

- 在待機模式下也可以按上導覽鍵捲動尋找電話簿內容。



公事包 [功能表 4]

2. 在您搜尋到您要找的聯絡人資料後，您可以直接按[發話鍵]撥出電話。或按下左快捷鍵[選項]相關選項如下。
 - **查看細**：檢視聯絡人相關資料。
 - **修改**：修改聯絡人姓名，電話及群組。以及電子郵件地址、備註和電話簿相片。
 - **刪除**：刪除此筆資料。
 - **寫一般簡訊**：傳送多媒體簡訊。
 - **寫多媒體簡訊**：傳送多媒體簡訊。
 - **複製**：複製此筆聯絡人資料到手機記憶體或SIM卡。
 - **聲控語音**：錄製聲控撥號語音。
 - **主要號碼**：如果有儲存兩個以上的號碼，按此顯示所有的號碼。

新增 [功能表4-3-2]

手機記憶容量為255筆。SIM卡記憶容量會隨系統供應商而異。相關電話簿記憶體設定請參考 [功能表 4-3-8-1]。

您可以儲存聯絡人名稱將近 20個字元儲存在手機記憶體(約10個中文字)，而SIM卡的部分則取決於SIM卡記憶體容量(一般約7個中文字)。

1. 在功能表模式下，選擇**公事包** → **電話簿**；或是在待機模式下，按右快捷鍵 [電話簿]。
2. 捲動螢幕選項至新增，並按下[確認]。
3. 您可以選擇新增的資料將儲存於SIM卡或手機的記憶體。
 - **新增至SIM卡**
您可以輸入新增的聯絡人的姓名與電話並且選擇群組至SIM卡記憶體。(依SIM卡而定)

• 新增至手機

可以輸入姓名、多個號碼 (手機、家用、工作)、電子郵件地址、必須輸入的群組、備註及電話簿相片。

注意

- 電話簿相片只能存入手機記憶體。

快速撥號 [功能表4-3-3]

您可以使用數字鍵 $\boxed{2 \text{ abc}}$ 至 $\boxed{9 \text{ wxyz}}$ 作為快速撥號鍵。您可以按下快速撥號清單的 [發送] 鍵撥號至該號碼，或是按下左鍵 [選項] 並選擇撥號。或者，在您完成快速撥號鍵設定後您只需按住數字鍵約 $\boxed{2 \text{ abc}} - \boxed{9 \text{ wxyz}}$ 秒後即可進行撥號。

1. 在功能表模式下，選擇**公事包** → **電話簿**；或是在待機模式下，按右快捷鍵 [電話簿]。
2. 捲動螢幕選項至快速撥號，並按下[確認]。
3. 要把號碼加入快速撥號，選擇<空>後再按左快捷鍵[加入]。您可以按[選擇]在電話簿裡尋找選取姓名。
4. 用左快捷鍵 [選項] 可以修改或刪除快速撥號號碼、撥出電話、撰寫文字訊息或是撰寫多媒體訊息。您會看見下列選項：
 - **更改**: 修改列出的號碼。
 - **刪除**: 刪除列出的號碼。
 - **撥號**: 撥電話至該號碼。
 - **寫一般簡訊**: 撰寫文字訊息給該姓名。
 - **寫多媒體簡訊**: 撰寫多媒體訊息給該姓名。



公事包 [功能表 4]

聲控撥號清單 [功能表4-3-4]

您可以設定一段語音給一個姓名，使用聲控撥號。您可以按下 [發送] 鍵撥號至該號碼，或是按下左鍵 [選項] 並選擇撥號。

1. 在功能表模式下，選擇**公事包** → **電話簿**；或是在待機模式下，按右快捷鍵 [電話簿]。
2. 捲動至語音列表後按確認。
3. 按下左快捷鍵 [新增] 把號碼加入至語音列表。您可以按 [選擇]，在電話簿裡尋找選取姓名。選好號碼後錄音。
4. 按下左快捷鍵 [選項] 可以播放、更改、刪除，或是撥號、新增及全部刪除所有語音列表。您會看見下列選項：
 - **播放**：播放附加在電話號碼上的聲控語音。
 - **更改**：變更聲控語音。
 - **刪除**：刪除聲控語音。
 - **通話**：選取此功能表可撥出電話。
 - **新增**：新增一組語音撥號。
 - **全部刪除**：刪除所有語音撥號資料。

注意

- 您可以使用約10組的語音撥號號碼。

群組 [功能表4-3-5]

每個群組可以列出最多20個成員。共有7個群組清單可供設定。

1. 功能表模式下，選擇**公事包** → **電話簿**；或是在待機模式下，按右快捷鍵 [電話簿]。
2. 選擇群組。群組清單中將包含下列名單：**家人**，**重要人士**，**朋友**，**同事**，**群組 1**，**群組 2** 以及其他。
3. 使用左快捷鍵的[選項]設定您群組的功能，相關子功能表如下。
 - **成員清單**：顯示選定的群組成員。
 - **來電群組鈴聲**：您可指定群組成員的來電鈴聲。
 - **群組圖示**：您可針對群組選取圖片。
 - **新增號碼**：新增群組成員。每個群組成員不得超過20個。
 - **刪除號碼**：從群組成員清單中移除成員。但是，姓名與號碼仍然會保留在電話簿中。
 - **重新命名**：變更群組名稱。

全部複製 [功能表4-3-6]

您可以將項目從SIM卡記憶體複製/移到手機記憶體，反之亦然。

- **SIM卡存至手機**：將項目從SIM卡複製到手機記憶體。
- **手機存至SIM卡**：將項目從手機記憶體複製到SIM卡。

您可以查看下列子功能表。

- **保留原始號碼**：複製時，保留原始號碼。
- **刪除原始號碼**：複製時，清除原始號碼。



公事包 [功能表 4]

全部刪除 [功能表4-3-7]

刪除SIM卡、手機及聲控撥號的所有項目。除語音列表外，此功能需要輸入安全密碼。

設定 [功能表4-3-8]

- **記憶設定**

您可以設定SIM卡或手機的電話簿資料儲存的位置。如果您選的儲存方式為自選則每當您新增一筆聯絡人資料時，手機將會詢問您一次您想要的存放位置。

- **尋找方式**

您可以設定姓名或號碼作為電話簿的搜尋方式，但如果您所選擇的搜尋方式為自選則每次您尋找聯絡人資料時手機將會詢問您一次您想要的搜尋方式。

- **圖片顯示**

在搜尋電話簿時，可以把相片列表設為相片檢視或是清單檢視。如果選擇相片檢視，清單上就會顯示相片。

訊息提示 [功能表4-3-9]

- **特別服務號碼(依 SIM 卡而定)**

如果 SIM 卡有支援的話，使用此功能可以檢視由網路業者指派的 特別服務號碼(SDN)。這類號碼包括緊急、查號台與語音信箱號碼等。

1. 選擇 特別服務號碼選項。
2. 畫面會顯示可用的服務名稱。
3. 使用上/下導覽鍵選擇服務。

- **記憶體狀態**

您可以檢視目前手機與SIM卡的記憶容量。

- **本機號碼 (依SIM卡功能而定):**

顯示您SIM卡的手機號碼。




訊息 [功能表 5]


按下功能表(左快捷鍵)()並且使用導覽鍵進行選擇訊息功能。

一般簡訊 [功能表5-1]

此功能表包括一般簡訊 (簡訊服務)、語音訊息以及網路服務訊息之相關功能。

語音信箱及簡訊功能屬於系統網路功能請與您的系統網路服務商確認是否提供此項功能。

當此圖示出現時 ，代表您有新語音訊息。

當此圖示出現時 ，代表您收到新的簡訊。

如果手機顯示「記憶體已滿」，您要刪除在收信箱中的一些訊息或媒體及應用程式以釋放空間。

寫簡訊 [功能表5-1-1]

您可以編寫及修改文字訊息。

1. 輸入您的簡訊。相關簡訊輸入的資訊請參考24至26頁(輸入說明)。
2. 當您完成簡訊內容後，您要刪除在收信箱中的一些訊息或媒體及應用程式以釋放空間。

請按下左快捷鍵[選項]您可以選擇下列功能。

- **發送**：輸入傳送號碼或從電話簿中選擇傳送號碼或者您也可從最近撥號清單中選擇號碼。您可以將此簡訊同時傳送給5個人。請按下左快捷鍵[選項]。您可以選擇下列功能。
 - 發送(此選項必須在您輸入傳送號碼後才會出現)
 - 最近通話紀錄
 - 尋找



- **儲存到草稿**：將訊息儲存入草稿您可隨時在進行傳送。
 - **T9 語言**：選擇T9 語言輸入方式。
 - **清除文字**：清除所有輸入的文字。
 - **退出**：結束寫訊息功能表。
3. 在您完成簡訊內容後，您也可以使用右快捷鍵[附加]加入附件。
- **符號**：您可以加入一些特殊的符號。
 - **圖片**：您可以選擇在訊息中附加原始內建圖片或是從我的文件夾中 選取已下載的圖片。
 - **動畫**：您可在加強型簡訊中插入動畫(EMS)。 您可以在手機內建的15組動畫中選擇圖案作為傳送的內容。
 - **聲音**：您可以選取喜好的聲音附加至訊息中。
 - **文字範本**：常用短語是預設的訊息，您可以從列表中加入適合的常用短語。
 - **電話號碼**：您可以附加電話簿中的電話號碼。
 - **個人名片**：您可以將名片加入簡訊。

收信箱 [功能表5-1-2]

在您收到訊息時會顯示訊息符號。

閱讀訊息請按下功能表鍵並選擇 **訊息** → **一般簡訊** → **收信箱**。
或者，您也可以在一般待機模式中按下右導覽鍵(⇨)進入。



訊息 [功能表 5]

圖示	說明
	讀取SIM卡訊息
	未閱讀訊息
	已讀取訊息
	未讀取訊息
	已讀取傳送報告
	未讀取傳送報告

請注意

- SIM 訊息指專門儲存在SIM卡中的訊息。網路會自動把收到的訊息分為 SIM 訊息或一般訊息。

閱讀簡訊後相關操作說明如下，請按下左快捷鍵[選項]。

- **回覆**

隙回覆寄信者。

- **轉發**

將選取的訊息轉寄給其他人。

- **覆電**

撥打寄信者電話。

- **儲存資料**

取得相片、動畫、聲音、電話號碼、文字網頁或電子郵件地址。它們將儲存在我的文件夾或電話簿中。



- **刪除**



刪除目前訊息。

- **檢視資訊**

顯示選取的訊息更詳細的資訊。

發信箱 [功能表5-1-3]

您可以在發信箱中查看已傳送與未傳送的訊息。對於已傳送的訊息，您可以查看傳送狀態。

圖示	說明
	已傳送的SIM卡訊息
	已傳送的訊息

您可以透過下列功能進行。

- **轉發**

將目前訊息轉寄給其他人。

- **刪除**

刪除目前訊息。

- **檢視資訊**

顯示選取的訊息更詳細的資訊。



訊息 [功能表 5]

草稿 [功能表5-1-4]

在此功能表中您可以使用上/下導覽鍵已捲動的方式檢視草稿清單中所有文件，草稿清單內包含有：

- **發送**

您可以將此訊息傳送給其他人。

- **刪除**

刪除此訊息。

設定 [功能表5-1-5]

您可以設定一般簡訊相關功能。

- **訊息類型**

文字、語音、傳真、國內傳呼、X.400、電子郵件、ERMES 通訊息的類型會設為文字。您可以將文字轉換為其他格式。有關能否使用此功能，請洽詢系統商。

- **訊息有效日期**

此網路服務可讓您設定訊息中心可以儲存文字訊息的期限，可用的週期共有1個小時，12個小時，1天，1週與最長限度。

- **狀態報告**

如果設定為啟動，可以查看訊息是否傳送成功。

- **以相同服務回覆**

在傳送訊息時啟用此功能，可容許收件者給您回覆，而費用由您支付。



- **訊息中心號碼**

如果您要傳送文字訊息，則可透過此功能表接收簡訊中心地址。

- **傳送方式設定**

選擇GPRS或GSM，作為連接數率與收費的依據，相關訊息請與您的網路系統商洽詢。


刪除 [功能表5-1-6]

您可以刪除簡訊中已讀或全部訊息。

多媒體簡訊 (MMS) [功能表5-2]

多媒體簡訊可包含一般文字、圖片與聲音。但您的網路服務業者必須提供此項服務可以使用。並且發送端或是接收方的手機必須有此項功能您才可以接收與傳送多媒體簡訊或電子郵件。

寫多媒體簡訊 [功能表5-2-1]

1. 輸入訊息標題然後按 **OK** 或是左快捷鍵。
2. 使用右快捷鍵輸入您的訊息文字。您可以使用T9輸入模式輸入符號，數字與表情符號。在您完成後按下左快捷鍵[完成]。
3. 加入文字、圖片與聲音。您可以使用上/下導覽鍵進行選擇項目。
4. 您也可以移動游標置加入幻燈片選項加入幻燈片。按下OK鍵或者左快捷鍵[選擇]進行增加或者您也可以使用右快捷鍵[功能表]增加幻燈片 。



訊息 [功能表 5]

5. 在多媒體簡訊編輯的狀態下按下右快捷鍵[功能表]。相關選項如下：
- **發送**：可發送至多個號碼與電子郵件。
 - **預覽**：可檢視您要發送的多媒體內容。
 - **儲存**：將此多媒體簡訊存至草稿中。
 - **刪除**：刪除此多媒體簡訊。
 - **頁持續時間**：設定幻燈片間隔時間。
 - **頁格式**：把訊息內容向右、左、上或下對齊。
 - **新增頁**：在原幻燈片的前或後一張插入一張新的幻燈片。
 - **刪除頁**：刪除選擇的幻燈片。

收信箱 [功能表5-2-2]

在您收到簡訊息提示時，您可以透過下列圖示辨別訊息狀態。

圖示	說明
	已讀多媒體簡訊
	未讀多媒體簡訊
	已讀多媒體簡訊通報
	未讀多媒體簡訊通報

如果手機顯示「無空間接受新訊息」，您必須刪除某些儲存在手機中的簡訊，多媒體訊息或者應用程式。



- **計時停止**

當您收到一封包含多張幻燈片多媒體簡訊時，您可以使用計時停止功能，因為一般正常情況下圖片將會自動撥放，但如果您使用此項功能時，您則必須按下左快捷鍵[下一張]後才可以看到下一張圖片。

- **前一頁**

顯示前一張幻燈片。

- **重播**

重新播放多媒體簡訊。

- **儲存訊息**

儲存此訊息作為草稿或範本。

- **刪除訊息**

刪除目前的訊息。

- **全部回覆**

回覆給所有的發信者。

- **轉寄**

轉發此訊息給其他人。

- **詳細資料**

檢視接收訊息之相關資訊。

- **儲存項目**

取得圖片、聲音與文字。將它們儲存在我的文件夾。

- **回覆**

回覆給發信者。



訊息 [功能表 5]

發信箱 [功能表5-2-3]

您可以在發信箱中查看已傳送與未傳送的訊息。對於已傳送的訊息，您可以查看傳送狀態。

圖示	說明
	已傳送

- **計時停止**

當您收到一封包含多張幻燈片多媒體簡訊時，您可以使用計時停止功能，因為一般正，情況下圖片將會自動撥放，但如果您使用此項功能時，您則必須按下左快捷鍵[下一張]後才可以看到下一張圖片。

- **前一頁**

顯示前一張幻燈片。

- **重播**

重新撥放多媒體簡訊。

- **刪除訊息**

刪除目前的訊息。

- **轉寄**

轉寄此訊息給其他人。

- **儲存訊息**

儲存此訊息作為範本。

- **儲存項目**

取得相片、聲音與文字。將它們儲存在我的文件夾或電話簿中。



- **詳細資料**

查看接收的訊息之相關資訊：寄件者地址、主旨(僅限於多媒體訊息)、訊息日期與時間、類型與大小。

- **回覆**

回覆給發信者。

- **全部回覆**

回覆給所有的發信者。

草稿 [功能表5-2-4]

您可以使用此項功能，製作5組以上、用的多媒體草稿作為多媒體範本您可以參考下列子功能選項。

- **發送**

可發送至多個號碼與電子郵件。

- **預覽**

可檢視您要草稿中的多媒體內容。

- **儲存**

將此多媒體簡訊存至草稿或範本中。

- **刪除**

刪除此多媒體簡訊。

- **頁持續時間**

設定幻燈片間隔時間。



訊息 [功能表 5]

- **頁格式**
把訊息內容向右、左、上或下對齊。
- **增加幻燈片**
在原幻燈片的前或後一張插入一張新的幻燈片。
- **刪除幻燈片**
刪除選擇的幻燈片。

設定 [功能表5-2-5]

透過次項功能，您可以更改多媒體訊息相關設定。
請參可下列選項。

- **幻燈片持續時間**
設定每一張幻燈片撥放時間。
- **對齊**
設定多媒體內容顯示的位置。
- **有效期**
此網路服務可讓您設定訊息中心可以儲存文字訊息的期限。
- **自動下載**
開啓：自動下載訊息。
確認：您需進行確認才可下載訊息。
關閉：延期下載訊息。



- **訊息中心網址**

您需依照您所使用的行動電話系統輸入，相關參數如下。

各系統業者多媒體訊息網址如下：

請您於設定GPRS與MMS時依照您所使用的系統業者設定網路

Chunghwa MMS(中華電信):http://mms.emome.net:8002

FET MMS(遠傳電信):http://mms

TWN MMS(台灣大哥大):http://mms


Mobitai MMS(東信電訊):http://mms.mobeelife.net/mms/wapenc

TransAsia MMS(泛亞電信):http://mms


- **網路設定**

請參考68頁之說明。

語音信箱 [功能表5-3]

此項功能提供您快速的進入您的語音項箱服務。如果您的網路系統商支援此功能，則您可以接收留言。當新的留言到達時，螢幕上會顯示  符號。請向您的網路系統商洽詢他們服務的詳細資料，並依照相關業者設定調整手。

聽取語音信箱 [功能表5-3-1]

如果您已經設置好語音信箱號碼，您只要按下左快捷鍵或[OK]鍵即可收聽語音留言。當然您也可以待機模式中按住  鍵聽取留言。

語音信箱號碼 [功能表5-3-2]

您必需輸入您的語音項箱中心號碼。



訊息 [功能表 5]

區域廣播 [功能表5-4]

資訊服務訊息是由網路傳送給GSM 用戶的文字訊息。網路提供如天氣 報導、交通新聞、稅務、醫療和股市行情等一般資訊。每類資訊均有代碼; 因此, 您只需輸入資訊的特定代碼即可洽詢電信系統商。如果 收到資訊服務訊息, 您可以看到代表您收到訊息的快顯訊息, 或查看直接顯示的資訊服務訊息。

讀取 [功能表5-4-1]

搜尋並閱讀收到的資訊服務訊息。

接收 [功能表5-4-2]

此功能可以讓您選擇是否接收區域廣播訊息。

鬧鈴提示 [功能表5-4-3]

收到資訊服務訊息代碼時, 您的手機將會發出嗶聲。

自動顯示 [功能表5-4-4]

自動顯示已接收訊息。

語言 [功能表5-4-5]

(取決於網路和您所申請的服務)

您可選取所需的語言。然後資訊服務訊息將會以您選取的語言顯示。

主題 [功能表5-4-6]

(取決於網路和您所申請的服務)

您可以使用左快捷鍵[選項]新增標題至手機記憶, 如果以目前已有標 題您也可以左快捷鍵[選項]關閉, 編輯或者刪除此標題。



注意

- 相關台灣MMS 設定資料已存在資料夾內，您只需依您所使用的SIM 卡選擇您的系統服務商即可！

Chunghwa MMS (中華電信)

FET MMS (遠傳電信)

TWN GSM MMS (台灣大哥大)

Mobitai MMS (東信電訊)

TransAsia MMS (泛亞電信)

常用短語 [功能表5-5]

您可以建立簡訊範本。您也可以將預先定義的範本變更為自己喜好的內容。您可以新增及修改其內容。手機內建文字、多媒體簡訊與名片範本。

一般簡訊 [功能表5-5-1]

- **修改**

您可以使用此功能修改文字範本。

- **刪除**

刪除文字範本中的範本。

- **以一般簡訊發送**

以一般簡訊發送此範本。

- **以多媒體簡訊發送**

以多媒體簡訊發送此範本。

- **新增**

新增一則文字範本。



訊息 [功能表 5]

多媒體簡訊 [功能表5-5-2]

- **發送**

以多媒體簡訊發送此範本，支援同時發送至多組號碼與電子郵件。

- **預覽**

可檢視您要草稿中的多媒體內容。

- **儲存**

將此多媒體簡訊存至草稿或範本中。

- **刪除**

刪除此多媒體簡訊。

- **頁持續時間**

設定幻燈片間隔時間。

- **頁格式**

把訊息內容向右、左、上或下對齊。

- **新增頁**

在原幻燈片的前或後一張插入一張新的幻燈片。

- **刪除頁**

刪除選擇的幻燈片。

- **新增圖片**

在目前圖片的前或後一張插入一張新的圖片。

- **新增聲音**

在目前聲音的前或後一段插入一段新的聲音。



個人名片 [功能表5-5-3]

製作本人名片。主要內容包括姓名，電話號碼，傳真號碼及電子郵件。

- **修改**
修改名片內容。
- **刪除**
刪除此名片。
- **以一般簡訊發送**
以一般簡訊發送名片。
- **以多媒體簡訊發送**
以多媒體簡訊發送名片。

記憶體狀態 [功能表5-6]


檢視一般簡訊與多媒體簡訊目前的容量。



照相機 [功能表 6]

L1100手機本身內建有數位相機功能。它能提供您數位變焦，白平衡，彩色/復古/灰階設定，以及連續拍攝的照相功能。

拍照 [功能表6-1]

在待機模式下按下左快捷鍵[功能表]鍵選擇**照相機** → **拍照**，或者直接按下相機快捷鍵()進入照相模式。

1. 將鏡頭對準拍攝物後，按下[OK]鍵間或按下照相機快捷鍵即可照相。


注意

- 在照相的模式中，你可以按下左快捷鍵即可進入[相簿]中。

2. 攝取的影像左上角會顯示「已儲存」。所拍攝的照片將會自動儲存。

注意

- 影像右上角會顯示剩餘記憶體容量。如果剩餘記憶體不足便會自動縮小影像。如果記憶體已用盡，則會顯示「記憶體已滿」，並且不能再拍攝照片。請刪除舊圖釋放空間。

3. 容果您要儲存拍攝的照片請按[OK]鍵或左快捷鍵[確認]。或是按下清除鍵()刪除影像。按右快捷鍵把拍攝下來的影像用MMS 影像訊息寄出。

<在您拍照前的選項如下>



按下左快捷鍵[選項]設定預覽模式的選項。按下 [OK] 選取要變更的選項。在預覽畫面上方會顯示該選項目前的設定。

接著可以用左右導覽鍵修改設定。再按下 [OK] 或是左快捷鍵 [確認] 便會把選取的選項值設為新值並回到預覽模式。

您可以設定下列選項：

注意

- 影像愈大，成像品質愈好。但是所需的記憶體容量也愈高。

1. **圖像大小**：選擇要拍攝的影像大小。
[640x480, 320x240, 160x120, 128x160, 48x80]
2. **亮度**：選擇亮度。[-2 ~ +2]
3. **白平衡**：選擇白平衡設定。
[自動/日光/ 日光燈/陰天/螢光燈]
4. **縮放**：設定變焦倍率 [x1, x2, x4]
5. **色彩效果**：用左右導覽鍵設定 彩色/復古/單色 模式。
6. **連拍**：設定連拍功能的連續拍攝張數。
7. **快門聲音**：選擇快門音效 [聲音1 / 聲音2 / 聲音 / 關閉]
8. **原廠設定**：把設定歸回出廠時的設定。




照相機 [功能表 6]

相簿[功能表6-2]

接著選擇影像類別。

[所有照片 / 一般照片 / 電話簿照片]

您可以檢視已拍的照片外您還可以:

1. 使用導覽鍵進行選擇您可以全螢幕檢視的照片。
2. 按下 [OK] 鍵。接著選擇影像類別。
3. 按下左功能鍵[選項]後,您將可以使用下列子功能。
 - **放大/縮圖**：您可以檢視照片。
 - **刪除**：您可以刪除照片。
 - **傳送多媒體簡訊**：您可以直接以多媒體傳送此照片，多媒體 操作請參考61頁。
 - **設為待機圖片**：將此照片設成爲待機圖片。
 - **幻燈片撥放**：依順序放映選取的類別中所有影像。要停止撥放請按  鍵。
 - **重新命名**：您可以更改照片名稱。
 - **全部刪除**：刪除選取的類別中所有影像。
 - **相片資訊**：您可以檢視相片的名稱,容量以及拍照日期。
4. 回到照相模式請按右快捷鍵[返回]。

用 [記憶體狀態] 子選單可以查看目前電話裡的記憶體使用狀況。

[總共 / 已使用/ 可用]



Java 是 Sun Microsystems 開發的技術。您可以用支援 WAP 的手機下載 Java MIDlet，方法則與一般用 Netscape 或 MS Internet Explorer 下載 Java Applet 的方式相同。視服務供應商而定，所有 Java 程式 (例如：Java 遊戲) 均可下載並在手機中執行。下載後，即可用 Applications (應用程式) 選單中檢視所下載的 Java 程式，您可以在此選取、執行或刪除程式。儲存在手機中的 Java 程式檔案為 .JAD 與 .JAR 格式。

注意

- JAR 檔案是 Java 程式的壓縮格式；JAD 檔案是包含所有詳細資訊的描述檔案。在下載之前，您可以在網路上從 JAD 檔案檢視所有詳細檔案說明。

警告

- 僅有 J2ME (Java 2 Micro Edition) 的程式可在手機環境中執行。J2SE (Java 2 Standard Edition) 的程式僅能在 PC 環境中執行。



遊戲及程式 [功能表 7]



遊戲 [功能表7-1]

您的手機包含以下遊戲，供您消遣娛樂。

注意

- 每個遊戲的控制鍵皆不相同。但是每個遊戲都分別有屏幕說明解釋其主要控制鍵的用法。以下是一般的控制鍵：

[一般按鍵功能]

-  : 遊戲功能表
-  : 返回

應用程式 [功能表7-2]

應用功能表中將會顯示目前您已經下載Java程式，當然您可以進行執行或刪除以及檢視Java程式的相關資訊。

您可以參考下列子功能:

- **開啓**：執行此Java應用程式。
- **刪除**：刪除此Java應用程式。
- **詳細資料**：顯示此Java程式的相關資料，包括程式 名稱，容量大小， 程式版本，供應商名稱...等資訊。
- **連接選項**：某些 Java 應用程式可能需要進行資料連線。請選擇下列選項之一。
 1. **先詢問**：在連線前先詢問您是否同意連線。
 2. **允許**：不通知即可建立連線。
 3. **不允許**：不允許連線。



下載 [功能表 7-3]

您可以透過行動網進行Java下載程式，下載程式時您必須有相關下載書籤地址資料，您除了可以新增下載書籤外您也檢視或修改目前書籤的相關資料。

- **連接**：透過行動網網路直接連接到此書籤，您即可進行Java程式下載。
- **檢視**：檢視書籤的相關上網設定。
- **修改**：您可對此書籤進行內容修改。
- **刪除**：您可以刪除此書籤。
- **新增**：您可以新增Java 下載的書籤。

注意

- 在您選擇連接Java提供廠商的網站後，您可以在Java提供廠商所提供的程式中選擇您要所要下載的程式，並且將此Java程式安裝至您的手機，手機在安裝程式後將會自動執行程式並且會切斷行動網網路連線，所以如果您要再次下載java程式您必須再度連接行網。

訊息提示 [功能表7-4]

記憶體狀態 [功能表7-4-1]

顯示可用於安裝遊戲與應用程式的記憶體大小。您也可以查看手機的整體記憶體狀態。




行動網 [功能表 8]

按下功能表()並且使用導覽鍵選擇**行動網**。

本手機可支援以無線應用協定(WAP)為基礎的服務。您可存取您所使用網路支援的服務。服務功能表可供您獲取各種資訊，例如新聞，天氣預報及航班時間表等。

使用此項功能您必須申請行動網服務，相關申請作業請您與您的網路系統業者查詢相關服務內容。

當手機與行動網連接時首頁將會出現於螢幕上，但相關顯示內容則依照服務提供商的設定。




在您使用行動網時若您想結束瀏覽，您可以按下鍵，返回一般待機模式。

行動網瀏覽

您可以使用手機按鍵功能瀏覽行動網。

使用手機按鍵

當手機瀏覽行動網網頁時，按鍵功能將有所不同。

按 鍵	說 明
	可捲動每一行網頁內容
	返回上一頁
	確認

使用WAP瀏覽器功能

您可以透過WAP瀏覽器任意的瀏覽網頁。

注意

- WAP瀏覽器可能會因為您的瀏覽器版本不同而功能不同。



首頁 [功能表8-1]

連線到首頁。首頁是目前啓用之上網設定中定義的網站。若啓用的上網設定中未定義首頁，通訊系統商將爲您定義一個首頁。

書籤 [功能表8-2]

您可以設定目前瀏覽的網頁作爲書籤或建立一個書籤。您的手機也可以事先預設一些書籤,在您設定書籤時您同時也該留意 網頁安全限制的問題。

收信箱 [功能表8-2-1]

您可以把 URL (網路資源位址) 存成書籤。

Java [功能表8-2-2]

您可以把 URL (網路資源位址) 存成書籤。

電子郵件伺服器 [功能表8-2-3]

- **連接**
連接到您預設的電子郵件伺服器。
- **編輯電子郵件地址**
您可以編輯電子郵件地址。

全部刪除 [功能表8-2-4]

刪除所有書籤。



行動網 [功能表 8]

Push 訊息 [功能表8-3]

收信箱 [功能表8-3-1]

Push 訊息的資訊包含了訊息標題、文字說明或者是下載服務的網址。您可透過相關資訊連線到特定網站並且透過行動網下載服務。使用此項功能您必須申請行動網服務，相關申請作業請您與您的網路系統業者查詢相關服務內容。

- **資訊**
顯示接收到Push訊息的資訊。
- **下載**
您可以讀取或刪除Push訊息。
- **刪除**
您可以刪除選定的Push訊息。

接收 [功能表8-3-2]

您可以選擇是否要接受 Push 訊息。

網路設定 [功能表8-4]

更多上網資訊請您洽詢網路系統服務商。上網設定的內容如下。

- **啓動**：啓動所選取的上網模式設定。
- **設定**：修改及變更所選取之上網設定的WAP設定。
- **重新命名**：您可以變更上網設定名稱。
- **刪除**：您可以刪除此上網設定。
- **新增**：您可以增加上網組態。



注意

- 更改上網設定內可能會影響多媒體功能。

轉到URL [功能表8-5]

直接連接至想要瀏覽的網站。您需要輸入特定的URL。

暫存設定 [功能表8-6]

移除快取記憶體儲存的內容或變更快取模式。

清除暫存 [功能表8-6-1]

移除快取記憶體儲存的內容。

查詢暫存 [功能表8-6-2]

設定是否要檢查快取記憶體。

注意

- 快取記憶資料僅是暫存於記憶中。

注意

- 相關台灣GPRS 設定資料已存在資料夾內，您只需依您所使用的SIM 卡選擇您的系統服務商即可！
 - Chunghwa GPRS (中華電信)
 - FET GPRS (遠傳電信)
 - TWN GSM GPRS (台灣大哥大)
 - Mobitai GPRS (東信電訊)
 - TransAsia GPRS (泛亞電信)



行動網 [功能表 8]

安全認證 [功能表8-7]

顯示可用憑證清單。

重設網路設定 [功能表8-8]

重設操作模式以恢復原始設定。

瀏覽器版本 [功能表8-9]

顯示WAP瀏覽器版本。



在待機模式下按左快捷鍵[功能表]，並且使用導覽鍵健行選擇鬧鈴設定。

日期和時間 [功能表9-1]

此功能可讓您調整手機的日期與時間。
及設定與日期時間有關的功能。

設定日期 [功能表9-1-1]

此功能可讓您調整手機的日期，如月與年您亦可透過日期格式進行調整顯示格式。

日期格式 [功能表9-1-2]

您可以在本功能表中設定日期格式。日/月/年, 月/日/年, 年/月/日。

設定時間 [功能表9-1-3]

此功能可讓您調整時間選項。並且可以讓您選擇時間顯示格式 輸入目前的時間。

時間格式 [功能表9-1-4]

您可以選擇24小時或12小時的時間格式。



設定 [功能表 9]

手機設定 [功能表9-2]

設定手機的相關功能。

待機圖片 [功能表9-2-1]

選取在待機模式下的待機圖片。

問候語 [功能表9-2-2]

用此選項設定液晶螢幕在待機模式中的顯示畫面。

功能表顏色 [功能表9-2-3]

手機提供您4組不同的功能表顏色供您選擇。

語言 [功能表9-2-4]

變更手機顯示文字的語言。此操作亦會影響語言輸入模式。

背景燈 [功能表9-2-5]

設定內部螢幕的背光顯示時間若使用關閉此向功能將 可稍微的增加待機/通話時間。

來電LED指示燈 [功能表9-2-6]

用此選項開啓或關閉電源燈號閃爍，用以表示手機電源狀態。

網路名稱 [功能表9-2-7]

用此選項在待機模式中於液晶螢幕顯示網路名稱。



通話設定 [功能表9-3]

此項功能提供您更改手機的轉接設定。

來電轉接 [功能表9-3-1]

來電轉接服務可讓您將撥入的語音信箱，傳真電話和數據電話轉接到另一個號碼。詳細資訊請洽詢系統供應商。

來電轉接功能表內含下列子功能表。

- **所有語音通話**
無條件轉接語音電話。
- **忙線時**
線路繁忙時轉接語音電話。
- **無回應時**
無人接聽時轉接語音電話。
- **無網路或關機時**
關機或不在服務區域內時轉接語音電話。
- **所有數據來電**
無條件轉接至連接一個含電腦連線的號碼。
- **所有傳真來電**
無條件轉接至連接一個傳真的號碼。

來電轉接功能表內含下列子功能表

- **啟動**
啓用相關服務。





設定 [功能表 9]

- **語音信箱**
轉接至語音信箱。
- **其他號碼**
輸入欲轉接號碼。
- **取消**
停用相關服務。
- **檢視狀態**
查看相關服務狀態。
- **取消全部轉接**
取消所有轉接設定。

接聽模式 [功能表9-3-2]

選擇您想使用的接聽模式。

- **翻開折蓋**
如果您選擇本功能表，只要翻開折蓋即可接聽來電。
- **任意鍵**
如果選用此功能表，則除了[結束/電源]與右快捷鍵以外的按鍵接聽來電。
- **僅發話鍵**
如果選用此功能表，則只能以按發話鍵的方式接聽來電。

發送本機號碼 [功能表9-3-3]

此項服務取決於網路和您所申請的服務，若您的系統服務商支援此服務您將可以選擇在您撥出電話的同時是否送出您個人的電話號碼。



來電等候 [功能表9-3-4]

(取決於網路)

當您正在通話中若有插撥電話，網路系統將會提示您但將依您的設定如果選取啓動，可以接聽待接來電，如果選取關閉，則無法識別待接來電，若想了解來電等待的狀態您亦可查詢狀態則可顯示來電等候的狀態。

每分鐘提示 [功能表9-3-5]

如果選取開關，通話時，手機將在每分鐘發出嗶聲，用以提示您通話時間。

語音撥號 [功能表9-3-6]

您可以藉由聲控的方式撥出電話但是您必須事先錄製好聯絡人的語音標籤。

在您使用語音撥號前，您必須注意：

- 語音標籤並非依語言而定，而是依照您的聲頻作為識別。
- 請於安靜的環境中錄製語音標籤，避免可能的雜音干擾。
- 當您使用或錄製語音標籤時盡可能讓手機靠近臉頰。
- 過短及類似的語音標籤可能造成識別上的困擾。所以盡可能避免使用。

- 自動

任何時候，您只要打開滑折蓋，即可進入語音撥號。

- 手動

當按  住向下鍵即進入語音撥號模式。

注意

- 語音撥號時您必須說出與您所錄製的語音標籤相同的語音，當您在吵雜環境中可能會造成使用上的困擾，所以您可能僅依賴語音撥號作為主要撥號。



設定 [功能表 9]

自動重撥 [功能表9-3-7]

開啓，啓用此功能時，手機會在撥號失敗後自動重撥5次。

選擇線路 [功能表9-3-8]

如果服務供應商支援雙線路服務，您可以在兩個線路中選擇其中之一。

已封閉用戶群組 [功能表9-3-9]

使用此功能可以限制手機撥出屬於某個用戶群組的號碼。當使用此功能時，每個撥出的電話會連接一個群組目錄，如果已經指定一個群組目錄，他將適用於所有撥出電話。如果沒有指定群組目錄，網路會使用優先目錄。

(一個儲存在網路中的特定目錄)

- **預設**：設定以選擇的群組指引。
- **開啓**：您可以編輯群組指引並啓動群組功能。
- **關閉**：刪除預設群組。

保密設定 [功能表9-4]

不同的密碼是爲了要保護您的手機避免他人擅用。

需要PIN碼 [功能表9-4-1]

在此功能表中，您可以設定手機在電源開啓時需要輸入SIM卡的PIN碼。如果啓用此功能，您將需要輸入PIN碼。

注意

- 在您取消需要PIN碼功能前您必須再次輸入正確的PIN碼。



您將可使用下列選項：

- **開啓**

您必須於每次開機時輸入PIN碼。

- **關閉**

每次開機時可直接連接網路。

手機鎖 [功能表9-4-2]

使用手機鎖可避免他人擅用您的手機。如果將手機鎖定設為開，每次開機時手機均會要求輸入安全密碼。如果將手機鎖定設為「自動」，手機只會在您更換SIM卡時才要求輸入安全密碼安全密碼預設值為 **0000**。如果您要改變手機密碼，[功能表 9-4-5]。當您的目前密碼已輸入，您即可使用手機直到關機為止。

手機鎖相關子功能下：

- **開機**

- **啓動**

手機將於每次開機時要求您輸入密碼。

- **關閉**

關閉手機鎖功能。

- **SIM卡已更換時**

只有使用不同的SIM卡時要求您輸入密碼。

- **立即**

啓動此項功能手機會麗各要求您輸入密碼，並於正確密碼輸入完成後立即上鎖狀態。此時如果您要取消手機上鎖狀態，您必須按下右快捷鍵(解鎖)並輸入正確的密碼上鎖的狀態才可解除。如果您的手機在上鎖的狀態下關機再開啓手機上鎖的狀態仍會維持。



設定 [功能表 9]

通話限制服務 [功能表9-4-3]

(依網路服務設定)

通話限制服務能防止手機撥出或接收特定類型的電話。此功能需要限制通話密碼。

可以查看以下子功能表：

- **所有撥出電話**
限制撥出任何電話。
- **撥出國際電話**
限制撥出任何國際電話。
- **國際漫遊時撥打電話**
除原用網路外，限制撥出任何國際電話。
- **所有來電**
限制任何來電。
- **國際漫遊時來電**
漫遊時限制任何來電。
- **全部取消**
取消所有通話限制。
- **更改密碼**
變更通話限制密碼。

注意

- 通話限制功能可能需要額外向您的網路服務業者提出申請。



固定撥號(FDN) [功能表9-4-4] (依SIM卡是否提供此項功能)

如果 SIM 卡有支援，即可限制手機不可撥號至特定號碼。可儲存的 FDN 號碼依 SIM 卡容量而定。要輸入 FDN 時需要 PIN2 密碼。這個功能也接受不完整的號碼 (例如區碼等)。

範例：

如果 FDN 清單中有「0123、123123、?89012」三個號碼，就只能撥打以下號碼：012345678...、01236789...、123123、189012 和 289012。(「?」代表任何號碼)。如果您要撥打的電話不在 FDN 清單中，就會無法撥號並看到「FDN Check」的訊息。

• 啓動

如果啓用 FDN，就只能撥打清單中的號碼。電話簿的功能會受到限制。您將不可新增號碼至 SIM 卡中，只能新增至手機記憶體。另外，也只能搜尋存至手機記憶體的電話簿號碼。

• 關閉

關閉 FDN 時可以正常使用電話簿。

• 號碼表

列出 FDN 清單。按下左快捷鍵 [選項] 可以新增、編輯或刪除 FDN。

注意

- 並不是所有的SIM卡都有PIN2碼的功能。如果您的SIM沒有此功能此項功能表將不會顯示。



設定 [功能表 9]

更改密碼 [功能表9-4-5]

更改密碼功能可讓您變更目前所設定的密碼。在您變更密碼時您必須先輸入一次目前所使用的密碼後，才能在輸入新的密碼。但您必須再一次輸入新的密碼進行確認後才可以完成變更程序。

此項功能可適用於：**安全密碼**，**PIN1碼**，**PIN2碼**

注意

- PIN 碼: 用戶識別號碼

網路設定 [功能表9-5]

網路設定功能將能提供您網路狀態，您可選取自動或手動的方式登入的網路。

注意

- 如果網路允許使用漫遊功能，您將可以使用漫遊服務。

自動 [功能表9-5-1]

如果選擇自動模式，手機會自動搜尋並選擇網路。選擇自動後，即使電源關閉後再重新啓動，手機也會設定為自動。

手動 [功能表9-5-2]

機將尋找可用的網路清單，然後顯示在螢幕上。您可以選取所要使用的網路，但這個網路必須與您的主網路商之間有漫遊協定。如手機無法存取該選取的網路，您仍可選擇其他網路。如果關機，手機會重設為自動。



優先網路 [功能表9-5-3]

您可以設定優先登入的網路清單，手機會先嘗試登入該網路，然後再嘗試登錄到其他網路。此清單是透過手機的已知網路預定清單而建立的。

頻段選擇 [功能表9-5-4]

用此選項設定網路頻率，可以選擇 GSM 900/1800 或是 GSM 1900。

GPRS設定 [功能表9-6]

GPRS(General Packet Radio Service)技術將能提供您的手機透過行動電話網路傳送或接收數據資料。GPRS網路傳輸資料的方式就如同一般網際網路方式一樣。

在您使用GPRS服務前您必須準備。

- 您需要申請GPRS服務。相關GPRS申請及使用方式請洽詢您的網路系統服務商。
- 您必須設定GPRS相關上網參數。

GPRS連接 [功能表9-6-1]

如果在此選項中您所選擇的為開機則當您進入支援GPRS網路服務時 GPRS將會被啟動，此時如論您是 傳送/接收 電子郵件或多媒體簡訊都將透過GPRS傳送。

如過您選擇是 當需要時，此時手機只有在應用程式開始時才會啟動GPRS網路服務，並且在您結束應用程式後GPRS會自動關閉。



設定 [功能表 9]

注意

- 如果手機並不是在GPRS的服務區域內而您又已經選擇自動連接此時手機將會定期地進行連結。

外部裝置 [功能表9-6-2]

當您透過GPRS網路使用外部裝置時，您必須設定下列6個參數設定：**重新命名**，**APN**，**P地址**，**DNS**，**使用者名稱**，**密碼**。

恢復原廠設定 [功能表9-7]

啓用所有原廠預設值。

您必須執行下列步驟才能啓用此功能。

1. 選擇恢復原廠設定功能選項。
2. 輸入4位數的安全密碼。

注意

- 預設為 0000。更密碼功能請參考89頁。

行動增值服務 [功能表 0]



此功能表將視您的SIM卡功能是否支援，它可提供您 銀行轉帳，股票資訊...等增值服務。果您的SIM能提供此項功能，此項功能表將會出現在功能表主選單中相關服務訊息請洽詢您所使用的網路服務商。



使用問答集

下列問答將能協助您在使用手機上的操作問題。

問題 我該如何檢視已撥電話，未接電話即已接電話。

解答 請於待機中按下發送鍵。

問題 我該如何清除通話紀錄。

解答 按下左功能鍵後按   。

問題 我該如何查詢存在記憶體中的號碼。

解答 按下右功能鍵後按 。

問題 當此圖示一直在手機的螢幕上不消失該怎麼辦。

解答 請先檢查您手機目前的位置是否已超出行動電話網路服務範圍，如果此圖示持續出現您可以先行關機，並且於2分鐘後再開機，如過狀態並未能改善請於別的區域再行測試。

問題 在特定的區域時通話狀態不佳或通話斷斷續續。

解答 在手機的訊號強度指示飄移的區域中，收訊狀況將可能受到影響，此時建議您最好能移動到訊號較佳的區域使用手機避免通話受到影響。



問題 解答

當通話狀態不佳或通話斷斷續續時。

在手機的訊號強度指示飄移的區域中，收訊狀況將可能受到影響，此時建議您最好能移動到訊號較佳的區域使用手機避免通話受到影響。

問題 解答

手機螢幕無顯示。

請更換電池再開機測試，如果更換電池後手機仍無反應請再將電池充電後再試試看。

問題 解答

在某些特定的區域中通話有回音。

此種狀況被稱為回音現象，它發生於音量太高或者是因為手機太接近其他的通訊設備。

問題 解答

手機發燙。

在長期間的通話或使用行動網/遊戲等，可能會導致手機發燙...此為正常現象故請放心使用。

問題 解答

手機來電無鈴聲僅有螢幕閃動。

請檢查您目前的情景模式設定是否為震動或靜音，若是請將它改為一般或大聲。



使用問答集

問題 電池的待機時間越來越短。

解答 電池屬於消耗性商品，他本身亦有使用期限限制，當電池的效能只有原來的一半時，建議您最進行更換。

問題 電池的使用時間越來越短。

解答 如果電池的使用時間變短，可能是因為使用者使用方式不同而有所變化，如較大的通話音量或長期於弱訊區使用電話。

問題 來電號碼無顯示。

解答 請確認來電號碼是否已事先存於電話簿中，若無您可以將它儲存。

問題 手機不能使用。

解答 請確認手機是否開機(按3秒)?您目前是否處於正確的網路中?您是否已設定轉接功能。

問題 手機鎖, PIN碼或PUK碼, 或保密碼遺失怎麼辦?。

解答 預設的手機鎖密碼為**0000**，如果您忘記或遺失密碼請與LG授權的維修中心聯絡, 如果您忘記或遺失PIN或puk密碼請與您的系統服務商客服人員聯絡。



手機配有多種配件。您可依據個人需要選擇所需配件，以下配件可能因為區域不同而有所差異，詳情請諮詢我們區域服務或代理商。



旅行充電器

您可在離家或辦公室時使用充電器充電。



電池

標準電池。



免持耳機

連接手機後可便。操作



數據傳輸組件/光碟

您可使用數據傳輸組件連接PC進行通訊。

注意

- 請務必使用原裝LG 配件。
- 不使用原裝配件可能會導致保固失效。



技術資料

一般資料

產品名稱 : L1100

系統 : GSM 900/DCS 1800

環境溫度

最高 : +55 °C

最低 : -10 °C





備忘錄

GPRS Phone

USER'S MANUAL

MODEL: L1100

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.

Introduction

Congratulations on your purchase of the advanced and compact L1100 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use



Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model L1100 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.39 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).



Guidelines for safe and efficient use

Product care and maintenance

Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit.
(Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously.
Do not touch the antenna unnecessarily.



Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it also may cause the phone to operate as a higher power level than needed and shorten talk and standby times.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.



Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.



Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



Contents

Your phone	12
• Phone components	12
• Your phone's features	13
• Side of the Key	14
• Display information	14
Getting started	16
• Installing the SIM card and the handset battery	16
• Charging the battery	17
• Disconnecting the adapter	18
• Turning your phone on and off	19
• Access codes	20
General functions	22
• Making and answering calls	22
• Entering text	24
• Phonebook	28
• In-call menu	28
• Multiparty or conference calls	30
Menu tree	32
Selecting functions and options	34
Profiles [Menu 1]	35
• Vibrate Only [Menu 1-1]	35
• Silent [Menu 1-2]	35
• General [Menu 1-3]	35
• Loud [Menu 1-4]	35
• Headset [Menu 1-5]	35
• Car [Menu 1-6]	35



Call register [Menu 2]	37
• Missed calls [Menu 2-1]	37
• Received calls [Menu 2-2]	38
• Dialed calls [Menu 2-3]	39
• Delete recent calls [Menu 2-4]	39
• Call durations [Menu 2-5]	40
• Call costs [Menu 2-6]	40
• Cost settings [Menu 2-7]	41
• GPRS information [Menu 2-8]	41
Fun & Tools [Menu 3]	43
• Alarm clock [Menu 3-1]	43
• Calculator [Menu 3-2]	43
• My folder [Menu 3-3]	44
• Unit converter [Menu 3-4]	45
• World time [Menu 3-5]	45
• Voice recorder [Menu 3-6]	46
• Infrared [Menu 3-7]	47
Organizer [Menu 4]	48
• Schedule [Menu 4-1]	48
• Memo [Menu 4-2]	49
• Phonebook [Menu 4-3]	50
Messages [Menu 5]	57
• Text messages [Menu 5-1]	57
• Multimedia messages [Menu 5-2]	62
• Voice messages [Menu 5-3]	68
• Info services [Menu 5-4]	68



Contents

• Templates [Menu 5-5]	70
• Memory status [Menu 5-6]	72
Camera [Menu 6]	73
• Take picture [Menu 6-1]	73
• Gallery [Menu 6-2]	75
Games & Apps [Menu 7]	76
• Games [Menu 7-1]	77
• Applications [Menu 7-2]	77
• Download [Menu 7-3]	78
• Information [Menu 7-4]	79
Internet [Menu 8]	80
• Home [Menu 8-1]	81
• Bookmarks [Menu 8-2]	81
• Push messages [Menu 8-3]	82
• Profiles [Menu 8-4]	82
• Go to URL [Menu 8-5]	83
• Cache settings [Menu 8-6]	83
• Security certificates [Menu 8-7]	84
• Reset profiles [Menu 8-8]	84
• WAP information [Menu 8-9]	84
Settings [Menu 9]	85
• Date & Time [Menu 9-1]	85
• Phone settings [Menu 9-2]	85
• Call settings [Menu 9-3]	87
• Security settings [Menu 9-4]	91




• Network settings [Menu 9-5]	95
• GPRS settings [Menu 9-6]	96
• Reset settings [Menu 9-7]	97
SIM service [Menu 0]	98
Q&A	99
Accessories	102
Technical Data	103





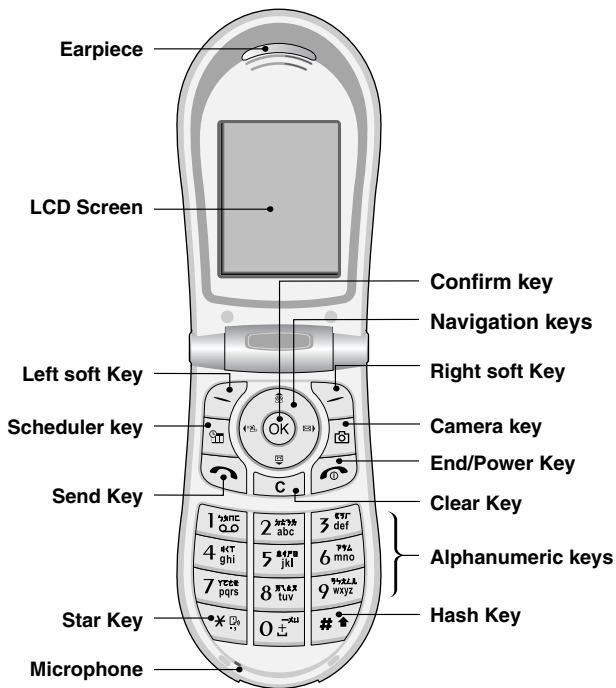 


Your phone

Phone components








Your phone's features


Key	Description
	Left soft key / Right soft key Each of these keys performs the function indicated by the text on the screen immediately above it.
	Navigation keys Use for quick access to phone functions. <ul style="list-style-type: none">• Up navigation key By pressing this key in standby mode, you can search the phonebook by name.• Down navigation key You can go directly to the voice recording menu. Holding this key down directly starts voice recording.• Left navigation key A shortcut key to the profile menu.• Right navigation key A shortcut key to the message inbox. OK key (=Confirm key) Selects menu options and confirms actions.
	Send Key Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.
	Alphanumeric keys Enter numbers, letters and some special characters.
	End / Power key Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.



Your phone

Key	Description
	Clear key Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.
	Camera key Press this key to use the camera feature. Directly goes to the camera mode.
	Scheduler key A shortcut key to the scheduler menu.



Side of the Key

Key	Description
	Side Key <ul style="list-style-type: none">• Controls the earpiece volume during a phone call.• When a flip is closed, pressing one of these displays the current time and date by turns.• Controls the volume of the key tone in standby mode with opening flip.











 








Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.




Icon	Description
	Indicates that GPRS service is available.
	Indicates that you are roaming on another network.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text message.
	Indicates the receipt of a voice message.
	Indicates the receipt of a MMS message.
	Indicates that the vibration ringer has been set.
	Indicates the receipt of an e-mail message.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	Indicates the Car profile is activated.
	Indicates the General profile is activated.
	Indicates that you can use the push message service.
	Indicates that you have a schedule for the selected day in the schedule menu.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.



Getting started

Installing the SIM card and the handset battery

 
1. Make sure the power is off before you remove the battery. Press the battery release latch up and remove the battery from the phone at a 45 degree angle.

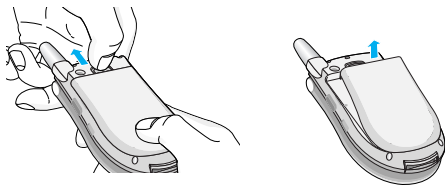


Note

- Removing the battery from the phone when the power is on may cause the phone to malfunction.

 2. Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

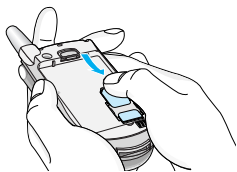

To insert the SIM card

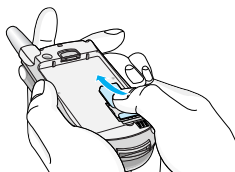 


To remove the SIM card

Note

- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.



 
3. Position the lugs on the bottom of the battery into the retaining holder. Then, push the top half of the battery into position until the latch clicks

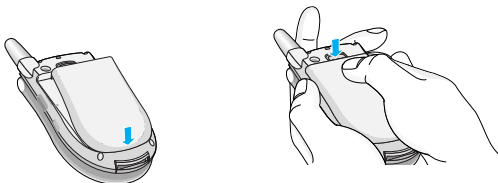

Charging the battery

Only use the mains adapter supplied with your phone.

 1. With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone. Make sure that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the other end of the adapter to the power outlet.

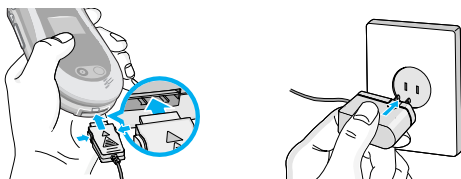

Caution

- Use of unauthorised accessories could damage your phone and invalidate your warranty.
- Do not force the connector as this may damage the phone and/or the mains adapter.



 
Getting started

Note

- “Battery Charging ”is displayed on the screen after connecting the travel adapter. Only if the battery is totally empty, Call indicator Light is on without displaying “ Battery Charging ”.

Disconnecting the adapter

1. When charging is finished, the moving bars of the battery icon stop and ‘Full’ is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.

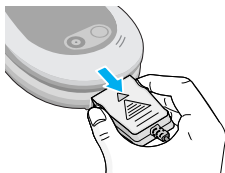

Note


- Ensure the battery is fully charged before first using the phone.
- Do not remove the battery or SIM card while charging.
- In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.



Turning your phone on and off

Turning your phone ON




1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

Note

- Like any other radio devices, avoid any unnecessary contact with the antenna while your phone is on.

Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.



Getting started

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 9-4-5].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.



Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

Barring password





The barring password is required when you use the **Call barring** function. You obtain the password from your network operator when you subscribe to this function. See page 92 for further details.





General functions

Making and answering calls

 

Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code. To edit a number on the LCD screen, press the right/left navigation keys to move the cursor to the desired position or simply press the clear key () to erase one digit at a time.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key. You can also end the call by closing the flip.


Making a call using the send key

1. In standby mode, press the send key () and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press .

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

Ending a call


When you have finished your call, press the end key ()



Making a call from the phonebook

You can save the names and phone numbers dialled regularly in the SIM card and/or phone memory, which is phonebook. You can dial a number by simply looking up the desired name in the phonebook. For further details on the phonebook feature, please refer to page 50-56.

Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.


Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (name or photo if saved in the Phonebook) is displayed.

1. To answer an incoming call, open the flip.

Note


- ▶ You can answer a call while using the phonebook or other menu features.

2. To end the call, close the flip or press the .



General functions

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Phonebook, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.





Changing the text input mode









1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.

► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.


 
 
 
1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

Example


- Press     to type **Good**.
- Press     [Down navigation key] to type **Home**.



General functions

 

 
- If the desired word is missing from the word choice list, add it using the ABC mode.
 - You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages** or press the "" key on your keypad to switch the language. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down to erase  entire words.

Note

- To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

► Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.



Note

- Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	Space key	Space key

► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.



General functions

Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 255 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Phonebook** menu. (Refer to page 50-56 for details.)

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.

Making a second call


You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the Phonebook during a call, press the right soft key then select **Add new**.

Switching between two calls


To switch between two calls, press the left soft key then select **Swap**.




Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see [Menu 9-3-4].

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference / Reject** or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.




General functions

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference / Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference / Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference / Join all**.



Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference / Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference / Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference / End multiparty**. After pressing the left soft key, selecting **Conference / End all** will end all the active and on-hold calls.



Menu tree



1 Profiles

- 1 Vibrate only
- 2 Silent
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call durations
- 6 Call costs
- 7 Cost settings
- 8 GPRS information



3 Fun & Tools

- 1 Alarm clock
- 2 Calculator
- 3 My folder
- 4 Unit converter
- 5 World time
- 6 Voice recorder
- 7 Infrared



4 Organizer

- 1 Schedule
- 2 Memo
- 3 Phone book



5 Messages

- 1 Text messages
- 2 Multimedia messages
- 3 Voice messages
- 4 Info services
- 5 Templates
- 6 Memory status



6 Camera

- 1 Take picture
- 2 Gallery



7 Games & Apps

- 1 Games
- 2 Applications
- 3 Download
- 4 Information



8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 Security certificates
- 8 Reset profiles
- 9 WAP information



9 Settings

- 1 Date & Time
- 2 Phone settings
- 3 Call settings
- 4 Security settings
- 5 Network settings
- 6 GPRS settings
- 7 Reset settings





0 SIM Service

 
This menu depends on SIM and the network services.



Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.


The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

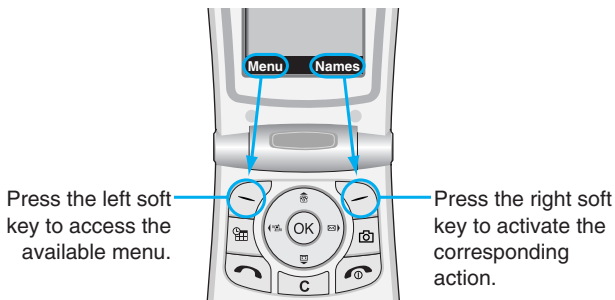



In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are six preset profiles: **Vibrate only**, **Silent**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised except Vibrate only and Silent.

Press the Menu key () and select **Profiles** using navigation keys.

Changing the profile [Menu 1-x-1]

1. A list of **Profiles** is displayed.
2. In the **Profile** list, scroll to the profile you want to activate and press the left soft key [Select] or OK key.
3. Then, select **Activate**.

Customising profiles – Personalise [Menu 1-x-2]

Scroll to the desired profile in the Profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting option opens. Set the option as required.

Incoming alert type: Set the alert type for incoming calls.

Ring tone: Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.

Ring volume: Set the volume of the ringing tone.

Message alert type: Set the alert type for messages.

Message tone: Select the alert tone for messages.

Key tone: Select the desired keypad tone.

Key volume: Set the volume of keypad tone.

Flip tone: Set the flip tone for flip open and close.

Effect tone volume: Set the volume of effect sound.

Power on/off volume: Set the volume of the ringing tone when switching the phone on/off.



Profiles [Menu 1]

Automatic answer: (Headset/Car profile) You can activate the automatic answer feature. Select the time before answering automatically.

Customising profiles – Rename [Menu 1-x-3]

You can rename a profile and give it any name you want. **Vibrate only**, **Headset** and **Car** profiles cannot be renamed.


1. To change the name of a profile, scroll to the profile in the profile list and after pressing the OK key or the left soft key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key [Save].

Call register [Menu 2]



You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number, the name (if available), and the picture (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key () and select Call register using navigation keys.

Missed calls [Menu 2-1]

This option lets you view the last 10 unanswered calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Note

- You can delete all the call records from the list using the **Delete recent calls** menu.

- Edit the name saved in the phonebook.

Note

- It is possible for only a number in the Phonebook to edit a name. Another numbers (e.g. FDN, SDN) can't edit names.



Call register [Menu 2]

Received calls [Menu 2-2]

This option lets you view the last 20 incoming calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Note

- You can delete all the call records from the list using the Delete recent calls menu.

- Edit the name saved in the phonebook.

Note

- It is possible for only a number in the Phonebook to edit a name. Another numbers (e.g. FDN, SDN) can't edit names.



Dialed calls [Menu 2-3]

This option lets you view the last 10 outgoing calls (called or attempted). Using the [Option] key, you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Note

- You can delete all the call records from the list using the **Delete recent calls** menu.

- Edit the name saved in the phonebook.

Note

- If the FDN is enabled, the menu [Edit name] will not be shown.

Delete recent calls [Menu 2-4]

Use this to delete the missed call list, received call list, or dialed call list. You can also delete all call lists at a time selecting **All calls**.



Call register [Menu 2]

Call durations [Menu 2-5]

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. Pressing the [OK] key or the left soft key [Reset] resets the call timer of selected call. To prevent accidental reset, you are requested to enter the PIN2 code.

- **Last call:** Length of the last call
- **Received calls:** Length of the incoming calls
- **Dialed Calls:** Length of the outgoing calls
- **All calls:** Total length of all calls made or received calls since the timer was last reset.

Note

- The actual time invoiced for calls by your service provide may vary, depending on network features, rounding-off for billing, etc.

Call costs [Menu 2-6]

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, press the left soft key [Reset] or the OK key. You are requested to enter the PIN2 code.

Note

- The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.



Cost settings [Menu 2-7]

- **Call cost's limit:** This network service allows you to limit the cost of your calls to the number of charging units or units of currency. You can make or receive a call up to the specified cost limit. You can change the call cost's limit after entering the PIN2 code.
- **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.

Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

- **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

GPRS information [Menu 2-8]

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.
(GPRS stands for General Packet Radio Service.)

• WAP information

You can check the data volume and the time spent using WAP. On the selected menu, pressing the left soft key [Reset] or the OK key clears the counter.



Call register [Menu 2]


- **External device**

You can check the data volume and the time spent using GPRS with an external device such as a serial port.

- **Total data**

You can check the total amount of data through WAP and the external device.



Press the Menu key () and select **Fun & Tools** using navigation keys.

Alarm clock [Menu 3-1]

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available.

On

Set the alarm time.

1. Enter the menu.
2. Select [On] by the left/right navigation key.
3. Enter the alarm time using the numeric keys.
4. Using the left/right navigation keys, select one of the alarm options: **Once**, **Daily**, **Weekly**, and **Monthly**.
5. Alarm melody section: select the desired alarm melody using the left/right navigation keys.

Off

Deactivates the alarm.

Calculator [Menu 3-2]

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. (You can enter numbers up to the second decimal place.)

 
 



Fun & Tools [Menu 3]

Using the calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.
3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Reset] to return to the initial state.

Note

- To erase any mistakes and clear the display, press the  key. To include a decimal point, press the  key. To include a minus sign, press the  key.

My folder [Menu 3-3]

My folder has 3 folders: Picture, Animation and Sound. You can view, delete, or control downloaded contents. You can get pictures, animation or sounds from WAP site, MMS or SMS. While you're checking each content, you can send it via SMS or MMS, edit or delete it. You can set one in the Picture folder or Animation folder as the wallpaper. For sounds, you can set the desired sound as the ring tone.

Picture [Menu 3-3-1]

Animation [Menu 3-3-2]

Sound [Menu 3-3-3]


Memory status [Menu 3-3-4]

Unit converter [Menu 3-4]

This converts any measurement from one unit to another. There are 4 types that can be converted into units: Length, Surface, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.
5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.

Note

- You can input a decimal number by pressing  key.

World time [Menu 3-5]

You can check the current time of Greenwich Mean Time (GMT) and 59 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time. To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Options]. And select **Set**.



Fun & Tools [Menu 3]


Note

- The time zone setting of each city in World time menu may be affected by network condition.


Voice recorder [Menu 3-6]

You can record a memo. You can record up to 3 voice memos up to a maximum of 30 seconds each. You can play or delete the recorded memo or record new voice memo using the left soft key [Option] key.

Record [Menu 3-6-1]

1. Press and hold down  key in standby mode.
2. Once recording is started, the message 'Recording...' and the remaining time is displayed.
3. When you finish recording, press left soft key [Save].
 - **Play:** Allows you to play back all memos recorded, starting with the most recent memo. The screen displays the Date and time when the memo was recorded.
 - **Delete:** Allows you to delete a specific memo.
 - **Record new:** Allows you to record a memo.
 - **Delete all:** Allows you to delete all memos. Press the left soft key [Yes] to confirm.

View list [Menu 3-6-2]

The phone shows the voice memo title which you have recorded by pressing  in standby mode. You can **Play**, or **Delete** the recorded voice memo.

Note

- In standby mode, you can go directly to the Voice recorder menu by pressing the down navigation key.
- If all memo locations are full, you must delete an old memo before recording a new one.

Infrared [Menu 3-7]

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection:

1. Install the modem driver for receiving or sending the data/fax.
2. Install the network dial-up software supplied by your network provider or fax application program for a fax call on your PC.
3. Configure and activate an IrDA-compliant infrared port on your PC.
4. Activate the infrared feature on the phone; the red IrDA symbol appears on the right side at the bottom of the display.
5. Call the network service number given to you by the service provider.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activation of the feature, it is automatically deactivated.


For further details, contact your network provider.

Note

- PC Sync is a program for data exchange between PC and the phone by a data cable. For more information, you can use the PC Sync Help file on the CD.



Organizer [Menu 4]

Press the Menu key () and select **Organizer** using navigation keys.

Schedule [Menu 4-1]

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move to another date using navigation keys. If a date is shown in a different colour, it means that there is a schedule or memo for that day. This function reminds you of your schedule and memos. The phone will sound an alarm tone if you set the phone to do so.

View [Menu 4-1-1]

Shows the note for the chosen day. Press [Options] to delete or edit the note you selected.

Edit [Menu 4-1-2]

Use this to edit the schedule.

Delete [Menu 4-1-3]

Use this to delete the schedule.

Add new [Menu 4-1-4]

You can edit a maximum of 30 characters and take up to 20 notes.

Calendar [Menu 4-1-5]

Goes back to the calendar.

Scheduler tone [Menu 4-1-6]

The phone can sound an alarm tone when the scheduled date and time for an event has been reached with this option.

View all schedules [Menu 4-1-7]

Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists.

Go to date [Menu 4-1-8]

Use this to jump to a specific date. Enter the date using the numeric keys and the left/right navigation keys.

Delete past [Menu 4-1-9]

You can delete expired schedule notes that have already been notified.

Delete all [Menu 4-1-10]

Use this to delete all schedules. You are asked to confirm this action.

Memo [Menu 4-2]

You can write, edit and delete a memo on a specific date.

1. Scroll to highlight Memo.
2. Press the left soft key [Add].
3. Input the memo and then press the left soft key [Options].

The following options are available.

- **Save:** Allows you to save the memo.
- **T9 languages:** Select the desired language of T9 mode.
- **Exit editor:** Allows you to exit from the memo editor.

After a memo is already input in your phone,

1. Select a memo.
2. Press the left soft key [Select].
3. Press the left soft key [Options].



Organizer [Menu 4]

The following options are available.

- **Edit:** You can edit the selected memo.
- **Delete:** Deletes the selected memo.
- **Add new:** You can add new memo.
- **Delete all:** Deletes all memo.

Phone book [Menu 4-3]

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 255 numbers and names in the phone memory.

- Press the left soft key [Menu] in standby mode, then select **Organizer** → **Phone book**.
- Or, press right soft key [Names] in standby mode.

Search [Menu 4-3-1]

1. In menu mode, Select an **Organizer** → **Phone book**, and select **Search**. Or in standby mode, press right soft key [Names] and select Search.
Enter the start of the name that you wish to find and press left soft key [Search].

Note

- You can also scroll through the phonebook in standby mode by pressing the navigation up key.

2. After finding the desired name, you can make a call to the number by pressing the [Send] key. Or press the left key [Options] to use the following options.
 - **View detail:** To view details of the selected name.
 - **Edit:** Edits the name, number, the listing group, the e-mail, the memo, and the phonebook photo.
 - **Delete:** Deletes the Phonebook entry.

- **Write text message:** Use this to write a text message to the name.
- **Write multimedia message:** Use this to write a multimedia message to the name.
- **Copy:** Use this to copy the Phonebook entry from SIM to the phone memory or vice versa.
- **Voice:** Records the name of the selected Phonebook entry for voice-activated dialling.
- **Main number:** To show all number lists which are saved if more than 2 numbers saved.

Add new [Menu 4-3-2]

You can add a Phonebook entry using this function.

There are 2 memories : Phone memory and SIM memory. To select the memory type, go to **Set memory** [Menu 4-3-8-1].

The phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. In menu mode, Select an **Organizer** → **Phone book**, or in standby mode, press right soft key [Names].
2. Scroll to highlight **Add new**, and press [OK].
3. You can add new Phonebook entries to SIM memory or the phone memory.

• Adding new entries into SIM memory

You can enter a name, a number, and a required group.
(Depends on the SIM)

• Adding new entries into the phone memory

You can enter a name, numbers (mobile, home, office), e-mail address, a required group, a memo, and a phonebook photo.





Note

- A phonebook photo is able to be added only into the phone memory.



Organizer [Menu 4]

Speed dials [Menu 4-3-3]

You can assign any of the keys  to  with a name list entry. You can make a call to the number by pressing the [Send] key in the Speed dial list, or press the left key [Options] and select **Call**. Or, you can call directly by pressing the assigned key (-) for 2-3 seconds in standby mode.

1. In menu mode, select an **Organizer** → **Phonebook**, or in standby mode, press right soft key [Names].
2. Scroll to **Speed dials**, then press [OK].
3. To add a number to **Speed dials**, select **<Empty>** and then, press the left soft key [Add]. You can search and select the name to press [Select] through the phonebook.
4. You can change or delete a speed dial number, make a call, write text message, or write multimedia message by pressing the left soft key [Options]. You can see the following submenus.
 - **Change**: Changes the member list.
 - **Delete**: Deletes the member list.
 - **Call**: Makes a call to the number.
 - **Write text message**: Use this to write a text message to the name.
 - **Write multimedia message**: Use this to write a multimedia message to the name.

Voice list [Menu 4-3-4]

You can assign a voice with a name list entry for voice-activated dialling.

You can make a call to the number by pressing the [Send] key, or press the left key [Options] and select **Call**.

1. In menu mode, Select an **Organizer** → **Phonebook**, or in standby mode, press right soft key [Names].
2. Scroll to **Voice list**, then press [OK].
3. To add a number to **Voice list**, press the left soft key [Add]. You can search and select the name to press [Select] through the phonebook. After selecting a number, record a voice.
4. You can play, change, or delete a voice, make a call, add new or delete all voice lists by pressing the left soft key [Options]. You can see the following submenus.
 - **Play**: Plays back the voice tag assigned to the phone number.
 - **Change**: Changes the voice tag assigned to the phone number.
 - **Delete**: Deletes the voice assigned to the phone number.
 - **Call**: Makes a call to the selected number.
 - **Add new**: Adds a new phone number for voice-activated dialling.
 - **Delete all**: Deletes all voice-activated dialling numbers.



Note

- You can enter up to 10 phone numbers for voice dial.



Organizer [Menu 4]

Caller groups [Menu 4-3-5]

There are 6 pre-defined groups, as well as one additional group labelled Others, where you can create lists.

1. In menu mode, select an **Organizer** → **Phonebook**, or in standby mode, press right soft key [Names].
2. Scroll to **Caller groups**, then press [OK]. Every group list will be displayed: **Family, VIP, Friends, Colleague, Group 1, Group 2,** and **Others**.
3. Select the group name that you want to manage by pressing the left soft key [Options]. The following options will be displayed except for **Others**.
 - **Member list:** Displays the member list in the group.
 - **Group ring tone:** Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.
 - **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
 - **Add member:** Add a member to the group.
 - **Delete member:** Delete a member from the group.
 - **Rename:** Assigns a new name to the group.

Copy all [Menu 4-3-6]

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- **SIM to Phone** : Use this to copy the entry from the SIM Card to Phone memory.
- **Phone to SIM** : Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.

- **Keep original** : When copying, the original dial numbers are kept.
- **Delete original**: When copying, the original dial numbers will be erased.

Delete all [Menu 4-3-7]

You can delete all entries in SIM, Phone, and Voice list. Except for **Voice list**, this function requires the security code.

Settings [Menu 4-3-8]

- **Set memory**

You can select the memory for the phonebook feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

- **Search by**

You can set the phone to search by name or number, when you search the Phonebook. If you select Variable, the phone will ask how to search when you search the phonebook.

- **Photo display**

You can set the photo list by **Photo view** or **List view**, when you search the phonebook. If you select **Photo view**, the search list will be shown with photos.



Organizer [Menu 4]

Information [Menu 4-3-9]

- **Service dial number (SIM dependent)**

Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.

1. Select the Service dial number.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service.


- **Memory status**

You can check the current memory status of the SIM card and phone memory.

- **Own number (SIM dependent)**

Use this to display your phone number in the SIM card.






Press the Menu key () and select **Messages** using navigation keys.

Text messages [Menu 5-1]

Your phone receives voice mail notification messages and Short Message Service (SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail.

When the  icon appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the **Delete** option in the **Inbox** menu to delete obsolete messages.

Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

Write message [Menu 5-1-1]

You can write and edit text messages.

1. Key in your message. For details on how to enter text, refer to page 24 through 27 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key [Option].

The following options are available.

- **Send to number:** Enter the number or select the number from the Phonebook or the recent numbers. You can send a message up to 5 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.
 - Send (It only shows after a phone number is entered)
 - Recent numbers
 - Search



Messages [Menu 5]

- **Save to draft:** Allows you to save the message so that it can be sent later.
 - **T9 languages:** Select the desired language of T9 mode.
 - **Clear text:** Erases the whole text.
 - **Exit:** Allows you to exit from the **Write message** menu.
3. You can also send attachments with the message by pressing the right soft key [Attach], while you're entering a message.
- **Symbol:** You can attach special characters.
 - **Picture:** You can send and receive text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
 - **Animation:** Attaching an animation in a message can be done through EMS (Enhanced Messaging Service). You can select any of 15 animations in the phone.
 - **Sound:** If available, you can attach a sound available for a short message.
 - **Text template:** You can use text templates already set in the phone.
 - **Phone number:** You can add phone numbers in the message.
 - **Signature:** You can attach your signature.







Inbox [Menu 5-1-2]

Received messages can be searched and the contents can be viewed.

Received messages are displayed in date order.

Press the menu key and select **Messages** → **Text messages** → **Inbox**.



Icon	Description
	Read SIM message
	Unread SIM message
	Read message
	Unread message
	Read delivery report
	Unread delivery report

Note

- SIM message refers the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.

Each received message has the following options available.
Press the left soft key [Options].

• **Reply**

Replies to the received message.

• **Forward**

Forwards a received message to other recipients.

• **Return call**

Calls the sender's phone.



Messages [Menu 5]

- **Extract**

Extracts a picture, animation, sound, phone number, text web page or email address from the message. These will be saved in My folder, Phonebook, or bookmarks.

- **Delete**



Deletes the selected message from the Inbox.

- **View information**

Shows more detailed information about the selected message.

Outbox [Menu 5-1-3]

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

Icon	Description
	Sent SIM message
	Sent message

The following options are available.

- **Forward**

Forwards the current message to other recipients.

- **Delete**

Deletes the selected message from the Outbox.

- **View information**

Shows more detailed information about the selected message.



Draft [Menu 5-1-4]

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. Each draft has the following options.

- **Send**

Sends the selected message to other recipients.

- **Delete**

Deletes the selected message.

Settings [Menu 5-1-5]

This menu lets you set up default SMS information.

- **Message types**

Sets the default message type between Text, Voice, Fax, Paging, X.400, E-mail and ERMES. The network can convert the messages into the selected format.

- **Validity period**

Sets the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 1 hour, 12 hours, 1 day, 1 week and the maximum authorised by your network operator.

- **Delivery reports**

Activates or deactivates the report function. When this function is activated, the network informs you whether or not your message has been delivered.



Messages [Menu 5]

- **Reply with same service centre**

Allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.

- **SMS centre**

Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.

- **Bearer setting**

Selects GPRS or GSM. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.

Delete all [Menu 5-1-6]

You can delete all messages in the message memory.

Multimedia messages [Menu 5-2]


A multimedia message can contain text, images, and/or sound clips.

This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible Multimedia message or e-mail features can receive and send multimedia messages.

Write [Menu 5-2-1]





1. Write message title, then press OK key or left soft key.
2. Key in the text message. Using the right soft key, you can input symbols, numbers and emoticons, or use T9 input mode. After the text message input, press the left soft key [Done].
3. Add an image and/or sound. You can move to the next section using the up/down navigation.



4. You can add a slide by moving the cursor on , then pressing the OK key or the left soft key [Select]. You can also add a slide using the right soft key [Menu].
5. Press the right soft key [Menu]. The following options are available.
 - **Send:** Supports multiple numbers and email addresses.
 - **Preview:** Displays the multimedia message you wish to send.
 - **Save:** Saves the multimedia message in draft or as a template.
 - **Delete:** Deletes the MMS message.
 - **Slide duration:** Set the slide show duration.
 - **Slide format:** Align the message contents right, left, top or bottom.
 - **Add Slide:** Adds a slide before or after the current slide.
 - **Remove Slide:** Deletes the selected slide.

Inbox [Menu 5-2-2]

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons. For details, see the icon description below.

Icon	Description
	Read multimedia messages
	Unread multimedia messages
	Read notified multimedia messages
	Unread notified multimedia messages

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.



Messages [Menu 5]

- **Timer stop**

The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.

- **Previous slide**

Displays the previous page.

- **Replay**

Replays multimedia messages.

- **Delete message**

Deletes the current message.

- **Reply all**

Replies to all senders.

- **Forward**

Forwards the selected message to other recipients.

- **Save message**

Saves a multimedia message in draft form or as a template.

- **Save item**

Extracts pictures or sounds. They will be saved in My folder or Phonebook.


- **Detail**

Displays information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.



Outbox [Menu 5-2-3]

Use this to see sent messages. For each sent message, you can see the delivery status.

Icon	Description
	Sent

- **Timer stop**

Usually, the pictures are in the form of an automatic slide show. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.

- **Previous slide**

Displays the previous page.

- **Replay**

Replays the current message.

- **Delete message**

Deletes the current message.

- **Forward**

Forwards the current message to other recipients.

- **Save message**

Saves a multimedia message in draft form or as a template.

- **Save item**

Saves items such as images, sound and attachments to a message.



Messages [Menu 5]

- **Detail**

Displays information about the outbox messages:
Subject (only for Multimedia message), Message date & time,
Message type, Message size.

- **Reply**

Replies to the current message.

- **Reply all**

Replies to all recipients of the selected message.

Draft [Menu 5-2-4]

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **Send**

Supports multiple member and email addresses.

- **Preview**

To see the draft multimedia message.

- **Save**

Saves multimedia messages in draft form or as templates.

- **Delete**

Deletes the message.

- **Slide duration**

Set the slide show duration.

- **Slide format**

Align the message contents right, left, top or bottom.



- **Add slide**

Adds a slide before or after the current slide.

- **Remove slide**

Removes the highlighted slide.

Settings [Menu 5-2-5]

Via this menu, you can set up the default multimedia message information.

The following options are available.

- **Slide duration**

Set the duration of each slide.

- **Alignment**

Set the alignment of messages.

- **Validity period**

Set the duration for keeping messages on the network server.

- **Auto download**

On: If you select this, messages are downloaded automatically on receipt.

Confirm: Requires you to confirm you want to download the message.

Off: Defers downloading messages.

- **Message centre**

Enter the address of an MMS server to use the MMS service.



Messages [Menu 5]

- **Profiles**


See page 82 for further information.

Voice messages [Menu 5-3]

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

When new voice message is received, the (📞) symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

Listen to voice mail [Menu 5-3-1]

Once this option has been selected, simply press the left soft key [OK] to listen to voice messages. You can also hold down the  key in standby mode to listen to voice messages.

Voice mail centre [Menu 5-3-2]

You can input and set the voice mailbox number.

Info services [Menu 5-4]

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly.

In standby mode, the following options are available when viewing info service messages.



Read [Menu 5-4-1]

The list of received broadcast messages can be searched and the contents viewed.

Receive [Menu 5-4-2]

Use this to enable or disable the reception of broadcast messages.

Alert [Menu 5-4-3]

Set alert on or off for a new broadcast message.

Auto display [Menu 5-4-4]

If you select this option **On**, all received broadcast messages will be automatically displayed.

Languages [Menu 5-4-5] (Dependent to network and subscription)

This option lets you select the preferred languages. Cell broadcast messages will be displayed in the selected language. If you use all languages supported by the phone, select **Automatic** at the end of the list.

Topics [Menu 5-4-6] (Dependent to network and subscription)

To create new topics, press the left soft key [Option] then select **Add new**. If you already have topics, you can cancel, edit, or delete them by using the left soft key [Options].



Messages [Menu 5]

Templates [Menu 5-5]

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Three types of templates are available: Text, Multimedia and Signature.

Text [Menu 5-5-1]

- **Edit**

Use this to write a new message or edit the selected template message from the text template list.

- **Delete**

Deletes the selected template message from the text template list.

- **Send text message**

Use this to send the selected template message by SMS.

- **Send multimedia message**

Use this to send the selected template message by MMS.

- **Add new**

Use this to create new template.

Multimedia [Menu 5-5-2]

- **Send**

Sends the multimedia template. Supports multiple numbers and email addresses.

- **Preview**

Displays the draft multimedia message.



- **Save**
Saves multimedia messages in draft form or as templates.
- **Delete**
Deletes the multimedia template.
- **Slide duration**
Set the slide show duration.
- **Slide format**
Align the message contents right, left, top or bottom.
- **Add Slide**
Adds a slide before or after the current slide.
- **Remove Slide**
Deletes the highlighted slide.
- **Add Image**
Use this to add an image before or after the current image.
- **Add Sound**
Adds a sound before or after the current sound.

Signature [Menu 5-5-3]

This option helps you to make your own **Signature**. Key in the name, mobile phone number, office number, Fax number, and E-mail address.

- **Edit**
Use this to write a new message or edit the selected Signature.
- **Delete**
Use this to delete the selected signature.



Messages [Menu 5]

- **Send text message**

Use this to send the selected signature by SMS.

- **Send multimedia message**

Sends the selected signature by MMS.



Memory status [Menu 5-6]

You can check the current memory status for SMS and MMS.



The L1100 has a built-in camera. It supports Zoom, White balance, Colour/Sepia/Grey settings, and Multi burst functions.

Take picture [Menu 6-1]

Press the Menu key () and select **Camera** → **Take picture**. Or, press the camera key () in standby mode.

1. Focus on the subject to capture, then press the [OK] key or the camera hot key.


Note

- In the preview mode, you can immediately go to Gallery by pressing the right soft key [Gallery].

2. 'Saved' is displayed in the top left of the captured image. The captured image is then automatically saved.

Note

- The remaining memory is shown in the top right of the image. If there is insufficient memory, the image size is automatically reduced. If the memory is full, 'memory full' is displayed and you cannot take any more picture. Create space by deleting old images.

3. Press the [OK] key to continue taking pictures. Or press the clear key () to delete the image. Press the right soft key to send MMS picture message using the captured image.



Camera [Menu 6]

< Options before taking a picture >



Press the left soft key [Options] to set the options in the preview mode. You can select the desired option by pressing the [OK]. And you will see the current option setting value in the top of the preview screen.

Then you can modify the desired value by pressing the left/right navigation keys. If you press the [OK] or left soft key [Done], the selected option value is set and return to the preview mode.

You can set the following options.

Note

- The larger the image size, the better the image quality. However, this will use more memory.

 
1. **Image size:** Select the desired image size to be captured. [640x480, 320x240, 160x120, 128x160, 48x80]
2. **Brightness:** Select the desired brightness. [-2 ~ +2]
3. **White balance:** Select the desired white balance. [Auto/ Daylight/ Incandescent/ Cloudy/ Fluorescent]
4. **Zoom:** Select the zoom factor [x1, x2, x4]
5. **Colour effect:** Select Colour/Sepia/Mono mode by using the left/right navigation keys.
6. **Multi shot:** Select the number of images to be captured in multi burst mode.
7. **Shutter sound:** Select shutter sound [Sound1 / Sound2 / Sound3 / Off]
8. **Factory settings:** Return to the default factory settings.

Gallery [Menu 6-2]

Then select image category.

[All pictures / General pictures / Phonebook pictures]

You can view, organise and send pictures saved in your phone.

1. Use the navigation keys to select the picture you want a full screen view of.
2. Press the [OK] key. You will see the name of the image on top of the LCD screen.
3. Press the left soft key [Options] to access the following submenus.
 - **Thumbnail/Enlarge:** You can view the selected image.
 - **Delete:** Deletes the selected image.
 - **Send multimedia message:** Sends MMS picture messages using the selected image. See page 62 about writing MMS message.
 - **Set as wallpaper:** Set the selected image as wallpaper.
 - **Slide show:** Plays back every image in the selected category in succession, in order. To stop the slide show playback, press the  key.
 - **Rename:** You can change the title of the selected image.
 - **Delete all:** Deletes all images in the selected category.
 - **Details:** You can check the title, size, date and time of the selected image.
4. To go back to the Camera menu, press the right soft key [Back].

In [Memory status] sub menu, you can check the memory status in your phone.

[total size / used size / free size]



Games & Apps [Menu 7]

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD and .JAR formats.

Note

- The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Warning

- Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.



Games [Menu 7-1]


The phone offers you the games to play with.

Note

- The control keys are different depending on a game. However, each one has an introduction to explain the main control keys.

[Common key function]

 : Game menu

 : Back

Applications [Menu 7-2]

Application menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted, or viewed in detail within the Application menu. From the list within the Application menu, the following options are available:

- **Open:** Open the selected program. The list includes all Java programs installed in the phone.
- **Delete:** Delete the selected program. Once deleted, you will not be able to restore the program unless it is downloaded again using the WAP.
- **Details:** Display detailed information on the selected program. This includes the program name, program size, program version, vendor information and the website address or the URL.



Games & Apps [Menu 7]

- **Connect options:** Some Java applications may require data connection to be made. Select one of the following options.
 1. **Ask first:** You will be asked before the application makes the connection.
 2. **Allowed:** The connection is created immediately without a notification.
 3. **Not allowed:** No connection is allowed.

Download [Menu 7-3]

When a new Java program is downloaded using the WAP, the address from which a download takes place is known as a bookmark. The Java menu includes a bookmark list for downloading Java programs and this bookmark list can be viewed from the Download menu. You can connect, view, edit, delete, and add new bookmarks.

- **Connect:** Selected address in the bookmark is used for data connection. After successful connection, desired Java program can be downloaded from the list.
- **View:** Detailed information on a bookmark can be viewed such as the address of bookmark and title of bookmark required for connecting to certain sites.
- **Edit:** Selected bookmark can be edited. Editing a bookmark is done in the order of Address → Title. When creating a new bookmark, same order is followed.
- **Delete:** Selected bookmark is deleted. All bookmarks can be deleted completely from the bookmark list screen. Deleted bookmark cannot be restored so caution is required when deleting bookmarks.
- **Add new:** New bookmark is added. The same order used during Edit bookmark applies to Add new bookmark. Select the Add new option from the bookmark menu or when no bookmark exists, then the Add new can be selected from the bookmark list screen.



Note

- After selecting the Connect function to access the Java MIDlet Provider's server, you may choose one of many Java programs to download and install into your phone. Once connected to the server, the Go button can be pressed to view the JAD information on a desired program. The Get button will begin the download and install process. The download and install process will take place simultaneously and once download is complete you can immediately run the Java program. The installed Java program can be selected to run at a later time from the Application menu.

Information [Menu 7-4]

Memory status [Menu 7-4-1]

Shows the size of memory available for game and application installations. You can also see the whole memory status of Handset.



Internet [Menu 8]


Press the Menu key  and select **Internet** using navigation keys.

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your network operator to open your Internet account. To use the Web Browser, you must indicate your phone number via the **Own number** menu option.

Once connected, the homepage is displayed. The content depends on the service provider.

 


You can access any website page by entering its URL address. To exit the browser at any time, press the  key. The phone will return to the standby mode.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

Using the WAP browser menu

There are various menu options available when surfing the Wireless Web.



Note

- The WAP browser menus may vary, depending on your browser version.

Home [Menu 8-1]

Connect to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks [Menu 8-2]

Set the current page as a new bookmark or move an established bookmark. Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should use the same security or content precautions as you would with any site.

E-mail server [Menu 8-2-1]

• Connect

Connects to the E-mail server that you configured.

• Edit address

Edit the E-mail address.

Delete all [Menu 8-2-2]

Delete all bookmarks.



Internet [Menu 8]

Push messages [Menu 8-3]

Inbox [Menu 8-3-1]

You can order Push messages from WAP service providers. Push messages are notifications of, for example, news headlines and they can contain a text message or the address of a WAP service. For availability and subscription, contact your WAP service provider. Service providers can update an existing Push message every time a new Push message is received. Messages can be updated even if you have moved them to another folder. When Push messages expire, they are deleted automatically.

- **Information**

Shows the information of received push messages.

- **Load**

Connects to a specific site using the information in the received push message.

- **Delete**

Deletes the selected push message.

Receive [Menu 8-3-2]

You can choose whether or not you wish to receive push messages.

Profiles [Menu 8-4]

For more information, consult your network operator. Each profile has submenus as follows:

- **Activate:** Activates the selected profile.
- **Settings:** Use this to edit and change WAP settings for the selected profile.
- **Rename:** You can change the selected profile's name.

- **Delete:** Deletes the selected profile from the list.
- **New profile:** You can add a new profile.

**Note**

- The changes using these options may affect the MMS function.

[Go to URL \[Menu 8-5\]](#)

You can connect directly to the site you want. To do this, you need to enter a specific URL.

[Cache settings \[Menu 8-6\]](#)

The information or services you have accessed are saved in the cache memory of the phone.

[Clear cache \[Menu 8-6-1\]](#)

Removes all context saved in cache.

[Check cache \[Menu 8-6-2\]](#)

Set a value whether a connection attempt is made through cache or not.

**Note**

- A cache is a buffer memory, which is used to save data temporarily.



Internet [Menu 8]

[Security certificates \[Menu 8-7\]](#)

A list of the available certificates is shown.


[Reset profiles \[Menu 8-8\]](#)

You can reset profiles to return to original settings.

[WAP information \[Menu 8-9\]](#)

The WAP browser version is displayed.



Press the Menu key () and select **Settings** using navigation keys.

Date & Time [Menu 9-1]

This option lets you change the current time and date displayed. The following options are available.

Set date [Menu 9-1-1]

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

Date format [Menu 9-1-2]

You can set the date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD. (D: Day, M: Month, Y: Year)

Set time [Menu 9-1-3]

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

Time format [Menu 9-1-4]

You can set the time format between 12 hours and 24 hours.

Phone settings [Menu 9-2]

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

Wallpaper [Menu 9-2-1]

Use this to set up the display on the LCD screen in the standby mode.



Settings [Menu 9]

Greeting note [Menu 9-2-2]

Use this to show the greeting note on the internal LCD screen in the standby mode.

Menu colour [Menu 9-2-3]

Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the Select key.

Languages [Menu 9-2-4]

You can select the display language. English will be set if the language on the SIM card is not supported by the phone.

Backlight [Menu 9-2-5]

Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.

You set the backlight option for the keypad in the up/down position independently.

LED Indication [Menu 9-2-6]

Use this to set LED Indication blinking on/off, which shows whether your phone is power on.

Network name [Menu 9-2-7]

Use this to display network name you use on the LCD screen in the standby mode.



Call settings [Menu 9-3]

To change the settings for call diverting.

Call divert [Menu 9-3-1]

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

- **All voice calls**

Diverts all voice calls unconditionally.

- **If busy**

Diverts voice calls when the phone is in use.

- **If no reply**

Diverts voice calls which you do not answer.

- **If out of reach**

Diverts voice calls when the phone is switched off or out of coverage.

- **All data calls**

Diverts to a number with a PC connection unconditionally.

- **All fax calls**

Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

- **Activate**

Activates the corresponding service.



Settings [Menu 9]

- **To voice mail**
Forwards to message centre.
- **To other number**
Input the number for call diverting.

- **Cancel**

Cancels the selected call divert.

- **View status**

You can check the status of the service.

- **Cancel all**

Cancels all call divert settings.

Answer mode [Menu 9-3-2]

Select the desired mode to answer a call.

- **Flip open**

You can receive a call simply by opening the flip.

- **Any key**

When the phone rings, you can answer a call by pressing any key except the key and the right soft key (☐).

- **Only send key**

You can answer a call only by pressing the send key.

Send my number [Menu 9-3-3]

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling.

Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.



Call waiting [Menu 9-3-4] (Network Service)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

Minute minder [Menu 9-3-5]

When set to On, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Voice dial [Menu 9-3-6]

You can make a phone call by speaking a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice-activated dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face so that the proximity sensor does not turn the loudspeaker off.
- Very short names are not accepted. Use long enough names and avoid similar names for different numbers.

- **Automatic**

Use this to enter voice-activated dialling mode whenever you open the flip.

- **Manual**

Use this to enter voice-activated dialling mode by holding the star [*]/voice] key.



Settings [Menu 9]

Note

- You must say the name exactly as you said when you recorded it. This may be difficult, for example, in a noisy environment or during an emergency, so you should not rely solely upon voice – activated dialling in all circumstances.

Auto redial [Menu 9-3-7]

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Select line [Menu 9-3-8]

This function is only used if Two Line Service is supported by the Service Provider. If this function is supported by your service provider, the following menu will be displayed.

- **Line 1**
- **Line 2**

Closed user group [Menu 9-3-9] (Network Service)

This is a network service that specifies the group of people who you can call and who can call you. For more information, contact your network operator or service provider. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index. (A specific index is stored in the network.)

- **Preset** : Sets the selected CUG index.
- **On**: You can edit the CUG index and activate it.
- **Off**: Deletes the selected CUG.



Security settings [Menu 9-4]

Various passwords are used to protect certain features of your phone.

PIN code request [Menu 9-4-1]

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.



Note

- Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

- **On**

You must enter the PIN each time the phone is switched on.

- **Off**

The phone connects directly to the network when you switch it on.

Phone lock [Menu 9-4-2]

When the **Phone lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on. The password is factory set to **0000**. To change the phone password, refer to the **Change codes – Security code** menu option [Menu 9-4-5]. Once the correct password has been entered, you can use the phone until you switch it off.



Settings [Menu 9]

The following options are available:

- **Power On**

- **Enable**

- You are required to enter the phone password when you switch the phone on.

- **Disable**

- You do not need to enter the phone password when you switch the phone on.

- **If SIM changed**

- Your phone will request security code only when you change your SIM card.

- **Immediately**

After entering the correct security code, the phone will lock after going into the idle state. If you want to disable this phone lock, you should enter the right security code after pressing the right soft key. If you power off in the phone lock state, when the phone is next powered on, the phone is in the lock state.

Call barring service [Menu 9-4-3] (Network dependent)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- **All outgoing**

- No call can be made.



- **Outgoing international**

International calls cannot be made.

- **Outgoing international except home country**

When abroad, calls can be made only to numbers within the current country and to your home country, No call can the country where your home network provider is located.

- **All incoming**

No call can be received.

- **Incoming when abroad**

Calls cannot be received when you are using your phone outside your home service area.

- **Cancel all barrings**

All call barring settings are deactivated; calls can be made and received normally.

- **Change password**

Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.



Note

- To use **Call barring service**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.



Settings [Menu 9]

Fixed dial number (FDN) [Menu 9-4-4] (SIM dependent)

You can restrict outgoing calls to selected phone numbers if supported by your SIM card. The FDN capacity to add depends on the SIM card. When you enter the FDN, the PIN2 code is required.

This Function enables partial numbers (e.g. area codes) to save.

Examples:

If 3 numbers (0123, 123123, ?89012) are stored in the FDN list, then you are allowed to dial:

012345678..., 01236789..., 123123 only, 189012, and 289012.
(“?” means any numbers)

If you try to make a call which is not added in the FDN list, you can't make a call and see a message “FDN Check”.

• Enable

If the FDN is enabled, you can make a call by only number on a list. A phonebook function is restricted partially. You can't add entries into SIM, but can only add entries into the phone memory. Also, you can search only phonebook entries which are added into the phone memory.

• Disable

If the FDN is disabled, you can use a phonebook function.

• Number list

You can see the FDN list. You can add, edit and delete the FDN by pressing the left soft key [Options].

Note

- Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.



Change codes [Menu 9-4-5]

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **Security code, PIN code, PIN2 code**

Note

- PIN: Personal Identification Number

Network settings [Menu 9-5]

The Network settings feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically, manually or preferably.

Note

- You can select a network other than your home network only if it has a valid roaming agreement with your home network.

Automatic [Menu 9-5-1]

Use this to set the phone to automatically search for and select one of the cellular networks available in your area.

The phone will default back to **Automatic** if it is switched off.

Manual [Menu 9-5-2]

If you want to select the desired network manually from a list of network. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again.



Settings [Menu 9]

Preferred [Menu 9-5-3]

You can set a list of preferred networks the handset should attempt to register with first, before attempting to register to any other networks. This list is created from the handset's predefined list of known networks.

Band selection [Menu 9-5-4]

Use this to set the network band between two choices, GSM 900/1800 or GSM1900.

GPRS settings [Menu 9-6]

GPRS (General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology;

- You need to subscribe to the GPRS service. For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

Attach [Menu 9-6-1]

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker.

If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.



Note

- If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

External device [Menu 9-6-2]

When you use Internet via GPRS by using external device, you can set the following six profiles: **Rename**, **APN**, **IP address**, **DNS**, **User ID**, and **Password**.

Reset settings [Menu 9-7]

You can reset your phone to its default configuration.

To do so, proceed, as follows.

1. Select the **Reset settings** menu option.
2. Enter the 4-digit security code.



Note

- The security code is preset to 0000.



SIM service [Menu 0]

our service provider can offer special application through SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.

 

 


Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .


Q How do I clear all call history?

A Press the left soft key and then   .

Q How do I view all numbers saved in the memory?

A Press the right soft key and then .

Q  does not disappear from the screen.

A Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.



Q&A

Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q The phone gets warm.

A During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

Q The bell does not ring, or lamp or LCD blinks only.

A The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'General' or 'Loud'

Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.

Q Usage time of battery becomes shorter.


A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.



Q No number is dialled when you recall a phonebook entry.

A Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.

Q You cannot be contacted.

A Is your phone switched on ( pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

Q I cannot find the lock, PIN, or PUK code, or password?

A The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.



Accessories

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.



Supplied adapter

This adapter lets you charge the while at home or in the office.



Battery

Standard battery is available.



Headset

Allows hands-free operation. Includes earpiece and microphone.



Data cable kit

Connects your phone to a PC.

Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.



General

Product name : L1100

System : GSM 900/DCS 1800

Ambient temperatures

Max : +55°C

Min : -10°C



Memo





Memo