



KF750 User Guide

CE 0168

www.lgmobile.com

P/N : MMBB0274814 (1.1) H

LG ELECTRONICS INC.

KF750 User Guide

ENGLISH
简体中文

Bluetooth QD ID B013855



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF750 User Guide

Congratulations on your purchase of the advanced and compact KF750 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Setup 01

Your standby screen 02

The basics 03

Get creative 04

Get organised 05

The web 06

Settings 07

Accessories 08

Contents

Setup

Getting to know your phone	6
Installing the USIM and battery	7
Memory card.....	9

Your standby screen

Touch screen tips.....	10
The status bar	11

The basics

Calls	12
Making a voice call	12
Making a video call.....	12
Making a voice/video call from Contacts.....	12
Making international calls.....	13
Answering and rejecting a call..	13
Speed dialling.....	13
Making a second call.....	13
DTMF tones	14
Viewing your call logs.....	14
Using call divert	14
Using call barring	15
Contacts.....	16
Searching for a contact	16
Adding a new contact	16
Contact options	17
Creating a group.....	17
Using service dial numbers	18
Viewing your own number	18
Creating a business card.....	18
Messaging.....	19
Messaging.....	19
Sending a message	19
Entering text	19

T9 predictive	19
Message folders.....	20
Using templates.....	20
Using emoticons.....	20

Get creative

Camera	21
Taking a quick photo	21
After you've taken your photo ..	21
Using the flash.....	22
Adjusting the brightness.....	22
Choosing a shot mode.....	22
Using the advanced settings	23
Video camera	25
Shooting a quick video	25
After you've shot your video	25
Using the advanced settings	25
Your photos and videos	27
Capturing an image from a video	27
Editing your videos.....	27
Trimming the length of your video	27
Merging two videos together....	27
Merging a photo with a video...	28
Adding text to a video.....	28
Overlaying a photo.....	28
Multimedia.....	30
Games and Applications.....	30
M-Toy menu	30
Playing a game.....	30
Flash contents	30
Using options viewing the SWF/ SVG file	30
Documents.....	30

Transferring a file to your phone	31	Changing the web browser settings	40
Viewing a file.....	31	The web	41
Others.....	31	Using Bluetooth.....	41
Movie maker	32	Sending and receiving your files using Bluetooth	41
Creating a movie	32	Pairing with another Bluetooth device	42
Music.....	32	Using a Bluetooth headset	42
Playing a song.....	33		
Editing a playlist	33	Settings	
Using the radio.....	33	Settings	43
Searching for stations.....	34	Changing your screen settings	43
Using voice recorder	35	Personalising your profiles	43
		Changing your phone settings	44
Get organised		Using Date & Time.....	44
Organiser	36	Changing your other settings.....	44
Adding an event to your calendar	36	Changing security settings.....	45
Adding an item to your to do list.....	36	Using memory manager.....	45
Tools	37	Using flight mode	45
Setting your alarm	37		
Using your calculator	37	Accessories.....	46
Using the stopwatch.....	37	Network service	47
Converting a unit	38	Technical data	47
Adding a city to your world time	38		
		Guidelines	
The web		Guidelines for safe and efficient use.....	49
Browser	39		
Accessing the web	39		
Adding and accessing your bookmarks.....	39		
Using RSS reader	40		
Adding the Feed.....	40		
Updating the RSS reader	40		

 
Getting to know your phone



Installing the USIM and battery

1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.

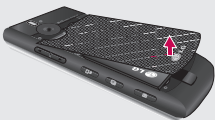

2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment using the battery cover.

 


WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the reverse direction.

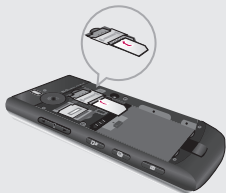

01

02

03

04

05

06

07

08

Installing the USIM and battery

 
4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



5 Charging your phone

Slide back the cover of the charger socket on the side of your KF750. Insert the charger and plug into a mains electricity socket. Your KF750 will need to be charged until a message reading "Battery full" appears on screen.

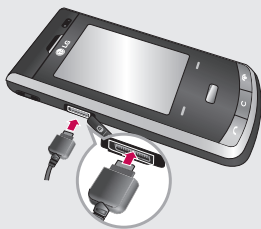

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card. The KF750 will support up to a 4GB memory card.

TIP: A memory card is an optional accessory.


- 1 Remove the battery cover as before.
- 2 Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing downwards.



- 3 Replace the battery cover.

Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press  then select **Settings** and choose **Phone settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open **Memory manager** from the Phone settings menu and select **Primary storage settings**.

NOTE: If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

01

02

03

04

05

06

07

08

Your standby screen

Whenever your KF750 isn't in use it will return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touch screen tips

If you press the touch screen button on the right-hand side of the phone the screen will switch to an interactive touch screen keypad.

Press and hold the touch screen button from the standby screen to enter a further multimedia menu.

To select an item, touch the icon on the touch screen. Your KF750 will vibrate slightly when it recognises that you've touched an option.

- There's no need to press too hard as, the touchscreen is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Don't cover the phone with a case or cover, as the touch screen will not work with any material covering it.

- The touch pad below the screen can be used as a four way arrow pad to navigate you through the phone menus.

TIP! Use the touch screen for fast and easy access to your Music, Photo, M-Toy, Document, FM radio.



Touch pad

NOTE: When the screen light goes off, you can press the camera key on the right hand side of the phone to restore the standby screen.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown below.



Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may reduce signal quality.

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty

Icon	Description
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	3G available

01

02

03

04

05





06

07

08

Calls

Making a voice call


- 1 Enter the number including the full area code.
To delete a digit press .
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

Making a video call

You can make a video call in a 3G-covered service area if the user you are calling also has a 3G video phone in a 3G-covered service area. You can also receive video calls. To make a video call, do the following.



- 1 Enter the phone number, as before.
- 2 If you do not want to use the speakerphone, ensure you have the headset plugged in.
- 3 To start the video function, press the left soft key **Options** and select **Make video call**. You will be notified that you will need to close other applications to make the video call.

NOTE: The video call may take some time to connect. Please be patient. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.


- 4 Adjust the camera position if necessary.
- 5 Press  to finish the call, or close the handset.

Making a voice/video call from Contacts


It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press the down key on the navigation touch pad to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- 4 Press  to finish the call.

Making international calls

- 1 Press and hold **0+** for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Press Silent key to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting!

Press the End key to reject the incoming call.


Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial 1. Select any other number to assign it to a speed dial contact.

- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- 1 Press the assigned number then press the send key , or
- 2 Press and hold the assigned number until the contact appears on screen.

Making a second call

- 1 During your initial call, touch the left soft key and select **Add new call**.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** → **End** followed by **All** or **Active**.

NOTE: You will be charged for each call you make.

01

02

03

04

05

06

07


08

Calls

DTMF tones

DTMF allows you to use numerical commands to navigate menus within automated messages. DTMF is switched on as default.

Viewing your call logs

Press , then select **Calling** →

Call logs.


Choose to view:

All calls - View a complete list of all of your dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

Press , select **Calling**.

Before Calling you can also choose to view:


Call durations - View the duration of all your sent and received calls.

Data volume - View the amount in kilobytes of all your received and sent data.

Call costs - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

TIP! From any calls list, touch the left soft key and **Delete All** to delete all the recorded items.

Using call divert

- 1 Press , then select **Calling**.
- 2 Select **Call divert** and choose **Voice calls** and/or **Video calls**.
- 3 Choose when to divert all calls ; when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Activate**.

NOTE: Charges may be incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Deactivate all**.

Using call barring

- 1 Press , select **Calling**.
- 2 Select **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password.
Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05

06

07

08

Contacts

Searching for a contact

There are two ways to search for a contact:

From the standby screen


- 1 From the standby screen touch the down key on the touch pad to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press **4** (GHI) twice.

TIP! You can search by group by touching the left soft key and selecting **Search by group**. This will bring up a list of all your groups.

From the main menu

- 1 Select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

Adding a new contact

- 1 Press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 6 Add up to two email addresses.
- 7 You can assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add a **Homepage, Home address, Company name, Job title, Company address** and a **Memo**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use.
- 2 Press the left soft key to open the list of options.

From here you can:

Send message - Send a message or an email to the contact.

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.

Make voice call - Call the contact.

Make video call - Make a video call to the contact.

Mark/Unmark - Mark your contacts for multiple selection.


Search by - You can search the entry by number or group.

Save to USIM/Handset - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).

Delete - Delete the contact.

Text input - You can set the text input method.

Creating a group

- 1 Press  and select **Contacts**.
- 2 Select **Groups** and touch the left soft key.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and touching the left soft key. Choose to **Add a member** to the group from your contacts, assign a **Group ringtone**, **Rename** the group or **Delete** the group.

01

02

03

04

05


06

07

08

Contacts

Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

Viewing your own number

Select **Own number** in the Contacts menu to view your number.

Creating a business card


You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.


Messaging


Messaging

Your KF750 combines SMS, MMS and email into one intuitive and easy to use menu.

Sending a message

- 1 Select **Messaging** then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. A new SMS will open.
- 3 Select **Options**, then **Insert**, to add an image, video, sound or subject.
- 4 Press  **Send**. Enter the phone number or select **Contacts** to open your contacts list. You can add multiple contacts.


 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

 
Entering text

There are two ways to enter text:

T9 predictive and Abc manual.

To switch between text entry methods, press and hold the  key when you have a blank message open.

To change between upper, lower and title case press  key.

To delete a character use the  hard key below the screen.

To enter a symbol select **Options** and **Insert**.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

01

02

03

04

05

06

07

08

Messaging

Message folders

Inbox - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

Mailbox - All emails you receive are placed into your Mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder for messages that are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 Select **Messaging** then choose **Templates**.

- 2 Choose **Text templates** or **Multimedia templates**. You can then select Options to **Add new**, **Write MMS**, **Edit**, **Delete** or **Delete all** templates.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Select **Messaging** then choose **Emoticons**.
- 2 Select Options to **Add new**, **Edit**, **Delete** or **Delete all** emoticons.

 
Camera

Taking a quick photo


- 1 Press the capture button on the right-hand side of the handset and the camera's viewfinder will appear on the screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly depress the capture button and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject of your photo in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully.


After you've taken your photo


Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen together with five icons down the right side.

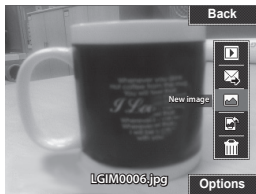


Back Go back to previous menu.

 View the pictures you have taken in your Album.

 Send the photo as an MMS, Email, via Bluetooth or Blog This.

 Take another photo straight away. Your current photo will be saved.

 Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

 Delete the photo you have just taken. The viewfinder will reappear.

TIP! In camera mode select the Play icon to open the photo album.

01

02

03

04

05

06


07

08

Camera

Using the flash



Flash is set to Auto by default, but there are other options.

- 1 Select  from the top right corner of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
 - On** - Your camera will always flash when taking a picture.
 - Auto** - Your camera will assess whether or not the flash is necessary for a good picture.
 - Off** - The camera will never flash. This is useful if you want to save battery power. Select the flash option you'd like to use.
- 3 When you've made your selection the flash menu will automatically close, ready for you to take your picture, and the flash icon in the viewfinder will change according to your chosen flash mode.

NOTE: Whenever you exit the camera, the flash setting will revert to Auto mode. You'll need to switch the flash back on if you still need it when you reopen the camera.

Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in **Settings**.
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.

Choosing a shot mode

- 1 Select **Settings** to view the available shot modes.
- 2 Choose from the five options:
 - Normal shot** - This is the default shot type. The photo will be taken in the normal way, as outlined in **Taking a quick photo**.
 - Continuous shot** - This enables you to take nine shots automatically in very quick succession.
 - Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just to decorate their surroundings.

Panorama - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view.

Music video shot - This shot type allows to take a shot with music or voice.

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the photo.

Scene mode - Set the the camera to adjust for the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

Brightness - Set the brightness of the image in the viewfinder of the camera.

Effect - Choose a colour tone to apply to the photo you're taking.

White Balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Daylight, Cloudy, Illuminate** and **Indoors**.

Timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **Off, 3 seconds, 5 seconds** or **10 seconds**. Great for a group photo that you want to be part of too!

Shot mode - See page 23.

ISO - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be to light. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto, ISO 100, ISO 200, ISO 400** or **ISO 800**.

Quality - Super fine/ Fine /Normal

Memory in use - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Focus mode - Set the camera to focus automatically.

Sound - Select one of three different shutter sounds.

01

02

03

04

05

06

07

08

Camera


NOTE: Always select **Save** after selecting a new setting to implement the changes you've made.

TIP! When you exit the camera, all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example, colour tone and ISO. Check them before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu. Remember to select **Save** before exiting to apply any changes.






Video camera

Shooting a quick video

- 1 Move the camera mode switch to  and press the centre button. The video camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the capture button once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press the capture button again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.

-  View your video album.
-  Play the file.
-  New video is played.
-  Send the video as an MMS, as an Email, via Bluetooth or YouTube.
-  Delete the video you have just made. The viewfinder will reappear.

TIP! Select the album icon to open the video album.

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the video.

Scene mode - Set the Video for adjusting the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

Effect - Choose an effect tone to apply to the video you're making.

White Balance - The white balance ensures that any white in your photos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Daylight, Cloudy, Illuminate, Indoors**.

Music video shot - This shot type allows to take a shot with music or voice.

Recording speed - Record the video using **Slow video, Normal, Fast video**.

Quality - Change the quality of the video to save on memory space.

01

02

03

04

05

06

07

08

Video camera

Duration - Select one of three shutter sounds.

Memory in use - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.


Voice - Choose **Mute** to record a video without sound.

NOTE: Always touch **Save** after selecting a new setting to implement the changes you've made.

TIP! When you exit the video camera all your settings will return to default, except Video Size & Video Quality. Any non-default settings you require will need to be reset, for example colour tone and white balance. Check them before you shoot your next video.

Your photos and videos

Capturing an image from a video

- 1 Play the video you would like to capture an image from.
- 2 Press  to pause the video on the frame you'd like to convert to an image and open the options menu.
- 3 From the options menu select **Capture**.
- 4 The image will appear on the screen with its assigned image name.
- 5 Select **OK**.
- 6 Select **Back** to return to the album.
- 7 The image will be saved in the My stuff folder and will appear in the album (You need to exit the album and then re-open for this to appear).



WARNING: Some functions may not work properly if the multimedia file has not been recorded on the phone.

Editing your videos

Editing features are available for all video types except 640x480. Don't record in this format if you plan to edit your video.

Trimming the length of your video

- 1 Choose the video you'd like to edit, and touch **Options**.
- 2 Select **Edit** and choose **Trim**.
- 3 Select **Start** and **End** to mark the new start and end points.

Merging two videos together

- 1 Choose the first video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Video merge**.
- 3 The Videos folder will open. Choose the video you would like to merge to and choose **Select**.
- 4 Select **Effect** to choose how the videos merge together: **None**, **Fade out**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board** or **Dissolve**.

01

02

03

04


05

06


07

08

Your photos and videos

- 5 Press  to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image merge**.
- 3 The Pictures folder will open. Choose the photo you would like to merge into your video and choose **Select**.
- 4 Select and slide the photo to merge it to the end or the beginning of the video.
- 5 Select **Effect** to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board** or **Dissolve**.
- 6 Press . Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and press **Save**.
- 4 Press **Start** and mark when you'd like the text to appear.
- 5 Select the area of the screen you'd like the text to appear in.
- 6 Select **OK** to mark when you'd like the text to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more text.

Overlaying a photo

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image overlay**.

- 3 The Pictures folder will open.
Choose the photo you would like to overlay your video and choose **Select**.
- 4 Select **Start** and mark when you'd like the photo to appear.
- 5 Select the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Select **OK** to mark when you'd like the photo to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more photos.

01

02

03

04

05

06

07

08

Multimedia

Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

M-Toy menu

You can enjoy six default games.

Resume - View the information for a game.

Setting - Set the sound and vibration when activating a game.

Use as Wallpaper - Reset all settings.

Exit - End a game.

Playing a game

- 1 Select **Games** menu.
- 2 Select a game and touch **Launch**.

Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

Using options viewing the SWF/ SVG file

Select **Options** while in pause mode and choose from:

Play/Pause - Pause or resume playback.

Full screen/ Landscape view - View your SWF/SVG in full screen or landscape view mode (this only appears if you select **Options** without pausing).

Mute/Unmute - Switch the sound on/off.

Use as wallpaper - Set the SWF/SVG file as a wallpaper.

File info. - View brief details about the file.

Documents

From the Documents menu, you can view Excel, Powerpoint, Word, text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by selecting **OK**.
- 4 The file should appear in your **Documents** or **Others** folder.

Viewing a file

- 1 Select **My stuff**, then **Documents**.
- 2 Select a document and choose **View**.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

To move a file from Others to Documents:

- 1 Select **My stuff** then **Others**.
- 2 Select a file and choose **Options**.
- 3 Select **Move**.

01

02

03

04

05

06

 
07

08

Multimedia

Movie maker

The Movie maker allows you to create an image slide show combined with music.

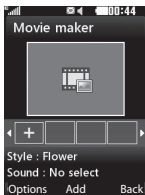

Creating a movie

- 1 Go to **Multimedia** and select **Movie maker**.
- 2 Select **+** to add an image. Choose the images you want to include then select **Done**.
- 3 Select **Style** menu to choose a movie style.
- 4 Select **Play** to see what you've created.

Music

Your LG KF750 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.




Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

Shuffle tracks - Listen to your music in a random order.

Playing a song

- 1 Select **My music**, then **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press  to pause the song.
- 4 Touch  (right) to skip to the next song.
- 5 Touch  (left) to skip to the previous song.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 Select **My music**, then **Playlists**.
- 2 Select the playlist.
- 3 Select **Options**.

Add new songs – Add more songs to the playlist. Mark the ones you want and select **Done**.

File info. - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

Move up/down – Move the song up or down the list to change the playing order.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory manager - You can view the current status of memory.

Using the radio

Your LG KF750 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

01

02

03

04

05

06

07

08

Multimedia

Searching for stations

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.



To auto tune:

- 1 From **Music** select **FM radio** then **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.

TIP! You can access music using the touch screen. Press the touch screen button on the right-hand side of the phone and choose the **Radio** or **Music** icon. You can then scroll through and select your music files or the radio functions by touching the screen.

To manually tune:

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and choose the channel number you want to save the station to.
- 3 Enter the station frequency and touch **Select** to save.

NOTE: You can also manually tune into a station by using  (left) and  (right) displayed next to the radio frequency.

Using voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 Select **Multimedia**.
- 2 Select **Voice recorder** then options and choose from:

Duration – Set the recording duration.

Choose from **MMS message size**, **30 secs**, **1 minute** or **No limit**.

Quality – Select the sound quality.

Choose from **Super Fine**, **Fine** or **Normal**.

Memory in use - Check the current status of each memory.

Go to voice recordings – Open the Voice recordings folder in **My sounds**.

- 3 Select **Rec.** to begin recording.
- 4 Select **Stop** to end recording.
- 5 Select **Play** in options to listen to your recording.

Using TV out

Choose PAL or NTSC for connecting your KF750 to a TV.

01

02

03

04

05


06

07

08


Organiser

Adding an event to your calendar

- 1 From the standby screen, press  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** then **Add new event**.
- 4 Select whether you would like to add an **Appointment, Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject** or **Location** and type in your note.
- 8 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

Adding an item to your to do list

- 1 From the standby screen press  and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.

Tools


Setting your alarm

- 1 From the standby screen press  and choose **Tools, then Alarms**.
- 2 Select Options and touch **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon - Fri, Mon - Sat, Sat - Wed, Sat - Thu, Sun - Thu, Sat - Sun, Sat - Wed, Sat - Thu, Sun - Thu** or **Except Holiday**.
- 5 Select  and **Edit** to select a sound for your alarm. To listen to sounds select the sound, and touch **Play**.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.
- 7 Finally, you can set the snooze interval at **5, 10, 20** or **30 minutes, 1 hour** or **off**.
- 8 Once you have set your alarm, select **Done**.


NOTE: You can set up to 5 alarms.

The alarm will be alerted on even if the phone is switched off.

Using your calculator

- 1 From the standby screen, press  and choose **Tools**. Select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** and choose from +/-, **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.

Using the stopwatch

- 1 From the standby screen, press  and choose **Tools**. Select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Select **Stop** to stop the timer.
- 4 Select **Lap** to measure each lap time.
- 5 To restart stopwatch, select **Resume**.
- 6 Select **Reset** to return to zero.

01

02

03

04

05


06

07

08


Tools

Converting a unit

- 1 From the standby screen, press  and choose **Tools**. Select **Converter**.
- 2 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

TIP! If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.


Adding a city to your world time

- 1 From the standby screen, press  and choose **Tools**. Select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 From the standby screen, press  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

01

02

03

04

05

06

07

08

Browser

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Using RSS reader

RSS (Really Simple Syndication) is a family of Web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


Adding the Feed

You can input the feed directly yourself: **Browser** → **RSS reader** → **Options** → **Add new** or you can click the feed link by selecting the RSS icon in the webpage.

Updating the RSS reader

- 1 You can select **Update** or **Update all Options**.
- 2 If you want to update it automatically, select **Update schedule**.

Changing the web browser settings

- 1 From the standby screen press  and choose **Browser**. Select **Browser settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, touch **Select**.

The web

Using Bluetooth

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF750.
- 2 Pair your PC and KF750 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Settings**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KF750.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send.
- 2 Select Options and choose **Send**. Choose **Bluetooth**.


- 3 Select **Yes** to turn Bluetooth on.
- 4 Your KF750 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in My Stuff.

Changing your Bluetooth settings:

- 1 Press  in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

01

02

03

04

05

06

07

08

The web

My device visibility - Choose to be Visible, Visible for 1 min or Hidden.

My device name - Enter a name for your KF750.

Supported services - Search for the profile supported by KF750.

My address - Search your Bluetooth device address.

Pairing with another Bluetooth device

By pairing your KF750 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired Devices**, then **New**.
- 3 Your KF750 will search for devices. When the search is completed **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.

- 6 Your passcode-protected Bluetooth connection is now ready.


Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KF750 will automatically switch to Headset profile.

Settings

Within this folder you can adapt your settings to personalise your KF750.

Changing your screen settings

- 1 From the standby screen, press  and select **Settings**.
 - 2 Select **Display settings** and then choose from:
 - Screen theme** - Choose the theme for your Home Screen, start Up, Shut down the phone.
 - Menu style** - Choose the style used to display menus.
 - Dialling** - Set the display used when making a call.
 - Font** - Adjust the font.
 - Backlight** - Choose how long the backlight remains on for.
- NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.
- Image quality enhancement** - Chooosed the menu to enhance the quality of the selected image.

Handset theme - Quickly change the whole look of your screen.

Greeting message - Enter the greeting message used when switching the phone is switched on.

- 3 Choose **Select** to save your settings.

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon.

Using the settings menu you can personalise each profile setting.

- 1 From the standby screen, press .
- 2 Select **Profiles** and then choose the profile you want to edit. You cannot edit the **Silent** profile. You can edit the Alert By option of your silent profile.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume, Message alerts** and more.

01

02

03

04

05

06


07

08

Settings

Changing your phone settings

Enjoy the freedom of adapting your KF750 so that it works in a way that suits you.

- 1 From the standby screen, press .
- 2 Select **Phone settings** then choose from the list below.
 - Auto key lock** - Lock the keypad automatically in the standby screen.
 - Touchpad vibration** - Turn the touchpad vibration **On** or **Off**.
 - Touch-screen effect** - Set the effect tone used when touching the screen.
 - Languages** - Change the language of for your KF750's display.
 - Power save** - Choose to switch the power saving settings **On** or **Off**.
 - Information** - View the technical information for your KF750.

Using Date & Time

Date & Time - Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

Changing your other settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

Network - Your KF750 connects automatically to your preferred network. To change these settings, use this menu.

Internet profiles - Set the profiles to connect to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn - Set the packet data connection.

Changing security settings

PIN code request - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

Handset lock - Set the phone lock to avoid unauthorised use. You will need a security code.

Change codes - Change the codes: PIN/ PIN2/ Security code.

Using memory manager

Your KF750 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Press  in standby screen. Select **Settings** then **Memory Manager**.

Handset Common memory - View the memory available on your KF750 for images, sounds, videos, flash, MMS, applications, java and others.



Handset reserved memory - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.

USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - choose Handset memory or External memory.

Using flight mode

Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate. Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

01

02

03

04

05

06

07

08

Accessories

These accessories were supplied with KF750.

Charger



USB cable and CD

Connect and synchronise your KF750 and PC.



Battery



User Guide

Learn more about your KF750.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KF750

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C
(charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KF750 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.5 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.755 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

Guidelines for safe and efficient use

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。

KF750 用户手册

恭喜您购买此款功能先进、外观小巧的 LG KF750 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。



处理旧的设备

- 1 如果某产品附有此带十字叉的带轮垃圾桶符号，则表明该产品适用于欧洲指令 2002/96/EC (European Directive 2002/96/EC)。
- 2 所有电器和电子产品应与市政垃圾分开处理，由政府或当局指定专门的垃圾收集设施。
- 3 对旧的设备的正确处理将有助于防止对环境 and 人类健康带来负面影响。
- 4 有关旧的设备处理的详细信息，请与您所在城市的相关部门、废物处理服务处或购买产品处联系。

设置	01
待机屏幕	02
基本功能	03
高级功能	04
管理功能	05
网络	06
设置	07
配件	08

内容

准则

关于安全有效使用手机的准则 6

设置

开始了解您的手机 11

安装 USIM 卡和电池 12

存储卡 14

待机屏幕

触摸屏提示 15

状态栏 16

基本功能

呼叫 17

拨打语音电话 17

拨打视频电话 17

从电话本拨打语音/视频电话 17

拨打国际电话 17

接听和拒绝电话 18

快速拨号 18

拨打第二个电话 18

DTMF 铃声 18

查看通话记录 18

使用呼叫转接 19

使用呼叫限制 19

电话本 20

搜索联系人 20

添加新联系人 20

联系人选项 21

创建群组 21

使用服务号码 21

查看本机号码 21

创建名片 22

电话本 22

信息 23

 信息 23

 发送信息 23

 输入文本 23

 T9 预测 23

 信息文件夹 24

 使用模板 24

 使用图释 24

相机 25

 快速拍照 25

 拍照后 25

 使用闪光灯 25

高级功能

 调整亮度 26

 选择拍摄模式 26

 使用高级设置 26

摄像机 28

 快速摄像 28

 拍摄视频后 28

 使用高级设置 28

照片和视频 30

 从视频中拍摄图像 30

 编辑视频 30

 剪辑视频长度 30

 合并两段视频 30

 合并照片和视频 31

 为视频添加文本 31

 叠加照片 32

多媒体 33

 游戏和应用程序 33

 体验 M-Toy 菜单 33

玩游戏	33	网络	41
Flash 内容	33	使用蓝牙	41
查看 SWF/SVG 文件时使用选项	33	使用蓝牙发送和接收文件	41
文档	33	与其它蓝牙设备配对	42
将文件传输到手机	33	使用蓝牙耳机	42
查看文件	34	设置	43
其它	34	更改屏幕设置	43
影片编辑器	34	个性化情景模式	43
创建电影	34	设置	
音乐	35	更改手机设置	44
播放歌曲	35	使用日期和时间	44
编辑播放列表	35	更改其它设置	44
使用收音机	35	更改安全性设置	44
搜索电台	36	使用内存管理器	45
使用录音机	36	使用飞行模式	45
管理器	37	配件	46
将事件添加到日历中	37	网络服务	47
向任务列表添加项目	37	技术参数	47
设置闹钟	37		
管理功能			
使用计算器	38		
使用秒表	38		
换算单位	38		
向世界时间添加城市	38		
浏览器	39		
访问网页	39		
添加并访问书签	39		
使用 RSS 阅读器	39		
网络			
添加订阅源	40		
更新 RSS 阅读器	40		
更改网络浏览器设置	40		

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

本手机符合无线电波暴露的国际准则。本手机是一种无线电发射器和接收器。其设计和制造都不能超过国际准则 (ICNIRP) 建议的射频 (RF) 暴露的发射限制。这些限制是完整准则中的一部分，为大众建立了射频的许可水平。此准则以由独立的科学组织通过定期充分地评估科学研究而制定的标准为基础。此准则包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

手机的暴露标准采用一种称为“特定吸收率”或 SAR 的测量单位。国际准则中规定的 SAR 上限值为 2.0 W/kg*。SAR 测试是在所有测试的频段中以手机的最高认可功率电平进行发射时，使用标准操作位置执行的。SAR 是以最高认可功率电平来确定的，手机操作时的实际 SAR 值可能远小于最大值。这是由于手机设计以多个功率电平操作，从而只使用抵达网络所需的功率。因此一般而言，离基站越近则手机的功率输出越低。

在新款手机可销售给大众之前，必须证明它符合欧洲 R&TTE 指令。此指令是保护用户及他人健康和安全所需满足的必要条件。

对该手机进行测试时，人耳能够承受的 SAR 最大值为 0.5 W/kg。

本手机在用于耳朵附近的正常使用位置时，或位于距离身体以外 1.5cm 的位置时，均符合 RF 暴露准则。携带时，可使用皮带夹或底座固定，皮带夹和底座不得包含金属成分，应将手机置于身体以外 1.5cm 的位置。要传输数据文件或信息，本手机需要连接到网络。在某些情况下，如果连接不可用，数据文件和信息的传输将会延迟，直至有可用连接。传输过程中，请保持上述分离距离。对该手机进行测试时，身体能够承受的 SAR 最大值为 0.755 W/kg。

大众使用的手机的 SAR 限制为 2.0 瓦特/千克 (W/kg)，平均值超过十克薄纸。准则包括了安全裕量，以加强对公众的保护及补偿任何测量变量。SAR 值可能根据国家报道需要和网络频段而不同。

有关其它地区的 SAR 信息，请参阅 www.lgmobile.com 上的产品信息部分。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

关于安全有效使用手机的准则

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，例如，胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气

囊。否则，可能导致安全气囊失效，或由于不适当的个人行为造成严重伤害。

- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

避免对您的听力造成伤害

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

玻璃零件:

您的移动设备的有些零件由玻璃制成。这块玻璃如果您的移动设备在一个硬面被投下或，可能打破接受坚固冲击。如果玻璃打破，不要接触也不要试图去除。停止使用您的移动设备，直到玻璃被一个授权服务供应商替换

爆破区域

不要在正在进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 请勿在加油点或化工厂附近使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要置于诸如浴室之类的高湿环境中使用。

关于安全有效使用手机的准则

- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

开始了解您的手机

主 LCD

- **顶部：**信号强度、电池电量及其它功能。
- **底部：**我的文档/菜单/电话本指示。

左软键/右软键

执行显示屏底部所示的功能。在待机模式下，点触左软键打开“我的文档”菜单。点触右软键连接“电话本”。

通话键

拨打电话号码并接听来电。

听筒

内置相机镜头

导航触摸键

 
- **在待机模式下：**
 - ☺ 联系人列表
 - ☺ 快速菜单
 - ☺ (右) 信息
 - ☺ (左) 情景模式
- **在菜单中：**在菜单间导航。

结束/电源键

挂断或拒接来电。
开机/关机。
按一次返回待机屏幕。

清除键

- 每按一下删除一个字符。

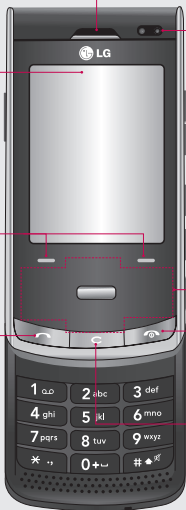

01

02

03

04

05

06

 
07

08

安装 USIM 卡和电池

1 卸下电池盖

按住手机顶部的电池释放按钮，将电池盖滑出。

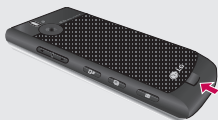

2 取出电池

 
握住电池边缘，使用电池盖将其从电池室中取出。



警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 USIM 卡

将 USIM 卡滑进 USIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 USIM 卡，沿相反的方向轻推。

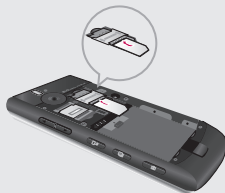

警告：不要使用指甲取出电池。

 
4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。



5 充电

滑开 KF750 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KF750 充电才完成。

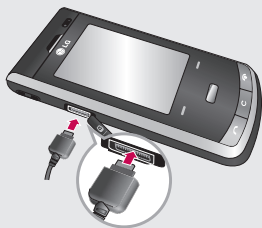

备注：应如图所示，将 KF750 充电器插入手机。

01

02

03

04

05

06

07

08

存储卡

安装存储卡

使用存储卡，可以扩展手机的可用存储空间。KF750 最大支持 4GB 存储卡。

提示：存储卡是可选配件。


- 1 像前面一样卸下电池盖。
- 2 将存储卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝下。



- 3 像前面一样替换电池盖。

格式化存储卡

如果已格式化存储卡，您可以开始使用。如果未格式化存储卡，您需要先进行格式化。

- 1 从待机屏幕中按 ，选择“设置”和“手机设置”。
- 2 选择“内存管理器”，然后选择“外部存储器”。
- 3 选择格式，然后确认选择。
- 4 输入密码（如果已设置）以格式化存储卡，现在，您可以使用该存储卡了。


提示！要更改默认存储位置，请从“手机设定”菜单选择“主存储器设置”，以打开“内存管理器”。

备注：如果存储卡中已有内容，它将自动保存在正确的文件夹中，例如，视频将自动保存到“我的视频”文件夹中。

待机屏幕

不使用 KF750 时，将返回待机屏。在此，您可以访问菜单选项、快速拨打电话和更改情景模式，以及其它一些操作。

触摸屏提示

如果按 ，屏幕将切换到交互式触摸屏键盘。

从待机屏幕按住触摸屏按键，进入多媒体菜单。

要选择一个项目，请准确点触触摸屏上的图标。当 KF750 识别您点触的选项时，会轻微振动。

- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- 不要使用手机套，使用金属套可能导致触摸屏不可用。
- 要退出触摸屏，点触右上角的主页图标一次即可。手机将返回主待机屏幕。
- 屏幕下的触式键盘可用作四向箭头盘，可用于浏览手机菜单。

提示！ 使用触摸屏可快速且轻松地访问“音乐”、“照片”、“游戏”、“电子书”和“收音机”。



触式键盘

备注：屏幕指示灯亮时，按手机右侧的相机键恢复到待机屏。

01

02

03

04

05

06

07

08

客户须知

为了使天线保持最佳的灵敏度，LG 建议您按照下图所示的方式握持手机。



通话和使用蓝牙连接期间，请不要用手遮挡天线区域。这可能降低信号质量。

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。





下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	多任务
	网络信号强度（指示栏数不同）
	无网络信号
	电池电量空
	新文本信息
	新电子邮件

图标	描述
	闹钟已设置
	正在使用“标准”情景模式
	正在使用“静音”情景模式
	外部存储器
	呼叫被转接
	GPRS 可用
	正在使用 EDGE
	正在漫游
	蓝牙已启动
	来电被拒绝
	3G 可用


 
呼叫

拨打语音电话


- 1 输入电话号码，包括完整区号。
要删除一个数字，请按 。
要删除所有数字，请长按 。
- 2 按  拨打电话。
- 3 按  或关闭手机以结束通话。

拨打视频电话

您可以在 3G 覆盖服务区拨打视频电话，前提是对方拥有 3G 视频手机且位于 3G 覆盖服务区内。您也可以接听视频电话。要拨打/应答视频电话，请执行以下操作。



- 1 使用键盘输入电话号码，或者从呼入/呼出列表选择电话号码。
要更正错误，请短按  删除输入的最后一个数字，或者按住  删除所有数字。
- 2 若不想使用扬声器，请确保将耳机插入。
- 3 要启用视频功能，请按左软键 [选项]，然后选择视频电话。
要拨打视频电话，系统将通知您需要关闭其它应用程序。

备注：视频电话可能需要一定时间进行连接。请耐心等待。连接时间也取决于对方应答呼叫的速度。在视频电话连接过程中，您会看到自己的图像；在对方应答后，屏幕将显示其图像。



- 4 请根据需要调整相机位置。
- 5 按  或闭合翻盖结束通话。

从电话本拨打语音/视频电话

拨打在电话本中存有号码的联系人的电话非常方便。

- 1 点触右软键访问电话本列表。
- 2 滚动到联系人并拨打电话。
- 3 按  拨打语音电话。按左软键并选择拨打视频电话。
- 4 按  结束通话。

拨打国际电话

- 1 请长按  以输入国际前缀。“+”字符可作为国际接入码前缀。
- 2 输入国家代码、地区代码和电话号码。
- 3 按 。

01

02

03

04

05


06

07

08

呼叫

接听和拒绝电话

电话铃响起时，按  硬键接听电话。


按左软键静音。

如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。


按右软键拒接来电。

快速拨号


您可以为常用联系人指定快速拨号号码。

- 1 按 ，然后选择电话本。
- 2 选择快速拨号。
- 3 语音邮箱已设为快速拨号 1。不能对此设置进行更改。选择任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开您的地址簿。点触要指定到该号码的联系人电话号码一次，以选择该联系人。

拨打快速拨号号码：

- 1 按指定的号码，然后按发送键  或
- 2 按住指定的号码，直到屏幕上显示该联系人。

拨打第二个电话


- 1 在初始通话过程中，点触左软键，然后选择新增呼叫。
- 2 拨打号码或搜索电话本。
- 3 按  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 选择切换在不同呼叫之间切换。
- 6 要结束一个呼叫或同时结束两个呼叫，请选择选项 → 结束，然后选择全部或活动。

备注：您需要对每通电话付费。

DTMF 铃声

DTMF 允许您使用自动消息中的数字命令导航。DTMF 默认为启动。

查看通话记录


按 ，选择通话 → 通话记录。
选择以查看：

所有通话 - 查看所有拨电、已接来电和未接来电的完整列表。

拨出电话 - 查看所有已拨打的电话的列表。

已接来电 - 查看打给您的所有电话的列表。

未接来电 - 查看您没接到的所有电话的列表。

按 ，选择通话。

从“通话”中，您也可以选择以查看：


通话时间 - 查看所有拨出和接听电话的时间。

数据量 - 查看所有已接收和发送数据的字节数 (KB)。

通话费用 - 查看您拨打电话所产生的费用（此服务取决于网络，某些运营商不支持此服务）。

提示！ 从任意呼叫列表中点击左软键，然后选择全部删除以删除记录的条目。


使用呼叫转接

- 1 按 ，选择通话。
- 2 选择呼叫转接，然后选择语音通话和/或视频通话。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 输入您要转接的号码。
- 5 选择激活以激活。

备注：转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！ 要关闭所有呼叫转接，请选择全部停用。

使用呼叫限制

- 1 按 ，选择通话。
- 2 选择呼叫限制，然后选择语音通话和/或视频通话。
- 3 选择以下五个选项中的一项或所有项：

所有拨出电话

拨出的国际电话

国际漫游时拨打电话

所有来电

国际漫游时来电

- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！ 选择固定拨号打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。启动后，仅可以使用手机拨打此号码列表中的号码。

01

02

03

04

05

06

07

08

电话本

搜索联系人

有两种方式可搜索联系人：

从待机屏幕


- 1 从待机屏幕中，点触右软键以打开地址簿。
- 2 选择与您要查看的联系人姓名的第一个字母对应的字母。因此，对于“Home”，请选择 E-H。

提示！ 通过点触右软键并选择按群组搜索，您可以按群组搜索。此时将显示您的所有群组列表。

从主菜单

- 1 选择电话本。
- 2 选择搜索，使用键盘输入您要查找的联系人姓名的前几个字母。
- 3 地址簿将列出与您输入的字母对应的联系人列表。

添加新联系人

- 1 按 ，然后选择电话本。
- 2 选择新增。
- 3 选择是将联系人保存到手机还是 USIM 卡。
- 4 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 5 可以为每个联系人输入最多 5 个不同的号码并指定一个号码类型。从以下选项选择：手机、家庭、办公室、传呼机、传真、VT 和普通。点触确定。
- 6 最多可以添加两个电子邮件地址。
- 7 将此联系人分配到某个群组。从以下选项选择：无群组、家人、朋友、同事、同学或重要人士。
- 8 您还可以添加主页、家庭地址、公司名称、职位、公司地址和备忘录。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用选项菜单：

- 1 打开您要使用的联系人。
- 2 按左软键打开选项列表。

在此，您可以：

编辑 - 更改联系人的任何详细信息。

发送信息 - 向联系人发送信息或电子邮件。

发送名片 - 将联系人的详细信息作为名片发送给其他人。选择发送方式：作为文本信息、作为多媒体信息、通过电子邮件或蓝牙。


拨打语音电话 - 呼叫联系人。

拨打视频电话 - 视频呼叫联系人。

保存到 USIM 卡/手机 - 选择是移动或复制到 USIM 卡还是手机（取决于联系人的初始保存位置）。

删除 - 删除联系人。如果确定，请点触“是”。


创建群组

- 1 按 ，然后选择电话本。
- 2 选择群组，然后点触左软键。
- 3 选择新增群组。
- 4 输入新群组的名称。
- 5 点触完成。

备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们仍将保留在地址簿中。

提示！ 您可以突出显示现有群组并点触左软键来编辑它。选择以通过电话本向群组添加成员，指定群组铃声、重命名群组或删除群组。

使用服务号码

您可以查看由您的服务提供商分配的服务拨号号码 (SDN)（如果 USIM 卡支持）。此类号码包括紧急电话、查号台和语音邮件号码。选择服务号码后，按  呼叫服务。

查看本机号码

允许在 USIM 卡中您的电话号码。

电话本

创建名片


您可以通过选择“我的名片”和“添加”来创建自己的名片。输入姓名、号码、电子邮件和图像后，您可以在发送信息时将其用作名片。


信息


信息

KF750 将短信、多媒体信息和电子邮件结合到一个直观易使用的菜单中。

发送信息

- 1 选择信息，然后选择创建新信息。
- 2 选择信息以发送短信或多媒体信息。或者，选择电子邮件以发送电子邮件。有关详细信息，请参阅第 35 页。
- 3 如果选择“信息”，将打开一条新短信。
- 4 选择选项，然后选择插入添加图像、视频、声音或主题。
- 5 按  发送。输入电话号码，或选择电话本以打开联系人列表。您可以添加多个联系人。

 **警告：**您将按每个收件人每条文本信息 160 个字符付费。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

输入文本


有两种方式可输入文本：


T9 预测和 Abc 手动。

要在文本输入法之间切换，在打开空信息时，请长按  键。

T9 预测性文本 - 打开 T9 预测性文本，然后选择 T9 abc、T9 Abc 或 123。

Abc 手动 - 选择 Abc、ABC 或 123。

要在大写、小写和标题之间切换，请按  键。

要删除一个字符，请使用屏幕下方的  硬键。

要输入符号，请选择选项，然后选择插入。

T9 预测

T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。只需点触与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。例如，依次按 8、3、5、3、7、4、6、6、3 输入“telephone”。

01

02

03

04

05

06

07

08

信息

信息文件夹

KF750 中使用的“信息”文件夹结构，完全无需进行说明。

收件箱 - 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详细信息，请参阅以下内容。

电子邮箱 - 所有收到的电子邮件将放置在电子邮箱中。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发送 - 您发送的所有信息将放置在“已发送”文件夹中。

我的文件夹 - 您可以在此文件夹中管理信息。

使用模板

为您最常使用的短信和彩信创建模板。手机中已有一些模板，您可以根据需要进行编辑。

- 1 选择信息，然后选择模板。
- 2 选择文本模板或多媒体模板。然后，您可以选择“选项”新增、编辑、删除或全部删除模板。

使用图释

使用图释，使您的信息更具趣味性。手机中已有一些常用图释。

- 1 选择信息，然后选择图释。
- 2 选择“选项”以新增、编辑、删除或全部删除图释。

 
相机

快速拍照

- 1 按手机右侧的键，此时屏幕上将出现相机取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 轻按拍摄按钮，取景器屏幕的中间会出现一个对焦框。
- 4 使用相机定位，以便在对焦框中看到要拍摄的物品。
- 5 对焦框变绿时，表示相机已对焦。
- 6 完全按下拍摄按钮。


拍照后


拍好的照片将显示在屏幕上。图像名称在屏幕底部显示，屏幕右侧将显示五个图标。

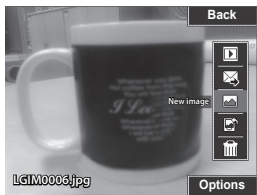



Back 返回上一个菜单。

 查看“相册”中保存的您拍摄的照片。

 通过多媒体信息、电子邮件或蓝牙发送照片。

 立即拍摄其它照片。将保存您的当前照片。

 将图像用作墙纸、联系人图像或开机或关机屏幕。

 删除拍摄的照片，点触是确认。此时将出现取景器。

提示！ 在相机模式下，选择“播放”图标打开相册。

使用闪光灯

闪光灯默认为关闭，此外还有其它选项。

1 选择取景器右上角的  进入闪光灯子菜单。

2 有三个闪光灯选项：

常亮 - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。

拍摄时 - 为了消除红眼，相机将闪光两次。

关闭 - 相机从不使用闪光灯。此选项有助于节省电池电量。

3 选择您要使用的闪光灯选项。

4 选择后，闪光灯菜单将自动关闭，您就可以拍照了。

01

02

03

04

05

06

07

08


相机

5 取景器中的闪光灯图标将根据您设置的闪光灯模式而更改。

备注：无论您何时退出相机，闪光灯设置将自动转为关闭模式。当您重新打开相机时，如果需要使用闪光灯，需要重新打开。

调整亮度

对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 在设置中选择亮度。
- 2 沿滚动条滑动对比度指示器， 对应对比度更低、更模糊的图像，**+** 对应对比度更高、更清晰的图像。

选择拍摄模式

- 1 选择设置打开可用拍摄模式。
- 2 从四个选项中进行选择：
 - 标准拍摄** - 此为默认拍摄模式，照片将以标准方式拍摄。
 - 连拍** - 这允许您快速地连续拍摄九张照片。
 - 相框拍摄** - 从趣味相框中选择一个，将您的朋友化身为海盗或为其点缀环境。
 - 全景** - 此拍摄类型对于拍摄一群人或拍摄全景非常有用。

使用高级设置

从取景器中选择设置，然后打开“其它”选项中的所有高级设置。

大小 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。

场景模式 - 设置相机，使其适应环境。从自动、肖像、风景、夜间、海滩、体育和聚会中选择。

亮度 - 设置相机取景器中图像的对比度。

效果 - 选择色调以应用于拍摄的照片。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、日光、阴天、阴影和荧光灯中选择。

定时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从3秒、5秒或10秒中选择。当您也想在照片中占有一席之地时，此选项很有用！

拍摄模式 - 请参阅第28页。

ISO - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在较黑的光照条件下，当不能使用闪光灯时，这非常有用。从ISO 50、ISO 100、ISO 200、ISO 400

或 ISO 800 中选择 ISO 值。

质量 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。

微距 - 微距模式允许您拍摄特写。如果您要拍摄特写照片而对焦框变为红色，请打开微距模式。

从取景器中选择设置，然后打开预览选项中的所有高级设置。

存储位置 - 选择是将照片保存到手机内存还是外部存储器。

隐藏图标 - 设置是否自动隐藏取景器边缘的图标。

自动对焦 - 选择对焦方式。

声音 - 从三种快门声音中选择一种。

备注：要应用所做的更改，请始终在选择新设置后选择保存。

提示！ 退出相机时，除图像大小和图像质量外，所有设置将恢复回默认设置。您需要对任何所需的非默认设置进行重设，例如，色调和 ISO。拍摄下一张照片之前，请先查看。

提示！ 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。退出之前，请记住选择保存以应用更改。

01

02

03

04

05


06

07

08

摄像机

快速摄像


- 1 将相机模式切换至 。屏幕上将显示摄像机的取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 按拍摄按钮一次，开始录制。
- 4 REC 将显示在取景器的底部。


拍摄视频后


屏幕上将显示所拍摄视频的静态图像。图像名称在屏幕底部显示，屏幕右侧将显示五个图标。

 查看摄像册。

 播放文件。

 再次录制移动图像。

 通过多媒体信息、电子邮件或蓝牙发送视频。

 删除您刚拍摄的视频，按“是”确认删除。此时将出现取景器。

提示！ 选择摄像册图标，打开摄像册。

使用高级设置

从取景器中选择设置，然后打开“其它”选项中的高级设置。

大小 - 更改保存在存储空间中的视频大小。

场景模式 - 设置图像以适应环境。从自动、肖像、风景、夜间、海滩、体育和聚会中选择。

效果 - 选择色调效果以应用于拍摄的照片。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、日光、荧光灯或阴天中选择。

特别录制 - 通过设置不同类型来录制移动图像。

质量 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。请参阅第 45 页的更改图像大小。

时间 - 从三种快门声音中选择一种。从取景器中选择设置，然后打开预览选项中的高级设置。

存储位置 - 选择是将视频保存到手机内存还是外部存储器。

隐藏图标 - 设置相机是否自动隐藏取景器侧面的图标。

语音 - 选择“静音”，录制视频而不录制声音。

备注：要应用所做的更改，请始终在选择新设置后点触“保存”。

提示！ 退出摄像机时，除图像大小和图像质量外，所有设置将恢复回默认设置。您需要对任何所需的非默认设置进行重设，例如，色调和白平衡。拍摄下一段视频之前，请先查看。

01

02

03

04

05


06


07

08

照片和视频

从视频中拍摄图像

- 1 选择您想要从中拍摄图像的视频。
- 2 按  以暂停您想要从中拍摄照片的视频，点触屏幕右侧以打开选项菜单。
- 3 从选项菜单中选择“拍摄”。
- 4 屏幕上将显示图像，以及为其指定的名称。
- 5 选择“确定”。
- 6 选择“返回”返回相册。
- 7 图像将保存在“我的文件”文件夹中，并显示在相册中。您需要退出相册，然后重新打开以显示该图像。

 **警告：**如果手机中没有录制多媒体文件，某些功能可能无法使用。

编辑视频


可对所有视频类型使用编辑功能，640x480 除外。如果您计划对视频进行编辑，请不要使用此格式。

剪辑视频长度

- 1 选择要编辑的视频，然后点触“选项”。
- 2 选择“编辑”，然后选择“剪辑”。
- 3 选择“开始”和“结束”以标记起点和终点。

合并两段视频

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“视频合并”。
- 3 此时将打开“视频”文件夹。选择您要合并的视频，然后选择“选择”。
- 4 选择效果以选择合并视频的方式：无、淡出、缩放、椭圆形、落花流水、遮帘、棋盘或消失。

5 按  保存新合并的视频。选择是保存在源文件中还是另存为新文件。

6 重复这些步骤以合并更多视频。

合并照片和视频


1 选择要编辑的视频，然后选择“选项”。

2 选择“编辑”，然后选择“图像合并”。

3 此时将打开“图片”文件夹。选择您要视频合并的照片，然后选择“选择”。

4 选择并滑动照片，将其与视频的结尾或开头合并。

5 选择效果以选择合并照片和视频的方式：无、淡出、缩放、椭圆形、落花流水、遮帘、棋盘或消失。

6 按 。选择是保存在源文件中还是另存为新文件。

7 重复这些步骤以合并更多照片。

为视频添加文本

1 选择要编辑的视频，然后选择“选项”。

2 选择“编辑”，然后选择“文字叠加”。

3 使用键盘输入文本，然后选择“保存”。

4 选择“开始”，标记文本出现的时间。

5 选择屏幕中您要显示文本的区域。

6 选择“取消”以标记何时使文本消失。

7 选择“保存”以保存。选择是保存在源文件中还是另存为新文件。

8 重复这些步骤以添加更多文本。

01

02

03

04

05

06

07

08

照片和视频

叠加照片

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“图像叠加”。
- 3 此时将打开“图片”文件夹。选择您要叠加在视频上的照片，然后选择“选择”。
- 4 选择“开始”，标记照片出现的时间。
- 5 选择屏幕中您要显示照片的区域。如果照片太大，将叠加在整个屏幕上，而不仅仅是所选区域。
- 6 选择“取消”以标记何时使照片消失。
- 7 选择“保存”以保存。选择是保存在源文件中还是另存为新文件。
- 8 重复这些步骤以叠加更多照片。

多媒体

游戏和应用程序

您可以将游戏和应用程序下载到手机中，在闲暇时为您带来乐趣。

体验 M-Toy 菜单

您可以体验六种默认游戏，包括：Dart、Homerun Derby、Magic Ball、Hammer、Maze、Fishing。

关于 - 查看游戏信息。

设置 - 设置声音和激活游戏时的振动效果。

重设数据 - 重设所有设置。

退出 - 结束游戏。

玩游戏

- 1 选择游戏菜单。
- 2 选择一款游戏，然后点触启动。

Flash 内容

“Flash 内容”文件夹包含所有默认和下载的 Flash 文件。

查看 SWF/SVG 文件时使用选项

在暂停模式下选择选项并从以下选项中选择：

播放/暂停 - 暂停或恢复播放。

全屏/风景视图 - 以全屏或风景视图模式查看 SWF/SVG（仅在非暂停模式下选择选项时可见）。

静音/取消静音 - 打开或关闭声音。

用作墙纸 - 将 SWF/SVG 文件用作墙纸。

文件信息 - 查看文件的名称、大小、日期、时间和类型。

文档

从“文档”菜单中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

将文件传输到手机

蓝牙可能是将文件从计算机传输到手机最简便的方法。您也可以通过同步数据线使用 LG PC 套件，有关详细信息。

使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用计算机发送文件。
- 3 文件发出后，您必须选择确定在您的手机上接受它。
- 4 文件应出现在文档或其它文件夹中。

01

02

03

04

05

06

07

08

多媒体

查看文件

- 1 选择我的文档，然后选择文档。
- 2 选择文档，然后选择查看。

其它

 
其它文件夹用于存储非图片、声音、视频、游戏或应用程序文件。其使用方式与文档文件夹相同。当您将文件从计算机传输到手机时，您可能发现文件保存在其它而不是文档文件夹中。如果这样，您可以移动文件。

将文件从“其它”文件夹移到“文档”文件夹：

- 1 选择我的文件，然后选择其它。
- 2 选择文件，然后选择选项。
- 3 选择移动。

影片编辑器

影片编辑器允许您创建与音乐相结合的图像幻灯片。

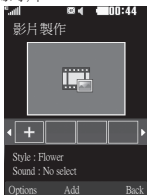

创建电影

- 1 转到“娱乐”，然后选择影片编辑器。
- 2 选择 **+** 以添加图像。选择要包括的图像，然后选择选项中的完成。
- 3 选择样式菜单以选择一种电影样式。
- 4 选择播放观看您创建的内容。

音乐

LG KF750 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请从主菜单中选择音乐。您可以在此访问多个文件夹：

最近播放 - 查看您最近播放的所有歌曲。

我的音乐 - 所有音乐：

所有曲目 - 包含手机中的所有歌曲。

艺术家 - 按艺术家浏览音乐集合。




专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

播放列表 - 包含您创建的任何播放列表。

随机曲目 - 以随机顺序聆听音乐。

播放歌曲

- 1 选择我的音乐，然后选择所有曲目。
- 2 选择您要播放的歌曲，然后选择播放。
- 3 按  暂停歌曲。
- 4 点触  (右) 跳到下一首歌曲。
- 5 点触  (左) 跳到上一首歌曲。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。要执行此操作，您可以编辑播放列表。

- 1 选择我的音乐，然后选择播放列表。
- 2 选择播放列表。
- 3 选择选项，然后选择：

新增歌曲 - 将更多歌曲添加到播放列表。标记所需的歌曲，然后选择完成。

上移/下移 - 在列表中上移或下移歌曲，以更改播放顺序。

发送 - 以信息形式或通过蓝牙发送歌曲。

从列表中删除 - 将歌曲从播放列表中删除。选择是确认。

标记/去除标记 - 选择多个文件。

用作 - 您可以将歌曲设为效果音。

使用收音机

LG KF750 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将其插入您用来插入充电器的同一个插槽。

01

02

03

04

05

06

07

08

多媒体

搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 50 个频道。



自动微调：

- 1 从音乐中选择 FM 收音机，然后选择选项。
- 2 选择自动扫描，然后选择是。手机将自动为找到的电台分配一个频道编号。

提示！ 您可以使用触摸屏访问音乐。按手机右侧的相机键，然后选择收音机或音乐图标。随后，您可以通过点触屏幕滚动并选择音乐文件或收音机功能。

手动微调：

- 1 选择 FM 收音机，然后选择选项。
- 2 选择频道列表，然后选择要保存电台的频道编号。
- 3 输入电台频率，然后点触选择以保存。

备注：您也可以使用电台频率旁显示的  (左) 和  (右) 手动微调电台。

使用录音机

使用录音机录制语音备忘录或其它声音。

- 1 选择多媒体。
- 2 选择录音机，然后选择选项并从以下内容选择：

时长 - 设置录音时长。

从“彩信大小”、“30 秒”、“1 分钟”或“无限制”中选择。

质量 - 选择声音质量。

从“超精细”、“精细”或“标准”中选择。


存储位置 - 查看每个存储器的当前状态。

转到我的声音 - 在我的声音中打开“录音”文件夹。

- 3 选择 Rec. 开始录音。
- 4 选择停止可以结束录音。
- 5 选择选项中的播放收听录音。


管理器

将事件添加到日程表中



- 1 从待机屏幕中，按 ，然后选择管理器。选择日程表。
- 2 选择您要添加事件的日期。
- 3 选择选项，然后选择新增事件。
- 4 选择是要添加约会、周年纪念还是生日，然后选择完成。
- 5 查看日期并输入事件开始的时间。
- 6 对于约会和周年纪念，请在下面的“时间”和“日期”框中输入事件结束的时间和日期。
- 7 如果要为事件添加主题或备注，请点触主题或名称，然后键入备注。
- 8 选择完成，您的事件将保存在日程表中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

提示！ 您可以在日历中设置假期。一次性选择您的假期所在日期，选择选项，然后选择设置假期。假期中的每一天都将变为红色。设置闹钟时，您可以将设为假期的日期排除在外。

向任务列表添加项目

- 1 从待机屏幕中，按 ，然后选择管理器。
- 2 选择任务，然后选择添加。
- 3 为任务项设置日期、添加备注或选择优先级：高、中或低。
- 4 选择完成以保存任务列表项。

设置闹钟

- 1 从待机屏幕中，按 ，然后选择“工具”-“闹钟”。
- 2 选择“选项”，然后点触“新增”。
- 3 设置您希望闹钟响起的时间。
- 4 选择您希望闹钟响起的方式：一次、每天、星期一至星期五、星期一至星期六、星期六至星期天或节假日除外。
- 5 选择  和“编辑”以选择闹钟铃声。要聆听声音，请选择声音，然后点触“播放”。
- 6 为闹钟添加备忘录，结束内容键入后，请选择“完成”。闹钟响起时，会显示备忘录。
- 7 最后，您可以设置暂停间隔：5、10、20、30 分钟、1 小时或关。

01

02

03

04

05

06

07


08

管理器


8 设置闹钟后，请选择“完成”。

备注：您最多可以设置 5 个闹钟。


使用计算器

- 1 从待机屏幕中，按 ，然后选择“工具”。
- 2 选择数字键输入数字。
- 3 对于简单计算，选择您所需的函数 (+, -, x, /)，然后选择 =。
- 4 对于较复杂的计算，请点选**选项**，然后从 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 中选择。


使用秒表

- 1 从待机屏幕中，按 ，然后选择“管理器”-“工具”。选择“秒表”。
- 2 选择“开始”启动计时器。
- 3 选择“停止”停止计时器。
- 4 选择“记录”测量每一圈的时间。
- 5 要重启秒表，请选择“恢复”。
- 6 选择“重置”归零。

换算单位

- 1 从待机屏幕中，按 ，然后选择“管理器”和“工具”。选择换算器。
- 2 选择要换算的内容：币种、面积、长度、重量、温度、体积或速率。
- 3 现在，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 4 屏幕上将显示相应的值。

向世界时间添加城市


- 1 从待机屏幕中，按 ，然后选择“管理器”和“工具”。选择世界时间。
- 2 选择选项，然后选择添加城市。开始键入所需城市的名称时，屏幕顶部即显示该城市。或者，选择地图，然后从地图中选择所需城市。
- 3 按选择以确认选择。

提示！ 如果出国，您可以通过选择更改，然后选择更改当前城市来更改世界时间的时区。如上所述选择所需城市，然后点触选择。

浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。


访问网页

- 1 从待机屏幕中按 ，选择浏览器。
- 2 要直接访问浏览器主页，请选择浏览器。或者，选择输入地址并键入所需的 URL，然后选择打开。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕中按 ，选择激活主页。
- 2 选择书签。此时屏幕上将出现一个书签列表。
- 3 要创建新文件夹，请选择选项，然后选择新建文件夹。输入书签文件夹的名称。
- 4 要添加一个新的书签，请选择选项并点触新增。输入书签名称和 URL。

- 5 选择完成。现在，您添加的书签将显示在书签列表中。
- 6 要访问书签，仅需滚动到书签，然后选择打开即可。

使用 RSS 阅读器

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。

RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

01

02

03

04

05

06

07

08

浏览器


添加订阅源

您可以直接输入订阅源：浏览器 → RSS 阅读器 → 选项 → 新增，或者，您可以选择网页中的 RSS 图标以单击订阅源链接。

更新 RSS 阅读器

- 1 您可以选择更新或全部更新选项。
- 2 如果您要自动更新，请选择更新日程表。

更改网络浏览器设置

- 1 从待机屏幕中按 ，选择浏览器。选择浏览器设置。
- 2 您可以选择编辑网路设定、外观设置、缓存、Cookie、安全性或重设设置。
- 3 更改设置后，请点触选择。

网络

使用蓝牙

- 1 确保已打开蓝牙并在电脑和 KF750 上均可见。
- 2 配对电脑和 KF750，以便需要通行码才能建立连接。
- 3 使用 LG PC 套件上的连接向导创建一个活动的蓝牙连接。
- 4 单击电脑上的通信。然后，单击设置。
- 5 单击调制解调器。
- 6 选择 Standard Modem over Bluetooth link，然后单击确定。此时将在屏幕上打开。
- 7 单击连接，您的电脑将与 KF750 之间建立连接。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择“选项”，然后选择发送。选择蓝牙。
- 3 点触是以打开蓝牙。
- 4 KF750 将自动搜索范围内其它启用了蓝牙的设备。

- 5 选择您要向其发送文件的设备，然后选择选择以发送文件。
- 6 您的文件将被发送。

提示！ 注意进度栏，确保文件已发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为开且可见。有关详细信息，请参阅下面的更改蓝牙设置。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择是以接收文件。
- 3 您可以查看文件的保存位置，可以选择查看文件或用作墙纸。文件通常保存在“我的文件”中的相关文件夹。

01

02

03

04

05


06

07

08

网络

更改蓝牙设置：

- 1 在待机屏幕中按 ，然后选择连接。
- 2 依次选择蓝牙和设置。
进行更改：
我的设备可见性 - 选择“可见”、“可见 1 分钟”或“隐藏”。
我的设备名称 - 为您的 KF750 输入一个名称。
支持的服务 - 搜索 KF750 支持的配置文件。
我的地址 - 搜索蓝牙设备地址。

的通行码。

- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为开且可见。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 选择是以立即连接。KF750 将自动切换到“耳机”情景模式。

与其它蓝牙设备配对


要将您的 KF750 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为开且可见。您可以在设置菜单中更改可见性。
- 2 依次选择配对设备和新建。
- 3 KF750 将搜索设备。搜索完全刷新时，屏幕上将显示添加。
- 4 选择您要与之配对的设备，输入通行码，然后按添加。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同

设置

使用此文件夹，您可以调整设置以使 KF750 更具个性化。

更改屏幕设置

- 1 从待机屏幕中按 ，选择设置。
- 2 选择显示设置，然后从以下选项中选择：

屏幕主题 - 为待机屏幕或拨出电话选择主题。

菜单样式 - 选择用于显示菜单的样式。

拨号 - 设置拨号显示。

字体 - 调整字体颜色。

背景灯 - 选择背景灯持续时间。

备注：背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

手机方案 - 快速更改屏幕整体外观。


问候语信息 - 输入打开时的问候语信息。

- 3 选择选择以保存设置。

个性化情景模式

您可以在待机屏幕上快速更改情景模式。轻触屏幕右上角的当前情景模式图标。

使用设置菜单，您可以个性化每个情景模式设置。

- 1 在待机屏幕中按 。
- 2 选择情景模式，然后选择您要编辑的情景模式。您不能编辑静音情景模式。
- 3 选择选项，然后选择编辑。
- 4 随后，您可以更改列表中可用的所有声音和提示选项，包括铃声和音量、信息提示、屏幕声音设置等。

01

02

03

04

05

06

07


08

设置

更改手机设置

您可以自由调整 KF750 的设置，使其满足您的需要。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 在待机屏幕中按 。
- 2 选择手机设置，然后从下表中选择。

自动键盘锁 - 在待机屏幕和设置的时间下自动锁定键盘。

触式键盘振动 - 打开或关闭触式键盘振动。

触摸屏效果 - 设置触摸屏时的效果音。

语言 - 更改 KF750 的显示语言。

省电 - 选择打开或关闭省电设置。

信息 - 查看 KF750 的技术信息。

使用日期和时间

日期和时间 - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

更改其它设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

网络 - KF750 将自动连接到首选网络。要更改这些设置，请使用此菜单。

互联网网络设定 - 设置连接到互联网的网络设定。

存取点 - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

分组数据连接 - 设置分组数据连接。

更改安全性设置

需要 PIN 码 - 将手机设置为开机时需要请求 SIM 卡的 PIN 码。

手机锁 - 设置手机锁以避免未经授权的使用。您需要一个安全码。

更改密码 - 更改密码：PIN/PIN2/安全码。

使用内存管理器

KF750 有三种可用存储器：手机、USIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

在待机屏幕中按 。选择设置，然后选择内存管理器。

手机公用内存 - 查看 KF750 中针对以下各项的可用内存：图像、声音、视频、Flash、彩信、电子邮件、Java 应用程序、其它。



手机剩余内存 - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

USIM 卡内存 - 查看 USIM 卡的可用内存。

外部存储器 - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

主存储设置 - 选择“手机内存”或“外部存储器”。

使用飞行模式

在待机屏幕中按  打开飞行模式，然后选择“设置”-“情景模式”。选择“飞行模式”，然后按  激活。

飞行模式下，您不能拨打电话、连接到互联网、发送信息或使用蓝牙。

01

02

03

04

05

06

07

08

配件

这些配件随 KF750 提供。

充电器



数据线和 CD

在 KF750 和电脑间建立连接并同步。



电池



用户指南

了解更多关于 KF750 的信息。



立体声耳机



备注：

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800、PCS1900 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称：KF750

系统：GSM 900 / DCS 1800 / PCS 1900 / W-CDMA

外部环境

最高温度：+55°C（放电）、+45°C（充电）

最低温度：-10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative