



简体中文
ENGLISH



用户手册

LG-P698



CE 0168 Ⓢ

P/N : MFL67445507 (1.0)

www.lg.com



简体中文

LG-P698 用户手册

本手册有助于您开始使用您的新手机。

如果需要更多信息，请访问 www.lg.com。

- 此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同，这并不会另行通知。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2011 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Maps™、Gmail™、YouTube™、Talk™ 和 Android Market™ 是 Google, Inc. 的商标。



目录

关于安全有效使用手机的准则.....	5	Google 帐户设置.....	31
创建 Google 帐户		创建 Google 帐户	31
登录 Google 帐户		登录 Google 帐户	31
重要注意事项.....	11	通话.....	33
开始了解您的手机.....	19	拨打电话	33
安装 SIM 卡和电池 ...	21	呼叫联系人	33
充电	22	接听和拒绝电话	33
安装存储卡	22	调节音量	33
格式化存储卡	23	拨打第二个电话	34
主屏.....	24	查看通话记录	34
触摸屏提示	24	通话设置	34
锁定手机	24	联系人.....	35
解锁屏幕	25	搜索联系人	35
静音模式	25	添加新联系人	35
主屏	25	收藏夹联系人	35
将小工具添加到主屏 ..	26	信息/电子邮件.....	36
返回到最近使用的应用程序	26	信息	36
使用 SIM 双卡	27	发送信息	36
通知抽屉	27	线程框	37
查看状态栏	28	使用笑脸	37
屏上键盘	30	更改信息设置	37
输入带注音的字母	30	打开电子邮件和帐户屏 幕	37

打开电子邮件应用程序	37	观看保存的视频	49
帐户屏幕	38	观看视频时调节音量	49
要打开您合并的收件箱	38	多媒体	50
撰写和发送电子邮件	39	视图模式	50
使用帐户文件夹	40	时间线视图	50
添加或编辑电子邮件帐户	40	使用 SmartShare	50
社交网络	41	音乐	51
社交网络	41	播放歌曲	51
将您的帐户添加到手机	41	使用 USB 大容量存储设备	52
查看和更新状态	42	传输文件	52
删除手机上的帐户	42	如何将音乐/视频文件保存到手机	52
照相机	43	将旧手机上的电话本移至新手机	53
了解取景器	43	使用蓝牙从手机发送数据	54
快速拍照	44	使用收音机	54
拍照后	44	搜索电台	55
使用高级设置	45	重置频道	55
查看保存的照片	46	收听收音机	55
摄像机	47	实用工具	56
了解取景器	47	设置闹钟	56
快速摄像	48	使用计算器	56
拍摄视频后	48	将事件添加到日历中	56
使用高级设置	49		

目录

更改日历视图	57	关于手机	69
Polaris Viewer	57	Wi-Fi	69
录音机	57	打开 Wi-Fi	69
录制声音或语音	58	连接到 Wi-Fi	69
发送录音	58	共享您手机数据连接 ..	70
网络.....	59	USB 绑定和便携式 Wi-Fi	
浏览器	59	热点设置	70
使用 Web 工具栏	59	通过 USB 共享您手机的数	
使用选项	59	据连接	71
设置.....	61	USB 绑定和数据共享 ..	71
双模设置	61	将手机的数据连接共享为	
无线和网络	61	便携式 Wi-Fi 热点 ...	72
通话设置	63	重命名或确保您的便携式	
声音	64	热点安全	72
显示屏	65	软件更新.....	74
位置和安全	65	手机软件更新	74
应用程序	66	DivX 移动	74
帐户与同步	66	配件.....	76
隐私权	66	技术参数.....	77
存储卡和手机内存	67	故障排除.....	78
语言和键盘	67		
语音输入与输出	67		
辅助功能	68		
日期和时间	68		

关于安全有效使用手机的准则

请阅读以下简单的准则。
违反这些准则可能造成危险
或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。此款 LG-P698 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。

- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2 W/Kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.26 W/kg (10 克)，戴在身体上时，其值为 1.15 W/kg (10 克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照

关于安全有效使用手机的准则

以上间隔距离说明直到完成发送。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其他类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 不要摔跌手机。
- 不要让手机受到机械振动或撞击。
- 在任何有特定条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会

影响磁条上的信息。

- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 作为电子设备，您的手机在正常操作下会发热。空气不流通情况下，长时间与皮肤直接接触可能会导致不适或轻微灼伤。因此，在手机使用中或刚使用完后，请小心接触。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。

关于安全有效使用手机的准则

- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

备注：耳机声音压力过大可能导致听力受损。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其他电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。

关于安全有效使用手机的准则

- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。 如果可能，请循环使用电池。 不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

重要注意事项

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

当手机内存的可用空间小于10%时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

管理应用程序

- 1 在主屏中，点触**应用程序**选项卡，然后选择**设置** > **应用程序** > **管理应用程序**。
- 2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。

- 3 轻触**卸载**，然后点触**确定**可卸载所选应用程序。

2. 优化电池使用寿命

通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您可以监视应用程序和系统资源如何消耗电池电量。

延长电池的使用寿命

- 如果您未使用无线电通信，请关闭它。如果不使用 Wi-Fi、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。
- 关闭 Gmail™、日历、联系人及其他应用程序的自动同步功能。
- 您下载的一些应用程序可能会缩短电池的使用寿命。

重要注意事项

检查电池电量水平

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **关于手机** > **状态** > **常用**。
- 2 电池状态（正在充电、未在充电）和电量（充电百分比）显示在屏幕顶部。

监视并控制使用电池的项目

- 1 在主屏中，点触**应用程序**选项卡，然后选择**设置** > **关于手机** > **电量使用情况**。
- 2 电池使用时间显示在屏幕顶部。它告诉您自上次连接到电源以来的时间，或者连接到电源后在电池电源上运行的时间。屏幕上列出了使用电池电源的应用程序或服务，从最大量到最小量。

3. 安装开源操作系统

如果在手机上安装开源操作系统 (OS)，而不使用制造商提供的操作系统，则手机可能无法正常工作。

警告

如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。

警告

为了保护您的手机和个人数据，请只从信任的来源（如 Android Market™）下载应用程序。如果手机上存在未正确安装的应用程序，您的手机可能无法正常工作，甚至可能发生严重错误。您必须从手机中卸载那些应用程序及其所有数据和设置。

4. 使用解锁图样

设置保护手机的解锁图样。在主屏上点触并选择**设置** > **位置和安全** > **设置屏幕锁定** > **图案**。按照屏上指南指示，绘制屏幕解锁图样。选择“继续”进入下一个屏幕。打开一组屏幕，它们可指导您绘制屏幕解锁图样。

注意：先创建 Gmail 帐户，再设置解锁图样。



警告

使用图样锁定时的预防措施。

请务必记住您设置的解锁图样。如果有 5 次使用不正确的图样，您将无法访问您的手机。您有 5 次机会输入解锁图样、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

在无法调解锁图案、PIN 码或密码时：

如果忘记图案：如果您在手机上登录 Google 帐户并尝试输入正确图样 5 次均失败，请轻触忘记图案按钮。随后，您需要使用 Google 帐户登录才能将手机解锁。如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行硬重置。

如果忘记了 PIN 码或密码：如果您忘记了 PIN 码或密码，则需要执行硬重置。

5. 使用硬重置

如果未恢复到原始条件，请使用硬重置初始化手机。

当手机关机时，同时按住**主屏键** + **音量调低键** + **电源键** 10 秒钟以上。当屏幕显示 LG 徽标时，释放**电源键**。

重要注意事项

几秒钟后，手机将显示 Android 系统恢复屏幕，并提供是/否选项。

当屏幕显示以上选项时，请释放其它按键。

要在选项间导航，我们可以使用音量调高/调低按钮。按音量调低键导航到“是”选项，然后按电源键确认。

执行硬重置时请至少在 1 分钟内不要执行任何操作，随后，手机会开机。

注意：如果执行硬重置，所有用户应用程序和用户数据都将被删除。此操作无法撤消。在执行硬重置之前，记得备份任何重要数据。

6. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或使用安

全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

打开 Wi-Fi 并连接 Wi-Fi 网络

- 1 在主屏中，点触**应用程序**选项卡，然后选择**设置 > 无线和网络 > WLAN 设置**。
- 2 点触 **WLAN** 将其打开，开始扫描可用的 Wi-Fi 网络。
 - 将显示可用的 Wi-Fi 网络列表。锁图标表示受到安全保护的网路。
- 3 点触某个网络进行连接。
 - 如果网络已打开，系统会要求您点触**连接**确认连接到该网络。
 - 如果网络安全，系统会要求您输入密码或其他凭据。（请咨询网络管理员获取详细信息）

4 状态栏显示了可指明 Wi-Fi 状态的图标。

7. 使用 microSD 卡

图片以及音乐和视频文件只能保存到外部存储器。

使用内置相机之前，您需要先将 microSD 卡插入手机中。

未插入存储卡则无法拍照或拍摄视频。



警告

请勿在手机开机时插入或取出存储卡。这样做可能会损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。要安全取出存储卡，请在主屏中点触**应用程序**选项卡，然后选择**设置 > 存储卡和手机内存 > 卸载SD卡**。

8. 打开和切换应用程序

多任务可在 Android 中轻松实现，因为您可同时运行多个应用程序。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

停止应用程序

- 1 在主屏中，点触**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序**。
- 2 滚动到所需应用程序，然后点触**强制停止**以停止该应用程序。

提示 返回到最近的应用程序
按住主屏键。屏幕将显示您最近使用的应用程序列表。

重要注意事项

9. 在 PC 上安装 LG PC 套件

要通过 USB 数据线同步手机与 PC，您需要在 PC 上安装 LG PC 套件程序。

您可以从 LG 网站(<http://www.lg.com>) 下载您的手机安装程式和使用资讯。您可参考往下图示和依据网站指示以下载适合您手机型号的软件并完成安装。

LG PC Suite IV 的主要功能

- 轻松创建、编辑和删除手机数据
- 从 PC 或手机同步数据（联系人、日历、信息（短信）、书签和通话记录）
- 通过简单的拖放操作在 PC 和手机之间轻松地传输多媒体文件（照片、视频和音乐）
- 将短信从手机传输到 PC

- 软件更新而不丢失任何数据

10. 使用 USB 将手机连接到计算机

注意：同步您的手机与您的PC使用USB电缆，您需要安装LG PC到你的PC套件。下载从LG网站方案（www.lg.com）。到 www.lg.com，并选择您所在的地区，国家和语言。欲了解更多信息，请访问各个页面该网站。由于PC套件microSD卡，你可以简单地将它复制到你的电脑。

LG-P698 不支持：

- LG Air Sync (Web Sync、右键单击)
- OSP (On Screen Phone)
- 日历中的待办事项
- 备忘录
- Java 应用程序

安装 PC Suite IV 后，您可以在“帮助”菜单中找到用户手册。

- 1 使用 USB 数据线将手机连接到计算机上的 USB 端口。连接后，您将收到已建立 USB 连接的通知。
- 2 打开通知抽屉，并点触 USB 已连接。
- 3 点触**打开 USB 存储设备**以确认要在手机的 microSD 卡和计算机之间传输文件。

当手机作为 USB 存储设备进行连接时，您会收到通知。您手机的 microSD 卡已作为计算机的驱动器安装。现在，您可以将文件复制到 microSD 卡，也可以从 microSD 卡中复制文件。

备注：卸载 PC Suite IV 时，不会自动删除 USB 和蓝牙驱动程序。您必须手动卸载它们。

提示 要再次在手机上使用 microSD 卡，您需要打开通知抽屉，然后点触**关闭 USB 存储设备**。

在此期间，无法从手机访问 microSD 卡，因此也不能使用依赖 microSD 卡的应用程序（如相机、图片库和音乐）。

要断开手机与计算机的连接，请仔细按照计算机的说明正确地断开 USB 设备的连接，从而避免丢失卡上的信息。

- 1 打开通知抽屉，并点触**关闭 USB 存储设备**。
- 2 安全地断开电脑上的 USB 设备。

11. 使用数据连接时解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。要打开 LCD 屏幕，点触即可。

重要注意事项

12. 向上持握手机

请将手机向普通电话一样向上持握。LG-P698 具有内置天线。请注意不要刮伤或损坏手机背面，否则会导致性能损失。

拨打/接听电话或发送/接收数据时，避免持握天线所处的手机下部。这样做可能会影响通话质量。

13. 屏幕冻结时

如果屏幕冻结或您尝试操作时手机无响应：

卸下电池，将它重新插入，然后打开手机。如果这仍不起作用，请联系服务中心。

14. 不要在 PC 开机/关机时连接手机。

确保断开手机和 PC 之间的数据线；保持连接可能会导致 PC 出错。

开始了解您的手机

要将手机开机，请按住电源键 3 秒。

要将手机关闭，请按住电源键 3 秒，然后依次点触**关机**和**确定**。

扬声器

近程传感器

返回键 

 
返回上一个屏幕。

主屏键 

从任何屏幕返回主屏。

菜单键 

检查可用的选项。

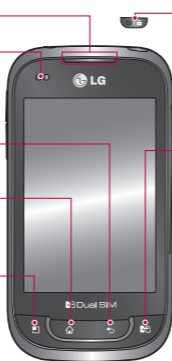

电源/锁定键

按住此键可开/关机。

关闭并锁定屏幕。

SIM 卡切换键 

- 按键选择 SIM1/SIM2 卡（选中的 SIM 卡以带方框的 RSSI 图标记）。
- 按住按键转到 SIM 双卡设置。

备注：近程传感器

接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此传感器将自动关闭背景灯并锁定轻触式键盘。这样有助于延长电池寿命，并避免键盘在通话期间无意激活。

警告

在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 的进程传感器上使用保护膜。这可能会影响传感器的感应度。

开始了解您的手机

音量键

- 在主屏中：控制铃声音量。
- 在通话过程中：控制听筒音量。
- 播放曲目时：连续控制音量。

充电器，Micro USB 数据线接口

立体声耳机连接器

电源/锁定键

后盖

电池

麦克风

相机镜头

microSD 存储 卡插槽

SIM2 卡插槽

SIM1 卡插槽

内置天线



安装 SIM 卡和电池

- 1 要卸下后盖，请用手抓紧手机。用另一只手的拇指用力按后盖。然后，卸下后盖。



- 2 将 SIM 卡滑进 SIM 卡插槽中。确保卡的金色接触区域面朝下。



- 3 对齐手机和电池上的金色接触区域以插入电池。




开始了解您的手机

4 盖上手机的后盖。



充电

滑开侧面的充电器连接器盖。插入充电器，然后插入电流插座。必须为 LG-P698 充电，直至看到 。



 
备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

安装存储卡


要存储更多媒体文件（如使用内置相机拍摄的图像），您必须将存储卡插入手机中。

插入存储卡：

1 卸下后盖。

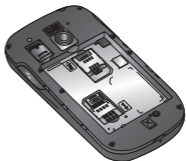

2 打开插槽保护，并将存储卡插入到插槽中。确保金色接触区域面朝下。

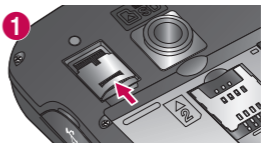 



3 关闭插槽保护。



警告

请勿在手机开机时插入或取出存储卡。这样做可能会损坏存储卡以及手机，并且存储卡上存储的数据也可能损坏。

格式化存储卡

如果已格式化存储卡，您可以开始使用。如果没有，您必须先对其进行格式化才能使用。

备注：格式化卡时，卡上的所有文件将被删除。

- 1 在主屏中，点触**应用程序**选项卡以打开应用程序菜单。
- 2 滚动并点触**设置** > **存储卡**和**手机内存**。
- 3 点触**卸载SD卡**。
- 4 点触**格式化 SD 卡**，然后确认选择。
- 5 如果设置了图样锁定，请输入图样锁定，然后选择**清除所有内容**。存储卡完成格式化，现在，您可以使用了。

备注：如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

主屏

触摸屏提示

以下是关于如何浏览手机的一些提示。

点触 - 要选择菜单/选项或打开应用程序，请点触它。

点触并按住 - 要打开选项菜单或选中要移动的对象，请点触并按住它。

拖动 - 要滚动浏览列表或慢慢移动，请在触摸屏上拖动。

轻弹 - 要滚动浏览列表或快速移动，请在触摸屏上轻弹（快速拖动然后释放）。

备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。

- 使用指尖点触所需选项。请注意不要触碰到其他键。

锁定手机

不使用 LG-P698 时，按电源键可锁定手机。这有助于防止意外按键和节省电池电量。

此外，如果一段时间不使用手机，主屏或者您正在查看的其他屏幕将替换为锁定屏幕以节省电池电量。

如果在您设置图样时有任何程序在运行，则它们仍可在锁定模式中运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，打电话、Web 访问和数据通信）。

设置解锁图样：您可以通过连接的点来绘制自己的解锁图案。如果设置了图样，则手机的屏幕被锁定。要将

手机解锁，请在屏幕上绘制您设置的图样。

注意：设置解锁图样时，需要先创建 Gmail 帐户。

注意：如果一行中有不止 5 个图样绘制错误，则无法将手机解锁。在此情况下，请参考“重要注意事项”下的第 4 点。

解锁屏幕

LG-P698 未使用时，将返回锁定屏幕。从下到上移动手指以解除屏幕锁定。



静音模式


从通知抽屉中，点触  以使其变为 .

主屏


向左或向右轻轻滑动手指以查看面板。您可以使用小工具、快捷方式（用于您喜爱的应用程序）、文件夹和墙纸自定义每个面板。


备注：一些屏幕图像可能因手机提供商而不同。

在主屏中，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。

 点触**手机**图标可打开触摸屏拨号键盘，以拨打电话。

 点触**联系人**图标可打开电话本。

 点触**信息**图标可访问信息菜单。您可以在此处创建新信息。

 点触屏幕底部的**应用程序**选项卡。然后，您可以查看安装的所有应用程序。

主屏

要打开所需应用程序，从应用程序列表中点触相应图标即可。


备注：根据手机软件或服务提供商的不同，预加载的应用程序将有所不同。

将小工具添加到主屏

您可以通过将快捷方式、小工具或文件夹添加到主屏来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的小工具。

- 1 在主屏中，按**菜单**键，选择**添加**。或点触并按住主屏的空白部分。
- 2 在**编辑模式**菜单上，点出您要添加的项目类型。
- 3 例如，从列表中选择**文件夹**并轻触它。
- 4 接着，您将在主屏上看到新文件夹的图标。将其拖动到所需面板的所需位置，然后在屏幕上松开手指。

提示 要将应用程序图标添加到主屏，请在**应用程序**菜单上点触并按住要添加到主屏的应用程序。

提示 要从主屏上删除应用程序图标，请点触并按住要删除的图标，然后将其拖到 。

备注：您无法删除预加载的应用程序。（只可以从屏幕上删除其图标）

返回到最近使用的应用程序

- 1 点触并按住**主屏**键。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或者，点触**返回**键以返回到当前应用程序。

使用 SIM 双卡

当两张 SIM 卡插入您的手机，SIM 卡信息会显示在您的通知抽屉上。按 SIM 卡切换键来切换目前激活的 SIM 卡。

备注：

- 如果只有一张 SIM 卡插入或关闭一张 SIM 卡，SIM 卡切换则不可用，并且 SIM 卡切换键不可使用。
- 在拨打电话，发送信息或使用数据服务的过程中，其他 SIM 卡的 RSSI 可能会显示为‘无服务’，视网络服务状态而定。

警告

如果您不在服务区域，您的设备可能会消耗更多电池电量。

通知抽屉

通知抽屉在屏幕顶部运行。



请使用手指点触并滑动通知抽屉。

或者，在主屏中按**菜单键**，然后选择**通知**。您可以在此处检查和管理声音、Wi-Fi、蓝牙和 GPS 以及其他通知。

主屏

查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。



[状态栏]

图标	描述
	无 SIM 卡
	无信号
	飞行模式
	已连接到 Wi-Fi 网络
	有线耳机
	正在通话
	呼叫保持

图标	描述
	扬声器
	手机麦克风静音
	未接来电
	蓝牙开启
	已连接到蓝牙设备
	系统警告
	已设置闹钟
	新语音邮件
	铃声静音
	振动模式
	电池已充满电
	电池正在充电
	数据传进和传出/默认数据网络

图标	描述
	手机已通过 USB 数据线 与 PC 连接
	正在下载数据
	正在上载数据
	GPS 正在采集
	正在从 GPS 接收位置数据
	还有 3 个通知未显示
	数据正在同步
	下载完成
	新 Gmail
	新 Talk 信息
	新信息
	正在播放歌曲


图标	描述
	近期事件
	在后台打开 FM 收音机
	SmartShare 开
	SmartShare 共享请求
	USB 绑定已激活
	便携式 WLAN 热点已激活
	USB 绑定和便携式热点均已激活



主屏


屏上键盘

您可以使用屏上键盘输入文本。屏上键盘在您需要输入文本时自动在屏幕上显示。要手动显示键盘，只需点触要输入文本的文本字段。


使用键盘并输入文本

 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

  轻触以切换为数字和符号键盘。您也可以点触并按住此选项卡以查看“设置”菜单。

 轻触以查看，或按住以更改编写语言。

 轻触以输入空格。

 轻触以在信息字段新建一行。

 轻触以删除上一字符。

 轻触以隐藏屏上键盘。

输入带注音的字母

当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“á”）。

例如，要输入“á”，请点触并按住“a”键，直到放大键变大并显示其他语言的字符。然后，选择所需特殊字符。

Google 帐户设置

首次在手机上打开 Google 应用程序时，您需要使用现有 Google 帐户登录。如果您没有 Google 帐户，则系统会要求您创建一个。

创建 Google 帐户

- 1 在主屏中，点触**应用程序**选项卡  以打开应用程序菜单。
- 2 轻触 **Gmail**，然后轻触 **下一步 > 创建**，以启动 Gmail™ 设置向导。
- 3 输入您的姓名和您 Google 帐户的用户名。
- 4 轻触**下一步**。您的手机现在正与 Google 服务器通信，正在检查用户名可用性。
- 5 输入并重新输入您的密码。按照说明输入有关帐户的必需和可选信息。服务器正在创建您的帐户，请稍候。

登录 Google 帐户

- 1 输入您的电子邮件地址和密码，然后轻触**登录**。系统正在登录，请稍候。
- 2 登录后，您可在手机上使用 Gmail™ 收发邮件和利用 Google 服务。
- 3 一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。（具体取决于您的同步设置）登录后，您可在手机上其他 Google 服务。

Google 帐户设置

重要!

 
- 诸如日历等一些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的电话本、Gmail 信息、日历事件和来自网络上这些应用程序和服务的其他信息将与您的手机同步。如果在安装期间未登录 Google 帐户，则在首次启动需要 Google 帐户的应用程序（如 Gmail 或 Android Market™）时会要求您登录或创建一个 Google 帐户。

- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

通话


拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘输入号码。要删除一个数字，请点触**清除**按钮 。
- 3 点触**呼叫**图标  以拨打电话。
- 4 要结束通话，请点触**结束**图标 。

提示 要输入“+”以拨打国际电话，请点触并按住 。


提示 如果插入了两张 SIM 卡且同时激活，则可在拨号屏幕使用 SIM 卡切换键选择 SIM1/SIM2。

呼叫联系人

- 1 点触  可以打开电话本。
- 2 滚动浏览联系人列表，或点触**搜索**输入您要呼叫的联系人的首字母。

- 3 在列表中，点触您要呼叫的联系人。

接听和拒绝电话

当手机响铃时，点触**接听**图标 。

点触**拒绝**图标  以拒接来电。

如果要发送**借口信息**，请从底部拖动借口信息栏。

提示 提示借口消息当你想拒绝通话中，您可以发送消息快速动人的借口屏幕上的味精。这是有用的，如果你需要答复在一个会议的消息

调节音量

要在通话期间调节通话音量，请使用手机左侧的音量调高和调低键。


通话

拨打第二个电话

- 1 在第一个通话过程中，点触  菜单键并选择 。
- 2 拨号或在电话本中搜索。
- 3 点触**呼叫**图标  以连接通话。
- 4 此时呼叫屏幕上显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 点触显示的数字可在不同的通话间切换。或点触  **合并通话**进行多方通话。
- 6 要结束当前通话，请点触结束，或者按主屏键，向下滑动通知栏，然后选择结束通话。

备注：您需要对每通电话付费。

查看通话记录

在主屏上，点触  并选择**通话记录**选项卡。

查看所有已拨电话、已接来电和未接语音电话的完整列表。

提示 点触任意通话记录条目，以查看通话日期、时间和时长。

提示 按**菜单**键，然后点触**全部删除**以删除所有记录条目。

通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。


- 1 在主屏中，点触**应用程序**选项卡以打开应用程序菜单。
- 2 滚动并点触**设置**。
- 3 轻触**通话设置**，然后选择要调整的选项。

联系人

在手机上添加联系人，并将其与 Google 帐户或其他支持联系人同步的帐户中的联系人同步。

搜索联系人

在主屏中

- 1 点触  可以打开电话本。
- 2 点触**搜索**，使用键盘输入联系人姓名。

添加新联系人

- 1 点触 ，输入新联系人的号码，然后按**菜单**键。点触**添加至联系人**，然后点触**新建联系人**。
- 2 如果您要为新联系人添加图片，请点触 。从**拍摄照片“从图片库中选取”**中选择。
- 3 点触  以选择联系人类型。选择是将联系人保存到手机还是 SIM 卡 (SIM 1/SIM 2)。


- 4 点触联系人信息类别，并输入有关联系人的详细信息。

- 5 点触**保存**。


收藏夹联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹

- 1 点触  可以打开电话本。
- 2 点触联系人以查看其详细信息。
- 3 点触联系人姓名右侧的星号。星号变为金色。

从收藏夹列表中删除联系人


- 1 点触  可以打开电话本。
- 2 点触“**群组**”选项卡，选择列表顶部的“**收藏夹**”，然后选择要查看其详细信息的联系人。
- 3 点触联系人姓名右侧的金色星号。星号变为灰色，联系人已从收藏夹中删除。

信息/电子邮件

信息

LG-P698 将短信和彩信结合到一个直观易使用的菜单中。

发送信息

1 点触主屏上的  图标，然后点触**新建信息**打开空白信息。

2 在**收件人**字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以点触建议的收件人。您可以添加多个联系人。

备注：您将按每个收件人每条文本信息付费。


3 点触写信息开始撰写信息。


4 按菜单键打开“选项”菜单。从以下选项选择：呼叫、添加主题、附加、插入表情、放弃（删除）、所有信息等。

5 点触**发送**发送信息。

6 此时将打开信息屏幕，在您的姓名或号码下将显示信息。屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。

提示：如果插入了两张SIM卡且同时激活，则可在信息编辑器屏幕使用SIM卡切换键选择SIM1/SIM2。

 **警告：**160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式和语言。

 **警告：**如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

备注：在通话期间收到短信时，手机将发出通知铃声。

线程框

与另一方交换的信息（短信、彩信）将以时间顺序显示，以便您方便查看对话概述。


使用笑脸

使用笑脸让您的信息更具趣味性。

写新信息时，按**菜单**键，然后选择**插入表情符号**。

更改信息设置

LG-P698 已预定义信息设置，因此，您可以立即发送信息。您可以根据喜好更改设置。

 **警告：**在这种模式下，彩信客户端设备将引导用户创建并发送内容属于核心 MM 内容域的信息。此指南将通过警告对话框提供。

注意：小区广播设置仅支持 SIM1 卡。

打开电子邮件和帐户屏幕

您可以使用**电子邮件**应用程序读取 Google Gmail 外其他服务的电子邮件。电子邮件应用程序支持以下帐户类型：POP3、IMAP 和 Exchange。

打开电子邮件应用程序

从主屏点触电子邮件。选择电子邮件服务提供商。此时会打开设向导，帮助您添加电子邮件帐户。进行初始设置后，电子邮件将显示您的收件箱的内容（如果只

信息/电子邮件

有一个帐户)或帐户屏幕(如果有多个帐户)。

帐户屏幕

帐户屏幕列出了您的合并的收件箱以及您的每个电子邮件帐户。

- 1 打开**电子邮件**应用程序。
如果您不在“帐户”屏幕上,请按**菜单**键,然后点触**帐户**。
- 2 选择电子邮件服务提供者。



- 点触以打开您的“合并的收件箱”,此处将包含发送到您所有帐户的信息。



- 点触以仅打开已加星标的邮件的列表。



- 点触文件夹图标以打开帐户的文件夹。

您可以点触帐户以查看其收件箱。您用于发送电子邮

件的默认帐户将以勾选项号表示。

要打开您合并的收件箱

如果您已将电子邮件配置为从多个帐户收发电子邮件,则可以在全并的收件箱中查看发送到您所有帐户的所有邮件。


- 1 点触**电子邮件**。
- 2 点触**合并的收件箱**(在“帐户”屏幕中)。合并的收件箱将按帐户在左侧采取颜色编码的方式区分,每个帐户使用的颜色与您在帐户屏幕中使用的颜色完全一样。

只有帐户最近的电子邮件才会下载到您的手机中。要下载更多(更早的)电子邮件,请点触电子邮件列表底部的**载入更多邮件**。

撰写和发送电子邮件

要撰写和发送邮件

- 1 在**电子邮件**应用程序中，按**菜单**键，然后点触**撰写**。
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。用逗号分隔多个地址。
- 3 按**菜单**键并点触**添加抄送/密送地址**以便抄送或密送给其他联系人/电子邮件地址。
- 4 输入邮件的正文。
- 5 按**菜单**键，然后点触**添加附件**添加要附加到信息中的文件。
- 6 点触**发送**。
如果暂不发送邮件，请点触“保存至草稿箱”按钮，将其保存在“草稿箱”文件夹中。在“草稿箱”文件夹中点触草稿

箱邮件以继续编辑邮件。如果在发送前点触了**返回**键 ，您的邮件也会被另存为草稿。点触**舍弃**按钮以舍弃或删除邮件，包括任何已保存的草稿。如果未连接至网络，例如如果您以飞行模式工作，您发送的邮件将存储到您的发件箱文件夹中，直到重新连接至网络。如果包括任何未发送的邮件，发件箱就会显示在帐户屏幕上。

请注意，使用 Exchange 帐户发送的邮件将不会储存在手机上；但它们会储存在 Exchange 服务器上。如果要查看已发送文件夹（或带已发送标签）中的已发送邮件，则通常需要打开已发送文件夹/标签并从选项菜单中选择刷新。

信息/电子邮件

提示! 当新电子邮件到达“收件箱”时，您将收到声音或振动通知。轻触电子邮件通知可停止通知。

使用帐户文件夹

每个帐户均具有收件箱、发件箱、已发送和草稿箱文件夹。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

添加或编辑电子邮件帐户

添加电子邮件帐户

- 1 按**菜单**键，然后点触**添加帐户**。
- 2 选择 MS Exchange 或“其他”，然后输入帐户设置。
- 3 输入帐户的名称，确认您希望您的名称在外发邮件中显示的方式，然后点触**完成**按钮。

更改帐户的设置

- 1 打开帐户屏幕。
- 2 点触并按住您要更改其设置的帐户。在打开的菜单中，点触**帐户设置**。

删除电子邮件帐户

- 1 打开帐户屏幕。
- 2 点触并按住您要删除的帐户。
- 3 在打开的菜单中点触**删除帐户**。
- 4 在对话框中点触**确定**按钮，以确认您要删除帐户。

社交网络



社交网络

通过手机，您可以利用社交网络并管理联机社区中的微型博客。您可以更新您的当前状态，上载照片，并查看朋友的实时状态更新。

您可以将您的 Facebook 和 Twitter 帐户添加到手机。如果没有帐户，您可以访问其站点进行设置。

备注：连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

将您的帐户添加到手机



- 1 当多个窗口小部件出现时，选择社交+ ，然后轻触设置按钮。也可以以其他方式访问，在主屏幕上选择应用程序，轻触  > 设置 > 帐户与同步 > 社交 + 设置。

- 2 通过 Facebook for LG、Twitter for LG 和 MySpace for LG 选择“社交网络”客户端应用程序。
- 3 输入您的通信电子邮件地址和密码，然后轻触登录。
- 4 正在确认您的社区的详细信息，请稍候。
- 5 如果轻触您的社区，您可以看到社区的当前状态。

提示！ 如果在主屏上添加社交网络小工具，则小工具将向您显示手机从网络进行更新的时间。您也可以通过点触小工具来直接访问社区。

社交网络

查看和更新状态


- 1 您可以使用社交+  小工具随时查看和更新社区内容。
- 2 在社交+  小工具中，选择要登录的社交网络服务。随后便能看到您自己的状态和内容。
- 3 当您点触输入框时，屏幕将会切换，并用评论或上传照片更新您目前的状态。

提示！ 您可以更新状态并通过选择复选框同时将照片上传到 Facebook for LG、Twitter for LG 和 MySpace for LG。

备注： 具体取决于网络服务。

提示！ 您可以使您的朋友联系人与您的联系人列表同步。

删除手机上的帐户

- 1 选择应用程序，轻触 ，然后选择设置 > 帐户与同步。
- 2 选择要删除的帐户，然后点触删除帐户。

照相机

了解取景器

亮度 - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”降低图像亮度，“+”调高图像亮度。

缩放 - 放大或缩小。或者，您可以使用侧音量键。



视频模式 - 向下滑动此图标可切换到视频模式。

拍照

我的文档 - 点触以查看最近拍摄的照片。您可以访问“我的文档”并查看相机模式下保存的照片。

设置 - 点触此图标可以打开“设置”菜单。请参阅“使用高级设置”。


图像大小 - 点触可设置所拍照片的尺寸（以像素为单位）。

场景模式 - 从以下选项中选择：**自动、人物、风景、运动、夜间和日落**。

提示 关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要显示选项，请再次点触屏幕。

照相机

快速拍照

- 1 打开**照相机**应用程序。
- 2 水平拿稳手机，并将镜头对准您要拍摄的物体。
- 3 在取景器屏幕中间位置有一个对焦框开始闪动，这是对对焦框在尝试对物体进行对焦。
- 4 对好焦后，对话框变为绿色。
- 5 按下拍摄按钮。无论对焦框是否为绿色，您都可以按下拍摄按钮。
- 6 按下拍摄  按钮。

拍照后

拍摄的照片将显示在屏幕上。

分享

点触可以使用 **SmartShare**、**蓝牙**、**电子邮件**、**Gmail**、**信息**、**Picasa** 或 **社会共享照片**。

备注：漫游时如果下载了彩信，可能会额外收费。

提示 如果有 SNS 帐户并在手机上设置了该帐户，您可以向 SNS 社区共享您的照片。

设置为

点触以将图像用作**联系人图像**或**壁纸**。

重命名


点触以编辑选定图片的名称。




点触可以删除图像。



点触可以立即拍摄其他照片。这将保存您的当前照片。

 点触可以查看保存的图像库。

使用高级设置

在取景器中点触  以打开所有高级选项。

通过滚动列表，更改相机设置。选择选项后，点触**返回**键。

ISO - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。

在您无法使用闪光灯而光线较差的条件下，此功能很有用。选择 ISO 值：**自动**、**400**、**200** 和 **100**。

白平衡 - 从以下选项中选择：**自动**、**白炽灯**、**日光**、**荧光灯**和**阴天**。

色彩效果 - 选择新照片的色彩效果。

计时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从**关闭**、**3 秒**、**5 秒**或 **10**

秒。如果要为自己拍摄照片，此功能是理想之选。

图像质量 - 从**最细致**、**细致**和**正常**中选择。质量越精细，照片越清晰。但是，同时文件更大，这意味着手机内存可保存的照片数更少。


自动查看 - 如果将“**自动查看**”设置为开启，它将自动向您显示刚刚拍摄的照片。


快门声音 - 从四种快门声音中选择一种。

标签位置 - 激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。

照相机

备注：此功能仅在激活了 GPS 时可用。


 - 恢复所有相机默认设置。

 - 无论您何时想要了解此功能如何操作，均可点触该选项。这将为提供快速指南。



提示 退出相机时，部分设置将返回默认值，如白平衡、色彩效果、计时器和场景模式。拍摄下一张照片之前，请先查看。

提示 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。

查看保存的照片

在**相机**模式下访问保存的照片。点触  即可，然后点触屏幕。随后，您将看到**幻灯片**和**菜单**。

提示 向左或向右轻弹以查看其他照片或视频。

-  - 点触可查看幻灯片。
-  - 点触可共享内容或删除照片。点触**更多**可获得更多选项。

详细信息 - 检查内容相关信息。

设置为 - 设置为联系人图标或墙纸。

剪切 - 裁切照片。使用手指移过屏幕以选定区域。

向左旋转/向右旋转
- 向左或向右旋转。

摄像机

了解取景器

亮度 - 此选项定义并控制进入视频的光量。沿滚动条滑动亮度指示器，“-”降低视频亮度，“+”调高视频亮度。

缩放 - 放大或缩小。或者，您可以使用侧音量键。



相机模式 - 向上滑动此图标以切换到相机模式。

开始录制

我的文档 - 点触以查看最近录制的视频。您可以访问“我的文档”并查看摄像机模式下保存的视频。




设置 - 点触此图标可以打开“设置”菜单。请参阅“使用高级设置”。

长度 - 设置视频的长度限制。从标准和彩信中选择，以限制彩信最大大小。

视频大小 - 点触可设置录制的视频的大小（以像素为单位）。

摄像机

快速摄像

- 1 向下滑动**照相机**模式按钮，图标将更改为 。
- 2 屏幕上将显示摄像机的取景器。
- 3 水平拿稳手机，将镜头对准您要摄像的物体。
- 4 点触录制  按钮一次以开始录制。
- 5 录制将显示在取景器底部，计时器将显示视频长度。
- 6 点触屏幕上的  停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。

播放

点触以播放视频。

分享

点触可以通过 **SmartShare**、**蓝牙**、**电子邮件**、**Gmail**、**信息**或 **YouTube** 共享视频。

备注：漫游时如果下载了彩信，可能会额外收费。

重命名

点触以编辑选定视频的名称。



点触可以立即拍摄另一段视频。这将保存您的当前视频。




点触可删除刚拍摄的视频。点触确定确认。取景器将重新出现。



点触可查看您保存的视频的图片库。

使用高级设置

从取景器中点触  以打开所有高级选项。滚动列表以调节摄像机设置。选择选项后，点触**返回**键。


白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**阳光**、**荧光灯**或**阴天**中选择。


色彩效果 - 选择要对新视图使用的色彩效果。

视频质量 - 从**最细致**、**细致**和**正常**中选择。

语音 - 选择**静音**以录制视频而不录制声音。

自动查看 - 自动查看将向您显示刚录制的视频。

 - 恢复所有摄像机默认设置。

 - 如果要了解此功能如何操作，请点触该选项。这将为您的快速指南。

观看保存的视频

1 在取景器中，点触 。

2 您的图片库将显示在屏幕上。

3 点触视频一次，将其调到“我的文档”前方。它自动开始播放。

观看视频时调节音量

要在播放视频时调节音量，请使用手机左侧的音量键。

多媒体

您可以将多媒体文件保存在存储卡中，以便轻松访问所有图像和视频文件。

点触**应用程序**选项卡，然后选择**图片库**。打开存储所有多媒体文件的目录栏列表。


备注：请确保在手机上安装一个存储卡，以便保存图片 and 访问您的所有图片。如果没有存储卡，手机不会显示任何照片或视频，并且您的 Picasa 相册中也不会有任何 Picasa 图像。

视图模式

点触**图片库**。此时将显示文件夹视图。

点触任何文件夹都将返回网格视图模式。如果轻触照片，它将更改为完整视图模式。

时间线视图

LG-P698 **图片库**提供了照片和视频的时间线视图。在网格视图模式中，向右拖动  将显示您拍摄的照片的日期，其中从最新的照片开始。如果选择特定日期，在该日拍摄的所有照片将分组显示。

使用 SmartShare

SmartShare 为您提供了一种与其他启用了 DLNA（数字生活网络联盟）的设备共享多媒体内容的更好方法。

*** 与其他 DLNA 设备 (DMS) 共享您的媒体内容**

- 1 在主屏上点触**应用程序**选项卡，然后选择**SmartShare**。
- 2 按**菜单**键，然后选择**设置**。
- 3 点触“可检测性”勾选框以打开。

4 您可以更改设备名称，单击图标并选择共享内容类型。

* 允许您的图像生成设备（如 TV）播放来自远程内容库（如 PC）的多媒体内容

1 点触右上角的按钮，从图像生成设备列表中选择设备。

2 点触右上角的按钮，选择一个远程内容库。

3 您可以浏览远程内容库。

4 点触内容缩略图或按**菜单**键，然后选择“播放”按钮。

注意：要使用此应用程序，请检查您的设备已通过 Wi-Fi 连接到主网络。

注意：部分启用了 DLNA 的设备（如 TV）仅支持 DLNA 的 DMP 功能，将不会显示在图像生成设备列表中。

音乐

LG-P698 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请在主屏上点触“应用程序”选项卡，然后选择**音乐**。

播放歌曲



1 在主屏中点触**应用程序**选项卡，然后选择**音乐**。

2 点触**歌曲**。

3 选择您要播放的歌曲。

4 点触  以暂停歌曲。

5 点触  以跳到下一首歌曲。

6 点触  以返回到歌曲的开头。点触  两次以返回到上一首歌曲。

要在聆听音乐时更改音量，请按手机左侧的上下音量键。

点触并按住列表中的任何歌曲。它将显示**播放、添加**

多媒体

到播放列表、用作手机铃声、删除、详细信息、分享和搜索选项。

备注：音乐文件的版权可能受国际条约和国家版权法保护。因此，可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家/地区立法。

使用 USB 大容量存储设备传输文件

使用 USB 设备传输文件

- 1 使用 USB 数据线将 LG-P698 连接到 PC。
- 2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择**设置** > **存储卡和手机内存**，然后选择**仅大容量存储**。
- 3 点触**打开 USB 存储设备**。

- 4 您可以在 PC 中查看大容量存储内容，然后传输文件。

备注：您需要首先安装 SD 卡。没有 SD 卡，您不能使用 USB 大容量存储。

注意：如果安装了 LG Android 平台驱动程序，将立即看到含“打开 USB 存储设备”的弹出窗口。

如何将音乐/视频文件保存到手机

- 1 使用 USB 数据线将手机连接到 PC。在主屏中，点触并向下拖动状态栏。选择**USB 已连接** > **打开 USB 存储设备**。打开文件夹以查看 PC 中的文件。如果未在电脑上安装 LG Android 平台驱动程序，则需要手动设置它。有关详情，请参阅“使用 USB 大容量存储设备传输文件”。

2 将音乐或视频文件从 PC 保存到手机的可移动存储设备。

- 您可以使用读卡器将文件从 PC 复制或移到手机的可移动存储设备。
- 如果存在视频文件和子标题文件（名称与视频文件相同的 *.srt 文件），请将它放在同一文件夹中，以便在播放视频文件时自动显示子标题。
- 下载音乐或视频文件时，必须保护版权。请注意，损坏的文件或带有错误扩展名的文件可能会损坏手机。

将旧手机上的电话本移至新手机

使用 PC 同步程序将联系人作为 CSV 文件从旧手机导出到 PC。

1 从 www.lg.com 下载 PC Suite IV，并将其安装在 PC 上。运行程序，并使用 USB 数据线将您的 Android 手机连接到电脑。

2 选择**联系人**图标。转到**菜单 > 更多 > 导入/导出**，然后选择在 PC 中保存的 CSV 文件。

3 如果导入的 CSV 文件中的字段与 PC Suite IV 中的不同，则您需要映射字段。在映射字段后，单击“确定”。随后，电话本将被添加到 PC Suite IV 中。

4 如果 PC Suite IV 检测到 LG-P698 手机的连接（使用 USB 数据线），请单击“同步”或“同步电话本”以将 PC 中保存的电话本与手机同步。

多媒体

使用蓝牙从手机发送数据

使用蓝牙发送数据 与大多数手机不同，您可以通过不从蓝牙菜单运行对应的应用程序，使用蓝牙发送数据。

* **发送图片：**运行“图片库”应用程序，然后选择**图片 > 菜单**。单击**分享**，然后选择**蓝牙**。检查蓝牙是否开启，然后选择**扫描查找设备**。从列表中选择您要向其发送数据的设备。

* **导出电话本：**运行电话本应用程序。点触您要导出到的地址。按**菜单**键，然后选择**分享 > 蓝牙**。检查蓝牙是否开启，然后选择**扫描查找设备**。从列表中选择您要向其发送数据的设备。

* **发送多个选定联系人：**运行电话本应用程序。要选择多个联系人，请按菜

单键，然后点触**分享 > 全选 > 分享 > 蓝牙**或**电子邮件**或**Gmail**或**信息**。

* **连接到 FTP（仅在此手机上支持 FTP 服务器）：**选择**设置 > 无线和网络 > 蓝牙设置**。选择**可检测性**框；现在，您可以从其他设备搜索您的手机。查找 FTP 服务，并连接到 FTP 服务器。

• 如果要从其他设备搜索此手机，请转到**设置 > 无线和网络 > 蓝牙设置**。选择**可检测性**框。120 秒后，该框将取消选定。

使用收音机

LG-P698 内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。

备注：您必须连接耳机才能收听无线广播。将耳机插入耳机插孔。

搜索电台

您可以手动或自动微调收音机电台。它们将保存为特定频道编号，这样，您就不用再次查找。您可以在手机中最多保存 48 个频道。

自动微调

- 1 在主屏上点触**应用程序**选项卡，然后选择 **FM 收音机**。
- 2 按**菜单**键，然后点触**自动扫描**。
- 3 如果有预设频道，您将看到一个显示“重置所有频道并开始自动扫描？”的弹出窗口。如果选择“确定”，将删除所有预设频道并启动**自动扫描**。
- 4 在自动扫描期间，若要停止扫描，请点触**停止**。停止扫描前，仅保存已扫描的频道。

备注：您还可以使用显示的转盘手动微调电台。

重置频道

按**菜单**键并选择**重新设定频道**以重设当前频道，或选择**重置所有频道**以重设所有频道。

收听收音机

点触**收听方式**设置是使用扬声器还是耳机来收听无线广播。

提示 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

警告

如果连接的耳机不是专门面向收音机接收设计的，则收音机接收质量可能较差。

实用工具

设置闹钟

- 1 在主屏中点触**应用程序**选项卡，然后选择**时钟**。
- 2 如果要添加新闹钟，请点触 ，然后选择**添加闹钟**。
- 3 设置时间，然后点触  以打开闹钟。在设置时间后，LG-P698 将让您得知闹钟响铃之前的剩余时间。
- 4 设置**重复、铃声或振动**，然后添加标签以命名闹钟。点触**完成**。

备注：要更改闹钟列表屏幕上的闹钟设置，点触**菜单**键，然后选择**设置**。您可以调整下列选项：**静音模式下闹钟响、闹钟音量、再响间隔、侧边按钮行为**。

使用计算器

- 1 在主屏中点触**应用程序**选项卡，然后选择**计算器**。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触所需的函数（+、-、x 或 ÷），然后点触 =。
- 4 对于更复杂的计算，请按**菜单**键，点触**高级面板**然后选择 Sin、Cos、Tan、Log 等等。

将事件添加到日历中

- 1 在主屏中点触**应用程序**选项卡，然后选择**日历**。
- 2 要查看活动，请点触日期。如果要添加新活动，请点触并按住。点触**新建活动**。
- 3 点触**内容**，然后输入事件名称。查看日期并输入活动开始和结束的时间。
- 4 也可以点触**地点**，然后输入位置。

- 5 如果您要为事件添加备注，请点触**说明**，然后输入详细信息。
- 6 如果要重复闹钟，请设置**重复**，必要时设置**提醒**。
- 7 点触**完成**，将活动保存在日历中。日历中带颜色的方框将标记具有已保存活动的日期。在活动开始时间会有闹钟提醒，以便您进行安排。

更改日历视图

- 1 在主屏中点触**应用程序**选项卡，然后选择**日历**。按**菜单**键。
- 2 选择特定日期、星期或月份的日历视图。

Polaris Viewer

Polaris Viewer 是专业的移动办公解决方案，让用户可使用移动设备随时随地方便地查看各种类型的办公

文档，如 Word、Excel 和 PowerPoint 文件。

管理文件

Polaris 查看器可向移动用户提供方便的文件管理功能，包括在设备上复制、剪切和粘贴以及删除文件和文件夹。

查看文件




现在，移动用户可在移动设备上轻松查看各种文件类型，包括 Microsoft Office 文档和 Adobe PDF。使用 Polaris 查看器查看文档时，对象和布局与原始文档相同。

录音机

使用录音机录制录音机或其他音频文件。

实用工具

录制声音或语音

- 1 在主屏中点触**应用程序**选项卡，然后选择**录音机**。
- 2 点触  开始录音。
- 3 选择  结束录音。
- 4 点触  收听录音。

备注：点触  可访问相册。您可以收听保存的录音。

注意：可用录制时间以实际时间为准。

发送录音

- 1 录音完成后，您可以点触**分享**发送音频剪辑。
- 2 从**蓝牙**、**电子邮件**、**Gmail** 和**信息**中选择。选择**电子邮件**、**Gmail** 和**信息**时，录音将添加到邮件中，您可以照常撰写和发送邮件。


网络


浏览器


浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过手机访问。随时随地、不受限制。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。


使用 Web 工具栏


 点触可返回到上一页。

 点触可前进到当前页的下一页。这正好与按**返回**键的效果相反，按“返回”键将转到上一页。

 点触可显示所有打开的窗口。


 点触可添加新窗口。

 点触可更改 Web 浏览器设置。


 添加/显示书签以及显示**访问最多、稍后读取**和**历史记录**。


使用选项


按**菜单**键可查看选项。

 **稍后读取** - 将当前网页添加为书签。

 **添加 RSS 源** - 将当前网页添加到 RSS 源。

 **分享网页** - 您可以与其他人分享网页。

 **在网页上查找** - 您可以在当前网页中查找字母或词语。

 **选择文本** - 您可以复制网页中的任意文本。

 **更多**

- **主页：**转到主页。
- **设置主页：**将当前页面设置成主页

网络

- **向主屏幕添加快捷方式：**
将当前网页的快捷方式添加到主屏上。
- **网页信息：**显示网页信息。
- **下载内容：**显示下载历史记录。

提示 要返回上一个网页，请按**返回**键。

设置

在主屏中点触**应用程序**选项卡，然后滚动并点触**设置**。

双模设置

您可以配置 SIM 双卡设置。

两张 SIM 卡插入您的手机会显示 SIM 卡信息。点触以勾选。此操作可打开选定 SIM 卡，使之激活。

如果您尝试在 SIM2 卡关闭时来关闭 SIM1 卡，SIM2 卡会自动打开。（不允许同时关闭两张 SIM 卡。）

SIM 卡颜色主题 - 您选择的 SIM 卡颜色主题将应用到指示符 RSSI & SIM 图标。

数据已启用 - 关闭。此操作可使数据访问移动网络。

默认数据网络 - 您可以更改默认数据网络。

所有移动分组服务（Web、彩信、电子邮件等）将会使用已在此值中选择的 SIM 卡。

当只有一张 SIM 卡插入，默认数据网络则被设置为已插入的 SIM 卡且不能更改。

注意：当飞行模式打开时，禁用 SIM 双卡设置。

无线和网络

在这里，您可以管理 Wi-Fi 和蓝牙。您也可以设置移动网络以及切换为飞行模式。

飞行模式 - 切换为飞行模式之后，将禁用所有无线连接。

WLAN (Wi-Fi) - 点触以勾选：打开 Wi-Fi 已连接到可用的 Wi-Fi 网络。

WLAN (Wi-Fi)设置 - 允许您设置和管理无线接入点。

设置

设置网络通知，或添加 Wi-Fi 网络。从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。按**菜单**键然后点触**高级**。

提示 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入 LG-P698 的 MAC 地址。

您可以在以下用户界面中找到 MAC 地址：点触**应用程序** > **设置** > **无线和网络** > **WLAN 设置**，然后按**菜单**键。然后，选择**高级** > **MAC 地址**。

蓝牙 - 点触以勾选：打开蓝牙以连接蓝牙设备。

蓝牙设置 - 设置设备名称和可见模式，扫描其他设备。或者，检查您之前配置的蓝牙设备以及手机上次扫描蓝牙设备时检测到的那些设备的列表。

绑定 - 您可以配置 USB 绑定与便携式 Wi-Fi 热点的设置。

虚拟专用网设置 - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

移动网络 - 为数据漫游、网络模式和运营商、接入点名称 (APN) 等项设置选项。

注意：

- 默认情况下，插槽 1 的网络模式设为 WCDMA 模式，插槽 2 的网络模式设为 GSM 模式，因此，插槽 2 网络模式无法直接更改为 WCDMA 模式。
- 如果需要将插槽 2 网络模式更改为 WCDMA 模式，那么在将插槽 2 网络模式更改为 WCDMA 之前，应先将插槽 1 网络模式更改为“仅限 GSM”模式。

通话设置

您可以配置已插入 SIM 卡的通话设置。

<固定拨号>

选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要提供 PIN2 码，此密码由运营商提供。仅可以使用手机拨打此号码列表中的号码。

<语音邮件中心>

语音信箱服务 - 允许您选择运营商的语音信箱服务。

语音信箱设置 - 如果当前在使用运营商的语音信箱服务，此选项使您可以输入用于收听和管理语音信箱的号码。

<其他通话设置>

来电转接 - 选择是转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。

呼叫限制 - 选择何时限制呼叫。输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

通话费用 - 查看通话的相关费用。（此服务取决于网络；某些运营商不支持此功能）

通话时间 - 查看所有通话的时间，包括“全部”、“已拨电话”、“已接来电”和“最后通话”。

其他设置 - 此菜单允许您更改以下设置：

本机号码：选择是否要在拨出电话时显示您的号码。

来电等待：如果启用了呼叫等待功能，在通话过程中，手机将提醒您有新来电（取决于网络提供商）。

借口信息 - 拒绝通话时，您可使用此功能快速发送一条信息。此选项可用于在

设置

会议时拒接来电。

拒接来电 - 允许您设置拒接来电功能。从以下选项选择：关闭、拒接来电列表或拒接所有来电。

声音

<常规>

静音模式 - 允许您将所有声音（包括通话和通知铃声）静音，音乐、视频和已设置的闹钟的声音除外。若要使媒体和闹钟静音，您必须在各自的应用程序中操作。

振动 - 允许您将手机设置为在接到来电时振动。

音量 - 允许您为铃声、媒体和闹钟设置音量。如果取消勾选为通知使用来电音量的选项，您可以分别为来电和通知设置各自的音量。

<来电>

SIM 1 卡/ SIM 2 卡手机铃声 - 允许您设置已插入 RIM 卡的默认来电铃声。

<通知>

通知铃声 - 允许您设置默认通知铃声。

<反馈>

屏幕按键音 - 允许您将手机设置为在使用拨号盘拨号时播放音调。

操作音选择 - 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

屏幕锁定提示音 - 允许您将手机设置为在锁定和解锁屏幕时播放声音。

触觉反馈 - 允许您将手机设置为在按软键和执行其他操作时短时振动。

显示屏

亮度 - 调整屏幕亮度。

自动旋转屏幕 - 设置为在旋转手机时自动切换方向。

动画 - 设置为显示动画。

屏幕待机时间 - 设置屏幕超时的时间。

位置和安全

使用无线网络 - 如果选择“**使用无线网络**”，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。选择此选项时，您将被询问在提供这些服务时是否允许 Google 使用您的位置。

使用 GPS 卫星 - 如果选择“**使用 GPS 卫星**”，您的手机将确定您的位置并精确到街道级别。

设置屏幕锁定 - 设置解锁图案以确保您的手机安全。打开一组屏幕，它们可指导您绘制屏幕解锁图样。您

可设置 **PIN** 或**密码**，而不要使用**图案**或保持其值为**无**。

在您打开手机或唤醒屏幕时，系统将要求您画出解锁图样以解除屏幕锁定。

设置USIM卡锁定 - 设置SIM 卡锁定或更改 SIM PIN。

可见的密码 - 选择该选项可在您键入时显示密码，而取消选择则在您键入时隐藏密码。

选择设备管理器 - 添加一个或多个管理器。

使用安全凭据 - 允许您访问安全证书。

从 SD 卡安装 - 选择从 SD 卡安装加密的证书。

设置密码 - 设置或更改凭据存储密码。

清除存储 - 清除所有内容的凭据并重置密码。

设置

应用程序

您可以管理应用程序以及设置快速启动快捷方式。

未知源 - 将设置默认为非 Market 应用程序的安装。

管理应用程序 - 管理和删除安装的应用程序。

正在运行的服务 - 检查当前正在运行的服务。

存储空间使用情况 - 查看应用程序所用的存储空间。

电量使用情况 - 查看耗电情况。

开发 - 设置应用程序开发的选项。

帐户与同步

<常规同步设置>

背景数据 - 允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消勾选此设置可节省电池电量并减少（而非消除）数据使用。

自动同步 - 允许应用程序根据自己的计划同步、发送和接收数据。

<管理帐户>

所有 Google 帐户及已添加到手机的其他帐户的列表。如果点触此屏幕中的某个帐户，将会打开其帐户屏幕。

隐私权

如果选择重设出厂数据，将清除手机内存汇总的所有个人数据，包括有关 Google 帐户及其它帐户的信息、您的系统/应用程序数据和设置，以及下载的应用程序和 DRM 许可。重置手机不会擦除您已下载的任何系统软件更新或 microSD 卡上的任何文件，如音乐或照片。如果以此方式重置手机，将提示您重新输入与首次启动 Android 时相同类型的信息。

存储卡和手机内存

<USB 连接模式>

仅大容量存储 - 插入存储卡时，您的手机可用作大容量存储设备。您可将**仅大容量存储**设置为 USB 连接模式的默认设置。

<外置 SD 卡>

检查 SD 卡总可用空间。点触**卸载 SD 卡**以安全移除。如果要删除 SD 卡上的所有数据，请**格式化 SD 卡**。

<手机内部存储>

选择可用空间。

语言和键盘

设置设备语言及键盘设置。

语音输入与输出

<语音输入>

语音识别程序设置 - 使用**语音识别程序设置**配置 Android 语音输入功能。

- **语言**：打开一个屏幕，在此可以设置您在通过讲话的方式输入文字时使用的语言。
- **安全搜索**：打开一个对话框，在此，您可以设置是否需要 Google SafeSearch 筛选器屏蔽某些搜索结果。
- **屏蔽不文明的字词**：取消勾选时，Google 语音识别将在您以口头方式输入文本时识别和抄写许多人认为具有攻击性的言论。勾选时，Google 语音识别将用由井号 (#) 组成的占位符替代文字记录中的那些字眼。

<语音输出>

文字转语音设置 - 您可以使用**文字转语音设置**来配置 Android 文本转语音合成器，通过该应用程序来使用时此功能。

设置

备注：如果未安装语音合成器数据，则只有**安装语音数据设置**可用。

- **聆听示例：**使用您的当前设置播放语音合成器的简短示例。
- **总是使用我的设置：**勾选以使用该屏幕上的设置替代其他应用程序中提供的语音合成器设置。
- **默认引擎：**如果安装了多个文本至语音应用程序，则会打开一个对话框，在此可以设置您要使用的文本至语音应用程序。
- **安装语音数据：**如果您的手机未安装语音合成器数据，请连接至 Android Market，系统将引导您完成下载和安装数据的过程。如果数据已经安装，则此设置不可用。
- **语速：**打开一个对话框，在此可以选择您希望合成器发音的速率。

- **语言：**打开一个对话框，在此可以选择您希望合成器读出的语言。该选项在结合**总是使用我的设置**，这样可以确保文本在不同的应用程序中均可正确发音。
- **Pico TTS：**配置 Pico TTS 设置。

辅助功能

使用**辅助功能**可配置您在手机上安装的辅助功能插件。

备注：需要额外的插件。

日期和时间

使用**日期和时间**设置，以设置日期显示方式的首选项。您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

关于手机


查看法律信息，检查手机状态和软件版本。


Wi-Fi

使用 Wi-Fi，您可在无线接入点 (AP) 覆盖区内高速访问 Internet。


使用 Wi-Fi 尽情享受无线互联网，而且无需额外付费。

打开 Wi-Fi

从主屏中打开“通知抽屉”，并点触 。

或点触应用程序选项卡 > 设置 > 无线和网络，然后点触 Wi-Fi 。

连接到 Wi-Fi

选择要连接的 Wi-Fi 网络。如果看到 ，则需要输入密码才能连接。

备注：

- 如果不在 Wi-Fi 覆盖区内并选择 3G 连接，则可能会产生额外费用。
- 如果手机在连接到 Wi-Fi 后进入睡眠模式，将自动禁用 Wi-Fi 连接。
- 这种情况下，如果手机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生额外费用。
- LG-P698 支持 WEP、WPA/WPA2-PSK 和 802.1x EAP 安全。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，请在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

设置

共享您手机数据连接

您可以通过 USB 数据线（USB 绑定）将您手机的移动数据连接与一台电脑共享。您也可以将您的手机转接到便携式 Wi-Fi 热点，一次将您手机的数据连接与最多五个设备进行共享。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

图标	描述
	USB 绑定已激活
	便携式 WLAN 热点已激活
	USB 绑定和便携式热点均已激活

有关绑定和便携式热点的信息，包括支持的操作系

统及其他详细信息，请访问 <http://www.android.com/tether>。

备注：连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

USB 绑定和便携式 Wi-Fi 热点设置

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**绑定**。
- 3 选择您要调整的选项。

USB 绑定 - 勾选以通过 USB 连接将手机的移动网络数据连接与您的电脑进行共享。

便携式 WLAN (Wi-Fi) 热点 - 勾选以将您的手机网络数据连接共享为 Wi-Fi 热点。

帮助 - 打开一个对话框，上面显示有关 USB 绑定

与便携式 Wi-Fi 热点以及有关在哪可以了解更多的信息。

通过 USB 共享您手机的数据连接

如果您的电脑运行 Windows 7 或部分 Linux 风格的最新分发（例如 Ubuntu），通常无需准备电脑进行绑定。但是如果运行的是较早版本的 Windows 或其他操作系统，则可能先准备您的电脑，才能通过 USB 建立网络连接。如需获得有关哪种操作系统支持 USB 绑定以及如何配置它们的最新信息，请访问 <http://www.android.com/tether>。

USB 绑定和数据共享


您不能同时通过 USB 共享手机的数据连接和 microSD 卡。如果您正在使用 USB 连接来将 microSD 卡接入

您的电脑，将必须先将其断开连接。

- 1 使用手机附带的 USB 数据线将手机连接到电脑。
- 2 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 3 点触**无线和网络**，然后选择**绑定**。
- 4 勾选 **USB 绑定**。
 - 手机将开始通过 USB 连接将其移动网络数据连接与您的电脑进行共享。持续的通知  将添加到状态栏和通知抽屉中。
- 5 取消勾选 **USB 绑定**可停止共享您的数据连接。或者只需断开 USB 数据线的连接。

设置

将手机的数据连接共享为便携式 Wi-Fi 热点

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**绑定**。
- 3 勾选**便携式WLAN (Wi-Fi)热点**。
 - 片刻之后，手机将开始广播其 Wi-Fi 网络名称 (SSID)，这样您将可以通过其连接最多五台电脑或其他设备。持续的通知  将添加到状态栏和通知抽屉中。
 - 勾选**便携式WLAN (Wi-Fi)热点**之后，您可以更改其网络名称或确保其安全。
- 4 取消勾选**便携式WLAN (Wi-Fi)热点**以停止通过 Wi-Fi 共享您的数据连接。

重命名或确保您的便携式热点安全

您可以更改手机 Wi-Fi 网络名称 (SSID) 的名称并确保其 Wi-Fi 网络的安全。

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**绑定**。
- 3 确保已勾选**便携式WLAN (Wi-Fi)热点**。
- 4 点触**便携式 WLAN 热点设置**。
- 5 点触**配置 WLAN**。
 - 此时将打开**配置 WLAN**对话框。
 - 您可以更改网络 SSID (名称)，这将是其他电脑在扫描 Wi-Fi 网络时看到的名称。
 - 您也可以点触**安全性**菜单来为网络配置 Wi-Fi 保护访问 2 (WPA2) 安全性以及预共享密钥 (PSK)。

- 如果点触 **WPA2 PSK** 安全性选项，则密码字段将会添加到**配置 WLAN** 热点对话框中。如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。或者在安全性菜单中点触**打开**，以从 Wi-Fi 网络中删除**安全性**。

注意!

如果将安全性选项设为**打开**，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未授权使用，最好保持激活安全性选项。

6 点触保存。

软件更新

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 选择国家/地区和语言。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

备注：LG 保留根据自行判断决定固件更新仅可用于指定型号的权力，不保证所提供的固件更新版本可供所有手机型号使用。

通过空中下载 (OTA) 的 LG 手机软件更新

此功能允许您通过空中下载 (OTA) 方便地将手机的固件更新为最新版本，而无需连接 USB 数据线。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

首先，您可以在手机上检查软件版本：设置 > 关于手机 > 软件更新 > 软件更新检查。

备注：此功能具体取决于网络服务提供商、所在区域或国家/地区。

DivX 移动 **DIVX**

关于 DIVX 视频：DivX® 是由 DivX, LLC (Rovi Corporation 的子公司) 开发的一种数码视频格式。

本手机是播放 DivX 视频的 DivX Certified® 官方设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 divx.com。

关于 DIVX VIDEO-ON-DEMAND: 要播放购买的 DivX Video-on-Demand (VOD) 电影，必须先注册此 DivX Certified® 设备。要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。转到 vod.divx.com 以获取有关如何完成注册的详细信息。

DivX Certified® 可播放高达 320x240 的 DivX® 视频
DivX®、DivX Certified® 及相关徽标是 Rovi Corporation 或其子公司的商标，使用必须经过许可。

备注:

打开源软件

 
要获取 GPL、LGPL、MPL 及其他开源证书下的相应源代码，请访问

<http://opensource.lge.com/>
可使用源代码下载所有相关许可条款、声明和通知。

配件

以下配件可与 LG-P698 一起使用。（以下配件为可选配件。）

旅行适配器



数据线

连接 LG-P698 和 PC。



电池



用户手册

了解更多关于 LG-P698 的信息。



立体声耳机



备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度: +55° C (放电), +45° C (充电)

最低温度: -10° C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P698

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 488-07 V1.3.1 / EN 301 489-17 V2.1.1 /

EN 301 489-19 V1.2.1 / EN 301 489-24 V1.5.1

EN 300 328 V1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 (AC:2008) EN62209-1:2006 / EN62209-2:2010

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 / EN 301 908-2 V4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

22. Aug. 2011

LG Electronics Logistics and Services B.V.
Velleuzoom 15, 1327 AE Almere, The Netherlands

Signature of representative

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。 运营商应用了新服务。	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。如果超过，请在最近的网络提供商处更换 SIM 卡。 请与服务提供商联系。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册。	请与服务提供商联系。

信息	可能原因	可行解决措施
无法拨打电话	拨号错误。 已插入新 SIM 卡。 达到预付费上限。	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按住/关键时间过短。 电池未充电。 电池触点脏。	请按住/关键至少两秒钟。 为电池充电。 检查显示屏上的充电指示灯。 清洁电池触点。
充电错误	电池未充电。 外部温度太热或太冷。 触点问题 无电压 充电器故障 错误充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。 将充电器插入其它插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。
不允许输入号码	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。

故障排除

信息	可能原因	可行解决措施
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
未打开的文件	不受支持的文件格式	检查支持的文件格式。
存储卡不起作用	仅支持 FAT 16、FAT32 文件格式	通过读卡器检查 SD 卡文件系统，或使用手机格式化 SD 卡。
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	卸下电池，将它再次插入并将手机开机。 尝试通过网站执行软件更新。
电话锁定并且未工作。	重新启动手机	<ol style="list-style-type: none">1. 关机。2. 卸下电池盖。3. 安装电池。4. 关闭插槽盖。5. 重新开机。



English

LG-P698 User Guide

This guide helps you get started using your phone.

If you need more information, please visit www.lg.com.

- Some of the contents of this manual may not apply to your phone. This depends on your phone's software and your service provider.
- This handset is not recommended for the visually impaired because of its touch screen keyboard.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Contents

Guidelines for safe and efficient use	6
Important notice	13
Getting to know your phone .	23
Installing the SIM card and battery	25
Charging your phone	26
Installing the memory card ...	27
Formatting the memory card.	28
Your Home screen	29
Touch screen tips.....	29
Lock your phone	29
Unlock screen.....	30
Silent mode	30
Home	30
Adding widgets to your Home screen.....	31
Returning to recently-used applications	32
Using Dual SIM	32
Notification drawer	33
Viewing the status bar	33
Onscreen keyboard	35
Entering accented letters	36
Google account setup	37
Creating your Google account	37
Signing in to your Google account.....	37
Calls	39
Making a call	39
Calling your contacts.....	39
Answering and rejecting a call.....	39
Adjusting call volume	40
Making a second call	40
Viewing your call logs.....	40
Call settings.....	41
Contacts	42
Searching for a contact	42
Adding a new contact.....	42
Favorite contacts.....	42
Messaging/email	44
Messaging.....	44
Sending a message.....	44
Threaded box	45
Using Smilies.....	45

Changing your message settings	45	Video camera.....	56
Opening Email and the Accounts Screen	45	Getting to know the viewfinder.....	56
Composing and Sending Email.....	47	Shooting a quick video	57
Working with Account Folders	48	After shooting a video.....	57
Adding and Editing Email Accounts	48	Using the advanced settings .	58
Social Networking	50	Watching your saved videos..	58
Social Networking	50	Adjusting the volume when viewing a video	58
Adding your account to your phone	50	Multimedia.....	59
Viewing and updating your status	51	View model.....	59
Removing accounts from your phone	51	Timeline view.....	59
Camera	52	Using SmartShare	59
Getting to know the viewfinder.....	52	Music.....	60
Taking a quick photo	53	Playing a song	60
Once you've taken the photo	53	Transferring files using USB mass storage devices.....	61
Using the advanced settings .	54	How to save music/video files on your phone.....	62
Viewing your saved photos ...	55	Moving contacts from your old phone to your new phone	63
		Sending data from your phone using Bluetooth.....	63
		Using the radio	64

Contents

Searching for stations	65	Location & security	75
Resetting channels.....	65	Applications.....	76
Listening to the radio.....	65	Accounts & sync	77
Utilities.....	66	Privacy	77
Setting your alarm.....	66	Storage	77
Using your calculator	66	Language & keyboard	78
Adding an event to your calendar	66	Voice input & output.....	78
Changing your calendar view	67	Accessibility.....	79
Polaris Viewer	67	Date & time	80
Voice recorder	68	About Phone.....	80
Recording a sound or voice...	68	Wi-Fi.....	80
Sending the voice recording..	68	Turning on Wi-Fi.....	80
The Web.....	69	Connecting to Wi-Fi.....	80
Browser.....	69	Sharing your phone's data connection.....	81
Using the web toolbar.....	69	USB tethering & portable Wi-Fi hotspot settings	82
Using options.....	69	To share your phone's data connection via USB	82
Settings	71	USB tethering and data sharing.....	82
Dual SIM settings.....	71	To share your phone's data connection as a portable Wi-Fi hotspot.....	83
Wireless & networks.....	71		
Call settings.....	73		
Sound	74		
Display	75		

To rename or secure your portable hotspot.....	84
Software update	86
Phone software update.....	86
DivX Mobile	87
Accessories	88
Technical data.....	89
Troubleshooting	90

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P698 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level

in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.26 W/kg (10 g) and when worn on the body is 1.15 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should

position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop the phone.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by specific regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

Guidelines for safe and efficient use

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Guidelines for safe and efficient use

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use the phone near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use the phone on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

Guidelines for safe and efficient use

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Important notice

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When available space in your phone memory is less than 10%, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

Managing applications

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > Applications > Manage applications**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.

- 3 Tap **Uninstall**, then touch **OK** to uninstall the application you selected.

2. Optimising battery life

Extend your battery's life between charges by turning off features you don't need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your battery's life

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may cause your battery life to be reduced.

Important notice

Checking the battery charge level

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > About phone > Status > Common**.
- 2 The battery status (Charging, Not charging) and level (percentage charged) is displayed at the top of the screen.

Monitoring and controlling what uses the battery

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > About phone > Battery use**.
- 2 Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected to a power source or, if connected to a power source, how long you

were last running on battery power. The body of the screen lists applications or services using battery power, from greatest amount to least.

3. Installing an open source operating system

If you install and use an open source operating system (OS) on your phone rather than using the OS provided by the manufacturer, your phone may malfunction.

WARNING

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING**

To protect your phone and personal data, only download applications from trusted sources, such as Android Market. If there are improperly installed applications on your phone, your phone may not work normally or a serious error may occur. You must uninstall those applications and all their data and settings from the phone.

4. Using unlock pattern

Set unlock pattern to secure your phone. On the home screen, touch **Applications** tab and select **Settings > Location & security > Set up screen lock > Pattern**.

Select **Continue** to next screen. Opens a set of screens that guide you through drawing a screen unlock pattern.

Caution: create a Gmail account before setting an unlock pattern.

 **WARNING**

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

If you have forgotten pattern: If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tab the Forgotten pattern button. You are then required to

Important notice

log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you forgot it, you have to perform a Hard reset.

If you have forgotten PIN or Password: If you forgot your PIN or Password, you need to do Hard reset.

5. Using the hard reset

If it does not restore to the original condition, use hard reset to initialise your phone.

When the phone is turned off, press and hold the **Home** key + **Volume down** key + **Power** key for over ten seconds. When the screen shows the LG logo, release the **Power** key.

After few seconds your phone get the Android system recovery screen with **Yes/No** options.

After the screen shows the above option, release the other keys.

To navigate between the options, we can use the **Volume up/down** key. Press the **Volume down** key to navigate to Yes option and press the **Power** key for confirmation.

Leave your phone for at least a minute while it performs the hard reset, then your phone will be turned on.

Caution: if you perform a hard reset, all user applications and user data are deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, access a wireless access point or “hotspot.” Some access points are open and you can simply connect

to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
 - A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are asked to confirm that you want to connect to that network by touching **Connect**.

- If the network is secure, you're asked to enter a password or other credentials. (Ask your network administrator for details)

- 4 The status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with music and video files, can only be saved to external memory.

Before using the built-in camera, you first need to insert a microSD memory card into your phone.

If you don't insert a memory card, you cannot save the pictures and video you take with the camera.

Important notice

WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, in the Home screen, touch the **Applications** tab, then select **Settings > Storage > Unmount SD Card**.

8. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

Stopping applications

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > Applications > Manage applications**.
- 2 Scroll to the desired application and touch **Force stop** to stop it.

TIP Returning to recent apps
Press and hold the Home key.
A screen then displays a list
of the applications you used
recently.

9. Copying LG PC Suite from an SD card

LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable. Once connected, you can use the functions of the mobile phone on your PC.

Major functions of LG PC Suite IV

- Create, edit and delete phone data with ease
- Synchronise mobile phone data with PC data (contacts, calendar, SMS messages, bookmarks and call log)

- Easily transfer multimedia files (photos, videos, music) by simply dragging and dropping between a PC and your phone
- Transfer SMS messages from your phone to a PC
- Software update without losing your data

Installing LG PC Suite from your microSD memory card

- 1 Insert your microSD memory card into your phone. (It may already be inserted)
- 2 Before connecting the USB data cable, make sure that **Mass storage only** mode is enabled on your phone. (In the applications menu, choose **Settings**, then select **storage** and then select the **Mass storage only** box.)
- 3 Use the USB data cable to connect your phone to the PC.

Important notice

- 4 • In the status bar, drag the USB icon.
 - Choose **USB connected** and **Turn on USB storage**.
 - You can view the mass storage content on your PC and transfer files.
- 5 • Copy the LGPCSuiteIV folder in mass storage to your PC.
 - Run the LGInstaller.exe file on your PC and follow the instructions.

* When LG PC Suite IV installation is complete, disable **Mass storage only** mode to run LG PC Suite IV.

NOTE: do not remove or delete other program files installed on your memory card. This may damage your preinstalled applications.

10. Connecting your phone to a computer using USB

NOTE: to synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC. Download the program from the LG website (www.lg.com). Go to www.lg.com and select your region, country and language. For more information, visit the various pages of the site. Since PC Suite is on the microSD card, you can simply copy it to your PC.

LG-P698 does not support:

- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java application

After installing PC Suite IV, you can find the User Guide in the Help menu.

- 1 Use the USB cable to connect your phone to a USB port on your computer. Once connected, you will receive a notification that a USB connection has been made.
- 2 Open the notification drawer and touch USB connected.
- 3 Touch **Turn on USB storage** to confirm that you want to transfer files between your phone's microSD card and the computer.

You will receive a notification when the phone connects as USB storage. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: when uninstalling PC Suite IV, USB and Bluetooth, drivers are not automatically removed. You must uninstall them manually.

TIP To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions for properly disconnecting USB devices to avoid losing information on the card.

- 1 Safely disconnect the USB device from your computer.
- 2 Open the notification drawer and touch **Turn Off USB Storage**.

Important notice

11. Unlocking the screen when using a data connection

Your display goes dark if untouched for a period of time when using a data connection. To turn on your LCD screen, just touch it.

12. Hold your phone straight up

Hold your mobile phone straight up, as you would a regular phone. The LG-P698 has an internal antenna. Be careful not to scratch or damage the back of the phone, as that causes loss of performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

13. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on. If it still does not work, please contact the service centre.

14. Do not connect your phone when you turn on/off your PC.

Make sure you disconnect the data cable between your phone and PC; leaving it connected might cause errors on your PC.

Getting to know your phone

To turn on your phone, press and hold the Power key for 3 seconds.

To turn off the phone, press and hold the Power key for 3 seconds, then touch **Power off** and **OK**.

Speaker

Proximity sensor

Back key 

 
Return to the previous screen.

Home key 

Return to home from any screen.

Menu key 

Check what options are available.

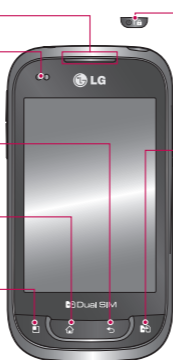

Power/Lock key

Switch your phone on/off by pressing and holding this key.
Turn off and lock the screen.

SIM Switch Key 

- Press the Key for SIM1/ SIM2 selection (Selected SIM is marked by square box on RSSI icon).
- Press and Hold the key to go to Dual SIM settings

NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

WARNING

Placing a heavy object on the phone or sitting on, it can damage its LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This may cause the sensor to malfunction.

Getting to know your phone



Installing the SIM card and battery

- 1 To remove the back cover, hold the phone in your hand firmly. With the other hand, firmly press your thumb on the back cover. Now lift off the back cover.



- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.



- 3 Insert the battery by aligning the gold contacts on the phone and the battery.



Getting to know your phone

- 4 Replace the back cover of the phone.



Charging your phone

Slide open the cover of the charger connector on the side. Insert the charger, then plug it into an electrical outlet. Your LG-P698 must be charged before you see



NOTE: the battery must be fully charged initially to improve battery lifetime.

 
Installing the memory card

To store multimedia files, such as images captured using the built-in camera, you must insert a memory card into your phone.

NOTE: the LG-P698 supports memory cards up to 32 GB.

To insert a memory card:

- 1 Turn the phone off before inserting or removing a memory card. Remove the back cover.

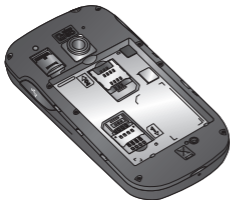

- 2 Open the slot protection and insert the memory card

into the slot. Make sure the gold contact area is facing downwards.



- 3 Close the slot protection.

Getting to know your phone



WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: all files on the card are deleted when you format the card.

- 1** In the Home screen, touch the **Applications** tab to open the applications menu.
- 2** Scroll to and touch **Settings** > **Storage**, then select **Mass storage only**.
- 3** Touch **Unmount SD card**.
- 4** Touch **Erase SD card**, then confirm your choice.
- 5** If you have set a pattern lock, input the pattern lock then select **Erase Everything**. The card is then formatted and ready to use.

NOTE: if there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – to choose a menu/option or open an application, touch it.

Touch and hold – to open an options menu or grab an object you want to move, touch and hold it.

Drag – to scroll through a list or move slowly, drag across the touch screen.

Flick – to scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Lock your phone

When you are not using the LG-P698, press the power key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the Home screen or another screen you are viewing is replaced with the lock screen to conserve battery power.

If there are any programs running when you set the pattern, they may be still running in Lock mode. It is recommended that you exit all programs before entering the Lock mode to avoid unnecessary charges (e.g. phone calls, Web access and data communications).

Your Home screen

Setting an unlock pattern: you can draw your own unlock pattern by connecting the dots. If you set a pattern, the phone screen locks. To unlock the phone, draw the pattern that you set on the screen.

Caution: when you set an unlock pattern, you need to create your Google account first.

Caution: if there are more than 5 pattern drawing errors in a row, you cannot unlock the phone. In this case, Refer Point-4 under Important Notice.

Unlock screen

Whenever your LG-P698 is not in use, it returns to the lock screen. Drag your finger from bottom to top to unlock the screen.



Silent mode

In the notification drawer, touch  to be .

Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with widgets, shortcuts (to your favourite applications), folders and wallpaper.

NOTE: some screen images may be different depending on your phone provider.

In your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch screen dialpad to make a call.



Touch the **Contacts** icon to open your contacts.



Touch the **Message** icon to access the messaging menu. This is where you can create a new message.



Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications.

To open the desired application, simply touch the icon in the applications list.

NOTE: preloaded applications may differ according to your phone's software or your service provider.


Adding widgets to your Home screen

You can customise your Home screen by adding shortcuts, widgets or folders to it. For more convenience using your phone, add your favourite widgets to the Home screen.

- 1 In the Home screen, press the **Menu** key and select **Add**. Or touch and hold the empty part of the home screen.
- 2 In the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.
- 4 You then see a new folder icon on the Home screen. Drag it to the desired location on the desired panel, then take your finger off the screen.

Your Home screen

TIP To add an application icon to the Home screen from the **Applications** menu, touch and hold the application you want to add.

TIP To remove an application icon from the Home screen, touch and hold the icon you want to remove, then drag it to .

NOTE: you cannot delete preloaded applications. (Only their icons can be deleted from the screen)

Returning to recently-used applications

- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to the current application.

Using Dual SIM

When two SIM cards are inserted on your phone, the SIM cards information are displayed on your notification drawer. When you press the SIM switch key, currently active SIM is switched.

NOTE:

- If only one SIM card is inserted or one SIM is off, SIM switching is not available, and the SIM switch key has no action.
- During a call, sending a message or using a data service, the other SIM's RSSI might be displayed as 'No service' due to the network service status.

WARNING

If you are outside of the service area, it may cause your device to consume more battery power.

Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

Or, in the Home screen, press the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth and GPS as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life and active Bluetooth and data connections.















Below is a table explaining the meaning of icons you're likely to see in the status bar.


 




















[Status bar]

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset

Your Home screen

Icon	Description
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging


Icon	Description
	Data in and out / Default data network
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	3 more notifications not displayed
	Data is syncing
	Download finished
	New Gmail
	New Google Talk message
	New message



Icon	Description
	Song is playing
	Upcoming event
	FM radio turned on in the background
	SmartShare On
	SmartShare sharing request
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active


Onscreen keyboard

 
You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text


 Tap once to capitalise the next letter you type. Double tap for all caps.


  Tap to switch to the numeric and symbol keyboard. You can also touch and hold this tab to view the Settings menu.


 Tap to view or press and hold to change the writing language.

 Tap to enter a space.

Your Home screen

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").


For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup

The first time you open the Google application on your phone, you are required to sign in with your existing Google account. If you do not have a Google account, you are asked to create one.

Creating your Google account

- 1 In the Home screen, touch the **Applications** tab  to open the Applications menu.
- 2 Tap **Gmail**, then tap **Next > Create** to start the Gmail setup wizard.
- 3 Enter your name and username for your Google account.
- 4 Tap **Next**. Your phone is now communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Follow the instructions and enter

the required and optional information about your account. Wait while the server creates your account.

Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign In**. Wait while the system signs you in.
- 2 After signing in, you can use Gmail and take advantage of Google services on your phone.
- 3 Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the Web. (This depends on your synchronisation settings)

After signing in, you can use other Google services on your phone.

Google account setup





IMPORTANT!

 
- Some applications, such as Calendar, only work with the first Google account you add. If you plan to use more than one Google account on your phone, be sure to sign in first to the one you want to use with applications such as Calendar. When you sign in, your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronised with your phone. If you do not sign in to a Google account during setup, you are asked to sign in or create a Google account the first time you start an application that requires one, such as Gmail or Android Market™.

- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign in to that account.

Calls


Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch the **End** icon .

TIP To enter “+” to make international calls, touch and hold .

TIP If both the SIM cards are inserted and activated, SIM1/SIM2 can be selected on Dial Screen by using SIM switching key.

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When your phone rings, touch the **Answer** icon .

Touch the **Decline** icon  to reject an incoming call.

Drag the **Excuse messages** bar from the bottom if you want to send one. If the caller is unknown, the **Excuse messages** bar is not available.

Calls




TIP Excuse messages


When you want to decline a call, you can send a message quickly by touching **Excuse msg** on the screen. This is useful if you need to reply the message during a meeting

Adjusting call volume

To adjust the in-call volume during a call, use the Volume Up and Down key on the left side of the phone.


Making a second call

- 1 During your initial call, touch  the Menu key and select .
- 2 Dial the number, or search your contacts.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls are displayed on the call screen. Your initial call is locked and put on hold.

- 5 Touch the displayed number to toggle between calls. Or touch  **Merge calls** to make a conference call.
- 6 To end active calls, touch **End** or press the **Home** Key and slide the notification bar down and select **End call**.

NOTE: you are charged for each call you make.

Viewing your call logs

In the Home screen, touch  and choose the **Call log** tab.

View a complete list of all dialed, received and missed voice calls.

TIP Touch any call log entry to view the date, time and duration of the call.

TIP Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


- 1 In the Home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings** and choose the options that you want to adjust.

Contacts



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keyboard.

Adding a new contact


- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to contacts** and then **Create new contact**.
- 2 If you want to add a picture to the new contact, touch . Choose from **Capture picture** or **Pick from Gallery**.

- 3 Select the contact type by touching . Choose whether to save the contact to your phone or SIM (SIM 1/SIM 2).
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.

Favorite contacts

You can classify frequently called contacts as favorites.

Adding a contact to your favorites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

Removing a contact from your favorites list


- 1 Touch  to open your contacts.
- 2 Touch the Group tab, select Favourites at the top of the list and choose a contact to view its details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Messaging/email

Messaging

Your LG-P698 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch  icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can also add multiple contacts.


NOTE: You will be charged for a text message for every person you send the message to.


- 3 Touch Enter message to start entering your message.
- 4 Press the **Menu** key to open the options menu. Choose from

Call, Add subject, Attach, Insert smiley, Discard(Delete), All messages, etc.

- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message below your name or number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

TIP If both the SIM cards are inserted and activated , SIM1/SIM2 can be selected on Message editor screen by using SIM switching key.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and in what language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

NOTE: When you get an SMS message during a call, there will be a ring notification.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.


Using Smilies

Liven up your messages using Smilies.

When writing a new message, press the **Menu** key, then choose **Insert smiley**.

Changing your message settings

Your LG-P698 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

 **WARNING:** In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

NOTE: Cell broadcast settings can be supported only for SIM1.

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Google Mail. The Email application supports the following

Messaging/email

account types: POP3, IMAP and Exchange.

To open the Email application

From the Home screen, touch **Email**.

Select Email Service Provider.

A setup wizard opens to help you add an email account. After the initial setup, Email displays the contents of your Inbox (if you have only one account) or the Accounts screen (if you have multiple accounts).

The Accounts screen

The Accounts screen lists your Combined Inbox and each of your email accounts.

- 1 Open the **Email** application. If you're not on the Account screen, press the **Menu Key** and touch **Accounts**.

- 2 Select the Email service provider.



- Touch to open your Combined Inbox, with messages sent to all of your accounts.



- Touch to open just the list of your starred messages.



- Touch the folder icon to open the account's folders.

You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.

To open your Combined Inbox

If you have configured Email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox.

- 1 Touch **Email**.

2 Touch **Combined Inbox** (in the Accounts screen). Messages in the Combined Inbox are colour coded along their left sides, by account, using the same colours that are used for your accounts in the Accounts screen.


Only your account's most recent emails are downloaded to your phone. To download more (earlier) email messages, touch **Load more messages** at the bottom of the emails list.

Composing and Sending Email

To compose and send a message:

- 1** While in the **Email** application, press the **Menu Key** and touch **Compose**.
- 2** Enter an address for the message's intended recipient. As you enter text, matching

addresses are offered from your Contacts. Separate multiple addresses with commas.

- 3** Press the **Menu Key** and touch **Add Cc/Bcc** to be able to Cc or Bcc other contacts/email addresses.
- 4** Enter the text of the message.
- 5** Press the **Menu Key** and touch **Add Attachment** to attach the file you want to share with your message.
- 6** Touch the **Send** button. If you're not ready to send the message, touch the **Save as draft** button to save it in a Drafts folder. Touch a draft message in a Drafts folder to resume working on it. Your message will also be saved as a draft if you touch the **Back Key**  before sending it. Touch the **Discard** button

Messaging/email

to abandon and delete a message, including any saved drafts. If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself. If you want to see your sent messages in the Sent folder (or with the Sent label), you will often need to open the Sent folder/label and select Refresh from the options menu.

Working with Account Folders

Each account has Inbox, Outbox, Sent, and Drafts folders. Depending on the features supported by your account's service provider, you may have additional folders.

Adding and Editing Email Accounts

To add an email account

- 1 Press the **Menu Key** and touch **Add account**.
- 2 Select **Email Service Provider**, and enter email account settings.
- 3 Enter a name for the account, confirm how you want your name to appear in outgoing mail, then touch the **Done** button.

To change an account's settings

- 1 Open the Accounts screen.
- 2 Touch and hold the account whose settings you want to change. In the menu that opens, touch **Account settings**.

To delete an email account

- 1 Open the Accounts screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Remove account** in the menu that opens.
- 4 Touch the **OK** button in the dialog box to confirm that you want to delete the account.

Social Networking


Social Networking



With your phone, you can take advantage of Social Networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friend's status updates in real-time.

You can add your Facebook, Twitter and Myspace accounts to your phone. If you don't have an account, you can visit their sites to set it up.

NOTE: Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone



- 1 Touch and hold the home screen. When various Widgets appear, choose **Social+** 

and tap the  **Setting button**. You can also access in a different way, on the home screen, choose **Applications** tap  > **Settings** > **Accounts & sync** > **Social+ settings**.

- 2 Choose the Social Networking client application you want to use from Facebook for LG, Twitter for LG and MySpace for LG.
- 3 Enter your community email address and password, then tap **Log in**.
- 4 Wait while your details are confirmed with your community.
- 5 If you tap your community, you can see its current status.

TIP! If you add a Social Networking widget on your home screen, the widget will show your status when your phone updates from the network. You can also access the social community directly by touching the widget.

Viewing and updating your status


- 1 You can view and update social community content using the **Social+**  widget at any time.
- 2 On the **Social+**  widget, choose the Social Networking service which you want to log in. You will then see your status and contents.
- 3 When you touch the input box, the screen will switch to update your current status with comments or upload photos.

TIP! You can update your status and upload photos simultaneously to Facebook for LG, Twitter for LG and MySpace for LG by selecting the checkbox.

NOTE: This depends on network services.

TIP! You can synchronise your friend's contact to your contact list.

Removing accounts from your phone

- 1 Choose **Applications** tap  **Settings** > **Accounts & sync**
- 2 Choose an account you want to delete > Touch **Remove account**.

Camera

Getting to know the viewfinder

Brightness - this defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar towards “-” to lower the brightness of the image or towards “+” to increase it.

Zoom - zoom in or zoom out. Alternatively you can use the side volume keys.



Video mode - slide this icon down to switch to video mode.

Taking a photo

Gallery - touch to view the last photo you captured. This enables you to access your gallery and view saved photos from within camera mode.


Settings - touch this icon to open the Settings menu. See 'Using the advanced settings'.

Image size – touch to set the size (in pixels) of the picture you take.

Scene mode – choose from **Auto, Portrait, Landscape, Sports, Night** and **Sunset**.

TIP Close all shortcut options to give a clearer viewfinder screen. Touch the centre of the viewfinder once. To display the options, touch the screen again.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone horizontally and point the lens towards the subject you want to photograph.
- 3 In the centre of the viewfinder screen, a focus box starts blinking as it tries to get the subject in focus.
- 4 The focus box turns green when the subject is in focus.
- 5 Press the capture button. You can press the capture button whether the focus box is green or not.
- 6 Press the capture  button.

Once you've taken the photo

Your captured photo appears on the screen.

Share Touch to share your photo using **SmartShare, Bluetooth, Email, Gmail, Messaging, Picasa** or **Social+**.


NOTE: additional charges may apply when MMS messages are downloaded while roaming.

TIP If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.


Set as Touch to use the image as a **Contact icon** or **wallpaper**.

Rename Touch to edit the name of the selected picture.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo is saved.

Camera

 Touch to view a gallery of your saved photos.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.

Change camera settings by scrolling through the list. After selecting the option, touch the **Back** key.

ISO – the ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions. Select from ISO values of **Auto**, **400**, **200** and **100**.

White balance – choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Color effect – choose a color tone for your new photo.

Timer – the self-timer allows you to set a delay after the capture button is pressed. Select **Off**, **3 seconds**, **5 seconds** or **10 seconds**. This is ideal if you want to be in the photo.

Image quality – choose from **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size increases as a result, which means you can store fewer photos in the memory.


Auto review – if you turn **Auto review** on, it automatically shows you the picture you just took.


Shutter sound – select one of four shutter sounds.

Tag location – activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports

geotagging, you can see the pictures displayed on a map.

NOTE: this function is only available when GPS is active.


 – Restore all camera default settings.

 – Touch whenever you want to know how this function operates. This provides you with a quick guide.

TIP When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.

TIP The Settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you see a preview of the image change behind the Settings menu.

Viewing your saved photos

Access your saved photos while in **Camera** mode. Just touch  and touch the screen. You then see **Slideshow** and **Menu**.

TIP Flick left or right to view other photos or videos.



- Touch to see a slideshow.



- Touch to share the contents or delete a photo. Touch **More** for more options.

Details – check information on the content.

Set as – set as a contact icon or wallpaper.

Crop – crop your photo. Move your finger across the screen to select the area.

Rotate – rotate left or right.

Video camera

Getting to know the viewfinder

Brightness - this defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar towards “-” to lower the brightness of the video or towards “+” to increase it.

Zoom - zoom in or zoom out. Alternatively you can use the side volume keys.



Camera mode - slide this icon up to switch to camera mode.

Start recording




Gallery - touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

Settings - touch this icon to open the settings menu. See 'Using the advanced settings'.

Duration – set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Video size – touch to set the size (in pixels) of the video you record.

Shooting a quick video

- 1 Slide the **Camera** mode button down and the icon changes to .
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 REC appears at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Play

Touch to play the video.

Share

Touch to share your video using **SmartShare, Bluetooth, Email, Gmail, Messaging** or **YouTube**.

NOTE: additional charges may apply when MMS messages are downloaded while roaming.

Rename

Touch to edit the name of the selected video.



Touch to shoot another video right away. Your current video is saved.



Touch to delete the video you just made. Confirm by touching **OK**. The viewfinder reappears.



Touch to view a gallery of your saved videos.

Video camera

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

Adjust the video camera setting by scrolling through the list. After selecting the option, touch the **Back** key.


White balance – white balance ensures that the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.


Color effect – choose a color tone to use for your new view.

Video quality – choose from **Super fine**, **Fine** and **Normal**.


Audio recording – choose **Mute** to record a video without sound.

Auto review – auto review automatically shows you the video you just recorded.

 – Restore all video camera default settings.

 – Touch if you want to know how this function operates. This provides you with a quick guide.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery appears on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts playing automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

Multimedia

You can store multimedia files on a memory card to have easy access to all your image and video files.

Touch the **Applications** tab, then select **Gallery**. Open a list of catalogue bars that store all your multimedia files.


NOTE: make sure you install a memory card in the phone to save photos and access all your pictures. Without a memory card, the phone does not display photos or videos from Picasa images, which are in your Picasa album.

View mode

Touch **Gallery**. Folder view is displayed.

Touch any folder and it turns to grid view mode. If you tap a photo, it changes into full view mode.

Timeline view

LG-P698 **Gallery** provides a timeline view of your photos and videos. In grid view mode, drag  to the right and the date you took your photos is displayed, starting with the most recent. If you select a specific date, all the photos you took on that day are grouped.

Using SmartShare

SmartShare provides you with a better way to enjoy multimedia contents with other DLNA (Digital Living Network Alliance) enabled devices.

* Share your media contents with other DLNA devices (DMS)

- 1 In the Home screen, touch the **Applications** tab and select **SmartShare**.

Multimedia

2 Press the **Menu** key and select **Settings**.

3 Touch the Discoverable tickbox to turn on.

4 You can change your device name, icon and select the sharing content types.

*** Let your renderer device (e.g. TV) play multimedia contents from remote content library (e.g. PC)**

1 Touch the top right button to select the device from a list of renderers.

2 Touch the top left button and select a remote content library.

3 You can browse the remote content library.

4 Touch a content thumbnail or press the **Menu** key and select the Play button.

Notice: check that your device is connected to your home network using a Wi-Fi connection in order to use this application.

Notice: some DLNA-enabled devices (e.g. TV) support only DMP features of DLNA and will not appear in the renderer device lists.

Music


Your LG-P698 has a built-in music player that lets you play all your favourite tracks. To access the music player, On the home screen, touch the **Applications tab** and then touch on **Music**.


Playing a song



1 In the Home screen, touch the **Applications** tab and select **Music**.

2 Touch **Songs**.

3 Select the song you want to play.

4 Touch  to pause the song.

5 Touch  to skip to the next song.

- 6 Touch  to go back to the beginning of the song. Touch  twice to return to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. It displays **Play, Add to playlist, Use as phone ringtone, Delete, Details, Share** and **Search** as options.

NOTE: music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a license. to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Transferring files using USB mass storage devices

To transfer files using USB devices

- 1 Connect the LG-P698 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on

Multimedia

your PC, you need to change the settings manually. Choose **Settings > Storage**, then select **Mass storage only**.

- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage contents on your PC and transfer the files.

NOTE: you need to install an SD card first. Without an SD card, you cannot use USB mass storage.

NOTE: if you installed LG Android Platform Driver, you will immediately see a pop-up saying Turn on USB storage.

How to save music/video files on your phone

- 1 Connect your phone to the PC using the USB cable. In the Home screen, touch and drag the status bar down. Select **USB connected > Turn on USB storage > Open folder to view files**.

If you didn't install LG Android Platform Driver on your PC, you must set it up manually. For more information, refer to 'Transferring files using USB mass storage devices'.

- 2 Save music or video files from the PC to the phone's removable storage.
 - You can copy or move files from your PC to your phone's removable storage using a card reader.
 - If there is a video file with a subtitle file (*.srt file with the same name as the video file), place it in the same folder to display subtitles automatically when playing the video file.
 - When downloading music or video files, copyrights must be secured. Note that corrupted files or files with incorrect extensions may damage your phone.

Moving contacts from your old phone to your new phone

Export your contacts as a CSV file from your old phone to your PC using a PC sync program.

- 1 Download PC Suite IV from www.lg.com and install it on the PC. Run the program and connect your Android mobile phone to the PC using the USB cable.
- 2 Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved on your PC.
- 3 If the fields in the imported CSV file are different from those in PC Suite IV, you need to map the fields. After mapping the fields, click OK. The contacts are then added to PC Suite IV.
- 4 If PC Suite IV detects the connection of your LG-P698

phone (using the USB cable), click Sync or Sync contacts to synchronise the contacts saved on your PC with your phone.

Sending data from your phone using Bluetooth

Sending data using Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

- * **Sending pictures:** run the Gallery application, then select **Picture > Menu**. Click **Share**, then select **Bluetooth**. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.
- * **Exporting contacts:** run the Contacts application. Touch the address you want to export to. Press the **Menu** key and select

Multimedia

Share > Bluetooth. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.

* **Sending multi-selected contacts:** Run the Contacts application. To select more than one contact, press the **Menu** key and touch **Share** > tick the contacts you want to share or tick **Select all** option in top of the screen to select all the contacts > **Share > Bluetooth**. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.

* **Connecting to FTP (only FTP server is supported on this handset):** select **Settings > Wireless & networks > Bluetooth Settings**. Select the

Discoverable box so you can search for your phone on other devices. Find the FTP service and connect to the FTP server.

- If you want to search for this phone from other devices, go to **Settings > Wireless & networks > Bluetooth Settings**. Select the **Discoverable** box. The box is cleared after 120 seconds.

Using the radio

Your LG-P698 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: you must attach your headphones to listen to the radio. Insert them into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again. You can store up to 48 channels on your phone.

Tuning in automatically

- 1 In the Home screen, touch the **Applications** tab and select **FM Radio**.
- 2 Press the **Menu** key, then touch **Auto scan**.
- 3 If there are preset channels, you will see a pop-up asking "Reset all channels and start auto scan?". If you choose OK, all the preset channels are deleted and **Auto scan** starts.
- 4 During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: you can also manually tune in to a station using the displayed wheel.

Resetting channels

Press the **Menu** key and choose **Reset channel** to reset the current channel, or choose **Reset all channels** to reset all the channels.

Listening to the radio

Touch **Listen Via** to set the speaker or headset to listen to the radio.


TIP To improve radio reception, extend the headset cord as this also functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Utilities

Setting your alarm

- 1 In the Home screen, touch the **Applications** tab and select **Clock**.
- 2 If you want to add a new alarm, touch  and select **Add alarm**.
- 3 Set the time, to turn on the alarm. After you set the time, the LG-P698 lets you know how much time is left before the alarm will sound.
- 4 Set **Repeat**, **Ringtone** or **Vibrate**, then add a label to name the alarm. Touch **Done**.

NOTE: to change alarm settings on alarm list screen, press the **Menu** key and select **Settings**. You can adjust the below options: **Alarm in silent mode**, **Alarm volume**, **Snooze duration** and **Side button behavior**.

Using your calculator

- 1 In the Home screen, touch the **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, press the **Menu** key, touch the **Advanced** panel, then choose sin, cos, tan, log and so on.

Adding an event to your calendar

- 1 In the Home screen, touch the **Applications** tab and select **Calendar**.
- 2 To check the event, touch the date. Touch and hold if you want to add a new event. Touch **New event**.

- 3 Touch **What** then enter the event name. Check the date and enter the time you want your event to start and finish.
- 4 Also, touch **Where** then enter the location.
- 5 If you want to add a note to your event, touch **Description** and enter the details.
- 6 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 7 Touch **Done** to save the event in the calendar. A coloured square in the calendar marks all days that have saved events. An alarm sounds at the event start time to help you stay organised.

Changing your calendar view

- 1 In the Home screen, touch the **Applications** tab and select **Calendar**. Press the **Menu** key.
- 2 Select the calendar view for a particular day, week or month.

Polaris Viewer

Polaris Viewer is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Managing files

Polaris Viewer provides mobile users with convenient file management features, including copying, cutting and pasting, and deleting files and folders right on the device.

Utilities




Viewing files


Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Viewer, the objects and layout remain the same as in their original documents.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 In the Home screen, touch the **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: touch  to access your album. You can listen to the saved recording.

Notice: the available recording time may differ from the real time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording is added to the message, then you write and send the message normally.


The Web


Browser


Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.


Using the web toolbar


 Touch to go backwards one page.

 Touch to go forwards one page to the one you connected to after the current page. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.

 Touch to show all your open windows.

 Touch to add new window.


 Touch to change web browser settings.

 Add/show bookmark and show **Most visited**, **Read it later** and **History**.


Using options


Press the **Menu** key to view options.

 **Read it later** – add the current web page as a bookmark.

 **Add RSS feed** – add the current web page to the RSS feed.

 **Share page** – allows you to share the web page with others.

 **Find on page** – allows you to find letters or words on the current web page.

 **Select text** – allows you to copy any text from the web page.

The Web



More

- **Home page:** go to the Home page.
- **Set Home page:** set the current web page as your Home page.
- **Add shortcut to Home:** add the shortcut of the current web page to the Home screen.
- **Page info:** displays the web page information.
- **Downloads:** displays your download history.

TIP To return to the previous web page, press the **Back** key.

Settings

In the Home screen, touch the **Applications** tab then scroll to and touch **Settings**.

Dual SIM settings

You can configure Dual SIM settings.

When two SIM cards are inserted on your phone, the SIM cards information are displayed. Touch to tick. This turns on the selected SIM to active.

If you try to turn off SIM1 when SIM2 is off, SIM2 should be turned on by itself. (it is not allowed to turn off both SIM cards simultaneously.)

SIM color theme – SIM color theme you select is applied to indicator RSSI & SIM icon.

Data enabled – touch to tick. This enable data access over the mobile network.

Default data network – you can change the default data network.

All mobile packet services (Web, MMS, Email, etc) will use SIM selected on this value.

When only one SIM card is inserted, the default data network is set as the inserted SIM and it is not allowed to change.

NOTE: When airplane mode is on, dual SIM settings is disabled.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

Airplane mode – after switching to airplane mode, all wireless connections are disabled.

Wi-Fi – touch to tick. This turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The

Settings

advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

TIP How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P698 into the router.

You can find the MAC address in the following user interface: Touch **Application > Settings > Wireless & networks > Wi-Fi settings**, and press the **Menu** key. Then select **Advanced > MAC Address**.

Bluetooth – touch to tick. This turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – set device name & discoverable mode, scan for other devices. Or, check a list of Bluetooth devices that you've

previously configured and those detected when the phone last scanned for Bluetooth devices.

Tethering & portable hotspot – you can configure the USB tethering and portable Wi-Fi hotspot settings.

VPN settings – displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – set options for data roaming, network mode & operators, access point names (APNs) and so on.

NOTE:

- By default ,the network mode for Slot 1 is set as WCDMA mode and Slot 2 network mode is set as GSM mode so slot 2 network mode can't be changed to WCDMA mode directly.

- If slot 2 network mode needs to be changed to WCDMA mode, then Slot 1 network mode should have been changed to GSM only mode before changing the network mode to WCDMA in Slot 2.

Call settings

You can configure the call settings of SIM card you inserted.

< Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – allows you to select your carrier's voicemail service.

Voicemail settings – if you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Call forwarding – choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Call barring – select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – view the charges applied to your calls. (This service is network dependent; some operators do not support this function)

Call duration – view the duration of calls including all calls, dialled calls, received calls and last call.

Settings

Additional settings – this lets you change the following settings:

Caller ID: choose whether to display your number on an outgoing call.

Call waiting: if call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).

< Common >

Excuse messages – when you want to reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Call reject – allows you to set the call reject function. Choose from **Off**, **Reject on list** or **Reject all calls**.

Sound

< General >

Silent mode – allows you to silence all sounds (including call and notification ringtones) except the audio from music and videos and any alarms you have set. You must silence media and alarms in their own applications.

Vibrate – allows you to set your phone to vibrate when you receive an incoming call.

Volume – allows you to set the volume for ringtones, media and alarms. If you untick the option to use the incoming call volume for notifications, you can set the volume for incoming calls and notifications separately.

< Incoming calls >

SIM 1/ SIM 2 Phone ringtone

– Allows you to set your default incoming call ringtone of SIM card you inserted.

< Notifications >

Notification ringtone – allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – allows you to set the phone to play tones when using the dialpad to dial numbers.

Audible selection – allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sounds – allows you to set your phone to play a sound when locking and unlocking the screen.

Haptic feedback – allows you to set your phone to vibrate briefly when pressing the soft keys on certain UI Interactions.

Display

Brightness – adjust the screen brightness.

Auto-rotate screen – set to switch orientation automatically when you rotate the phone.

Animation – set to display an animation.

Screen timeout – set the time for screen timeout.

Location & security

Use wireless networks – if you select **Use wireless networks**, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – if you select **Use GPS satellites**, your phone determines your location to street level accuracy.

Settings

Set up screen lock – set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **password** instead of a **pattern** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

Set up SIM card lock – set up SIM card lock or change the SIM PIN.

Visible passwords – select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – add one or more administrators.

Use secure credentials – allows you to access secure certificates.

Install from SD card – choose to install encrypted certificates from your SD card.

Set password – set or change the credential storage password.

Clear storage – clear credentials for all content and reset password.

Applications

You can manage applications and set up quick launch shortcuts.

Unknown sources – default setting to install non-Market applications.

Manage applications – manage and remove installed applications.

Running services – check services that are currently running.

Storage use – view storage used by applications.

Battery usage – see what has been using the battery.

Development – set options for application development.

Accounts & sync

< General sync settings >

Background data – permits applications to synchronise data in the background, whether or not you are actively working in them. Unticking this setting can save battery power and lowers (but does not eliminate) data usage.

Auto-sync – permits applications to synchronise, send and receive data to their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to your phone.

If you touch an account in this screen, its account screen opens.

Privacy

If you select Factory data reset, it will erase all of your personal data from the internal phone storage, including information about

your Google account, any other accounts, your system/application data and settings as well as any downloaded applications and DRM license.

Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you are prompted to re-enter the same information that you did when you first started Android.

Storage

< USB connection mode >

Mass storage only – your phone can be used as a mass storage device if you have a memory card inserted. You can set **Mass storage only** as a default setting of the USB connection mode.

Settings

< SD card >

Check total available SD card space. Touch **Unmount SD Card** for safe removal. **Erase SD Card** if you want to delete all data from the SD card.

< Internal storage >

Checks the available space.

Language & keyboard

Set local language and region as well as keyboard settings.

Voice input & output

< Voice input >

Voice recognizer settings – use the **Voice recognizer settings** to configure the Android voice input feature.

- **Language:** opens a screen where you can set the language you use speech to enter text.

- **SafeSearch:** opens a dialog where you can set whether you want the Google SafeSearch filter to block some results.

- **Block offensive words:** when unticked, Google voice recognition will recognise and transcribe words many people consider offensive, when you use speech to enter text. When ticked, Google voice recognition replaces those words in transcriptions with a placeholder comprised of hash symbols (#).

< Voice output >

Text-to-speech settings – use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can use this feature.

NOTE: if you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

- **Listen to an example:** plays a brief sample of the speech synthesiser, using your current settings.
- **Always use my settings:** tick to use the settings on this screen in place of speech synthesiser settings available in other applications.
- **Default Engine:** opens a dialog where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** if your phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.
- **Speech rate:** opens a dialog where you can select how quickly you want the synthesiser to speak.
- **Language:** opens a dialog where you can select the language of the text you want the synthesiser to read. This is particularly useful in combination with **Always use my settings** to ensure that text is spoken correctly in a variety of applications.
- **Pico TTS:** configure the **Pico TTS settings**.

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: requires additional plug-ins.

Settings

Date & time

Use **Date & time** settings to set your preference for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About Phone



View legal information and check phone status and software version.

Wi-Fi


With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).

Enjoy wireless Internet using Wi-Fi, without extra charges.

Turning on Wi-Fi

From the Home screen, open the notification drawer and touch . Or touch **Applications** tab > **Settings** > **Wireless & networks**, then tap on **Wi-Fi** .

Connecting to Wi-Fi

Choose the Wi-Fi network you want to connect to. If you see , you need to enter a password to connect.

NOTE:

- if you are outside the Wi-Fi coverage area and choose 3G connection, additional charges may apply.
- If your phone goes into sleep mode when connected to Wi-Fi, the Wi-Fi connection is automatically disabled.
- In this case, if your phone has access to 3G data, it may connect to the 3G network




automatically and additional charges may apply.

- The LG-P698 supports WEP, WPA/WPA2-PSK and 802.1x EAP security. If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key into the pop-up window. If encryption is not set, this pop-up window is not shown. Obtain the key from your Wi-Fi service provider or network administrator.

Sharing your phone's data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with up to five devices at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

Icon	Description
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

NOTE: additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Settings

USB tethering & portable Wi-Fi hotspot settings

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 3 Choose options that you want to adjust.

USB tethering – tick to share your phone's mobile network data connection with your computer via a USB connection.

Portable Wi-Fi hotspot – tick to share your phone's mobile network data connection as Wi-Fi sharing.

Help – opens a dialog with information about USB tethering and portable Wi-Fi hotspots as well as information on where to learn more.


To share your phone's data connection via USB

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.


USB tethering and data sharing

You can't share your phone's data connection and microSD card via USB at the same time. If you are using your USB connection to

make your microSD card available to your computer, you must disconnect it first.

- 1 Use the USB cable that came with your phone to connect your phone to your computer.
- 2 In the Home screen, touch the **Applications** tab and select **Settings**.
- 3 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 4 Tick **USB tethering**.
 - The phone starts sharing its mobile network data connection with your computer via the USB connection. An ongoing notification  is added to the status bar and notifications drawer.
- 5 Untick **USB tethering** to stop sharing your data connection. Or just disconnect the USB cable.

To share your phone's data connection as a portable Wi-Fi hotspot

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 3 Tick **Portable Wi-Fi hotspot**.
 - After a moment, the phone starts broadcasting its Wi-Fi network name (SSID) so you can connect to it with up to five computers or other devices. An ongoing notification  is added to the status bar and notifications drawer.
 - When **Portable Wi-Fi hotspot** is ticked, you can change its network name or secure it.
- 4 Untick **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

Settings

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
 - 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
 - 3 Ensure **Portable Wi-Fi hotspot** is ticked.
 - 4 Touch **Portable Wi-Fi hotspot settings**.
 - 5 Touch **Configure Wi-Fi hotspot**.
- The **Configure Wi-Fi hotspot** dialog opens.
 - You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security, with a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. Or touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

ATTENTION!

If you set the security option as **Open**, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

6 Touch **Save**.

Software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable

or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:

Settings > About phone > Software update > Check now for update.

You can also delay the update by 1 hour, 4 hours, 8 hours or 24 hours. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: This feature is dependent on the network service provider, region or countries.

DivX Mobile **DIVX**

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the

DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to 320x240

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Notice:

Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred license terms, disclaimers and notices are available for download with the source code.

Accessories

These accessories are available for use with the LG-P698.
(Items described below may be optional.)

Travel adapter



Data cable

Connect your LG-P698 and PC.



Battery



User Guide

Learn more about your LG-P698.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P698

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 488-07 V1.3.1 / EN 301 489-17 V2.1.1 /

EN 301 489-19 V1.2.1 / EN 301 489-24 V1.5.1

EN 300 328 V1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 (AC:2008) EN62209-1:2006 / EN62209-2:2010

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 / EN 301 908-2 V4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

22. Aug. 2011

LG Electronics Logistics and Services B.V.
Velleuzoom 15, 1327 AE Almere, The Netherlands

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forgot the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.

Message	Possible causes	Possible corrective measures
Calls not available	<p>Dialling error</p> <p>New SIM card inserted.</p> <p>Pre-paid charge limit reached.</p>	<p>New network not authorised.</p> <p>Check for new restrictions.</p> <p>Contact service provider or reset limit with PIN2.</p>
Phone cannot be switched on	<p>On/Off key pressed too briefly.</p> <p>Battery is not charged.</p> <p>Battery contacts are dirty.</p>	<p>Press the On/Off key down for at least two seconds.</p> <p>Charge battery. Check charging indicator on the display.</p> <p>Clean the battery contacts.</p>
Charging error	<p>Battery is not charged.</p> <p>Outside temperature is too hot or cold.</p> <p>Contact problem</p> <p>No voltage</p> <p>Charger defective</p> <p>Wrong charger</p> <p>Battery defective</p>	<p>Charge battery.</p> <p>Make sure phone is charging at a normal temperature.</p> <p>Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.</p> <p>Plug the charger into a different socket.</p> <p>If the charger does not warm up, replace it.</p> <p>Only use original LG accessories.</p> <p>Replace battery.</p>

Troubleshooting

Message	Possible causes	Possible corrective measures
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.

Message	Possible causes	Possible corrective measures
Phone locked and does not function.	Restarting the phone	<ol style="list-style-type: none">1. Turn the phone off.2. Remove the battery cover.3. Install the battery.4. Close the cover.5. Turn the phone on again.

