

# KG130 | USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

CE 0168



## Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately.
3. Disposing of your old appliance correctly is better for the environment and personal health.
4. For more information about disposal of your old appliance, please contact your local council, waste disposal service or the shop where you purchased the product.

P/N: MMBB0262801(1.1) G

## Turning Your Phone On and Off

1. Hold down the [END] key until the phone switches on.
2. To switch the phone off, hold down the [END] key until the power-off image displays.

## Making a Call

1. Enter a phone number including the area code.
2. Press the [SEND] key to call the number.
3. When finished, press the [END] key.

## Making an international call

1. Press and hold the [+] key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [send] key to call the number.

## Answering a Call

1. When the phone rings and the phone icon flashes on the screen, press the [SEND] key or the left soft key to answer.
2. End the call by pressing the [END] key.

Note

- After the call ends, the phone will go back to standby mode.

## How to set the tone

### Ringtone

1. Press the OK key and select [Profiles] using the up/down navigation keys.
2. Choose a profile and then select [Personalise] and choose the Ring tones menu.
3. Press the left soft key Select and then you can set the desired ringtone.

Tip

- If you want to change your ringer to vibrate, select Vibrate only mode or press and hold the left navigation key.

### Ring/Keypad/Message/Call alert tones and volumes

You can select Ring/Keypad/Message/Call alert tones and volumes.

You can change the sound that will occur when a key is pressed, or the volume level. [Menu - Profiles - Personalise]

## Installing the SIM Card and Charging the Battery

### Installing the SIM Card

 
When you subscribe to a mobile network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

- The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

1. Open battery cover
2. Remove battery
3. Insert your SIM
4. Replace battery until it clicks back into place and close the battery cover.
5. Charge your battery

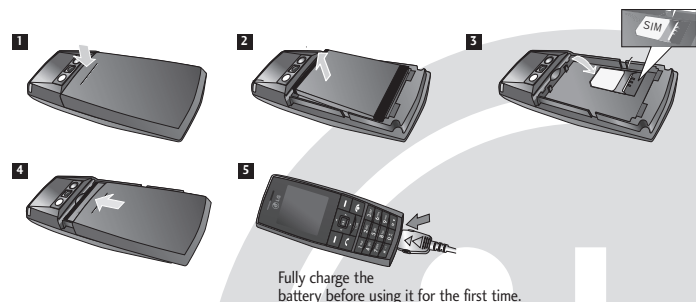


Fully charge the battery before using it for the first time.

## Selecting functions and options

 Your phone offers a set of functions that allow you to customise it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys.

The label on the bottom of the display screen immediately above the soft keys indicates their current function.

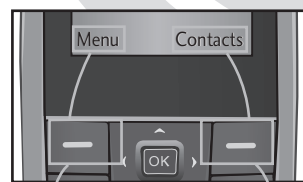

Press the left soft key to access the available menu.


Press the right soft key to access the available Contacts.

## Menu tree

 - The menu in this phone can be displayed in 2 ways. One is by grid type or secondly in list format. Please note that menu number options are different in each view. The default setting on the phone is set to show the menu in grid type, so therefore all the menu number selections throughout the manual are set according to that setting.

<b>1. Browser</b> 1.1 Home 1.2 Bookmarks 1.3 Go to URL 1.4 History 1.5 Saved pages 1.6 Settings 1.7 Information	<b>4. Multimedia</b> 4.1 Camera 4.2 Voice recorder	<b>8. Contacts</b> 8.1 Search 8.2 New contact 8.3 Speed dials 8.4 Groups 8.5 Copy all 8.6 Delete all 8.7 Settings 8.8 Information
<b>2. Call history</b> 2.1 All calls 2.2 Missed calls 2.3 Dialed calls 2.4 Received calls 2.5 Call duration 2.6 Call costs 2.7 Data information	<b>5. Messaging</b> 5.1 New message 5.2 Inbox 5.3 Drafts 5.4 Outbox 5.5 Sent 5.6 Listen voicemail 5.7 Info messages 5.8 Templates 5.9 Settings	<b>9. Settings</b> 9.1 Time & Date 9.2 Languages 9.3 Display 9.4 Network 9.5 Call 9.6 Security 9.7 Flight mode 9.8 Power save 9.9 Reset 9.0 Memory status
<b>3. Tools</b> 3.1 Lost Mobile Track 3.2 Alarm clock 3.3 Calendar 3.4 Calculator 3.5 Memo 3.6 Stopwatch 3.7 Unit converter 3.8 World clock 3.9 SIM Service	<b>6. My files</b> 6.1 Images 6.2 Sounds 6.3 Others 6.4 Games	<b>7. Profiles</b> 7.1 General 7.2 Silent 7.3 Vibrate only 7.4 Outdoor 7.5 Headset

## Phone Components

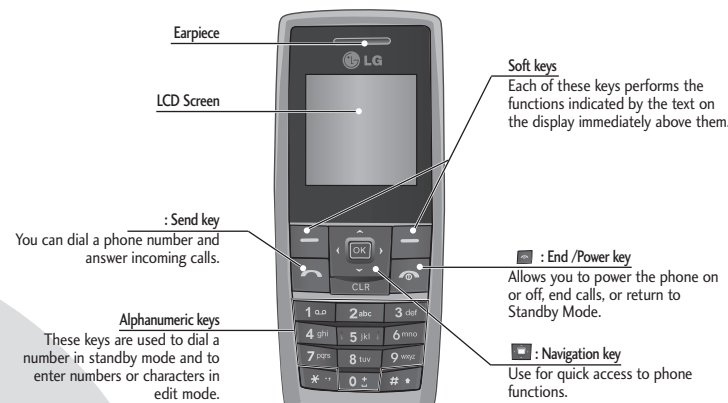

: Send key  
You can dial a phone number and answer incoming calls.

Alphanumeric keys  
These keys are used to dial a number in standby mode and to enter numbers or characters in edit mode.

Soft keys  
Each of these keys performs the functions indicated by the text on the display immediately above them.

: End /Power key  
Allows you to power the phone on or off, end calls, or return to Standby Mode.

: Navigation key  
Use for quick access to phone functions.

## Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

### T9 Mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

### ABC Mode

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

 
### 123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

### Symbol Mode

This mode allows you to enter special characters by pressing [key] ke

## Display Information

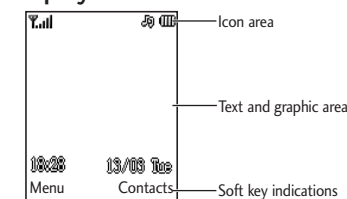

### On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

[Signal strength icon]	Tells you the strength of the network signal.
[GPRS icon]	You can use GPRS service.
[Roaming icon]	Shows that you are using a roaming service.
[Line 1/2 icon]	Line 1/2 is in use for outgoing calls.
[Alarm icon]	The alarm has been set and is on.
[Battery icon]	Tells you the status of the battery.
[Message icon]	You have received a text message.
[Voicemail icon]	You have received a voicemail.
[Push message icon]	You have received a push message.
[Schedule icon]	You can view your schedule.
[Vibrate only icon]	Vibrate only menu in profile.
[General menu icon]	General menu in profile.
[Outdoor menu icon]	Outdoor menu in profile.
[Silent menu icon]	Silent menu in profile.
[Headset menu icon]	Headset menu in profile.
[All calls divert icon]	All calls divert has been set.

## Lost Mobile Track (LMT)

1. The LMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.
2. The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the message is send to your pre-defined number.
3. Setting the LMT ON [Menu 3.1]
  - › A List of tools are displayed.
  - › Select Lost Mobile track
  - › Enter Default LMT code.
  - › Select Set LMT
  - › Select ON, press OK

Note

- In case you want to use your phone with some other SIM card, make sure to set the LMT feature OFF.
- It is recommended to enter the Number for LMT with the country code ( e.g. for INDIA +91 followed by mobile number)
- Default LMT code is "0000".

## Quick feature reference

This section provides brief explanations of features on your phone.

### Browser Menu 1

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

### Call history Menu 2

You can check the record of missed, received, and dialed calls only if the network supports Caller Line Identification (CLI) within the service area. The number and name/photo (if available) are displayed together with the date and time at which the call was made. You can also view call durations.

### Tools Menu 3

- Lost Mobile Track** The LMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.
- Alarm clock** You can set up to 5 alarm clocks to go off at a specified time.
- Calendar** When you enter this menu, a calendar appears.
- Calculator** The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.
- Memo** You can register your own memos here.

### Tools Menu 3 (Continued)

- Stopwatch** This option allows you to use the function of a stopwatch.
- Unit converter** This converts any measurement into a unit you want.
- World clock** You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, by selecting your desired city through "Options" menu.
- SIM Service** Your service provider can offer special applications through the SIM card.
- Multimedia Menu 4**
- Camera** This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent via a Multimedia message.
  - › Press the left soft key [OK] and the screen will now become the viewfinder.
  - › Focus on the subject to capture the image, and then press the [key] key.
  - › If you want to save it, press the left soft key [Options] and select **Album**.
- Voice recorder** You can record a voice memo in the Voice recorder menu.

## Messaging Menu 5

This menu includes functions related to SMS (Short Message Services) and MMS (Multimedia Message Service).

<b>New message</b>	Create and send a text or multimedia message to one or more recipients.
<b>Inbox</b>	You will be alerted when you have received a message.
<b>Drafts</b>	This menu shows the preset message list.
<b>Outbox</b>	This menu allows to view the message which is about to be sent or has failed to be sent.
<b>Sent</b>	This menu allows you to view the messages which have already been sent, including time and content.
<b>Listen voicemail</b>	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
<b>Info messages</b>	Info service messages are text messages delivered by the network to your handset.
<b>Templates</b>	There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
<b>Settings</b>	This menu allows you to set features of your network service provider.

## Settings Menu 9 (Continued)

	› <b>Change codes:</b> PIN is an abbreviation of Personal Identification Number to prevent use by unathorised persons. You can change the access codes: Security code, PIN code, PIN2 code.
<b>Flight mode</b>	If set to On, the connection between the phone and network service will be cut off.
<b>Power save</b>	This function saves battery power by keeping the backlight brightness to max 40%.
<b>Reset</b>	You can initialise all factory defaults. You will need the Security code to activate this function.
<b>Memory status</b>	You can check the capacity of free memory.

## Guidelines for safe and efficient use (Continued)

### In aircraft

Wireless devices can cause interference in aircraft.

› Turn off your mobile phone before boarding any aircraft.

### Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## My files Menu 6

You can set the following menus for your convenience and preferences.

<b>Images</b>	Shows the list of image files.
<b>Sounds</b>	Shows the list of sound files.
<b>Others</b>	Any type of file can be stored here. This folder is mainly used for transporting files from one PC to another.
<b>Games</b>	In this menu pre-installed games are available.

## Profiles Menu 7

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

## Guidelines for safe and efficient use

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual.

### Warning

- › For your safety, use ONLY specified ORIGINAL batteries and chargers.
- › Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- › Batteries should be disposed of in accordance with relevant legislation.
- › Not to charge a handset near flammable material as the handset can get hot and smoulder the Material, hence possible house fire.

### Product care and maintenance

**WARNING!** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- › Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- › The unit should be kept away from heat sources such as radiators or cookers.
- › Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- › Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

## Guidelines for safe and efficient use (Continued)

### Battery information and care

- › You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- › Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- › Do not disassemble or short-circuit the battery pack.
- › Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- › Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- › Risk of explosion if battery is replaced by an incorrect type.
- › Dispose of used batteries according to the manufacturer's instructions.

## Contacts Menu 8

<b>Search</b>	You can Search for contacts in Phonebook. <i>Note: Instant searching is available by inputting the initial letter of the name you want to search.</i>
<b>New contact</b>	You can add phonebook entries by using this menu.
<b>Speed dials</b>	Assign contacts to any of the keys between <b>1</b> and <b>9</b> .
<b>Groups</b>	You can add members to each group, with up to a maximum of 7 groups in total.
<b>Copy all</b>	You can copy all entries from the SIM card memory to Phone memory and also from Phone memory to SIM card memory.
<b>Delete all</b>	You can delete all entries from the SIM card memory or Phone memory.
<b>Settings</b>	You can set the Contact display option.
<b>Information</b>	› <b>Service dial numbers:</b> Access the list of service numbers assigned by your service provider. › <b>Own numbers:</b> You can save and check your own numbers in the SIM card. › <b>My Business card:</b> This option allows you to create your own business card featuring your name, mobile phone number and so on.

## Guidelines for safe and efficient use (Continued)

### Fuse replacement

Always replace a blown fuse with a fuse of the same type and size. Never use a fuse of a higher rating.

### Electronic devices

All mobile phones may get interference, which could affect performance.

› Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

## Guidelines for safe and efficient use (Continued)

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KG130 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- › The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- › While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- › The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- › The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.514 W/kg (10g) and when worn on the body is 0.426 W/kg (10g).
- › SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

## Settings Menu 9

<b>Time &amp; Date</b>	You can set functions relating to the date and time.
<b>Languages</b>	You can change the language for the display texts in your phone.
<b>Display</b>	You can change the settings for the phone display.
<b>Network</b>	You can select a network which will be registered as Automatic, Manual or Preferred. Usually, the network selection is set to Automatic.
<b>Call</b>	You can set the menu relevant to a call by pressing <b>☐</b> [Select] in the Settings menu.  › <b>Auto key lock:</b> This menu allows to set the time of Auto key lock.  › <b>Phone lock:</b> You can use a security code to avoid unauthorised use of the phone.  › <b>Call barring:</b> The Call barring service prevents your phone from making or receiving a certain category of calls. This function requires the call barring password.  › <b>Fixed dial number (SIM dependent):</b> You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling Fixed dial number.

## Guidelines for safe and efficient use (Continued)

### Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- › Do not use a hand-held phone while driving.
- › Use a hands-free kit, if available.
- › Pull off the road and park before making or answering a call if driving conditions so require.

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

## Technical Data

### General

- › **Product name :** KG130
- › **System :** GSM 900 / DCS 1800

### Ambient Temperatures

- › **Max. :** +55°C, Charging (+45°C)
- › **Min. :** -10°C

### Battery Specification

- › **Type :** 830 mAh, Li-ion
- › **Talk Time\* :** Up to 3 hrs: GSM Tx Level 3
- › **Standby Time\* :** Up to 200 hrs: Paging Period 9, RSSI - 85dBm

### Note

› *Variation in operation time may occur depending on SIM card, network condition, usage style, usage setting and environment.*

Declaration of Conformity		LG Electronics	
<b>Suppliers Details</b>			
Name	LG Electronics Inc		
Address	: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721		
<b>Product Details</b>			
Product Name	GSM 900 / DCS 1800 Dual Band Terminal Equipment		
Model Name	KG 130		
Trade Name	LG		
<b>Applicable Standards Details</b>			
R&TE Directive 1999/5/EC			
EN 301 489-01 V1.6.1 (09-2005) EN 301 489-07 V1.2.1 (08-2002) EN 60950-1 : 2001 EN 50360 : 2001 EN 50361 : 2001 EN 301 511 V9.0.2 (03-2003)			
<b>Supplementary Information</b>			
The conformity to above standards is verified by BABT.			
<b>Declaration</b>			
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date	
	Jin Seop, Kim / Director	12.Mar.2007	
LG Electronics Logistics and Service B.V. Vinkeweg15, 1327 AE Almere, The Netherlands Tel : +31 - 30-547-8940, e-mail : seekim @ lge.com	Signature of representative		