



ENGLISH

**General Inquiries**

<LG Customer Information Centre>

**0844-847-5847 or +44-844-847-5847**

\* Make sure the number is correct before making a call.

User Guide

**LG-T300**



**CE0168**

P/N : MMBB0390502 (1.0) ■

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016849

# LG-T300 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T300 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using

standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.19 W/kg (10g) and when worn on the body is 1.50 W/kg (10g).

- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance



**WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

## **Efficient phone operation**

### **Electronic devices**

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

## Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Installing the SIM card and the handset battery

## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

### Important!

 
The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.


## Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

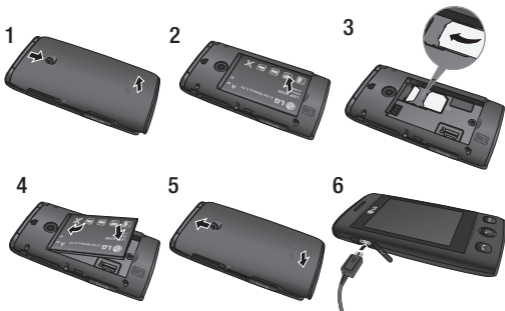

# Phone Components

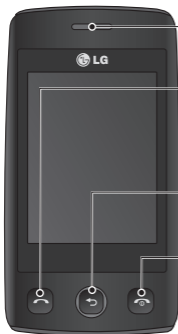 

**Earpiece**

**Call key**

Dials a phone number and answers incoming calls.

**Clear key**

Go back to a previous screen.

**End key**



**Volume keys**

- **When the screen is at the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate Silent mode.

**Micro SD memory card socket**

The LG-T300 will support up to a 4GB memory card.

**Power/Lock key**

- Short press to turn on/off the screen.
- Long press for power on/off.



**Handsfree or Stereo earphone connector**

# Using your touch screen

## Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T300 is not in use, it will return to the lock screen.



## Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.

## Control the touch screen

The controls on the LG-T300 touch screen change dynamically depending on the task you are carrying out.

## Opening Applications

To open any application, simply touch its icon.




# Your home screen

You can drag and click what you need right away in all home screen types.


## Active



**Widget home screen** - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

## Active



 
**Speed dial home screen** - When you touch , the speed dial list appears. You can call, send a message, edit the contact or remove speed dial directly in this home screen.

# Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen.

To swap between the menu screens just wipe quickly over the display from left to right, or right to left.


- 1 Call screen- Send the message or make a call in this menu

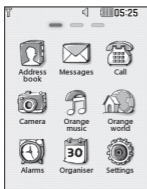

 - 2 Multimedia screen- Send e-mail or enjoy games.



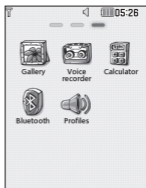


- 3 Application screen- Use applications or set profiles in this menu.



# Calls


## Making a Call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

**TIP!** To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.



## Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

## Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
  - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose all calls, specific contacts or groups or calls from unregistered numbers (i.e. not in your contacts).

- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Answer mode**  
**Press send key:** Allows you to only answer an incoming call by pressing the  key.  
**Press any key:** Allows you to answer an incoming call by pressing any key, except the  key.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

## Contacts

### Searching for a contact

- 1 Touch **Address Book**.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

### Adding a new contact

- 1 Touch Address Book and touch Add.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.

- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

## Changing your contact settings

You can adapt your contact settings so that your **Address Book** suits your own preferences.

Touch **Options key**  and touch **Settings**.

- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to your handset, or vice versa. You can do this one contact at a time, or all at once.


- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.

- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

## Messaging

Your LG-T300 combines SMS and MMS into one intuitive and easy-to-use menu.


## Sending a message


- 1 Touch **Messages** in menu. And touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.




**WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

## Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to  change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.


## Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T300 will convert your handwriting into your message.

## Setting up your email

Touch **E-mail** in Multimedia screen.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

## Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

**Retrieval mode** - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read receipt** - Choose to request and/or allow a reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.

**Unsupported attachment** - Choose whether the unsupported attachment is restricted or not.


**Delivery time** - Choose how long to wait before a message is delivered.

**MMS centre** - Choose one from the list or add a new message centre.

## Camera

### Taking a quick photo

1 Touch **Camera** menu.

2 When the camera has focused on your subject, touch the  on the right-centre of the screen to take a photo.

**TIP:** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

### After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

**Send** - Touch to send the photo as a message, email or via Bluetooth.

**Use as** - Touch to set a screen image (Homescreen wallpaper, Lockscreen wallpaper, Contacts

image, Incoming call image, Outgoing call image, Startup image and Shut down image).

**Rename** - Touch to rename the photo.

**Edit** - Touch to edit the photo.



Touch to delete the image.




Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

**Size** - Change the size of the photo to save memory

**White balance** - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Colour effect** - Choose a color tone for your new photo.

**Continuous shot** - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

**Self-timer** - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

**Night mode** - Useful to user in dark places.

**Image quality** - Choose between **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

**Select storage** - Choose whether to save your photos to the Handset memory or to the External memory.

**Hide icons** - Choose the camera setting icons to hide manually or automatically.

**Show captured image** - Choose On to check the picture you took right away.

**Shutter sound** - Select one of the three shutter sounds.





**Grid screen** - Choose between **Off**, **Simple cross**, or **Trisection**.

**Reset settings** - Restore all camera default settings.

## Video camera

### Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen.

### After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides .


 Touch to play the video.


The following options are available.


Touch  .

**Send** - Touch to send the video as a **Message**, **Email** or via **Bluetooth**.


**Rename** - Touch to rename the video.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting by touching this menu. After selecting the option, touch the **OK** button.

**Colour Effect** - Choose a color tone to use for your new view.

**White balance** - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

**Duration** - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

**Select storage** - Choose whether to save your videos to the Handset memory or to the External memory.

**Audio recording** - Choose Mute to record a video without sound.

**Hide icons** - Select whether to hide the icons in the camera menu automatically or manually.

**Reset settings** - Reset all the video camera settings.

## Music

To access the music player, touch **Music**. From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**Music Store** - Browse and find musics though online service.

**All tracks** - Contains the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.

- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds and videos. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory. By touching **Media album**, you can open a list of the folders that store all your multimedia files.

## Games and Applications

You can download new games and applications to your phone to keep you enjoy.


## FM Radio

Your LG LG-T300 has an FM radio feature so you can tune into your favourite stations to listen on the move.

## Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

### To auto tune:

- 1 Scroll and touch **FM radio**, and touch .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

**NOTE:** You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

## Organiser

### Adding an event to your calendar

- 1 Touch **Organiser** and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

### Setting your tasks

- 1 Touch **Tasks**.
- 2 Touch **Add**, then you can set and save your task in this menu.

## Using your date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## The web

**Orange World** gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

### Accessing the web

- 1 Touch the **Orange World**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

## Settings

### Personalising your profiles

You can quickly change your profile by touching the Application screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

### Changing your phone settings

Use the freedom of adapting the LG-T300 to your own preferences.

From the home screen, select **Settings** then scroll to **Device settings**.

### Using memory manager

From the home screen select **Settings** then scroll to **Device settings**. Select **Memory info**.

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

## Sending and receiving your files using Bluetooth


### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T300 will not automatically search for other **Bluetooth** devices. If not, your LG-T300 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to view the file. Files will usually be saved to the appropriate folder in **Media album**.

### Changing your Bluetooth settings:

Touch **Bluetooth** in the Application screen. And select  and choose **Settings**.

## Pairing with another Bluetooth device

By pairing your LG-T300 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T300 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

**Charger**



**Battery**



## NOTE

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

# Technical data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

### Declaration of Conformity LG Electronics

#### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

#### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T300

Trade Name

LG

# CE 0168

#### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2  
EN 300 328 v1.7.1  
EN 60950-1:2001  
EN 50360:2001 / EN62209-1:2006  
EN 301 511 v9.0.2

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

#### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

23.June. 2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

  
Signature of representative

# LIMITED WARRANTY STATEMENT

## ***1. WHAT THIS WARRANTY COVERS :***

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.
- (2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.
- (3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.
- (4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG. or their designated service agent the consumer must provide information to reasonably prove the date of purchase.
- (6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.
- (7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

## ***2. WHAT THIS WARRANTY DOES NOT COVER :***

- (1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number or IMEI number removed or made illegible.

- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Suspected defects caused by a failure of the cellular network.

### **3. CONDITIONS:**

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.



**LG Electronics Inc.**