

Model	VR5906LM		
Language	English		
Page	37	Color(cover/body)	1/1
Material	Weight 80g	Size(W*H)	190×260(mm)
Date	2012.7.12	Designer	Ma Yongli
Part No	MFL67086043	Description	Owners Manual

### Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
①					
②					
③					
④					
⑤					
⑥					
⑦					
⑧					
⑨					



# OWNER'S MANUAL

# CLEANING ROBOT

Before using, please carefully read the Safety Precautions pages to allow for safe operation of the product. After reading the operation manual, please keep it in an easily accessible location.

\*M : Ultra microfiber mop (option)


VR5906LM




MFL67086043

[www.lg.com](http://www.lg.com)


# FEATURES

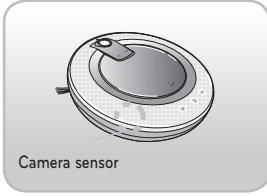


Images of the floor are obtained from the sensors of the lower camera, and through this, the location of HOM-BOT will be confirmed, therefore, elaborate cleaning can be accomplished for every part of the room.

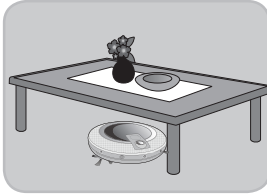


As the height of the HOM-BOT is low (90mm), even the underside of a framed bed or furniture can be cleaned.

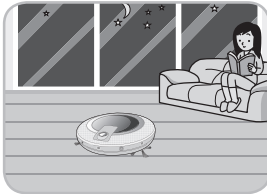


As the noise levels are at a quiet 60dB, cleaning can be performed at night.  
\*Less than 60dB

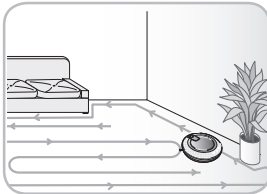

The HOM-BOT can clean all parts of the area by cleaning in zigzag mode and then in spatial expansion mode.

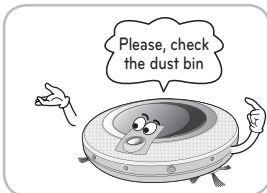

The HOM-BOT also has voice confirmation and instruction that can be easily understood by the user.

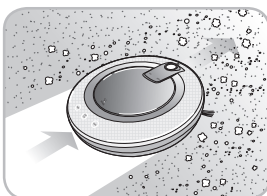

The use of the ultra microfiber mop accessory allows finer dust to be collected. (option)

# CONTENTS

## 1

### BEFORE USING

---

- 1~4 Safety Precautions
- 5 Included with Product
- 6~7 Parts Descriptions
- 8~9 Button Functions
- 10 Display Status Information
- 11 Before You Start
- 12 Overview

## 2

### HOW TO USE

---

- 13 How to Install the Home Station
- 14 How to Turn the Power Supply On and Off.
- 15 How to Start and Stop Cleaning
- 16~17 How to Charge the Battery
- 18 Cleaning Modes
- 19 Auxiliary Cleaning Modes
- 20 Timer Cleaning
- 21 Mop Cleaning (option)

## 3

### CARE AND MAINTENANCE

---

- 22 Cleaning the Dust Bin
- 23 Cleaning the Dust Bin Filter
- 24 Cleaning the Brush
- 25 Cleaning the Sensor/Charging Terminal
- 26 Cleaning the Side Brush
- 27 Cleaning the Ultra Microfiber Mop (option)

## 4

### ADDITIONAL INFORMATION

---

- 28~30 Troubleshooting
- 31 Before You Call for Service

## 5

### REFERENCE

---

- 32 Product Specifications

# SAFETY PRECAUTIONS

The purpose of the safety precautions described below is for the user to use the product safely and correctly to prevent any unexpected risk or damage.

## Basic safety precautions

After reading this manual, please keep it in an easily accessible location.



This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death.



**WARNING** Indicates a hazardous situation which, if not avoided, could result in death or serious injury.




**CAUTION** Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



## WARNING


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by LG Electronics Service Agent in order to avoid a hazard.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

# SAFETY PRECAUTIONS

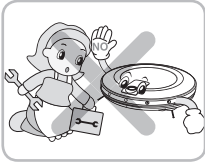


For your safety, do not remove the battery from the HOM-BOT. If you need to replace the battery or the HOM-BOT, take it to the nearest authorized LG Electronics service center or dealer for assistance.

Failure to follow this warning can cause fire or product failure.

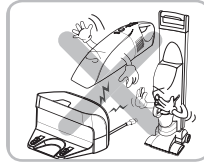


Never use the HOM-BOT with a battery and/or home station from any other product than the HOM-BOT.

Doing so can cause fire or product failure.

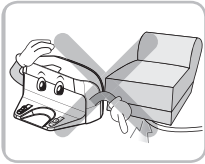


Make sure the power cord of the home station is not crushed under a heavy object or damaged by contact with sharp objects.

Failure to follow this warning can cause fire or product failure. If the power cord is broken, replace it at an LG Electronics customer care center.

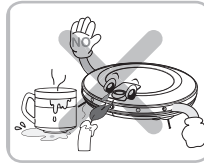


Do not use the HOM-BOT when candles or fragile objects are placed on the floor.

Doing so can cause fire or product failure.

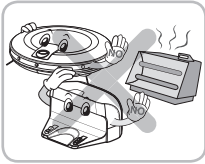


Do not place the home station and the HOM-BOT near a heating device.

Doing so can cause product deformation, fire, or product failure.

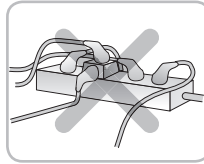


Always use a dedicated outlet.

If multiple appliances are connected to an outlet simultaneously, they can generate enough heat to cause a fire.

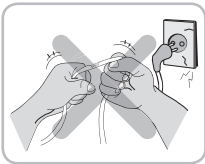

Do not force the power plug to bend. Do not use the power plug when it has been damaged or loosened.

Doing so can cause fire or product failure.

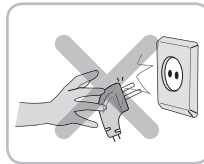

When pulling out the power plug, always pull it out by grabbing the plug, not the cord. When pulling out the power plug, do not touch the prongs with your fingers.

Doing so can cause an electric shock.



Do not touch the power plug with wet hands.

Doing so can cause electric shock.




Do not use the HOM-BOT while a child or object is on it. Do not use the HOM-BOT while an object is hanging from it.

Doing so can cause injury or product damage.

# SAFETY PRECAUTIONS

## ! WARNING

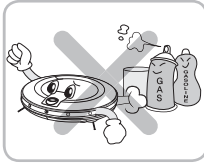

Do not spray or suck in inflammable materials, surfactants, or drinking water in the vicinity of the HOM-BOT.


Doing so can cause fire or product failure.

\* Inflammable materials: gasoline, thinner, etc.  
\* Surfactant: detergent, articles for bath, etc.



Turn the power supply off immediately if any abnormal sound, odor, or smoke is generated from the HOM-BOT.

Failure to do so can cause fire or product failure.

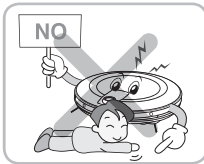

Do not insert any part of the body, such as a hand or foot, below the brush or wheels of the HOM-BOT while in use.

Doing so can cause injury or product damage.




Do not operate the HOM-BOT in a room where a child is sleeping.

Doing so can cause injury or product damage.



Do not operate the HOM-BOT on narrow and high furniture such as a wardrobe, refrigerator, desk, table, etc.

Doing so can cause injury or product failure.

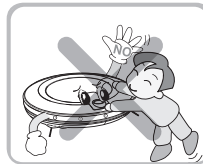

Do not let children play with the HOM-BOT.


Doing so can cause injury or product damage.

## ! CAUTION




Frequently empty the dust bin and maintain its cleanliness.

The dust collected in the dust bin can trigger allergies and may contain harmful insects.

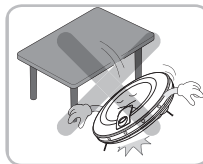

Do not drop the HOM-BOT or subject it to strong impacts.

Doing so can cause injury or product failure.

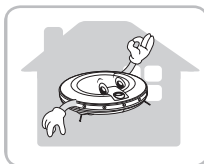


Use the HOM-BOT indoors only.

Using it outdoors can cause product failure.




Do not expose the HOM-BOT to cold temperatures (less than 23°F or -5°C) for a long period of time.

Doing so can cause product failure.

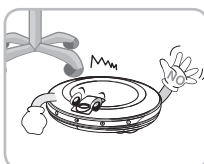

The HOM-BOT may bump into furniture such as chair legs, table legs, thin and long furniture, etc. while operating.

For a quicker and cleaner performance, place the chairs on top of the table.

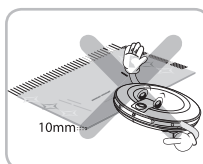


Cleaning will not proceed smoothly on carpets with tassels or carpets thicker than 10 mm.

It may be more convenient to arrange them before using the product.


# SAFETY PRECAUTIONS

## ! CAUTION

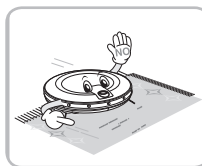


In rare cases, the HOM-BOT brush can damage the carpet. If this happens, immediately stop the cleaning operation.

When a carpet has long tassels, the tassels can be damaged.

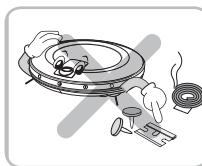


Do not allow the HOM-BOT to suction up liquids, blades, thumb tacks, kindling, etc.

These items can cause product failure.

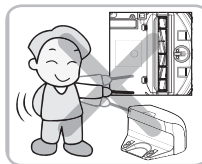

Do not let the main frame and charging terminal of the home station come into contact with metallic objects.

Doing so can cause product failure.

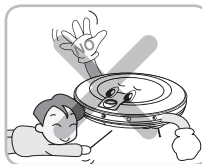


Do not put sharp objects into the opening of the HOM-BOT super-sonic sensor.

Doing so can cause product failure.




Do not put water, detergent, etc. into the HOM-BOT.

Doing so can cause product failure. Do not put any water or detergent on the HOM-BOT. If liquids get inside of the HOM-BOT, turn off the power supply and contact an LG Electronics sales agent or customer care center.

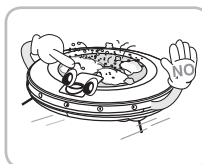


Do not use the HOM-BOT when the dust bin is completely filled up.

Doing so can cause product failure.

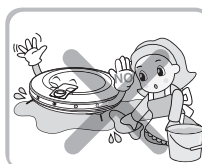

If the floor is wet or has wet spots, wipe them up before using the HOM-BOT.

Failure to do so can cause product failure.

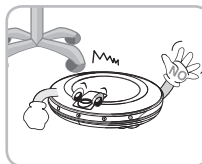

When the robot cleaner is operating, it may hit the chair leg, desk leg, table leg or other narrow pieces of furniture.

For quicker and better cleaning, place the dining chairs on top of the dining table.




## Tip

Check the following items before use:

- Remove fragile or unnecessary objects from the room to be cleaned. For example, remove expensive ceramics and valuables from the floor.
- Do not use this product in the room where a child is sleeping alone. The child can be hurt.
- Confirm whether the battery has sufficient power, and if it is low, recharge it.
- Empty the dust bin after it fills up.
- Close the doors of any room that you do not want the HOM-BOT to enter. During cleaning, the HOM-BOT may enter another room and continue cleaning.
- Remove any moisture from the floor before cleaning.
- Remove any cables or long strings from the floor.
- Remove cables, strips, towels, socks, etc. from the floor so they will not get caught by the brush.
- Cleaning will not proceed smoothly on carpets with tassels or carpets thicker than 8 mm (0.315 in). It may be more convenient to arrange them before using the product.

Please note, this product is not intended for use in any workshop, commercial office, garage or outdoor environment. It is for normal Domestic internal home use only.


# INCLUDED WITH PRODUCT

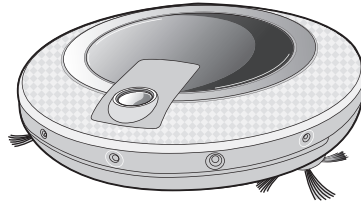

HOM-BOT




Remote controller

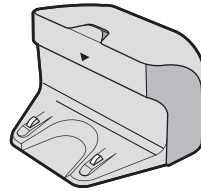


Home station

► Figures can be different from actual objects.

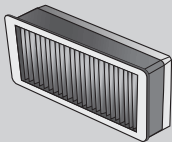


Dust bin filter (spare)

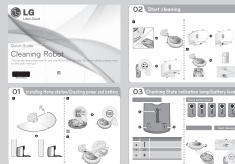


Quick guide




Operation manual

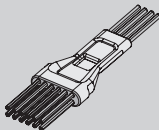


Brush for cleaning Filter / Sensor

 

Mop plate (option)

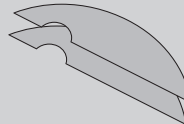


Ultra microfiber mop (option 2 pieces)

 


Dry cell for remote controller

# PARTS DESCRIPTION

## Top view

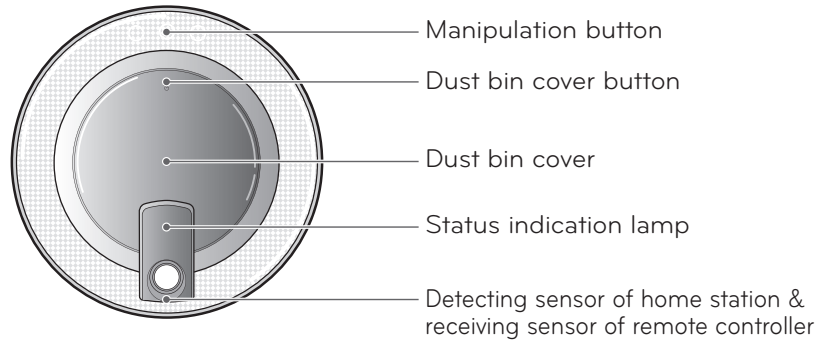


## Front view

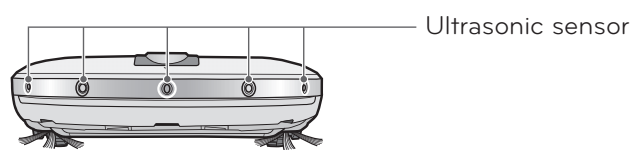

## Rear view




## Bottom view

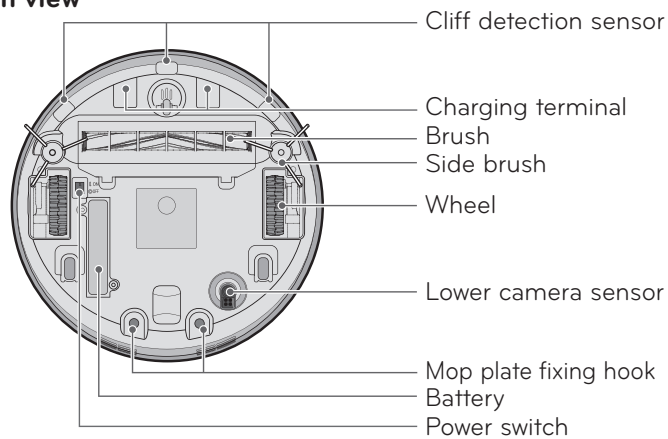


► Figures can be different from actual objects.

# PART DESCRIPTION - HOME STATION / DUST BIN

## Home station

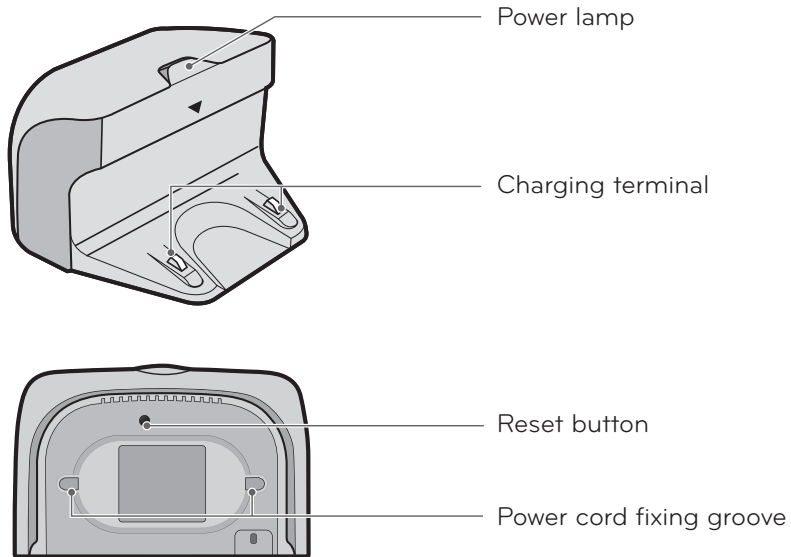


## Dust bin

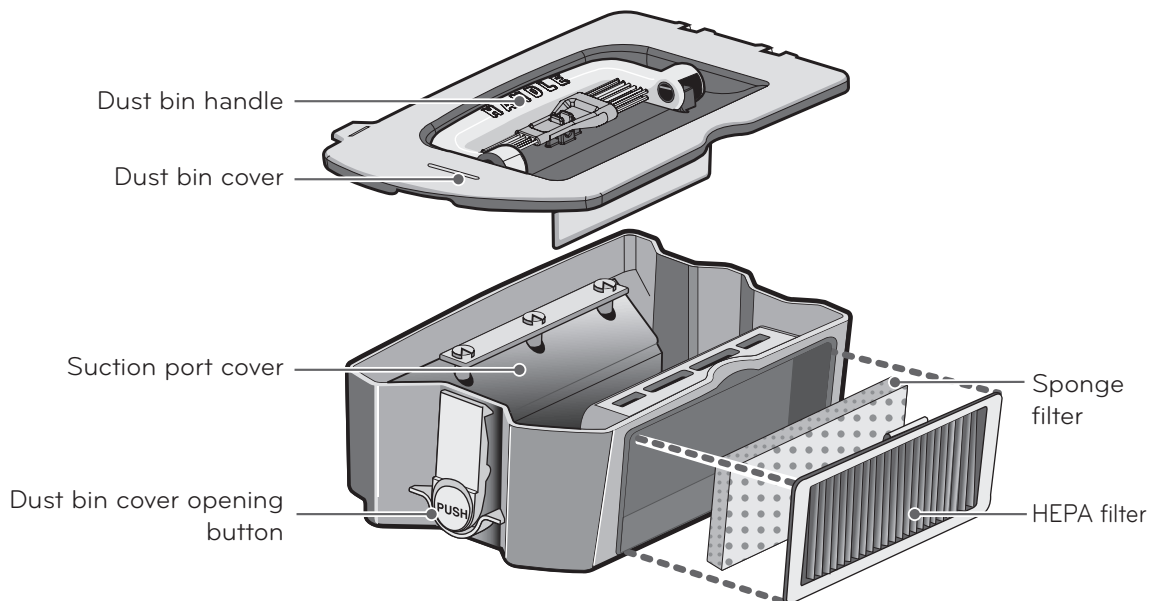

► Figures can be different from actual objects.

# BUTTON FUNCTIONS

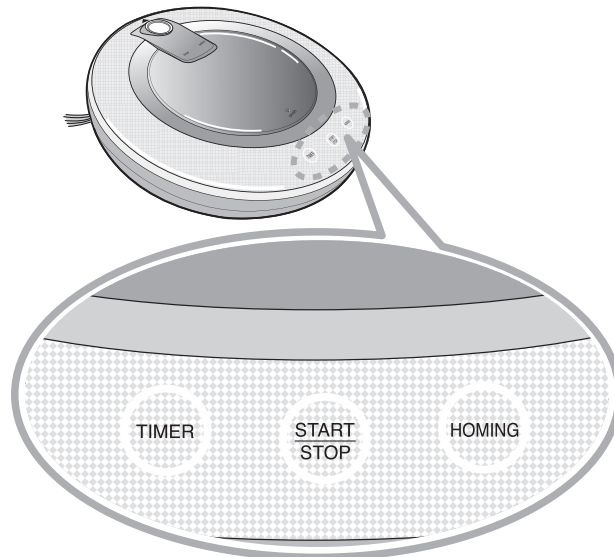

## TIMER

- Use the TIMER button to start cleaning after a set amount of time has elapsed.
- The timer can be set from 1 to 12 hours.
- The timer button only works when the HOM-BOT is attached to the home station. Always attach HOM-BOT to the home station when setting the timer function


## START/STOP

- Press the START/STOP button to turn the HOM-BOT on/off or start/stop cleaning.
- Press the START/STOP button while the HOM-BOT is on and it will automatically start cleaning.
- If the START/STOP button is pressed during automatic cleaning, the HOM-BOT will stop cleaning.
- Press and hold the START/STOP button for approximately two seconds to turn off the HOM-BOT.
- This puts the HOM-BOT into the Stand By mode
- If the button is pressed while in the timer mode, the timer setting will be canceled.

## HOMING

- Press the HOMING button to move the HOM-BOT to the home station for battery charging.
- When cleaning is complete or the battery is low, the device will automatically move to the home station to charge the battery even without pressing the HOMING button.
- If the home station become obstructed, the HOM-BOT may not be able to find it's signal and return to it.


# BUTTON FUNCTIONS – REMOTE CONTROL

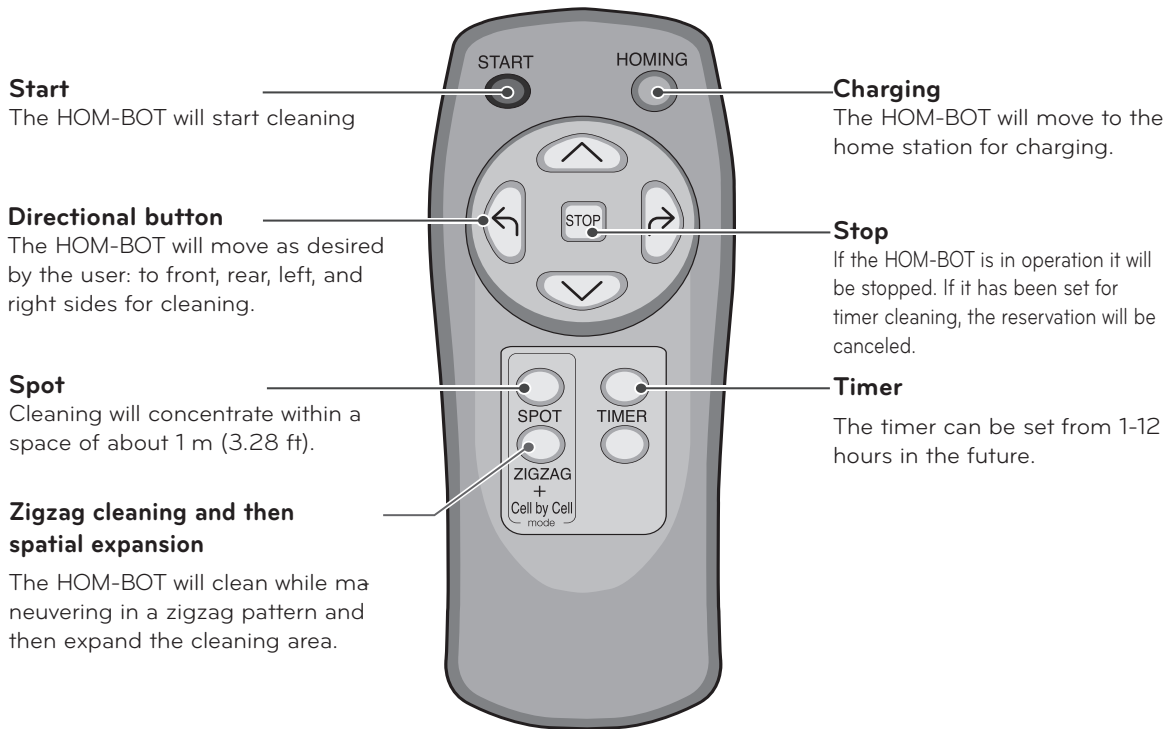

## Tip

- The HOM-BOT power supply cannot be turned on with the remote control.
- To turn on the power supply, use START/STOP button on the top of HOM-BOT.
- In order to do spot cleaning, timer cleaning, zigzag cleaning, and spatial expansion cleaning, you must first stop the operation of the HOM-BOT.
- If the main frame is turned off, the remote control will not be activated.
- The preset feature may be set only when the HOM-BOT returns to the charging stand.
- If the main switch on the underside of the HOM-BOT is in the off position, the Status display will flash and sound when the unit is manually placed onto the home station, to indicate that the main switch is off.

# DISPLAY STATUS INFORMATION

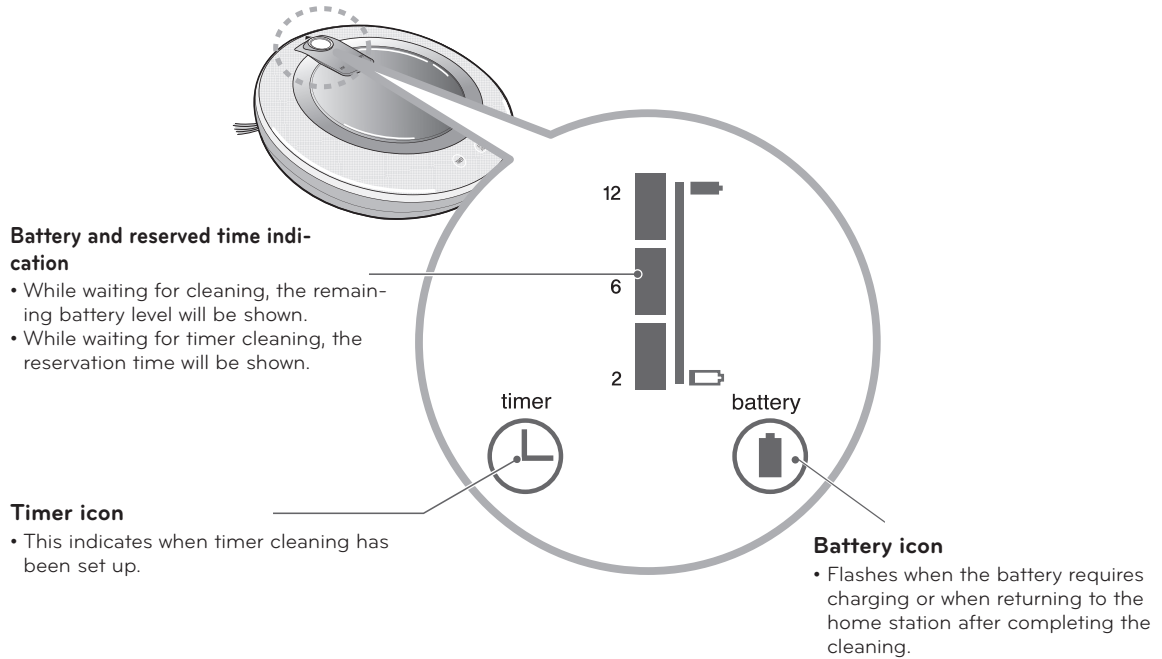

- Tip** • To cancel the timer setting, press the STOP button on the remote control or the START/STOP button on the HOM-BOT.


# BEFORE YOU START

## Check these items before cleaning

- Do not use this device in a room where a child is left alone. The child could be injured.
- Remove fragile or unnecessary objects from the room to be cleaned. Especially, remove expensive ceramics and valuables from the floor.
- Remove any moisture that might be on the floor.
- Remove cables, strips, towels, socks, etc. from the floor so they will not get caught by the brush.
- Confirm whether battery charge is sufficient, and if it is low, recharge it.
- Empty the dust bin if it is full.
- Close the doors of any room that you do not want the HOM-BOT to enter. During cleaning, the HOM-BOT may enter another room and continue cleaning.
- When the mop is attached, HOM-BOT will not be able to go over thresholds of 5mm or higher. If you are not planning to use the mop for cleaning, remove the mop before using HOM-BOT.

## Loading the remote control battery

1. Open the battery cover by lifting the rear hook of the remote control.
2. Insert two AAA batteries, checking for +, - nodes while loading.
3. Close the battery cover completely so that the batteries will not fall out.

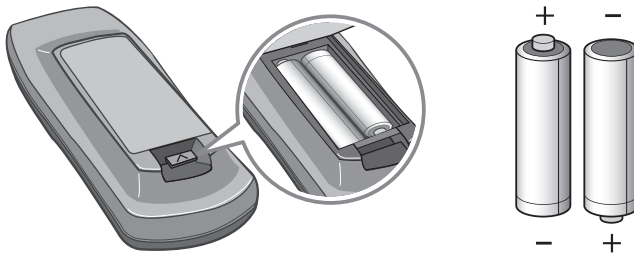

## Precautions while using the remote control


- Only press one button at a time.
- Do not drop or subject it to forceful impact.
- Do not store it near devices that give off heat, fire or hot air.
- Certain fluorescent lamps, such as 3 wavelength fluorescent lamps, can interfere with the activation of the remote control. Therefore, use it as far away as possible from such lamps.
- If the remote control is far from the HOM-BOT when activated, it may fail to operate properly. Use the device within 3 m (9.84 ft) of the HOM-BOT if possible.

# OVERVIEW

1

Install the home station. (page 13)

Insert the power cord plug into an outlet and locate the station against a wall. If power is not supplied to the home station, the HOM-BOT will not charge.

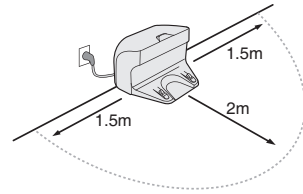

2

Turn on the power supply of the HOM-BOT. (page 14)

Turn on the power switch located on the bottom of the Roboking and press the upper START/STOP button to turn on the power supply.


\* If the power supply is not turned on, refer to page 14.



3

Start cleaning. (page 15)


Press the START/STOP button once again while the HOM-BOT is turned on. You will hear the sound of cleaning and cleaning will begin.

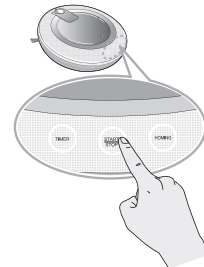

4

Automatic charge. (page 16-17)


The HOM-BOT will self-diagnose and automatically return to the home station to recharge before the complete discharge of the battery. It takes approximately three hours to charge the battery.

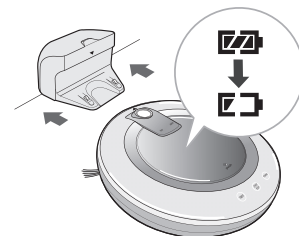

5

Use auxiliary functions. (page 18-21)



With the remote control, the auxiliary functions can be used. Auxiliary functions include manual cleaning, spot cleaning, the timer function, and ultra microfiber mop cleaning.

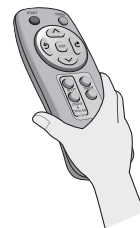

# HOW TO INSTALL THE HOME STATION



## How to Install the Home Station

1. Position the home station against a wall, to prevent sliding during docking, on hard level flooring.  
Remove objects within 1.5m. to the right and left side and within 2m. to the front.

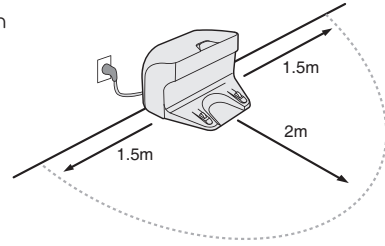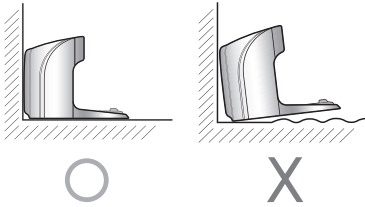


2. Plug the power cord into an outlet.

Wrap the power cord around the fixed hanger on the back side of the home station or along the wall surface so that the travel path of the HOM-BOT will not be obstructed.

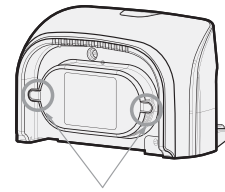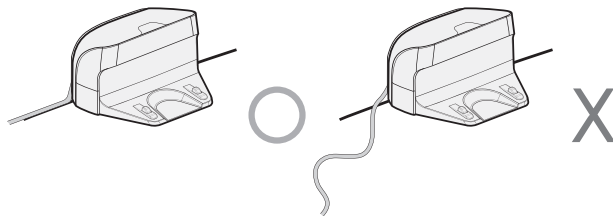

Fixing groove of power cord

3. Fix the home station against the wall so that it does not move.

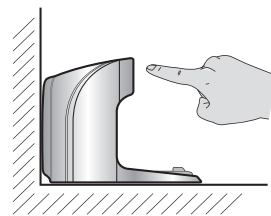

- Tip**
- Always keep the home station plugged in. If the home station is not plugged in, the HOM-BOT will not return to the station to charge automatically.
  - Do not operate the HOM-BOT if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. To avoid hazard, the cord must be replaced by LG Electronics, Inc. or a qualified service person.

# HOW TO TURN THE POWER SUPPLY ON AND OFF.

## Turning on the main power supply

To turn the power supply on, turn the HOM-BOT upside down on a smooth/soft surface and check whether the main power supply switch is turned on.

If the main power supply switch is turned off, turn on the switch.


- ※ When turning on the power switch, do not press the button located at the upper section of the HOM-BOT. Operation of the button can be delayed.
- ※ Turn off the power switch if the HOM-BOT will not be used for a long period of time, in order to protect the battery.
- ※ The power switch cover is used for protecting the switch from the dust. Always keep the cover attached on.



## Turning on the power supply

When HOM-BOT is not turned on, press the 'START/STOP' button for more than 1 second. The power supply will be turned on with the melody sound.



- ※ If the power supply is turned on and nothing is done for ten minutes, the power supply will automatically turn off to reduce battery consumption.

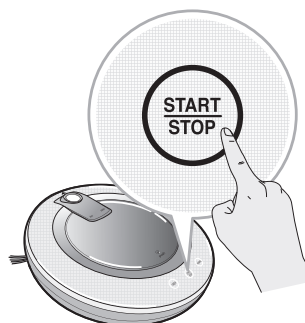

## Turning off the power supply

Press the START/STOP button for two seconds while the HOM-BOT is turned on. A melody will sound when the power is turned off. The power will be turned off with the melody sound.

- ✓ **Tip**
  - The power can be turned off due to the static electricity during the operation.
    - If the power is turned off, turn off the main power switch and then turn it back on.
  - If the power cannot be turned on, do the following.
    - Turn on the power switch and wait for more than 3 seconds.
    - Press the 'START/STOP' button when the power switch is turned on.
    - If the power is not turned on or if there is no display but only the "Ting" sound, put the HOM-BOT on the home station.
    - If there is no change even when HOM-BOT is attached to the home station, press the reset switch located on the rear side of the home station while the HOM-BOT is attached on the home station.

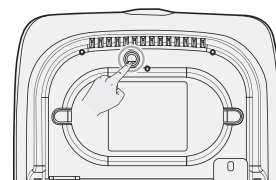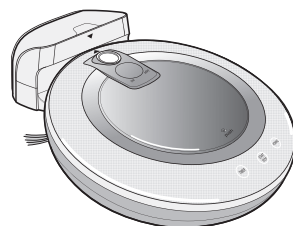


# HOW TO START AND STOP CLEANING

## Using the buttons on the HOM-BOT

After the HOM-BOT is turned on, press the START/STOP button to begin cleaning. A melody will sound and cleaning will begin.

Press the START/STOP button during the cleaning cycle to stop cleaning.

- \* When the 'START/STOP' button is pressed while the power supply of the HOM-BOT is turned off, the power will be turned on. Press the 'START/STOP' button one more time to clean.

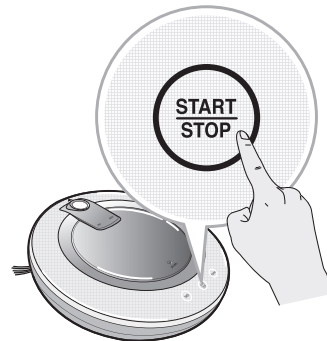

## Using the remote control

After the HOM-BOT is turned on, press the START button on the remote control. A melody will sound and cleaning will begin.

Press the STOP button during the cleaning cycle to stop cleaning.

- \* The HOM-BOT power supply cannot be turned on by using the remote control if the power of the HOM-BOT is off. When the power is off, press the 'START/STOP' button on the upper side of HOM-BOT to turn the power on.



- \* When the START button on the main unit or remote control is pressed, HOM-BOT will start cleaning in 'Spatial expansion' mode.
- \* During cleaning, collisions can happen when the sensor cannot detect objects because of their shape. When this happens, the internal impact detecting sensor will avoid the obstacles by using a backward motion.
- \* If the HOM-BOT is set to start cleaning at a location away from the home station, put the device on a flat floor in order to prevent a malfunction of the obstacle detecting sensor. In addition, start cleaning from a location where there are not any obstacles such as curtains or walls within 30 cm (11.8 in) of the HOM-BOT.

**Tip** For best results:


- Briefly scan the area to be cleaned for big and small objects that will cause difficulty if vacuumed up.
- If cleaning is started when the HOM-BOT is at the home station, the device can rapidly be returned to the home station as the current home position has been accurately read.

# HOW TO CHARGE THE BATTERY

## Automatic charging


The HOM-BOT returns to the home station at the end of a cleaning cycle or when its battery is running low.

- \* If the HOM-BOT is unable to dock to the home station on its first attempt, it will try again until it docks successfully.
- \* When HOM-BOT completed all areas that it can clean, it will return to the home station even when the battery level is not low.

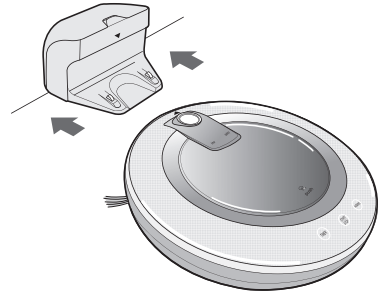

## Manual charging

If using the HOM-BOT for the first time or when charging the battery during cleaning, you can manually charge the battery.

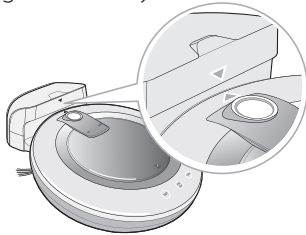

Method 1. Attach the HOM-BOT to the home station by matching up the two arrows on the HOM-BOT and the home station. A melody will sound and charging will begin.

- \* When the HOM-BOT is attached to the home station, if a "TING" sound is generated repeatedly, please check the power switch and turn it on.



Method 2. When the HOMING button of the remote control or the HOM-BOT is pressed, charging will start by automatically generating a searching sound and returning the HOM-BOT to the home station.

- \* If the HOM-BOT stays within 10 cm (3.9 in) of the front of the charging terminal while the power supply is turned on, it will automatically be returned to the home station and charging will begin.

**Tip** Take the following precautions when using the home station:


- If foreign material is caught in the charging terminal, charging may not proceed smoothly. Wipe the terminal from time to time with a dry cloth after the power plug is disconnected.
- To prevent electric shock, do not touch the charging terminal with any metallic objects.
- To avoid fire or electric shock, never disassemble or modify the home station.
- Do not place the home station or power plug near to a heating appliance.

# HOW TO CHARGE THE BATTERY

## Remaining Battery Charge Indicator

The remaining battery charge can be confirmed from the charge indication light, which will indicate charge as follows:

- During charging, the charge remaining indication light will flicker.
- When charging is completed at the home station, only the battery icon will illuminate to save power.
- The battery icon will flicker when battery charging is required.

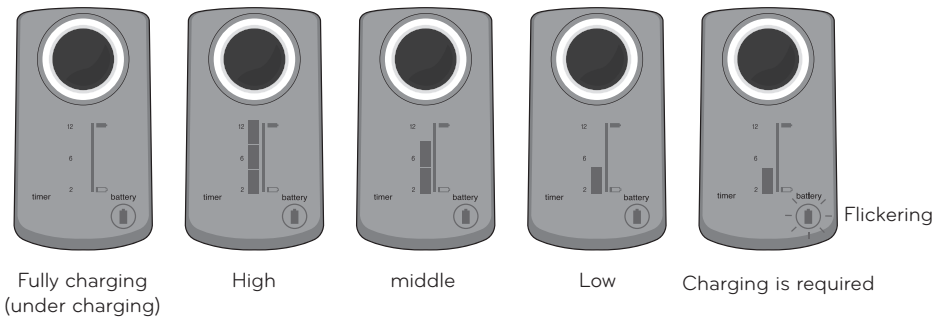

## If the Battery is Not Charging



Check 1. If the battery is not charging even when the HOM-BOT is attached to the home station, check the following items.

- Turn the power switch on the bottom of the HOM-BOT off once and then on again.
- Unplug and plug in the power plug on the home station.
- Wipe the terminal on the home station with a dry cloth.

Check 2. If the battery is still not charging after the previous check, try the following.

- Attach the HOM-BOT to the home station.
- Press the reset button at the rear of the home station for three seconds.

- ※ If the "TING" sound is repeated when the main unit is attached on the home station, check the main power switch.

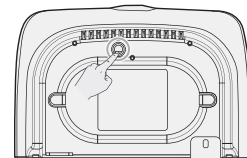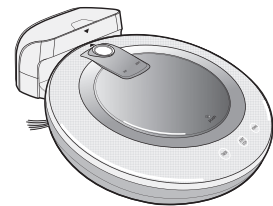

# CLEANING MODES



## Spatial expansion cleaning

When the START button on the main unit or the remote control is pressed, HOM-BOT operates in the spatial expansion cleaning mode.

The 1st stage: A maximum area of 3 m x 3 m (9.84 ft x 9.84 ft) will be cleaned. (The actual size of the area will change in accordance with the shape of the house's interior.)

The 2nd stage: The inside of the area will be cleaned in a zigzag path.




When the 1st and 2nd stages are completed, the device will move to the next cleaning area and repeat the stages until the entire inside of the house has been cleaned.

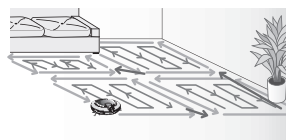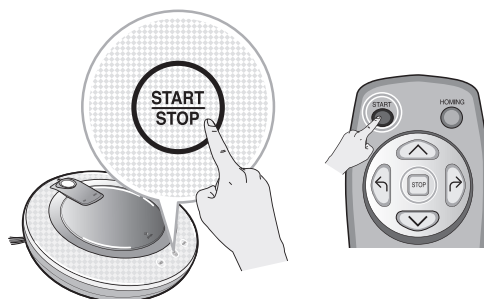

## Zigzag cleaning and then spatial expansion button

HOM-BOT first runs the zigzag cleaning mode and then switches to spatial expansion mode by dividing the space by partial squares to clean inside the house thoroughly.

1. Press the ZIGZAG+Cell by Cell button on the remote control. Zigzag cleaning and then spatial expansion'
2. Roboking cleans total of 6m area in zigzag cleaning mode by cleaning up to 3m on the left side until it hits the wall.
3. After cleaning in the left direction, HOM-BOT returns to the starting point and cleans in the right direction until it hits the wall to clean total area of 6m to complete the zigzag cleaning mode.
4. And then HOM-BOT switches to the spatial expansion cleaning mode, which is the automatic cleaning mode.

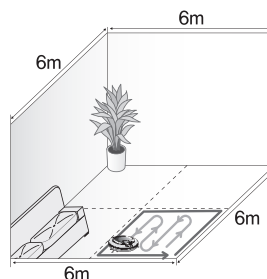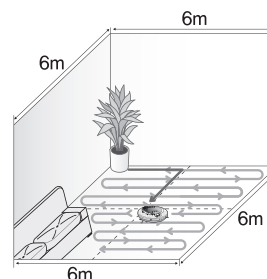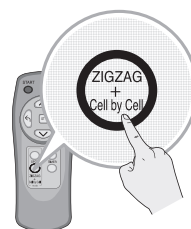


 **Tip** • The cleaning mode can only be changed with the remote control.

# AUXILIARY CLEANING MODES

## Manual cleaning

This method of cleaning involves manually moving the HOM-BOT by pressing the directional (arrow) buttons on the remote control.

The interior space will be cleaned by the HOM-BOT as it is being moved to the front, rear, or rotated to the left and right side according to the input of the directional buttons.

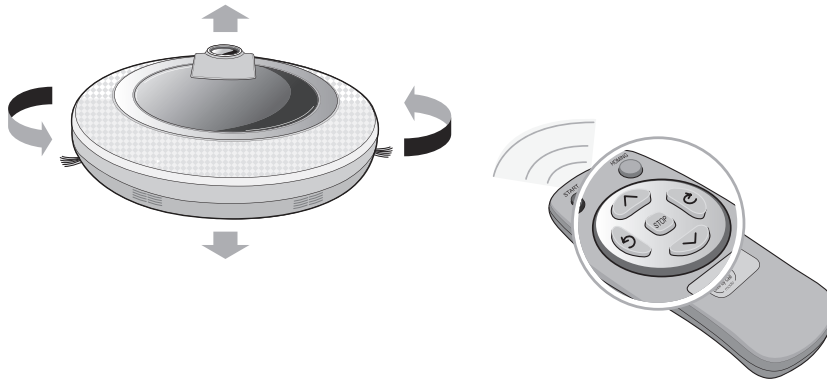


## Spot Cleaning

Use this cleaning method when concentrated cleaning of a small interior space is required.

After moving the HOM-BOT to the location to be cleaned, press the SPOT button on the remote control.

The spot cleaning icon will illuminate on the HOM-BOT, and concentrated cleaning will be performed for a space within a radius of 1 m (3.28 ft).


\* During charging, the spot cleaning button on the remote control will not activate.

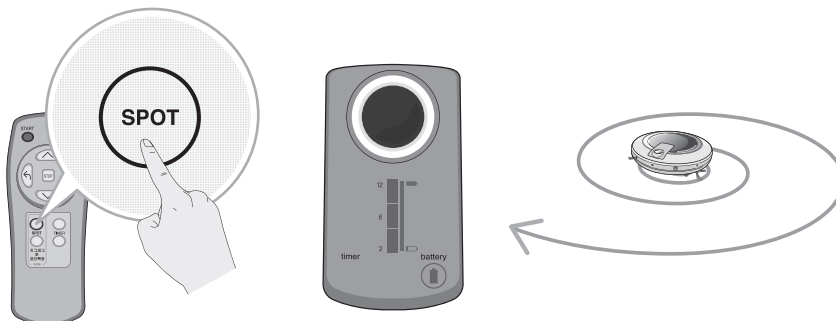


# TIMER CLEANING

HOM-BOT can be scheduled to start cleaning after a certain period of time. The time can be set among 2 hours, 6 hours and 12 hours.


1. By pressing the TIMER button on the remote control or the HOM-BOT, a cleaning time can be scheduled.

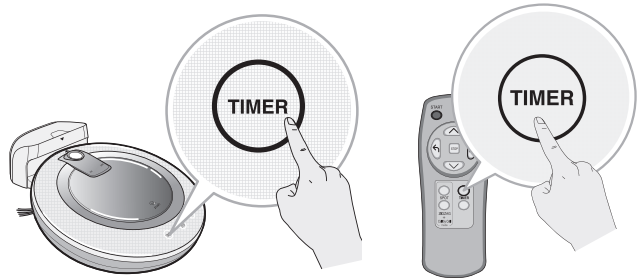

2. Adjust the time by pressing the 'TIMER' button multiple times. Each time you press the button, it changes from 2 hours to 6 hours to 12 hours.

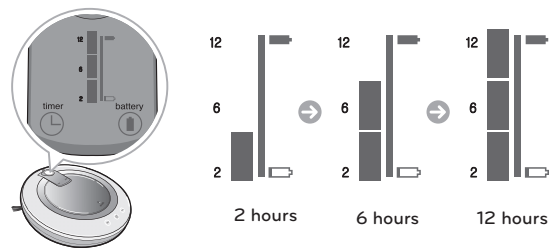

3. After setting up the start time, press the START/STOP button on the HOM-BOT or wait about five seconds. Time setting will complete and a melody will sound.  
- When the time set up is complete, the time setting icon, in the shape of a clock, will illuminate and a voice message will sound.

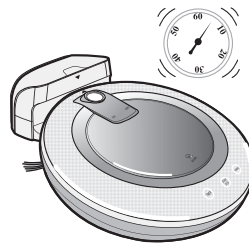


## Tip

- When the set up time elapses, cleaning will start automatically.
- Use the timer setting when the HOM-BOT is attached to the home station.
- To cancel the timer setting during the set up time, press the STOP button on the remote control or the START/STOP button on the HOM-BOT.
- When HOM-BOT is detached from the home station, the timer setting will automatically be canceled.

# MOP CLEANING (option)


By attaching the ultra microfiber mop, you can effectively use the HOM-BOT to remove dust.

When the mop plate is attached, the Roboking will not climb on to carpets or over thresholds, in order to prevent transferring dirt from the mop.

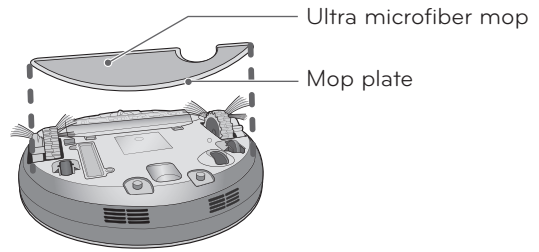


For mop cleaning, mount the mop and mop plate to the HOM-BOT according to the following instructions:


1. Attach the ultra microfiber mop to the Velcro of the mop plate as shown in the figure.  
 ※ To prevent the HOM-BOT from malfunctioning, attach the mop so that the mop attaching guide will not be covered by the mop.

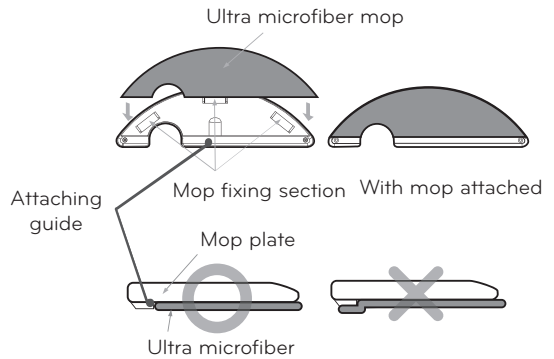

2. Accurately match up and insert the mop plate fixing hook on the lower section of the HOM-BOT into the fixing groove of the mop plate.

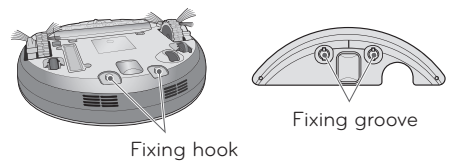

3. When you accurately match up and press the mop plate to the rear side of the HOM-BOT, it will mount with a clicking sound.  
 ※ Be careful to properly mount the mop plate, or it can separate during cleaning.

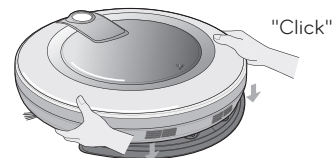


## Tip

- To avoid odors, wash any foreign material or dust off the mop after cleaning is complete.
- To avoid staining floors, do not use the ultra microfiber mop to clean when dirt is mixed with liquids such as coffee or ink.
- To avoid damage to carpets from the Velcro or dirt transfer from the mop, do not clean the carpet while the mop plate or mop is attached.
- Keep the ultra microfiber mop dry. Do not use it on wet surfaces.

# CLEANING THE DUST BIN

If the dust bin is full, suction power can be weakened. Clean the dust bin before and after each cleaning session. Clean the dust bin using the following sequence:

1. Open the dust bin cover by pressing the PUSH button on the HOM-BOT.
2. Grab the handle of the dust bin and pull it upward.
3. Separate the HEPA filter and the inside sponge filter by removing the HEPA filter  
\* To clean the dust bin filter, refer to page 23.
4. Lift the cover upward while pressing the separation button on the dust bin.
5. Empty the dust bin and clean it with a cleaning brush or under running water.
6. After cleaning with water, completely dry the dust bin in a well-ventilated area out of the direct sunlight.
7. When you have completed cleaning the dust bin, close the cover and replace the sponge filter and HEPA filter.
8. Put the dust bin into the HOM-BOT and close the dust bin cover.

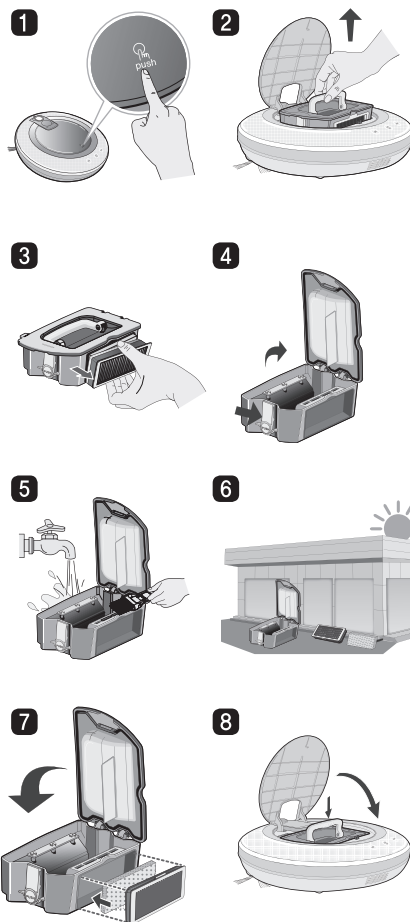


- Tip**
- After cleaning, always mount the dust bin filters (HEPA filter, sponge filter) to the dust bin. If they are not mounted, dust may enter the HOM-BOT interior and cause product failure.
  - Always close the dust bin cover. If attempt to operate the HOM-BOT while the cover is open, you will hear a voice message stating "Please check the dust bin."


# CLEANING THE DUST BIN FILTER

The dust bin filters are comprised of the HEPA filter and the sponge filter. Clean the HEPA filter and the sponge filter according to the following sequence:


1. Separate the HEPA filter and the inside sponge filter by removing the HEPA filter.

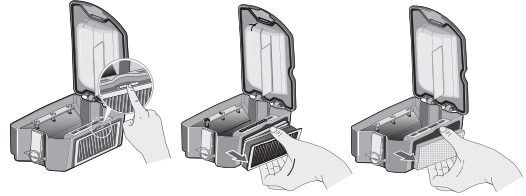


2. Carefully clean any fine dust off the HEPA filter and the sponge filter with a vacuum cleaner or water.

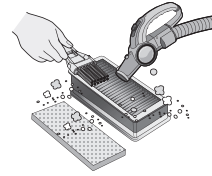

3. After washing the HEPA filter and the sponge filter with water, place them out of direct sunlight and allow them to dry completely.

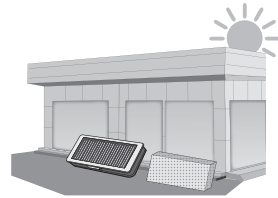

4. Mount the cleaned HEPA filter and sponge filter into the dust bin according to the sequence shown to the right. When assembling the filter, the filter handle should face upward.

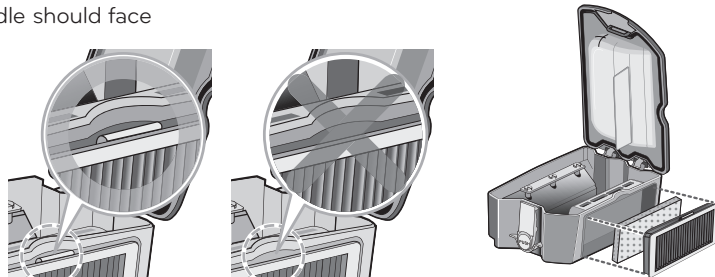


- Tip** • In order to maintain the performance of the HOM-BOT, the HEPA filter should be cleaned with a cleaning brush or vacuum cleaner at least once a week, and should be washed under running water at least once a month.


# CLEANING THE BRUSH

The brush, located on the bottom of the HOM-BOT, helps with the suction of foreign objects. Perform the following steps to clean the brush:


- 1** Lay a smooth cloth on the floor. Turn the HOM-BOT over and put the HOM-BOT on the cloth. Turn off the power switch before cleaning.

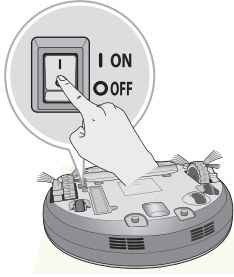


- 2** Separate the cover by pressing the fixing hook and pulling upward.

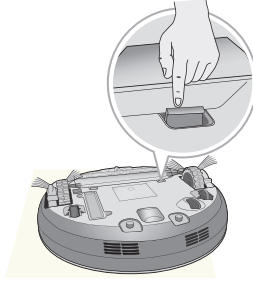


- 3** Wearing gloves turn the brush until the separation groove of the brush appears.

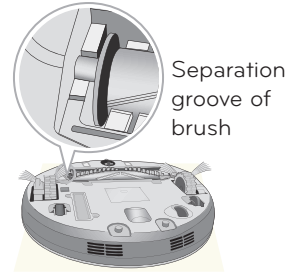


- 4** Grab the brush and remove by pulling it up.

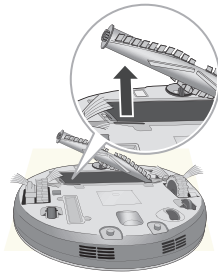


- 5** Clean the brush with a vacuum cleaner by hand, or an old unused firm bristle toothbrush.

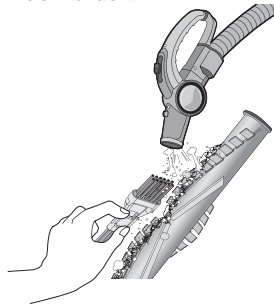


- 6** Insert the fixing hook on the side of the brush (marked with the square) by matching it to the fixing groove of the brush.

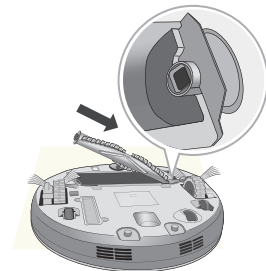


- 7** Insert the fixing hook on the opposite side of the brush (marked with a rounded rectangle) by matching it to the separation groove of the brush.

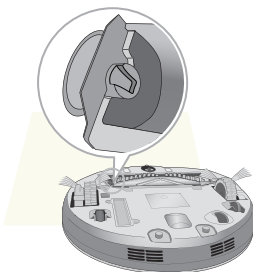

- 8** Insert the fixing guide in front of the brush by matching it to the fixing groove located on the main frame.

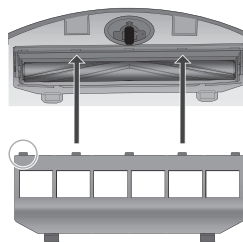


- 9** Close the cover by pressing it down until you hear a click from the fixing hook.  
\* Be careful that the side brush is not caught by the cover.

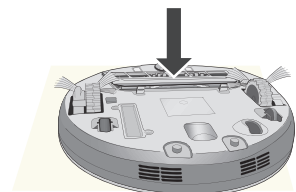


# CLEANING THE SENSOR/CHARGING TERMINAL

There are sensors on the HOM-BOT that can detect obstacles, stairways and the home station for charging the battery. In order to maintain the performance of the HOM-BOT, regularly clean the sensors and charging terminal as follows:



1. Lay a smooth cloth on the floor, overturn the HOM-BOT and put it on the cloth.
2. Turn off the power switch on the bottom of the HOM-BOT. Injury can be caused by the activation of the HOM-BOT during cleaning.
3. Use a smooth cloth or cleaning brush to wipe the dust off each sensor and the charging terminal as described below.

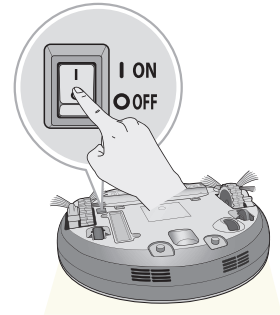

Receiving sensor of remote controller


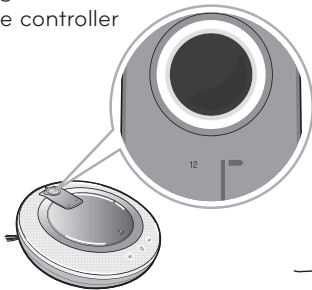


Obstacle detection sensor

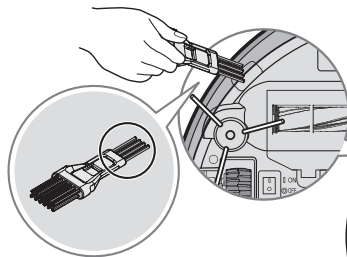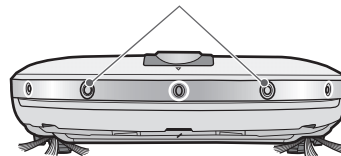


Cliff detection sensor

Charging terminal

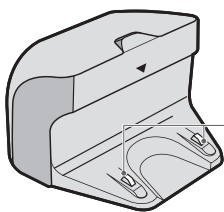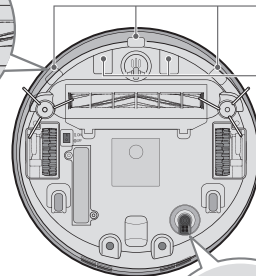

Charging terminal

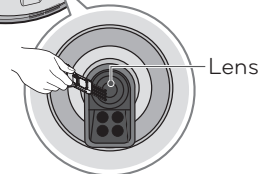

Lens


## Tip

- Do not clean the HOM-BOT by directly spraying it with water, thinner, benzene, etc.
- Call the service center if the sensor or charging terminal is damaged. Sensor and terminal damage can cause the product to malfunction.

# CLEANING THE SIDE BRUSH

Foreign objects/materials such as hair can easily adhere to the side brush. Remove such materials at least once a week.

If excessive amounts of foreign materials are stuck to the brush, there is the risk of breakage.

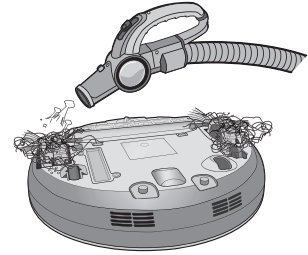

If the floor is rough or walls are frequently cleaned, the side brush may bend or become damaged. In this case, use the following method to straighten the side brush.


1. The following procedure is helpful in restoring deformed brushes.
2. Turn off the power supply by pressing the START/STOP button on the HOM-BOT for two seconds.
3. Place the HOM-BOT at the end of a table to make cleaning the side brush easier. Make sure that the HOM-BOT is not in danger of falling.
4. Soak the side brush in warm water.
5. Press the side brush for about ten seconds so that it is completely submerged in the water.
6. Slowly wipe the side brush by sliding it through your hand.
7. Rotate the side brush and repeat steps 4-6 for each section of the brush.
8. Use the side brush only after it has completely dried.



# CLEANING THE ULTRA MICROFIBER MOP (option)

To avoid odors, dirt and dust should be washed off the mop after it is used for cleaning. Follow these directions to wash the ultra microfiber mop:


1. Separate the ultra microfiber mop from the mop plate.

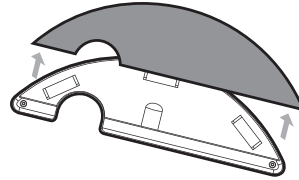

2. Carefully clean it with water.



3. Use the mop only after allowing it to dry completely in a sunny, well-ventilated area.

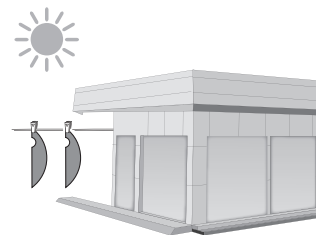

- Tip**
- To avoid product malfunction, only use the ultra microfiber mop provided with the HOM-BOT.
  - Additional microfiber mops can be purchased by visiting a nearby LG Electronics service center.

# TROUBLESHOOTING


## When the voice, "Please check the wheels", is announced.

If the unit becomes stuck or suspended and the wheels do not allow the unit to move, the voice, "Please check the wheels", will be announced.

- Is a wheel trapped in the front door, balcony, stairway, etc?
  - ▶ Move the HOM-BOT on to the flat floor.



- Is any foreign material wound around the wheel?
  - ▶ Lay smooth cloth on the floor, overturn the HOM-BOT, and put it on the cloth. Remove foreign material by confirming the wheel.

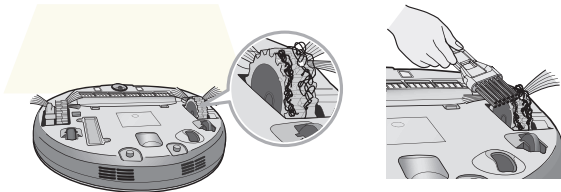


# TROUBLESHOOTING

## When the voice, "Please check the dust bin", is announced

When an abnormality is detected with the dust bin, the voice, "Please check the dust bin", is announced.


- Is the dust bin fitted correctly?
  - ▶ Open the dust bin cover, and if check if the dust bin is actually fitted. the unit will not operate without the dust bin.
  - ▶ If the dust bin cover opened, close the cover before operating the unit.

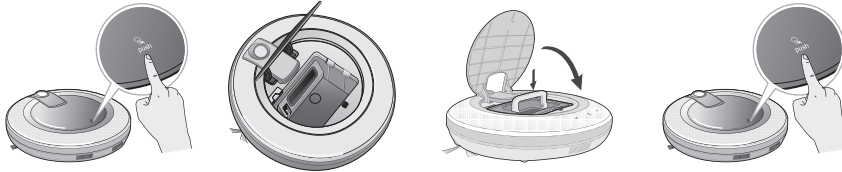

## When the voice, "Battery is low", is announced.

When remaining amount of battery is almost nil, the voice, "Battery is low", is generated.

- Initiate battery charging of HOM-BOT by moving it to the home station.
  - ▶ When attaching the HOM-BOT to the home station by matching both arrows of HOM-BOT and home station, charging will be started and the sound of charging start melody will be heard.

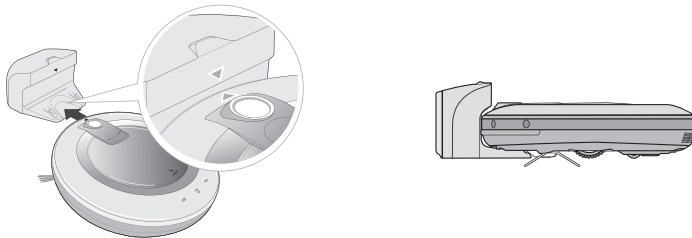


# TROUBLESHOOTING

## When the voice, "Please check the brush", is announced.


When the HOM-BOT detects that the brush is not functioning properly, you will hear the message "Please check the brush."

Lay a smooth cloth on the floor, overturn the HOM-BOT, and place it on the cloth.

- The side brush is stuck.
  - ▶ Remove any foreign materials such as cables, thread or hair caught in the side brush or the brush.

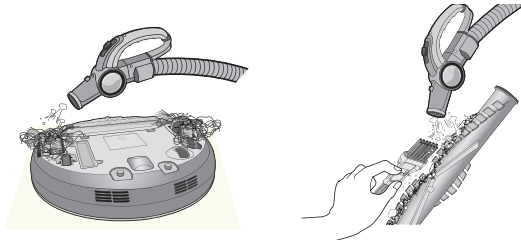

- ▶ Confirm the correct assembly of the brush by checking the separation groove of the brush.

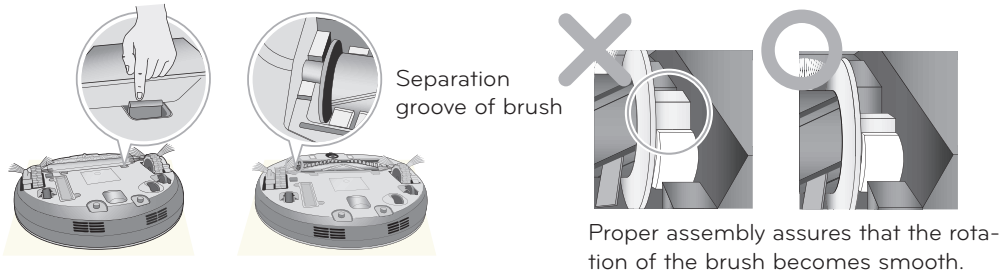

- The brush is making a loud, abnormal sound.
  - ▶ Remove the brush from the HOM-BOT and remove any foreign material from the brush.




※ For a more detailed description of this process, refer to the instructions on page 24.

# BEFORE YOU CALL FOR SERVICE


Check the following before calling for service.

Problem	Solutions (Reference page)
The HOM-BOT will not activate.	<ul style="list-style-type: none"> <li>▶ Confirm that the power switch is turned on. (page 14)</li> <li>▶ Confirm that the battery has been charged. (page 17)</li> </ul>
Movements or travel path are abnormal.	<ul style="list-style-type: none"> <li>▶ Carefully wipe the sensor with a smooth cloth. (page 25)</li> <li>▶ If the ultra microfiber mop is attached, confirm that it is mounted properly. (page 21)</li> <li>▶ Turn on the power switch off and on.</li> </ul>
Suction power becomes weak.	<ul style="list-style-type: none"> <li>▶ Check whether there is foreign material blocking the suction port. (page 24)</li> <li>▶ Empty the dust bin. (page 22)</li> <li>▶ Clean the dust bin filter. (page 23)</li> </ul>
Noise becomes louder.	<ul style="list-style-type: none"> <li>▶ Confirm that the dust bin has been mounted properly.</li> <li>▶ Confirm that the dust bin filter has been mounted properly. (page 23)</li> <li>▶ Check whether foreign material is caught in the brush. (page 24)</li> </ul>
The HOM-BOT cannot be activated with the remote control.	<ul style="list-style-type: none"> <li>▶ Replace the remote control batteries. (page 11)</li> <li>▶ Confirm that the control is within the coverage area of the main frame, which is less than 3 m or 9.84 ft. (page 11)</li> </ul>
The brush does not rotate.	<ul style="list-style-type: none"> <li>▶ Clean the brush. (page 24)</li> <li>▶ Confirm that the brush has been mounted properly. (page 24)</li> </ul>
The HOM-BOT will not charge.	<ul style="list-style-type: none"> <li>▶ Remove objects around the home station. (page 13)</li> <li>▶ Confirm that the power supply is connected to the home station. (page 13)</li> <li>▶ Wipe the charging terminal with a dry cloth.</li> </ul>
The power supply automatically turns off.	This is not a failure. HOM-BOT has its own power saving function. If it is not used for ten minutes after the power supply is turned on, the power will automatically turn off.
The power supply cannot be turned on.	Check that the power switch is turned on. (Page 14)


# PRODUCT SPECIFICATIONS

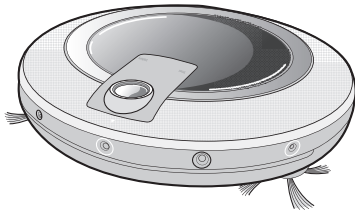

Item/model	LG HOM-BOT VR5906LM
External dimension	Φ 360 mm X 90 mm
Weight	3.2 kg
Power consumption	15 W
Battery (fully charging)	DC 16.8 V
Traveling velocity	350 mm/sec
Use time (1 time charging)	Approx. 90 minutes Based on general floor surface
Charging time	3 hours
Main functions	Obstacle detection function Falling prevention function Timer cleaning function Error indication function Automatic, manual charging function Dry mop function (wiping) (option) Corner cleaning function Voice output function Map building function Spot cleaning function Spatial expansion cleaning function

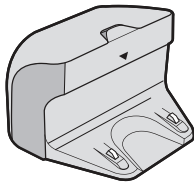

Item/model	Home station VR591
External dimension	204 mm x 158 mm x 125 mm
Rating	AC 220-240 V, 50 Hz
Output voltage/current	17.1 V / 1.1 A
Power consumption	23 W

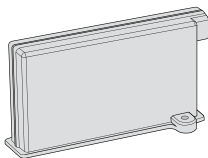

Item/model	Battery EAC60766102
Charging battery	Lithium polymer
Nominal voltage	14.8 V / 1900mAh

# MEMO

---

