



ENGLISH

OWNER'S MANUAL

SXS REFRIGERATOR

Please read this owner's manual thoroughly before operating and keep it handy for reference at all times.

Table of contents

Introduction	Entry	4
	Important safety instructions	4
	Identification of parts	13
Installation	Where to Install	14
	Door removal	15
	Door replacement	16
	Door Height adjustment	17
Operation	Starting	18
	Adjusting the temperatures and functions	18
	Refreshment centre(Applicable to some models only)	25
	Shelf	26
	Dairy corner	26
	Wine holder (Applicable to some models only)	26
	Deodorizer (Applicable to some models only)	27
	Freezer Compartment (Applicable to some models only)	27
	Egg box (Depends on model)	28
	Using door rack (Applicable to some models only)	28
	Freezer/Fridge door rack	28
	No Plumbing Ice & Water	29
Suggestion on food storage	Location of foods	30
	Storing foods	31
Care and maintenance	General information	32
	Suggestion for energy saving	33
	Cleaning	33
	Cleaning the water dispenser and the water tank.(Applicable to some models only)	34
	Smart Diagnosis	35
	Trouble shooting	36

Entry

The model and serial numbers are found either on the inner case or the back, or the lower RHS outer cabinet, written on a label. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of purchase : _____
 Dealer purchased from : _____
 Dealer address : _____
 Dealer phone no. : _____
 Model no. : _____
 Serial no. : _____

Important safety instruction

Before it is used, this refrigerator must be properly installed and located in accordance with the installation instructions in this document.

When moving your appliance away from the wall, be careful not to roll over the power cord or to damage it in any way.

After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when your hands are damp or wet. Skin could adhere to these extremely cold surfaces.

Unplug the power cord from the power outlet for cleaning or other requirements. Never touch it with wet hands because you can get an electric shock or be hurt.

Never place glass products in the freezer because they may be broken due to expansion when their contents are frozen.

Never allow your hands within the ice storage bin of the automatic ice maker. You could be hurt by the operation of the automatic ice maker.

The appliance is not intended for use by young children or infirm persons without supervision.

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection should an accident happen .

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



Don't use an extension cord

**Accessibility of Supply Plug
Supply Cord Replacement**

⚠ Important safety instruction

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages.

Always read and obey all safety messages.

⚠ This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can cause death or serious personal injury or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

⚠ **DANGER** Death, or serious injury can occur if you don't follow instructions.

⚠ **WARNING** Death, or serious injury can occur if you don't follow instructions.

⚠ **CAUTION** Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

⚠ WARNING


To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Read all instructions before using this appliance.

1. When connecting the power


A dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- If unit is connected to an earth leakage breaker it may trip resulting in spoiled food. This could occur due to power supply circumstances, and may not necessarily mean a refrigerator malfunction.

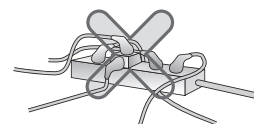

Do not allow the power plug to face upward or to be crushed at the back of the refrigerator.

If the cord is crushed behind the refrigerator it may damage the cable resulting in fire. An upward facing plug may pull loose under the weight of the cord resulting in electrical failure causing fire or the fridge turning off and spoiling food.

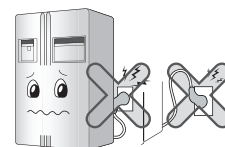


Do not allow the power cord to be bent or crushed by heavy objects.

It may damage the power cord and cause fire or electric shock.




Do not extend or modify the length of the power plug.

It can cause electric shock or fire from incorrect installation or unsafe connection.

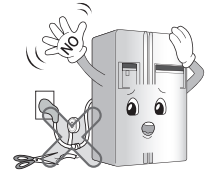


Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.

- Not doing so may cause electric shock or injury.
- When replacing the interior lamp of the refrigerator, make sure that the insulating rubber ring within the socket is not taken off.

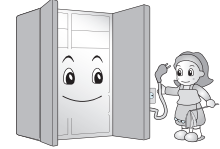


Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

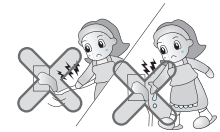

Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

 
Dust, water or an unstable connection may cause fire or electric shock.



Make sure of grounding.


Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

The incorrect grounding may cause breakdown and electric shock.

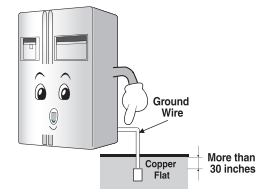

When the power cord or the power plug is damaged or the power outlet is loose or damaged, do not plug the power cord into the power outlet.

Doing so may cause electric shock or be the cause of a fire.

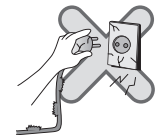

Unplug the power cord from the power outlet for cleaning or other requirements.

Not doing so may cause electric shock or injury.

2. When using the refrigerator


Do not place dangerous items, or heavy objects (including containers with liquid) on the refrigerator.

They may fall or spill and cause injury, fire or electric shock when opening or closing the door.



Do not install the Refrigerator in a wet place or any outdoor sheltered environment where it can be exposed to rain or moisture.

Doing this can cause corrosion and rust as well as electrical hazards.

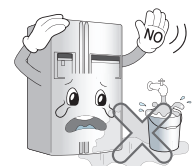

Do not lean on or hang from the doors or shelves of the refrigerator.


This will damage the doors and shelves of the refrigerator or cause it to topple over resulting in serious injury and damage. Always supervise children when they are near the refrigerator.



This refrigerator is intended for normal domestic indoor use. It must not be used outdoors, or stored in an out door location that is exposed to any weathering conditions.

Do not use or store inflammable materials such as chemicals, solvents, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

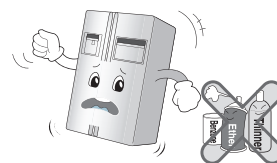

Do not use any heating or drying appliances inside the refrigerator, or use lit candles to remove odours.

It may cause explosion or fire.



Do not insert hands into the ice bucket or the ice dispenser. (only for the model with the dispenser).

It may cause injury while operating the icemaker.




Do not store medical supplies, temperature critical medicines, or scientific materials in the refrigerator.

If materials with strict temperature restrictions are stored they may deteriorate or react undesirably resulting in possible harm or risk.



Do not use combustible sprays near the refrigerator. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

They may cause a fire or explosion.

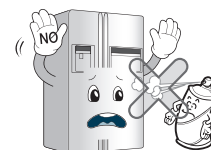

Install in places away from the heat sources such as fireplaces, heaters and ovens. Pay particular attention to avoid locating near gas related products.


Not doing so may become the cause of an explosion or fire.



Supply the refrigerator with drinkable water only (only for the model with the dispenser).


A health risk could occur if connected to non drinkable water.

Fill with potable water only. (for Non-Plumbing Type)

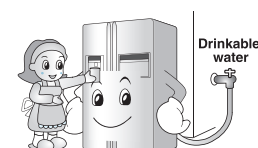


Do not place flower vases, cups, cosmetics, medicine or any container with water on the refrigerator.

They may fall, leak or spill resulting in possible electric shock or fire.

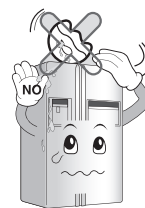


If the refrigerator has been exposed to any water submersion, it must not be used until it has been checked and certified by a licenced Electrician.

It may cause electric shock or fire.

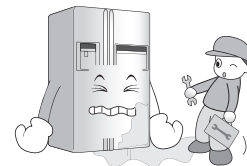


If a gas leak is detected, do not touch the refrigerator or the outlet and ventilate the room immediately.

- Any spark may result in an explosion or fire.
- Because this refrigerator uses natural gas (isobutene, R600a) as the environment-friendly refrigerant, even a small amount (80~90g) is combustible. If a gas leak occurs due to severe damage during delivery, installation or a sealed system malfunction, a spark may cause a fire. (Only for the model with the R600a.)

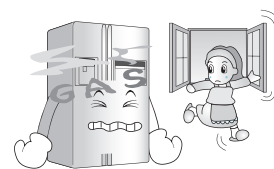

Do not move refrigerator while the compressor is operating.

Compressor may occur a temporary rattling noise. (This is normal and will not impact on the performance or the life of the compressor. The rattling will stop after the refrigerator comes to a rest.)

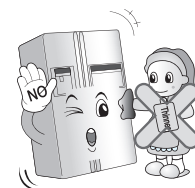


Do not spray water on the outside or the inside of the refrigerator, and do not clean it with harsh chemicals or solvents such as thinners or benzene.

Doing so can cause a fire, electric shock, malfunction. It can also damage the refrigerators finish.




When any burning smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact the manufacturer or an authorised service provider.

Although some smells and odors can be normal, no risks should be taken.

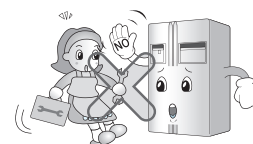

Do not allow any person except a qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock ,malfunction or fire.

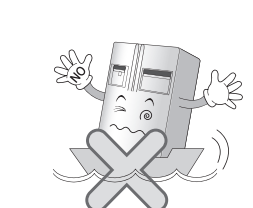

This refrigerator must not be used for any Commercial retail purpose or mobile applications. It has been designed for normal Domestic,indoor use only.

Applications outside of its intended purpose may cause malfunctions,breakages, electrical shock, fire, and loss of its stored contents.


When disposing the refrigerator, remove the doors but leave the shelves in place so that children may not easily climb inside.

This can prevent injury or death.




Install the refrigerator on a solid and level floor.

Installing it in an unstable place may cause death by the refrigerator falling over when opening or closing the door.

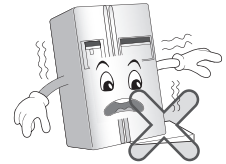

Do not insert hands or any objects or instruments into the bottom of the refrigerator, or the heatproof grill (exhaust vents) at the rear side of the cabinet.

It may cause electric shock or injury.

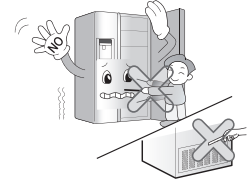

When disposing the refrigerator, contact your local City Council.

Your local Council can offer disposal options and advise the best method of disposal.




CAUTION

Violating these instructions may cause injury or damage to your home or its contents. Always be careful, please.


Do not touch food or containers in the freezer with wet hands.

This may cause frostbite.

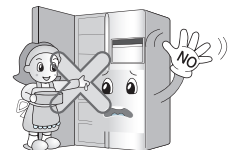

Do not dispense ice into thin crystal or ceramic ware.

It could break the glass, cup or ceramic ware and cause injury.

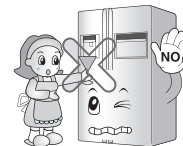


If the electricity is removed (e.g. Power failure) for an extended period of time, remove ice from ice bucket. (only for the model with the dispenser).

A Long term power failure may cause the ice in the ice bucket to melt and drip water onto the floor causing damage.



If the mains plug is removed from the wall outlet for any reason, wait for 5 minutes or longer before reconnecting the plug.

Not doing so may cause the operation of the refrigerator to fail.

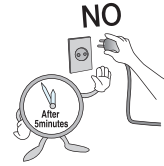

Do not put filled bottles in the freezer.

This will freeze the contents and break the bottle possibly resulting in injury.




Pull out the power plug by grasping the plug, not the cord.

Not doing so can cause electric shock, short circuit or fire.



Do not install the refrigerator in a wet place or outdoors in any sheltered area where the unit can be exposed to any weathering conditions.

Weathering conditions, water or moisture will cause corrosion, rust and electrical hazards.

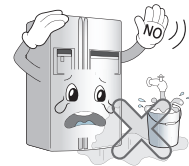


Do not insert hands into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.




Carry the fridge-freezer with the handles at the bottom of the front and the top of the rear.

Otherwise, your hands may slip possibly resulting in injury or product damage. Because the product is heavy, carrying it will require more than one person in order to avoid any possible injury.

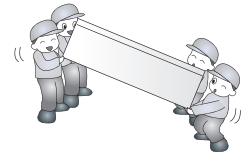


Care should be taken when opening or closing the doors to prevent injury to anyone who may be too close to the doors.

Children may be hurt by the handle or lower corners of the door when it is opened if they are too close.

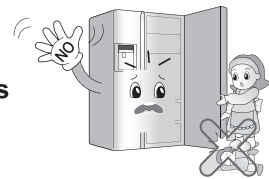

Do not put any living animals or non edible plants in the refrigerator.

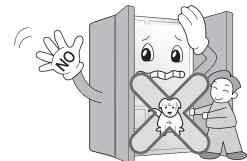

Ensure that all foods and containers are stored or stacked in a stable manner.

The container may fall during opening and closing of the door of the refrigerator and cause injury or breakages.

⚠ WARNING

1. When connecting the power

Prevent the power cord from being crushed or imprinted when the refrigerator is pushed in after the power plug is connected during the installation.

When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

It can be the cause of fire or electric shock.

Only connect the refrigerator to an approved outlet with the correct specified supply voltage.

It can be the cause of fire.


If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any hazard.

2. When using the refrigerator,

Do not damage the sealed system or any piping in or within the refrigerator.

Never Allow children to enter or play inside the compartments of the product.

It may endanger the life of a child if the child enters the refrigerator.

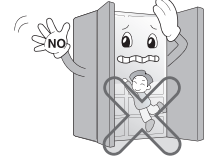


Take care when opening and closing the refrigerator doors. Vigorous opening or closing may cause the contents to topple out resulting in injury or damage.

It is normal for the Freezer door to open if the refrigerator door is closed with excessive force.

Do not use the home bar door as a resting table, or put heavy things on the Home Bar door.


(Only for the models with the Home Bar)

Heavy Items will cause damage to the door and possible injury.

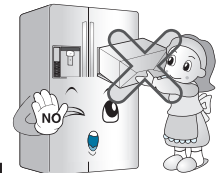

It is recommended that the refrigerator be disconnected during severe electrical storms or if not in use for long periods.

Power surges from electrical storms can seriously damage the refrigerators electrical components. If the refrigerator is not used for long periods, storage measures should be taken to avoid odours and vermin contamination.

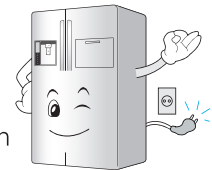

⚠ CAUTION

Do not insert the hands into the ice bucket or the ice dispenser.

Operating the ice maker incorrectly may cause injury.

Do not remove the external cover of the water and ice dispenser.

(Only for the models with automatic ice maker)

The mechanical and electrical parts of the icemaker may cause injury or an electrical shock hazard.



Arrange food and items appropriately inside the refrigerator.

The food may fall during opening and closing of the doors causing both damage to the unit or injury to persons.

CAUTION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING

-  Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposing, please consult with service agent or a similarly qualified person.



This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant leaking out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m² in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

**Child entrapment
warning****⚠ WARNING** : Risk of child entrapment.

Before you throw away your old refrigerator or freezer:

Take off the doors but leave the shelves in place so that children may not easily climb inside.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.


Don't store

Don't store or use gasoline, solvents or other flammable vapor and liquids in the vicinity of this or any other appliance.

Grounding (Earthing)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

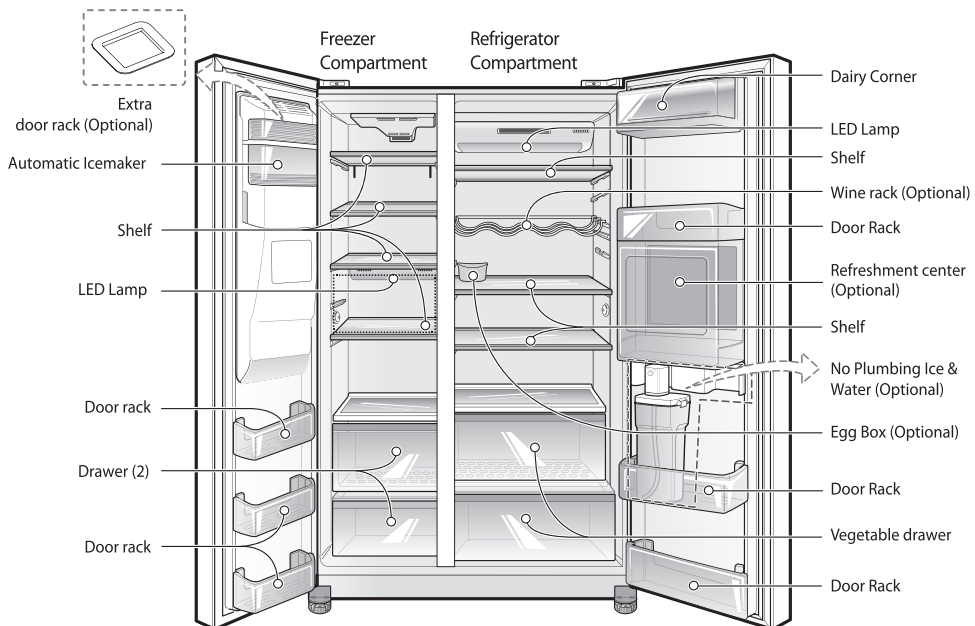
Identification of parts**NOTE**

Parts, features, and options vary by model. Your model may not include every option.

Select a good location

Where to Install

1. Place your appliance where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture. Do not operate the appliance outdoors where it can be exposed directly, or indirectly to sun, wind and rain.
3. To ensure proper air circulation around the fridge-freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
4. To avoid vibrations, the appliance must be levelled.
5. Do not install the appliance in temperatures of less than 5°C as the performance may be affected.

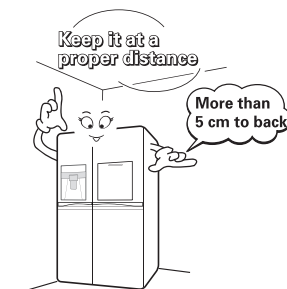

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.


All the packaging materials should be sent to the collection centre for recycling. For details of your local recycling centre, please contact your local council.

Door removal

⚠ Electric Shock Hazard

Disconnect electrical supply to refrigerator before installing. Failure to do so could result in death or serious injury.

If your access door is too narrow for the refrigerator to pass through, remove the refrigerator door and pass the refrigerator laterally. The door handles can be removed if only marginal clearances are required to allow the refrigerator to pass through a narrow door.

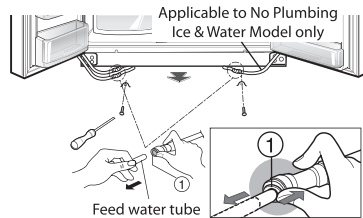

Remove feed water tube

Push in the feed water tube while depressing the connector

NOTE


- If the tube end is deformed or abraded, cut that part away

Remove the freezer compartment door

- 1) Remove the hinge cover by loosening the screws. Then separate all connection wires except for the earth.




- 2) Remove the keeper by rotating it counter clockwise (①) and then lifting the upper hinge up (②).

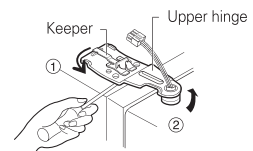

NOTE

- When removing the upper hinge, be careful that the door does not fall forwards.

- 3) Remove the freezer compartment door by lifting it upward. The door should be lifted high enough for the feed water pipe tube to be completely pulled out.

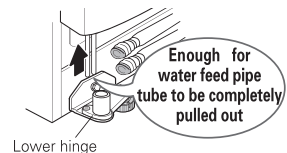

NOTE

- If you have removed the refrigerator compartment door to pass the appliance through an access door, lay the door down, but be careful not to damage the feed water pipe tube.


Remove the refrigerator compartment door

- 1) Loosen the hinge cover screws and remove the cover. Remove connection wires, if any, except for the earth line.




2) Remove keeper by rotating it clockwise (①) and then remove the upper hinge by lifting it up (②).

3) Remove the refrigerator compartment door by lifting it up.

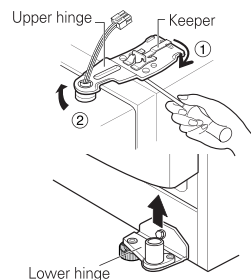

Pass the refrigerator


Pass the refrigerator laterally through the access door as illustrated to the right.

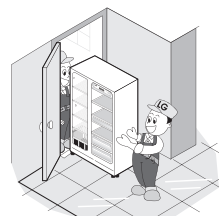



Door replacement

Once the fridge is through the access door, remount the fridge doors by following the door removal instructions in reverse.

Door Height adjustment

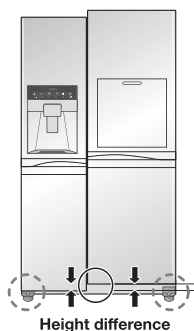

 Open the door and adjust the level by using a nut of height adjusting screw on the lower side of a door with a spanner.

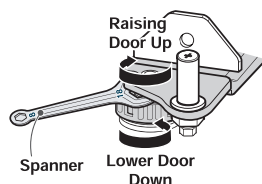

CAUTION

- Do not adjust the height level too much. The hinge pin can be fallen out.
(Range of height adjustment : Max. 3mm)

After levelling the door height

Next

The refrigerator doors will close smoothly by adjusting the front side using the height adjustment screw. If the doors do not close correctly, performance may be affected.

1. Wipe off all dust accumulated during shipping and clean your appliance thoroughly.
2. Install accessories such as the ice cube box, cover evaporating tray, etc., in their proper places. They are packed together to prevent possible damage during shipping.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.


Starting

When your refrigerator is first installed, allow it to stabilize at normal operating temperatures for 3-4 hours prior to filling it with fresh or frozen foods. If operation is interrupted, wait 5 minutes before restarting.

NOTE

- Allow the appliance to stand for 2 hours after installation.

Adjusting the temperatures and functions

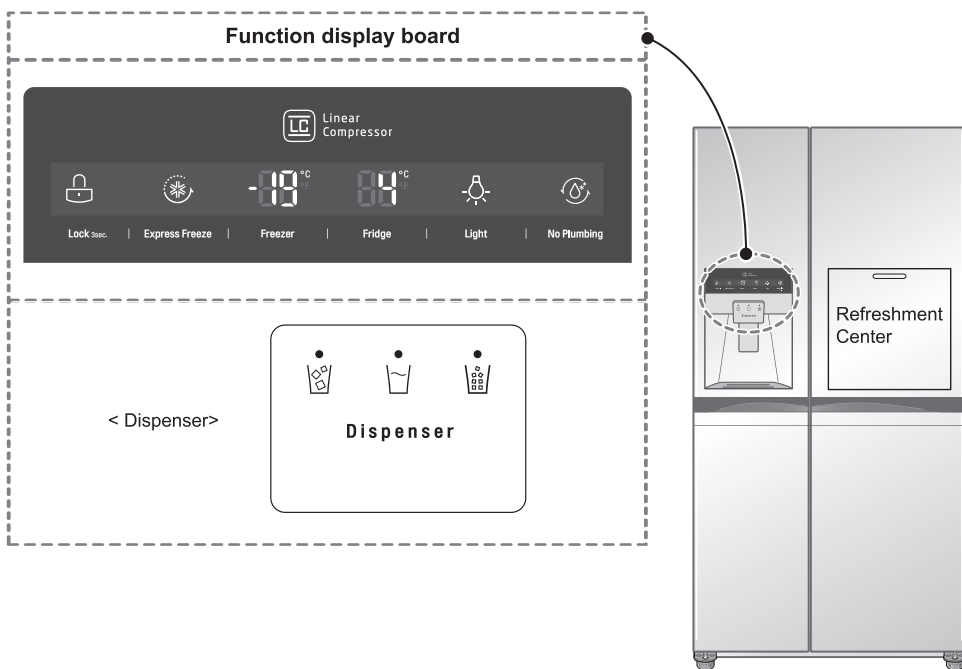

NOTE

 
- Your model may not include every option.
- The control display is touch operated. Excessive moisture on the display panel may result in its malfunction. Please keep the display panel dry and clean.

You can adjust temperature of the fridge and freezer compartments

Freezer Compartment temperature adjustment



Setting
temperature



Refrigerator Compartment temperature adjustment



Setting
temperature



How to adjust
the temperature
in the
refrigerator
compartment

- The actual inner temperature varies depending on the food status.
The indicated temperature is a target temperature, not the actual temperature within the refrigerator.
- Until your refrigerator has settled from transit, it will not perform at its optimum.
It takes 2 or 3 days for the fridge to stabilise. During this period, please adjust the temperature as above.

Dispenser use (on some model)

- Choose from crushed ice, water, and cubed ice and depress the dispenser switch with a glass or other container.

Cubed Ice

Select cubed ice by pressing the selection button, which will be highlighted.



Water

Select water by pressing the selection button, which will be highlighted.




Crushed Ice

Select crushed ice by pressing the selection button, which will be highlighted.



- **NB** : Please wait for 2~3 seconds before removing the cup from beneath the dispenser to ensure it has finished dispensing the ice or water.

Door mounted automatic icemaker (on some model)

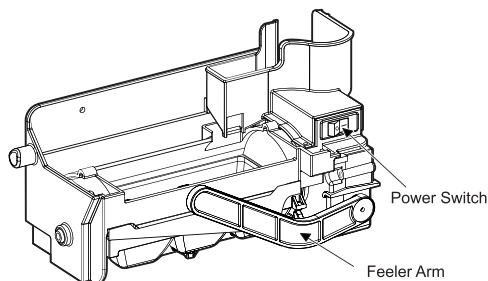

- The icemaker automatically makes 6 cubes of ice at any one time, which equals approximately 50-60 cubes per day. These quantities, however, may vary according to climatic conditions. E.g. the duration and amount of times the refrigerator door is opened.
- Icemaking stops when the ice storage bin is full.
- If you don't want to use the automatic icemaker, turn the icemaker switch to OFF. If you want to use automatic icemaker again, change the switch to ON.

NOTE

- The sound produced when the ice drops into the ice storage bin is normal, and is not caused by a defect.
- Do not press the test button continuously when the tray is filled with ice or water – Water may overflow or ice jamming may occur.
- When the bucket is not installed, the ice maker does not work.

! WARNING

- Do not put your hands into the Ice maker during operation. You may injure yourself.
- Do not store ice (cubes) for longer than two weeks., they can cause the dispenser to malfunction as the ice cubes clump together.


Precautions when using the dispenser (on some model)

To get cold water

The dispensed water will not be icy cold, but just cool or cold. If you want colder water, dispense ice before dispensing water.

If you have difficulty in replacing the ice storage bin

Rotate the rotary gear in 1/4 cycle as shown in the illustration and then push it back.

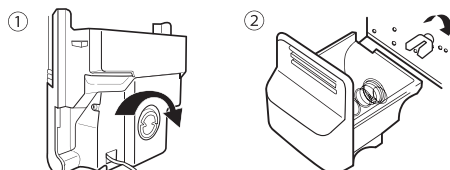

NOTE

- Figure depends on model.

When the ice dispenser will not operate properly

It is normal that the ice maker will not operate correctly when there is only a small amount of ice left in the storage bin. Allow approximately one day for the ice maker to restock.

If the ice forms into a solid lump and interrupts the operation of the automatic ice maker mechanism, remove the ice storage bin, separate the ice, discard the inseparable ice, and put the usable ice pieces back into the bin. The intermittent dispensing of ice is normal. However, since ice may get stuck and block the ice chute, regularly check the ice chute and clear any obstacles.




NOTE

- Figure depends on model.

! WARNING

- Never insert your hand or any other object into the ice chute as this may damage dispenser parts or cause injury to the hand.
- If ice is discoloured, stop using the dispenser and call the service centre.
- Do not touch the blade ① a as it may injure the hand.
- Never insert your hands into the ice maker during operation. It may cause injury ②.
- Do not allow your children to hang off the ice dispenser or the ice storage bin. This could cause injury.

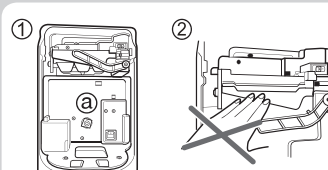

When ice maker does not operate smoothly

Ice is lumped together

- When ice is lumped together, take the ice lumps out of the ice storage bin, break them into small pieces, and place them back into the ice storage bin.
- * If ice is not used frequently, it may lump together.

Power failure

- Ice may melt and drop into the freezer compartment. Take the ice storage bin out and discard all the ice then dry it and place it back. After the machine is powered again, crushed ice will be automatically selected.

The unit is newly installed

- It takes about 12 hours for a newly installed refrigerator to make ice in the freezer compartment.

CAUTION

- When the door is open, the Ice and water dispenser do not work.
- If you close the door hard, it may cause water spilling over the ice maker.
- To prevent dropping the ice bucket, use both hands when removing it.
- To prevent injury, be sure to clean up any ice or water that may have dropped on the floor.
- Before being used, the leakage in these places should be examined.
- To prevent dropping the ice bucket, use both hands when removing it.
- If Water leakage occurs due to improper installation, Please contact installer.

The other functions

Door open warning

- A warning bleep will sound 3 times every 30 seconds if the main or minibar door is left open or ajar for more than a minute.
- Please contact your local service centre if the warning continues to sound when the door is closed.

Diagnosis (failure detection) function

- The Diagnosis function automatically detects the problem when a failure is found whilst using of refrigerator.
- If a fault occurs, and none of the refrigerator buttons or functions are working, do not turn power off but immediately contact your local service centre. Once powered off it may not be possible for a service engineer to use the Diagnosis function to detect what caused the original fault.

WARNING

- Use only the LED Lamps provided by manufacturer or service agents.
- Do not disassemble or repair the refrigerator by yourself.
 - You run risk of causing a fire, malfunction and/or personal injury.In case of malfunction, please contact your service agents.

How ice/cold water is supplied

Water is cooled while stored in the water tank in the refrigerator compartment, and then sent to the dispenser. Ice is made in the automatic ice maker and is then sent to the dispenser as either crushed or cubed ice.

NOTE

- It is normal that at first the water is not very cold. If you want colder water, add ice to the glass.

Throw away the first ice (about 20 pieces) and the first water (about 7 glasses) passing through the appliance when the refrigerator is initially installed.

The first ice and water may include particles or odour from the feed water pipe or the feed water box. This should also be done if the refrigerator has not been used for a long time.

Keep children away from the dispenser.

Children may push the dispenser switch incorrectly, or damage the dispenser by breaking associated parts. It may also cause them injury.

Always ensure that food does not block the ice chute.

If foods are placed at the entrance of the ice chute, ice may not be dispensed. The ice chute may become covered with ice powder if crushed ice is most commonly used. Remove the accumulated ice powder.

Never store beverage cans or other foods in the ice storage bin for rapid cooling.

This may damage the automatic ice maker.

Never use fine crystal glasses or crockery to collect ice.

Such glasses or containers may be broken.

Put ice into a glass before filling with water or other beverages.

Water may be splashed if ice is added after the drink.

Never touch the ice outlet either with hands or any implement.

Touching the ice outlet may cause a breakage or hand injury.

Never remove the ice maker cover. It might be necessary from time to time to level the ice so the storage bin can fill to capacity.

If ice is allowed to pile up near the ice maker, the ice maker may think that it is already full and it will stop producing ice.

If discolored ice is dispensed, stop using the appliance and contact your service centre immediately.

Ice may be jammed in ice chute causing the refrigerator to fail.

Never use narrow or deep glassware when using the icemaker

as ice can back up into the ice chute and cause a malfunction.

Keep the glass at a proper distance from ice outlet.

A glass too close to the outlet may hinder ice from coming out.

 
WARNING

- Do not store articles on the top of the appliance.
 - When you open or close the door, the articles may fall and cause personal injury and/or material damage.
- Do not insert your hands into the bottom area under the appliance.
 - Any sharp edges may cause personal injury.
- Do not leave the doors of the refrigerator open while the refrigerator is unattended and do not let children enter inside of the refrigerator.
 - There is a risk of children entrapment and serious personal injury because of low temperature.
- Do not let children step on drawer's cover. - It may break and cause slip hazard.

Lock

This button locks the other buttons

- Locking or Release is repeated whenever the **Lock Sec.** is pressed for more than 3 seconds.
- If you use the lock button, none of the other buttons will work until you unlock them.



Express Freezer

Please select this function for fast freezing.

 
- OFF → ON → OFF is repeated whenever pressing **Express Freeze** button.
- The arrow graphic remains On after flickering 4 times when selecting
- Express Freeze will automatically turn off after a fixed time passes.



Dispenser light (on some model)

This button turn the dispenser light on and off.

- The dispenser light function is turned ON or OFF by pressing **Light** button.



Water tank condition (on some model)

- Next icon indicates the condition of the water tank on no-plumbing model.
- When the water tank is installed correctly, the indicator light will turn on. Otherwise, the light will not turn on.
- This button has no function.




Refreshment centre(Applicable to some models only)

How to use


Open the minibar door.

- You can access the minibar without opening the refrigerator door, thus saving electricity.
- Inner lamp is lit in the refrigerator compartment when the minibar door opens, making it easy to identify the contents.

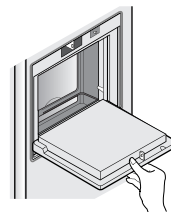


Use the minibar door as a stand

- Never use the minibar door as a chopping board and take care not to damage it with sharp tools.
- Never rest or press on the open minibar door.

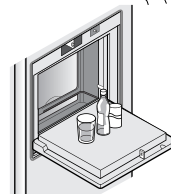


Never remove the inner minibar door cover

- The minibar can not function correctly without the cover. Only applies to models with inner minibar cover.

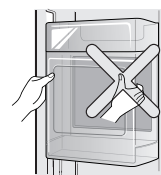

Never place heavy items on the minibar door or allow children to hang or sit on it.

- Not only may the minibar door be damaged, but children may be hurt.

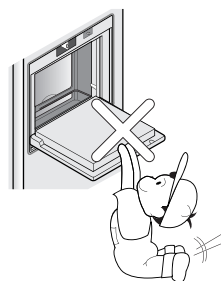

Shelf


How to use

You can store side dish or refrigerated food on the shelf with sufficient space in between the containers.




How to disassemble


1. Hold the rear part of the shelf slightly up and pull it forward.

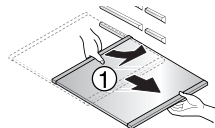

2. Lift the shelf slightly up after pulling it half way.

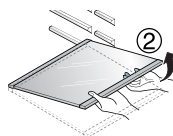

3. While holding the shelf slightly, tilt the shelf to pull it out.

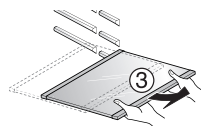

Dairy corner

 
How to use

You can store dairy goods such as butter, cheese etc.



How to disassemble

Hold the basket with both hands and pull it out by pulling it up (1).




► If you close the refrigerator door with the dairy corner left open on the door side, the refrigerator door may not be closed properly. Therefore you must be careful.



Wine holder (Applicable to some models only)

 
Bottles can be stored laterally with this wine rack.



Fresh Air Filter**Deodorizer (Applicable to some models only)**

This system efficiently absorbs strong odours by using an optical catalyst.

This system does not have any affect on stored food.

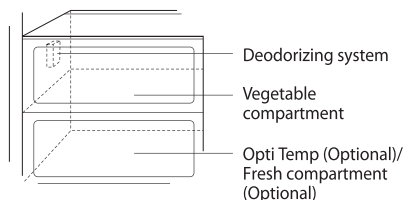**How to use the deodorizing system**


- The deodorizer is located behind the vegetable compartment. It can be removed for cleaning with soapy warm water from time to time.
- Please use closed containers to store pungent food. Odours are easily absorbed by other food in the compartment.

Freezer Compartment (Applicable to some models only)

If a large quantity of food is to be placed in the freezer compartment:

The middle drawer of freezer compartment shall be taken out of the appliance and food shall be stacked directly on the wire shelf.

The Freezer compartment also provides shelves to maximise the food storage capacity. The drawer should be used when storing items with high moisture content.

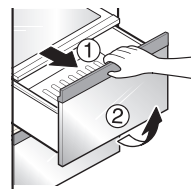
**Max Freezing capacity**

If there is already food in the compartment, please set freezer to the coldest condition (depends of type: -23/-24°C) and press on "Express frz" button several hours before placing fresh produce in the freezer compartment to get maximum capacity.

As a rule 4 hours is adequate.



Egg box (Depends on model)

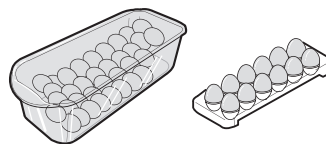


NOTE

- Never use the egg box as an ice storage bin. It can be broken.
- Never store the egg box in the freezer compartment or fresh compartment.

Using door rack (Applicable to some models only)

If the ice maker is not used more room is available for foodstuffs.

- Disassemble and empty the automatic ice maker.
- Turn off the ice maker (①).
- Assemble the door rack with care.
- Store food products in a way preventing them from falling out while opening the door.

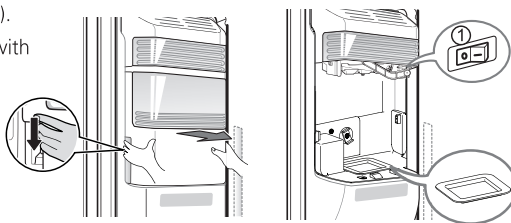


Freezer/Fridge door rack

How to use

You can store small packaged frozen food (Freezer basket), small packaged refrigerated food or beverages (Fridge basket) such as milk, beer etc. But, do not store ice cream or food to store for a long period of time (Freezer basket) etc.


How to disassemble

 Hold the basket with both hands and slightly lift up the front part to pull it out.



How to reassemble

 Hold the basket with both hands and reassemble one side at a time by pushing it in.




No Plumbing Ice & Water


You can use the water in the water tank or general water bottles to use the Auto Ice Maker function and Water Dispenser function without having to connect the water pipe to the refrigerator.

The other functions


Turn the secure switch into "OPEN" position as shown in ①. Next to loosen the water tank hold and pull the cap of the water tank ② to loosen the water tank.

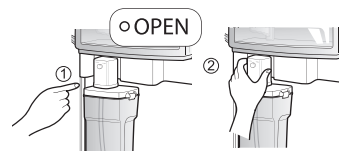

To fill the water tank Lift up the clamps on both sides to open the water tank cover, and then fill the tank. Pour water up to the marked line. When the tank is full, close the tank cover and lock the clamps on both sides. Pour water up to the marked line.

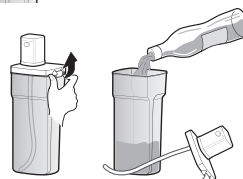


Adjust the top of the water tank cap and align the pump tube with the centre, pushing the tank in firmly, as shown in ③. Turn the security switch to the "CLOSE" position ④.

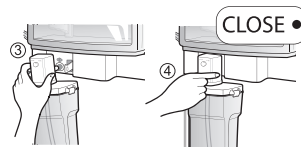

When using the water bottle

When using the water bottle.

You can connect the cap to the general water bottle to use the water bottle, instead of the water tank provided. Turn the cap of the water tank in Open direction to open it. Open the water bottle and connect the cap. Only the water bottle of 1.5 ~2.0ℓ (35cm) can be used and there are some types that are not compatible.

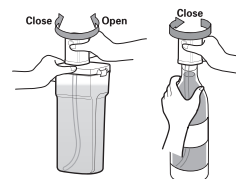

! WARNING

- Fill with potable water only.

NOTE

- When assembling or disassembling the water tank, be careful not to apply excessive force as it can damage the water tank.
- If there is no water in the water tank, you will not be able to use the Auto Ice Maker function and Water Dispenser function.
- Using other liquid besides water can cause problems to the pump.
- When the water in the water tank is low, the size of the ice cubes may become smaller.
- It's a good idea to clean out the water tank initially before filling it with water and placing it into position.
- The method of using the Dispenser and Ice Maker is the same as other common Dispenser models.
- When using the water bottle instead of the water tank, do not throw away the water tank.
- Because the water tank can get heavy, don't let children use or hold the water tank, especially with one hand.
- You may hear the water pump operating 9~10 times per day.
- If you remove the water bucket, you can use the storage space more widely. (However, you will not be able to use the dispenser and auto icemaker.)

(Refer to identification of parts)

Store wine.

Store small foods such as bread, snacks, etc..

Store various frozen foods such as meat, fish, ice cream, frozen snacks, etc..

- Store small packed frozen food.
- Temperature is likely to increase as door opens.
So, do not store long-term food such ice cream, etc..

Store meat, fish, chicken, etc.. after wrapping them with tin foil.

Store dry.

Store milk products such as butter, cheese, etc..

Place this egg box in the proper location.

Store foods of frequent use such as beverage, etc..

Store side dishes or other foods at a proper distance.

Store vegetables or fruits.

Store vegetable, fruits, meat to thaw, raw fish, etc...
setting the conversion switch as necessary. Be sure to
check the conversion switch setting before storing
foods.



CAUTION

Storing foods

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavour.
- Do not store food which goes bad easily at low temperatures, such as bananas, and melons.
- Allow hot food to cool prior to storing. Placing hot food in a refrigerator could spoil other food, and lead to higher energy consumption.
- When storing food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator and causes temperatures to rise.
- Never keep too much food in the door rack as it may push against the inner racks so that the door cannot fully close.
- Do not put items filled with water on the refrigerator.- If spilled, there is a risk of fire or electric shock.
- Do not overfill the refrigerator with food. - When you open the door, an item may fall out and cause personal injury or material damage.
- Do not put items filled with water on the refrigerator.- If spilled, there is a risk of fire or electric shock.
- Do not place a lighted candle in the refrigerator for removing bad odors. - This may result in electric shock or fire.
- Bottles should be stored tightly together so that they do not fall out.

Freezer Compartment

CAUTION

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrients.
- Please observe maximum storage times and expiry dates of frozen goods.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Do not touch cold foods or containers - especially metallic containers - with wet hands or place glass products in the freezer compartment.
- You may get chill blains, and glass containers may break when frozen, causing personal injury.

Refrigerator Compartment

CAUTION

- Avoid placing sauces on top refrigerator shelves, which could freeze on direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack or box, ensure that they are fresh, and always store them in an upright position, which keeps them fresh longer.

NOTE

- If you keeping the refrigerator in a hot and humid place, frequently open the door or store a lot of vegetables, dew may form. This has no effect on operation or performance. Remove the dew with an absorbent dry cloth.

General information

Vacation time

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan not to operate, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odour formation.

And won't use water or ice dispensers, close the water valve. - Otherwise, water leakage may occur.

Power failure

Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.

If the products equipped with LED Lamp, do not disassemble Lamp Cover and LED Lamp by yourself. - Please contact your service agents.

If you move

Remove or securely fasten down all loose items inside the refrigerator. To avoid damaging the height adjusting screws, turn them all the way into the base.

Anti condensation pipe

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation. Don't be alarmed. This is due to the anti-condensation pipe, which pumps through the refrigerator to prevent "sweating" on the outer cabinet wall.

Understanding sounds you may hear

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they describes the kinds of actually are. The following sounds and what may be making them:

- The defrost timer will click when the automatic defrost cycle begins and ends. The thermostat control (or refrigerator control, depending on the model) will also click when cycling on and off.
- Rattling noises may come from the flow of reftigerant, the water line, or items stored on top of the refrigerator.
- You refrigerator is designed to run more efficiently to keep your food items at the desired temperature. The high efficiency compressor may cause your new refrigerator to run longer than your old one, and you may hear a pulsating or high-pitched sound.
- You may hear the evaporator fan motor circulating the air through the refrigerator and freezer compartments.
- As each cycle ends, you may hear a gurgling sound due the refrigerant flowing in your refrigerator.
- Contraction cause a popping noise to and expansion of the inside walls may a popping noise.
- Water dripping on the defrost heater during a defrost cycle may cause a sizzling sound.
- You may hear air being forced over the condenser by the condenser fan.
- You may hear water running into the drain pan during the defrost cycle.

Suggestion for energy saving

- Please do not keep the door open for a long time, close door in the shortest time.
- Storing too much food is not recommended. Sufficient space should be left to ensure proper air circulation.
- Do not set the temperature of fridge freezer lower than needed. Do not put food near the temperature sensors. Keep the distance of at least 5mm from the sensors.
- Allow hot food to cool prior to storing. Placing hot food in the fridge freezer could affect other food, and lead to higher energy consumption.
- Do not block air vents. Smooth circulation of cold air maintains the appropriate temperature.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and causes the temperature to rise.
- The configuration of shelves, baskets and drawers supplied by the manufacturer is the most efficient in terms of energy saving

Cleaning

It is important that your refrigerator be kept clean to prevent undesirable odours. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Exterior

Use a luke warm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean damp cloth and then dry.

Interior

Regular cleaning is recommended. Wash all compartments with a baking soda solution or a mild detergent and warm water. Rinse and dry.

After cleaning

Please verify that the power cord is not damaged, power plug is not overheated, or power plug is well inserted into the wall outlet socket.

WARNING

Always remove power cord from the wall outlet prior to cleaning near to electrical equipment (lamps, switches, controls, etc.). Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing an electric shock. Never use metallic scouring pads, brushes, coarse abrasive cleaners, strong alkaline solutions, flammable or toxic cleaning liquids on any surface. Do not touch frozen surfaces with wet or damp hands, because damp object will stick to extremely cold surfaces.

CAUTION

- Do not directly spray water inside or outside the refrigerator. - There is a risk of fire or electric shock.
- Do not spray cleaning products directly on the display. - Printed letters on the display may come off.
- Remove any foreign matter or dust from the power plug pins. But do not use a wet or damp cloth when cleaning the plug, remove any foreign material or dust from the power plug pins. - Otherwise there is a risk of fire or electric shock.

Cleaning the water dispenser and the water tank. (Applicable to some models only)

Frequency of cleaning: every 2 months or when is needed.

Procedure:

1. Before cleaning pour out water from the water tank.
2. Mix 0.5ℓ of water with proper amount of dispenser cleaning product (and then pour it into the water tank). Do not use any harsh chemicals.
3. Dispense 1 cup of solution and leave the rest of it inside dispenser system for time shown on the cleaning product label. Do not drink water from the dispenser while all the cleaning process!
4. Dispense rest of the solution until the tank is empty.
5. Clean the water tank with a soft sponge and rinse it under tap water.
6. Fill the water tank with fresh water. Dispense 3 cups of water, one after another with 20s breaks. Fill the water tank with boiled water and dispense one cup.
7. Check taste of water. If the taste is tainted repeat action no.6 until water has non-suspicious taste.

We recommend NOT to leave water inside the water tank for more than 2 days.

Occurrence	Possible cause	Solution
Sediment seen inside the water tank	Type of water supply or water dispenser needs cleaning.	Clean the water tank. Always boil water before placing it into the water tank.
Bad smell and taste of water	Water not dispensed for extended period.	Pour out old water. Clean the water tank. Fill the water tank with new water.

Smart Diagnosis



Should you experience any problems with your refrigerator, it has the capability of transmitting data via your telephone to the LG service center. This gives you the capability of speaking directly to our trained specialists. The specialist records the data transmitted from your machine and uses it to analyze the issue, providing a fast and effective diagnosis.

If you experience problems with your refrigerator, call to the LG service center. Only use the Smart Diagnosis feature when instructed to do so by the LG call center agent. The transmission sounds that you will hear are normal and sound similar to a fax machine.

Smart Diagnosis cannot be activated unless your refrigerator is connected to power. If your refrigerator is unable to turn on, then troubleshooting must be done without using Smart Diagnosis.

Using Smart Diagnosis


First, call to the LG service center. Only use the Smart Diagnosis feature when instructed to do so by the LG call center agent.

1. Lock the display. To lock the display, press and hold the Lock button for three seconds. (If the display has been locked for over five minutes, you must deactivate the lock and then reactivate it.)




2. Open the right refrigerator door.

3. Hold the mouthpiece of your phone in front of the speaker that is located on the right hinge of the refrigerator door, when instructed to do so by the call center.

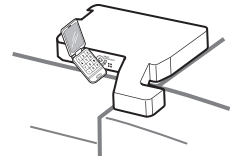

4. Press and hold the Freezer Temperature button for three seconds while continuing to hold your phone to the speaker.

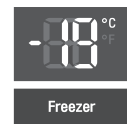

5. After you hear three beeps, release the Freezer Temperature button.
6. Keep the phone in place until the tone transmission has finished. This takes about 3 seconds, and the display will count down the time. Once the countdown is over and the tones have stopped, resume your conversation with the specialist, who will then be able to assist you in using the information transmitted for analysis.

NOTE

- For best results, do not move the phone while the tones are being transmitted.
- If the call center agent is not able to get an accurate recording of the data, you may be asked to try again.
- Call quality differences by region may affect the function.
- Use the home telephone for better communication performance, resulting in better service.
- Bad call quality may result in poor data transmission from your phone to the machine, which could cause Smart Diagnosis to not work properly.

Trouble shooting

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Occurrence	Possible cause		Solution
Running of refrigerator			
Refrigerator compressor does not run.	Refrigerator control is off.		Set refrigerator control. See setting the controls.
	Refrigerator is in defrost cycle.		This is normal for a fully automatic defrosting refrigerator. The defrost cycle occurs periodically.
	Plug at wall outlet is disconnected.		Make sure plug is tightly pushed into outlet.
	Power outage. Check house lights.		Call your electricity supplier.
Refrigerator compressor runs too often or too long.	Refrigerator is larger than the previous one you owned.		This is normal. Larger, more efficient units run longer in these conditions.
	Room or outside weather is hot.		It is normal for the refrigerator to work harder under these conditions.
	Refrigerator has recently been disconnected for a period of time.		It takes some hours for the refrigerator to cool down completely.
	Large amounts of warm or hot food may have been stored recently.		Warm food will cause the refrigerator to run longer until the desired temperature is reached.
	Doors are opened too frequently or too long.		Warm air entering the refrigerator causes it to run longer. Open the door less often.
	Refrigerator or freezer door may be slightly open.		Make sure the refrigerator is level. It is normal for the refrigerator to have a slight lean backwards. Keep food and containers from blocking door. See problem section OPENING/ CLOSING of doors.
	Refrigerator control is set too cold.		Set the refrigerator control to a warmer setting until the refrigerator temperature is satisfactory.
	Refrigerator or freezer gasket is dirty, worn, cracked, or poorly fitted.		Clean or change gasket. Leaks in the door seal will cause refrigerator to run longer in order to maintain desired temperatures.
	Thermostat is keeping the refrigerator at a constant temperature.		This is normal. Refrigerator goes on and off to keep the temperature constant.

Occurrence	Possible cause	Solution
Refrigerator compressor does not run	Thermostat is keeping the refrigerator at a constant temperature.	Set refrigerator control. See setting the controls.
Temperatures are too cold		
Temperature in the freezer is too cold but refrigerator temperature is satisfactory.	Freezer control is set too cold.	Set freezer control to a warmer setting until the freezer temperature is satisfactory.
Temperature in the refrigerator is too cold but freezer temperature is satisfactory.	Refrigerator control is set too cold.	Set refrigerator control to a warmer setting until the refrigerator temperature is satisfactory.
Food stored in drawers freezes.	Refrigerator control is set too cold.	See above solution.
Meat stored in fresh meat drawer freezes.	Meat should be stored at a temperature just below the freezing point of water (32°F, 0°C) for maximum fresh storage time.	It is normal for ice crystals to form due to the moisture content of meat.
Temperatures are too warm		
Temperatures in the refrigerator or freezer are too warm.	Freezer control is set too warm.	Set the refrigerator control to a colder setting until the freezer or refrigerator temperature is satisfactory.
	Refrigerator control is set too warm. Refrigerator control has some effect on freezer temperature.	Set the refrigerator control to a colder setting until the freezer or refrigerator temperature is satisfactory.
	Doors are opened too frequently or too long.	Warm air enters the refrigerator/freezer whenever the door is opened. Open the door less often.
	Door is slightly open.	Close the door completely.
	Large amounts of warm or hot food may have been stored recently.	Wait until the refrigerator or freezer has a chance to reach its selected temperature.
	Refrigerator has recently been disconnected for a period of time.	A refrigerator requires some hours to cool down completely. Do not place food items inside the refrigerator until it has initially reached its set temperature, or has cooled down considerably.
Temperature in the refrigerator is too warm but the freezer temperature is satisfactory.	Refrigerator control is set too warm.	Set the refrigerator control to a colder setting.

Occurrence	Possible cause	Solution
Sound and noise		
Louder sound levels when refrigerator is on.	Today's refrigerators have increased storage capacity and maintain more even temperatures.	It is normal for sound levels to be higher, provided that the performance is not compromised.
Louder sound levels when compressor comes on.	Refrigerator operates at higher pressures during the start of the ON cycle.	This is normal. The sound will level off as the refrigerator continues to run.
Vibrating or rattling noise.	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and solid and can adequately support refrigerator.
	Refrigerator control is set too cold.	See above solution.
	Items placed on the top of the refrigerator are vibrating.	Remove items.
	Dishes are vibrating on the shelves in the refrigerator.	It is normal for dishes to vibrate slightly. Move dishes slightly. Make sure refrigerator is level and firmly set on floor. It is normal for the refrigerator to have a slight lean backwards.
	Refrigerator is touching wall or cabinets.	Move refrigerator so that it does not touch the wall or refrigerator.
Water/Moisture/ Ice inside refrigerator		
Moisture collects on the inside walls of the refrigerator.	The weather is hot and humid which increases the rate of frost buildup and internal sweating.	This is normal.
	Door is slightly open.	See problem section opening/closing of doors.
	Door is opened too often or too long.	Open the door less often.
Water/Moisture/ Ice outside refrigerator		
Moisture forms on the outside of the refrigerator or between doors.	Weather is humid.	This is normal in humid weather. When humidity is lower, the moisture should disappear.
	Door is slightly open, causing cold air from the inside the refrigerator to meet warm air from the outside.	This time, close the door completely.

Occurrence	Possible cause	Solution
Odours in refrigerator		
	Interior needs to be cleaned.	Clean interior with sponge,warm water and baking soda.
	Food with strong odour is in the refrigerator.	Deodorizer needs to be cleaned or replaced
	Some containers and wrapping materials produce odours.	Use a different container or brand of wrapping materials.
Opening/Closing of doors/Drawers		
Door(s) will not close.	Food package is keeping door open.	Move packages that keep door from closing.
	Door was closed too hard, causing other door to open slightly.	Close both doors gently.
	Refrigerator is not level. It rocks on the floor when it is moved slightly.	Adjust the height adjusting screw.
	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and can adequately support refrigerator. Contact carpenter to correct sagging or sloping floor. It is normal for the refrigerator to have a slight lean backwards.
	Refrigerator is touching wall or cabinets.	Move refrigerator.
Drawers are difficult to move.	Food is touching shelf on top of the drawer.	Keep less food in drawer.
	Track that drawer slides on is dirty.	Clean drawer and track.
Dispenser		
Dispenser will not dispense ice	Ice storage bin is empty.	When the first supply of ice is dropped into the bin, the dispenser should operate.
	Freezer temperature is set too warm.	Turn the freezer control to a higher setting so that ice cubes will be made. When the first supply of ice is made, the dispenser should operate.
	Household water line valve is not open.	Open household water line valve and allow sufficient time for ice to be made. When ice is made, dispenser should operate.
	Refrigerator or freezer door is not closed.	Be sure both doors are closed.

Occurrence	Possible cause	Solution
Dispenser will not dispense ice.	Ice has melted and frozen around auger due to infrequent use, temperature fluctuations and/or power outages.	Remove ice storage bin, and thaw and the contents. Clean bin, wipe dry and replace in proper position. When new ice is made, dispenser should operate.
Ice dispenser is jammed.	Ice cubes are jammed between the icemaker arm and back of the bin.	Remove the ice cubes that are jamming the dispenser.
	Ice cubes are frozen together.	Only the ice cubes made by the ice maker should be used with the dispenser.
	Ice cubes that have been purchased or made in some other way have been used in the dispenser.	Use a different container or brand of wrapping materials.
Dispenser will not dispense water.	Water bottle is low or empty.	refill water bottle with potable water.
	Refrigerator or freezer door is not closed.	Be sure both doors are closed.
Water has an odd taste and/or odour.	Water has been in the tank for too long.	Dispense and discard 7 glasses of water to freshen the supply. Dispense and discard an additional 7 glasses to completely rinse out tank.
	Unit not properly connected to cold water line.	Connect unit to cold water line which supplies water to kitchen tap.
Sound of ice dropping	This sound is normally made when automatically made ice is dropped into ice storage bin. Volume may vary according to refrigerator's location.	
Sound of water supply	This sound is normally made when the auto ice maker is supplied with water after dropping the ice it has made. This is called "harvesting".	
The display shows the word OFF (After 20 seconds the word OFF disappears but the refrigerator is still in the v DEMO MODE).	The refrigerator is in the Demo(Demonstration) Mode. The Demonstration Mode disables the cooling system, only the lighting system and the display operate in a regular way. To disable the Demo Mode open the door and holding down the Fridge button press the EXPRESS F button 3 times. After deactivating the Demo Mode, the previously set values will appear.	
Other	Please thoroughly read 'Automatic ice maker and dispenser' in this manual.	

