



用戶手冊 冷凝式乾衣機

(2P~25P)

使用前請先仔細閱讀本用戶手冊。
請妥善保存，以備日後參考之用。
請記下產品型號及產品序號。
預約客戶服務時，請先準備上述資料。

OWNER'S MANUAL LG DRYER

(26P~49P)

Please read this manual carefully prior to use.
Keep it for future reference.
Write down model name and serial number of your product.
Have all these details ready when you call for service.

WF-D90PW



MFL67708678

www.lg.com

特點



● 超大滾桶容量

LG 乾衣機具有 9 公斤超大容量，讓你可一次烘乾更多衣物。




● 減少電力消耗

LG 乾衣機在乾衣系統及溫度控制上，採用了尖端技術和全新設計，能較一般乾衣機使用更少電力。




● 縮短乾衣時間

使用高效率的通風設備和優化的加熱器，令乾衣時間大大縮短。

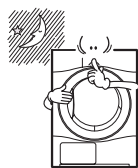

● 減低噪音水平

LG 乾衣機採用創新吸音及隔音技術，減低了操作時的噪音，令 LG 乾衣機較傳統乾衣機更寧靜。

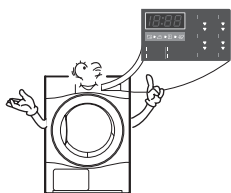

● 容易使用

本乾衣機配備了偌大的電子控制LED 顯示屏，操作簡便。你只需選擇所需程序，LG 乾衣機便會輕鬆幫你完成乾衣工作。

目錄

安全指引	3
安裝指引	6
外觀和設計	10
運作你的乾衣機	11
附加功能	15
乾衣機的保養	17
智能使用的附加提示	20
疑難排解指南	22
技術數據	24
保養	25


安全指引

使用乾衣機時，請遵從以下基本安全指引，以免引致觸電、火災、受傷或其他財物損失。

警告


如不遵從以下守則，可引致嚴重受傷或死亡。

× 禁止事項

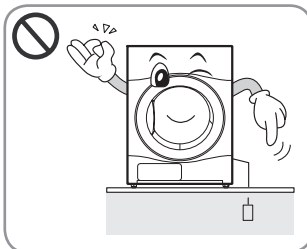


- 插入電源線前，請確認電源線已接地並接駁到斷路器。

沒有接地可能引致故障或短路。

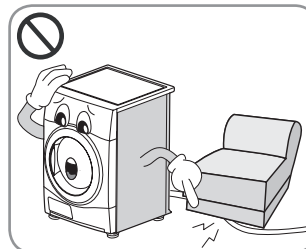


- 切勿使用損壞的電源線或以重物壓住電源線。

損壞的電源線可能引致火災或短路。

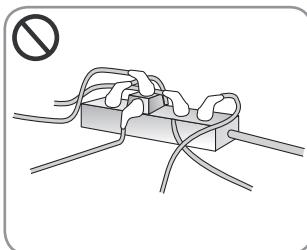


- 切勿與其他電器共同使用一個電源插座。
- 切勿使用拖板。

插座過熱可能引致火災。

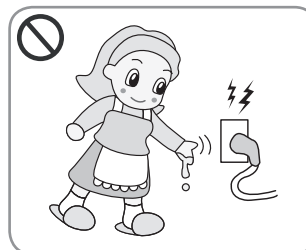


- 手濕時切勿抓住電源線或按動開關。

此舉可能引致觸電。

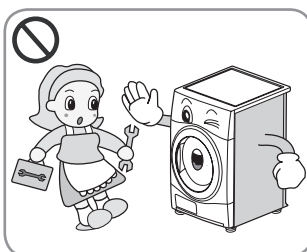


- 安裝時請勿拆除頂板。

此舉可能引致故障、火災或短路。

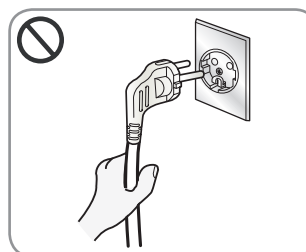


- 拔出電源線時，請握住插頭拔出，切勿抓住電線拔出。

此舉可能令電線斷裂並引致熱或火災。

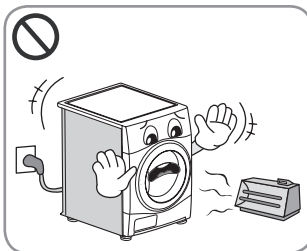

- 請把乾衣機安裝在遠離電爐、蠟燭或其他易燃物品的地方。


這些物品可能會令零件溶解並引致火災。

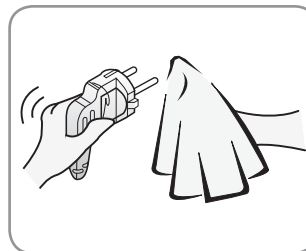

- 請抹去電源線上的污漬，並穩固地插回電源插座。


電源線上的污漬，或不正確連接，都可能引致火災。

安全指引

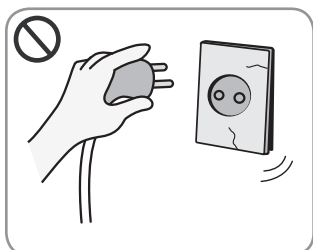


• 切勿使用損壞的電源線、插頭或插座。

此舉可能引致火災或觸電。

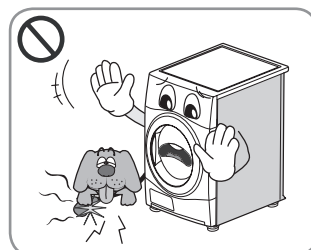

• 避免寵物啃咬乾衣機。

寵物可能因觸電致死，或損毀乾衣機機身。

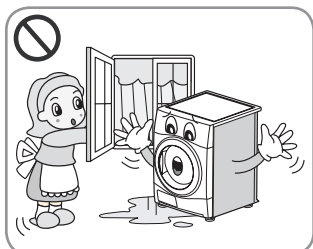


• 切勿把乾衣機安裝或暴露在室外地方。

此舉可能引致觸電、火災、故障或變形。




• 切勿使用尖銳物件按動按鈕，例如螺絲批或大頭針。

此舉可能引致觸電。

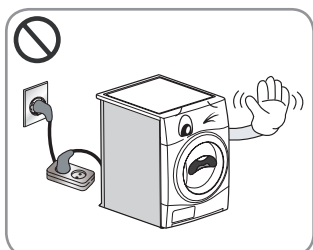


• 切勿將電源線連接到拖板或萬能蘇。

此舉可能引致觸電或火災。

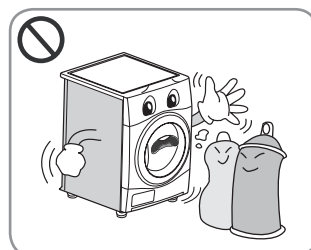


• 切勿對那些已使用易燃或易爆物質的衣物（如蠟、油、漆、汽油、脫脂劑、乾洗溶劑、煤油等）進行清潔、清洗、浸泡，或對這些沾有易燃物質的衣物進行烘乾。

此舉可能引致爆炸或火災。

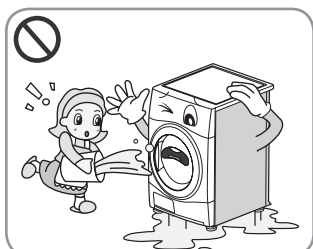


• 切勿將水灑到乾衣機上。

此舉可能引致火災或短路。

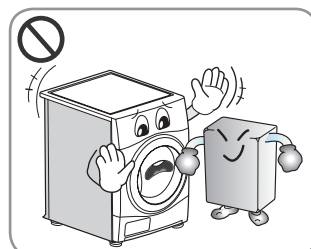


• 切勿在乾衣機附近放置易燃物件。

此舉可能產生毒氣，引致零件損毀、爆炸或火災。

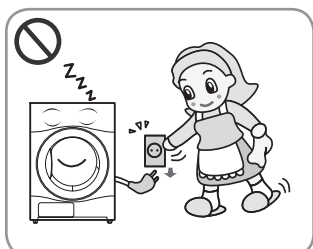

• 乾衣機停止使用或在清潔時，請拔掉電源插頭。

水或污漬可能引致觸電。

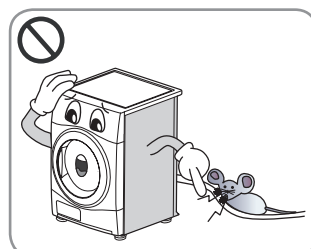


• 避免蟑螂或其他昆蟲接近乾衣機。

這些昆蟲可能會啃咬並損毀電源線。



• 切勿讓小孩或寵物在乾衣機上或機內玩耍。


小孩可能會從機上墮下。寵物或小孩可能因轉動的零件而受傷，或在滾桶內導致窒息。

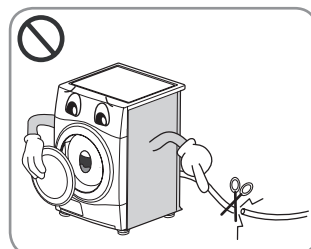

• 棄置乾衣機前，請拆除機門，並將電源線剪成一半。


這是為避免小孩在滾桶內玩耍或其他人對乾衣機進行不當處理而引致受傷。

安全指引

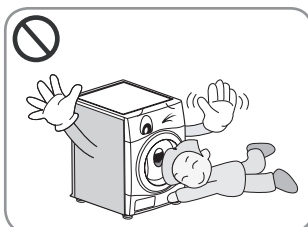


- 應監督幼童，確保他們不會在乾衣機玩耍。
- 此機並不適合幼童或體弱多病者在沒有人監督的情況下使用。

小孩可能會從機上墮下。寵物或小孩可能因轉動的零件而受傷，或在滾桶內導致窒息。

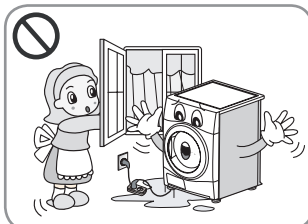


- 如果本產品是使用延長電線組件或手提電力插座供電，則必須對手提電器插座上的延長電線組件，進行適當安裝，使其不會被濺濕或讓濕氣滲入。

此舉可能引致觸電、火災、故障或變形。

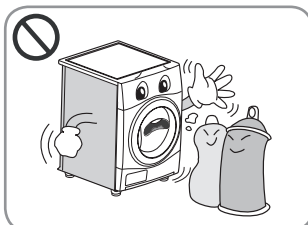


- 沾上或浸泡過植物油或煮食油的物件，如放進滾桶乾衣機，可引致火災。
- 應先用熱水加入額外洗衣劑清洗沾了煮食油、丙酮、酒精、汽油、煤油、除污劑、松節油、蠟或除蠟劑的物品，然後才放進滾桶乾衣機烘乾。

此舉可能引致爆炸及/或自燃起火。

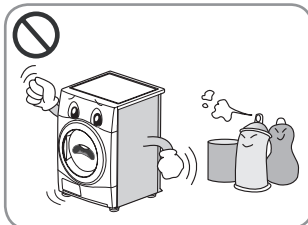

- 沾上、清洗或浸泡過汽油、乾洗溶劑或其他易燃或爆炸性物質的物件，不應放進滾桶乾衣機內烘乾。

此舉可能引致爆炸及/或自燃起火。

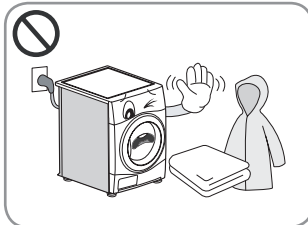


- 不應啟動滾桶式乾衣機的發熱功能烘乾發泡膠、橡膠、塑膠或其他對熱產生敏感的物件，例如浴室地毯、防滑墊或雨衣。
- 不應使用滾桶乾衣機烘乾泡沫橡膠(泡沫乳膠)、浴帽、防水布、含橡膠物料的製品及裝有泡沫橡膠墊的衣服或枕頭。

此舉可能引致爆炸及/或自燃起火。



- 不應把塑膠物件如浴帽或嬰兒防水尿布放進滾桶乾衣機內。

此舉可能引致爆炸及/或自發起火。

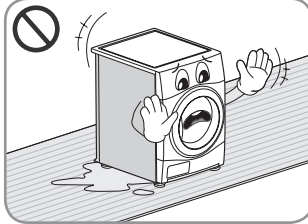

- 如在地毯上安裝乾衣機，通風氣體可能會損壞地毯。

此舉可能引致爆炸及/或自燃起火。

- 使用衣物柔順劑或類似產品時，應遵照衣物柔順劑的指示使用。

安 裝 指 引

以下指引將說明安裝乾衣機的起始步驟。

請明白本手冊的每一部份，均提供了安裝及使用乾衣機的重要信息。在安裝或使用前，請仔細閱讀全本手冊。請遵守所有警告及注意事項。本安裝指引是為專業安裝人員而設。請細心閱讀以下所有安裝指引。

安全資訊

受傷風險

本乾衣機非常沉重，切勿嘗試獨自抬起。
切勿抓住乾衣機的突起部份(如撥輪或機門)抬起，以免折斷。

跳閘風險

懸吊水喉或電線可能引致跳閘。請確保所有水喉或電線已繫好。

請檢查乾衣機在運送過程中有沒有損毀

如乾衣機機身有明顯損壞，切勿插上電源。
如不確定乾衣機在運送過程中有沒有損毀，請向本地代理查詢。
在運送前，請先清空你的乾衣機。

乾衣機不應安裝在煤氣爐、爐灶、加熱器或視線水平的燒烤爐附近，因為火爐的火焰可能損毀你的乾衣機。將乾衣機安裝在工作台下面時，請在每邊預留30厘米-50厘米的空間，讓空氣可經後方格柵排出。在烘乾期間，這氣流對冷凝水份十分重要。

如乾衣機安裝在洗衣機之上或附近地方，請使用獨立的插頭及插座。切勿使用雙向萬能蘇或拖板。

乾衣機可安裝在洗衣機之上以節省空間。疊裝工具套裝在本地店舖有售。

疊裝指引

LG 乾衣機可使用疊裝工具套裝(請看下一頁)，安裝在前置式洗衣機之上。安裝須由有經驗的技師進行，以確保洗衣機及乾衣機疊裝妥當。如不小心安裝，乾衣機有可能在運作時翻倒。
請注意某些洗衣機型號具備配對的疊裝乾衣機，詳情請向本地代理查詢。



小心

電源線的注意事項

大部份的電器均建議使用專用電路，即單一插座對應單一電器，並且沒有其他額外的插座或分支電路。請翻閱本手冊的產品規格頁以作確認。


切勿在電源插座中，接駁過多的電器。電源插座中接駁過多電器，插座會鬆脫或損壞，而使用延長電線、電源線磨損、或者電線絕緣損壞或龜裂都很危險。任何其中一項情況，均可能導致觸電或火災的危險。定期檢查本產品的電源線，如果電線外表出現損壞或破損，請將電源線拔掉，停止使用本產品，然後請合資格的維修人員，使用正確的配件更換。

保護電源線，使其免受物理或機械損毀，如扭曲、打結、夾持、被門夾住、或被踐踏。須特別注意電源插頭、電源插座、以及本產品電源線的出口位置。

安裝指引

組合架

如要疊起此乾衣機，您需要一套 LG 組合架。

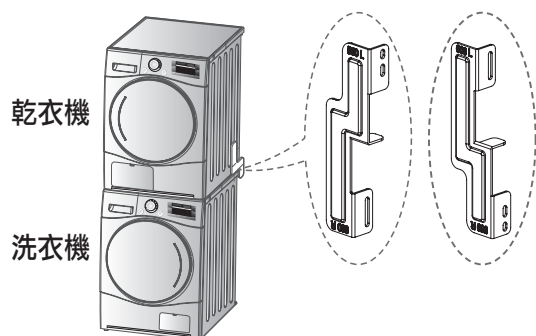


此乾衣機只可疊在 LG 洗衣機上。請勿試圖將此乾衣機疊在其他洗衣機上，這樣可造成損壞、損傷或財物損壞。

形狀及裝配方向	洗衣機頂板大小	
	21.7 吋 (550 毫米)	23.6 吋 (600 毫米)

安裝程序

1. 將 LG 乾衣機放在 LG 洗衣機上。
2. 依照下圖，將後蓋底部兩邊的兩顆螺絲移除。

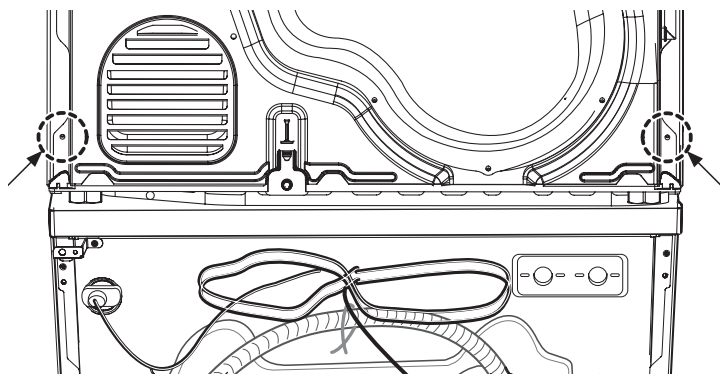


警告


- 不正確安裝可釀成嚴重意外。
- 由於乾衣機的重量和安裝的高度，如只有一人進行疊起程序會過於危險。疊起程序應該由兩位或以上有經驗的維修人員進行。
- 此乾衣機不適用於嵌入式裝置。請勿作為嵌入式電器安裝。
- 如乾衣機已拆卸，請勿使用。

3. 將組合架孔和後蓋孔對齊。


- 3-1) 23.6 吋 (600 毫米)

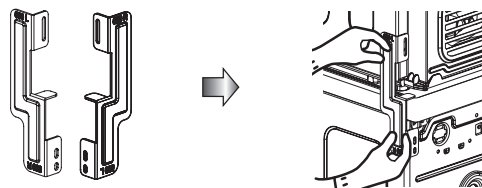

- 3-2) 21.7 吋 (550 毫米)

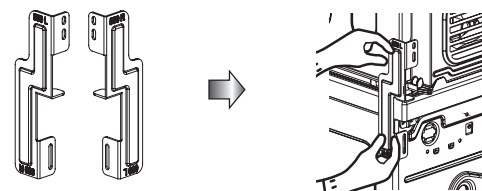

- 將較早前從乾衣機移除的兩顆螺絲扭緊於組合架上。
- 用配件盒內的四顆螺絲 [0.6 吋 (16 毫米)] 將洗衣機後蓋和組合架裝配在一起。
- 另一邊的裝配程序一樣。

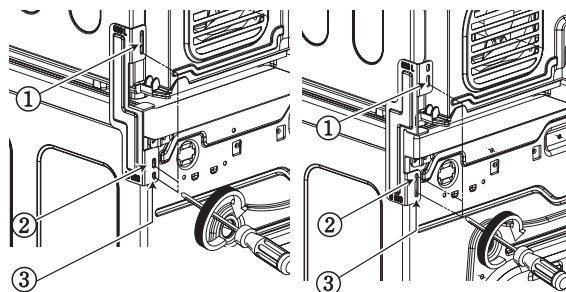

安裝指引

連接地線說明

本產品必須連接地線。如果發生故障或損壞，地線為電流提供一條最小的電阻路徑，從而降低觸電風險。本產品配有一條擁有接地導體和接地插頭的電源線。必須將電源插頭，插入到根據當地法規，正確安裝和接地的合適電源插座中。

注意


為了獲得最佳的乾衣效果，請勿把本產品的背部貼近牆邊。

額外的接地線步驟

有些地方法規規定要獨立的連接設備。在這種情況下，有關的接地電線配件、夾具和螺絲釘，必須另外購買。

冷凝排水系統

乾衣機可不經儲水器排水，水可從乾衣機直接排出。

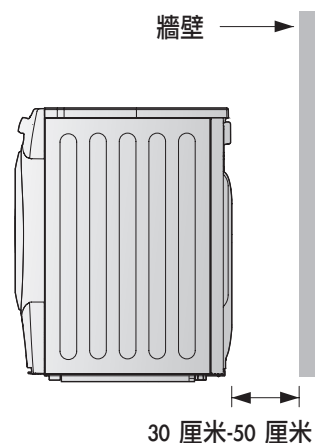


安裝指引

● 調較乾衣機至水平位置



1. 調節乾衣機至水平位置以防止出現噪音和震動情況。

當把乾衣機放置在沒有水滴和結冰的穩固平坦表面時，也須確保附近沒有貯存易燃物品。

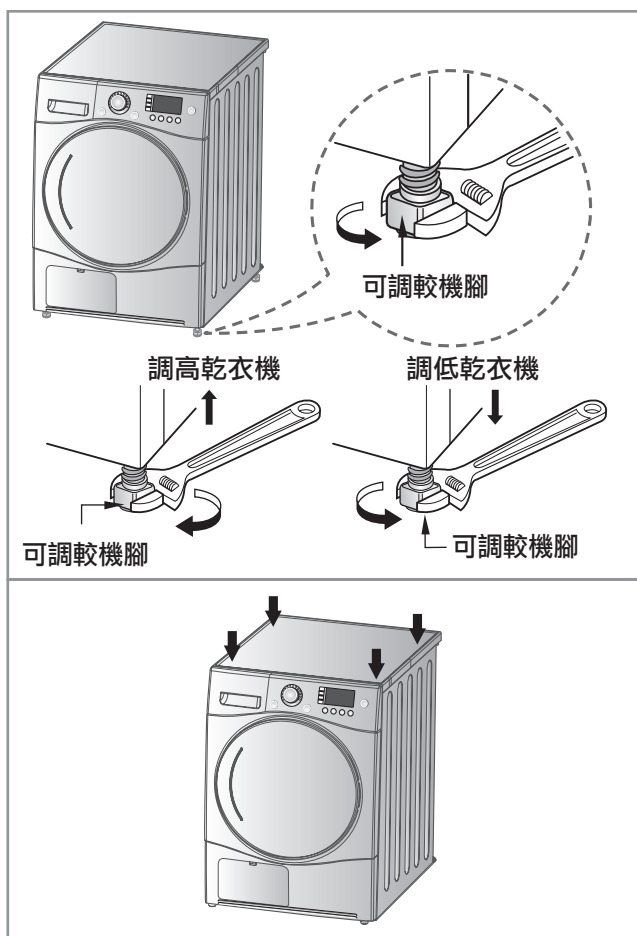


2. 如乾衣機不是在適當的水平位置，可按需要調較前機腳。

如想調高乾衣機高度，可順時針轉動機腳；如想調低，可逆時針轉動，直至前後左右四邊平衡為止。


* 對角檢查

當將洗衣機頂板對角壓下時，洗衣機應不會上下搖晃（請檢查兩個對角方向）。當對角壓下洗衣機頂板時，如果洗衣機搖晃，請再次調校機腳。

外觀和設計

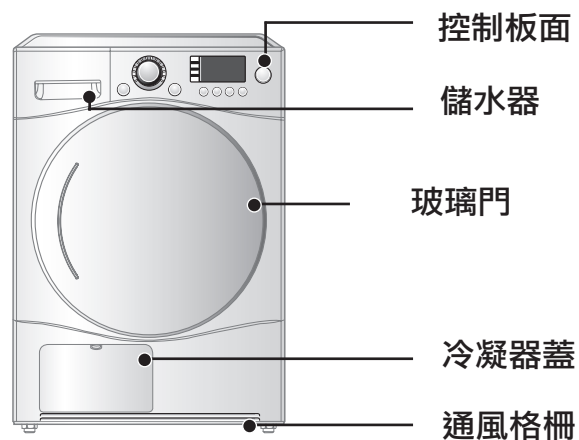

● 控制板面

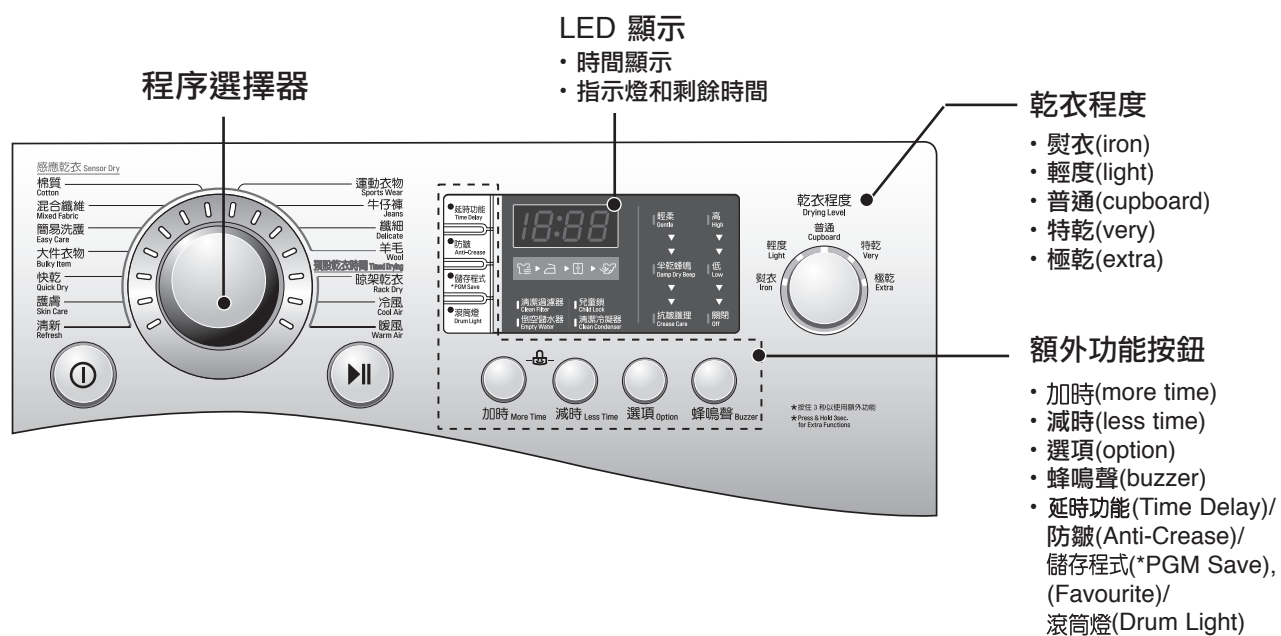

運作你的乾衣機

● 程序選擇表

自動感應乾衣程序			
程序時	衣物類型	詳情	乾衣程度
棉質程序 (注意按下選項按鈕，選擇專為輕柔衣物使用的熱力感應項目)	毛巾、睡袍和亞麻床單	適合多層厚衣物	極乾
	毛圈毛巾、抹布、毛巾和亞麻床單	適合無需熨燙的多層厚衣物	特乾
	浴巾、抹布、內衣和棉襪	適合無需熨燙的衣物	普通
	床單、枕套和毛巾	適合無需熨燙的衣物	輕度
	亞麻床單、桌布、毛巾、T恤和 Polo 衫	適合需要熨燙的衣物	熨衣
混合程序 (注意 按下選項按鈕，選擇專為輕柔衣物使用的熱力感應項目)	亞麻床單、桌布、運動服、厚夾克和毯子	適合無需熨燙的多層厚衣物	特乾
	襯衫及女裝襯衫	適合無需熨燙的衣物	普通
	長褲、連身裙、短裙和女裝襯衫	適合需要熨燙的衣物	熨衣
簡易洗護	襯衫、T恤、長褲、內衣和襪	適合無需熨燙的聚酰胺、丙烯酸和聚酯纖維	普通
	襯衫、T恤、內衣、厚夾克和襪	適合需要熨燙的聚酰胺、丙烯酸和聚酯纖維	熨衣
大件衣物	被褥、床單	適合厚重衣物	-
快乾	亞麻布和毛巾，適用於纖細衣物、運動服、厚重衣物程序的衣物除外。	適合小量乾衣時間短的衣物	-
護膚	T恤、枕套和毛巾	適合無需熨燙的棉質衣物	-
清新（請參閱注意）	襯衫及女裝襯衫	衣物除臭（適合需要除臭的衣物）	-
運動衣物	足球套裝和訓練服	適合聚酯物料	-
牛仔褲	牛仔褲和腿色衣物。	適合無需熨燙的牛仔褲	-
纖細	絲質、細緻衣料和貼身衣物	適合不可用熱水洗滌的衣物，如合成纖維	-
羊毛	羊毛	適合羊毛衣物	-
預設乾衣時間序			
晾架乾衣	絲質、羊毛、纖細貼身衣物	不使用翻滾烘乾，令衣物更清新。	-
冷風	所有需要清新的衣物	無熱翻滾	-
暖風	浴巾、浴袍、抹布及由丙烯酸製成的多層厚衣物	小型衣物及潮濕衣服 適合熱力烘乾的日用衣物	-

注意

使用「清新」程序時，請對衣物噴灑冷水或暖水，令衣物更清新。（建議水量為每件衫 20cc。）



小心

如洗衣量少於 1 公斤，請使用定時乾衣程序的「暖風乾衣」程序。

羊毛衣物應使用「羊毛」程序烘乾，不可用熱水洗滌的衣物（包括絲質、內衣和貼身衣物）應使用「纖細衣物」程序烘乾。選擇想要使用的程序時，請遵照建議的洗衣量，可見於第二十頁。否則，您的衣物可能損壞。

運作你的乾衣機


● 首次使用 LG 乾衣機前，請先閱讀以下說明

※ 移除包裝後，請先根據以下檢查程序，確保 LG 乾衣機安裝正確及可供使用。

1. 使用水平儀檢查乾衣機是否水平安放，若不是，請調較 LG 乾衣機機腳以達致機身平衡。
2. 檢查儲水器、冷凝器、控制面板及滾桶是否一切正常，安裝正確。
3. 將乾衣機設定為 5分鐘的乾衣程序以預熱滾桶
4. 在首數次使用 LG 乾衣機後，在放入和取出衣物時，請打開機門，讓機內的異味散發。

1. 啟動開關

首先按“POWER.(電源)按鈕。按鈕上的顯示燈會亮起，表示乾衣機正在操作。

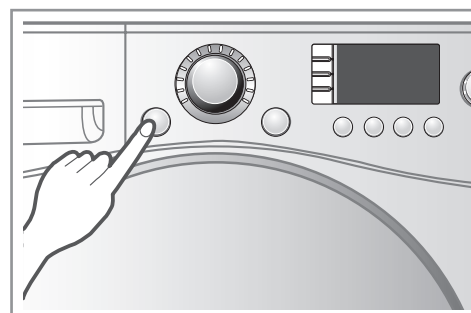

啟動電源


2. 打開機門

3. 檢查絨毛過濾器、儲水器及冷凝器

在乾衣操作前後，需清空靠近機門的絨毛過濾器。

打開機門，檢查絨毛過濾器是否清潔。否則，請根據第17 頁指引清理。

檢查儲水器及冷凝器是否清潔，以達致最佳的乾衣效果。

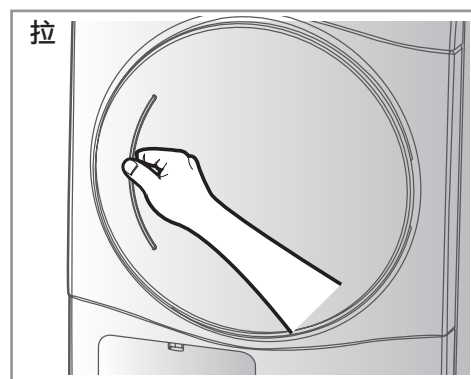


打開機門

4. 把衣物分類後放進滾桶

衣物需根據其衣物纖維及乾透程度分類，把衣物放進滾桶前，必須繫緊所有衣物的繩子及腰帶。

把衣物盡量推入滾桶內，並遠離機門塑膠封邊。否則可能會損壞機門塑膠封邊及衣物。

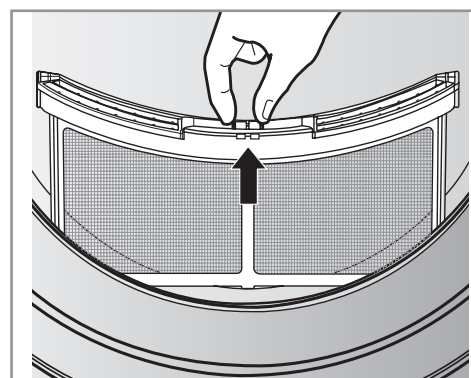

檢查絨毛過濾器



小心

請勿把未清洗的衣物，放進乾衣機烘乾。

運作你的乾衣機

5. 把門關上。


把機門關上之前，請確保已將衣物妥善放置在機內，並確認沒有任何異物卡在機門周圍的地方，特別是易燃物品。

⚠ 小心

注意不要讓衣物夾在機門和橡膠密封圈之間。

6. 選擇乾衣程序。

您可以轉動程序控制器，選擇所需的程序，直至程序指示器到達所需的程序。如果在沒有選擇任何程序的情況下，按下"Start/Pause." (啟動/暫停) 按鈕，本機將進行普通乾衣程序。(如需更詳細的資料，請參閱以下程序選擇表 (第11 頁)！)

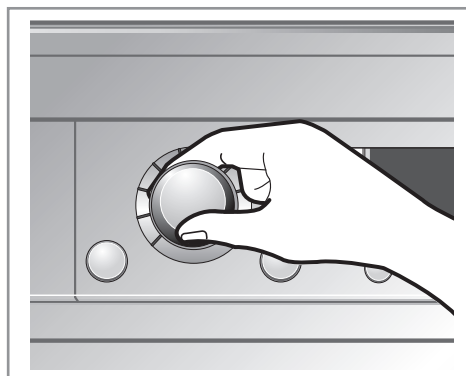


選擇所需程序。

7. 按下開始按鈕。

您可以聽到滾桶轉動的聲音。

8. 當操作完成後，請打開機門並取出衣物。

小心! 滾桶可能仍然燙手。
(操作時間視乎選擇的乾衣程序選項而定。)

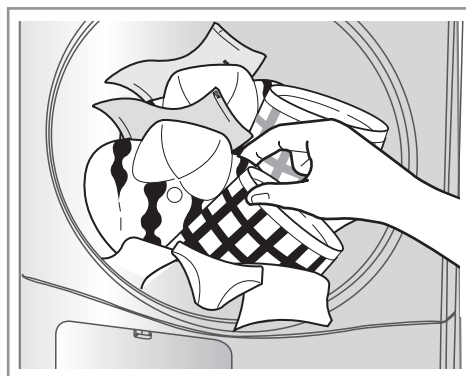

取出衣物。

注意


滾桶乾衣程序的最後一部分不會加熱 (冷卻程序)，以確保衣物保持在不會被損壞的溫度程序下。

9. 清潔絨毛過濾器及儲水器。

每次使用乾衣機後，都應該清潔絨毛過濾器。

10. 關掉乾衣機。

按下 "Power." (電源) 按鈕。

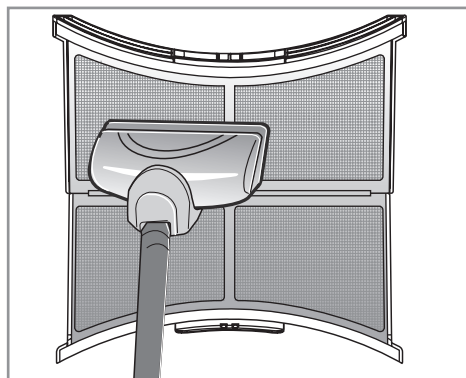

清潔絨毛過濾器。

⚠ 小心

- 請確保在使用吸塵機清潔絨毛過濾器時，不會將它損毀。如果仍有殘留物積聚，請用刷子擦洗過濾器的絨毛篩網。
- 如要在乾衣機運作途中打開機門，請先按下"Start/Pause." (啟動/暫停) 按鈕，等到滾桶完全停定，然後再打開機門。

⚠ 警告

除非所有衣物都被迅速取出並攤開，否則，切勿在乾衣程序結束之前，停止滾筒乾衣機，阻礙熱量流散。

運作你的乾衣機

● 晾架乾衣

乾衣機晾架設於乾衣機內，如下圖所示。使用前請拆除並丟棄包裝物料。

晾架乾衣適用於不得翻滾、必須平放晾乾的衣物，包括毛衣和纖細衣物。


注意

檢查濾網，移除從架上晾乾的衣物所積聚的棉絮。


使用晾架乾衣：

1. 開啟機門。
2. 請勿拆除濾網。
3. 將晾衣架放在乾衣機機門底部。
將晾架重置在乾衣機後部。
推下支架前方以穩固濾網。
4. 將濕衣物放在架上。保持衣物周圍空氣流通。晾架不會移動，但滾筒會轉動。
5. 關閉機門。
6. 開啟電源並選擇晾架乾衣。


1. 將金屬架邊緣插入滾筒中心位置。

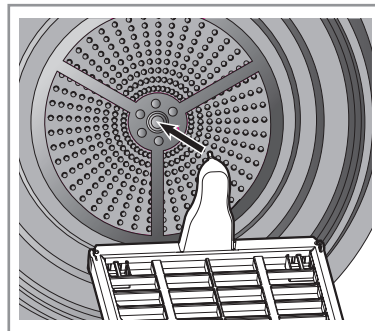

2. 放置纖細衣物或運動鞋。

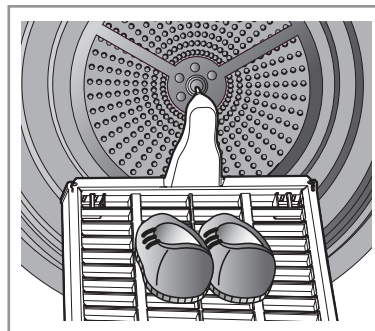

附加功能

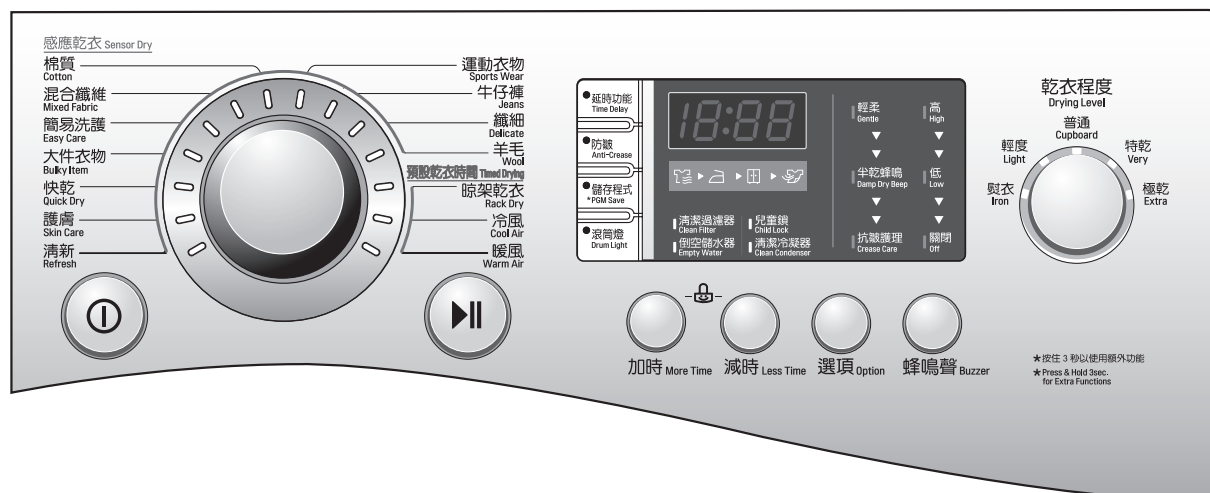

附加功能

● 延時功能

閣下可使用延時功能，延遲烘乾程序的完成時間。
最長時間延遲為19 小時。
最短時間延遲為3 小時。

1. 啟動乾衣機
2. 選擇烘乾程序
3. 設定延遲小時時間
4. 按下"Start/Pause."(啟動/暫停)按鈕。

● 防皺

防皺功能用於防止衣物在烘乾程序結束時，沒有迅速取出形成的摺痕和皺褶。在此功能模式下，乾衣機會重複運行和暫停，直到防皺程序結束。如果機門在防皺處理過程中打開，此功能會被取消。

附加功能

● 儲存程式

如果閣下想要根據自己的烘乾習慣，選擇烘乾程序，請使用儲存程式。當儲存好預設程序後，在下次更改此儲存的設定之前，便可重複使用此程序。例如：閣下啟動電源，按序選擇棉Extra Dry in Cotton Cycle（在棉質程序的極乾模式）、Low temp（低溫）、以及 Anti-Crease（防皺），然後按下儲存程式預設程序按鈕，直至乾衣機發出蜂鳴聲為止。此過程約為3 秒鐘。這就是閣下所需做的全部事情。下一次，當啟動乾衣機並按下儲存程式預設程序時，便可以在控制面板上，看到上述選項顯示。

● 滾筒燈

滾筒燈（玻璃門）

- 在操作程序期間，閣下通過選擇滾桶燈功能，便可看到滾桶的內部情況。此功能有助於查看烘乾程序。

注意

此功能只有在Cotton-Iron（棉質衣物熨燙）程序和 Mixed-Iron（混合熨燙）程序時才有效。

● 加時/減時

按下More Time（加時）或Less Time（減時）按鈕，直至所需烘乾時間設定完成。

注意

在閣下按下Start/Pause（啟動/暫停）按鈕之前，這些按鈕只有在預設烘乾時間下才有效。

● 兒童鎖 (CL)

為了小孩的人身安全，請同時按住加時間和減時間按鈕約 3 秒鐘。閣下此時會看到 LED 視窗出現“CL”字樣。

注意

如果要使“CL”字樣消失，請同時按住加時間和減時間按鈕約 3 秒鐘。

● 選項

輕柔

- 此功能通過升高或降低溫度，縮短或延長乾衣程序時間。
- 此選項只對棉質衣物和混紡衣物程序有效。

半乾蜂鳴

- 此功能用於通知何時才是熨燙的最佳時間（伴隨蜂鳴聲）。
- 此選項只對棉質衣物和混紡衣物程序有效。
- 當閣下選擇熨燙烘乾程度時，‘半乾蜂鳴’功能不可使用。

抗皺護理

- 此功能用於減少皺褶。
- 當閣下只選擇了混紡衣物程序時，此功能會自設定，但是此功能無法取消。

注意

此選項可通過按下選項按鈕的次數進行更改。

- 1 次：選擇輕柔。
- 2 次：選擇半乾蜂鳴選項。
- 3 次：同時選擇輕柔和半乾蜂鳴選項。
- 4 次：沒有選擇。

● 蜂鳴聲

此功能能夠調較蜂鳴器的音量。

乾衣機的保養

保養與清潔的重要性~

乾衣機的保養並不是非常困難。閣下只須按照以下資訊操作即可。


絨毛過濾器

每次使用後，請清潔絨毛過濾器，而且在每次使用前，請檢查絨毛過濾器。在乾衣機運行期間，如果“Clean Filter（清潔過濾器）”燈亮起，而且在蜂鳴器發出叫聲時，應該對絨毛過濾器進行清潔：清潔或清空此過濾器，會縮短烘乾時間、降低耗電量、延長乾衣機的使用壽命。


⚠ 小心

- 如果可以，絨毛過濾器需要經常進行清潔。
- 滾桶式乾衣機周圍不得堆積絨毛。


1. 打開機門

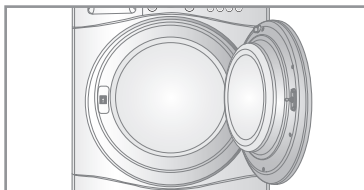


2. 取出過濾器

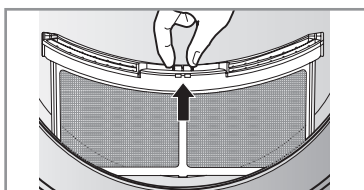

3. 使用真空吸塵器清潔過濾器，或將其放在水龍頭下沖洗。

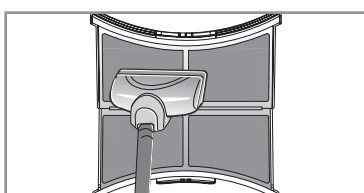

4. 將過濾器裝回原位。 - 將過濾器一直推到底，避免防礙機門開關。

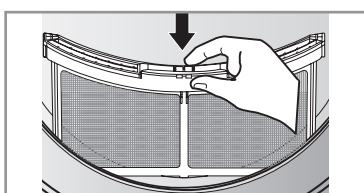

5. 關閉機門。

⚠ 小心

將“絨毛過濾器”放在溫熱的肥皂水中清洗。完全弄乾，然後再裝回原位。

程序運行期間清潔絨毛過濾器

如果“清潔過濾器”指示燈在乾衣機運行期間閃亮，請立即清潔過濾器。

1. 冷卻乾衣機，並按照上述的步驟操作。
2. 按下Start/Pause（啟動/暫停）按鈕。


倒空儲水器

儲水器收集了冷凝水，閣下應該在每次使用後，將儲水器倒空。如果沒有倒空儲水器，可能會使烘乾性能不正常。


如果儲水器已滿，在乾衣機工作的同時，“Empty Water（水倒空）”燈會亮起，蜂鳴器會發出蜂鳴聲。

在此情況下，必須在 1 小時內將儲水器內的水倒出。

1. 將儲水器拉出。

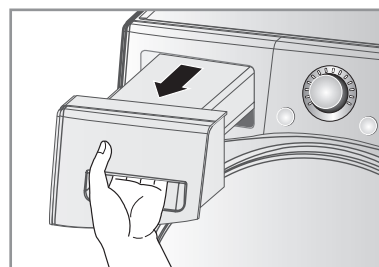

2. 將儲水器的水倒入池盤。

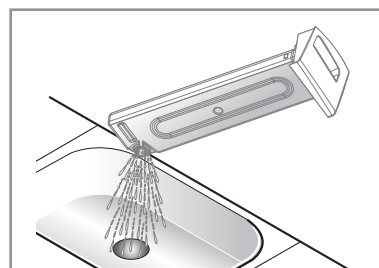

3. 將儲水器裝回原位。

4. 按下 Start/Pause（啟動/暫停）按鈕。

注意

洗滌期間高速脫水，會使耗電量更低。
高的環境溫度和和小的空間，可能會延長烘乾時間、以及增加耗電量。

⚠ 警告

絕對不可以飲用冷凝水。

⚠ 小心


如果在洗滌期間，衣物沒高速脫水，會增加耗電量，並會延長烘乾時間。在某些情況下，“Empty Water（水倒空）”衣物燈會閃亮，然後乾衣機可能會停止操作。

乾衣機的保養


冷凝器

冷凝器對高效烘乾性能同樣非常重要，所以閣下需要對其進行特別保養。建議閣下一年清潔冷凝器三次或四次，或當冷凝器清潔燈閃亮時，請進行清潔。


1. 使用一個硬幣或一字螺絲刀打開冷凝蓋。

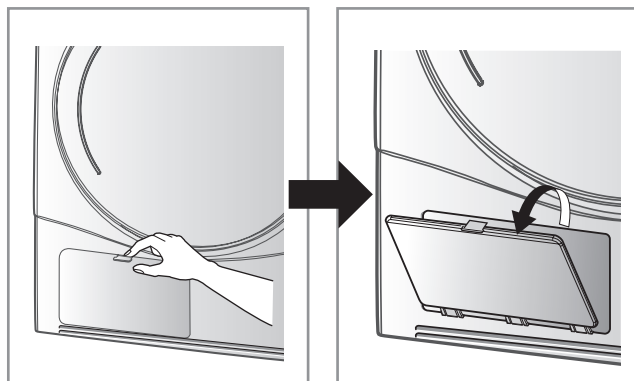


2. 轉動鎖緊杆，將密封蓋打開。

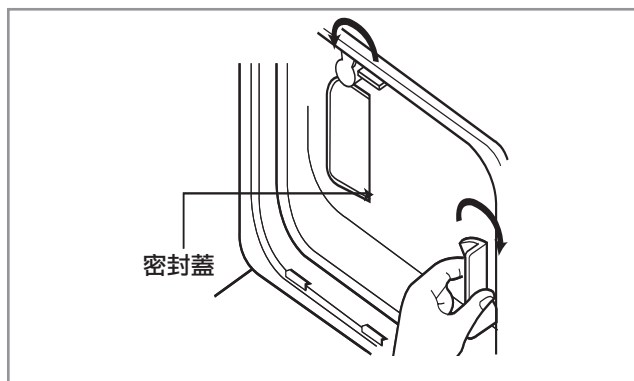

3. 把1根手指插入冷凝器正面的孔中，將冷凝器拉出。（切勿用力拉冷凝器。）

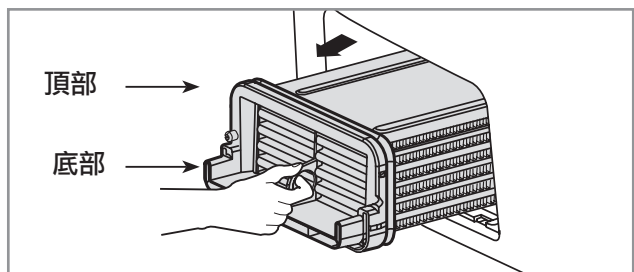

4. 將冷凝器放在水龍頭下，讓水沖洗，使其完全清洗乾淨。

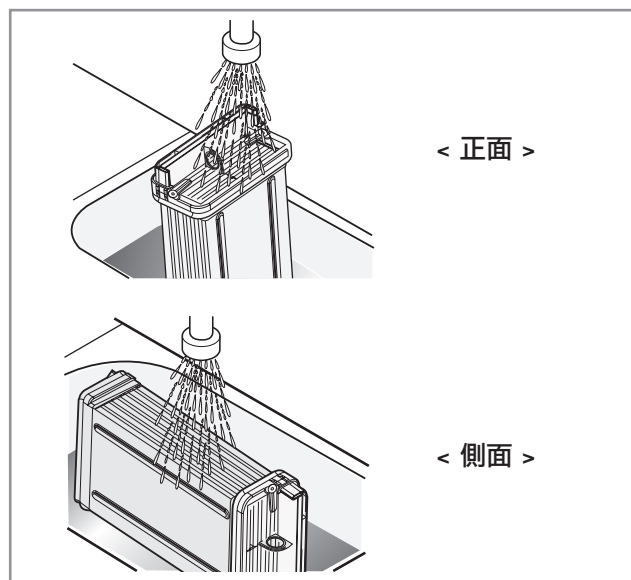

5. 按照上述的相反程序，將冷凝器裝入，並關閉好密封蓋和冷凝蓋。



⚠ 小心

- 當冷凝器被絨毛堵塞時，啟動乾衣機會損壞機件。這樣做也會增加耗電量。
- 切勿使用尖銳物體清潔熱交換器。可能會損壞它，造成泄漏。
- 在沒有安裝熱交換器的情況下，切勿操作乾衣機。

乾衣機的保養

● 通風格柵和冷氣通風格柵

每年對通風格柵進行真空吸塵三至四次，確保此處沒有堆積防礙空氣流入的絨毛或污垢。

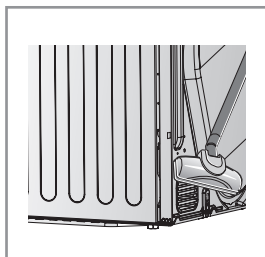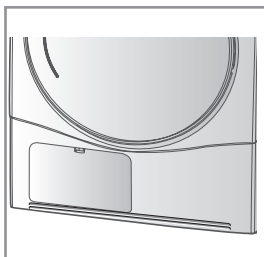


注意

- 熱空氣通過此通風格柵排出。
- 必須提供充分通風，以避免因電器產品燃燒其它燃料（包括明火）所產生的氣體回流到房間。


● 冷凝水排出

冷凝水通常被抽到儲水器中。儲水器收集水，直至再被倒空為止。用戶不單可以使用儲水器收集水，而且還可將水直接排入排水喉，特別是在乾衣機安放在洗衣機頂部的情况下，可將水直接排入排水喉。使用排水喉連接配件，閣下可以輕鬆地更改排水路徑，將水重新接入到排水設施。請按照以下步驟操作。


1. 取出連接配件。

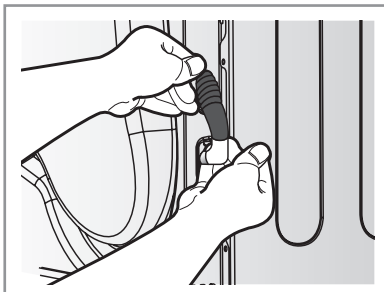

2. 將儲水器水管和配件分開

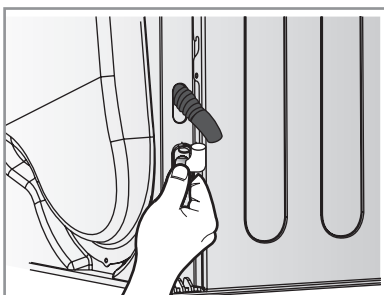


3. 將排水喉連接到配件。

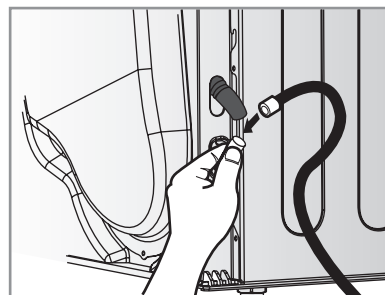

● 濕度感應器？

此設備用於感測烘乾期間，衣物殘留的含水量。這表示感應器必須經常清潔。清潔此設備的主要原因是清除感應器表面上堆積的水垢。請定期擦拭滾桶裏面的感應器（如圖所示）。

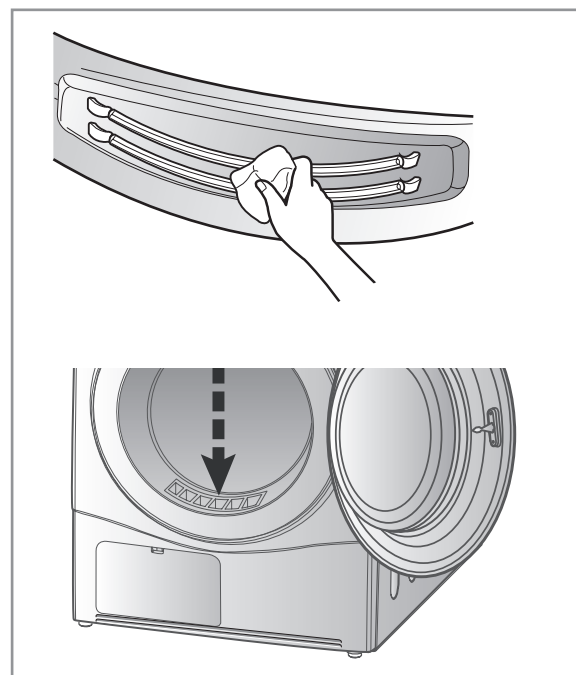

智能使用的附加提示

不同衣物的烘乾指南與容量

程式		乾衣機容量
棉質	熨衣	9 kg
	輕度	9 kg
	普通	9 kg
混合纖維	普通	4 kg
簡易洗護	普通	2 kg
	熨衣	2 kg
大件衣物		1.5 kg
護膚		2 kg
清新		禮服襯衫最多 4EA
運動衣物		1.5 kg
牛仔褲		4.5 kg
纖細		1.5 kg
羊毛		1 kg
快乾		2 kg

羊毛衣物

在“羊毛”程式中將羊毛衣物烘乾。首先要確保遵守衣物護理標籤的“符號”。在此程序中，羊毛不會完全乾透，所以切勿重複烘乾程式。將羊毛衣物拉伸至其原始形狀，然後再放平，將它們烘乾。

機織和針織衣物

某些機織和針織衣物會縮水，視乎質料而定。

免燙和合成纖維衣物

切勿在乾衣機中放入過多的衣物。
乾衣機停止操作時，請立即將免燙衣物取出，以減少皺褶。

嬰兒衣物和睡袍

請經常檢查製造商的說明。

橡膠與塑膠衣物

切勿將含有橡膠或塑膠物料製成的衣物進行烘乾：

- a) 圍裙、圍巾、以及椅套
- b) 窗簾和桌布
- c) 浴室地墊

玻璃纖維衣物

切勿將玻璃纖維衣物放入乾衣機內。
當下次使用乾衣機時，留在乾衣機的玻璃粒子，可能會被衣物吸取，從而刺激閣下的皮膚。

衣物護理標籤

衣物都有其自身的洗滌標籤，所以請按照推薦的洗滌護理標籤進行烘乾。不單如此，衣物必須按照它們的大小和類型進行分類。
為了節省電量、時間、以及獲得最佳烘乾效果，切勿放入過多衣物。

以下為衣物護理標籤。

符號	說明
	烘乾
	滾桶烘乾
	免燙/抗皺
	輕柔/纖細衣物
	切勿滾桶烘乾
	切勿烘乾
	高溫烘乾
	中溫烘乾
	低溫烘乾
	無加熱/無空氣
	晾乾/懸掛晾乾
	滴乾
	平放晾乾
	放在陰處

智能使用的附加提示

● 備用配件

根據保養條款為閣下提供了所需的備用配件。保養期內的零件，屬免費更換的零件。如過了保養期，備用配件必須從客戶服務部購買。

● 棄置乾衣機

最好是將乾衣機進行安全棄置，使小孩免受傷害。必須將機門和機蓋，以及其它突出物件拿走，以及必須將電源線切斷，避免日後使用。完成這些步驟後，便可以安全棄置乾衣機了。

● 服務聯絡

如果閣下的乾衣機出現故障，首先須參考疑難排解一節。如果閣下無法找到相同的故障，而且無法自行處理，請與客戶服務中心聯絡。


服務主任會詢問閣下一些如下的問題：

1. 姓名、地址、以及郵政編碼。
2. 電話號碼。
3. 故障說明。
4. 乾衣機的型號和序號。
5. 購買日期。


● 零配件

• 閣下的乾衣機附送如下的配件：


1. 冷凝排水喉

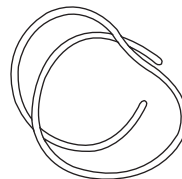


2. 管子托架

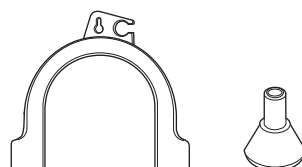

3. 晾架乾衣

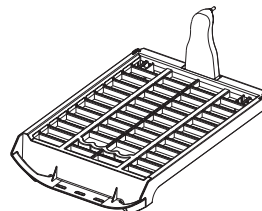

● 疊裝配件

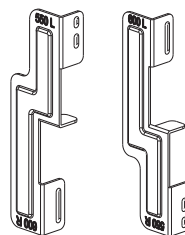

支架：2EA，螺絲：4EA

另行購買。

• 組合架適用於 500 毫米和 600 毫米的洗衣機頂板。

如需疊起，乾衣機必須放在 LG 洗衣機之上。組合架分開發售。

疑難排解指南

● 疑難排解提示

為了節省閣下的時間和金錢，請在聯絡客戶服務中心前，細閱下表的内容。

故障	解決方法
乾衣機不操作	1. 檢查乾衣機的電源插頭是否插入。 2. 檢查是否按下了“Start（啟動）”按鈕。 3. 檢查機門是否正確關閉。 4. 檢查房間溫度是否低於 5°C。 5. 檢查保險絲是否熔斷或斷路器是否跳閘，如須要，請更換它們。 （小心：乾衣機通常使用兩條保險絲或兩個斷路器） 操作期間，在倒空儲水器和清潔過濾器等後，閣下必須按下 Start（啟動）按鈕，然後乾衣機才會再次運行。
烘乾需要很長時間。	1. 每次放入衣物後，均需清潔過濾器。 2. 檢查儲水器是否被倒空。 3. 檢查冷凝器是否清潔。 4. 檢查不同衣物類型所需的正確乾衣程序。 5. 檢查乾衣機的通風格柵或後通風孔是否被堵塞。 6. 檢查衣物是否“過濕”。 7. 檢查是否已選擇正確的程序。 8. 檢查乾衣機是否過載。
“清潔過濾器”燈閃亮	1. 檢查是否已清潔過濾器。 2. 檢查冷凝器是否堵塞。
衣服起毛粒	1. 檢查絨毛過濾器是否被清空。 2. 檢查乾衣機是否只有清潔衣物。 3. 檢查衣物是否在滾桶中正確分類。 4. 檢查是否放入過多衣物。 5. 檢查衣物的口袋中是否有紙張、紙巾或類似的物品。
烘乾時間不一致	衣物的烘乾時間會因加熱設定、衣物大小、衣物類型、衣物的濕度、以及絨毛過濾器的情况而變化。
漏水	檢查機門和密封蓋是否髒污及損壞。
衣物出現皺褶	檢查是否放入過多衣物。嘗試縮短烘乾時間。如果衣物仍然有點濕潤，請移除一些衣物。
衣物縮水	為了避免縮水，請仔細遵守閣下衣物的護理和使用說明操作，因為某些衣物在洗滌時，會自然收縮。其它衣物是可以洗滌的，但在乾衣機烘乾時，便會收縮。

疑難排解指南


● 錯誤模式

- dE : 如果機門打開，LED 會顯示 “ dE ” 字樣。必須將機門關緊，然後按下啟動按鈕重新操作。
- $EE1, EE3$: 如果錯誤繼續出現，請拔掉電源線，然後再聯絡客戶服務中心。

● 滾桶燈不亮

- 請聯絡客戶服務中心。

技術數據

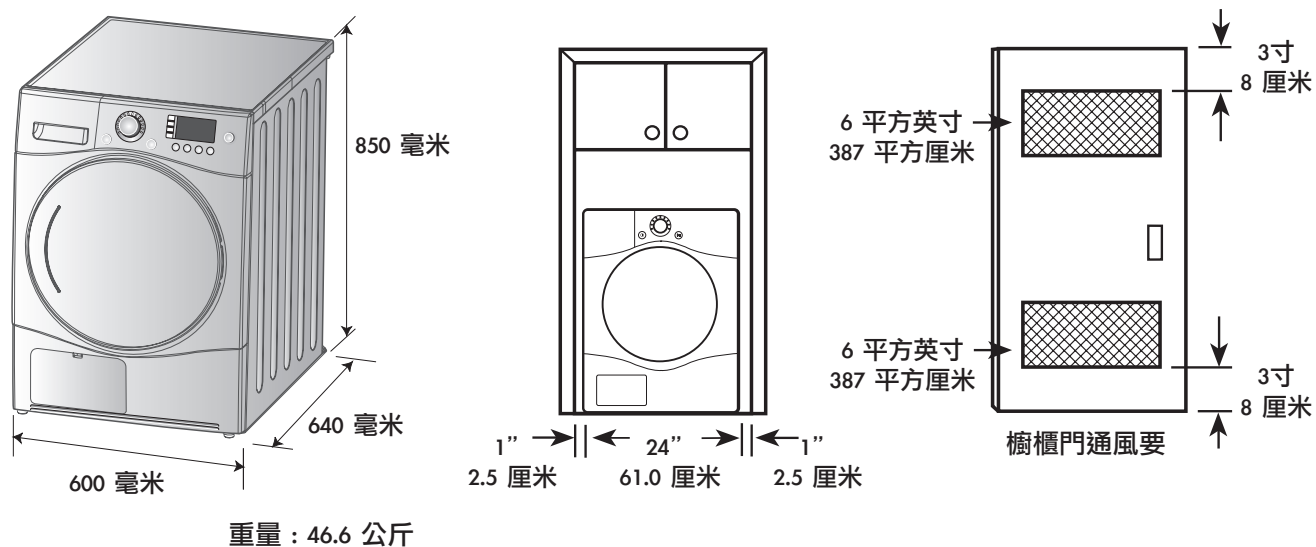

● 電源要求

伏特	赫茲	瓦特
220-240 V	50 Hz	2600 W

請確保乾衣機連接到正確的電壓。
乾衣機上的額定標牌顯示應使用的電壓。

● 通風要求

凹室或櫃台下	壁櫥
確保整部乾衣機每分鐘有 112 立方尺的空氣流通量	壁櫥門必須設有 2 個（百葉）開口，面積各為最少 60 平方英寸（387 平方厘米），位於距離門的上方和下方 3 寸（8 厘米）的位置。

保養

■ 以下各項，均不在保養範圍內：

上門教授如何使用本產品。

將本產品連接至規格標牌以外的電壓。

因意外、疏忽、誤用或天災所引致的故障。

正常使用或根據使用說明書操作以外的其它因素所引致的故障。

因有害動物或昆蟲，如老鼠、蟑螂等所引致的故障。

正常的噪音或震動情況，如排水聲、脫水聲或警示用的蜂鳴聲。

安裝的修正工作。例如：調較產品水平度、排水量調整等。

使用說明書中建議的正常保養工作。

從乾洗衣機內，包括水泵及入水喉過濾器，清除異物/物質，如砂礫、釘子、胸罩金屬絲、鈕扣等。

更換保險絲或修正房屋的電路或水喉系統。

修正未獲授權的維修。

由本產品潛在的瑕疵所造成的附帶或引起個人財物損失。

本產品如果用於商業用途，將不會給予保養。

（例如：公共浴室、宿舍、訓練中心、宿舍等公共場所）。

如本產品安裝在正常服務區域範圍外，任何包括產品修理、或更換損壞零件等所產生的運送成本，均由產品所有人負擔。


F

eatures



● Ultra Big Capacity Drum

LG ultra big 9 kg dryer allows you to dry more of your wash load at one time.

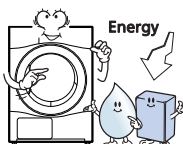


● Lower Energy Consumption

LG dryers use less energy than conventional dryers due to the cutting-edge technology we have applied to the drying system and to the heat control mechanism. This LG Dryer has been designed to save you money.




● Reduced Drying Times

Drying times are now shorter because of efficient air flow mechanism and optimised heater.

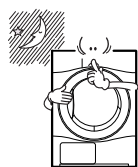

● Reduced Noise Levels

We have reduced the operating noise of this LG Dryer by using innovative sound-absorbing and noise-screening technologies, making it much quieter than conventional drivers.

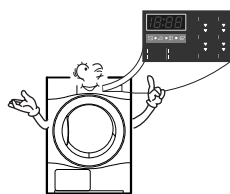

● Easy to Use

The wide, electronically controlled LED display on this machine is very easy to use. Simply select the programme you require and your LG Dryer will do the rest.

C

ontents

Safety Instructions	27
Installation Instructions	30
Appearance & Design	34
Operating Your Dryer	35
Additional Functions	39
Caring for Your Dryer	41
Additional Tips for Smart Use	44
Troubleshooting Guidelines	46
Technical Data	48
Warranty	49


Safety Instructions

To help reduce any risk of electric shock, fire, or other personal or property injury when using your dryer, please follow the basic safety instructions.

⚠ WARNING


Serious injury or death may occur when not observing the following rules.

⊘ Not allowed actions.

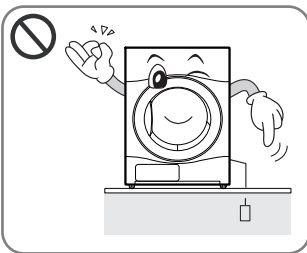


- Before plugging in the power cord, make sure the cord is grounded and connected to the circuit breaker.

No grounding may cause breakdowns or Short circuit.

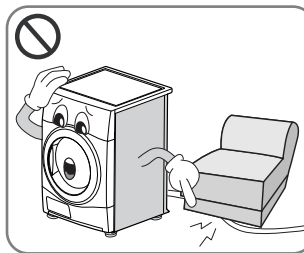


- Do not use a damaged power cord or place heavy objects on the cord.

The damaged power cord may cause fire or short circuit.

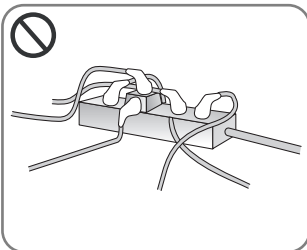


- Do not share the electrical socket with other appliances. Do not use extension power socket.

Over heating of outlet may cause fire.

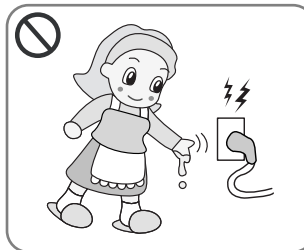


- Do not grasp power cord or switch on/off with wet hands.

It may cause electric shock.

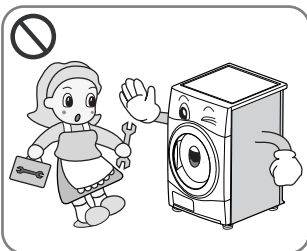


- Do not disassemble the top plate during installation.

It may cause breakdowns, fire or short circuit.

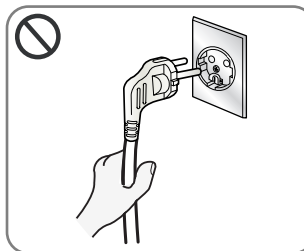


- Disconnect the power cord by grasping the plug, not the cord.

It may cause cutting off wires so results in hot heat or a fire. I don't understand this sentence.

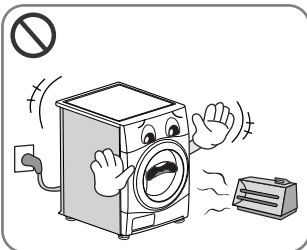

- Keep the dryer away from electric stove, candle and any inflammable objects.


These items may melt come of the parts and result a fire.

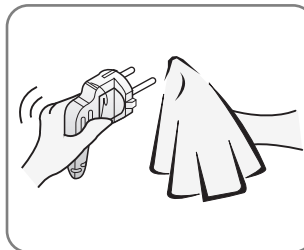

- Wipe the dirt and stains around the power cord and insert firmly back to the socket.


Dirts around it and improper connection may cause fire.

Safety Instructions

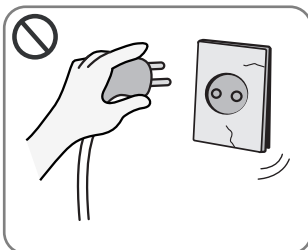


- Do not use damaged power cord, plug and socket.

It may cause fire or an electric shock.

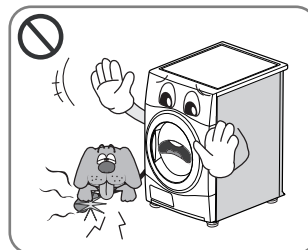


- Prevent pets biting the dryer.

Pets may die from an electric shock or damage the surface of the dryer.

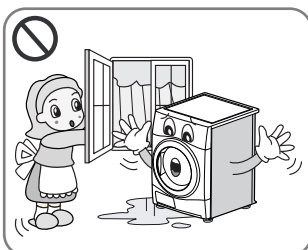


- Do not install or store the dryer where it will be exposed to the weather.

It may cause an electric shock, fire, malfunction or deformation.

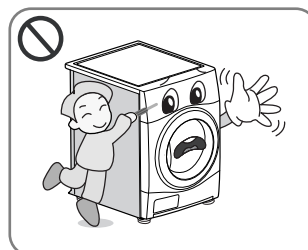


- Do not press the button with sharp edged devices like a screwdriver or a pin.

It may cause electric shock.

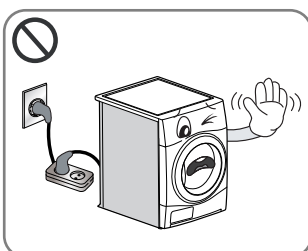


- Do not use an extension cord or an adaptor to connect the power cord.

It may cause an electric shock or fire.

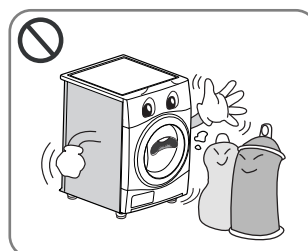


- Do not dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.)

It may cause explosion or fire.

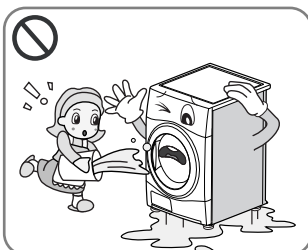


- Do not splash water on to the dryer.

It may cause fire or short circuit.

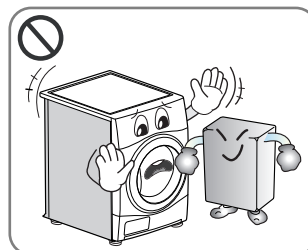


- Do not place flammable items near the dryer.

It may cause toxic gas, parts damage, an explosion or fire.

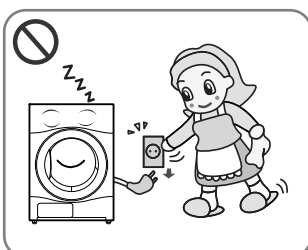


- Unplug the power cord when cleaning or not using the dryer.

Water or dirt may cause electric shock.

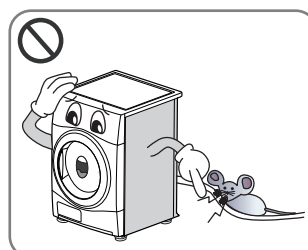


- Keep the dryer away from the reach of the cockroach and other insects.

These pest might bite and damage the power cord.

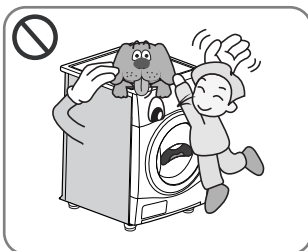

- Do not allow children or pets to play on or inside the dryer.


Children may fall off. Pets or children may be wounded by the rotating parts or suffocated inside the drum.

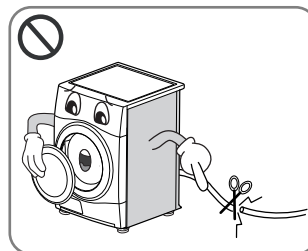

- Before disposing off the dryer, dismantle the door and cut the power cord in half.


This is to prevent children playing inside the drum and others mishandle the dryer; and get injury.

Safety Instructions

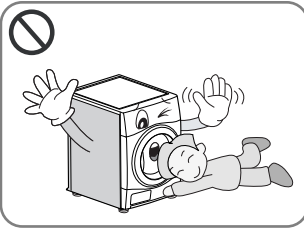


- Young children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.

Children may fall off. Pets or children may be wounded by rotating parts or suffocated inside drum.

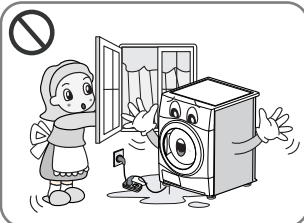


- If this appliance is supplied from a cord extension set or an electrical connector, portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

It may cause an electric shock, a fire, malfunction and deformation.

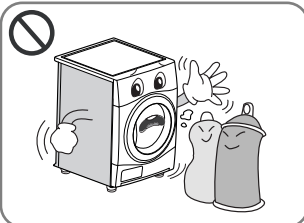


- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

It may cause explosion and/or fire by spontaneous combustion.

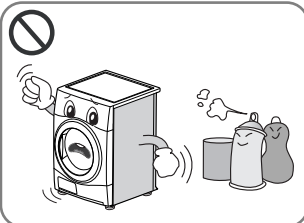

- Items that have been previously cleaned in washed in, soaked in, or spotted with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances should not be used in a tumble dryer.

It may cause explosion and/or fire by spontaneous combustion.

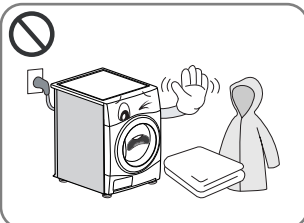


- Items made of foam, rubber, plastic, or other heat-sensitive fabrics (such as bathroom rugs, nonslip mats or raincoats) should not be dried in a tumble dryer on a heat setting.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

It may cause explosion and/or fire by spontaneous combustion.



- Plastic articles such as shower caps or babies waterproof napkin covers should not be placed in a tumble dryer.

It may cause an explosion and a fire by spontaneous combustion.

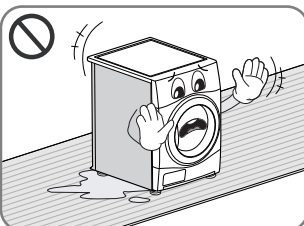

- If the dryer is installed on the carpet, it might cause some damages by the ventilated air.

It may cause explosion and/or fire by spontaneous combustion.

- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

I nstallation Instructions

The following instructions will guide you through the initial steps of installing your dryer.

Please note that every section of this manual provides important information regarding the installing and use of your dryer, and it is important that you review this entire manual before proceeding with any installation or use. Be sure to observe all listed warnings and cautions. These installation instructions are intended for use by qualified installers. Read these installation instructions completely and carefully.

Safety Information

Risk of Injury

The dryer is very heavy so you shouldn't try to lift it alone.

Do not lift the dryer by grasping any of the protruding parts e.g. the jog dial or the door, they may break off.

Risk of Tripping

Risk of tripping caused by hoses hanging down or cables. Ensure there are no loose hoses or cables.

Check the dryer for damage occurred during transportation.

Do not connect the dryer if it has visible signs of damage.

If you are not sure, contact your local agent.

Always empty the dryer completely before transporting it.

Your dryer should not be located near gas hob, cooker, heater or eye level grill as flames from the burners could cause damage to your dryer. When the dryer is fitted under a work surface, allow 30cm~50cm space from each side of the dryer for air to exit the rear grille. This airflow is critical to condense the water during drying.

If you use this dryer near or stacked on top of a washing machine, separate main plugs and sockets must be used for each appliance. Do not use 2-way adaptor or extension socket.

You can stack the dryer on top of washing machine to save the space. A stacking kit is available from your local shop.

Stacking Installation Instructions

The LG Dryer can be placed on the top of a front loading washing machine. They are to be fixed with stacking kit (See the next page). This installation must be conducted by an experienced installer to ensure both washer and dryer are properly fixed together. If this work is done carelessly, dryer may fall off during operation.

More importantly, certain washer model has matching dryer for stacking, please check with local agent for advice.

⚠ CAUTION

CAUTION Concerning the power cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.


Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

Installation Instructions

Stacking Kit

In order to stack this dryer an LG stacking kit is required.

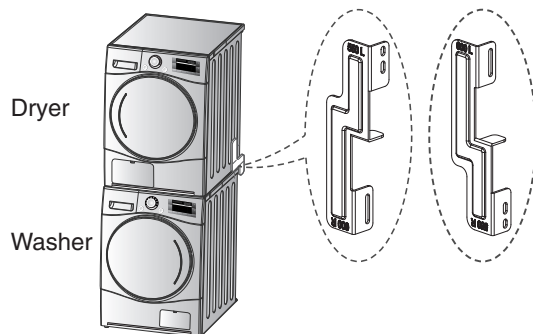


This dryer may only be stacked on top of an LG washer. DO NOT attempt to stack this dryer on any other washer, as damage, injury or property damage could result.

Shape and assembly direction	Washer Top plate size	
	21.7 inch (550mm)	23.6 inch (600mm)
	550 L 550 R	600 L 600 R

Installation Procedure

1. Place the LG dryer on the LG washing machine.
2. Remove the two screws from the bottom of the rear cover on each side as illustrated below.

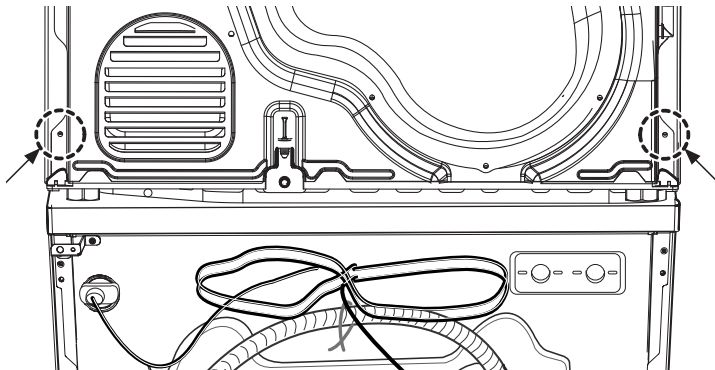


WARNING


- Incorrect installation can cause serious accidents.
- The weight of the dryer and the height of installation makes the stacking procedure too risky for one person. This procedure should be performed by 2 or more experienced service personnel.
- The dryer is not suitable for a built-in installation. Please do not install as a built-in appliance.
- Do not operate if the dryer is disassembled.

3. Align the stacking kit holes and the rear cover holes.


- 3-1) 23.6 inch(600mm)

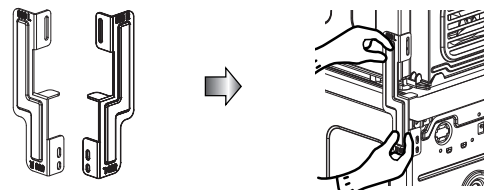

- 3-2) 21.7 inch(550mm)

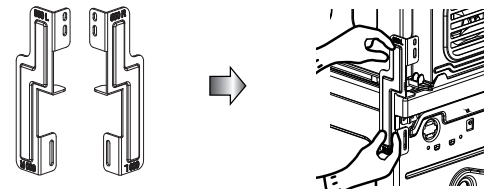

- Fasten the 2 screws that were removed earlier from dryer to stacking kit.
- Use 4 screws in accessory box [0.6inch(16mm)] to assemble washer rear cover and stacking kit.
- The procedure for the opposite side will be the same.

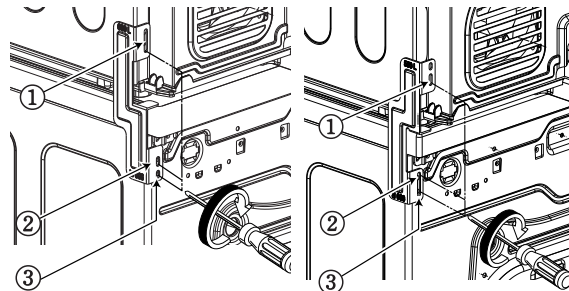

I nstallation Instructions

Grounding Instruction

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Additional Grounding Procedure


Some local codes may require a separate ground. In such cases, the required accessory ground wire, clamp and screw must be purchased separately.

Condensed Water Drain

The dryer can drain water without delivering to water container. Water is directly pumped out of the dryer.

Note

For better drying performance, Please keep the rear of product distance from wall.

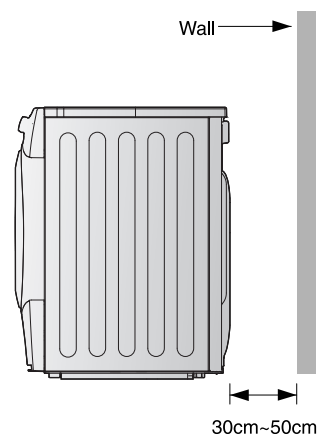


I nstallation Instructions

● Level the Dryer



1. Leveling the dryer is to prevent undesirable noise and vibration.

When placing your dryer in an solid and level area where water is not dripping and freezing, flammable materials are not stored.

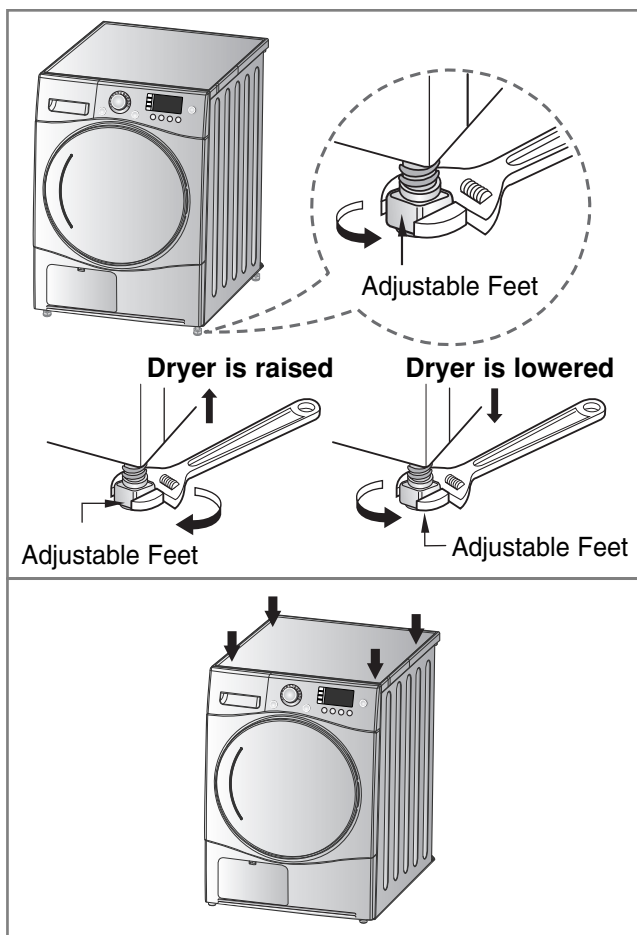

2. If the dryer is not properly level, adjust the front leveling legs up and down as necessary.

Turn them clockwise to raise and counterclockwise to lower until the dryer is not wobbling both front-to-back and side-to-side.


* Diagonal Check

When pushing down the edges of the machine, the machine should not move up and down at all.


(Please, check both of two directions)

If machine rocks when pushing the machine top plate diagonally, adjust the feet again.

Appearance & Design

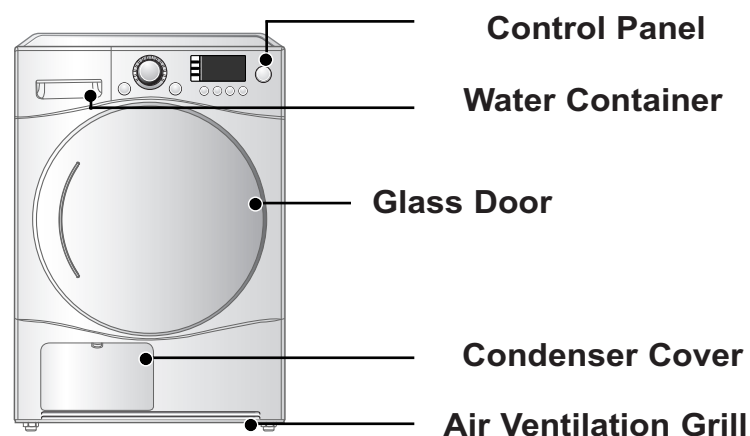

Control Panel

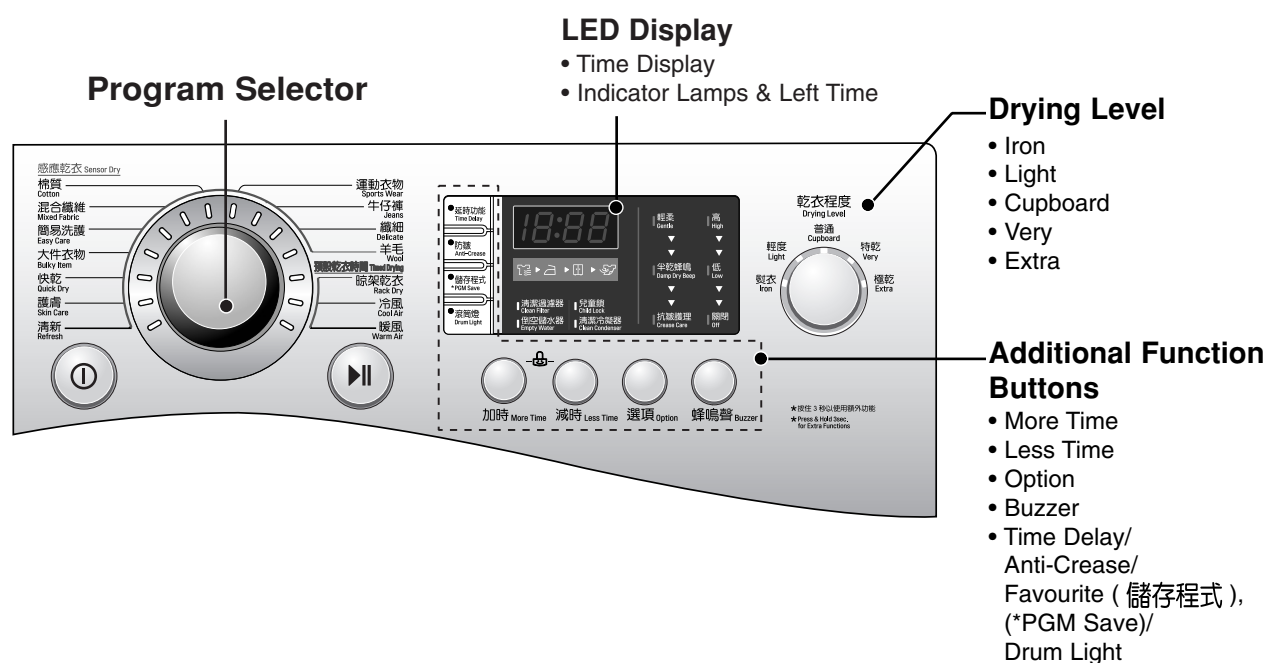

Operating Your Dryer

Cycle Selection Table

Sensor Dry Cycle			
Course	Laundry type	Detail	Drying Level
Cotton Cycles Note Select the gentle cycle by pressing the option button for heat-sensitive items	Towels, dressing gowns and bed linen	For thick and quilted fabrics	Extra
	Terry towels, tea towels, towels and bed linen	For thick and quilted fabrics that do not need to be ironed	Very
	Bath towels, tea towels, underwear and cotton socks	For fabrics that do not need to be ironed	Cupboard
	Sheets, pillowcase and towels	For fabrics that do not need to be ironed	Light
	Bed linen, table linen, towels, T-shirts, Polo shirts and work clothes	For fabrics that do need to be ironed	Iron
Mixed Fabric Cycles Note Select the gentle cycle by pressing the option button for heat-sensitive items	Bed linen, table linen, tracksuits, anorak and blankets	For thick and quilted fabrics that do not need to be ironed	Very
	Shirts and blouses	For fabrics that do not need to be ironed	Cupboard
	Trousers, dressers, skirts and blouses	For fabrics that do need to be ironed	Iron
Easy care	Shirts, T-shirts, trousers, under wear and socks	For polyamide, acrylic, and polyester that do not need to be ironed	Cupboard
	Shirts, T-shirts, under wear, anoraks and socks	For polyamide, acrylic, polyester that do need to be ironed	Iron
Bulky Item	Bed clothes, sheets	For bulky items	-
Quick Dry	Linen and towels, excluding fabrics applied to Delicate, Sports wear, Wool and Bulky Item course.	For small loads of suitable fabrics with short drying times	-
Skin Care	T-shirts, pillowcase, and towels	For cotton fabrics which do not need to be ironed	-
Refresh (Refer to the Note)	Shirts and blouses	Odor removal of fabric (For fabrics in need of odor removal)	-
Sports Wear	Soccer kit and training wear	For polyester material	-
Jeans	Jeans and Color fading	For jeans which do not need to be ironed	-
Delicate	Silk, Fine fabrics and lingerie	For fabrics that are heat-sensitive like synthetic fabrics	-
Wool	Wool	For wool fabrics	-
Timed Drying Cycle			
Rack Dry	Silk, wool, delicate lingerie	Refresh clothes without tumble drying	-
Cool Air	All fabrics that need refreshing	Tumbles without heat	-
Warm Air	Bath towels, bath robes, dishclothes and quilted fabrics made of acrylic	Small Items & damp clothing Everyday items suitable for heat drying	-

Note

When using the "Refresh" course, please spray cold or warm water on the fabric for a fresher outcome. (The recommend amount is 20cc of water per shirt.)

CAUTION

If the load is less than 1kg, please use "Warm Air" Cycle in timed drying Cycle.
Wool items should be dried using "Wool" Cycle and heat-sensitive fabrics including silk, underwear and lingerie should be dried using "Delicates" Cycle. Please comply with the recommended laundry load when you use the Assigned Cycle. Otherwise, your clothes may be damaged.

Operating Your Dryer


● Please read before using your LG Dryer for the first time

※ After removing the packaging, please carry out the following checks to ensure the LG Dryer is correctly installed and ready for use.

1. Check the dryer is well balanced by using a spirit level. If not, adjust the feet of the LG Dryer until the machine is balanced.
2. Check the water container, condenser, control panel and drum to make sure everything is in place.
3. Set the machine to dry for 5 minutes to warm up the drum.
4. Open the door between loads the first few times you use the machine to allow any odours from the interior of the LG Dryer to escape.

1. Turn the power on.

First, press the "Power" button. The indicator light above the button will become illuminated indicating that the machine is all set to run.

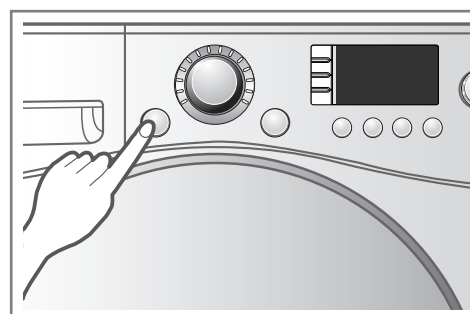


Turn the power on.

2. Open the door.

3. Check the lint filter, water container and condenser.

The lint filter near the door, should be emptied after or before drying operation. Open the door and check if lint filter is cleaned. If not, please clean it referring to page 41. Water container and condenser are also checked to be emptied and cleaned for better drying result.

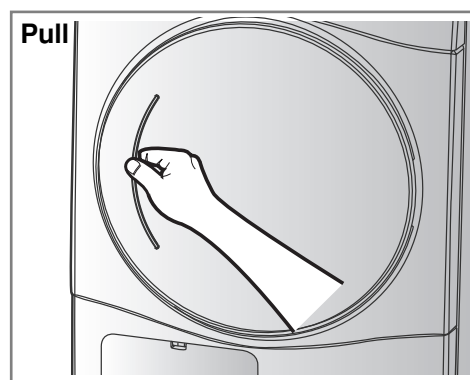


Open the Door.

4. Place laundry into the drum after sorting.

The clothes should be sorted by its fabric type and dryness level and all the strings and belts of clothes should be well tied and fixed before being put into the drum. It is desired that you push laundry all the way back to keep it away from the door seal. If not, door seal and clothes may be damaged.

Glass Door

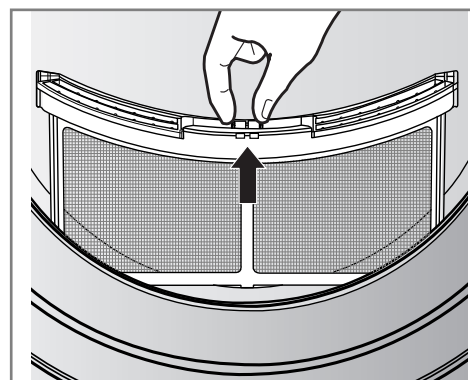

Check the lint filter.

⚠ CAUTION

Do not dry unwashed items in the tumble dryer.

Operating Your Dryer

5. Close the door.

Before you close the door, make sure fabrics are well placed inside and that foreign objects, especially flammable ones, are not caught around door.

⚠ CAUTION

Be careful not to trap laundry in between the loading door and rubber seal.

6. Select the drying cycle you want.

You can choose a cycle by turning the program control knob until the required program reaches to its indicator. If you only press Start/Pause button without choosing any cycle, the dryer will proceed with the Cupboard program. [Please refer to following Cycle Selection table (page 35) for the detailed information]

7. Press the start button.

You can hear drum rotating sound.

8. After operation is completed, open the door and remove the laundry.

Careful! the drum inside could be still hot. (Operation time varies depending on your cycle selection or options.)

Note

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

9. Clean the lint filters and empty water container.


The lint filter should be cleaned after each load.

10. Turn off the dryer.


Press the "Power" button.

⚠ CAUTION


- Be careful of the fact that filter should not be torn when using a vacuum cleaner. If there is a little residue buildup on filter, you can scrub lint screen with the brush to remove.
- If you want to open the door while dryer is operating, please press the Start/Pause button first, wait until drum completely stops and then open the door.

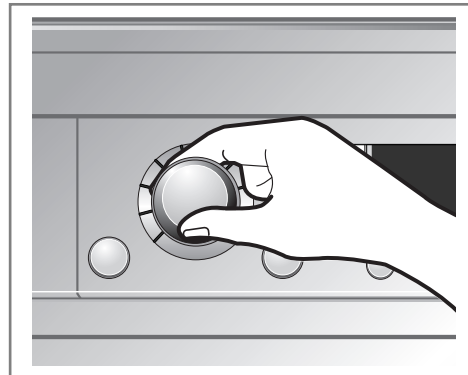

Select the desired cycle.

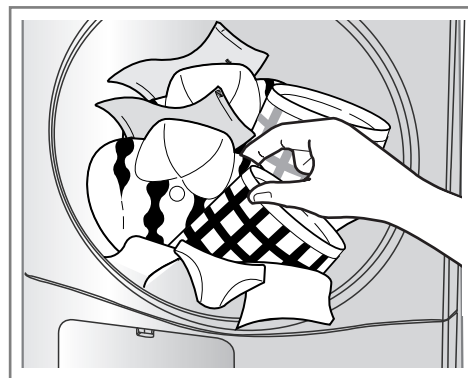

Take out the laundry.

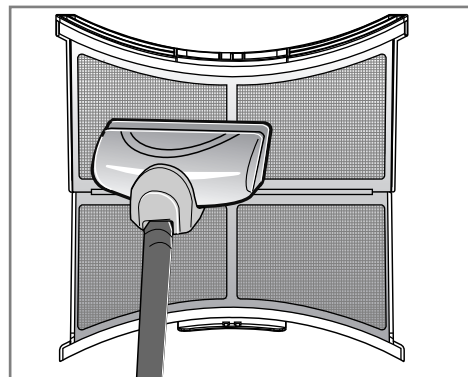

Clean the door lint filter.

⚠ WARNING

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Operating Your Dryer

● Rack Dry

The drying rack is placed inside the dryer as seen in the picture below. Remove and discard packing material before use.

The Rack Dry is designed for use with items that you do not want to tumble dry including sweaters and delicate fabrics.


To use the Drying rack :

1. Open the door.
2. Do not remove the filter.
3. Place drying rack over the bottom of the dryer door opening.
Reset the rack on the dryer back lodge.
Push down on the frame front to secure over filter.
4. Place wet items on top of the rack.
Allow space around items for air to circulate.
The rack does not move, but the drum will rotate.
5. Close the door.
6. Turn power on and select Rack Dry.


Note

Check the lint filter and remove any lint accumulated from items dried on the rack.


1. Insert wire edge to the drum centre.

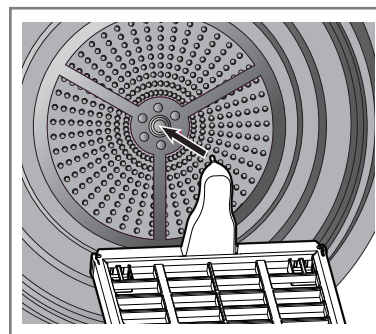

2. Place delicate fabrics or sportshoes.

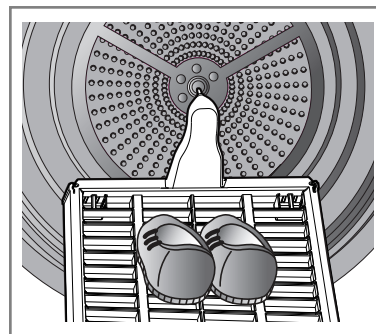

Additional Functions

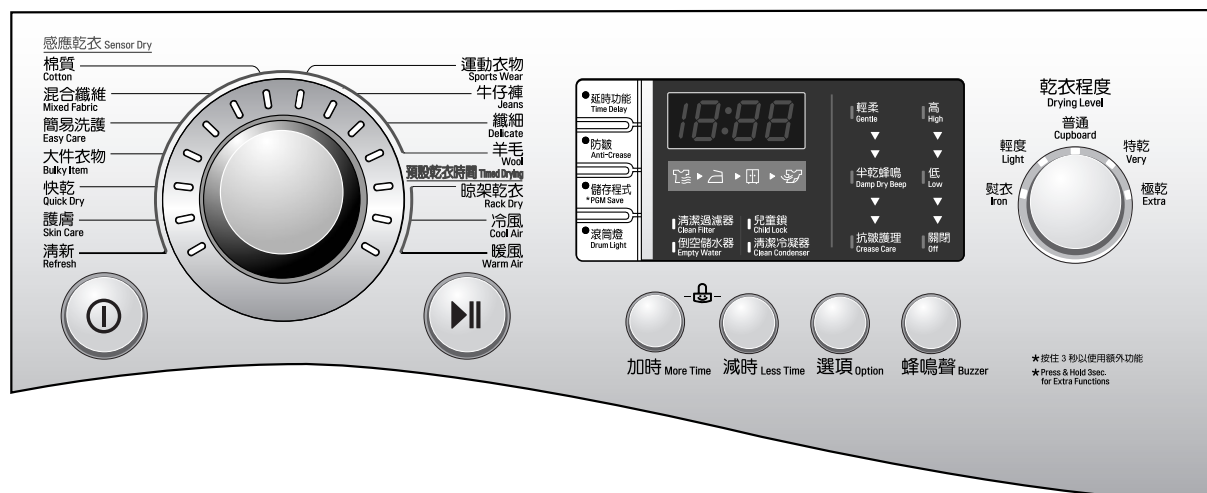

Time Delay

You can use the Time Delay function to delay the finishing time of drying cycle.
Maximum Time Delay is 19 hours.
Minimum Time Delay is 3 hours.

1. Turn the dryer on
2. Select cycle
3. Set time delay hour
4. Press Start/Pause button

Anti-Crease

Anti-Crease is functioning to prevent creases and rumples that are formed when the laundry is not unloaded promptly at the end of drying cycle. In this function, the dryer repeatedly runs and pauses to the cycle end.
If the door is open during Anti-Crease process, this function is cancelled.

A dditional Functions

● Favourite (儲存程式)

If you have a series of settings that you always seem to come back to, you can store this as a unique drying programme. For example, if your favorite setting is normally Extra Dry Cotton, with Low Temp and Anti-Crease, just select these settings and press "Favorite" until the dryer beeps. This programme is now stored as your Favorite and ready to be used again and again.

● Drum Light

Drum Light (Glass Door)

- During operating cycle, you can see the drum inside by choosing drum light function. It helps easy viewing the drying cycle.

Note

This function is available only with Cotton-Iron and Mixed-Iron cycles.

● More Time/Less Time

Press More Time or Less Time until the desired drying time is set.

Note

These buttons are available only with Timed Drying, before you push Start/Pause button.

● Child Lock ()

For the safety of your children, press More Time and Less Time buttons at the same time for about 3 seconds. You can see "" sign on LED window.

Note

For "" off, press More Time and Less Time buttons at the same time for about 3 seconds.

● Option

Gentle

- This is a function to shorten or lengthen the cycle time by increasing or decreasing temperature.
- This option only is used with the Cotton and Mixed Fabrics cycles.

Damp Dry Beep

- This is a function to inform when is the most suitable for ironing with beeper sound.
- This option only is used with the Cotton and Mixed Fabrics cycles.
- You can not use the 'Damp Dry Beep' when you select iron drying level.

Crease Care

- This is a function to reduce wrinkles.
- This is a function to set up automatically when you only select the Mixed Fabrics cycle, but cancellation is impossible.

Note

The option might be changed by the number of pressing the option button.

- Once : Gentle is selected.
- Twice : Damp Dry Beep option is selected.
- 3 Times : Gentle and Damp Dry Beep options are selected.
- 4 Times : No selected.

● Buzzer

This is a function to able to adjust volume of beeper sound.

Caring for Your Dryer

How important care and cleaning is~

It's not very difficult to care for your dryer. All you have to do is to follow the information below.


Clean Lint Filter

Clean lint filter after each use and check it before each use. It should also be cleaned if the "Clean Filter" light becomes illuminated and the buzzer sounds during operation of the dryer: Cleaning or emptying the filter will reduce drying times and energy consumption and lengthen the dryer life.


⚠ CAUTION

- The lint trap has to be cleaned frequently, if applicable.
- Lint must not be allowed to accumulate around the tumble dryer.


1. Open the door.

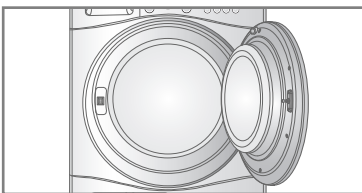


2. Pull the filter out.

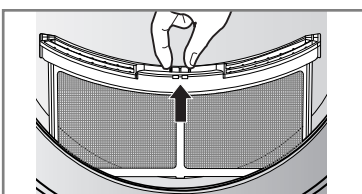

3. Clean the filter by using a vacuum cleaner or rinsing under the tap.

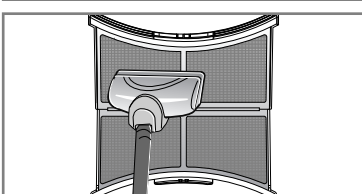

4. Replace the filter.
- Push the filter all the way down to avoid interference with the door.

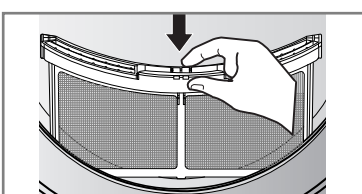

5. Close the door.

⚠ CAUTION

Wash the "Lint Filter" in warm, soapy water. Dry thoroughly and replace.

Clean lint filter during a cycle

If "Clean Filter" indicator lamp flashes during operation, clean the filter promptly.

1. Cool the dryer down and follow the mentioned steps.
2. Press the start/Pause button.


Empty Water Container

Condensed water is collected to water container


You should empty the water container after every use. Not doing this may result in improper drying performance.

If water container is full, "Empty Water" Lamp glows and a buzzer sounds while the dryer is operating. In this case, water container must be emptied in 1 hour

1. Draw water container out.

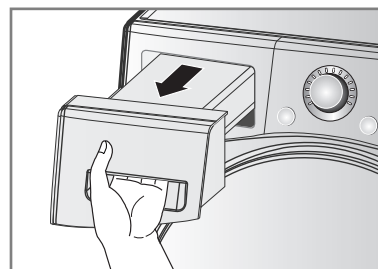

2. Empty water container to sink.

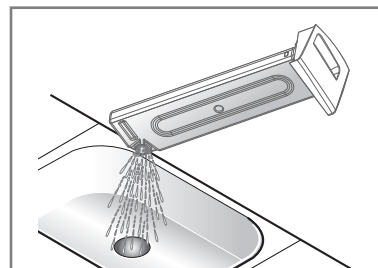

3. Push it back.

4. Press the Start/Pause button.

Note

High speed spinning, while washing, makes better energy consumption.

A high surrounding temperature & a small room might increase the drying time as well as energy consumption.

⚠ WARNING

Don't drink the condensed water, absolutely.

⚠ CAUTION

If the laundry is not spun at high speed, while washing, energy consumption and the Drying time will increase.


In some case, the laundry lamp flashes "Empty Water", then the dryer might stop.

Caring for Your Dryer


Condenser

Condenser is also a very important part for efficient drying performance result so it needs a special care from you. It is recommended that condenser be cleaned three or four times a year or when the condenser clean lamp blinks.


1. Open condensing cover by using a coin or flat blade screwdriver.

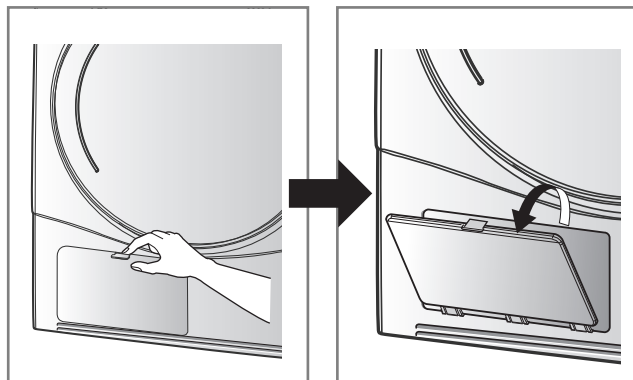


2. Open sealing cover by turning a locking lever.

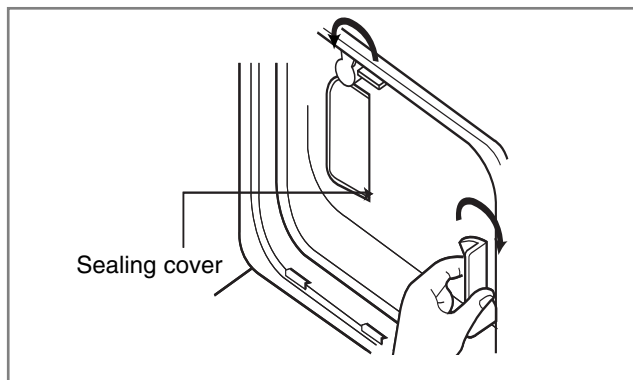

3. Draw the condenser out by inserting a finger into a hole down the front of condenser. (Don't forcefully treat condenser.)

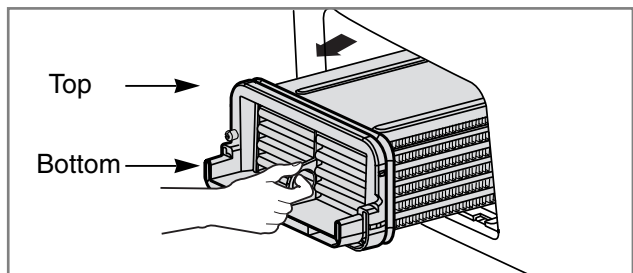

4. Clean the condenser completely under the tap letting water to flow through.

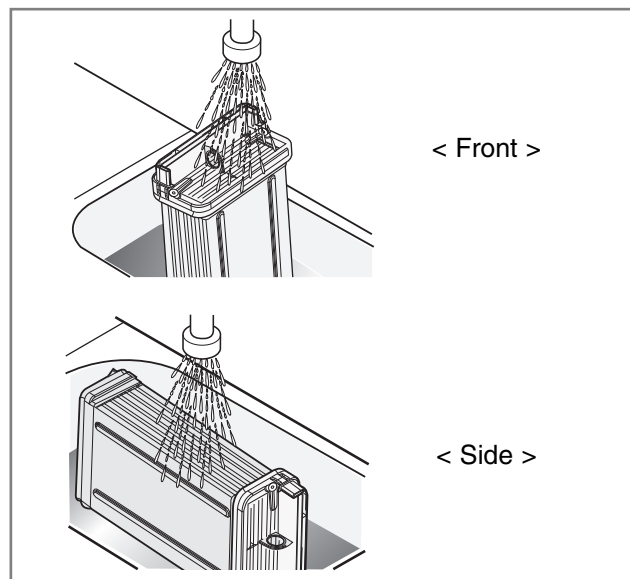

5. Close all with the reverse order of opening.



⚠ CAUTION

- Operating when the condenser is clogged with lint can damage the dryer. This also increases energy consumption.
- Do not use sharp objects to clean the heat exchanger. You could damage it and cause leaks.
- Never operate the dryer without the heat exchanger.

Caring for Your Dryer

Ventilation Grille and Cool Air Inlet Grille

Vacuum the front ventilation grill 3~4 time a year to make sure there must be no build-up of lints or dirt which cause improper intake air flow.

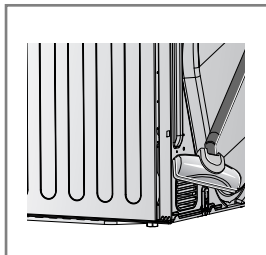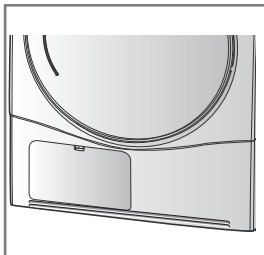


Note

- The warm air is exhausted through the ventilation grill.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliance's burning other fuels, including open fires.


Condensed Water Drain-out

Normally, condensed water is pumped up to water container where water is collected until emptied. Not only using water container, but water can be drained out directly to drain hose especially when dryer is stacked on top of washing machine. With connecting kit for drain hose, you can simply change water path and water reroute to the drainage facility. Please follow the below steps.


1. Take connecting kit out.

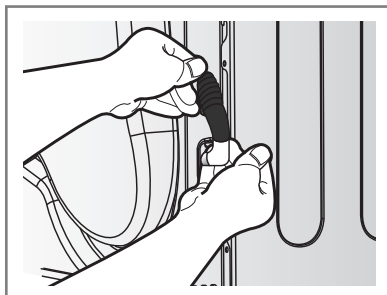

2. Separate water container hose from the kit.

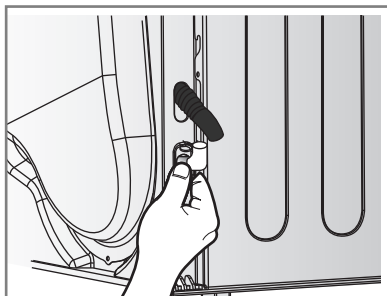


3. Connect drain hose to the kit.

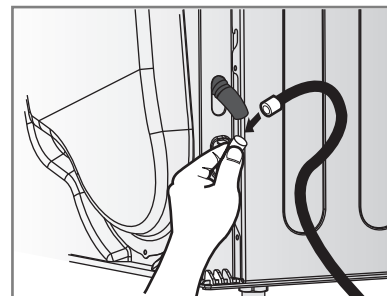

Moisture Sensor?

This device functions to sense the moisture remaining contents of the laundry during operation which means it must be cleaned all the time. The main reason of cleaning this part is to remove the build-up of lime scale on the surface of sensor. Wipe the sensors inside drum (Shown in the picture).

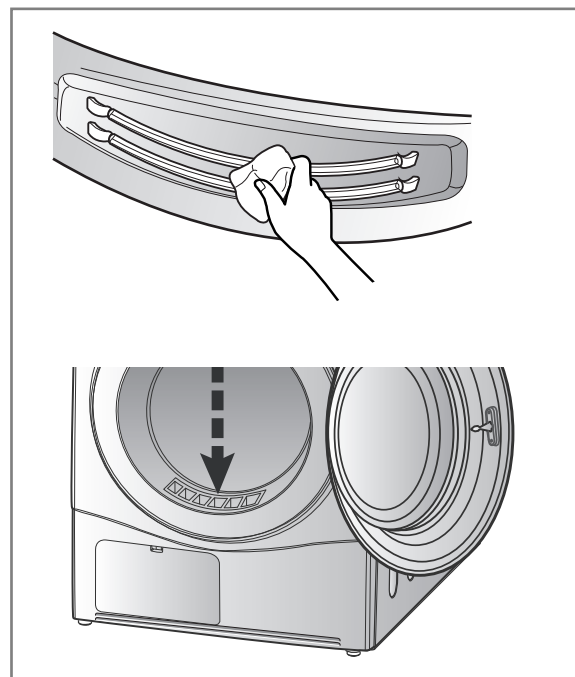

A dditional Tips for Smart Use

● Drying Guide & Capacity for laundry type

PROGRAMME		Ca. of Dryer
Cotton	Iron	9 kg
	Light	9 kg
	Cupboard	9 kg
Mixed Fabric	Cupboard	4 kg
Easy Care	Cupboard	2 kg
	Iron	2 kg
Bulky Item		1.5 kg
Skin Care		2 kg
Refresh		Dress Shirts Max.4EA
Sports Wear		1.5 kg
Jeans		4.5 kg
Delicate		1.5 kg
Wool		1 kg
Quick Dry		2 kg

Woolen Article

Dry woolens in "wool" cycle. Be sure to follow fabric care label "symbols", first. Wool is not completely dried from the program so don't repeat drying. Pull woolens to their original shape and dry them flat.

Woven and Loopknit Materials

Some woven and loopknit materials may shrink, depending on its quality.

Permanent Press and Synthetics

Do not overload your dryer.
Take out permanent press article as soon as the dryer stops to reduce wrinkles.

Baby Clothes and Night Gowns

Always check the manufacturer's instructions.

Rubber and Plastics

Do not dry any items made from or containing rubber or plastics such as:

- a) Aprons, Bibs and Chair Covers
- b) Curtains and Table Clothes
- c) Bathmats

Fiber Glass

Do not dry fiberglass articles in your dryer.
Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer and irritate your skin.

Fabric Care Labels

Clothes have its own wash care labels so drying according to wash care labels is recommended.
Not only that, the laundry must be sorted according to size and fabric type.
Do not overload in order to save you energy, time and best dry performance.

Below are fabric care labels.

Symbols	Instructions
	Dry
	Tumble dry
	Permanent Press / Wrinkle resistant
	Gentle / Delicate
	Do not tumble dry
	Do not dry
	High heating
	Medium heating
	Low heating
	No heat / air
	Line Dry / hang to dry
	Drip dry
	Dry flat
	In the shade

Additional Tips for Smart Use

Spare Parts

Spare parts in your need are provided under the terms of warranty. Components covered by warranty is provided free of charge. If coverage is expired, spare parts must be purchased from service center.

Disposal of the Dryer

It is desirable for you to dispose the dryer safely to keep your children away from the possible injury.

The door and lid and other protruded items must be taken away and power cord must be cut off to avoid future use. After that, the dryer is to be disposed safely.

Service Contact

If there is something wrong with your dryer, first you must be through the troubleshooting table. In case that you can't find the same trouble and you can not handle by yourself, please contact the service centre.


A service person will ask you some questions like followings:

1. Your name, address and postcode.
2. Your phone number.
3. Description of trouble.
4. The model No. and the serial No. of your dryer.
5. The date of purchase.


Accessory Parts

- Your dryer comes with accessories such as


1. Condensing Drain Hose

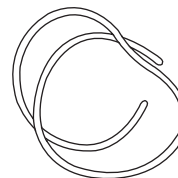


2. Hose Holder

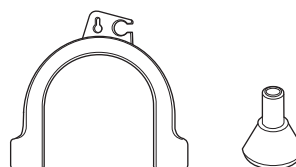

3. Dryer Rack

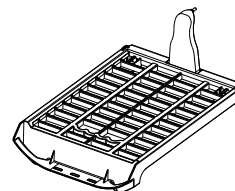

Stacking Kit

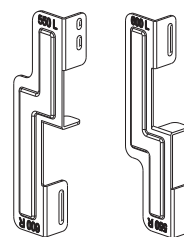

Holder : 2EA, Screw : 4EA

Purchased Separately

- The stacking kit can be used for washer top plate size 550mm and 600mm for both.

If stacking is needed, you must stack the dryer upon an LG washing machine.

A stacking kit is sold separately.

Troubleshooting Guidelines

Troubleshooting Tips

To save you time and money, the following page will help answer your questions before service call.

Questions	What to do
Dryer doesn't work	1. Check dryer is plugged in. 2. Check "Start" button is pressed. 3. Check door is properly closed. 4. Check Room temperature is below 5°C. 5. Check a fuse is not blown or the circuit breaker is tripped and replace them. (Caution : electric dryers generally use two fuses or breakers) After emptying the water container and Cleaning filter during operation, you must press Start button, then the dryer operates again.
It takes a long time to dry	1. Filter should be cleaned after each load. 2. Check water container is emptied. 3. Check cleanness of condenser. 4. Check to select correct program setting for fabric type. 5. Check air ventilation grille or rear vents of the dryer to be obstructed. 6. Check the clothes is "excessively wet". 7. Check correct program selected. 8. Check dryer is overloaded.
"Clean Filter" lamp flashes	1. Check filter is cleaned. 2. Check condenser unit is clogged.
Clothes are covered in Fluff	1. Check lint filter is empty. 2. Check dryer has only clean items. 3. Check laundry is properly sorted in the drum. 4. Check laundry is overloaded. 5. Check there is any paper, tissue, or similar item in the pockets of laundry.
The drying time is not consistent	The drying time for a load will vary depending on the heat setting, the size of the load, the type of fabrics, the wetness of the clothes and the condition of the lint filter.
Water is leaking	Check the door and sealing cover is dirty and damaged.
The clothes are wrinkled	Check the laundry is overloaded. Try a shorter drying time and remove items while they still retain a slight amount moisture.
The clothes shrunk	To avoid shrinkage, please carefully follow the care and use instructions for your garment, because some fabrics will naturally shrink when washed. Other fabrics can be washed but will shrink when dried in a dryer.

Troubleshooting Guidelines


● Error Mode

- dE : LED displays “ dE ” in case of the door open. The door must be closed and start Button must be pressed for re-operation.
- $EE1, EE3$: If display errors continues to occur, unplug the power cords and then call to the Service Center.

● Drum light does not work

- Connect customer service

Technical Data

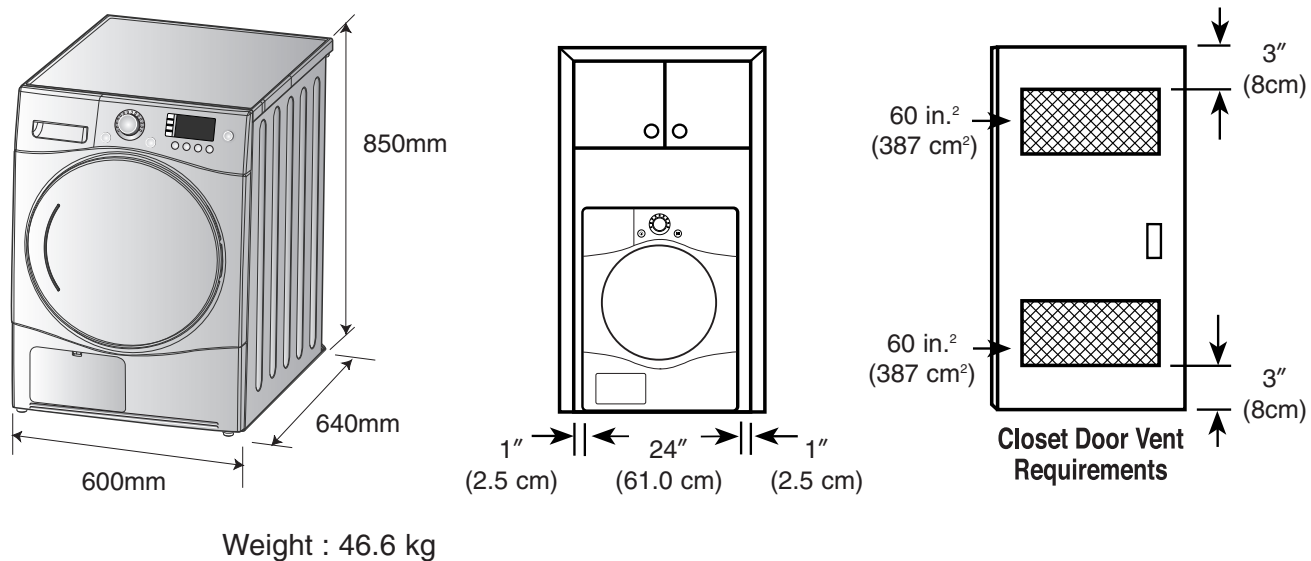

Electrical Requirements

Volts	Hertz	Watts
220-240 V	50 Hz	2600 W

Ensure you connect the dryer to the correct electricity voltage. The ratings plate on your dryer shows you what the voltage should be.

Ventilation Requirement

Alcove or undercounter	Closet
Ensure air flow of 112 cu.ft./min through dryer	Closet door must have 2(louvered) openings, each having a minimum area of 60 sq. inches (387 sq.cm), located 3 inches (8 cm) from bottom and top of door.

Warranty

■ What is not covered.

Service trips to your home to instruct you on the product.

If the product is connected to any voltage other than that shown on the rating plate.

If the fault is caused by accidents, neglects, misuses or Acts of God.

If the fault is caused by reasons except for normal domestic use or use in accordance with the owner's manual.

If the fault is caused by pests, for example, rats or cockroaches etc..

Noise or vibration that is considered normal, for example, water drain sound, spin sound or warning beeps.

Correcting the installation for example, leveling the product, adjustment of drain.

Normal maintenance recommended by the owner's manual.

Removal of foreign objects/substances from the machine including the pump and inlet hose filter, for example, grit, nails, bra wires and buttons etc..

Replace fuses in or correct wiring or correct house plumbing.

Correction of unauthorized repairs.

Incidental or consequential damage to personal property caused by possible defects with this appliance.

If this product is used for commercial purposes, it is not warranted.

(Example: Public places such as public bathroom, lodging house, training center, dormitory)

If the product is installed outside the normal service area, any cost of transportation involved in the repair of the products, or the replacement of a defective part, shall be borne by the owner.

Memo

Memo

