



# OWNER'S MANUAL

## LED TV\*

\*LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your TV and retain it for future reference.

MT44\*

MT45\*

# TABLE OF CONTENTS

## 3 LICENSES

## 4 ASSEMBLING AND PREPARING

- 4 Unpacking
- 6 Parts and buttons
- 7 - Using the joystick button
- 10 Lifting and moving the TV
- 11 Setting up the TV
- 11 - Attaching the Stand
- 13 - Detaching the Stand
- 15 Mounting on a table
- 17 Mounting on a wall

## 19 MAKING CONNECTIONS

- 19 Antenna Connection
- 20 Other Connections

## 22 REMOTE CONTROL

## 23 WATCHING TV

- 23 Turning the TV on for the first time
- 23 Watching TV
- 23 Managing programmes
- 23 - Automatically setting up programme
- 24 - Manually setting up programme
- 25 - Editing your programme list
- 25 - Selecting a programme on the programme list
- 26 Using additional options
- 26 - Adjusting aspect ratio
- 27 - Using the input list

## 28 ENTERTAINMENT

- 28 Connecting USB storage devices
- 29 Browsing files
- 30 Viewing photos
- 32 Listening to music
- 33 Viewing movies
- 35 DivX® VOD Guide

## 36 CUSTOMIZING TV SETTING

- 36 Accessing main menus
- 37 Customizing Settings

- 37 - SETUP Settings
- 37 - PICTURE Settings
- 40 - AUDIO Settings
- 42 - TIME Settings
- 42 - OPTION Settings
- 43 - LOCK Settings

## 44 TELETEXT

- 44 Switch On/Off
- 44 Simple Text
- 44 - Page selection
- 44 - Programming a colour button in LIST mode
- 44 Fasttext
- 44 - Page selection
- 45 Special Teletext Function

## 46 MAINTENANCE

- 46 Cleaning Your TV
- 46 - Screen, frame, Cabinet and stand
- 46 - Power cord
- 46 Preventing "Image burn" or "Burn-in" on your TV screen

## 47 TROUBLESHOOTING

## 49 SPECIFICATIONS



### WARNING

- If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death.



### CAUTION

- If you ignore the caution message, you may be slightly injured or the product may be damaged.



### NOTE

- The note helps you understand and use the product safely. Please read the note carefully before using the product.

# LICENSES

Supported licenses may differ by model. For more information about licenses, visit [www.lg.com](http://www.lg.com).



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

**! NOTE**

- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.
- The TV can be placed in standby mode in order to reduce the power consumption. And the TV should be turned off if it will not be watched for some time, as this will reduce energy consumption.
- The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

## ASSEMBLING AND PREPARING

### Unpacking



Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and accessories.

**! CAUTION**


- Do not use any pirated items to ensure the safety and product life span.
- Any damages or injuries by using pirated items are not covered by the manufacturer's warranty.
- Some models have a thin film attached on to the screen and this must not be removed.

**! NOTE**

- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port.

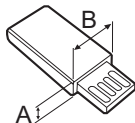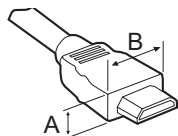


\*A ≦ 10 mm  
\*B ≦ 18 mm

 


**Remote control, batteries (AAA)**  
(See p. 22)




**CD (Owner's Manual) / Cards**

 

 
**D-SUB Cable**  
(Depending on model)  
(See p. 20, 21)



 
**Power Cord**  
(Depending on model)  
(See p. 15)




**AC-DC Adapter**  
(See p. 15)

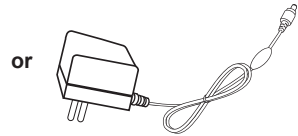


**AC-DC Adapter**  
(Depending on model)  
(See p. 15)

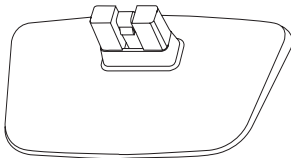

**Stand Base**  
(Only MT44\*)  
(See p. 12)

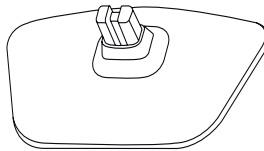

**Stand Base**  
(Only 22/24/28MT45\*)  
(See p. 11)

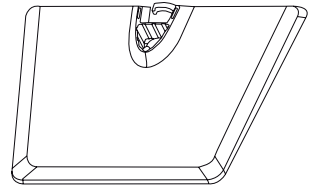

**Stand Base**  
(Only 29MT45\*)  
(See p. 11)




**Stand Body**  
(Only 29MT45\*)  
(See p. 11, 13)



**Stand Screws**  
2 EA, M4 x L16  
(Only 29MT45\*)  
(See p. 12, 14)

## Parts and buttons

(Only MT44\*)

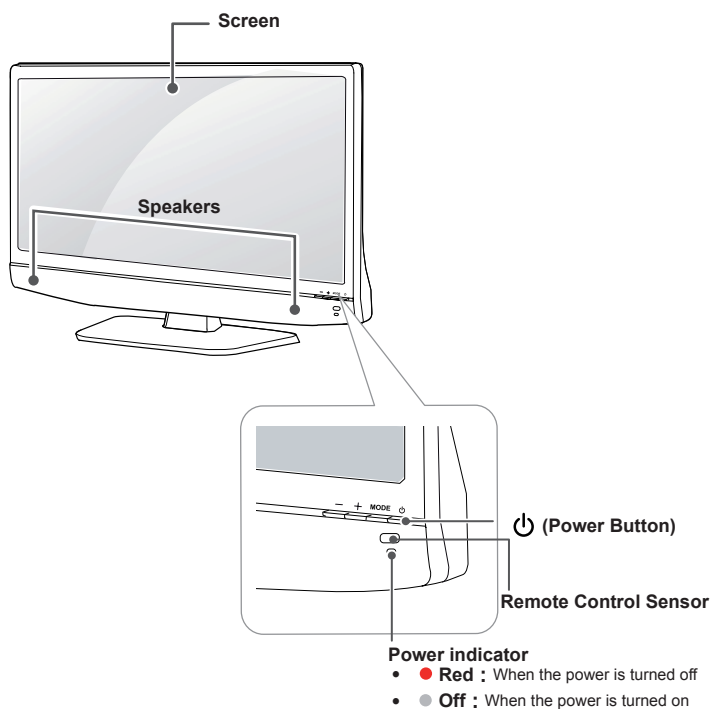


| Button      | Description                                                           |                                       |
|-------------|-----------------------------------------------------------------------|---------------------------------------|
| <b>MODE</b> | Selects the mode. ( <b>Programme</b> → <b>Volume</b> → <b>INPUT</b> ) |                                       |
|             | <b>Programme</b>                                                      | Scrolls through the saved programmes. |
|             | <b>Volume</b>                                                         | Adjusts the volume level.             |
|             | <b>INPUT</b>                                                          | Changes the input source.             |
| <b>-/+</b>  | Adjusts the mode button level.                                        |                                       |

### ! NOTE

- Local keys work on **Power**, **Programme**, **Volume** and **INPUT** only.

(Only 22/24/28MT45\*)

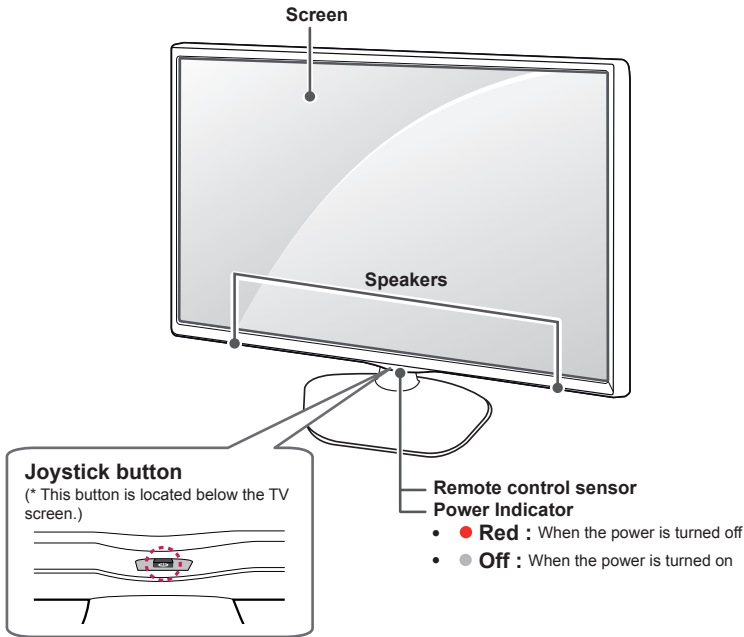

## Using the joystick button

You can operate the TV by pressing the button or moving the joystick left, right, up, or down.

### Basic Functions

|  |                    |                                                                                                                                                                                                                                                |
|--|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Power On           | When the TV is turned off, place your finger on the joystick button and press it once and release it.                                                                                                                                          |
|  | Power Off          | When the TV is turned on, place your finger on the joystick button and press it once for a few seconds and release it.<br>(However, if the Menu button is on the screen, pressing and holding the joystick button will let you exit the Menu.) |
|  | Volume Control     | If you place your finger over the joystick button and move it left or right, you can adjust the volume level you want.                                                                                                                         |
|  | Programmes Control | If you place your finger over the joystick button and move it up or down, you can scrolls through the saved programmes you want.                                                                                                               |


**! NOTE**

- When your finger over the joystick button and push it to the up, down, left or right, be careful not to press the joystick button. If you press the joystick button first, you can not adjust the volume level and saved programmes.


**Adjusting the Menu**

When the TV is turned on, press the joystick button one time.

You can adjust the Menu items (⏻, ⚙️, ✕, 📶) moving the joystick button up, down, left or right.
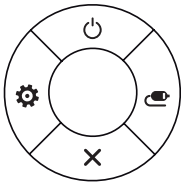
|                                                                                   |    |                   |                                                      |
|-----------------------------------------------------------------------------------|----|-------------------|------------------------------------------------------|
|  | ⏻  | <b>TV Off</b>     | Turns the power off.                                 |
|                                                                                   | ⚙️ | <b>Settings</b>   | Accesses the main menu.                              |
|                                                                                   | ✕  | <b>Close</b>      | Clears on-screen displays and returns to TV viewing. |
|                                                                                   | 📶  | <b>Input List</b> | Changes the input source.                            |

(Only 29MT45\*)

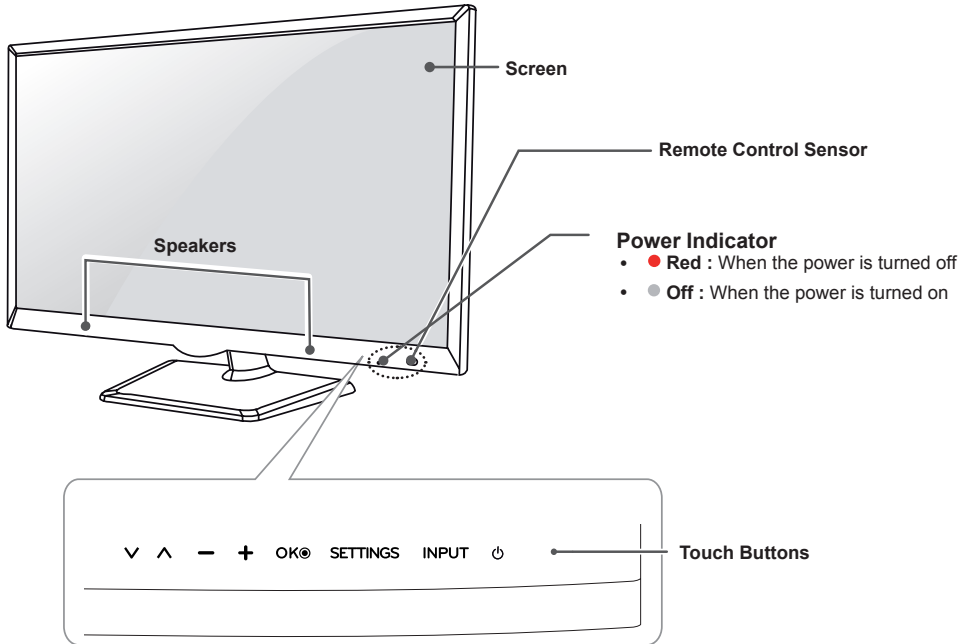

### ! NOTE

- All of the buttons are touch sensitive and can be operated through simple touch with your finger.

| Touch buttons | Description                                                       |
|---------------|-------------------------------------------------------------------|
| V ^           | Scrolls through the saved programmes.                             |
| - +           | Adjusts the volume level.                                         |
| OK ●          | Selects the highlighted menu option or confirms an input.         |
| SETTINGS      | Accesses the main menus, or saves your input and exits the menus. |
| INPUT         | Changes the input source.                                         |
| ⏻             | Turns the power on or off.                                        |

## Lifting and moving the TV

Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.




### CAUTION

- Avoid touching the screen at all times, as this may result in damage to the screen.
- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to prevent the screen from scratches.



- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

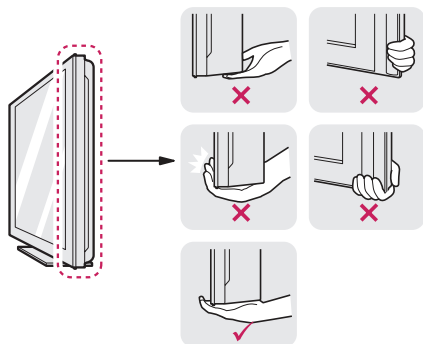

- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing /bending of frame chassis as it may damage screen.
- When handling the TV, be careful not to damage the protruding joystick button. (Depending on model)

## Setting up the TV

Image shown may differ from your TV.



### Attaching the Stand





#### CAUTION

- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.


22/24/28MT45\*

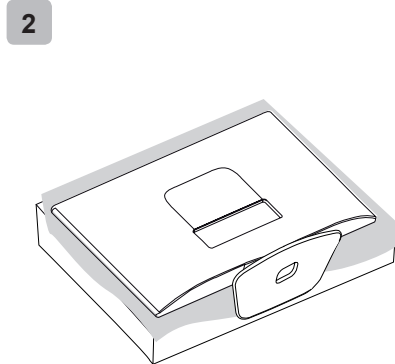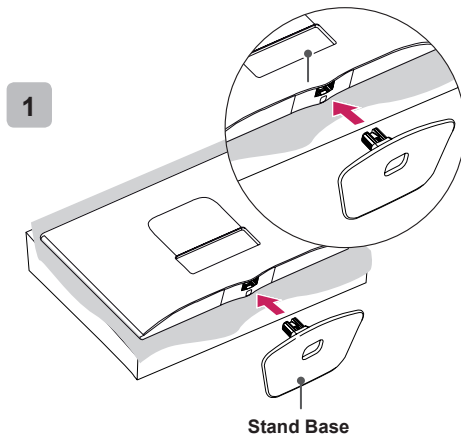

29MT45\*

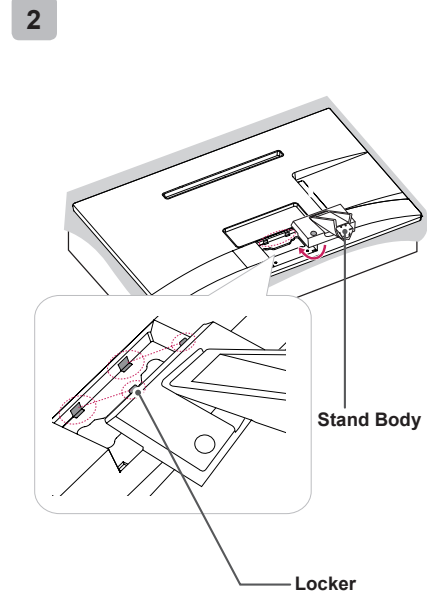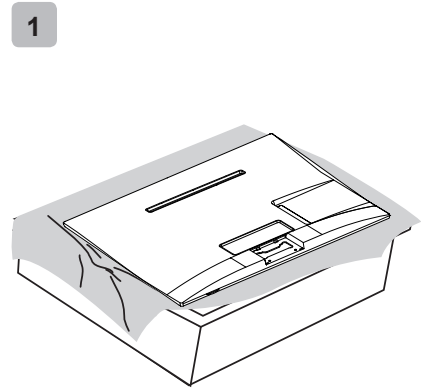


3

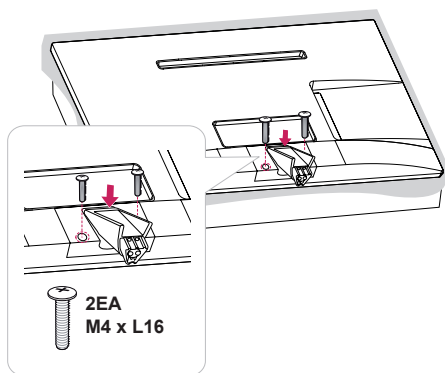**! NOTE**


- If you don't fasten the screw tightly, TV will fall down and get damaged.
- Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten.

4

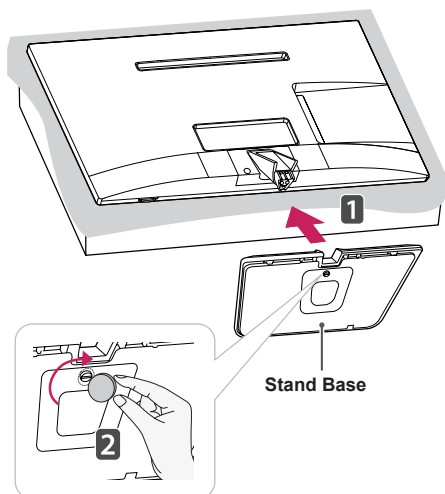


MT44\*

1

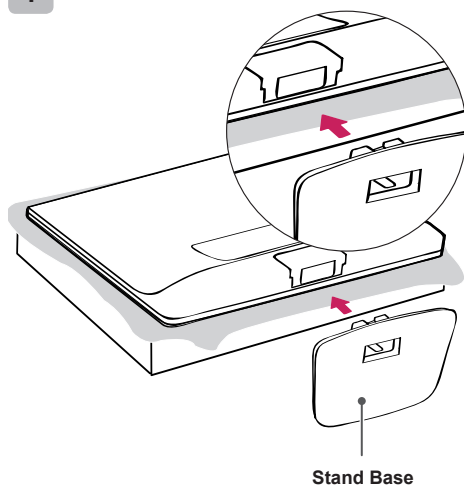

2

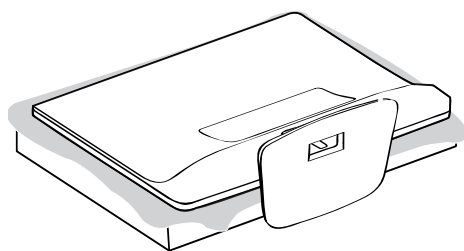


## Detaching the Stand



### CAUTION

- When detaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.


22/24/28MT45\*

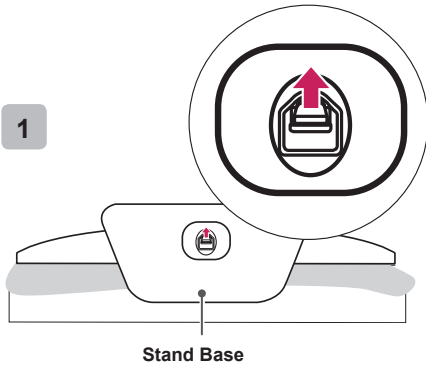

### NOTE


- Lift up the latch at the bottom of the stand base and detach the stand base from the TV.

2

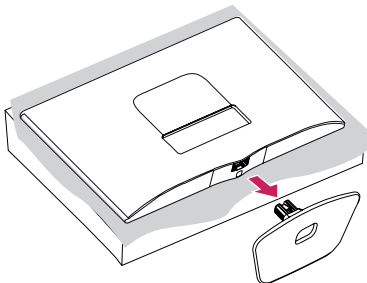


29MT45\*


1

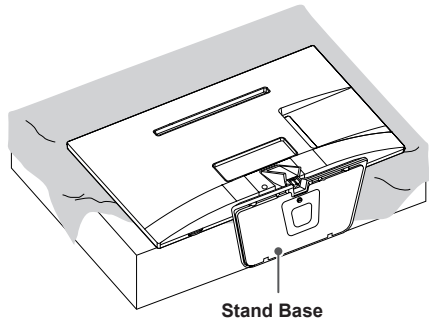

2

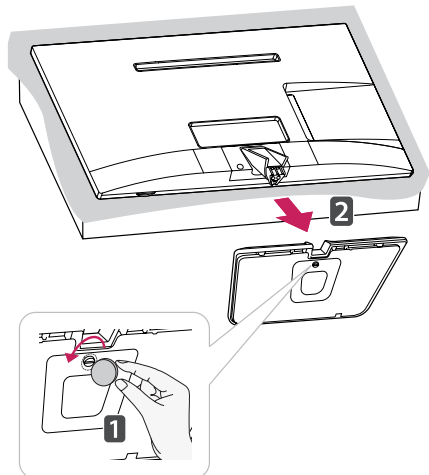


3

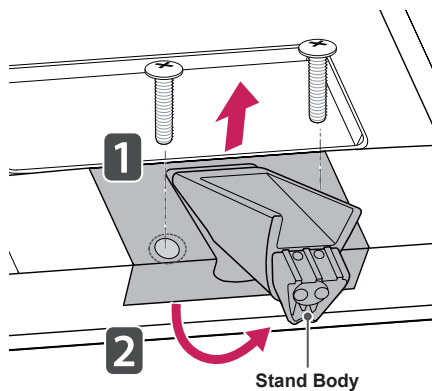

MT44\*


1

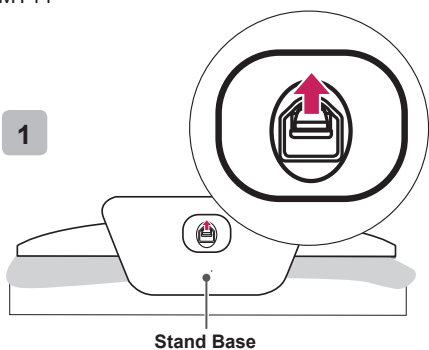

### NOTE



- Lift up the latch at the bottom of the stand base and detach the stand base from the TV.

2

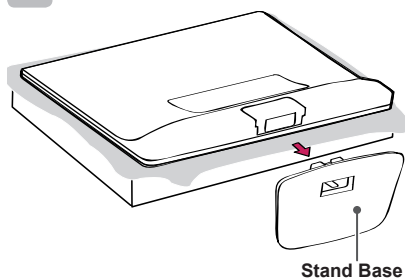


### CAUTION

- Do not carry the TV upside-down by holding the stand body (or stand base) as this may cause it to fall off, resulting in damage or injury.
- The illustration shows a general example of installation and may look different from the actual product.

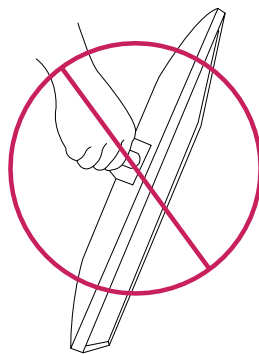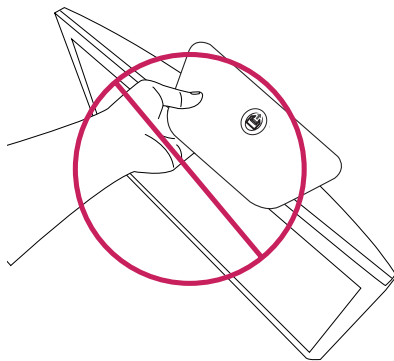


## Mounting on a table


- 1 Lift and tilt the TV into its upright position on a table.
  - Leave a 10 cm (minimum) space from the wall for proper ventilation.

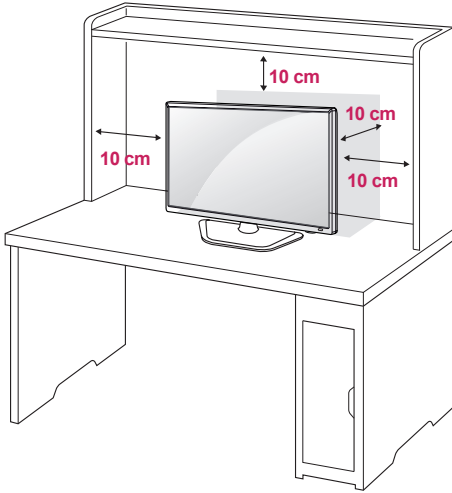

- 2 Connect the **AC-DC Adapter** and **Power Cord** to a wall outlet.

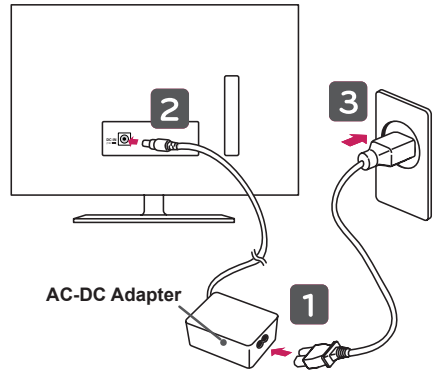

or

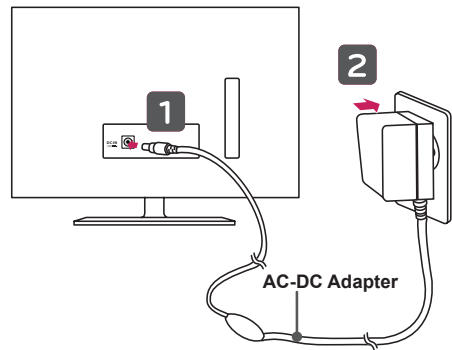


### CAUTION

- Do not place the TV near or on sources of heat, as this may result in fire or other damage.
- Please be sure to connect the TV to the AC/DC power adapter before connecting the TV's power plug to a wall power outlet.



**Adjusting the angle of the TV to suit view**

- Image shown may differ from your TV.

Tilt from +20 to -5 degrees up or down to adjust the angle of the TV to suit your view.  
(Only 29MT45\*)

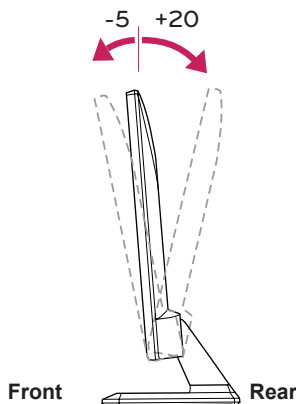**CAUTION**


- When you adjust the angle, do not hold the bottom of the TV frame as shown on the following illustration, as may injure your fingers.

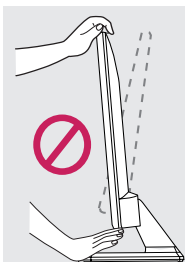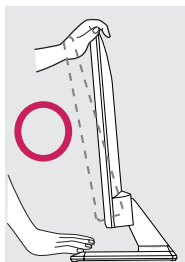**Using the Kensington security system**

- Image shown may differ from your TV.

The Kensington security system connector is located at the back of the TV. For more information of installation and using, refer to the manual supplied with the Kensington security system or visit <http://www.kensington.com>.


Connect the Kensington security system cable between the TV and a table.

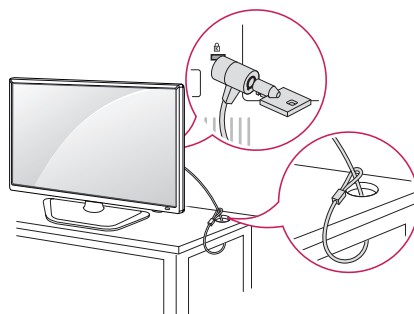**NOTE**

- The Kensington security system is optional. You can obtain additional accessories from most electronics stores.

## Mounting on a wall


For proper ventilation, allow a clearance of 10 cm on each side and from the wall. Detailed installation instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

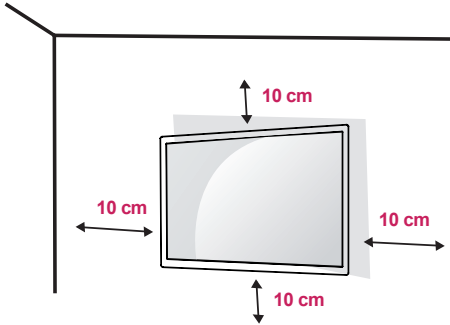


If you intend to mount the TV to a wall, attach Wall mounting interface (optional parts) to the back of the TV.

When you install the TV using the wall mounting interface (optional parts), attach it carefully so it will not drop.

 - 1 Please, Use the screw and wall mount interface in accordance with VESA Standards.
- 2 If you use screw longer than standard, the TV might be damaged internally.
- 3 If you use improper screw, the product might be damaged and drop from mounted position. In this case, LG Electronics is not responsible for it.
- 4 VESA compatible only with respect to screw mounting interface dimensions and mounting screw specifications.
- 5 Please use VESA standard as below.
  - 784.8 mm and under
    - \* Wall Mount Pad Thickness : 2.6 mm
    - \* Screw :  $\phi$  4.0 mm x Pitch 0.7 mm x Length 10 mm
  - 787.4 mm and above
    - \* Please use VESA standard wall mount pad and screws.


| Model                         | 22/24MT44*<br>22/24MT45*                                                                   | 28/29MT45* |
|-------------------------------|--------------------------------------------------------------------------------------------|------------|
| VESA (A x B)                  | 75 x 75                                                                                    | 100 x 100  |
| Standard screw                | M4 x L10                                                                                   |            |
| Number of screws              | 4                                                                                          |            |
| Wall mount bracket (optional) | RW120<br> |            |

- VESA (A x B)

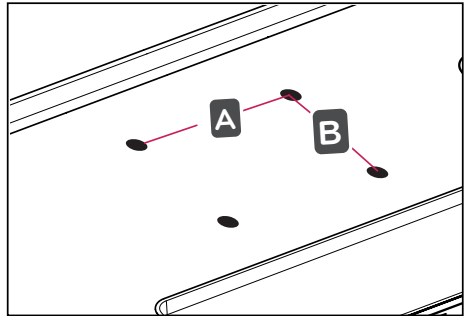

**CAUTION**

- Disconnect the power cord first, and then move or install the TV. Otherwise electric shock may occur.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury.
- Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the manufacturer's warranty.
- Screw length from outer surface of back cover should be under 8mm.

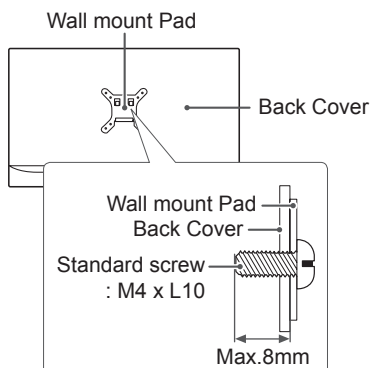**NOTE**

- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit includes an installation manual and necessary parts.
- The wall mount bracket is optional. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Be sure to use the proper length.
- For more information, refer to the instructions supplied with the wall mount.

## MAKING CONNECTIONS

This section on **MAKING CONNECTIONS** mainly uses diagrams for the 28MT45A models.


Connect various external devices to the TV and switch input modes to select an external device. For more information about an external device's connection, refer to the manual supplied with each device.

Available external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, camcorders or cameras, gaming devices, and other external devices.

### ! NOTE

- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.
- If you record a TV programme on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.
- Refer to the external equipment's manual for operating instructions.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.
- In PC mode, some resolution settings may not work properly depending on the graphics card.

## Antenna Connection

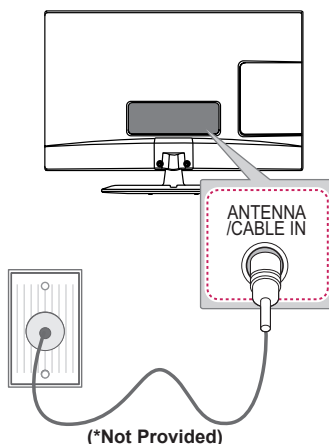

Connect the TV to a wall antenna socket with an RF cable (75  $\Omega$ ).


### ! NOTE

- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction.
- An antenna cable and converter are not supplied.

## Other Connections


Connect your TV to external devices. For the best picture and audio quality, connect the external device and the TV with the HDMI cable as shown. Some separate cable is not provided.

(Only 22/24MT44A, 22/24/28MT45A)

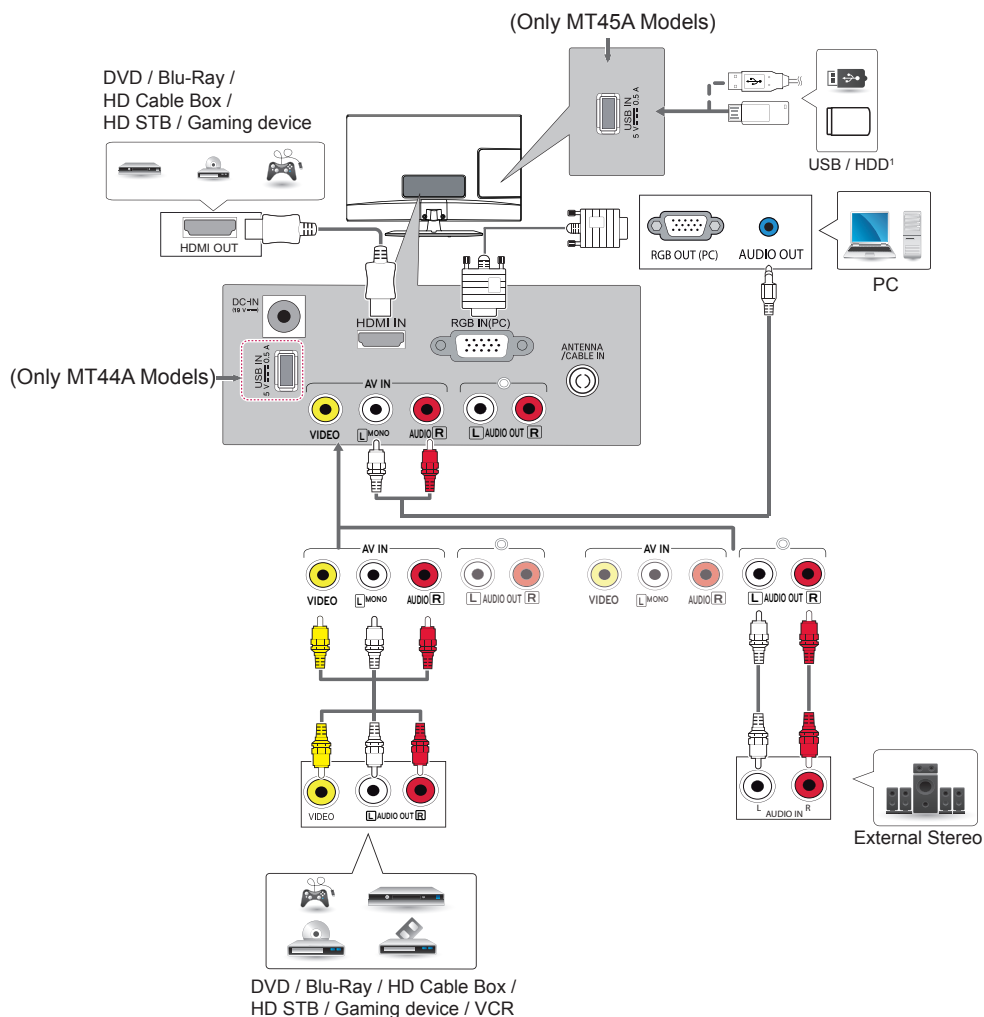

<sup>1</sup> USB port supports 0.5A electric current. If you need more electric current in case of HDD, use the separate power adaptor.


(Only 29MT45A)

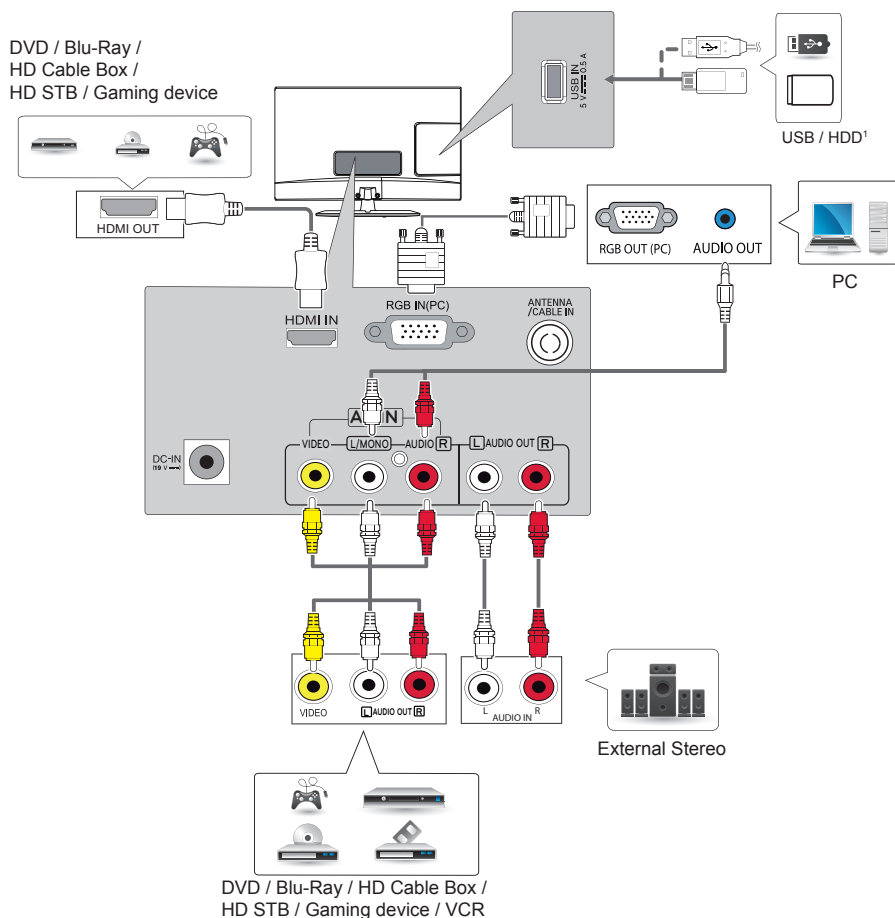

<sup>1</sup> USB port supports 0.5A electric current. If you need more electric current in case of HDD, use the separate power adaptor.

# REMOTE CONTROL


The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly. To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the  $\oplus$  and  $\ominus$  ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse.

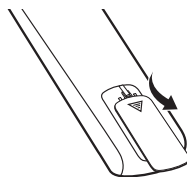

## CAUTION

- Do not mix old and new batteries, as this may damage the remote control.
- In Analogue TV and some countries, some remote control buttons may not work.

Make sure to point the remote control toward the remote control sensor on the TV.

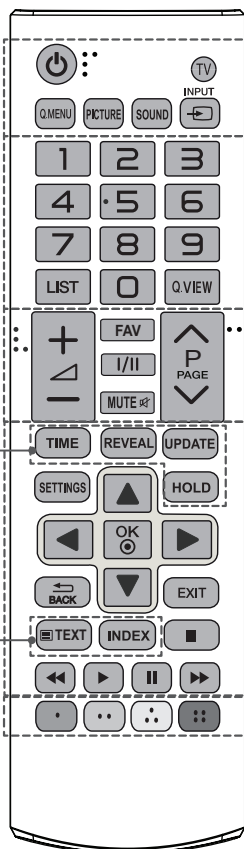

- ⏻ (POWER)** Turns the TV on or off.
- TV** Returns to the TV viewing from any mode.
- Q.MENU** Accesses the Quick menus.
- PICTURE** Changes the image mode.
- SOUND** Changes the sound mode.
- ⏮ INPUT** Changes the input source.
- Number buttons** Enters numbers.
- LIST** Accesses the saved programme list.
- Q.VIEW** Returns to the previously viewed programme.
- + ▴ -** Adjusts the volume level.
- FAV** Accesses your favourite programme list.
- I/II** Selects the sound output.
- MUTE** Mutes all sounds.
- ^ P v** Scrolls through the saved programmes.
- ^ PAGE v** Moves to the previous or next screen.
- 1 TELETEXT BUTTONS** These buttons are used for teletext.
- SETTINGS** Accesses the main menus.
- Navigation buttons (up/down/left/right)** Scrolls through menus or options.
- OK** Selects menus or options and confirms your input.
- ↶ BACK** Returns to the previous level.
- EXIT** Clears on-screen displays and returns to TV viewing.
- Control buttons (⏮, ▸, II, ◀, ▹)** Controls the USB menus.
- Coloured buttons** These access special functions in some menus.  
( : Red, : Green, : Yellow, : Blue)

# WATCHING TV

## Turning the TV on for the first time

When you turn the TV on for the first time, the Initial setting screen appears. Select a language and customize the basic settings.

- 1 Connect the power cord to a power outlet.  
The Power indicator turns red and the TV switches to Standby mode.
- 2 In Standby mode, press the power button on the remote control or local key to turn the TV on. The Initial setting screen appears if you turn the TV on for the first time.

### ! NOTE

- You can also access Factory Reset by accessing **OPTION** in the main menu.

- 3 Follow the on-screen instructions to customize your TV settings according to your preferences.

**Menu Language**



**Mode Setting**



**Time Setting**



**Auto Tuning**

Selects a language to display.

Selects **Home Use** for the home environment.

Sets the time.

Scans and saves available programmes automatically.

### ! NOTE

- To display images in the best quality for your home environment, select **Home Use**.
- **Store Demo** is suitable for the retail environment.
- If you select **Store Demo**, any customized settings will switch back to the default settings of **Store Demo** in 5 minutes.

- 4 When the basic settings are complete, press the **OK** .

### ! NOTE

- If you do not complete the Initial setting, it will appear whenever the TV turns on.
- Disconnect the power cord from the power outlet when you do not use the TV for a long period of time.

- 5 To turn the TV off, press the power button on the remote control.

## Watching TV

- 1 In Standby mode, press  (**POWER**) to turn the TV on.
- 2 Press **INPUT** and select **TV**.
- 3 To turn the TV off, press  (**POWER**).  
The TV switches to Standby mode.

## Managing programmes

### Automatically setting up programme

Use this to automatically find and store all available programmes.

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **SETUP** and press **OK** .
- 2 Press the Navigation buttons to scroll to **Auto Tuning** and press **OK** .
- 3 Press the Navigation buttons to scroll to **To Start** and select **To Start** to begin auto tuning. The TV scans and saves available programmes automatically.
- 4 When you return to the previous menu, press  **BACK**.

## Manually setting up programme

Manual Tuning lets you manually tune and arrange the stations in whatever order you desire.

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **SETUP**.
- 2 Press the Navigation buttons to scroll to **Manual Tuning**.
- 3 Press the Navigation buttons to scroll to **Storage**.
- 4 Press the Navigation buttons or Number buttons to select the desired programme number.
- 5 Press the Navigation buttons to scroll to **System**.
- 6 Press the Navigation buttons to scroll to **TV System**.
- 7 Press the Navigation buttons to scroll to **Band**.
- 8 Press the Navigation buttons to scroll to **V/UHF or Cable**.
- 9 Press the Navigation buttons to scroll to **Channel**.
- 10 Press the Navigation buttons and then select the desired programme number with the Navigation buttons or Number buttons.
- 11 Press the Navigation buttons to scroll to **Search**.
- 12 Press the Navigation buttons to scroll and start Searching.
- 13 Press the **OK**  to store it.
- 14 When you return to the previous menu, press **BACK**.



### NOTE

- To store another programme, repeat steps 3 to 13.

## Assigning a station name

You can assign a station name with five characters to each programme number.

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **SETUP**.
- 2 Press the Navigation buttons to scroll to **Manual Tuning**.
- 3 Press the Navigation buttons to scroll to **Name**.
- 4 Press the Navigation buttons to scroll to select the position and make your choice of the second character, and so on. You can use an the alphabet A to Z, the number 0 to 9, +/ -, and blank and press **OK** .
- 5 Press the **OK**  to store it.
- 6 When you return to the previous menu, press **BACK**.

## Fine Tuning

Normally fine tuning is only necessary if reception is poor.

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **SETUP**.
- 2 Press the Navigation buttons to scroll to **Manual Tuning**.
- 3 Press the Navigation buttons to scroll to **Fine**.
- 4 Press the Navigation buttons to fine tune for the best picture and sound.
- 5 Press the **OK**  to store it.
- 6 When you return to the previous menu, press **BACK**.

## Editing your programme list

When a programme number is skipped, it means that you will be unable to select it using **^Pv** button during TV viewing.

If you wish to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the Programme edit menu.

This function enables you to skip the stored programmes.

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **SETUP**.
- 2 Press the Navigation buttons to scroll to **Programme Edit**.
- 3 Edit programmes using the following buttons.

| Button        | Description                                                                                                                                         |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Red button    | Deletes a programme.<br>Press the Red button twice.<br>The selected programme is deleted, all the following programmes are shifted up one position. |
| Yellow button | Moves a programme.<br>Press the Yellow button again to release this function.                                                                       |
| Blue button   | Selects a programme number to be skipped.<br>Press the Blue button again to release the skipped programme.                                          |

- 4 When you return to the previous menu, press **↩ BACK**.

## Selecting a programme on the programme list

- 1 Press **LIST** to access the programme list.
- 2 Press the Navigation buttons to select to desired programme and press **OK** .
- 3 When you return to the previous menu, press **LIST**.

### **NOTE**

- You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.
- Some programmes with the programme number shown in the programme list indicate there is no station name assigned.

## Using additional options

### Adjusting aspect ratio

Resize an image to view at its optimal size by pressing **Q.MENU** or accessing Aspect Ratio in the **PICTURE** menu.

#### ! NOTE

- The available ratio varies depending on the input source.

- **16:9**: Resizes images to fit the screen width.



- **Just Scan**: Displays video images in the original size without removing parts of the edge of the image. (This function works in HDMI Mode (720P/1080i/1080p).)



#### ! NOTE

- If you select **Just Scan**, you may see image noises at the edge of the original signal.

- **Original**: When your TV receives a wide screen signal it will automatically change to the picture format broadcasted.

(4:3 → 4:3)



(16:9 → 16:9)




- **4:3**: Resizes images to the previous standard 4:3.



- **14:9**: You can view a picture format of 14:9 or a general TV programme in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is moved to the up and down.



- **Zoom**: Formats an image to fit the screen width. The top and bottom of the image may not appear.

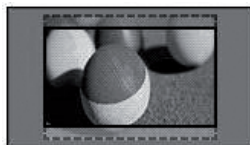

- **Cinema Zoom 1**: Formats an image to the cinemascope ratio, 2.35:1. To change the ratio of the cinema zoom, press < or > and its range is from 1 to 16.




#### ! NOTE

- If you enlarge or reduce an image, the image may be distorted.

## Using the input list

### Selecting an input source

- 1 Press **INPUT** to access the input sources.
- The connected device displays on each input source.
- 2 Press the Navigation buttons or input button to scroll to one of the Input sources and press **OK** .
- Image shown may differ from your TV.

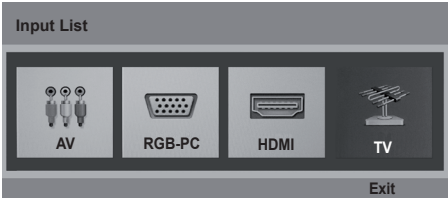

| Input source | Description                                              |
|--------------|----------------------------------------------------------|
| AV           | Watch video from a VCR or other external devices.        |
| RGB-PC       | View a PC display on the screen.                         |
| HDMI         | Watch video from a HTS or other high definition devices. |
| TV           | Watch TV over the air and cable broadcast.               |


## ENTERTAINMENT

(Depending on model)

- Image shown may differ from your TV.

### Connecting USB storage devices

 Connect USB storage devices (external HDD, USB memory) to the TV and use multimedia features. (See "Browsing files" on page 29) Connect a USB flash memory or USB memory card reader to the TV as shown on the following illustration.



To disconnect a USB storage device, make sure to end the connection properly to prevent damages to the TV or files.

- 1 Press **Q.MENU** to access the quick menus.
- 2 Press the Navigation buttons to scroll to **Eject** and press **OK** .
- 3 Disconnect the USB storage device only when the message says that it is safe to remove.



#### CAUTION

- Do not turn the TV off or remove a USB storage device while the USB storage device is connected to the TV, as this could result in loss of files or damage to the USB storage device.
- Back up your files saved on a USB storage device frequently, as you may lose or damage the files and this may be not covered by the manufacturer's warranty.

#### Tips for using USB storage devices



 
- Only a USB storage device is recognizable.
- If the USB storage device is connected through a USB hub, the device is not recognizable.
- A USB storage device using an automatic recognition programme may not be recognized.
- A USB storage device which uses its own driver may not be recognized.
- The recognition speed of a USB storage device may depend on each device.
- Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Please do not connect the USB storage device which was artificially manoeuvred on the PC. The device may cause the product to malfunction or fail to be played. Never forget to use only a USB storage device which has normal music files, image files or movie files.
- Please use only a USB storage device which was formatted as a FAT16, FAT32, NTFS file system.
- Please connect a USB storage device with the cable offered by the device maker.
- Some USB storage devices may not be supported or operated smoothly.
- Be sure to back up important files since data stored in a USB memory device may be damaged. We will not be responsible for any data loss.
- If a USB memory device is connected to a USB multi-card reader, its volume data may not be detected.
- If the USB memory device does not work properly, disconnect and reconnect it.
- How fast a USB memory device is detected differs from device to device.
- The recommended capacity is 1 TB or less for a USB external hard disk and 32 GB or less for USB memory.

- Any device with more than the recommended capacity may not work properly.
- USB storage devices below USB 2.0 are supported as well. But they may not work properly in the movie list.
- Maximum of 999 folders or files can be recognized under one folder.
- If there are a lot of folders or files all within one folder, the device may not be able to access these properly.
- For external USB HDDs, it is recommended that you use devices with a rated voltage of less than 5 V and a rated current of less than 0.5A.

## Browsing files

Access the photo, music, or movie lists and browse files.

- 1 Connect a USB storage device.
- 2 Press **SETTINGS** to access the main menus.
- 3 Press the Navigation buttons to scroll to **USB** and press **OK**.
- 4 Press Navigation buttons to scroll to **PHOTO LIST**, **MUSIC LIST** or **MOVIE LIST** and press **OK**.

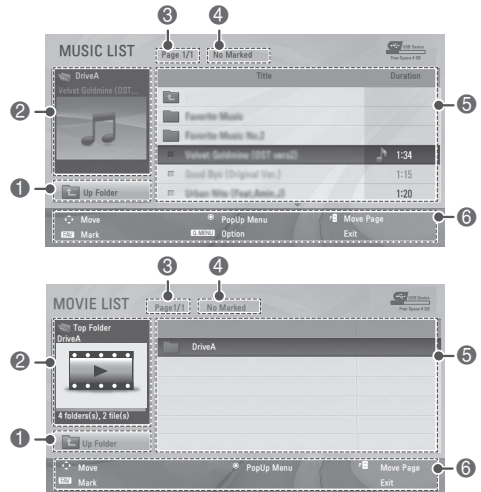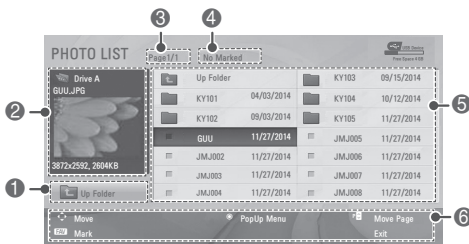

| No. | Description                                                                     |
|-----|---------------------------------------------------------------------------------|
| ①   | Moves to the upper level folder.                                                |
| ②   | Preview: Displays the thumbnail/folder name of the file in the selected folder. |
| ③   | Current page/Total pages                                                        |
| ④   | Total number of marked files                                                    |
| ⑤   | Contents under the folder focused on ①                                          |
| ⑥   | Available buttons on the remote control                                         |


## Supported file format

| Type         | Supported file format                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Photo</b> | <p>JPEG</p> <p>Available size</p> <p>Baseline : 64 pixel (W) x 64 pixel (H)<br/>- 15360 pixel (W) x 8640 pixel (H)</p> <p>Progressive : 64 x 64 to 1024 x 768</p> <ul style="list-style-type: none"> <li>You can play JPEG files only.</li> <li>Non-supported files are displayed in the form of predefined icon.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Music</b> | <p>MP3</p> <p>Bit rate 32kbps to 320kbps</p> <ul style="list-style-type: none"> <li>Sampling rate MPEG1 Layer3 : 32 kHz, 44.1 kHz, 48 kHz</li> <li>Sampling rate MPEG2 Layer3 : 16 kHz, 22.05 kHz, 24 kHz</li> <li>Sampling rate MPEG2.5 Layer3 : 8 kHz, 11.025 kHz, 12 kHz</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Movie</b> | <p>DAT,MPG,MPEG,VOB,AVI,DIVX,M P4,MKV,TS,TRP,TP,ASF,WMV,FLV, RM,RMVB</p> <p><b>Movie</b>(* .mpg/* .mpeg/* .dat/* .ts/* .trp/* .tp/* .vob/* .mp4/* .mov/* .mkv/* .divx/* .avi/* .asf/* .wmv/* .flv/* .avi(motion-jpeg)/* .mp4(motion-jpeg)/* .mkv(motion-jpeg)/* .rm/* .rmvb) supporting file</p> <p><b>Video format</b> : DivX3.11, DivX4.x, DivX5.x, DivX6, Xvid1.00, Xvid1.01, Xvid1.02, Xvid1.03, Xvid1.10 beta-1/ beta-2,<br/>Mpeg-1, Mpeg-2, Mpeg-4, H.264/ AVC, VC1, JPEG, Sorenson H.263</p> <p><b>Audio format</b> : Dolby Digital, Mpeg, MP3, LPCM, ADPCM, WMA, AAC</p> <p><b>Bit rate</b> : within 32 kbps to 320 kbps(MP3)</p> <p><b>External Subtitle format</b> :<br/>* .smi/* .srt/* .sub(MicroDVD,Su bviewer1.0/2.0)/* .ass/* .ssa/* .txt(TMPlayer)/* .psb(PowerDivX)</p> <p><b>Internal Subtitle format</b> : only, XSUB (It is the subtitle format used in DivX6 files)</p> |

## Viewing photos

View image files saved in a USB storage device. The displays on the screen may differ from the model.

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to **USB** and press **OK**.
- 3 Press the Navigation buttons to scroll to **PHOTO LIST** and press **OK**.
- 4 Press the Navigation buttons to scroll to a folder/file you want and press **OK**.
- 5 View photos by using the following menus/ buttons.

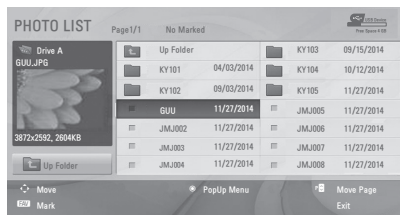

| Button                   | Description                                         |
|--------------------------|-----------------------------------------------------|
| <b>Navigation button</b> | Scrolls through the files.                          |
| <b>OK</b>                | Views the highlighted file or enters the mark mode. |
| <b>^ P v</b>             | Moves to the previous or next page.                 |
| <b>FAV</b>               | Enters the mark mode.                               |
| Menu                     | Description                                         |
| <b>View</b>              | Views the selected photo.                           |
| <b>Mark All</b>          | Selects all files.                                  |
| <b>Close</b>             | Exits the Mark Mode.                                |

### NOTE

- Non-supported files are displayed the preview image by icon only
- Abnormal files are displayed in the form of bitmap

- 6 The following options are available while viewing photos.



| Option            | Description                                                                                                                                                                                                                           |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Slideshow</b>  | Starts or stops a slideshow with selected photos.<br>If there are no selected photos, all photos saved in the current folder display during a slideshow. To set a slideshow speed, select <b>Option</b> .                             |
| <b>BGM</b>        | Turns the background music on or off. To set the background music folder, select <b>Option</b> .                                                                                                                                      |
| <b>↻ (Rotate)</b> | Rotates photos clockwise (90°, 180°, 270°, 360°).<br><div><b>NOTE</b><br/>• The supported photo size is limited. You cannot rotate a photo if the resolution of the rotated width is larger than the supported resolution size.</div> |
| <b>Hide</b>       | Hides the option window. To display the options, press <b>OK</b> ●.                                                                                                                                                                   |

### Q.MENU options for photo list

- 1 Press **Q.MENU**.  
A pop-up window will appear.
- 2 Press the Navigation buttons to scroll to **Set photo view.** and press **OK** ●.
- 3 Press the Navigation buttons to scroll to one of the following options and press **OK** ●.

#### Set photo view.

| Option              | Description                                      |
|---------------------|--------------------------------------------------|
| <b>Slide Speed</b>  | Selects a slideshow speed (Fast, Normal, Slow).  |
| <b>Music Folder</b> | Selects a music folder for the background music. |

#### Set video.


Allows you to change Video presets.  
(See p. 37)

#### Set audio.

Allows you to change Audio presets.  
(See p. 40)

## Listening to music

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to **USB** and press **OK**.
- 3 Press the Navigation buttons to scroll to **MUSIC LIST** and press **OK**.
- 4 Press the Navigation buttons to scroll to a folder/file you want and press **OK**.
- 5 Play music by using the following menus/buttons.

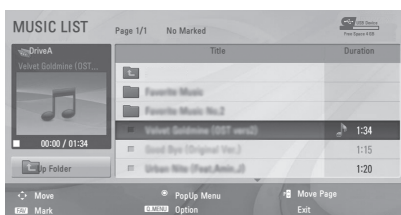

| Button                   | Description                                         |
|--------------------------|-----------------------------------------------------|
| <b>Navigation button</b> | Scrolls through the files.                          |
| <b>OK</b>                | Views the highlighted file or enters the mark mode. |
| <b>^ P v</b>             | Moves to the previous or next page.                 |
| <b>FAV</b>               | Enters the mark mode.                               |
| Menu                     | Description                                         |
| <b>Play</b>              | Plays the selected music file.                      |
| <b>Play with Photo</b>   | Displays photos during playback.                    |
| <b>Mark All</b>          | Selects all files.                                  |
| <b>Close</b>             | Exits the Mark Mode.                                |

- 6 Control playback by using the following buttons.

| Button   | Description                |
|----------|----------------------------|
| <b>■</b> | Stops playback             |
| <b>▶</b> | Plays a music file         |
| <b>⏮</b> | Pauses or resumes playback |

|                 |                                                                                                                                                                           |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>▶▶</b>       | Skips to the next file                                                                                                                                                    |
| <b>◀◀</b>       | Skips to the previous file                                                                                                                                                |
| <b>◀◀ or ▶▶</b> | When playing,<br>When you press the <b>◀◀</b> button, the previous music file will be played.<br>When you press the <b>▶▶</b> button, the next music file will be played. |
| <b>EXIT</b>     | When you press the <b>EXIT</b> button, only the music will be stopped and the player will go to TV viewing.                                                               |
| <b>^ or v</b>   | When using the <b>^</b> or <b>v</b> button during playback a cursor indicating the position can be played.                                                                |

### Q.MENU options for music list

- 1 Press **Q.MENU**.


A pop-up window will appear.

#### Set audio.

Allows you to change Audio presets.  
(See p. 40)


### ! NOTE

- The TV will not play copy protected files.
- If the TV is not in use for some time during playback, the information box as a screensaver will appear to prevent image burn.  
To return to the Music list screen, press **OK** or **BACK**.

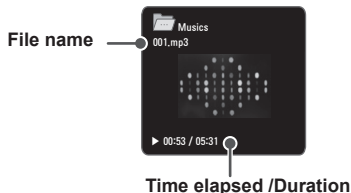

## Viewing movies

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to **USB** and press **OK** .
- 3 Press the Navigation buttons to scroll to **MOVIE LIST** and press **OK** .
- 4 Press the Navigation buttons to scroll to a folder/file you want and press **OK** .
- 5 Play movie by using the following menus/buttons.

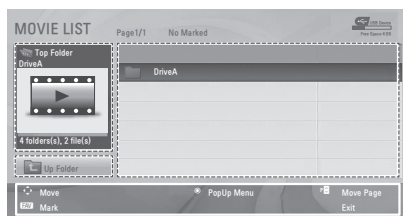

| Button                                                                                      | Description                                                                                                           |
|---------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Navigation button</b>                                                                    | Scrolls through the files.                                                                                            |
| <b>OK</b>  | Views the highlighted file or enters the mark mode.                                                                   |
| <b>^ P v</b>                                                                                | Moves to the previous or next page.                                                                                   |
| <b>FAV</b>                                                                                  | Enters the mark mode.                                                                                                 |
| Menu                                                                                        | Description                                                                                                           |
| <b>Play</b>                                                                                 | Play the selected movie file. Once a movie file finishes playing, the next selected one will be played automatically. |
| <b>Mark All</b>                                                                             | Mark all movie files on the screen.                                                                                   |
| <b>Close</b>                                                                                | Exit the Mark Mode.                                                                                                   |

- 6 Control playback by using the following buttons.



| Button                                                                            | Description                                                                                                                                                         |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Stops the playback                                                                                                                                                  |
|  | Plays a video                                                                                                                                                       |
|  | Pauses or resumes the playback                                                                                                                                      |
|  | Scans backward in a file                                                                                                                                            |
|  | Scans forward in a file                                                                                                                                             |
| <b>Q.MENU</b>                                                                     | Show the <b>Option</b> menu.                                                                                                                                        |
| <b>BACK</b>                                                                       | Hide the menu on the full-sized screen.                                                                                                                             |
| <b>EXIT</b>                                                                       | Return to normal TV viewing.                                                                                                                                        |
| <b>&lt; &gt;</b>                                                                  | Skips to specific points in a file during playback. The time of a specific point will appear on the status bar. In some files, this function may not work properly. |

### Tips for using playing video files

- Some user-created subtitles may not work properly.
- Some special characters are not supported in subtitles.
- HTML tags are not supported in subtitles.
- Subtitles in languages other than the supported languages are not available.
- Changing font and colour in subtitles is not supported.
- Subtitles in languages other than one specified are not supported.
- Video files with subtitle files of 1 MB or larger may not be played properly.
- The screen may suffer temporary interruptions (image stoppage, faster playback, etc.) when the audio language is changed.
- A damaged movie file may not be played correctly, or some player functions may not be usable.
- Movie files produced with some encoders may not be played correctly.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- HD videos with a maximum of 1920x1080@25/30P or 1280x720@50/60P are supported, depending on the frame.
- Videos with resolutions higher than 1920X1080@25/30P or 1280x720@50/60P may not work properly depending on the frame.
- Movie files other than the specified types and formats may not work properly.
- Max bitrate of playable movie file is 20 Mbps. (only, Motion JPEG : 10 Mbps)
- We do not guarantee smooth playback of profiles encoded level 4.1 or higher in H.264/AVC.
- DTS Audio codec is not supported.
- A movie file more than 30 GB in file size is not supported for playback. The file size limit is dependent on the encoding environment.
- A DivX movie file and its subtitle file must be located in the same folder.
- A video file name and its subtitle file name must be identical for it to be displayed.
- Playing a video via a USB connection that doesn't support high speed may not work properly.
- Files encoded with GMC(Global Motion Compensation) and Qpel(Quarterpel Motion Estimation) may not be played.

- Trick Mode does not support other functions than if video files do not have index information.
- Video file names that contain special characters may not be playable.

### Video options

- 1 Press **Q. MENU** to access the **Pop-Up** menus.
- 2 Press the Navigation buttons to scroll to Set Video Play, **Set Video** or **Set Audio** and press **OK** .

When you select the **Set Video Play**,

- 1 Press the Navigation buttons to scroll to show the **Picture Size**, **Audio Language**, **Subtitle**.
- 2 Press the Navigation buttons to scroll to make appropriate adjustments.

| Menu                  | Description                                                                                                        |
|-----------------------|--------------------------------------------------------------------------------------------------------------------|
| <b>Picture Size</b>   | Selects your desired picture format during movie play.                                                             |
| <b>Audio Language</b> | Changes the Language Group of the audio during movie play. Files with a single audio track cannot be selected.     |
| <b>Subtitle</b>       | Turn on/off the subtitle.                                                                                          |
| <b>Language</b>       | Activated for SMI subtitle and can select the language within the subtitle.                                        |
| <b>Code Page</b>      | Can select the font for subtitle. When set to default, same font as general menu will be used.                     |
| <b>Sync</b>           | Adjusts the time synchronisation of the subtitle from -10 secs to +10 secs by steps of 0.5 secs during movie play. |

| Code Page       | Support Language                                          |
|-----------------|-----------------------------------------------------------|
| <b>Latin1</b>   | English, French, Spanish, Portuguese, Malaysia, Indonesia |
| <b>Cyrillic</b> | Russian                                                   |
| <b>Thai</b>     | Thai                                                      |
| <b>Hebrew</b>   | Hebrew                                                    |
| <b>Arabic</b>   | Arab, Parsi, Krudish                                      |
| <b>Vietnam</b>  | Vietnamese language                                       |

### ! NOTE

- Only 10,000 of sync blocks can be supported within the subtitle file.
- When playing a video, you can adjust the Picture Size by pressing **Q.MENU** or accessing Aspect Ratio in the **PICTURE** menu.

When you select the **Set video**.

(See p. 37)

- 1 Press the Navigation buttons to scroll to make appropriate adjustments.

When you select the **Set audio**.

(See p. 40)


- 1 Press the Navigation buttons to scroll to show the **Sound Mode, Auto Volume, Balance**.
- 2 Press the Navigation buttons to scroll to make appropriate adjustments.

## DivX® VOD Guide

### DivX® VOD Registration

In order to play purchased or rented DivX® VOD contents, you should register your device with 10 digit DivX registration code from your device at [www.divx.com/vod](http://www.divx.com/vod).

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to **USB** and press **OK**.
- 3 Press the Navigation buttons to scroll to **DivX(R) VOD** and press **OK**.
- 4 Press the Navigation buttons to scroll to **Registration** and press **OK**.
- 5 View the registration code of your TV.

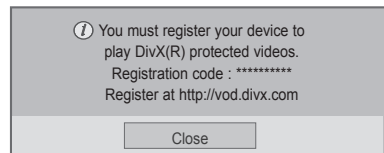

- 6 When you are finished, press **EXIT**. When you return to the previous menu, press **BACK**.

### ! NOTE

- Movie files are supported as follows
- **Resolution** : under 1920 x 1080 (WxH) pixels
- **Frame rate** : under 30 frames/sec
- **Video Codec** : MPEG 1, MPEG 2, MPEG 4, H.264/AVC, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6, Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1, Xvid 1.10-beta2, JPEG, VC1, Sorenson H.263/H.264.


**DivX® VOD Deregistration**

You should deregister your device with 8 digit DivX deregistration code from your device at [www.divx.com/vod](http://www.divx.com/vod).

**! NOTE**

- Once the deregistration is executed, you must register your device again to see DivX® VOD contents.

- Press **SETTINGS** to access the main menus.
- Press the Navigation buttons to scroll to **USB** and press **OK** .
- Press the Navigation buttons to scroll to **DivX(R) VOD** and press **OK** .
- Press the Navigation buttons to scroll to **Deregistration** and press **OK** .
- Press the Navigation buttons to select **Yes** to confirm.

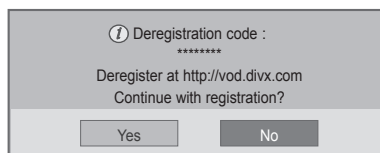

- When you are finished, press **EXIT**. When you return to the previous menu, press **BACK**.

**CUSTOMIZING TV SETTING**

- Image shown may differ from your TV.

**Accessing main menus**

- Press **SETTINGS** to access the main menus.
- Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- Press Navigation buttons to scroll to the setting or option you want and press **OK** .
- When you are finished, press **EXIT**.

| Menu                                                                                |                | Description                                                      |
|-------------------------------------------------------------------------------------|----------------|------------------------------------------------------------------|
|    | <b>SETUP</b>   | Sets up and edit programmes.                                     |
|    | <b>PICTURE</b> | Adjusts the image size, quality, or effect.                      |
|    | <b>AUDIO</b>   | Adjusts the sound quality, effect, or volume level.              |
|    | <b>TIME</b>    | Sets the time, date, or timer feature.                           |
|    | <b>OPTION</b>  | Customizes the general settings.                                 |
|  | <b>LOCK</b>    | Locks or unlocks programmes.                                     |
|  | <b>INPUT</b>   | Views the input sources with their labels.                       |
|  | <b>USB</b>     | Displays photo and play music, movie content stored on your USB. |

## Customizing Settings

### SETUP Settings

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **SETUP**.
- 2 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- 3 When you return to the previous menu, press **BACK**.

- Image shown may differ from your TV.




The available programme settings are described in the following:

| Setting               | Description                                                                    |
|-----------------------|--------------------------------------------------------------------------------|
| <b>Auto Tuning</b>    | Tunes and stores all available programmes through antennas inputs. (See p. 23) |
| <b>Manual Tuning</b>  | Tunes and stores the programmes you want manually. (See p. 24)                 |
| <b>Programme Edit</b> | Edits programmes. (See p. 25)                                                  |

### PICTURE Settings

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **PICTURE**.
  - 2 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
  - 3 When you return to the previous menu, press **BACK**.
- Image shown may differ from your TV.

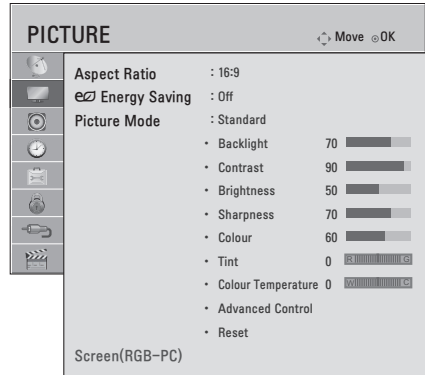

The available picture settings are described in the following.

| Setting                                                                                                                                                                                                                                                                         | Description                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
| <b>Aspect Ratio</b>                                                                                                                                                                                                                                                             | Changes the image size to view images at its optimal size.        |
| <b>Energy Saving</b>                                                                                                                                                                                                                                                            | Reduces the power consumption by adjusting the screen brightness. |
| <b>Option</b>                                                                                                                                                                                                                                                                   |                                                                   |
| <b>Off</b>                                                                                                                                                                                                                                                                      | The <b>Energy Saving</b> is off                                   |
| <b>Minimum/ Medium/ Maximum</b>                                                                                                                                                                                                                                                 | Selects the brightness level.                                     |
| <b>Screen off</b>                                                                                                                                                                                                                                                               | The screen turns off in 3 seconds.                                |
| <div> <b>NOTE</b> <ul style="list-style-type: none"> <li>• When you select <b>Screen Off</b>, the screen will be turned off in 3 seconds and <b>Screen Off</b> will start.</li> <li>• If you adjust "Energy Saving Maximum", Backlight feature will not work.</li> </ul> </div> |                                                                   |

| Setting             | Description                                                                                                                                                          |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Picture Mode</b> | Selects one of the preset image or customizes options in each mode for the best TV screen performance. You are also able to customize advanced options of each mode. |
| <b>Mode</b>         |                                                                                                                                                                      |
| <b>Vivid</b>        | Adjusts the video image for the retail environment by enhancing the contrast, brightness, colour, and sharpness.                                                     |
| <b>Standard</b>     | Adjusts the image for the normal environment.                                                                                                                        |
| <b>Cinema</b>       | Optimizes the video images for a cinematic look to enjoy movies as if you are in a movie theatre.                                                                    |
| <b>Sport</b>        | Optimizes the video image for high and dynamic actions by emphasizing primary colours such as white, grass, or sky blue.                                             |
| <b>Game</b>         | Optimizes the video image for a fast gaming screen such as PCs or games.                                                                                             |

|                            |                                                                                                                                                                   |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Screen (RGB-PC)</b>     | Customizes the PC display options in RGB mode.                                                                                                                    |
| <b>Option</b>              |                                                                                                                                                                   |
| <b>Resolution</b>          | Sets the desired resolution. Options may only be selected when the PC resolution is set to 1024 x 768@60/1280 x 768@60/1360 x 768@60 /1366 x 768@60 (default).    |
| <b>Auto config.</b>        | Sets to adjust the screen position, clock, and phase automatically. The displayed image may be unstable for a few seconds while the configuration is in progress. |
| <b>Position/Size/Phase</b> | Adjusts the options when the picture is not clear, especially when characters are shaky, after the auto configuration.                                            |
| <b>Reset</b>               | Restores the options to the default setting.                                                                                                                      |

## Basic image options

| Setting                   | Description                                                                                                                                                                                                                |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Backlight</b>          | Adjusts the brightness of the screen by controlling the LCD backlight. If you decrease the brightness level, the screen becomes darker and the power consumption will be reduced without any video signal loss.            |
| <b>Contrast</b>           | Increases or decreases the gradient of the video signal. You may use <b>Contrast</b> when the bright part of the picture is saturated.                                                                                     |
| <b>Brightness</b>         | Adjusts the base level of the signal in the picture.                                                                                                                                                                       |
| <b>Sharpness</b>          | Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.                                                                                    |
| <b>Colour</b>             | Adjusts intensity of all colours.                                                                                                                                                                                          |
| <b>Tint</b>               | Adjusts the balance between red and green levels.                                                                                                                                                                          |
| <b>Colour Temperature</b> | Choose one of three automatic colour adjustments. Set to warm to enhance hotter colours such as red, or set to cool to see less intense colours with more blue. You can control red, green, blue to adjust colour details. |
| <b>Advanced Control</b>   | Customizes the advanced options.                                                                                                                                                                                           |
| <b>Reset</b>              | Restores the options of each mode to the factory default.                                                                                                                                                                  |

## Advanced image options

(Depending on model)

| Setting                 | Description                                                                                                                                                                                                                                                  |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dynamic Contrast</b> | Adjusts the contrast to keep it at the best level according to the brightness of the screen. The picture is improved by making bright parts brighter and dark parts darker.                                                                                  |
| <b>Dynamic Colour</b>   | Adjusts screen colours so that they look livelier, richer and clearer. This feature enhances hue, saturation and luminance so that red, blue and green white look more vivid.                                                                                |
| <b>Noise Reduction</b>  | Reduces screen noise without compromising video quality.                                                                                                                                                                                                     |
| <b>Gamma</b>            | You can adjust brightness of dark area and middle gray level area of the picture.<br>» Low: Make the dark and middle gray level areas brighter.<br>» Medium: Express the original picture level.<br>» High: Make the dark and middle gray level area darker. |
| <b>Black Level</b>      | Sets black level of the screen to proper level. This function is available in the following modes: RF, AV or HDMI.<br>» Low: The reflection of the screen gets darker.<br>» High: The reflection of the screen gets brighter.                                |
| <b>Motion Eye Care</b>  | Adjusts screen brightness to prevent eye glare.                                                                                                                                                                                                              |
| <b>Film Mode</b>        | Makes video clips recorded in film look more natural.<br>This feature operates only in 480i / 576i / 1080i / 1080p(24Hz) Resolution.                                                                                                                         |


| Setting              | Description                                                                                                                                                                         |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Colour Gamut</b>  | <b>Advanced Control</b><br>Maximizes the utilization of colour to increase colour quality.<br>Standard: Displays standard set of colours.<br>Wide: Increase number of colours used. |
| <b>Edge Enhancer</b> | Shows clearer and distinctive yet natural edges of the video.                                                                                                                       |

### ! NOTE

- Depending on input signal or other picture settings, the range of detailed items for adjustment may differ.

## AUDIO Settings

- Press **SETTINGS** and the Navigation buttons to scroll to **AUDIO**.
  - Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
  - When you return to the previous menu, press **BACK**.
- Image shown may differ from your TV.

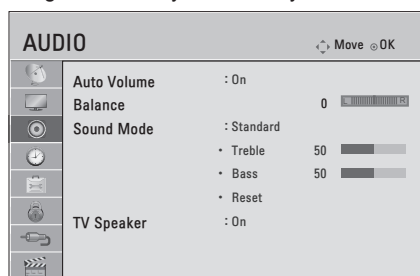

The available audio settings are described in the following.

| Setting            | Description                                                                                                                                                                                               |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Auto Volume</b> | Activates the Auto Volume feature to keep the volume level consistent whenever you change programmes. The volume level may not be consistent due to different signal conditions of broadcasting stations. |
| <b>Balance</b>     | Adjust balance between the left and right speakers according to your room environment.                                                                                                                    |

| Setting           | Description                                                                                                                         |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Sound Mode</b> | Selects one of the preset sound modes or customizes options in each mode.                                                           |
| <b>Mode</b>       |                                                                                                                                     |
| <b>Standard</b>   | Select when you want standard-quality sound.                                                                                        |
| <b>Music</b>      | Select when you listen to music.                                                                                                    |
| <b>Cinema</b>     | Select when you watch movies.                                                                                                       |
| <b>Sport</b>      | Select when you watch sports events.                                                                                                |
| <b>Game</b>       | Select when you play games.                                                                                                         |
| <b>Option</b>     |                                                                                                                                     |
| <b>Treble</b>     | Controls the dominant sounds in the output. When you turn up the treble, it will increase the output to the higher frequency range. |
| <b>Bass</b>       | Controls the softer sounds in the output. When you turn up the bass, it will increase the output to the lower frequency range.      |
| <b>Reset</b>      | Resets the sound mode to the default setting.                                                                                       |
| <b>TV Speaker</b> | Turns off the internal speaker of the TV when using an external Hi-Fi system.                                                       |

## Stereo/Dual Reception

This feature may not be applied based on country broadcasting circumstance.

When a programme is selected, the sound information for the station appears with the programme number and station name.

Press I/II button to select the **Multi Audio** menu.

| Broadcast     | On Screen Display              |
|---------------|--------------------------------|
| <b>Mono</b>   | MONO                           |
| <b>Stereo</b> | STEREO                         |
| <b>Dual</b>   | DUAL I , DUAL II , DUAL I + II |
| <b>NICAM</b>  | NICAM                          |

### • Mono sound selection

If the stereo signal is weak in stereo reception, you can switch to mono. In mono reception, the clarity of sound is improved.

### • Language selection for dual language broadcast

If a programme can be received in two languages (dual language), you can switch to DUAL I, DUAL II or DUAL I+II.

**DUAL I** Sends the primary broadcast language to the loudspeakers.

**DUAL II** Sends the secondary broadcast language to the loudspeakers.

**DUAL I+II** Sends a separate language to each loudspeaker.

## Nicam Reception

If the TV is equipped with a receiver for NICAM reception, high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of broadcast received.

- 1 When **NICAM** mono is received, you can select **NICAM MONO** or **FM MONO**.
- 2 When **NICAM** stereo is received, you can select **NICAM STEREO** or **FM MONO**.  
If the stereo signal is weak, switch to **FM MONO**.
- 3 When **NICAM** dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **FM MONO**.

## Speaker Sound Output Selection

In AV, RGB-PC, HDMI mode, you can select output sound for the left and right loudspeakers. Select the sound output.

**L+R:** Audio signal from audio L input is sent to the left loudspeaker and audio signal from audio R input is sent to the right loudspeaker.

**L+L:** Audio signal from audio L input is sent to left and right loudspeakers.

**R+R:** Audio signal from audio R input is sent to left and right loudspeakers.

## TIME Settings

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **TIME**.
- 2 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- 3 When you return to the previous menu, press **BACK**.

- Image shown may differ from your TV.




The available time settings are described in the following.

| Setting                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Clock</b>                 | Sets the time.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Off Time/<br/>On Time</b> | <p>Sets the time to turn on or off the TV automatically. To use this function, you should set the current time and date in advance.</p> <div> <p><b>NOTE</b></p> <ul style="list-style-type: none"> <li>• If you do not press any button within 2 hours after the TV turns on by the On Time feature, the TV enters the Standby mode automatically.</li> <li>• If you set both Off time and On time features to the same time, the Off time feature overrides the On time feature.</li> </ul> </div> |
| <b>Sleep Timer</b>           | Sets the length of time until the TV to turns off. When you turn the TV off and turn it on again, the Sleep timer feature will be set to off.                                                                                                                                                                                                                                                                                                                                                        |

## OPTION Settings

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **OPTION**.
- 2 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- 3 When you return to the previous menu, press **BACK**.

- Image shown may differ from your TV.

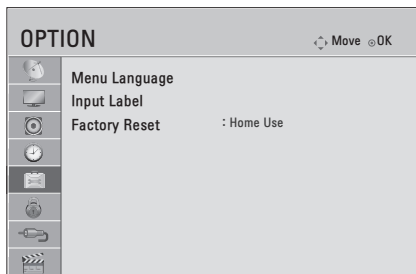


The available general settings are described in the following.

| Setting              | Description                                                                                                                                                                          |                 |                                      |                   |                                        |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|--------------------------------------|-------------------|----------------------------------------|
| <b>Menu Language</b> | Selects a desired language.                                                                                                                                                          |                 |                                      |                   |                                        |
| <b>Input Label</b>   | Indicates which device is connected to which input port.                                                                                                                             |                 |                                      |                   |                                        |
| <b>Factory Reset</b> | Customizes the TV settings to suit your preference. The initial setup screen will appear when you turn on the TV for the first time.                                                 |                 |                                      |                   |                                        |
|                      | <table> <tr> <td><b>Home Use</b></td><td>Selects it for the Home environment.</td></tr> <tr> <td><b>Store Demo</b></td><td>Selects it for the retail environment.</td></tr> </table> | <b>Home Use</b> | Selects it for the Home environment. | <b>Store Demo</b> | Selects it for the retail environment. |
| <b>Home Use</b>      | Selects it for the Home environment.                                                                                                                                                 |                 |                                      |                   |                                        |
| <b>Store Demo</b>    | Selects it for the retail environment.                                                                                                                                               |                 |                                      |                   |                                        |

## LOCK Settings

- 1 Press **SETTINGS** and the Navigation buttons to scroll to **LOCK**.
- 2 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 3 When you return to the previous menu, press  **BACK**.

- Image shown may differ from your TV.

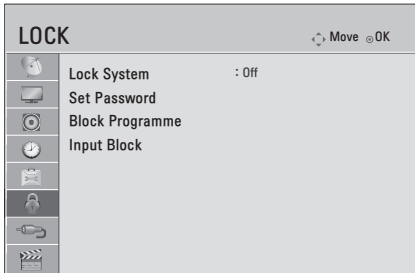

The available lock settings are described in the following.

| Setting                | Description                                                                                                                                                                                                                               |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Lock System</b>     | Activates or deactivates the lock system.                                                                                                                                                                                                 |
| <b>Set Password</b>    | Changes the 4-digit password. The default PIN is "0 0 0 0".                                                                                                                                                                               |
| <b>Block Programme</b> | Blocks the programmes that contain inappropriate contents for children by pressing the Blue button. The Lock icon appears in front of the blocked programmes. The programmes can be selected but the screen blank and the audio is muted. |
| <b>Input Block</b>     | Blocks the input sources.                                                                                                                                                                                                                 |

## TELETEXT

- This feature is not available in all countries.

Teletext is a free service broadcast by most TV stations which gives up-to-the minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. FASTEXT are more modern methods allowing quick and easy selection of teletext information.

### Switch On/Off

Press the **TEXT** button to switch to teletext. The initial page or last page viewed appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed. Press the **TEXT** button to switch off teletext. The previous mode reappears.

### Simple Text

#### Page selection

- 1 Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
- 2 The **^Pv** button can be used to select the preceding or following page.

### Programming a colour button in LIST mode

If the TV is in SIMPLE text or FASTEXT mode, press the **LIST** button to switch to **LIST** mode. Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.

- 1 Press the **LIST** key.
- 2 Press a coloured button.
- 3 Using the Number buttons, select the page you wish to programme.
- 4 The selected page is stored as the selected page number, blinking once to confirm this. From now on, you can select this page with the same coloured button.
- 5 The three other coloured buttons are programmed in this way.

### Fastext

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

#### Page selection

- 1 Press the **INDEX** button to select the index page.
- 2 You can select the pages which are colour coded along the bottom line with corresponding coloured buttons.
- 3 AS with **SIMPLE** teletext mode, you can select a page by entering its three digit page number with the Number buttons in **FASTEXT** mode.
- 4 The **^Pv** button can be used to select the preceding or following page.

## Special Teletext Function

### Index

Select the each index page.

### Time

When viewing a TV programme, select this menu to display the time at the top right hand corner of the screen.

In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the Red/Green, < > or **NUMBER** buttons.

### Hold

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages.

The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this menu is selected the stop symbol is displayed at the top lefthand

corner of the screen and the automatic page change is inactive.

### Reveal

Select this menu to display concealed information, such as solutions to riddles or puzzles.

### Update

Displays the TV picture on the screen while waiting for a new teletext page. The display will appear at the top left hand corner of the screen. When the updated page is available then display will change to the page number. Select this menu again to view the updated teletext page.

## MAINTENANCE

### Cleaning Your TV

Clean your TV regularly to keep the best performance and to extend the product lifespan.



#### CAUTION

- Make sure to turn the power off and disconnect the power cord and all other cables first.
- When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

### Screen, frame, Cabinet and stand

- To remove dust, wipe the surface with a dry and soft cloth.
- To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a clean and dry cloth.






#### CAUTION

- Do not push, rub, or hit the surface with your fingernail or a sharp object, as this may result in scratches on the screen and image distortions.
- Do not use any chemicals, such as waxes, benzene, alcohol, thinners, insecticides, air fresheners, lubricants, as these may damage the screen's finish and cause discolorations.
- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.
- Do not use any chemicals as this may deteriorate the surface.

### Power cord

Remove the accumulated dust or dirt on the power cord regularly.

### Preventing “Image burn” or “Burn-in” on your TV screen

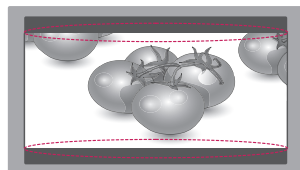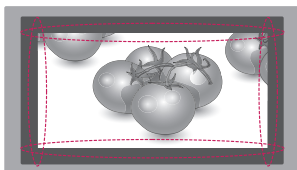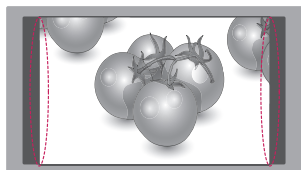

- If a fixed image displays on the TV screen for a long period of time, it will be imprinted and become a permanent disfigurement on the screen. This is “image burn” or “burn-in” and not covered by the warranty.
- If the aspect ratio of the TV is set to 4:3 for a long period of time, image burn may occur on the letterboxed area of the screen.
- Avoid displaying a fixed image on the TV screen for a long period of time (2 or more hours for LCD) to prevent image burn.

# TROUBLESHOOTING

## General

| Problem                                        | Solution                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot control the TV with the remote control. | <ul style="list-style-type: none"> <li>• Check the remote control sensor on the product and try again.</li> <li>• Check if there is any obstacle between the product and the remote control.</li> <li>• Check if the batteries are still working and properly installed (⊕ to ⊕, ⊖ to ⊖).</li> </ul>                                                               |
| No image display and no sound is produced.     | <ul style="list-style-type: none"> <li>• Check if the product is turned on.</li> <li>• Check if the power cord is connected to a wall outlet.</li> <li>• Check if there is a problem in the wall outlet by connecting other products.</li> </ul>                                                                                                                   |
| Image appears slowly when the TV turns on.     | <ul style="list-style-type: none"> <li>• The image is muted during the product startup process. This is normal. If the image does not appear in a few minutes, unplug the TV for 30 seconds and try again. If the image still does not appear, contact the authorized service center in your local area.</li> </ul>                                                |
| Cannot connect external devices.               | <ul style="list-style-type: none"> <li>• Refer to the "Other Connections" and connect an external device.</li> </ul>                                                                                                                                                                                                                                               |
| The TV turns off suddenly.                     | <ul style="list-style-type: none"> <li>• Check the power control settings. The power supply may be interrupted.</li> <li>• Check if the <b>Sleep Timer</b> or <b>Off Time</b> feature is activated in the <b>TIME</b> settings.</li> <li>• If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.</li> </ul> |

## Audio

| Problem                                           | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound is produced while images are displaying. | <ul style="list-style-type: none"> <li>• Press  + or - button.</li> <li>• Check if the sound is muted by pressing <b>MUTE</b>.</li> <li>• Scroll to other programme. There may a problem with the broadcast.</li> <li>• Check if the audio cables are connected properly.</li> <li>• Check if the TV Speaker feature is activated in the menu option.</li> </ul> |
| No output from one of the speakers.               | <ul style="list-style-type: none"> <li>• Adjust Balance in the menu option.</li> </ul>                                                                                                                                                                                                                                                                                                                                                              |
| Unusual sound from inside the TV is produced.     | <ul style="list-style-type: none"> <li>• A change in ambient humidity or temperature may result in an unusual noise when the product turns on or off. There is no problem with your product.</li> </ul>                                                                                                                                                                                                                                             |

## Video

| Problem                                                            | Solution                                                                                                                                                                                                                                                                                                          |
|--------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| An image displays in black and white or the color quality is poor. | <ul style="list-style-type: none"> <li>Adjust the color setting in the menu option.</li> <li>Keep a sufficient distance between this product and other electronic products.</li> <li>Scroll to other programme. There may a problem with the broadcast.</li> </ul>                                                |
| Horizontal or vertical bars appears or images blur.                | <ul style="list-style-type: none"> <li>Check if there are local interferences such as an electrical appliance or power tool.</li> </ul>                                                                                                                                                                           |
| Lines or streaks appear on images.                                 | <ul style="list-style-type: none"> <li>Check the antenna or aim the antenna to the proper direction.</li> </ul>                                                                                                                                                                                                   |
| Afterimages (ghosts) appear when the product turns off.            | <ul style="list-style-type: none"> <li>Pixels may have been damaged from a fixed image displayed for a long time (image burn). Use a screen saver to prevent the pixel damage on the screen.</li> </ul>                                                                                                           |
| The power is on but the screen appears extremely dark.             | <ul style="list-style-type: none"> <li>Adjust the brightness and contrast in the menu option.</li> </ul>                                                                                                                                                                                                          |
| "No Signal" appears on the screen.                                 | <ul style="list-style-type: none"> <li>Check if the signal cable is connected between the TV and products properly.</li> <li>Check the selected input source by pressing <b>INPUT</b>.</li> </ul>                                                                                                                 |
| Black spots appear on the screen.                                  | <ul style="list-style-type: none"> <li>Several pixels in red, green, white, or black may appear on the screen that can attribute to the characteristics of the panel.</li> <li>This is normal.</li> </ul>                                                                                                         |
| The display offset is wrong.                                       | <ul style="list-style-type: none"> <li>Adjust the position setting in the Picture menu.</li> <li>Check if the video card resolution and frequency are supported by the product. If the frequency is out of range, set to the recommended resolution using the display settings on the external device.</li> </ul> |
| Thin lines appear in the background of the screen.                 | <ul style="list-style-type: none"> <li>Check the video cable connections.</li> </ul>                                                                                                                                                                                                                              |
| The reception on some programme is poor.                           | <ul style="list-style-type: none"> <li>Scroll to other programme. There may a problem with the broadcast.</li> <li>The station signal may be weak. Aim the antenna to the proper direction.</li> <li>Check if there is local interferences such as an electrical appliance or power tool.</li> </ul>              |

## SPECIFICATIONS

Product specifications shown above may be changed without prior notice due to upgrade of product functions.

| MODELS                    |                    | 22MT45A                                                                                                                                                                                                                                            | 24MT45A                                                                               |
|---------------------------|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Dimensions<br>(W x H x D) | With stand (mm)    | 507.6 x 355.9 x 140.6                                                                                                                                                                                                                              | 556.0 x 384.3 x 140.6                                                                 |
|                           | Without stand (mm) | 507.6 x 314.7 x 52.7                                                                                                                                                                                                                               | 556.0 x 343.1 x 52.7                                                                  |
| Weight                    | With stand (kg)    | 2.7                                                                                                                                                                                                                                                | 3.5                                                                                   |
|                           | Without stand (kg) | 2.5                                                                                                                                                                                                                                                | 3.3                                                                                   |
| Power requirement         |                    | 19 V $\overline{\text{---}}$ 1.6 A                                                                                                                                                                                                                 | 19 V $\overline{\text{---}}$ 1.6 A                                                    |
| AC/DC Adapter             |                    | Manufacturer : Lien Chang<br>Model : LCAP16A-E, LCAP16A-A, LCAP25A, LCAP25B<br>Manufacturer : Honor<br>Model : ADS-40FSG-19 19032GPG, ADS-40FSG-19 19032GPCU, ADS-40SG-19-2 19032G<br>Manufacturer : APD<br>Model : WA-32C19FI, DA-32F19, DA-32B19 |                                                                                       |
| MODELS                    |                    | 28MT45A                                                                                                                                                                                                                                            | 29MT45A                                                                               |
| Dimensions<br>(W x H x D) | With stand (mm)    | 641.5 x 445.2 x 175.0                                                                                                                                                                                                                              | 668.6 x 472.4 x 223.5                                                                 |
|                           | Without stand (mm) | 641.5 x 396.1 x 57.5                                                                                                                                                                                                                               | 668.6 x 410.5 x 65.8                                                                  |
| Weight                    | With stand (kg)    | 4.6                                                                                                                                                                                                                                                | 5.9                                                                                   |
|                           | Without stand (kg) | 4.4                                                                                                                                                                                                                                                | 5.3                                                                                   |
| Power requirement         |                    | 19 V $\overline{\text{---}}$ 1.6 A                                                                                                                                                                                                                 | 19 V $\overline{\text{---}}$ 2.4 A                                                    |
| AC/DC Adapter             |                    | Manufacturer : Lien Chang<br>Model : LCAP16B-E, LCAP16B-A, LCAP25B<br>Manufacturer : LG Innotek<br>Model : PSAB-L205B, PSAB-L205C, PSAB-L204B<br>Manufacturer : APD<br>Model : WA-40D19FI, DA-40I19, DA-40E19                                      | Manufacturer : Lien Chang<br>Model : LCAP35<br>Manufacturer : APD<br>Model : DA-48F19 |

| MODELS                    |                    | 22MT44A                                                                                                                                                                                                       | 24MT44A                            |
|---------------------------|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|
| Dimensions<br>(W x H x D) | With stand (mm)    | 508.5 x 388.2 x 144.9                                                                                                                                                                                         | 558.6 x 415.1 x 144.9              |
|                           | Without stand (mm) | 508.5 x 352.6 x 55.9                                                                                                                                                                                          | 558.6 x 379.4 x 55.9               |
| Weight                    | With stand (kg)    | 3.0                                                                                                                                                                                                           | 3.8                                |
|                           | Without stand (kg) | 2.8                                                                                                                                                                                                           | 3.6                                |
| Power requirement         |                    | 19 V $\overline{\text{---}}$ 1.6 A                                                                                                                                                                            | 19 V $\overline{\text{---}}$ 1.6 A |
| AC/DC Adapter             |                    | Manufacturer : Lien Chang<br>Model : LCAP16B-E, LCAP16B-A, LCAP25B<br>Manufacturer : LG Innotek<br>Model : PSAB-L205B, PSAB-L205C, PSAB-L204B<br>Manufacturer : APD<br>Model : WA-40D19FI, DA-40I19, DA-40E19 |                                    |

|                          |                       |                |
|--------------------------|-----------------------|----------------|
| Environment<br>condition | Operating Temperature | 10°C to 35 °C  |
|                          | Operating Humidity    | 20 % to 80 %   |
|                          | Storage Temperature   | -10°C to 60 °C |
|                          | Storage Humidity      | 5 % to 90 %    |

|                                          |                                           |
|------------------------------------------|-------------------------------------------|
|                                          | Analogue TV (Depending on Country)        |
| Television System                        | PAL/SECAM-B/G/D/K, PAL-I, NTSC-M, PAL B/B |
| Programme Coverage                       | VHF, UHF, CATV                            |
| Maximum number of<br>storable programmes | 200                                       |
| External Antenna Impedance               | 75 $\Omega$                               |

**RGB (PC) supported mode**

(Only 22MT44/45\*)

| Resolution  | Horizontal Frequency (kHz) | Vertical Frequency (Hz) |
|-------------|----------------------------|-------------------------|
| 640 x 480   | 31.469                     | 59.940                  |
| 800 x 600   | 37.879                     | 60.317                  |
| 1024 x 768  | 48.363                     | 60                      |
| 1152 x 864  | 54.340                     | 60.050                  |
| 1280 x 1024 | 63.981                     | 60.020                  |
| 1600 x 900  | 55.540                     | 60                      |
| 1680 x 1050 | 64.674                     | 59.883                  |
|             | 65.290                     | 59.954                  |
| 1920 x 1080 | 67.500                     | 60                      |

**NOTE**

- The optimal display resolution is 1920 X 1080 @ 60 Hz.
- The optimal timing in each mode is vertical frequency 60 Hz.

**HDMI (DTV) supported mode**

| Resolution  | Horizontal Frequency (kHz) | Vertical Frequency (Hz) |
|-------------|----------------------------|-------------------------|
| 720 x 480   | 31.469                     | 59.940                  |
|             | 31.500                     | 60                      |
| 720 x 576   | 31.250                     | 50                      |
| 1280 x 720  | 37.500                     | 50                      |
|             | 44.960                     | 59.940                  |
|             | 45                         | 60                      |
| 1920 x 1080 | 33.720                     | 59.940                  |
|             | 33.750                     | 60                      |
|             | 28.125                     | 50                      |
|             | 26.970                     | 23.970                  |
|             | 27                         | 24                      |
|             | 33.716                     | 29.976                  |
|             | 33.750                     | 30                      |
|             | 56.250                     | 50                      |
|             | 67.432                     | 59.940                  |
|             | 67.500                     | 60                      |

(Only 24MT44/45\*, 28MT45\*, 29MT45\*)

| Resolution | Horizontal Frequency (kHz) | Vertical Frequency (Hz) |
|------------|----------------------------|-------------------------|
| 640 x 480  | 31.469                     | 59.940                  |
| 800 x 600  | 37.879                     | 60.317                  |
| 1024 x 768 | 48.363                     | 60                      |
| 1280 x 720 | 47.770                     | 59.850                  |
| 1152 x 864 | 54.340                     | 60.050                  |
| 1366 x 768 | 47.710                     | 59.790                  |

**NOTE**

- The optimal display resolution is 1366 X 768 @ 60 Hz.
- The optimal timing in each mode is vertical frequency 60 Hz



Make sure to read the Safety Precautions before using the product.

Keep the Owner's Manual (CD) in an accessible place for future reference.

The model and serial number of the TV is located on the back and one side of the TV. Record it below should you ever need service.

**MODEL** \_\_\_\_\_

**SERIAL** \_\_\_\_\_