

OWNER'S MANUAL

COMMERCIAL DRYER

Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the dryer is installed correctly and safely. Leave these instructions near the dryer after installation for future reference.

MODEL

RN1329AD1S / RV1329AD1S	RN1329AN4S / RV1329AN4S	RN1329A4S / RV1329A4S
RN1329AD5S / RV1329AD5S	RN1329AN7S / RV1329AN7S	RN1329A7S / RV1329A7S
RN1329AD6S / RV1329AD6S	RN1329AN1S / RV1329AN1S	RN1329A1S / RV1329A1S



P/NO. : MFL62512875

www.lg.com

PRODUCT FEATURES

OUTSTANDING PERFORMANCE

The dryer features the largest capacity, quick drying times, quiet operation, and an energy-saving system.

ARTISTIC DESIGN

Modern front panel look and big clear glass door make your dryer look stylish

EASY OF USE

An entire selection of user-friendly functions makes operating the dryer easy.

ULTRA CAPACITY

The larger drum enables better tumbling and less tangling and wrinkling of the laundry.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

⚠️ WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

Your Safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word DANGER, WARNING, or CAUTION.

These words mean:

⚠️ DANGER

You will be killed or seriously injured if you don't immediately follow instructions.

⚠️ WARNING

You can be killed or seriously injured if you don't follow instructions.

⚠️ CAUTION

You may be slightly injured or cause damage to the product if you do not follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

BASIC SAFETY PRECAUTIONS

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following:

- Read all instructions before using the dryer.
- Before use, the dryer must be properly installed as described in this manual.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not reach into the dryer if the drum or any other part is moving.
- Do not repair or replace any part of the dryer or attempt any servicing unless specifically recommended in this Owner's Manual or in published user-repair instructions that you understand and have the skills to carry out.
- Do not tamper with controls.
- Before the dryer is removed from service or discarded, remove the door to the drying compartment.
- Do not allow children to play on or in the dryer. Close supervision of children is necessary when the dryer is used near children.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the dryer and exhaust vent should be cleaned periodically by qualified service personnel.
- Do not install or store the dryer where it will be exposed to the weather.
- Always check the inside of the dryer for foreign objects.
- Clean lint screen before or after each load.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- For appliances with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate the dryer without lint filter in place. Never operate the dryer with a wet lint filter.

WARNING


Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

- The lint trap has to be cleaned frequently, if applicable.
- Lint must not be allowed to accumulate around the tumble dryer.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Electric Dryer Max capacity is 10kg
- Gas Dryer Max capacity is 10,2kg
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised not to play with the appliance.
- the tumble dryer is not to be used if industrial chemicals have been used for cleaning

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

Disposal of your old appliance

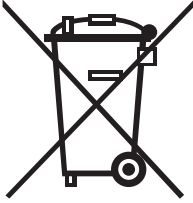

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

■ WHAT IS NOT COVERED.

Service trips to your home to instruct you on the product.

If the product is connected to any voltage other than that shown on the rating plate.

If the fault is caused by accidents, neglects, misuses of Acts of God.

If the fault is caused by reasons except for normal domestic use or use in accordance with the owner's manual.

If the fault is caused by pests, for example, rats or cockroaches etc..

Noise or vibration that is considered normal, for example, water drain sound, spin sound or warning beeps.

Correcting the installation for example, leveling the product, adjustment of drain.

Normal maintenance recommended by the owner's manual.

Removal of foreign objects/substances from the machine including the pump and inlet hose filter, for example, grit, nails, bra wires and buttons etc..

Replace fuses in or correct wiring or correct house plumbing.

Correction of unauthorized repairs.

Incidental or consequential damage to personal property caused by possible defects with this appliance.

If this product is used for commercial purposes, it is not warranted.

(Example: Public places such as public bathroom, lodging house, training center, dormitory)

If the product is installed outside the normal service area, any cost of transportation involved in the repair of the products, or the replacement of a defective part, shall be borne by the owner.

READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, Injury to persons, or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance or any other appliances.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

WHAT TO DO IF YOU SMELL GAS: (APPLICABLE FOR GAS MODELS)

1. Do not try to light a match or cigarette, or turn on any gas or electrical appliance.
2. Do not touch any electrical switches. Do not use any phone in your building.
3. Clear the room, building, or area of all occupants.
4. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions carefully.
5. If you cannot reach your gas supplier, call the fire department.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance must be equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Do not use an adapter or extension cord. Do not remove ground prong. If you don't have the proper outlet, consult an electrician. Do not modify the plug provided with the appliance.

If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance must be connected to a grounded metal, permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance. Electric shock can result if the dryer is not properly grounded. The appliance may only be installed in a room if the room meets the appropriate ventilation requirements specified in the national installation regulations. Minimum required spacing of 2,54cm to adjacent appliances, walls and furniture.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the appliance is properly grounded.

SAFETY INSTRUCTIONS FOR INSTALLATION

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following:

- **Properly ground dryer to conform with all governing codes and ordinances. Follow details in the installation instructions.** Electric shock can result if the dryer is not properly grounded.
- **Before use, the dryer must be properly installed as described in this manual.** Electric shock can result if the dryer is not properly grounded.
- **Install and store the dryer where it will not be exposed to temperatures below freezing or exposed to the weather.**
- **All repairs and servicing must be performed by an authorized servicer unless specifically recommended in this Owner's Manual. Use only authorized factory parts.** Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- **To reduce the risk of electric shock, do not install the dryer in humid spaces.** Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- **Connect to a properly rated, protected, and sized power circuit to avoid electrical overload.** Improper power circuit can melt, creating electric shock and/or fire hazard.
- **Remove all packing items and dispose of all shipping materials properly.** Failure to do so can result in death, explosion, fire, or burns.
- **Place dryer at least 18 in. above the floor for a garage installation.** Failure to do so can result in death, explosion, fire, or burns.
- **Keep all packaging from children. Packaging material can be dangerous for children.** There is a risk of suffocation.
- **Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc.** Failure to do so can result in fire.
- **Do not place candles, smoking materials, or other flammables on to top of the product.** Dripping wax, smoke, or fire can result.
- **Remove all protective vinyl film from the product.** Failure to do so can cause product damage, smoke or fire.
- **Means for disconnection with contact separation at least 3mm is that the means for disconnection must be incorporated in the fixed wiring according to the wiring rules.**

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

SAFETY INSTRUCTIONS FOR INSTALLATION

- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with the appliance.
- That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

Exhaust/Ducting:

- **Gas dryers MUST be exhausted to the outside.** Failure to follow these instructions can result in fire or death.
- **The dryer exhaust system must be exhausted to the outside of the dwelling. If the dryer is not exhausted outdoors, some fine lint and large amounts of moisture will be expelled into the laundry area.** An accumulation of lint in any area of the home can create a health and fire hazard.
- **Use only rigid metal or flexible metal 4-inch (10.2 cm) diameter ductwork inside the dryer cabinet or for exhausting to the outside. Use of plastic or other combustible ductwork can cause a fire.** Punctured ductwork can cause a fire if it collapses or becomes otherwise restricted in use or during installation.
- **Ductwork is not provided with the dryer, and you should obtain the necessary ductwork locally. The end cap should have hinged dampers to prevent backdraft when the dryer is not in use.** Failure to follow these instructions can result in fire or death.
- A carpet must not obstruct the openings.
- **Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.**
- **The exhaust duct must be 4 inches (10.2 cm) in diameter with no obstructions. The exhaust duct should be kept as short as possible. Make sure to clean any old ducts before installing your new dryer.** Failure to follow these instructions can result in fire or death.
- **DO NOT use sheet metal screws or other fasteners which extend into the duct that could catch lint and reduce the efficiency of the exhaust system. Secure all joints with duct tape. For complete details, follow the Installation Instructions.** Failure to follow these instructions can result in fire or death.
- **In the appliance enclosure or in the built-in structure, keep ventilation opening clear of obstruction.**
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Do not dry unwashed items in the tumble dryer.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

SAFETY INSTRUCTIONS FOR CONNECTING ELECTRICITY

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following:

- **Do not, under any circumstances, cut or remove the ground prong from the power cord.** To prevent injury to persons or damage to the dryer, the electrical power cord must be plugged into a properly grounded outlet.
- **For personal safety, this dryer must be properly grounded.** Failure to do so can result in electric shock or injury.
- **Refer to the installation instructions in this manual for specific electrical requirements for your model.** Failure to follow these instructions can create an electric shock hazard and/or a fire hazard.
- **This dryer must be plugged into a properly grounded outlet. Electric shock can result if the dryer is not properly grounded. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.** Failure to follow these instructions can create an electric shock hazard and/or a fire hazard.
- **The dryer should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.** This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.
- **Never unplug your dryer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.** The power cord can be damaged, resulting in a risk of fire and electric shock.
- **Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.** The power cord can melt, creating electric shock and/or fire hazard.
- **When installing or moving the dryer, be careful not to pinch, crush, or damage the power cord.** This will prevent injury and prevent damage to the dryer from fire and electric shock.
- **To reduce the risk of injury to persons, adhere to all industry recommended safety procedures including the use of long sleeved gloves and safety glasses.** Failure to follow all of the safety warnings in this manual could result in property damage, injury to persons or death.
- The final part of the tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

⚠ CAUTION

These instructions are only valid if the following country code is on the appliance. If this code is not present on the appliance, it is necessary to refer to the technical instructions which will provide the necessary information concerning the modification of the appliance to the condition of use for the country. Before installation, check that the local distribution conditions, nature of gas and pressure, and the adjustment of the appliance are compatible.

- the method of connection and the installation regulations in the country where the appliance is to be installed (if such regulations exist); also the ventilation dimensions shall be given for the purposes of installation in those countries where there are no appropriate regulations.

⚠ WARNING

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

SAVE THESE INSTRUCTIONS

CONTENTS

2 PRODUCT FEATURES

3 IMPORTANT SAFETY INSTRUCTIONS

- 4 BASIC SAFETY PRECAUTIONS
- 6 GROUNDING INSTRUCTIONS
- 6 SAFETY INSTRUCTIONS FOR INSTALLATION
- 8 SAFETY INSTRUCTIONS FOR CONNECTING ELECTRICITY

11 INTRODUCING YOUR DRYER

- 11 Specifications
- 12 Control panel features

15 OPERATING YOUR DRYER

16 PROGRAMMING MODE

- 19 Programming Mode - Setup Mode
 - 19 1. How to change regular price.
 - 20 2. How to change special price
 - 21 3. How to enter the FEA1
 - 25 4. How to enter the special price day setup
 - 27 5. Special price beginning time setup
 - 28 6. Special price ending time setup
 - 29 7. Regular priced dryer cycle time
 - 30 8. Special priced dryer cycle time
 - 31 9. Value of coin 1
 - 32 10. Value of coin 2
(Set up for top off price and e-suds coin pulse)
 - 33 11. Penny increment pricing offset
 - 34 12. Top off time
 - 35 13. Beep volume
 - 36 14. Time to keep the coin (Use only for coin type)
 - 37 15. Product type setup – coin/card type or OPL setup
- 38 Programming Mode - Test Mode
 - 39 1. Lqc1
 - 40 2. Factory reset - EEPT
 - 41 3. Time Set Up
 - 42 4. Courtesy cycle
 - 43 5. Cycle Kill

- 44 Programming Mode - Collect Mode

46 MAINTENANCE

47 STACK MACHINE INSTALLATION INSTRUCTIONS

- 47 Suitable model for stacking
- 47 Sliding kit
- 47 Stacking kit
- 48 Stacking the machine
- 48 Stacking bracket installation

49 ERROR MODE


49 POWER FAIL RECOVERY

49 DEFAULT DRYER SETTINGS

50 Declaration of Conformity

INTRODUCING YOUR DRYER

Specifications

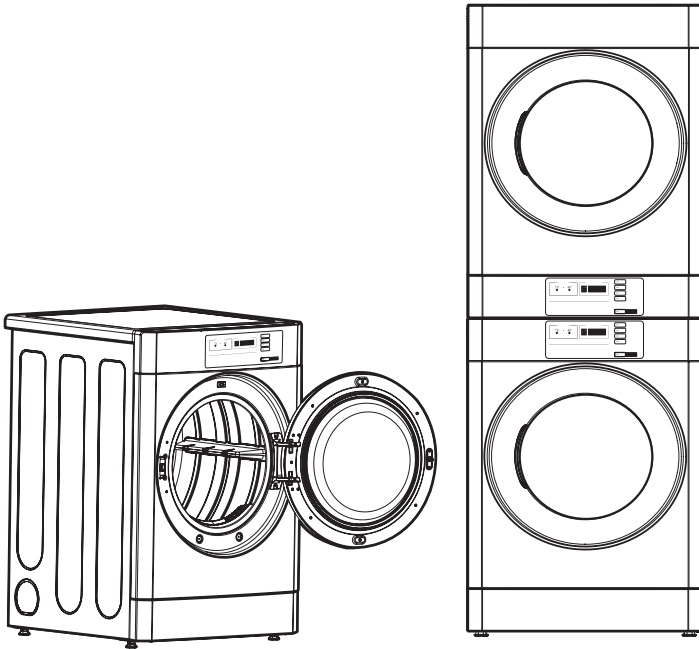

- Type : Electric and Gas Dryer
- Rating : Please refer to the rating label regarding detailed information.
- Single dryer size : 686mm(W) x 764mm(D) x 983mm(H)
- Stack dryer size : 686mm(W) x 764mm(D) x 1954mm(H)
- Electric Dryer Max capacity : 10kg
- Gas Dryer Max capacity : 10,2kg
- Weight : 59,4 kg
- Specifications are subject to change by manufacturer.


NOTE

Specifications subject to change by manufacturer.

Control panel features


■ Card type

- Side by side(RN1329AD1S / RV1329AD1S)
- Stack upper(RN1329AD5S / RV1329AD5S)
- Stack lower(RN1329AD6S / RV1329AD6S)

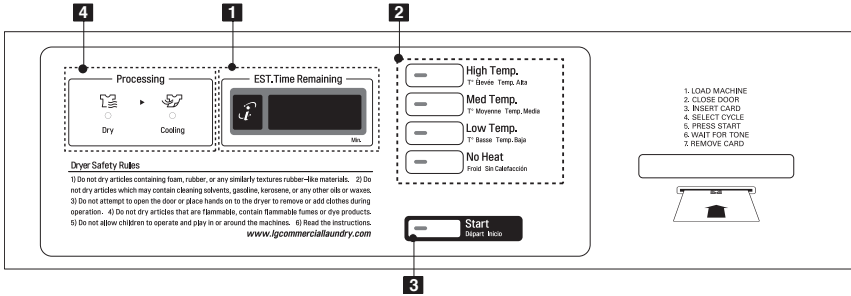

■ OPL type

- Side by side(RN1329A4S / RV1329A4S)
- Stack upper(RN1329A7S / RV1329A7S)
- Stack lower(RN1329A1S / RV1329A1S)

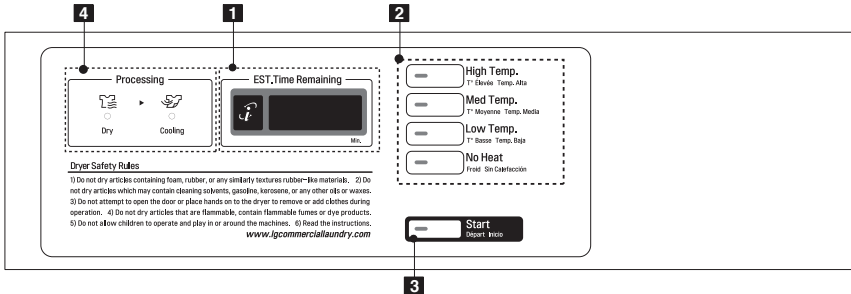

1. Display LED

2. Cycle button


3. Start button

4. Status LED


Control panel features

■ Coin type


- Side by side (RN1329AN4S / RV1329AN4S)

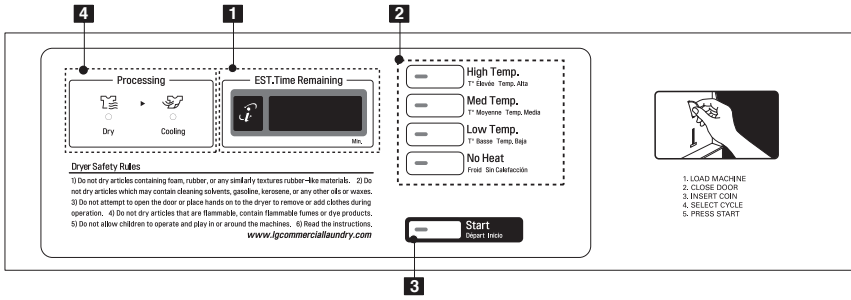

- Stack upper (RN1329AN7S / RV1329AN7S)

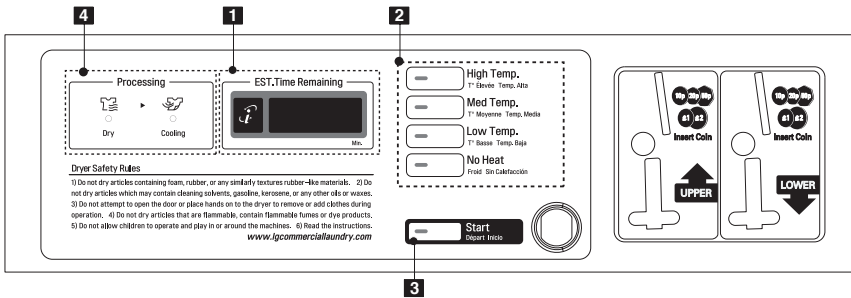


- Stack lower (RN1329AN1S / RV1329AN1S)

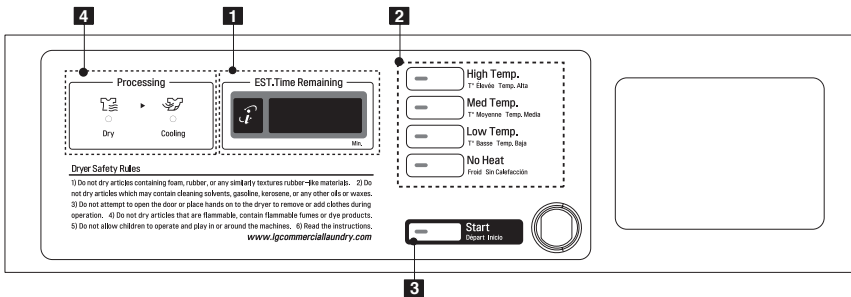

- 1. Display LED
- 2. Cycle button

- 3. Start button
- 4. Status LED

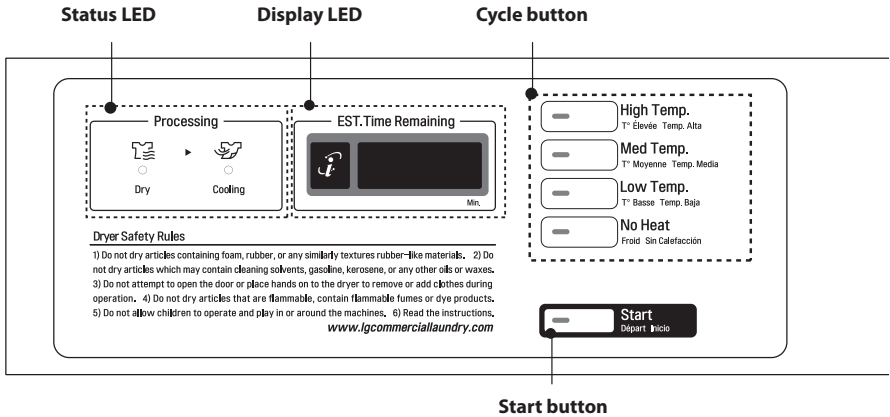

Display LED

The Display shows the vend price, remaining time, and programming options. Error codes are also displayed here.



Cycle button

Press the cycle button to Select the desired cycle based on laundry types and conditions.

High Temp.

Use this cycle to get high heat for heavy fabrics, such as jeans corduroys or work clothes (High heat).

Med Temp.

Use for drying sturdy fabrics such as work casual clothes (Medium heat).

Low Temp.

Use for drying synthetic fabrics, washable knit fabrics and noiron finishes (Low heat).

No Heat

Use for items that require heat-free drying such as plastics or rubber.

Start button

The Start LED flashes when the full vend price has been satisfied then the cycle has been chosen or the machine is paused.

The Start LED flashes when a card is inserted to add time to the current cycle.

Status LED

LED	Description
 Dry	LED flashes whenever the heating cycle is in operation.
 Cooling	LED flashes whenever the cool down cycle is in operation.

OPERATING YOUR DRYER


1. Ready mode

- 1) Coin / Card type
 - The cycle LEDs flash at the same time, when the price of cycles are equal.
- 2) OPL type
 - The cycle LEDs is lit at the same time, and displayed 'PUSH'.

2. Insert card/coin/Token (not for OPL type)

- Insert a cash card that has a sufficient balance. The card balance should be more than the programmed vend price for a selected cycle.

! NOTE

When the card balance is not enough, machine displays the balance for 5 seconds and then displays  message repetitively

- Insert a sufficient amount of change that is a more than the programmed vend price for a selected cycle.

! NOTE

When the coin amount is not enough, the machine will not start.

3. Select the cycle

Press the desired cycle and the start button. The display LED will show the remaining time and the selected cycle starts.

! NOTE

The last 2 minutes of the remaining time are always for the cool down portion.

4. Top off (To add more time)

- After a debit card is inserted, the operating time can be increased to 10 minutes/10p (default), when the Start button or the chosen course button has been pressed. (The card should have enough balance to satisfy increasing time.)
- The operating time can be increased to 10 minutes/10p (default) by adding more coins.

! NOTE

Owner can control the additional time and money setting (top off price).

When the COOL DOWN has been working, if time is added, it goes back to the DRYING. Time can be added up 99 minutes.

5. Change cycle

- You cannot change the cycle while the machine is running.
- But if the door is opened, the machine stops temporarily and the cycle can be changed.
- Press the Pause button then you can change the cycle.

6. Cycle finish

- After the COOL DOWN of cycle, the machine stops and LED display shows End. If you press any key or open the door, the dryer defaults to the ready mode.

PROGRAMMING MODE

1. Programming mode

You can check machine information or change setting on Program setup or Diagnostic test. There are two methods that you can enter programming mode.

■ How to enter "Programming mode"

You can enter programming mode only for Idle state and pause state.

- Card Type

- 1) Insert service card.
- 2) Display will show **8888**

- Coin Type

- 1) Disassemble upper coin box key.
- 2) Take out the coin drop from the coin box.
- 3) Turn on/off the toggle switch at the back of the coin box.
- 4) Display will show "**8888**".


- OPL/Coin Type

- 1) Push the High Temp. and Low Temp. button at the same time.
- 2) Push the Med Temp. button 3 times.
- 3) Push the Start button.
- 4) Display will show "**8888**".

■ How to use button

You can change Dryer vend price, cycle time and Cycle parameters, etc.

Press button	Description
High Temp.	Move to upper level
Med Temp.	Move to the mode in the same level (+)
Low Temp.	Move to the modes in the same level (-)
No Heat	-
Start	Enter the selected mode

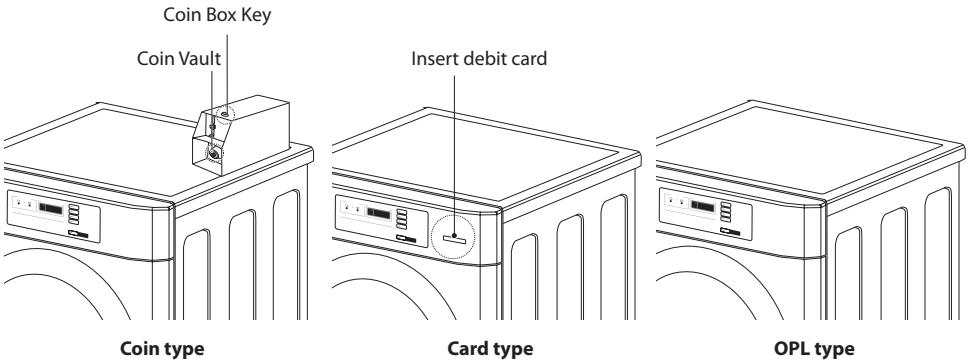

! NOTE

- If you turn on the power without connecting the meter case for the first time, the machine will display **8888**.
- When the machine comes from the factory, it is set in the coin type. You can change Card/Coin type by button. (For more information refer to SETUP mode's **8888** / **8888**.)
- The machine will display "PUSH" for OPL type

Card / Coin type

■ **Algorithm Flow Chart shows how to control programming mode.**

■ **Before program set, check the structure of programming mode.**

1. Turn on/off toggle switch or Insert the service card to entering set up mode.
2. Press High Temp. button to move the upper level.
3. Press Med Temp.(+) or Low Temp.(-) button if you want to be at the same level.
4. Press Start button to enter the details of Set up, Diagnostic Tests mode.

SE UP is to set price value, time value and vend type etc.

EE SE consists of line test, reset, free cycle and kill cycle.

EE EE is to collect the usage data.

■ Structure of Programming mode

SE UP	EE SE	EE EE
SPPR SPET	L9C1	TPPR ACFC TEAD
SPCP SPDC	L9C2	SPCP ACCC TEUC
SPRP SPDC	L1FE	SPRP ACAC TEAC
SPHP CCCC	EEPE	SPHP ACHC TEET
SPPR RRPC	E13E	DELE ACSC REET
SPCP RRPE	COUR	TEPC ACTF TEEC
SPRP ESSD	KILL	TECC ACUC ACTC
SPHP CC01		TEAC ACFC SCPR
SCPR CC02		TEHC ACTE TEPR
SPCE PIPO		TESC TEAP TEED
FEA1 TEPE		TEEF TEEB ACED
SPPD BEEP		TEUC TEPD TEED
SPBE REFR		TEFC TEDD ACTD
PRTP		

! NOTE

- Do not use **EE EE**, **EE EE**.
- It is only used in inspecting the machine.

OPL type

- Algorithm Flow Chart shows how to control programming mode.
- Before program set, check the structure of programming mode.

OPL/Coin Type

- 1) Push the High Temp. and Low Temp. button at the same time.
- 2) Push the Med Temp. button 3 times.
- 3) Push the Start button.
- 4) Display will show " **E999** "

SEUP is to set price value, time value and vend type etc.

EESE consists of line test, reset, free cycle and kill cycle.

EEEE is to collect the usage data.

■ Structure of Programming mode

SEUP	EESE	EEEE
SPPT SPET	L9C1	TPPT ACTC TEAD
SPCP SPDC	L9C2	TPCP ACTC TEUC
SPTP SPDC	L1FE	TPTP ACTC TEAC
SPHP CCCC	EEPT	TPHP ACTC TEET
SPPT TPPC	E13E	DELE ACTC ACTE
SPCP TPTE	COUP	TEPC ACTC TEEC
SPTP ESSD	KILL	TECC ACTC ACTC
SPHP CC01		TEAC ACTC SCPT
SCPA CC02		TEHC ACTC TEPT
SPCE PIPO		TESC TEAP TEED
FEA1 TEPT		TEEF TEEB ACTC
SPPD BEET		TEUC TEPD TEED
SPBE TEFT		TEFC TEED ACTC
PTET		

! NOTE

- Do not use **EE00** , **EE99** .
- It is only used in inspecting the machine.

PROGRAMMING MODE - Setup Mode








Setup Mode : **SE UP** (display)

■ You can change dryer vend price, cycle time, and cycle parameters, etc.

■ Entering set up mode

- Coin type - Turn on/off toggle switch.
- Card type - Insert the service card.
- Stack type - Take off control panel, and turn on/off toggle switch.
- OPL/Coin Type – Push “High Temp.” + “Low Temp.” and the ‘3’.
- Then, dryer displays **8888**.











1. How to change regular price.

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until SE UP appears in the display.	
	Press the Start button.	
	Press the Start button. Display previous regular price.	
	Press Med Temp.(+) or Low Temp.(-) button to set regular price. (The vend price can be set from 0 to £ 9,90 in 10p increments.)	
	Press the Start button. The machine sets up the regular price, then advances to the next process automatically.	
	1. Continue to set up the next price. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type – Press “High Temp.” twice. 	

! NOTE

- rgCP (regular cold price) is not available in dryer.
- rgrP (regular warm price) is not available in dryer.
- rgHP (regular hot price) is not available in dryer.






2. How to change special price

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous special price.	
	Press Med Temp.(+) or Low Temp.(-) button to set special price. (The vend price can be set from 0 to £ 9,90 in 10 p increments.)	
	Press the Start button. The machine sets up the regular price, then advances to the next process automatically.	
	1. Continue to set up the next price. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type – Press “High Temp.” twice. 	


! NOTE

- SPCP (special cold price) is not available in dryer.
- SPPrP (special warm price) is not available in dryer.
- SPHP (special hot price) is not available in dryer.
- SCPA (add super cycle price) is not available in dryer.
- SPCt (add super wash type) is not available in dryer.

3. How to enter the **FEA1**

Entering set up mode.	Button	Display
You will see LqC1	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until SE UP appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until FEA1 appears in the display.	



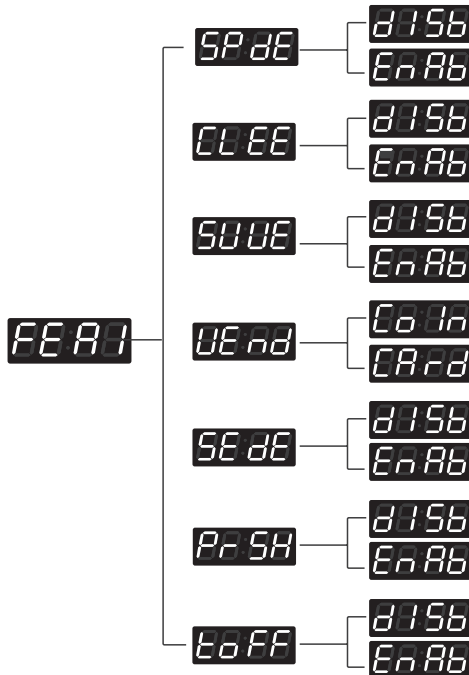













■ Structure of **FEA1**



■ Content of **FEA1**

- SPDE** • Special price days apply or not
- CLEE** • Disabled
- SUVE** • Add super wash apply or not
- UEND** • Select vend type
- SEDE** • This function is not available
- PRSH** • Pre-wash apply or not
- EOFF** • Top off apply or not (only for dryer)
- d15b** • Disable
- EnAb** • Enable


















3-1. Special price day setup

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	<p>Press the High Temp. button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button. Display .</p>	
	<p>Press the Start button. Press Med Temp. or Low Temp. button and then select  or .</p> <p> Coin type  Card type</p>	<p>One or the other will display.</p>  
	<p>Press the Start button. The machine sets up the special price, then advances to the next process automatically.</p>	
	<ol style="list-style-type: none"> 1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	

NOTE

- CLEE (clear escrow enable or not) is not available in dryer.
- SUUE (add super wash apply or not) is not available in dryer.

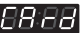

















3-2. Vend type setup - card type or coin type setup

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	<p>Press the High Temp. button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button. Display .</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button. Press Med Temp. or Low Temp. button and then select  or .</p> <p> Disable  Enable</p>	<p>One or the other will display.</p>  
	<p>Press the Start button. The machine sets up the vend type, then go to the idle mode automatically.</p>	








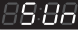

NOTE

- SEdE (sensor dry apply or not) is not available in dryer.
- PrSH (Pre-wash apply or not) is not available in dryer.


3-3. Top off apply or not setup

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	<p>Press the High Temp. button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button. Display .</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button. Press Med Temp. or Low Temp. button and then select  or .</p> <p> Disable  Enable</p>	<p>One or the other will display.</p>  
	<p>Press the Start button. The machine sets up the Vend type, then advances to the next process automatically.</p>	
	<ol style="list-style-type: none"> Continue to set up the next mode. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> Coin type - Turn on/off toggle switch. Card type - Pull the service card. Stack type - 1. Control panel open. 2. Turn on/off toggle switch. OPL/Coin Type - Press "High Temp." twice. 	







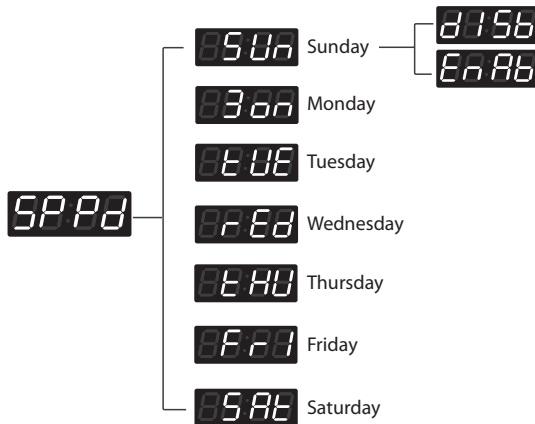









4. How to enter the special price day setup

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display  .	

■ Structure of






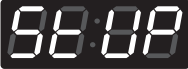
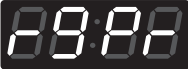




4-1. How to change sunday

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	<p>Press the High Temp. button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until  appears in the display.</p>	
	<p>Press the Start button. Display .</p>	
	<p>Press the Start button. Press Med Temp.(+) or Low Temp. button and then select  or .</p> <p> Disable  Enable</p>	<p>One or the other will display.</p>  
	<p>Press the Start button. The machine sets up the special price day (Sunday), then advances to the next process automatically.</p>	
	<ol style="list-style-type: none"> 1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










NOTE

As explained on the previous page, other days can be set up by the same method.

5. Special price beginning time setup

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous special price beginning time.	
	Press Med Temp.(+) or Low Temp.(-) button to select time between 0 and 23 .	
	Press the Start button. The machine sets up the special price beginning time, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










6. Special price ending time setup

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous special price ending time.	
	Press Med Temp.(+) or Low Temp.(-) button to select time between 1 and 24 .	
	Press the Start button. The machine sets up the special price ending time, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










NOTE

When setting up a special price period, the ending time must be later than the beginning time.

7. Regular priced dryer cycle time

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous regular priced dryer cycle time.	
	Press Med Temp.(+) or Low Temp.(-) button to select time between 10 and 99 .	
	Press the Start button. The machine sets up the regular priced dryer cycle time, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










8. Special priced dryer cycle time

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous special priced dryer cycle time.	
	Press Med Temp.(+) or Low Temp.(-) button to select time between 10 and 99 .	
	Press the Start button. The machine sets up the special priced dryer cycle time, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










! NOTE

- CCCC (washing time) is not available in dryer.
- nrPC (rinsing times per cycle) is not available in dryer.
- rt (rinsing time setup) is not available in dryer.
- tSSd (top spin speed) is not available in dryer.

9. Value of coin 1

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous coin 1 value.	
	Press Med Temp.(+) or Low Temp.-) button to select value of coin 1 (The value can be set from 0 to £ 9,90 in 10 p increments.)	
	Press the Start button. The machine sets up the value of coin 1, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	

10. Value of coin 2 (Set up for top off price and e-suds coin pulse)

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous coin 2 value.	
	Press Med Temp.(+) or Low Temp.(-) button to select value of coin 2 (The value can be set from 0 to £ 9,90 in 10 p increments.)	
	Press the Start button. The machine sets up the value of coin 2, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










! NOTE

- Coin type : Value of coin 2 is same function as setting for the e-Suds coin pulse.
- Card type : Value of coin 2 is same function as the top off price.

(As changing the value of coin 2, you can change the top off price and e-Suds coin pulse.)

11. Penny increment pricing offset










This represents the cent increment price offset used when debit card is setup.

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous penny increment pricing offset.	
	Press Med Temp.(+) or Low Temp.(-) button to select value of PIPo. (0~4)	
	Press the Start button. The machine sets up the PIPo, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	










! NOTE

- Pence increment pricing offset is available only in card type.
(It hasn't affected on the coin type's price setting.)










12. Top off time

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous top off time.	
	Press Med Temp.(+) or Low Temp.(-) button to select time between 1 and 30 .	
	Press the Start button. The machine sets up the top off time, then advances to the next process automatically.	
	<ol style="list-style-type: none"> Continue to set up the next mode. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> Coin type - Turn on/off toggle switch. Card type - Pull the service card. Stack type - 1. Control panel open. 2. Turn on/off toggle switch. OPL/Coin Type - Press "High Temp." twice. 	










13. Beep volume

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous value.	
	Press Med Temp.(+) or Low Temp.(-) button to select High or Low or Off.	
	Press the Start button. The machine sets up the beep volume, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	

14. Time to keep the coin (Use only for coin type)

Entering set up mode.	Button	Display
You will see LqC1 	Press the High Temp. button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. Display previous value.	
	Press Med Temp.(+) or Low Temp.(-) button to select time between 1 ~ 180 or ' Disable '.	
	Press the Start button. The machine sets up the time to keep the coin, then advances to the next process automatically.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	

15. Product type setup – coin/card type or OPL setup

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	<p>Press the High Temp. button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until SE UP appears in the display.</p>	
	<p>Press the Start button.</p>	
	<p>Press the Med Temp. or the Low Temp. button until PRER appears in the display.</p>	
	<p>Press the Start button. Display previous value.</p>	
	<p>Press Med Temp. or Low Temp. button and then select PR84 or PR88.</p> <p>PR84 Coin/Card type setting PR88 OPL type setting</p>	<p>One or the other will display.</p>  
	<p>Press the Start button. The machine sets up the time to keep the coin, then advances to the next process automatically.</p>	
	<p>1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode.</p> <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	

PROGRAMMING MODE - Test Mode

Diagnostic tests : **EESE** (display)

This program has been added for testing the dryer and detecting errors.

Entering the test mode

Machine	Data Name	Button	Display	Description
CARD / COIN	Enter- ing the test mode	1. Entering programming mode	EE00	Insert service card (card type), Turn on/off toggle switch (Coin type).
		2. High Temp.	EESE	Press the High Temp. button. Then EESE appears in the display.
		3. Start	EE00	Enter the diagnostic test mode.
OPL / Coin Type		1. Entering programming mode.	EE00	Push and hold the High Temp. and Low Temp. at the same time. After that push Med Temp. button for 3 times. Push Start button.
		2. High Temp.	EESE	Press the High Temp. button. Then EESE appears in the display.
		3. Start	EE00	Enter the diagnostic test mode.

1. 

Pressing the Start button cycles to the next test function.

Number of times the Start button is pressed	Checking point	Display
None		LqC 1
1 time	Check the version and code of machine. ■ ELECTRIC TYPE : P3 OE ■ GAS TYPE : P3 Og	Version and code of machine (All LED on) Display P3:OE or P3:Og and gU:XX alternately. XX is the version number.
2 time	PDA CHECK	Ir--
3 time	Motor runs.	Measured moisture value (70~239)
4 time	■ ELECTRIC TYPE: Heater runs. Motor + Heater 1 (2700W) ■ GAS TYPE: GAS valve runs. Motor + Valve	Current temperature (5~70) (Displays the temperature inside the drum in ° Celsius.)
5 time	■ ELECTRIC TYPE: Heater runs. Motor + Heater 1 +Heater 2 (5400W) ■ GAS TYPE: GAS valve runs. Motor+Valve	Current temperature (5~70) (Displays the temperature inside the drum in ° Celsius.)
6 time	LED & KEY CHECK Press High Temp. button. Press Med Temp. button. Press Low Temp. button. Press No Heat button	Version and code of machine
7 time	Test ends.	LqC1
During check, if the door is open.	Door switch (Motor & Heater Off, Buzzer beeps seven times)	dE (The door is open. Please close the door completely)
During check, if the door is closed	Test goes back at step 2. (Motor on & Heater Off)	Measured moisture value (70~239)






NOTE

During LqC1 test, if no buttons are pressed for 4 minutes, machine will be turned off automatically.

Do not use .

2. Factory reset - EEPT






After a factory reset, all values are reset to the default values.

Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	Press the Med Temp. or the Low Temp. Button until EEPE appears in the display.	
	Press the Start button.	
	Press the Med Temp. button until EE23 appears in the display.	
	Press the Start button, then factory reset is done. EE00 is displayed.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Push "High Temp." + "Low Temp." and the '3'. 	

! NOTE










- Dryer default value for CARD/COIN machine.
 - Drying time 50 Minute
 - Top off time 10 Minute
- Drying time in OPL machine can be changed from 10 to 100 Minutes by pressing the cycle button.

3. Time Set Up

Entering set up mode.	Button	Display
You will see LqC1 	Press the Med Temp. or the Low Temp. button until  appears in the display.	
	Press the Start button. The display cycles through 2000 --> 0101 --> Sat --> 0000.	
	Press the Start button.	
	Press Med Temp. (+) or Low Temp. (-) button to select year between 2000 and 2099 .	
	Press the Start button. The machine sets up the year, then advances to the next process automatically.	
	Press Med Temp. (+) or Low Temp. (-) button to select month between 01 and 12 .	
	Press the Start button. The machine sets up the month, then advances to the next process automatically.	
	Press Med Temp. (+) or Low Temp. (-) button to select day between 01 and 31 .	
	Press the Start button. The machine sets up the day, then advances to the next process automatically.	
	Press Med Temp. (+) or Low Temp. (-) button to select hour between 00 and 23 .	
	Press the Start button. The machine sets up the hour, then advances to the next process automatically.	
	Press Med Temp. (+) or Low Temp. (-) button to select minute between 00 and 59 .	
	Press the Start button. The machine sets up the minute.	
	1. Continue to set up the next mode. 2. Stop the change of setup value and go back to ready mode. <ul style="list-style-type: none"> • Coin type - Turn on/off toggle switch. • Card type - Pull the service card. • Stack type - 1. Control panel open. 2. Turn on/off toggle switch. • OPL/Coin Type - Press "High Temp." twice. 	






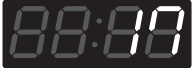


4. Courtesy cycle

Courtesy cycle is like a complimentary cycle given to the customer when the dryer goes out of order when the customer has made the payment to dry one's clothes.


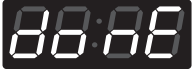


Entering set up mode.	Button	Display
<p>You will see LqC1</p> 	Press the Med Temp. or the Low Temp. Button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. button until  appears in the display.	
	Press the Start button. Display will show  .	
	Select the course you desire. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>NOTE</p> <ul style="list-style-type: none"> In case of dryer card type, it has to insert the cash card after removing the service card. Then press the cycle course and the start button. (It is only applicable to the dryer's card type specially and there is no subtraction in card balance at the Courtesy cycle.) </div>	
	Press the Start button. Display will show the remaining time and start.	

5. Cycle Kill

■ Coin

Entering set up mode.	Button	Display
You will see LqC1 	Press the Med Temp. or the Low Temp. Button until  appears in the display.	
	Press the Start button.	
	Press the Med Temp. button until  appears in the display.	
	Press the Start button.	
	Display  with beeping.	
	Go back to ready mode.	

■ Card type

Insert cycle kill card.	Descriptions	Display
	Display the current time and  .	
	Display  with beeping.	
	Go back to ready mode.	

! NOTE

- OPL type
- Dryer machine will end the cycle by opening the door.

PROGRAMMING MODE - Collect Mode

Collect Information Data : CLCt (display)

The dryer collects the usage data so that the owner can check various information like number of various cycles used, how many times card or coins used, etc.

Entering the collect mode

Data Name	Button	Display	Description
Entering the collect mode	1. Entering the programming mode.		Insert service card(card type), Turn on/off toggle switch (Coin type).
	2. High Temp.		Press the High Temp. button until "tEst" appears in the display.
	3. Low Temp.		Press the Med Temp. or Low Temp. button until "CLCt" appears in the display.
	4. Start		Enter the Collect information data.
	5. Med Temp. or Low Temp.		Move to each data list that you want to check by pressing with Med Temp. or Low Temp. button.
	6. Start		Display the value of selected data list

❖ Check the collect information reference to the follow lists. The Lists are displayed by abbreviations.

■ Collect Mode Data lists

No.	Abbreviation	Meaning	Description
1	rgPr	Regular Price	£ 0,00~ £ 9,90
2	rgCP	Regular Cold Price	rgCP is not available in dryer. (It can't enter.)
3	rgrP	Regular Warm Price	rgrP is not available in dryer. (It can't enter.)
4	rgHP	Regular Hot Price	rgHP is not available in dryer. (It can't enter.)
5	dELC	Dryer Moisture Sense	dELC is not available in dryer. (It can't enter.)
6	ltrC	Interval Regular Cycles	Number of Regular cycles (0~65535)
7	lItCC	Interval Regular Cold Cycles	lItCC is not available in dryer. (It can't enter.)
8	lItAC	Interval Regular Warm Cycles	lItAC is not available in dryer. (It can't enter.)
9	lItHC	Interval Regular Hot Cycles	lItHC is not available in dryer. (It can't enter.)
10	lItSC	Interval Super Cycles	lItSC is not available in dryer. (It can't enter.)
11	lIttF	Interval Topoff Cycles (Dryer Only)	Number of Topoff cycles (0~65535)
12	lItUC	Interval Service Cycles	Number of Service cycles (0~65535)
13	lItFC	Interval Token Cycles	Number of Token cycles (0~65535)
14	ACrC	Accumulated Regular Cycles	Number of Regular cycles (0~65535)
15	ACCC	Accumulated Regular Cold Cycles	ACCC is not available in dryer. (It can't enter.)
16	ACAC	Accumulated Regular Warm Cycles	ACAC is not available in dryer. (It can't enter.)
17	ACHC	Accumulated Regular Hot Cycles	ACHC is not available in dryer. (It can't enter.)
18	ACSC	Accumulated Super Cycles (Washer Only)	ACSC is not available in dryer. (It can't enter.)
19	ACtF	Accumulated Topoff Cycles (Dryer Only)	Number of Topoff cycles (0~65535)
20	ACUC	Accumulated Service Cycles	Number of Service cycles (0~65535)
21	ACFC	Accumulated Token Cycles	Number of Token cycles (0~65535)
22	ACrt	Accumulated Run Time	Number of Running minutes (0~65535)

■ Collect Mode Data lists

No.	Abbreviation	Meaning	Description
23	ltnr	Interval No Runs	ltnr is not available in dryer.
24	lttb	Interval Trouble Cycles	Money inserted, but no run.
25	ltpd	Interval Power Downs	No money, but ran.
26	ltdd	Interval Unauthorized Service Door Openings	Number of Unauthorized Service Door Openings (0~ 255)
27	ltAd	Interval Authorized Service Door Openings	Number of Unauthorized Service Door Openings (0~ 255)
28	ltUC	Interval Unauthorized Coin Vault Openings	Number of Authorized Service Door Openings (0~ 255)
29	ltAC	Interval Authorized Coin Vault Openings	Number of Authorized Service Door Openings (0~ 255)
30	lttl	Interval Total Income	Amount of money for Total Income (£ 0,00~ £ 65535)
31	actl	Accumulated Total Income	Amount of money for Total Income (£ 0,00~ £ 65535)
32	lttC	Interval Total Cycles	Number of Total cycles (0~65535)
33	ACtC	Accumulated Total Cycles	Number of Total cycles (0~65535)
34	SCPr	Super Cycle Price	Scpr is not available in dryer. (It can't enter.)
35	toPr	Top Off Price	£ 0,00~ £ 9,90
36	ltd	Interval Money	Amount of money for regular cycle (£ 0 ~ £ 65535)
37	ACd	Accumulated Money	Amount of money for regular cycle (£ 0 ~ £ 65535)
38	ltttd	Interval Topoff Money	Amount of money for Topoff (£ 0 ~ £ 65535)
39	ACtd	Accumulated Topoff Money	Amount of money for Topoff (£ 0 ~ £ 65535)

- ✧ INTERVAL means collecting since last data collection.
- ✧ ACCUMULATED means collecting over a period of time since last factory reset (EEPT).
- ✧ Authorized: Turning on/off the toggle switch with PDA Communication.
(Turning on/off the toggle switch within 30 minutes after Communicating with PDA)
- ✧ Unauthorized: Turning on/off the toggle switch without PDA Communication.

MAINTENANCE

Regular cleaning

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following:

- **Unplug the dryer before cleaning to avoid the risk of electric shock.** Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- **Never use harsh chemicals, abrasive cleaners or solvents to clean the dryer.** They will damage the finish.

Cleaning the Exterior

Proper care of your dryer can extend its life. The outside of the machine can be cleaned with warm water and a mild, nonabrasive household detergent. Immediately wipe off any spills with a soft, damp cloth.

⚠ NOTE

Do not use methylated spirits, solvents, or similar products. Never use steel wool or abrasive cleansers; they can damage the surface.

Cleaning the Interior

Wipe around the door opening and seal with a soft, damp cloth to prevent lint and dust buildup that could damage the door seal. Clean the window with a soft cloth dampened with warm water and a mild, nonabrasive household detergent; then wipe dry. The stainless steel drum can be cleaned with a conventional stainless steel cleaner, used according to the manufacturer's specifications. Never use steel wool or abrasive cleansers; they can scratch or damage the surface.

Cleaning Around and Under the Dryer

Vacuum lint and dust from around the dryer and underneath it regularly. Vent ductwork should be checked for lint buildup and cleaned at least once per year. If any noticeable reduction in airflow or drying performance occurs, immediately check ductwork for obstructions and blockages.

Maintaining Ductwork

Vent ductwork should be checked for lint buildup and cleaned at least once per year. If any noticeable reduction in airflow or drying performance occurs, immediately check ductwork for obstructions and blockages. Contact a qualified technician or service provider.

⚠ NOTE

Distributor & Service

JLA
Meadowcroft Lane, Ripponden, West Yorkshire,
HX6 4AJ, United Kingdom
T : 44 (0)1422 822282 www.jla.com
JLA is the distributor & service in UK
Maglione
Via Vittorio Emanuele II, 6/8 - 25030 Roncadelle (BS)
T : 030-25-85-077 (4 linee r.a.)
Maglione is the distributor & service in ITALY
LG Electronics Service Europe B.V.
Krijgsman 1, 1186 DM Amstelveen, the Netherlands
T : 31-20-456-3132
BIJELI SVIJET d.o.o.
Kranjceviceva 50, Zagreb, Croatia
Tel. +385.1.3091.870 www.bijelisvijet.hr
Producer
LG Electronics Inc.
76, Seongsan-dong, Changwon-city, Gyeongnam 641-713, Korea
T : 82-55-269-3723 www.lg.com


Cleaning the Lint Filter

Always clean the lint filter after every cycle.




To clean, open the dryer door and pull the lint filter straight up. Then:


1. Roll any lint off the filter with your fingers, or

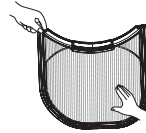

2. Vacuum the lint filter, or

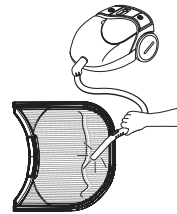

 3. If the lint filter has become very dirty or clogged with fabric softener, wash the lint filter in warm, soapy water and allow to dry thoroughly before reinstalling.



⚠ NOTE

NEVER operate the dryer without the lint filter in place. NEVER operate the dryer with a wet lint filter. Recommended frequency of periodic servicing is once a year

STACK MACHINE INSTALLATION INSTRUCTIONS

1. Suitable model for stacking

Stack position	Upper	Lower	
	Dryer	Washer	Dryer
Stack position	RN1329AD5S RN1329AN7S RN1329A7S RV1329AD5S RV1329AN7S RV1329A7S	F1069FD6 F1069FD F1069FD2 F1069FD6 F1069FD F1069FD2	RN1329AD6S RN1329AN1S RN1329A1S RV1329AD6S RV1329AN1S RV1329A1S

2. Sliding kit

- Sliding kit is provided in the upper dryer.
- Sliding kit includes the slide bracket(2), sliding pad(4), screw(10), machine screw(8).


1) Sliding bracket



2) Sliding pad

3) Screw

4) Machine screw

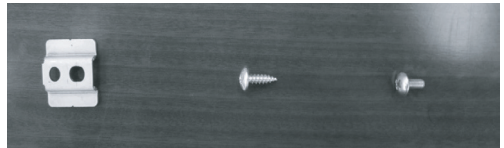

3. Stacking kit

- Stacking kit is provided in the upper dryer.
- Stacking kit includes the stacking bracket(1), security bracket(3), bolt(1), screw(6).



1) Stacking bracket



2) Bolt

3) Screw

4) Security bracket



NOTE



- The machine can be stacked only on the model designated as suitable by LGE.
- Do not stack the washer on the top.
- You can order the parts for stacking from Qualified dealer or Qualified SVC agent of LGE.

4. Stacking the machine



- Lift and stack the upper dryer on the lower washer.
- Set the rear of the upper dryer and the rear of the lower washer in the same position.
- Push the upper dryer matching the slide & stacking bracket to make upper and lower front parallel.

5. Stacking bracket installation

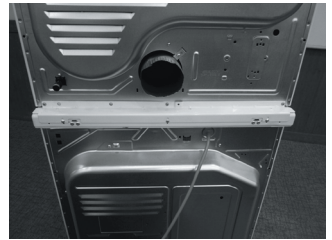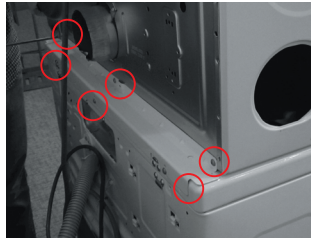

- Install the stacking bracket at the rear of the stacked dryer and washer.
- Assemble the six(6) screw to fix the lower washer and upper dryer.

! NOTE

Please refer to Service Manual for detail to explain the how to stack and fix the machine

ERROR MODE

■ Meaning of Error Codes that LED displays during occurrence or problem.

Dryer error code

PROBLEM	POSSIBLE CAUSE	SOLUTION
EE1	It is displayed when thermistor is opened or shorted	Thermistor should be replaced.
EE2	It is displayed when thermistor temperature have increased about 17 degrees for 10 seconds	Thermistor should be replaced.
CAE	Disconnection of card reader wire.	Check the card reader wire.

POWER FAIL RECOVERY

In case of power failure the machine stops running but the time display remains on, showing the time just before power failure.

Press the **Start** button after the power is restored, then the machine will restart.

DEFAULT DRYER SETTINGS

Default Settings	Default
Cycle Time (Minutes)	50 Minutes
Cool Down Time Cycle	2 Minutes
High Temperature	154,4° F (68° C)
Medium Temperature	140° F (60° C)
Low Temperature	125,6° F (52,5° C)
Top Off Time (Minutes per coin)	10 Minutes
Coin #1 Value	10 p
Coin #2 Value	10 p
Minutes/Minutes and seconds	Minutes
Fahrenheit/Celsius	Fahrenheit
Error Mode	On

EU DECLARATION OF CONFORMITY**Number**

DoC_RN1329Axyz_14-171

Name and address of the Manufacturer

LG Electronics Inc., Washing
Machine Division, 76, Seong San
Dong,
Changwon City, Gyeong Nam,
641-713, Korea

This declaration of conformity is issued under the
sole responsibility of the manufacturer:

LG Electronics Inc.

Object of the declaration**Product information**

Product Name
Tumble Dryer

Model Name
RN1329Axyz

Additional information

x : N, D, or blank, y : 1~9, z : S or blank

The object of the declaration described above is in conformity with the relevant Community harmonisation
legislations:

- References to the relevant harmonised standards used or references to the technical specifications in relation to which
conformity is declared

- EMC Directive: 2004/108/EC:

EN 55014-1 : A2:2011
EN 55014-2 : A2:2009
EN 61000-3-2 : A2:2009
EN 61000-3-3 : 2008

- LV Directive: 2006/95/EC:

EN 60335-1 :
2002+A11:2004+A12:2006+A2:2006+A13:2008
EN 60335-2-11:2010
EN 62233:2008
EN 60335-2-105 : 2006 + A1

- Gas Directive : 2009/142/EC

EN 12752-1 : 1999
EN 12752-2 : 1999

- RoHS Directive: 2011/65/EU

EN 50581:2012

The last two digits of the year in which the CE marking was affixed

13

Additional information

The conformity to above standards was verified by KIWA with Certificate. No. 180126 for Safety,
And with Registration No. E8N 13 03 26600 065 by TUV Rheinland for EMC.

Signed for and on behalf of: LG Electronics Inc.

Place:

LG Electronics Inc. – EU Representative
Krijgsman 1 - 1186 DM Amstelveen - The Netherlands

Name and Surname / Function:

Doo Haeng Lee / Director

Date of issue:

Mar. 16, 2013

- 1 **(/EN)EU Declaration of Conformity** **(/BG)ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ С ИЗИСКВАНИЯТА НА ЕС** **(/ES)Declaración UE de Conformidad** **(/CS)EU Prohlášení o shodě** **(/DA)U-Overensstemmelseserklæring** **(/DE)EU-Konformitätserklärung** **(/ET)Eiuvastavuseklaratsioon** **(/EL)ΑΔΙΑΣΤΗ ΧΥΜΟΦΟΡΩΣΗΣ ΕΕ** **(/FR)Declaration UE de Conformité** **(/GA)Dearbhair Comhairleachta an AE** **(/IT)Dichiarazione UE di Conformità** **(/LV)ES Atbilstības Deklarācija** **(/LT)ES Atitikties Deklaracija** **(/MT)Mgħeġġefiżżi Njilltaqozni** **(/MT)Dikjarazzjoni Tal-Konformità Tal-UE** **(/NL)EU Conformiteitsverklaring** **(/PL)Deklaracja Zgodności UE** **(/PT)Declaración de Conformidade UE** **(/RO)Declarația de Conformitate UE** **(/SK)Vyhlásenie o Zhode UE** **(/SL)Izjava UE o Skladnosti** **(/SV)UE-Vaatumustenmuksuvakuutus** **(/SV)UE-Försäkran om Överensstämmelse** **(/TR)Uygunluk Beyanı** **(/NO)UE Samsvareklæring** **(/HR)EZ Izjava o skladnosti** **(/IS)ESB Samræmisfrýðing**
- 2 **(/EN)Number/BG №** **(/ES)Nº** **(/CS)Č.Š.** **(/DA)Nr.** **(/DE)Nr./ET/Nr./EL)Αρ.β.** **(/FR)N°/GA)Uimhír** **(/IT)N./LV)N./LT)Nr.** **(/HU)Szám/(MT)Numru** **(/NL)Nr.** **(/PL)Nr.** **(/PT)N.º** **(/RO)Nr./SK)Číslo/(SL)Št./FN)č** **(/SV)Nr./TR)Sayı** **(/NO)Nr.** **(/HR)Broj** **(/IS)Númer**
- 3 **(/EN)Name and address of the Manufacturer** **(/BG)Именоваание и адрес на произвождателя** **(/ES)Nombre y dirección del fabricante** **(/CS)Obchodní jméno a adresa výrobce** **(/DA)Fabrikantens navn og adresse** **(/DE)Name und Anschrift des Herstellers** **(/ET)Valmistaja nimi ja aadress** **(/EL)Όνομα και διεύθυνση του κατασκευαστή** **(/FR)Nom et adresse du fabricant** **(/GA) Ainm agus seoladh an Monaróra** **(/IT)Nome e indirizzo del fabbricante** **(/LV)Rādītāja nosaukums un adrese** **(/LT)Gamintojo pavadinimas ir adresas** **(/HU)Gyártó neve és címe** **(/IT)sem u indirizz tal-manifattur** **(/NL)Naam en adres van de fabrikant** **(/PL)Nazwa i adres producenta** **(/PT)Nome e endereço do fabricante** **(/RO)Numele și Adresa Producătorului** **(/SK)Obchodné meno a adresa výrobcu** **(/SL)Ime in naslov proizvajalca** **(/EL)Valmistajan nimi ja osoite** **(/SV)Tillverkarens namn och adress** **(/TR)İmalatçının adı ve adresi** **(/NO)Navn på og adresse til produsenten** **(/HR)Naziv i adresa proizvođača** **(/IS)Nafn og heimilisfang framleiðanda**
- 4 **(/EN)This declaration of conformity is issued under the sole responsibility of the manufacturer** **(/BG)За настоящата декларация за съответствие отговорност носи единствено произвождателя** **(/ES)La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante** **(/CS)Toto prohlášení o shodě vydáno na vlastní odpovědnost výrobce** **(/DA)Denne overensstemmelseserklæring udstedes på fabrikantens ansvar** **(/DE)Diese Konformitätserklärung wird unter der alleinigen Verantwortung des Herstellers abgegeben** **(/ET)Käesolevate vastavuseklaratsioon on välja antud valmistaja ainuvastutuse all** **(/EL)Η παρούσα δήλωση συμμόρφωσης εκδίδεται με αποκλειστική ευθύνη του κατασκευαστή** **(/FR)La présente déclaration de conformité est établie sous la seule responsabilité du fabricant** **(/GA)Eitheir aonair den dearbhairleachta aonair den monaróra** **(/IT)La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante** **(/LV)Šīs atbilstības deklarācija ir izdota viņam uz sākotnējās atbildības** **(/LT)Ši atitikties deklaracija išduota tik gamintojo atsakomybės** **(/HU)Ez egyetemesen nyilatkoztok a gyártó kizárólagos felelősségére** **(/MT)Dan id-dikjarazzjoni tal-konformità tinfurq ta' ir-responsabbiltà unika tal-manifattur** **(/NL)Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant** **(/PL) Niniejsza deklaracja zgodności wydano została na wyłączną odpowiedzialność producenta** **(/PT)A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante** **(/RO)Prezenta declarație de conformitate este emisă pe răspundere exclusivă a producătorului** **(/SK)Toto vyhlásenie o zhode sa vydáva na výhradnú zodpovednosť výrobcu** **(/SL)Ta izjava o skladnosti se izdala na lastno odgovornost proizvajalca** **(/SV)Tamå vaatumustenmuksuvakuutus on annettu valmistajan yksinomaista vastuulla** **(/SV)Denna försäkran om överensstämmelse utfärdas på tillverkarens eget ansvar** **(/TR)Bu uygunluk beyanı, imalatçının sorumluluğu altında verilmiştir** **(/NO)Denne samsvareklæringen er utstedt på produsentens eneansvar** **(/HR)Za izdavanje ove izjave o skladnosti isključivo je odgovoran proizvođač** **(/IS)Þessi samræmisfrýðing er gefin út eingöngu á byrðr framleiðanda**
- 5 **(/EN)Object of the declaration** **(/BG)Обект на декларацията** **(/ES)Objeto de la declaración** **(/CS)Předmět prohlášení** **(/DA)Erklæringsens genstand** **(/DE)Gegenstand der Erklärung** **(/ET)Deklaratsiooni aine** **(/EL)Σκοπός της δήλωσης** **(/FR)Objet de la déclaration** **(/GA)Cuspóir an dearbhairleachta** **(/IT)Oggetto della dichiarazione** **(/LV)Deklarācijas priekšmets** **(/LT)Deklaracijos objektas** **(/HU)A nyilatkozat tárgya** **(/MT)Iż-ġenah tad-dikjarazzjoni** **(/NL)Voerwerp van de verklaring** **(/PL)Przedmiot deklaracji** **(/PT)Objeto da declaração** **(/RO)Obiectul declarației** **(/SK)Předmět vyhlášení** **(/SL)Predmet izjave** **(/SV)Föremål för försäkran** **(/TR)Beyannın nesne** **(/NO)Erklæringsens genstand** **(/HR)Predmet izjave** **(/IS)Hlutur til frýðingargranns**
- 6 **(/EN)Product information; Product Name; Model Name** **(/BG)Информация за продукта, име на продукта, име на модела** **(/ES)Información del producto; nombre del producto; nombre del modelo** **(/CS)Informace o výrobku; Název výrobku; Název modelu** **(/DA)Produkt information; Produktnavn; Modelnavn** **(/DE)Produktinformation; Produktname; Modellname** **(/ET)Toote kirjeldus; Toote nimetus; Mudeli nimi** **(/EL)Πληροφορίες για το προϊόν, όνομα προϊόντος, όνομα μοντέλου** **(/FR)Informations sur le produit; Nom du produit; Nom du modèle** **(/GA)Faisnéis Táirge; Ainm Táirge; Ainm Múnla** **(/IT)Informazioni sul prodotto; denominazione del prodotto; Nome del modello** **(/LV)Informācija par izstrādājumu; Izstrādājuma nosaukums; modeļa nosaukums** **(/LT)Informacija apie produktą; produkto pavadinimas; modelio pavadinimas** **(/MT)Informazzjoni tal-produtt; nom tal-produtt; isem tal-mudell** **(/NL)Product informatie; Product naam; Model naam** **(/PL)Informacje o produkcie; nazwa produktu; nazwa modelu** **(/PT)Informação do produto; Nome do Produto; Designação do Modelo** **(/RO)Informații despre Produs; Denumire Produs; Nume Model** **(/SK)Informace o výrobku; Název výrobku; Název modelu** **(/SL)Podatki o izdelku; ime izdelka; ime modela** **(/SV)Tuoletetid; tuoteen nimi; malli nimi** **(/SV)Produktinformation; produktnamn; modellnamn** **(/TR)Ürün bilgileri; Ürün Adı; Model Adı** **(/NO)Produktinformasjon; Produktnavn; Modellnavn** **(/HR)Podaci o proizvodu; Naziv proizvoda; Naziv modela** **(/IS)Vörupplýsingar; Nafn vöru; Nafn gerðar**
- 7 **(/EN)Additional information** **(/BG)Допълнителна информация** **(/ES)Información adicional** **(/CS)Další informace** **(/DA)Supplerende oplysninger** **(/DE)Zusätzliche Angaben** **(/ET)Lisaalvate** **(/EL)Πρόσθετες πληροφορίες** **(/FR)Informations supplémentaires** **(/GA)Faisnéis breise** **(/IT)Ulteriori informazioni** **(/LV)Papildu informācija** **(/LT)Papildoma informacija** **(/HU)Kiegészítő információk** **(/MT)Informazzjoni addizzjonali** **(/NL)Aanvullende informatie** **(/PL)Informacje dodatkowe** **(/PT)Informações complementares** **(/RO)Informații suplimentare** **(/SK)Dodatčné informácie** **(/SL)Dodatni podatki** **(/SV)Ytterligare information** **(/TR)Ek bilgi** **(/NO)Tilleggsopplysninger** **(/HR)Dodatne informacije** **(/IS)Viðbótarupplýsingar**
- 8 **(/EN)The object of the declaration described above is in conformity with the relevant Community harmonisation legislations** **(/BG)Предметът на декларацията, описан по-горе, отговаря на съответното законодателство на Общността за хармонизация** **(/ES)El objeto de la declaración descrita anteriormente es conforme a la legislación comunitaria de armonización pertinente** **(/CS)Výše popsaný předmět prohlášení je ve shodě s harmonizačními právními předpisy Společenství** **(/DA)Genstanden for erklæringen, som beskrevet ovenfor, er i overensstemmelse med den relevante EF-harmoniseringslovgivning** **(/DE)Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Gemeinschaft** **(/ET)Ülaikrijaldatud deklaratsioon vastab nõu koostöös asjaomaste ühenduse õhustatud õigusaktidega** **(/EL)Ο στόχος της δήλωσης που περιγράφεται παραπάνω είναι σύμφωνα προς τη σχετική κοινοτική νομοθεσία ευρωπαϊκής προέλευσης** **(/FR)L'objet de la déclaration décrit ci-dessus est conforme à la législation communautaire d'harmonisation applicable** **(/GA)Tá cuspóir an dearbhairleachta a thuiscirítear thuosa i gcomhréir le reachtaíocht ábhartha um choimhcheáil de chuid an Chomhphobail** **(/IT)L'oggetto della dichiarazione di cui sopra è conforme alle pertinenti normative comunitarie** **(/LV)Ārģošā deklarācijas aprakstā minētais objekts atbilst attiecīgajiem Eiropas Savienības tiesību aktiem** **(/LT)Deklaracijos aprašyme pateiktas deklaracijos objektas atitinka susijusių derinamųjų Bendrijos teisės aktus** **(/HU)A fent ismertetett tárgyat tekintve a vonatkozó közösségi harmonizációs jogszabályok** **(/MT)Iż-ġenah tad-dikjarazzjoni deskritt hawn fuq huwa konformi mal-leġiżlazzjoni tal-armonizzazzjoni rilevanti tal-Komunità** **(/NL)Het hierboven beschreven voorwerp is conform de desbetreffende communautaire harmonisatiewetgeving** **(/PL)Wymieniony powyżej przedmiot niniejszej deklaracji jest zgodny z odnosnymi wymaganiami wspólnotowych przepisów harmonizacyjnych** **(/PT)O objecto da declaração acima mencionada está em conformidade com a legislação comunitária aplicável em matéria de harmonização** **(/RO)Obiectul declarației descris mai sus este în conformitate cu legislația comunitară relevantă de armonizare** **(/SK)Uvedený predmet vyhlášení je v súlade s príslušnými harmonizačnými právnymi predpismi Spoločenstva** **(/SL)Predmet navedene izjave je v skladu z ustreznimi zakonodajno zakonodajo Skupnosti** **(/SV)Eftillrätt kvaftet vakuutuksen kohde on asiaa koskevan yhdennuuskäsitelmistä koskevan yhteisön lainnsäädännön vaatimusten mukainen** **(/SV)Föremålet för försäkran ovan överensstämmer med den relevanta harmoniserade gemenskapssätstiftningen** **(/TR)Yukarıda açıklanan bildirim nesnesi ilgili topluluk yem mevzuatına uygundur** **(/NO)Erklæringsens genstand beskrevet ovenfor er i samsvar med det relevante samfunnet, og harmoniserer med lovgivningen** **(/HR)Gore opisani predmet izjave sudaklan je mjerodavnom ukladenom zakonodavstvu Zajednice** **(/IS)Hluturinn til frýðingargranns sem lýst er hér fyrir ofan samræmir viðeigandi samhaefingarlögjöfjum og bálansgins**
- 9 **(/EN)References to the relevant harmonised standards used or references to the technical specifications in relation to which conformity is declared** **(/BG)Съответствието на използваните хармонизирани стандарти и/или техническите спецификации, спрямо които се декларира съответствието** **(/ES)Referencias a las normas armonizadas pertinentes utilizadas, o referencias a las especificaciones técnicas respecto a las cuales se declara la conformidad** **(/CS)Příslušné odkazy na příslušné harmonizační normy, které byly použity, nebo na technické specifikace, na jejichž základě se shoda prohlašuje** **(/DA)Referencer til de relevante anvendte harmoniserede standarder eller referencer til de tekniske specifikationer, som der erklæres overensstemmelse med** **(/DE)Angabe der einschlägigen harmonisierten Normen, die zugrunde gelegt wurden, oder Angabe der technischen Spezifikationen, für die die Konformität erklärt wird** **(/ET)Viited kasutatud asjakohastele ühistatud standarditele või viited tehnilistele spetsifikatsioonidele, millega seoses vastavust kiitatakse** **(/EL)Όνομα των σχετικών ευρωπαϊκών προτύπων, προς τα οποία χρησιμοποιήθηκε η διαδικασία προσαρμογής, ή τεχνικές προδιαγραφές, με βάση τις οποίες έγινε η δήλωση συμμόρφωσης** **(/FR)Références aux normes harmonisées pertinentes appliquées ou aux spécifications techniques par rapport auxquelles la conformité est déclarée** **(/GA)Tagairtí do na cásghnách cheimicibhíthe ábhartha a úsáidítear nó tagairtí do na sonraíochtaí teicnící a ndáil leis a gcomhréir le dearbhairleachta** **(/IT)Riferimenti alle pertinenti norme armonizzate utilizzate o riferimenti alle specifiche tecniche in relazione alle quali è dichiarata la conformità** **(/LV)Norādes uz attiecīgajiem saskaņotajiem standartiem vai norādes uz tehniskām specifikācijām, attiecībā uz kuras tika deklarēta atbilstība** **(/LT)Taisykių danųjy standartų nuorodos arba techninių specifikacijų, pagal kurias buvo deklaruota atitiktis, nuorodos** **(/HU)Adott esetben hivalkozos az alkalmazásra került vonatkozó harmonizált szabványokra, illetőleg azokra a műszaki leírásokra, amelyekre nézve a megjelöltől nyilatkozunk** **(/MT)Referenzi għall-standards armonizzati rilevanti li ntużaw, jew referenzi għall-specificazzjonijiet li b'relazzjoni għalihom tinfurq id għall-standards armonizzati rilevanti li ntużaw** **(/NL)Referentie aan de technische specificaties van de producten waarvan de conformiteit is vastgesteld** **(/PL)Wskazanie na normy harmonizacyjne lub na specyfikacje techniczne, z odniesieniem do których deklarowana jest zgodność** **(/PT)Referências às normas harmonizadas aplicáveis utilizadas ou às especificações técnicas em relação às quais é declarada a conformidade** **(/RO)Trimiteri la standardele armonizate relevante folosite sau trimiteri la specificatiile tehnice in legatura cu care se declara conformitatea** **(/SK)Príslušné odkazy na príslušné použité harmonizačné normy alebo odkazy na technické špecifikácie, na základe ktorých sa vyhlásuje zhoda** **(/SL)Napotila na uporabljene uskljene standarde ali napotila na tehnične specifikacije za skladnost, ki so navedene na izjavi** **(/SV)Viitteen niitten asiaankuuluvien yhdennuuskäsitelmien standardien, jotta on käyettävä, tai viitteen tekniisiin eritelmiin, joiden perusteella vaatumustenmuksuvakuutus on annettu** **(/SV)Hänvisningar till de relevanta harmoniserade standarderna eller de relevanta tekniska specifikationerna som utgör grund för försäkran om överensstämmelse** **(/TR)İlgili referanslar ve teknik özellikler** **(/NO)Hänvisninger til de spesifikasjonene det erklæres samsvar med** **(/HR)Učivanje na mjerodavne uskladne norme ili upućivanje na tehničke specifikacije na temelju kojih se izjavljiva skladnost** **(/IS)Viðanir á viðeigandi samhaefingarlögjum sem eru notaðir eða tilvísanir í þá tekniskrifnrátt sem tengtast samræmisfrýðingunni**
- 10 **(/EN)The notified body** **(/BG)Уведомителен орган** **(/ES)El organismo notificado** **(/CS)Oznamený subjekt** **(/DA)Det benyttede organ** **(/DE)Die notifizierte Stelle** **(/ET)Teavitatud asutus** **(/EL)Ο κοινοτικό σώμα οργάνωσης** **(/FR)L'organisme notifié** **(/GA)Rinne an comhaltáid dá dteagair fógra** **(/IT)l'organismo notificato** **(/LV)Pildinotā iestāde** **(/LT)Notifikuotji įstaiga** **(/HU)A bejelentett szervezlet** **(/MT)l-korp notifikat** **(/NL)De aangemelde instelling** **(/PL)jednostka notyfikowana** **(/PT)o organismo notificado** **(/RO)Organismul notificat** **(/SK)Notifikačný orgán** **(/SL)l'organo prijavljeno** **(/SV)Det anmälda organ** **(/TR)Kuruluşla bildirimli** **(/NO)Det meldte organ** **(/HR)Obavješteno tijelo** **(/IS)Hinn tilkynnti aðili**
- 11 **(/EN)Signed for and on behalf of** **(/BG)Изпълнен за и/или от** **(/ES)Firmado por y en nombre de** **(/CS)Podpísaný za a jménem** **(/DA)Underskrevet for og på vegne af** **(/DE)Unterschriftet für und im Namen von** **(/ET)Tõlde teinud ja poolt** **(/EL)Υπογραφή και επί ονόματι** **(/FR)Signé pour et au nom de** **(/GA)Sínneadh air son agus ar ainm** **(/IT)Firmato in vece e per conto di** **(/LV)Parakšots** **(/LT)Už ką ir kieno vardu pasirašytas** **(/HU)Cégszerű aláírás** **(/MT)Ifirmata għal u f'isem** **(/NL)Onderskrevet voor en namens** **(/PL)Podpisano w imieniu** **(/PT)Assinado por e em nome de** **(/RO)Semnat pentru și în numele** **(/SK)Podpísaný za a v mene** **(/SL)Podpisano za in v imenu** **(/SV)Undertecknat för** **(/TR)Ve adına imzalanmıştır** **(/NO)Undertegnet for og på vegne av** **(/HR)Polpisano za i ime** **(/IS)Undirritað fyrir og fyrir hönd**

