

## WIRELESS SPEAKER

NP1540B / NP1540BP NP1540W / NP1540WP

### OWNER'S MANUAL

Please read this manual carefully before operating your set and retain it for future reference.





CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNE!



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the

presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of

important operating and maintenance (servicing) instructions in the literature

accompanying the product.

### WARNING:

- To prevent fire or electric shock hazard, do not expose this product to rain or moisture.
- Do not install this equipment in a confined space such as a book case or similar unit.

#### CAUTION:

- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
  - Internal lithium battery in the unit should not be replaced by user because of danger of explosion if battery is incorrectly replaced and must be replaced with the same type battery by expert.

- To avoid fire or electric shock, do not open the unit. contact to qualified personnel only.
- Do not leave the unit in a place near the heating appliances or subject to direct sunlight, moisture, or mechanical shock
- To clean the unit, use a soft, dry cloth.
   If the surfaces are extremely dirry, use
  a soft cloth lightly moistened with
   a mild detergent solution. Do not
   use strong solvents such as alcohol,
   benzine, or thinner, as these might
   damage the surface of the unit.
- Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.
- Do not place the unit over the vehicle's air bag. When the air bag deploys, it may result in injury. Before using in the car, fix the unit.

 Do not leave the unit on an unstable place such as high shelves, it may fall down because of the vibration of the sound

### CAUTION when using this product in environments of low humidity.

- It may cause static electricity in environments of low humidity.
   It is recommended to use this product after touching any meta.
- It is recommended to use this product after touching any metal object which conducts electricity.

**NOTICE:** For safety making information including product identification and supply ratings, please refer to the main label on the bottom of the apparatus.

#### Disposal of your old appliance



- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

# Disposal of waste batteries/





#### Ph

- . This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury,0.002% of cadmium or 0.004% of lead
- All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.

 For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product

This device is equipped with a portable battery or accumulator.

# Safety way to remove the battery or the battery from the equipment:

Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

# Removal of waste batteries and accumulators (Product with embedded battery ONLY)

In case this product contains a battery incorporated within the product which cannot be readily removed by endusers, LG recommends that only qualified professionals remove the battery, either for replacement or for recycling at the end of this product's working life. To prevent damage to the product, and for their own safety, users should not attempt to remove the battery and should contact LG Service Helpline, or other independent service providers for advire.

Removal of the battery will involve dismantling of the product case, disconnection of the electrical cables/ contacts, and careful extraction of the battery cell using specialized tools. If you need the instructions for qualified professionals on how to remove the battery safely, please visit <a href="http://www.lge.com/global/sustainability/environment/take-back-recycling">http://www.lge.com/global/sustainability/environment/take-back-recycling</a>.

#### For Wireless product European Union Notice

**C€** 1588

LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/FU.

Please contact to the following address for obtaining a copy of the DoC (Declaration of Conformity).

# Contact office for compliance of this product:

LG Electronics Inc.


EU Representative, Krijgsman 1,

1186 DM Amstelveen, The Netherlands

 Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.



## Overview

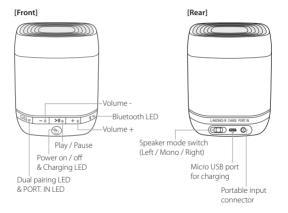




# LED Indicator

LED
(b) / Red / Blinking
少 / Red / Staying
少 / Off
∦ or 🔐 / Red / Staying
⊀/Off
∦ / Red / Blinking
⋠ / Red / Staying
∦ / Red / Blinking □□ / Red / Blinking
∦ / Red / Blinking (L speaker only) □□ / Red / Staying
∦ / Red / Staying □□ / Red / Staying


 
# Charging



Charging LED for battery status

- Charging : RedCharged : OffCharging time
- · About 3 hours

### [Note]

- The battery can last up to 5 hours. (Based on 30 % volume, 1 kHz signal, 600 mV portable input and fully charged status)
- When the battery is low, the beep sound is heard in Bluetooth mode.
- Charging the unit using the PC takes longer time.
- · To prevent electric shock, handle with care during charging.
- · Avoid high or low temperature or humidity.
- AC adaptor is not supplied.
- This unit must always be operated with DC 5 V. certified/listed adaptor which complies with LPS.
- Do not use the adaptor higher than DC 5 V.



# **Bluetooth Connection**





Before turning on the unit, move the mode switch to MONO.





Press and hold to turn on. The unit goes into the pairing mode.



### Bluetooth Connection





Select "LG BT Box (XX:XX)" on your Bluetooth device. (XX:XX means the last four digits of BT address.)





After pairing, the voice notification is heard and Bluetooth LED stays turned on. If the unit fails to pair, go to step 1 and try again.





Play the desired music on the Bluetooth device. After pairing, you can control playback using the buttons on the front of the unit.

### [Note]

 
- Once pairing is performed, it does not need to be done again even if you turn off this unit.
- To unpair the Bluetooth device, press and hold >II on the front of the unit for 3 seconds. The unit is unpaired.



# **Dual Speaker Connection**


\* Two speakers are needed to enjoy in stereo.





Before turning on the unit, move the each speaker's mode switch to L and R



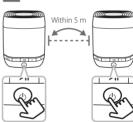

Press and hold to turn on. The two speakers begin to detect each other automatically. It takes about 45 seconds but can be longer depending on use environment



### Dual Speaker Connection





After detecting, beep sound is heard and dual pairing LED stays turned on. the unit goes into the pairing mode. If the units fail to detect, go to step 1 and try again.





Select "LG BT Box 2 (XX:XX)" on your Bluetooth device.



### **Dual Speaker Connection**



After pairing, the voice notification is heard and the Bluetooth LED stay turned on. If the unit fails to pair, go to step 1 and try again.

 


Play the desired music on the Bluetooth device. After pairing, you can control playback using the buttons on the front of the unit.




# **Portable Input Connection**

1



Connect the unit to the external device using PORT. IN cable.

 2



Press and hold to turn on. PORT. IN LED stays turned on.







Play the desired music on the device connected to the unit. While the unit is connected with PORT. IN cable, >|| in the front of the unit does not work.



### **Additional Information**

- The operating time on battery is subject to battery status, operational status and environment conditions.
- The Bluetooth connection can be disconnected in case that the distance between the unit and your Bluetooth device is more than the Bluetooth range limitation.
- This unit is turned off automatically in case that any button is not pressed or any input source is not connected for 20 minutes in Bluetooth mode.
- PORT. IN cable (ø 3.5 mm mini stereo cable) is not supplied.
- · While using PORT. IN connection, Bluetooth connection is unavailable.
- While using PORT. IN connection, stereo mode using extra speaker is unavailable.
- When you disconnect PORT. IN connection, previous Bluetooth connection is repaired to the unit automatically.
- Depending on the type of the Bluetooth device, some devices have a different way of pairing.
- The sound may be interrupted when the connection is interfered by the other electronic wave.



#### Additional Information

- In case that there are obstacles between your Bluetooth device and the unit, the device cannot be connected even though the distance between both is less than the Bluetooth range limitation.
- When you use dual speaker connection, keep the distance between the units closer than Bluetooth range limitation. If the distance between the units is more than the Bluetooth range limitation, the units can be turned off automatically.
- The electrical malfunction due to the devices using same frequency such as medical equipment, microwaves or wireless LAN devices, may make the unit disconnected
- · The sound notification function is available in Bluetooth mode only.
- Bluetooth connection using the PC or dongle is not supported.



# Specification

Power Supply	5 V === 2 A     Built-in rechargeable battery
Power Consumption	• 2.5 W
Dimensions (W x H x D)	Approx. 83 mm x 95 mm x 83 mm
Net Weight	Approx. 370 g
Operating Temperature	• 0 °C to 35 °C
Operating Humidity	• 5 % to 60 %
External Connector	ø 3.5 mm mini jack     Micro USB port for charging battery
Communication	Bluetooth 3.0
Speaker	Type: Built-in     Impedance Rate: 4 Ω     Max. Output Power: 2.8 W     THD: 10%

<sup>•</sup> Design and specifications are subject to change without notice.



# **Troubleshooting**

#### No power

- The battery is discharged. Recharge the battery.
- Connect the unit to the power supply with the AC adapter.

#### No sound or sound distortion

- The unit or your Bluetooth device's volume is set to minimum. Check and adjust the volume of the unit or Bluetooth device's volume
- When you use an external device at high volume, the sound quality may be deteriorated. Lower the volume of the devices.
- If you use the unit for purposes other than listening to music, the sound quality may be lowered or the unit may not work properly.

 If the unit does not work well in Bluetooth mode, switch Bluetooth off and on again on your Bluetooth device.

#### Bluetooth pairing does not work well.

 
- Switch Bluetooth off and on again on your Bluetooth device, then try pairing again.
- Be sure that your Bluetooth device is on.
- Remove the obstacle in the path of the Bluetooth device and the unit
- Depending on the type of the Bluetooth device or surrounding environment, your device may not be paired with the unit.



### Troubleshooting

### The unit does not operate normally.

 Press the reset hole on the bottom of the unit using an object like a thin pin. The unit is reset (Refer to below.).



 In case of malfunction, use the unit in proper place where the temperature or humidity is not too high or low.

# The unit is turned off without voice notification.

 In PORT. IN mode, voice notification on the battery status is unavailable. When the unit is turned off suddenly in PORT. IN mode, recharge the battery.

# The charging LED blinks rapidly when the unit is being charged.

Turn down the volume of the unit.
 The LED stops blinking.

